

CONTENTS

SECTION 0 **PREFACE**

SECTION 1 **HOW TO READ ELECTRICAL WIRING DIAGRAM**

SECTION 2 **POSITION OF CONNECTORS AND GROUNDS**


SECTION 3 **WIRING DIAGRAM FOR POWER SUPPLIES**

SECTION 4 **USAGE AND CAPACITY OF FUSES IN FUSE BLOCK**

SECTION 5 **ELECTRICAL WIRING DIAGRAMS**

1-2 HOW TO USE ELECTRICAL WIRING DIAGRAM

1. HOW TO READ ELECTRIC WIRING DIAGRAM

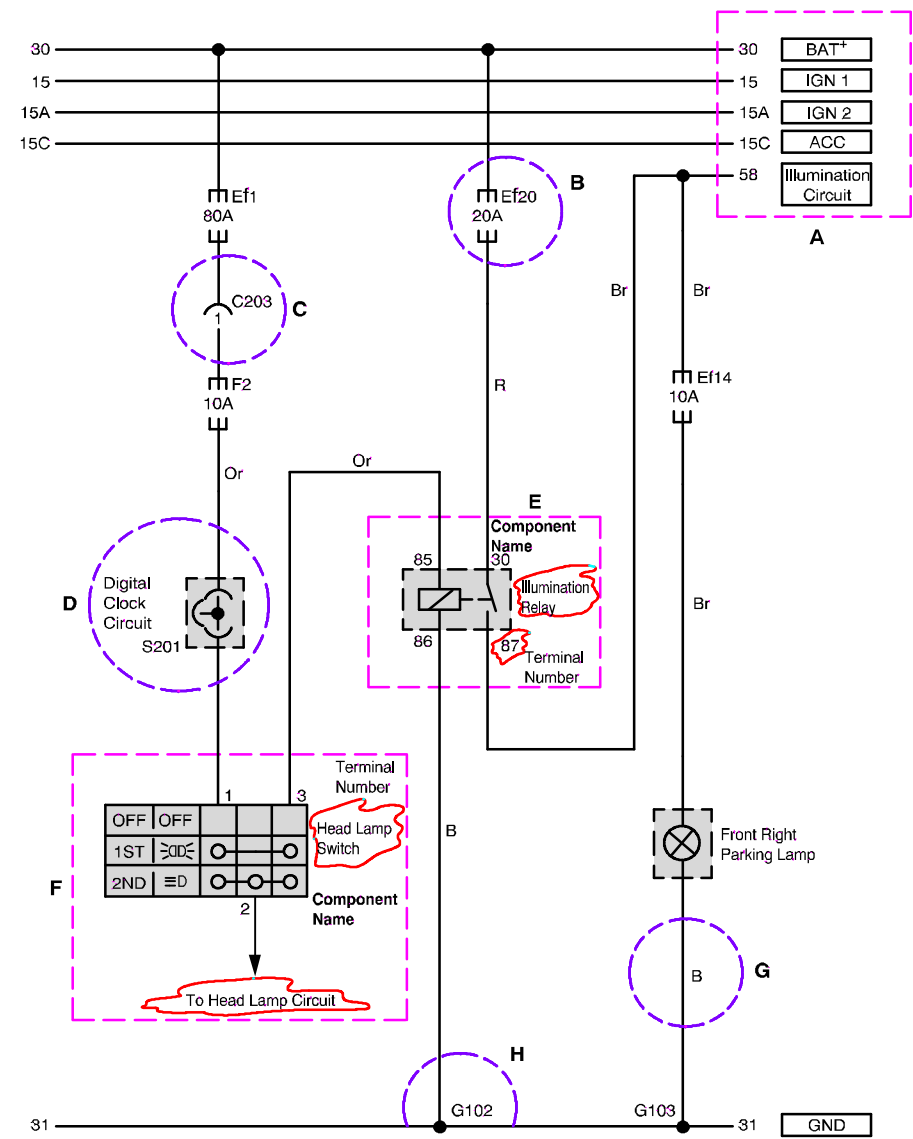


1) CONTENTS OF ELECTRICAL WIRING DIAGRAM (CIRCUIT)

POSITION	EXPLANATION
A	" Upper horizontal lines : Power supply lines " Power supply lines : 30, 15, 15A, 15C, 58
B	" Ef20 or F2 : Fuse Number S Ef20 : Fuse No #20 in engine room fuse box S F2 : Fuse No #2 in passenger room fuse box
C	" Connector (C101~C902) S Connector No C203 terminal No1 S Refer to Major Connector Position (Section 2)
D	" S201 : Splice pack (S101~S303) S Refer to Major Splice Pack Position (Section2)
E	" Internal circuit of component (Relay) (Component Name and Terminal Number)
F	" Internal circuit of component (switch) (Component Name, Terminal Number and Connecting Wiring Circuit)
G	" Wiring Harness Color S Refer to Wiring Harness Color Abbreviation
H	" Lower horizontal line : Ground line S Ground position(G101~G401) S B : Body Ground S Refer to Major Ground Position (Section2)


2-2 POSITION OF CONNECTORS AND GROUNDS

1. CONNECTOR, GROUND AND SPLICE PACK INFORMATION


1) WIRING HARNESS & GROUND & SPLICE PACK LOCATION

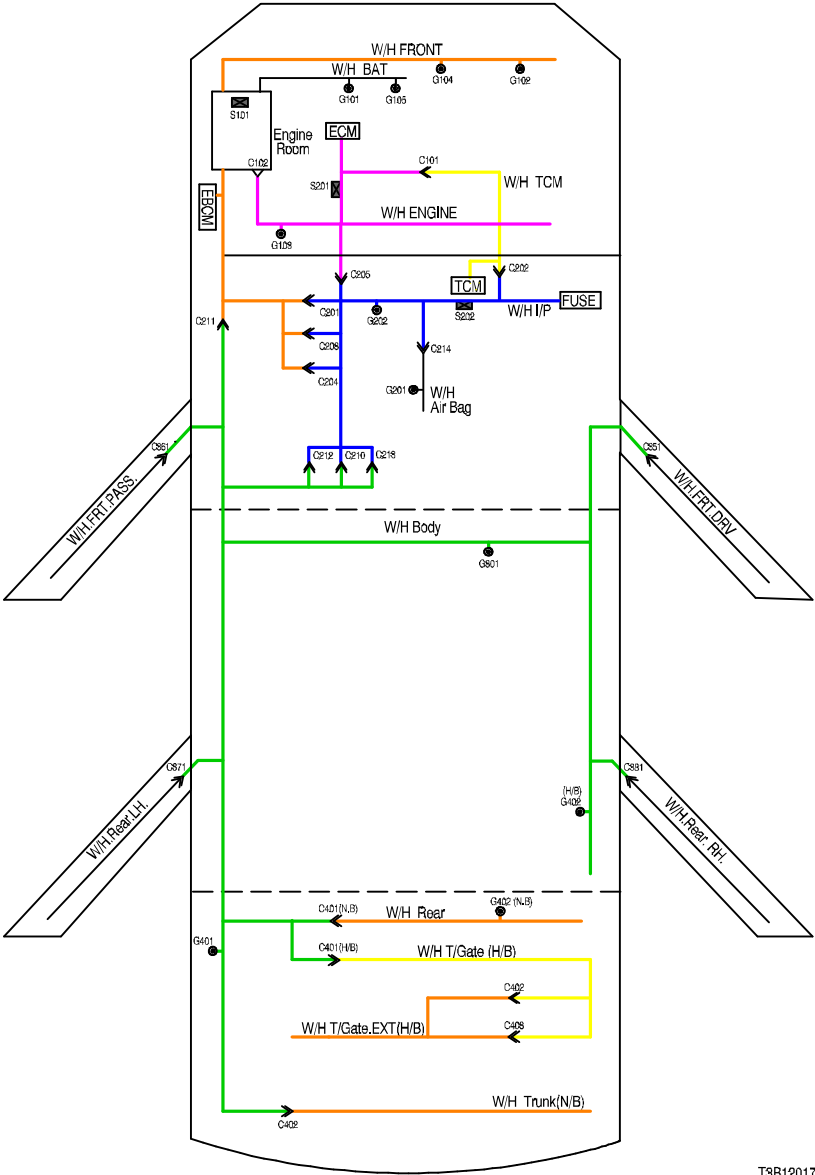

7) W/H TRUNK

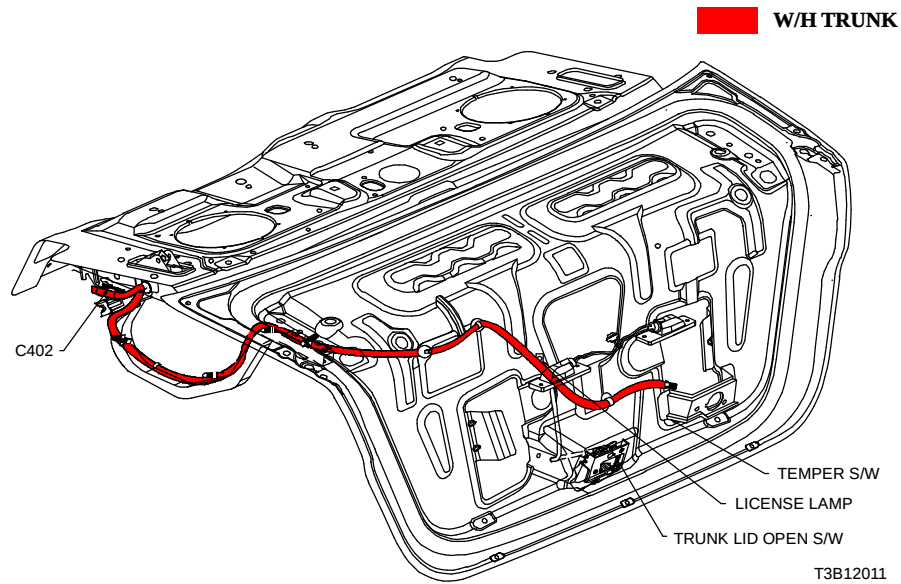


8) W/H REAR

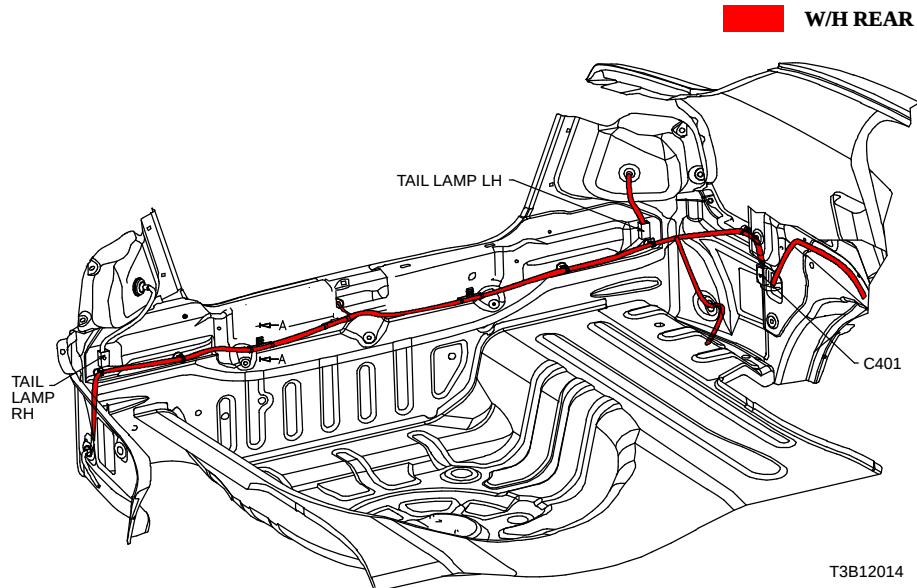


9) SPLICE PACK

S101

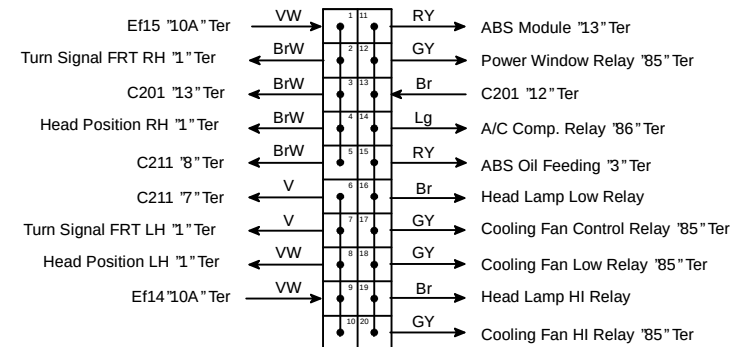

T3B1S001


S201

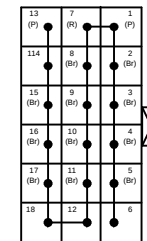

- | | |
|--------------------------|-----------------------------|
| 1. C205 "2"Ter | 5. C102 "9"Ter |
| 2. ECM "M3"Ter | 6. |
| 3. INJECTOR #2 "1"Ter | 7. EI SYSTEM "B"Ter |
| 4. CMP SENSOR "3"Ter | 8. |
| | |
| 9. INJECTOR #3 "1"Ter | 14. |
| 10. EVAP SOLENOID "2"Ter | 15. INJECTOR #4 "1"Ter |
| 11. EGR VALVE "5"Ter | 16. INJECTOR #1 "1"Ter |
| 12. | 17. HEATED O2 SENSOR "4"Ter |
| 13. GENERATOR "F"Ter | 18. |

T3B1S002

S202

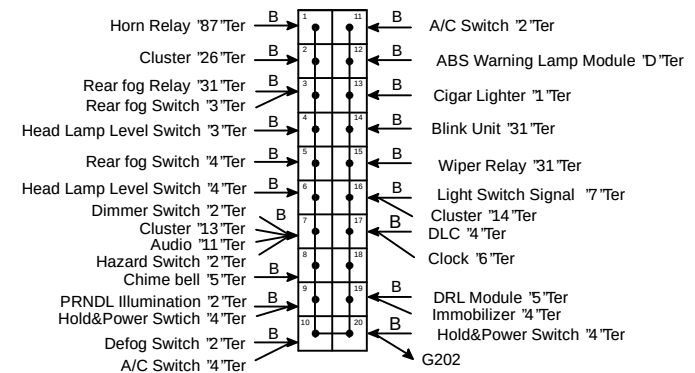


T3B1S003



2. ECM (ENGINE CONTROL MODULE) : MR - 140


1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM, CKP SENSOR & CMP SENSOR CIRCUIT

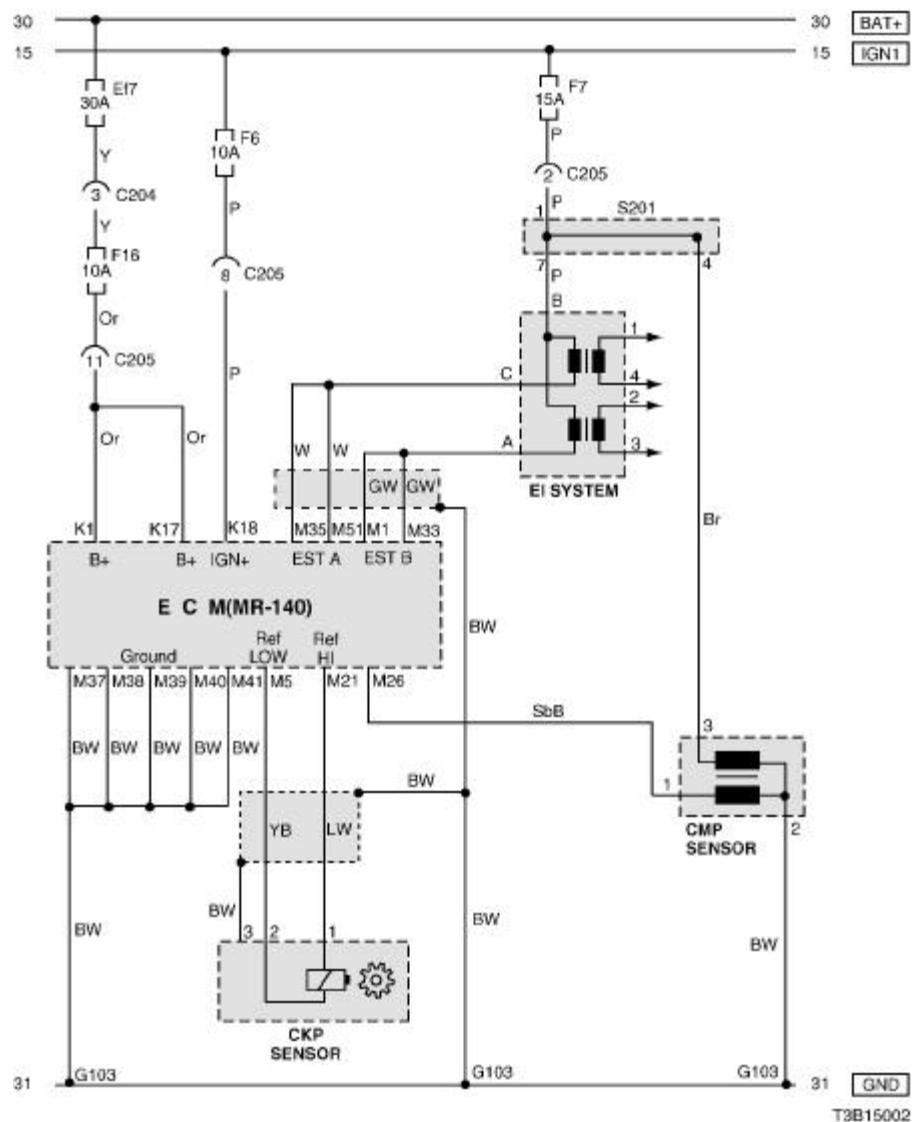

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C204 (4 Pin, White)	Front -IP	Behind I/P Fuse Block
C205 (18 Pin, Gray)	IP - Engine	Behind I/P Fuse Block
G103	Engine	Next to #4 Injector

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

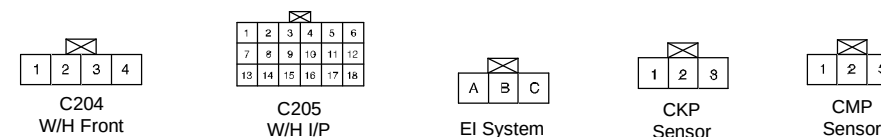

M(BLACK)

64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

K(RED)


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64

ECM (MR-140)


5-16 ELECTRICAL WIRING DIAGRAMS

c. POSITION OF CONNECTORS AND GROUNDS

S W/H ENGINE

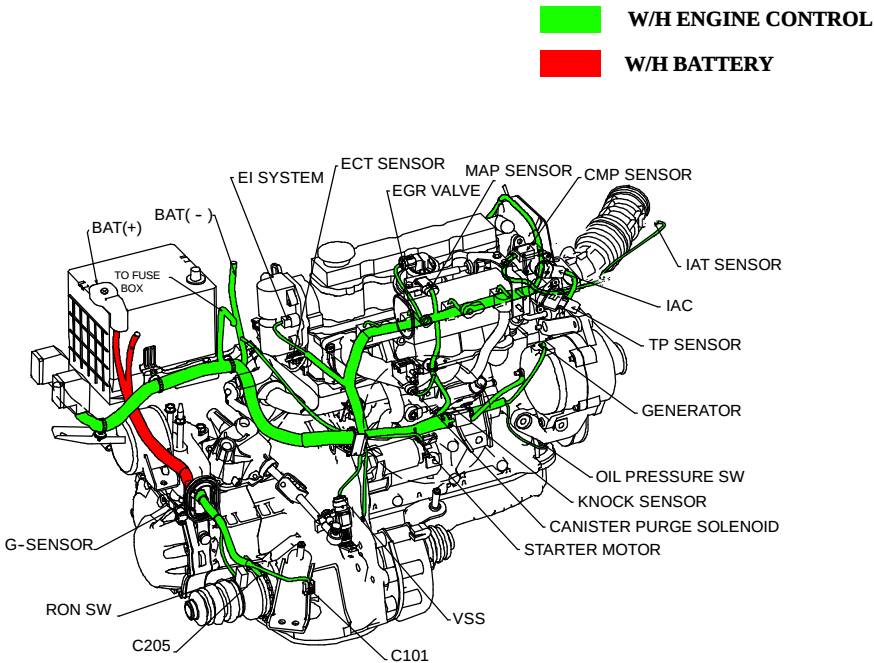


T3B12013

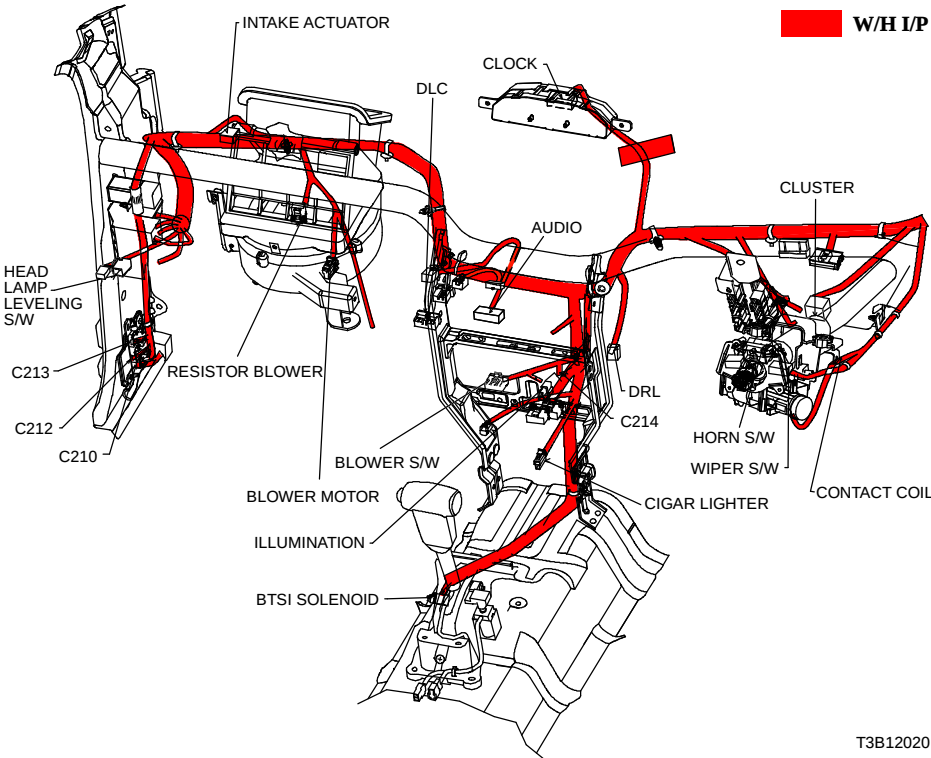

T3B12020

d. SPLICE PACK
S202

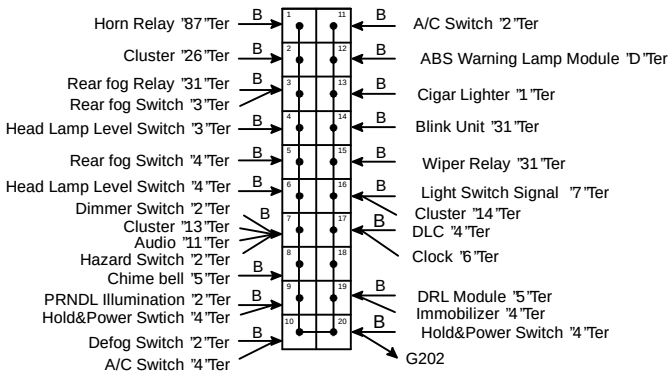

T3B1S003




CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (20 Pin, White)	Engine –Front	Engine Room Fuse Block
C202 (11 Pin, White)	TCM –IP	Behind I/P Fuse Block
C205 (18 Pin, Gray)	IP –Engine	Behind I/P Fuse Block
G103	Engine	Next to #4 Injector
G202	IP	Behind Right Ashtray


[illegible]

c. POSITION OF CONNECTORS AND GROUNDS

S W/H TCM

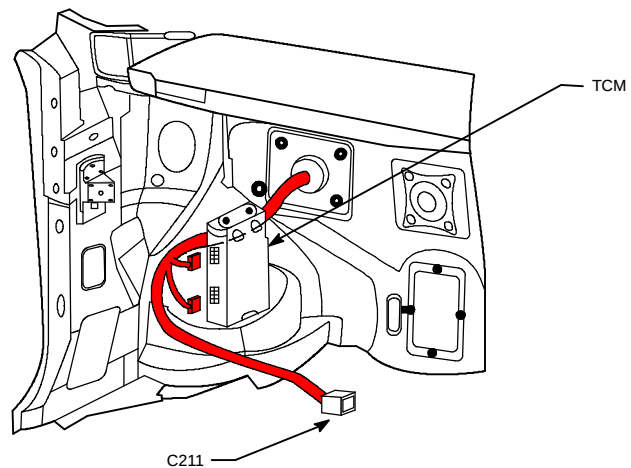
 W/H TCM

T3B12018

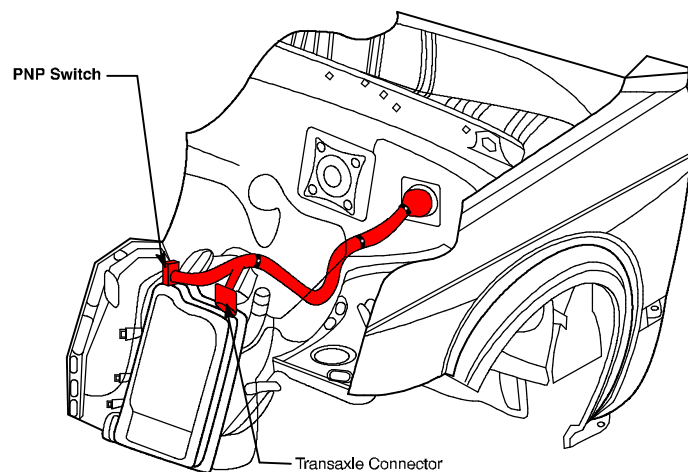


T3B12019

S W/H ENGINE

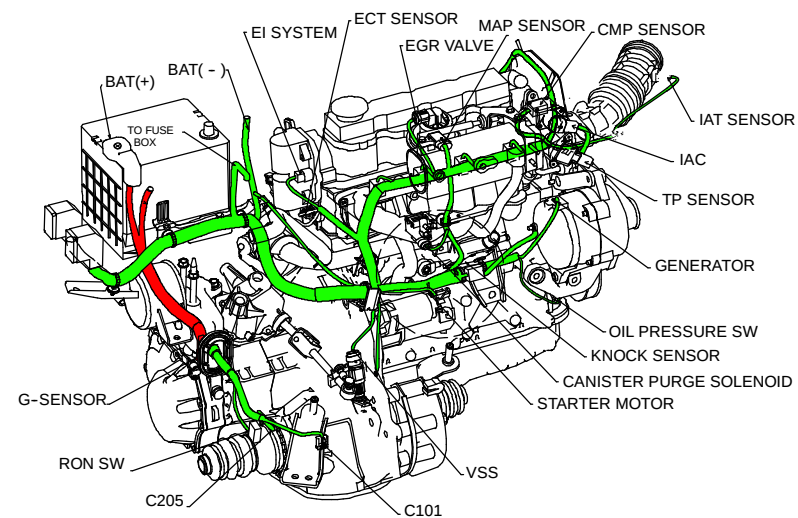 W/H ENGINE CONTROL W/H BATTERY

T3B12013


2) ILLUMINATION CIRCUIT - W/O DIMMER CONTROL

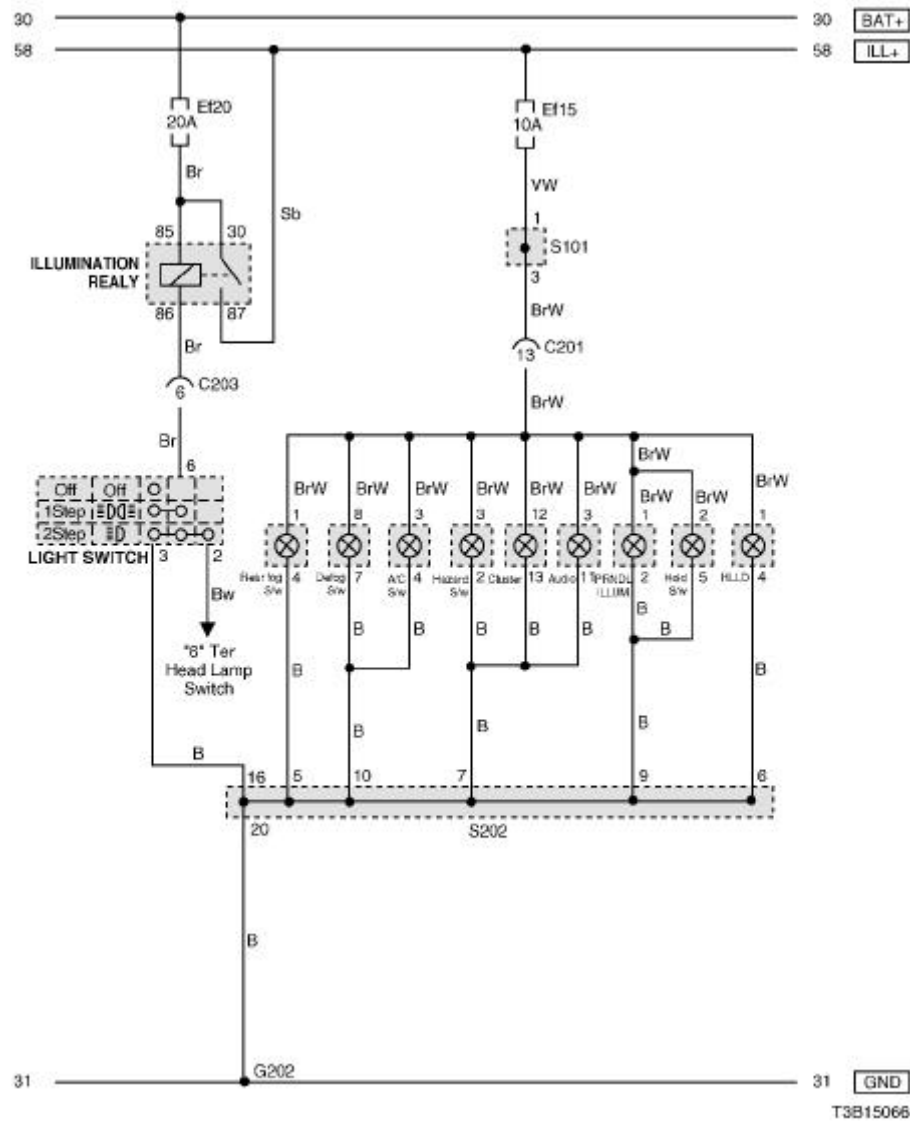


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (18 Pin, Blue)	Front -IP	Behind I/P Fuse Block
C203 (14 Pin, Black)	Front -IP	Behind I/P Fuse Block
G202	IP	Behind Right Ashtray

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

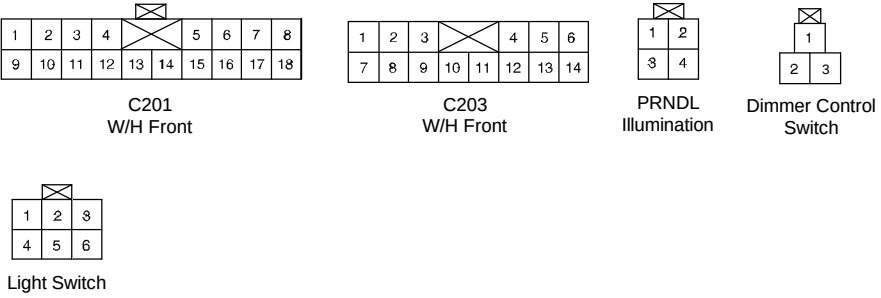


2) HATCH BACK

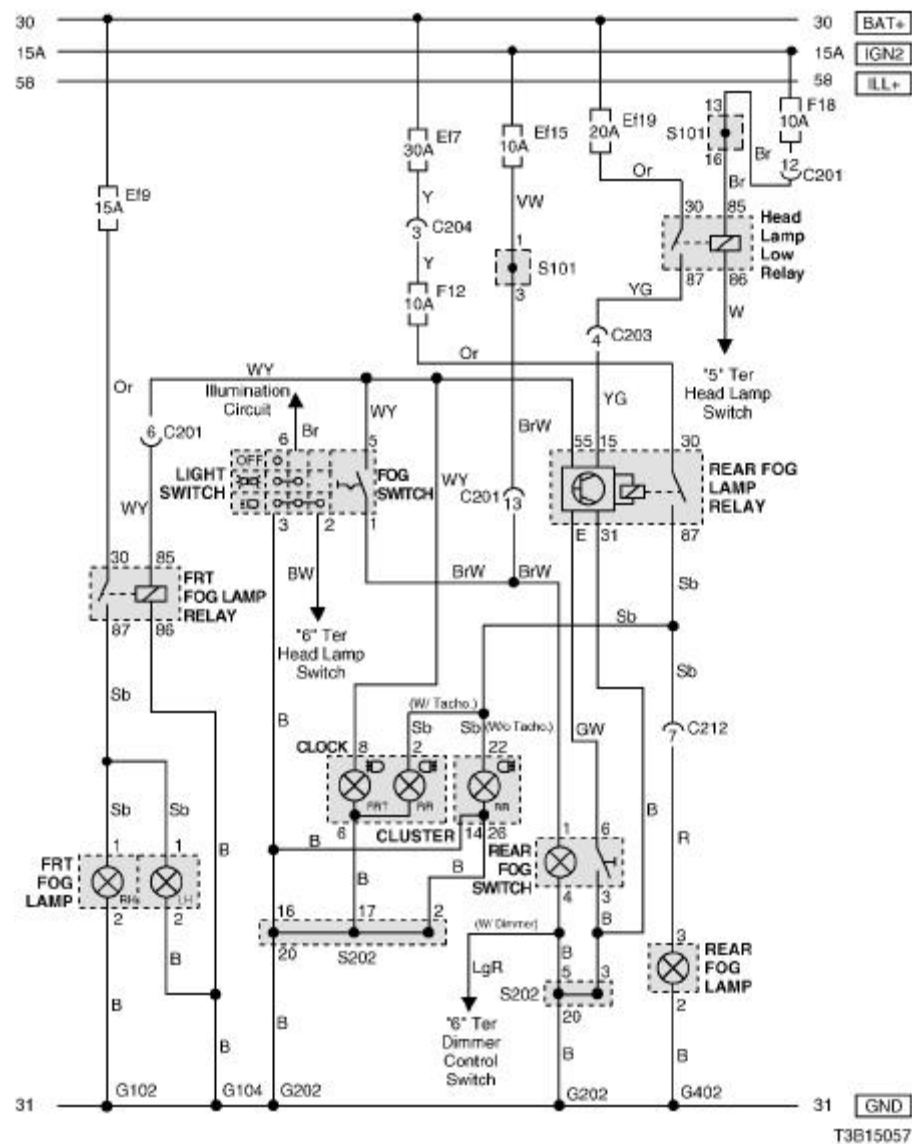

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (18 Pin, Blue)	Front –IP	Behind I/P Fuse Block
C203 (14 Pin, Black)	Front –IP	Behind I/P Fuse Block
C204 (4 Pin, White)	Front –IP	Behind I/P Fuse Block
C212 (10 Pin, Black)	IP –Body	Under Left A Pillar
G102	Front	Behind Left Head Lamp
G104	Front	Behind Right Head Lamp
G202	IP	Behind Right Ashtray
G402	Body (H/B)	Right Tail Gate Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

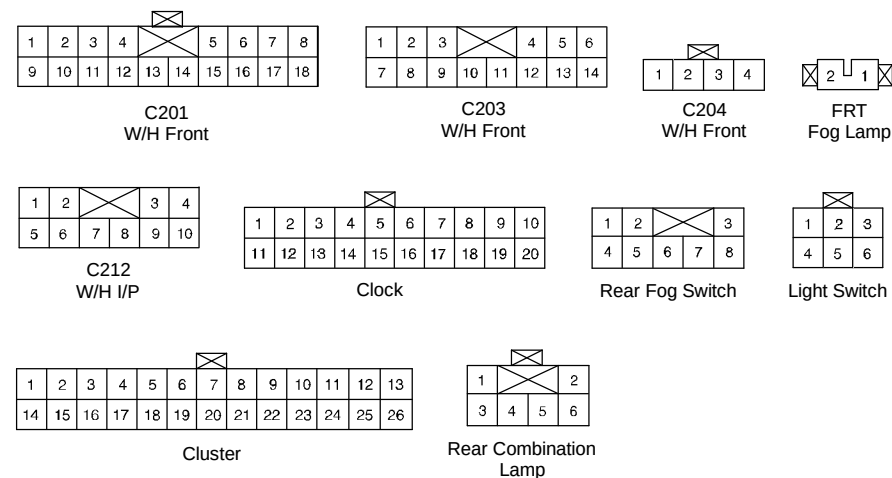


c. POSITION OF CONNECTORS AND GROUNDS

S W/H INSTRUMENT PANEL

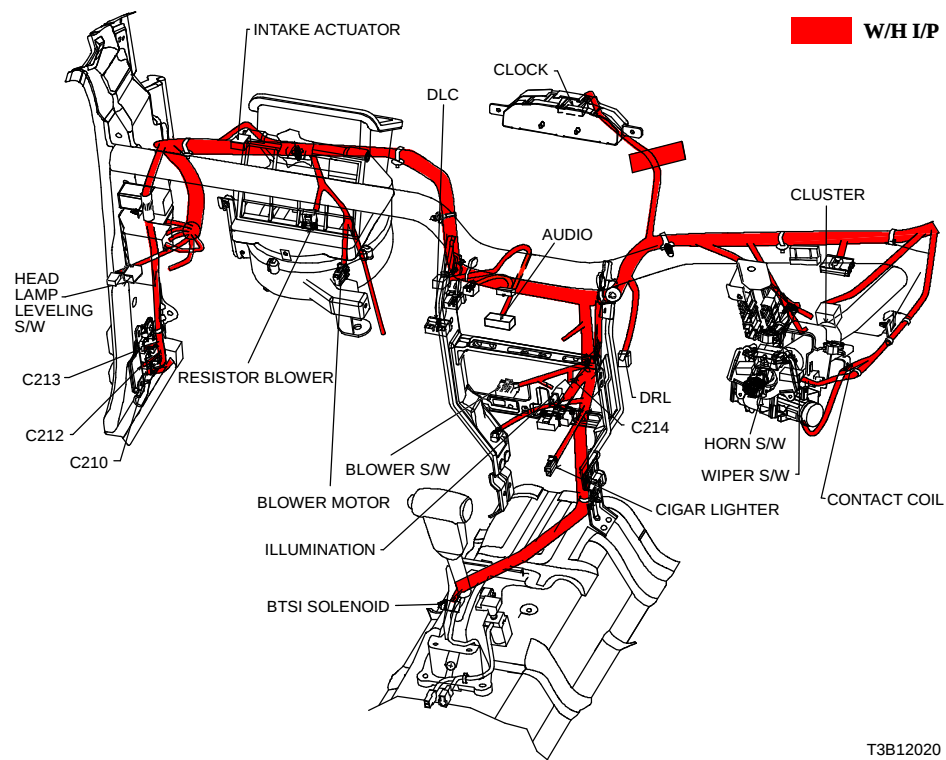


d. SPLICE PACK

S101

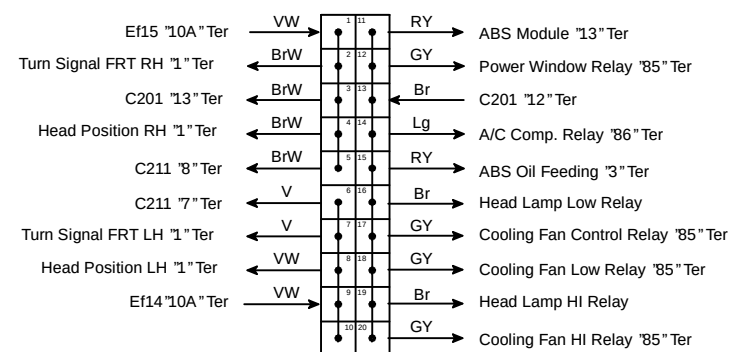

T3B1S001


S202

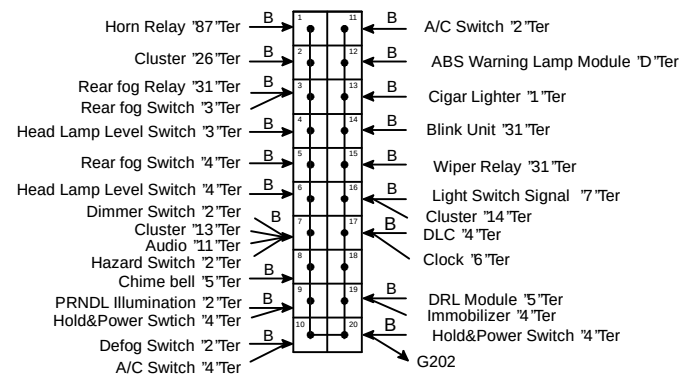

T3B1S003

20. CLUSTER


1) TEMPERATURE GAUGE, TACHOMETER GAUGE & FUEL WARNING LAMP CIRCUIT

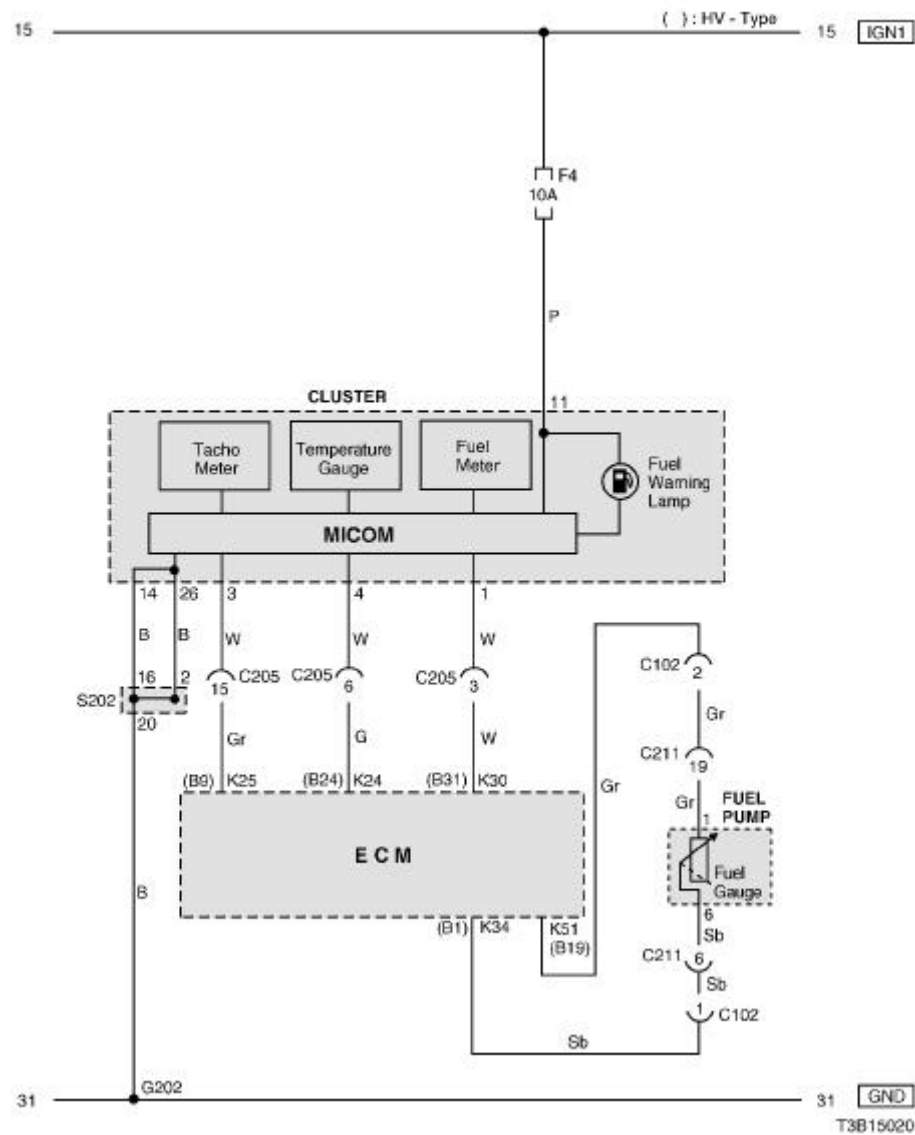

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (20 Pin, White)	Engine – Front	Engine Room Fuse Block
C205 (18 Pin, Gray)	IP – Engine	Behind I/P Fuse Block
C211 (22 Pin, Yellow)	IP – Body	Under Left A Pillar
G202	IP	Behind Right Ashtray


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

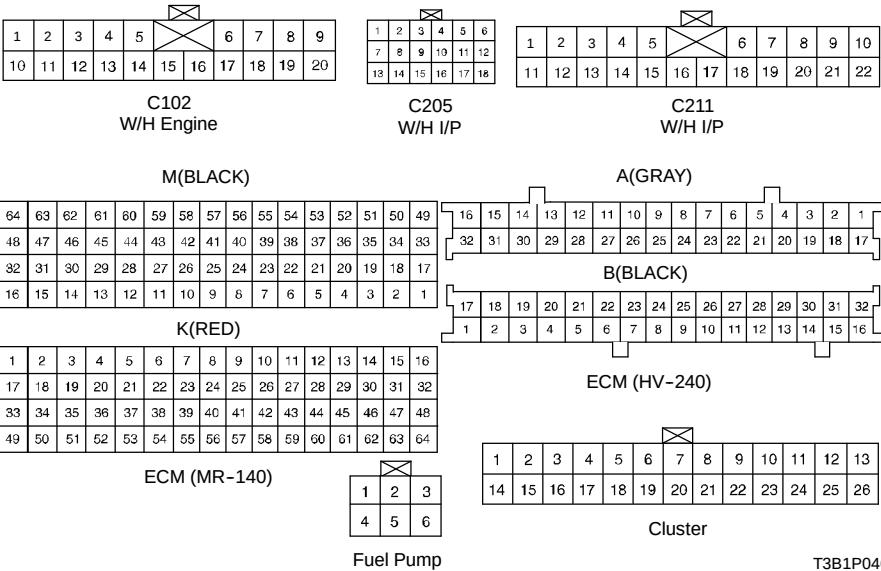

T3B1P046


c. POSITION OF CONNECTORS AND GROUNDS

S W/H INSTRUMENT PANEL

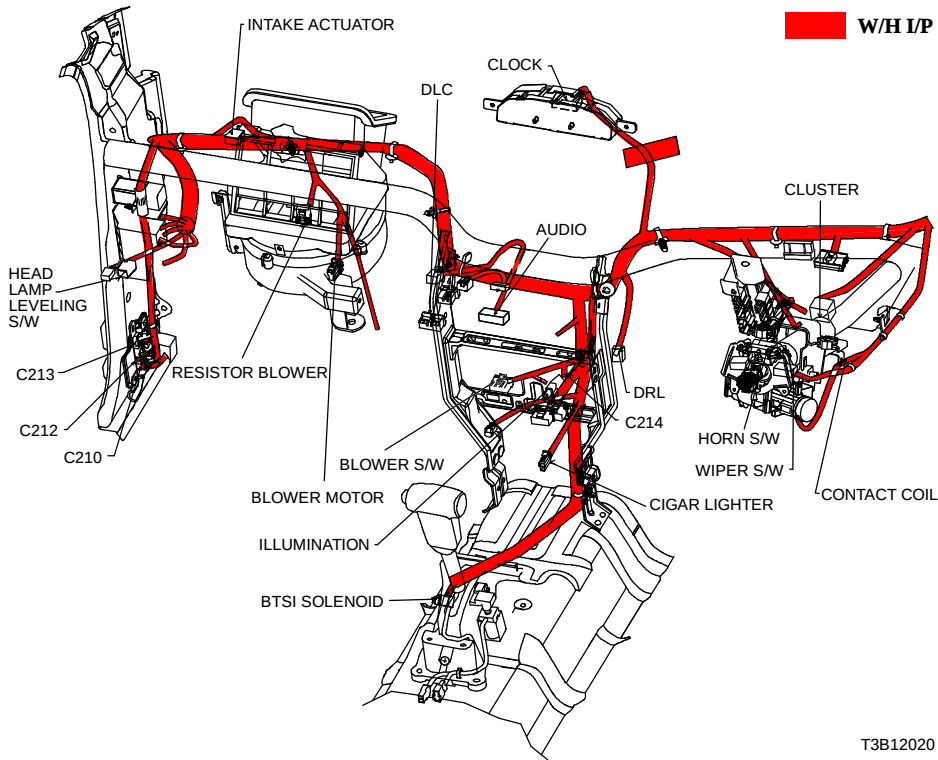


d. SPLICE PACK

S101

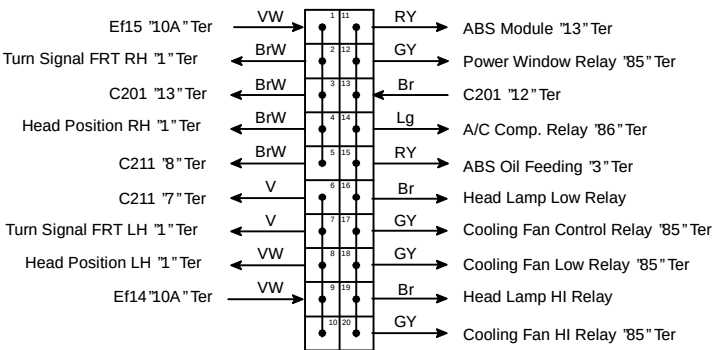


S202

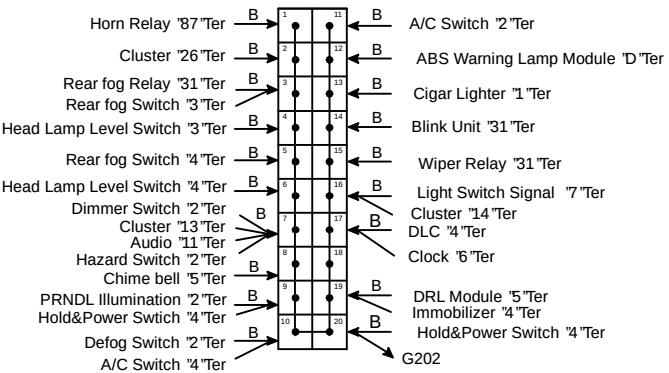

24. AIR BAG (SDM : SENSING & DIAGNOSTIC MODULE)


1) AIR BAG CONTROL MODULE (SDM) & AIR BAG WARNING LAMP CIRCUIT

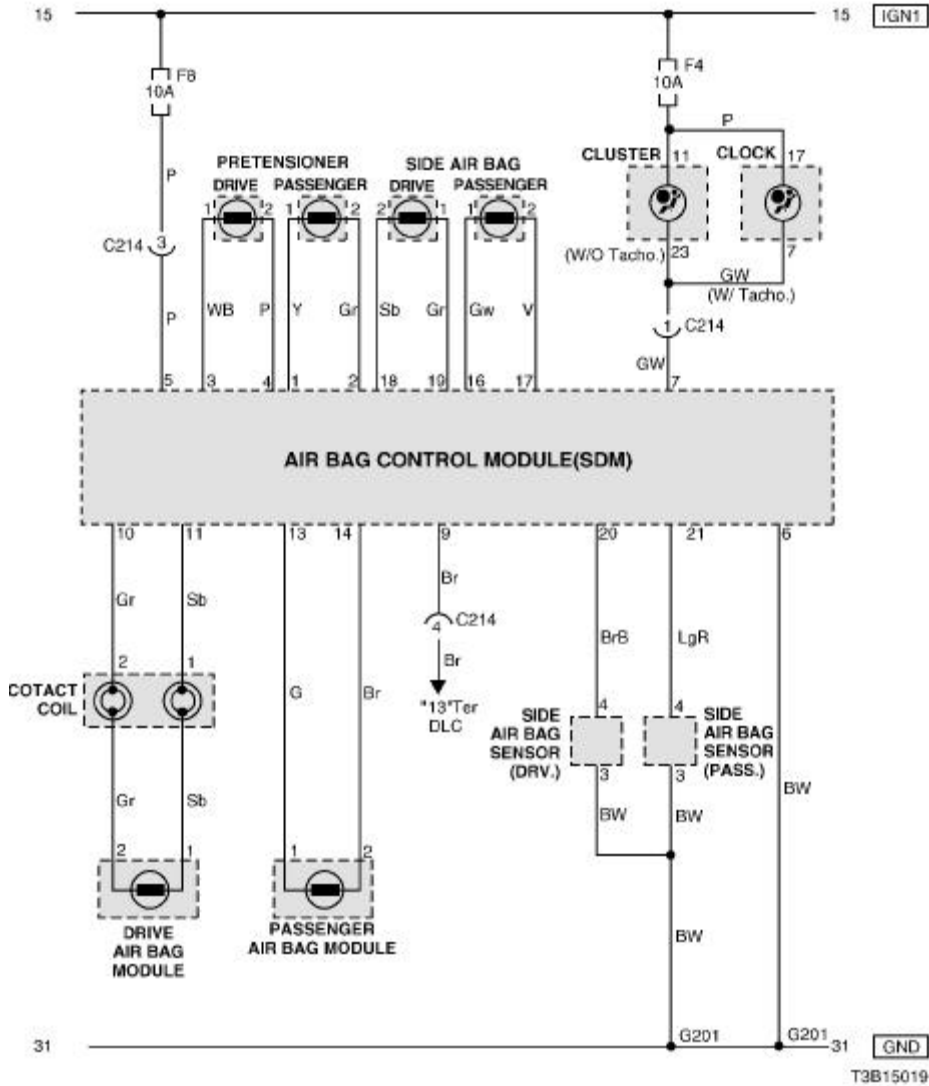

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C212 (10 Pin, Black)	IP - Body	Under Left A Pillar
C214 (4 Pin, White)	Air Bag - IP	Behind Audio
G201	Air Bag	Behind Left Ashtray
G301	Body	Behind Co-Driver Left Kick Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

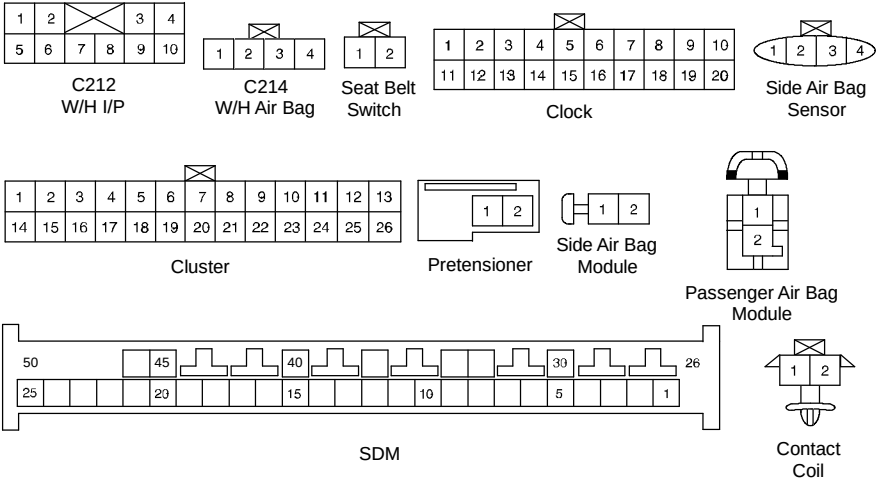

T3B1P057