


1. HOW TO READ ELECTRIC WIRING DIAGRAM

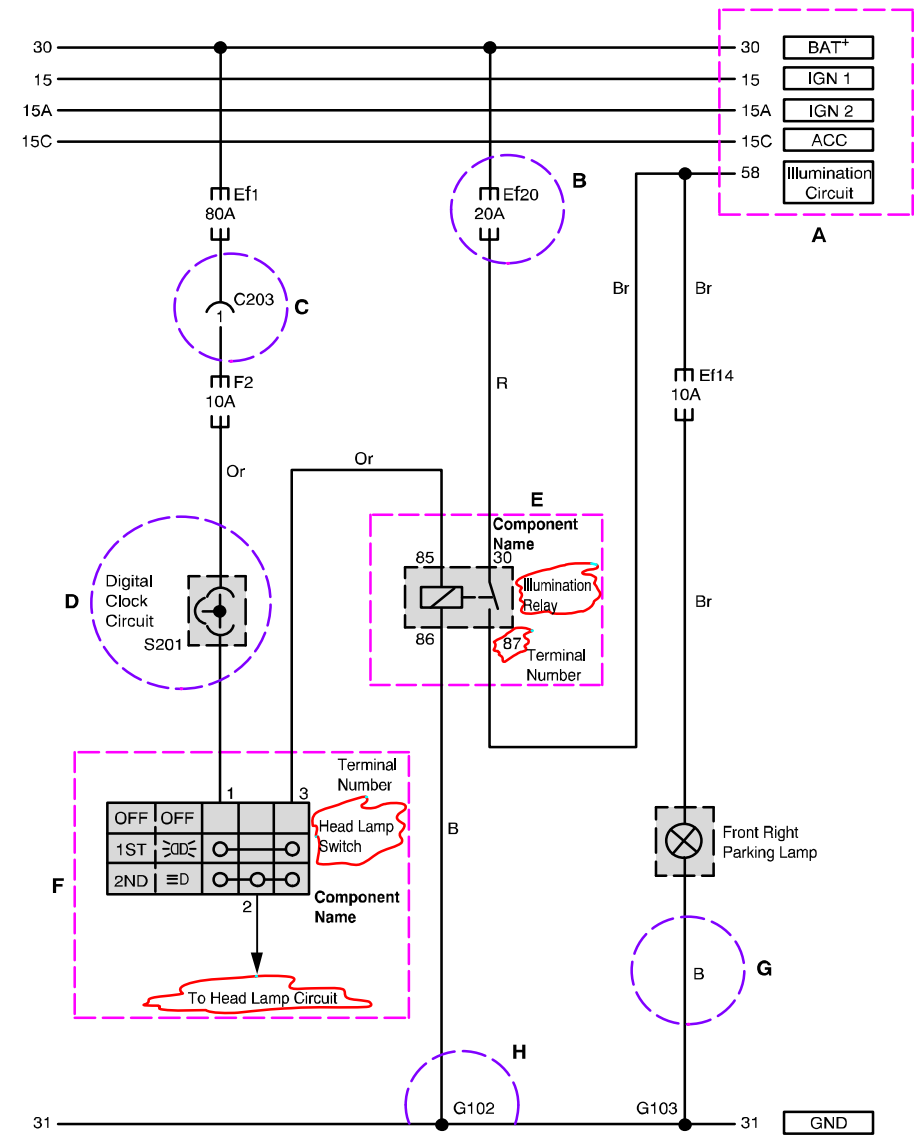


1) CONTENTS OF ELECTRICAL WIRING DIAGRAM (CIRCUIT)

POSITION	EXPLANATION
A	▶ Upper horizontal lines : Power supply lines ▶ Power supply lines : 30, 15, 15A, 15C, 58
B	▶ Ef20 or F2 : Fuse Number • Ef20 : Fuse No #20 in engine room fuse box • F2 : Fuse No #2 in passenger room fuse box
C	▶ Connector (C101-C902) • Connector No C203 terminal No1 • Refer to Major Connector Position (Section 2)
D	▶ S201 : Splice pack (S101-S303) • Refer to Major Splice Pack Position (Section2)
E	▶ Internal circuit of component (Relay) (Component Name and Terminal Number)
F	▶ Internal circuit of component (switch) (Component Name, Terminal Number and Connecting Wiring Circuit)
G	▶ Wiring Harness Color • Refer to Wiring Harness Color Abbreviation
H	▶ Lower horizontal line : Ground line • Ground position(G101-G401) • B : Body Ground • Refer to Major Ground Position (Section2)


2) W/H BODY

W/H BODY

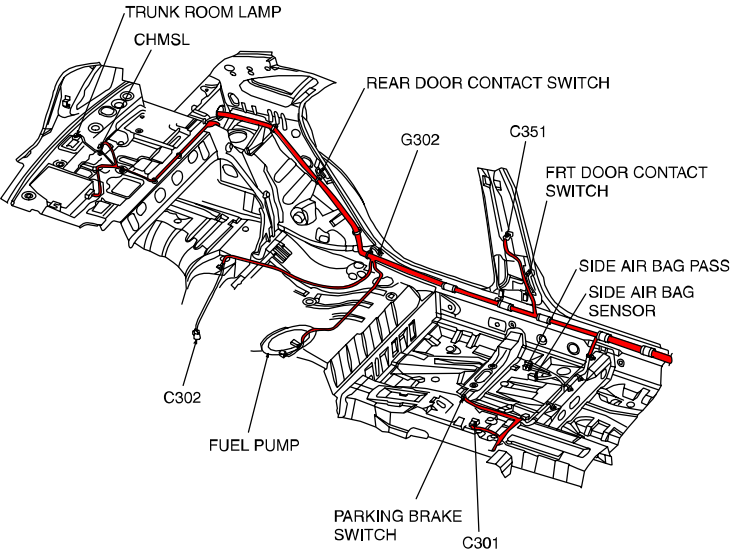


J3B12016

W/H Body(H/B)

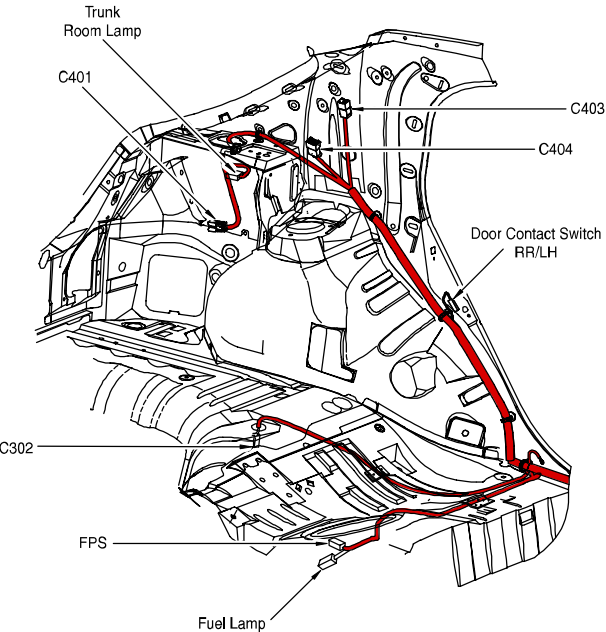


J3B12029

W/H BODY

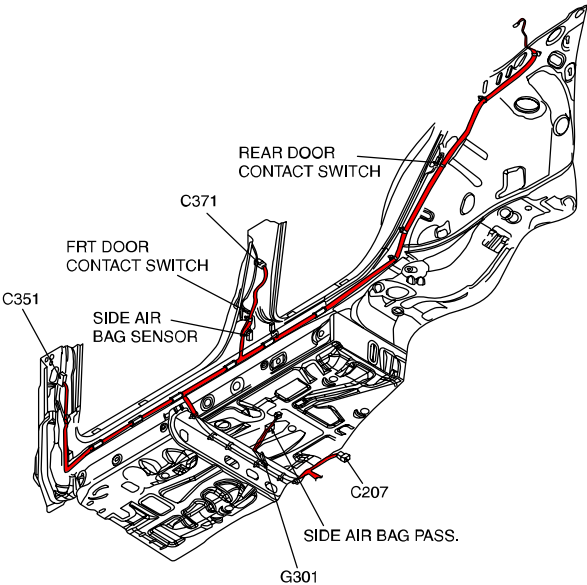


J3B12017

W/H BODY

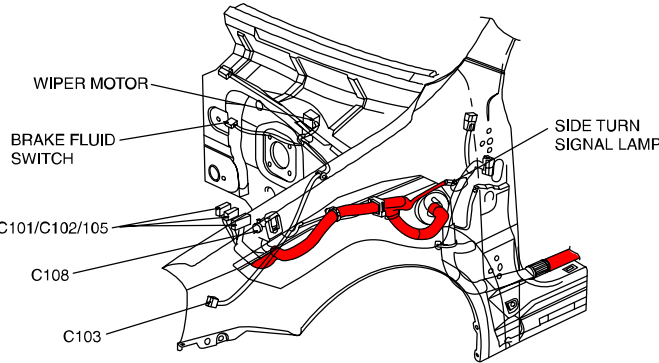

J3B12020


6) DLC, MIL LAMP & IMMOBILIZER CONTROL CIRCUIT

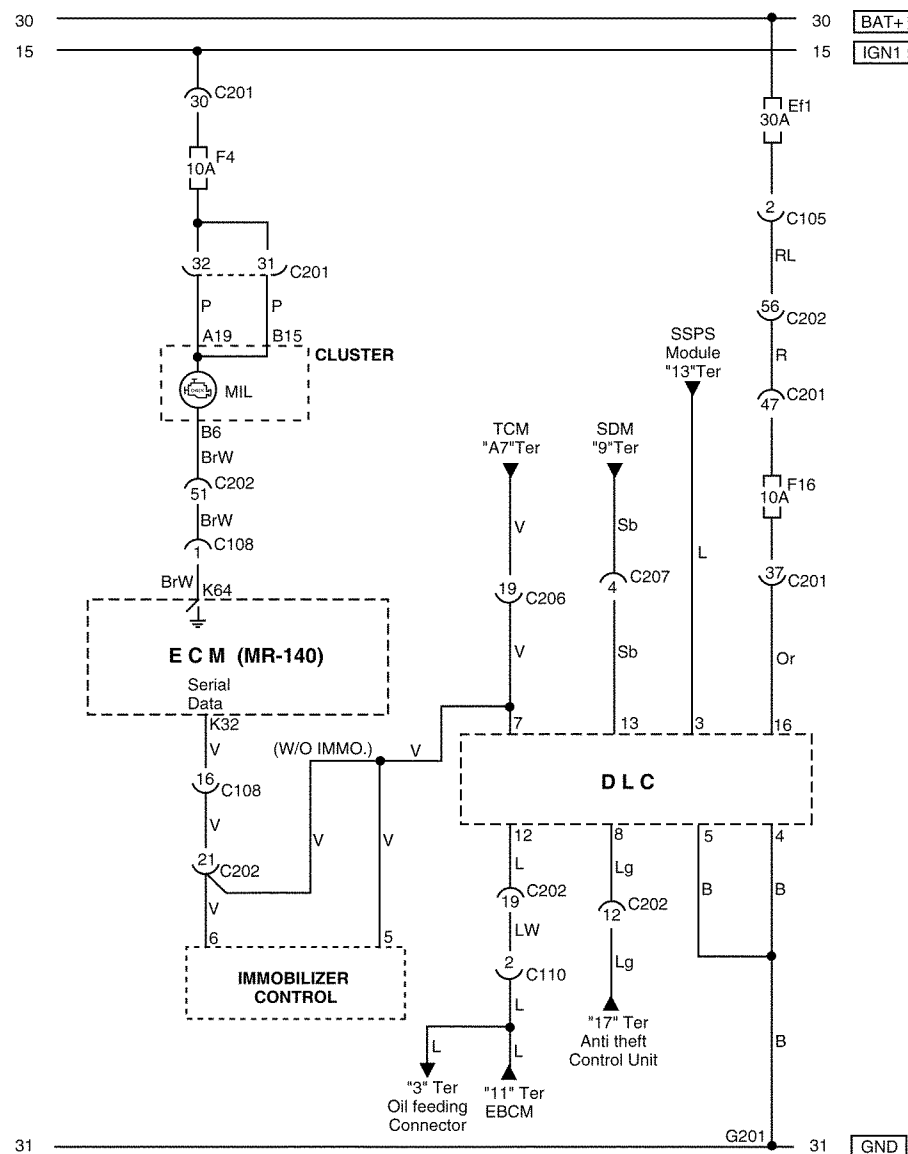


a. CONNECTOR INFORMATION

CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

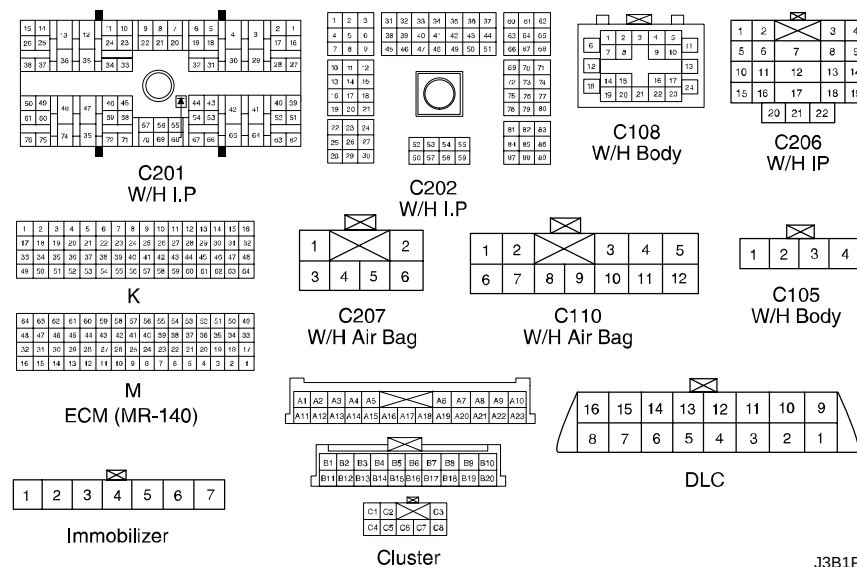

2) POWER SUPPLY, GROUND, PNP SWITCH, CLUSTER & ECM CIRCUIT : HATCH BACK

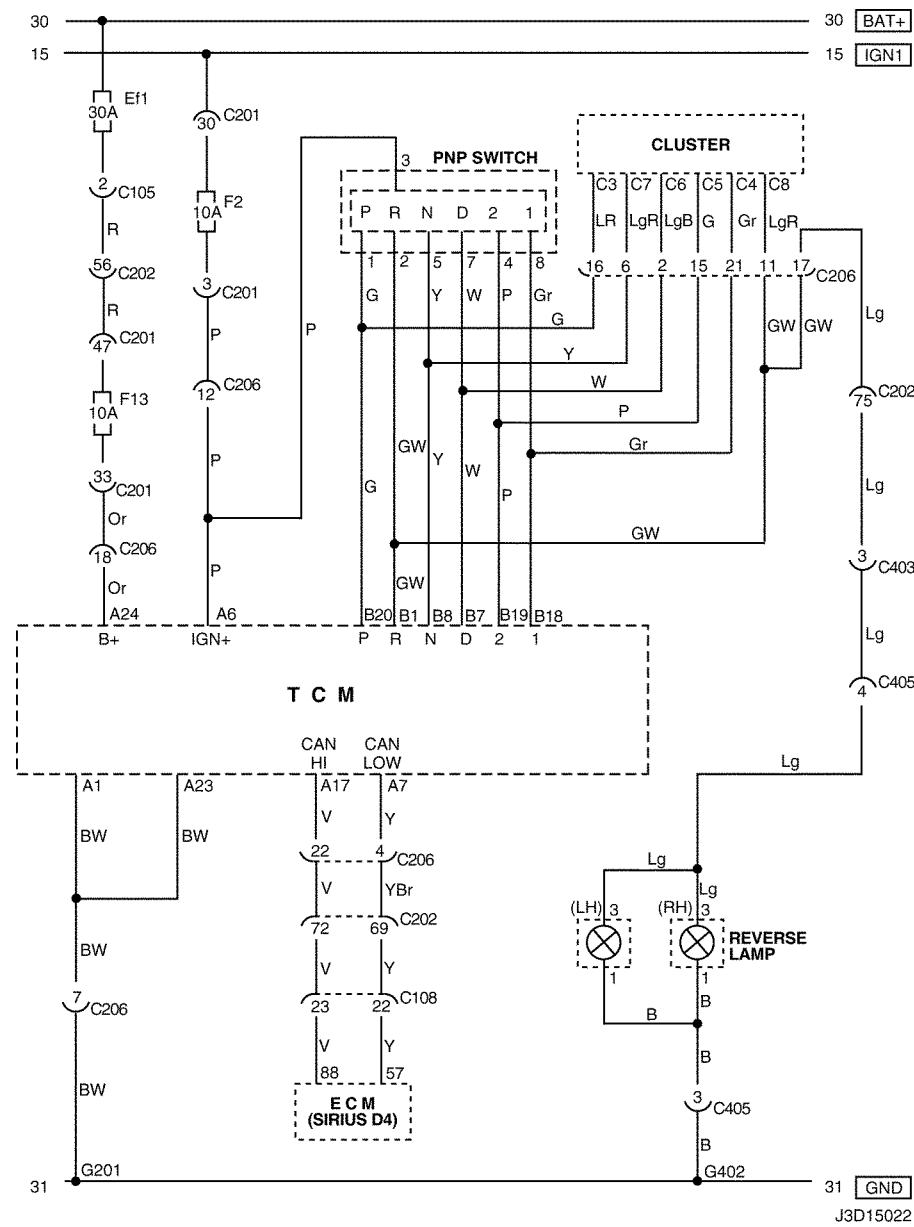

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G201	I.P	Left I.P Fuse Block
G402	T/Gate. EXT.	Inside Driver C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

B1	B2	B3	B4	B5	B6
B7	B8	B9	B10	B11	B12
B13	B14	B15	B16	B17	B18
B19	B20	B21	B22	B23	B24
B25	B26				

ECM (Sirius D4)

A1	A2	A3	A4	A5	A6
A7	A8	A9	A10	A11	A12
A13	A14	A15	A16	A17	A18
A19	A20	A21	A22	A23	A24

TCM(AISIN)

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100					

Cluster

1	2	3	4	5
6	7	8	9	

PNP SWITCH

1	2	3	4	5
6	7	8	9	

C403 W/H Tate EXT.

1	2	3	4	5
6	7	8	9	


C405 W/H T/Gate EXT.

1	2	3	4	5
6	7	8	9	


Rear Combination Lamp

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

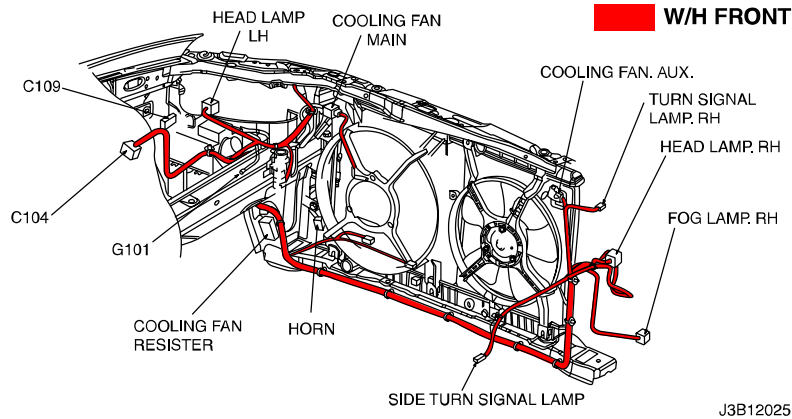


- W/H INSTRUMENT PANEL

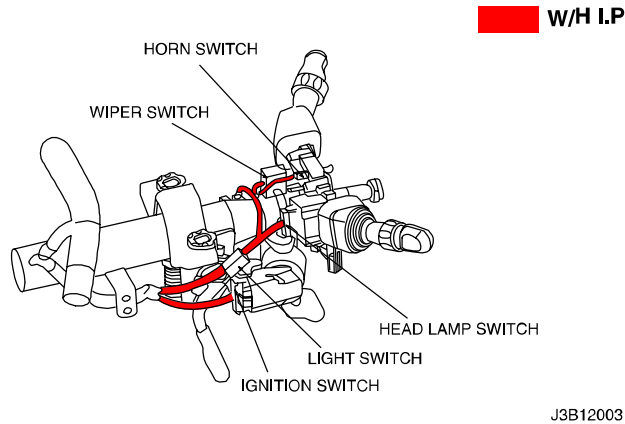


d. SPLICE PACK


S201

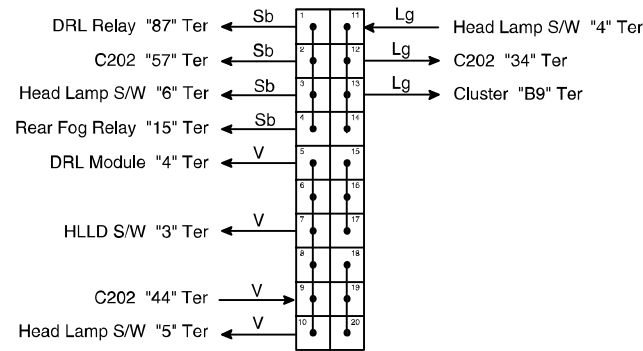

S203

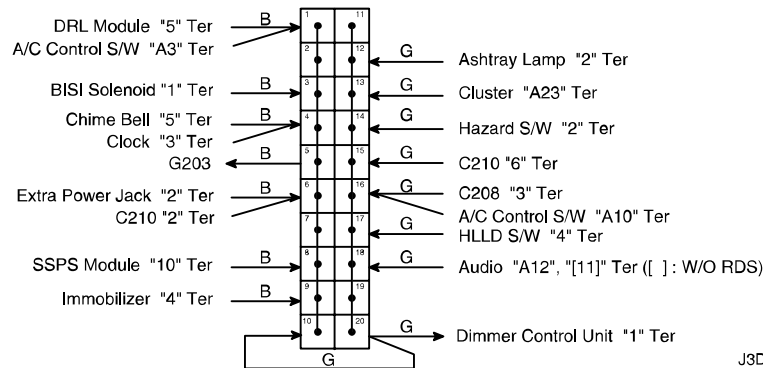


S204

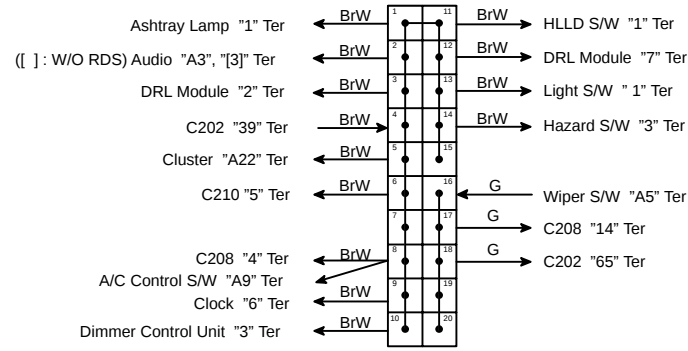

c. POSITION OF CONNECTORS AND GROUNDS


- W/H FRONT

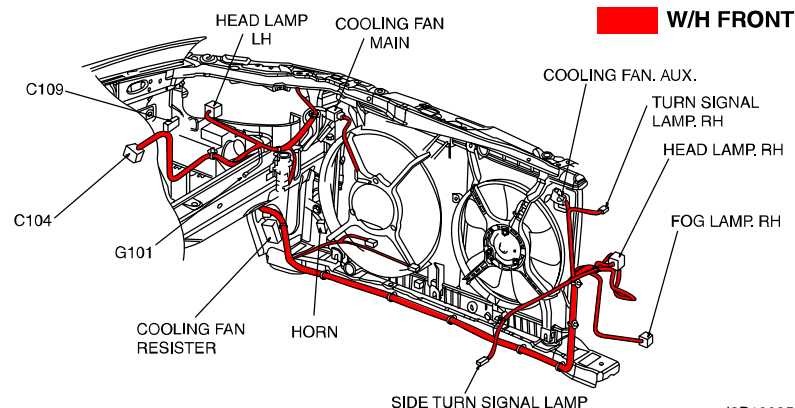

J3B12025


d. SPLICE PACK

S202

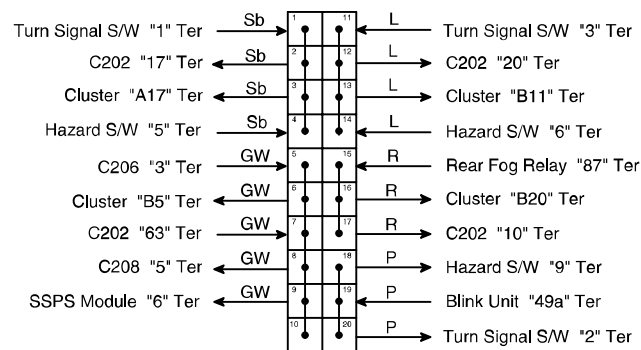


J3D1S003

S203

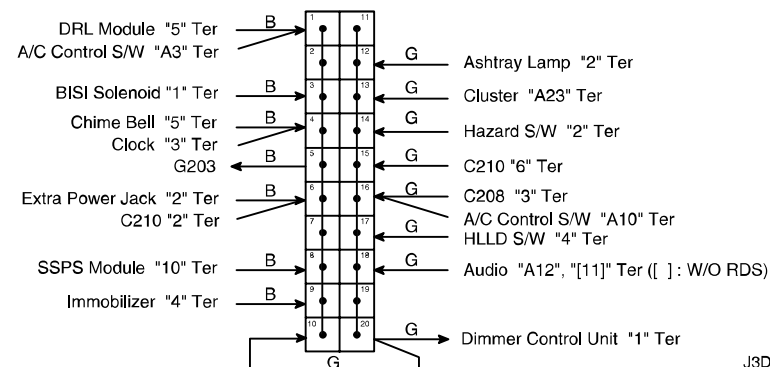


J3D1S004

S204

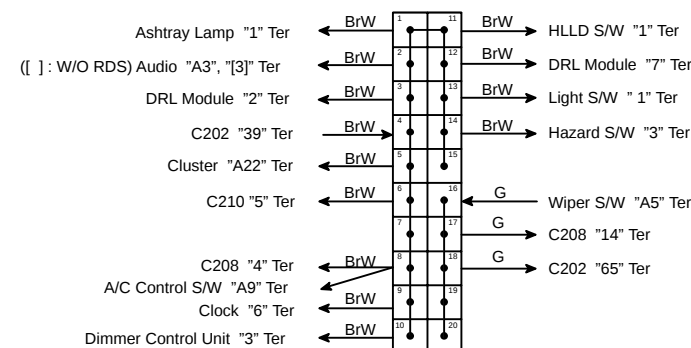

J3B1S006


S302

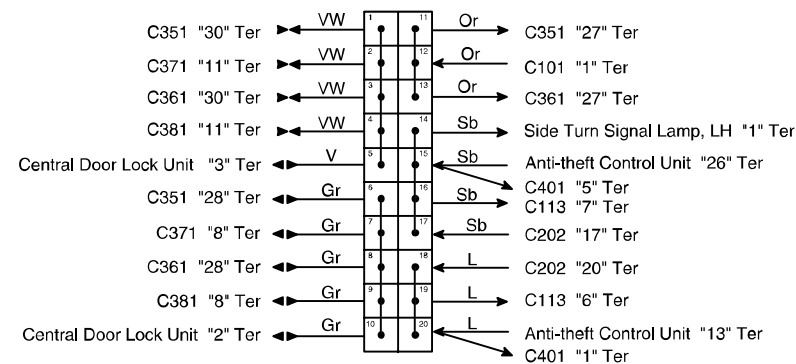

J3D1S005

18. CLOCK, CIGAR LIGHTER, ASHTRAY ILLUM. LAMP & EXTRA POWER JACK CIRCUIT


1) M/T

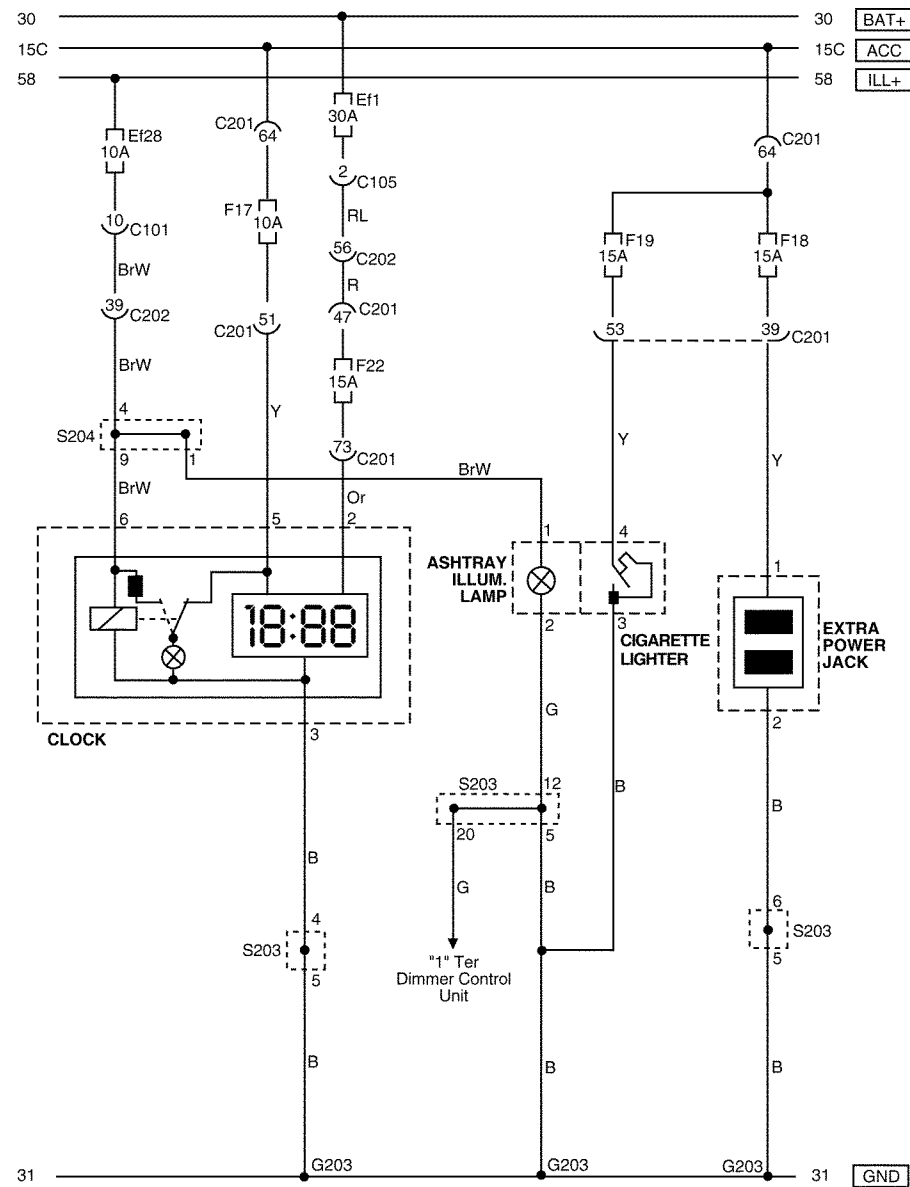

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

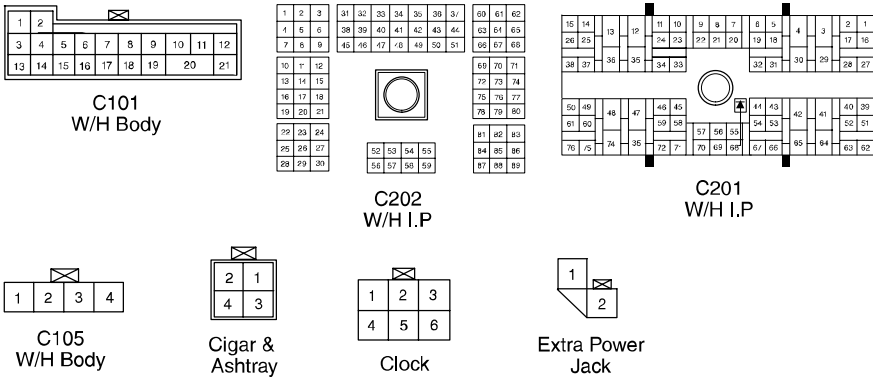

J3B1P045


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

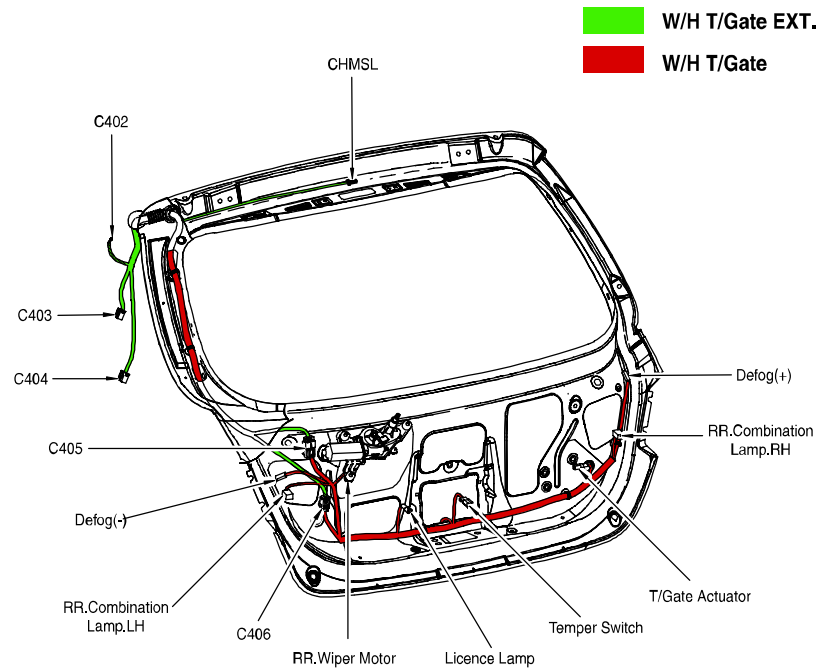

J3B12031


- W/H INSTRUMENT PANEL

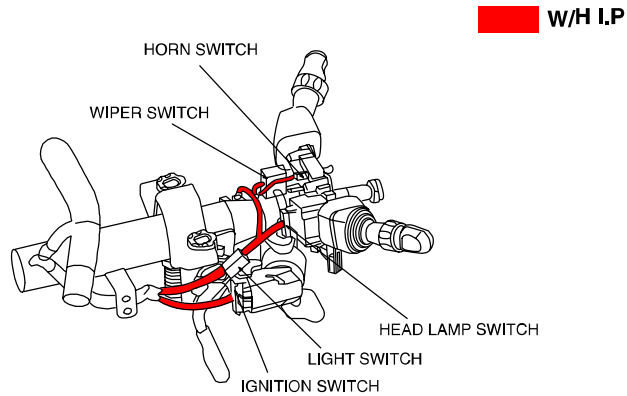

J3B12003


d. SPLICE PACK

S204

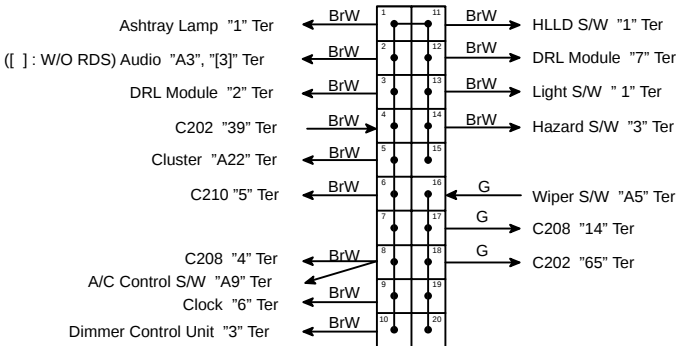

J3B1S006

2) HATCH BACK

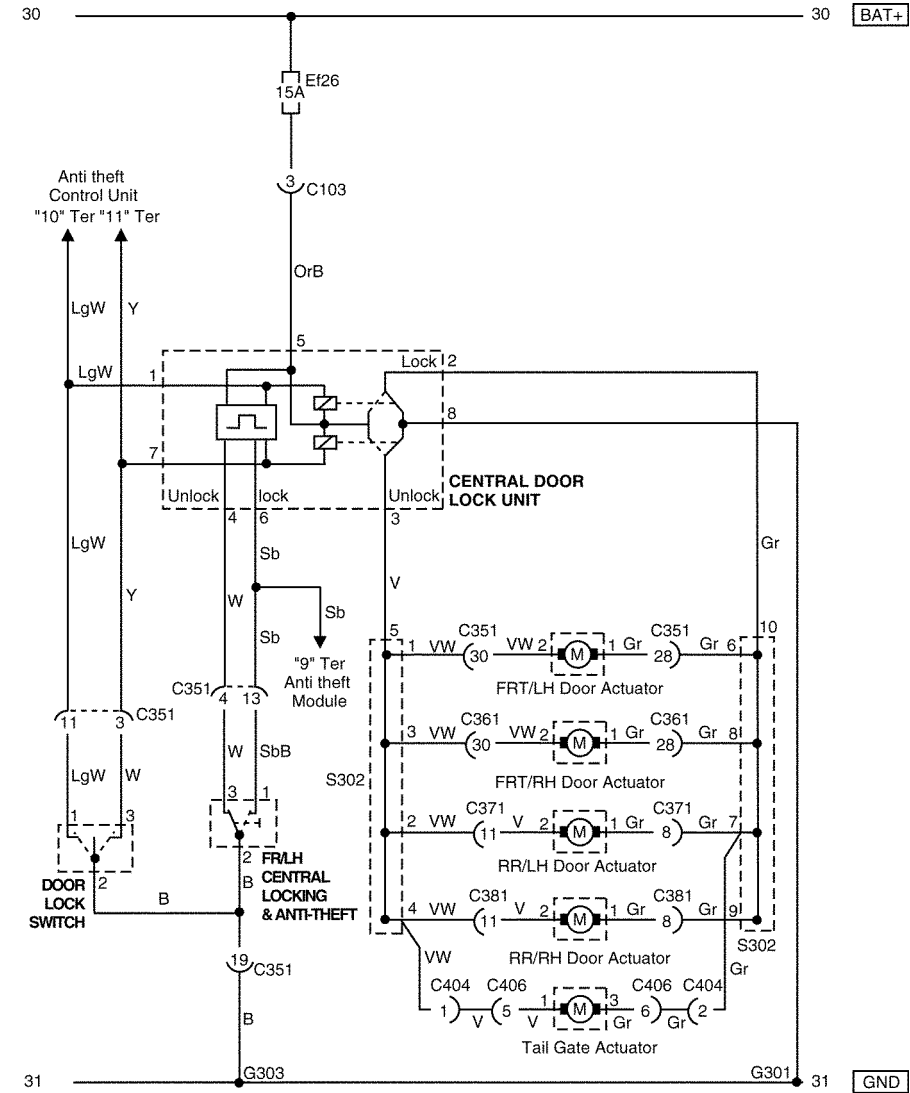


J3D15068


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

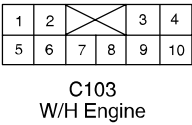

C103
W/H Engine

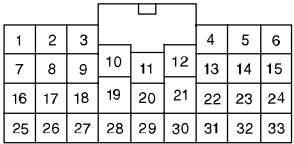

C351/C361
W/H Body

 


C371/C381
W/H Body



Central Door
Lock Unit



 
Door Actuator




Central Locking
& Anti theft



 Door Lock Switch




C404
W/H T/Gate EXT.

 

C406
W/H T/Gate EXT.

J3D1P048

2) OIL FEEDING CONNECTOR, WARNING (ABS, TCS & BRAKE) LAMP & DLC CIRCUIT

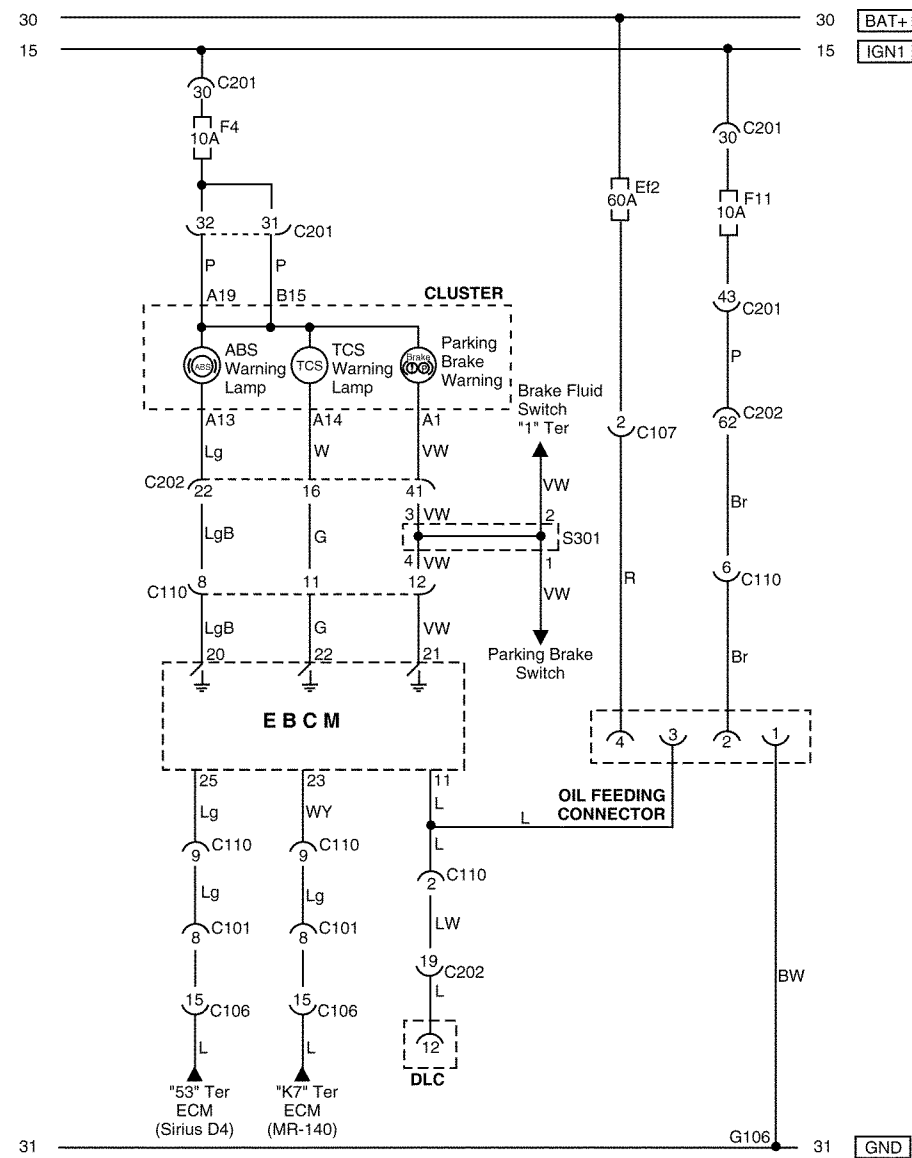


J3D15078


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C107 (2 Pin, White)	ABS – Engine Fuse Block	Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G106	ABS	Below EBCM


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

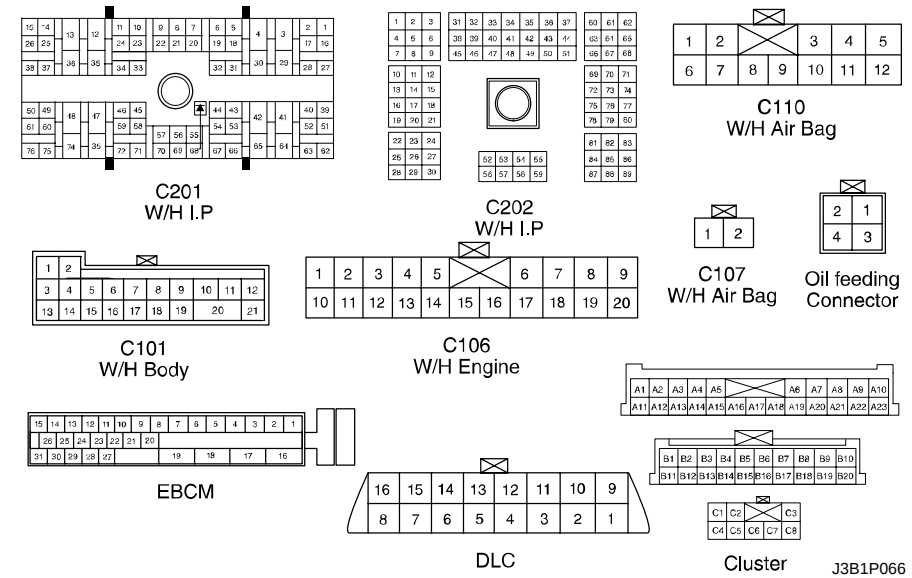


3) W/H FRONT

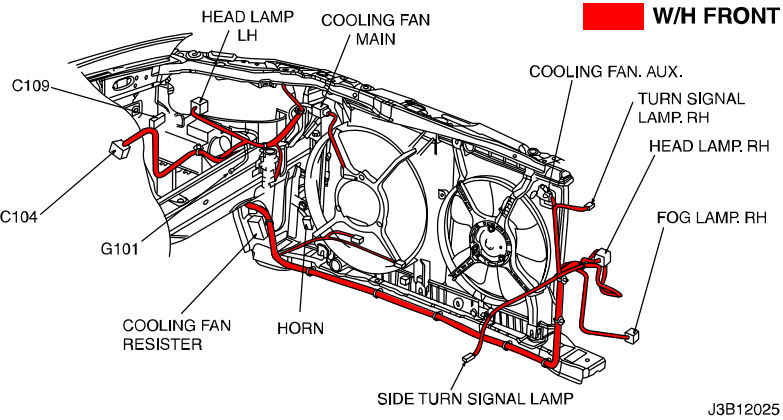

4) W/H ENGINE
- SIRIUS D4

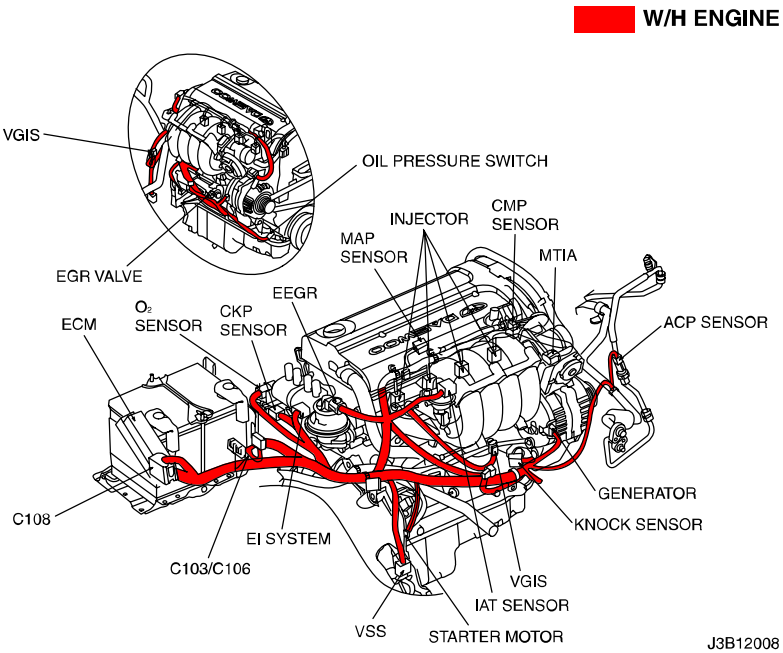

- MR-140 / HV-240

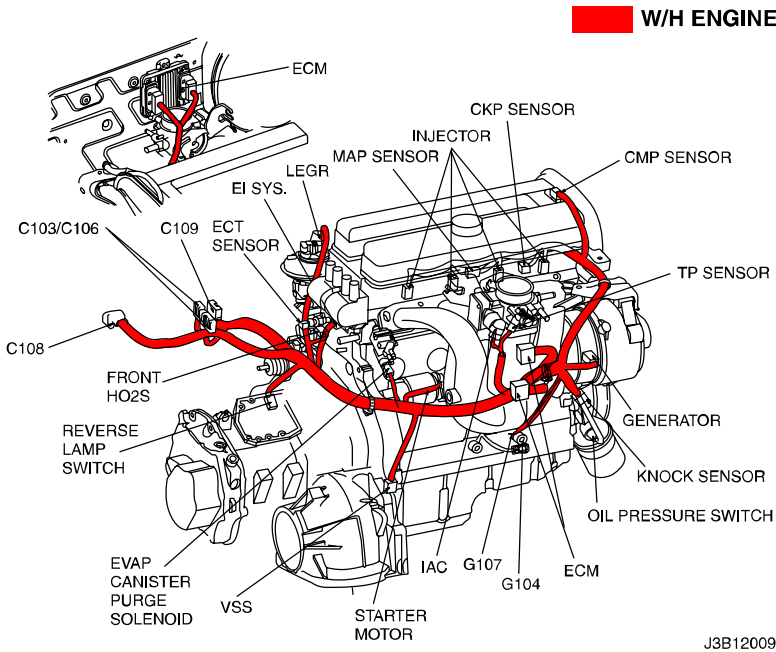

3. POSITION OF CONTROL UNIT, RELAY AND PART NUMBER**1) ENGINE FUSE BLOCK**

Part Name	Part No.	Remarks
Front Fog Relay	96190187	
ILLUM. Relay	96190187	
Cooling Fan Low Relay	96190189	
Cooling Fan HI Relay	96190189	
A/C Comp. Relay	96190187	
Horn Relay	96190187	
Defog Relay	96190189	
Fuel Relay	96190189	
Main/Ignition Relay	96190189	
Power Window Relay	96190189	
Head Lamp Relay	96190189	

2) BEHIND DRIVER LEG ROOM CONNECTOR HOLDER

Part Name	Part No.	Remarks
Rear Fog Relay	96344573	
PNP Relay	96190189	
Blink Unit	96312545	
Blower Relay	96190189	

3) DRIVER LEG ROOM

Part Name	Part No.	Remarks
Chime Bell	96459510	
TCM (MR-140/HV-240)	96342619	
TCM (SIRIUS D4)	96497032	

4) BEHIND LEFT HEAD LAMP

Part Name	Part No.	Remarks
Cooling Fan Control Relay	96251271	

5) UNDER LEFT PASSENGER LEG ROOM

Part Name	Part No.	Remarks
Central Door Lock Unit	96552824	

6) FLOOR PANEL BELOW CONSOLE


Part Name	Part No.	Remarks
Anti Theft Control Unit	96407681	West Euro
	96404668	General
SDM	96406712	

7) BESIDE ENGINE FUSE BLOCK

Part Name	Part No.	Remarks
EBCM	96549742	


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

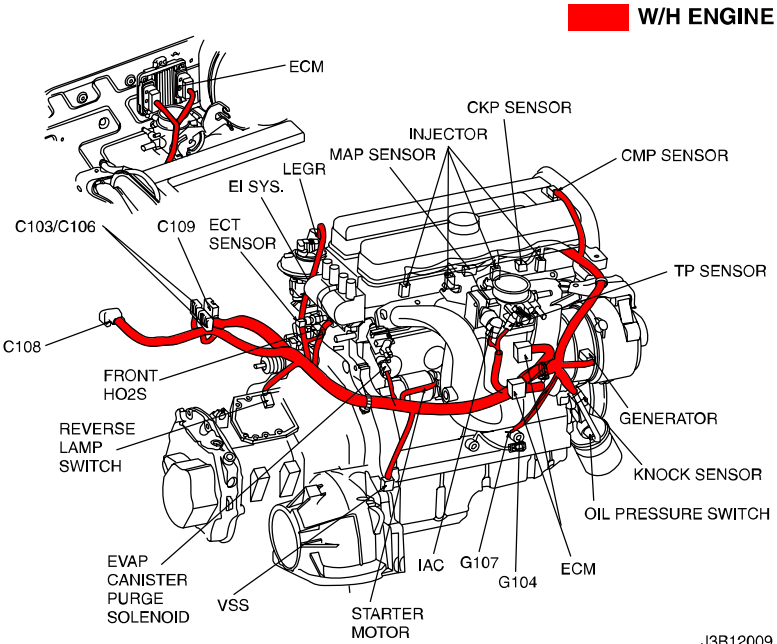

J3B12009


- W/H TCM

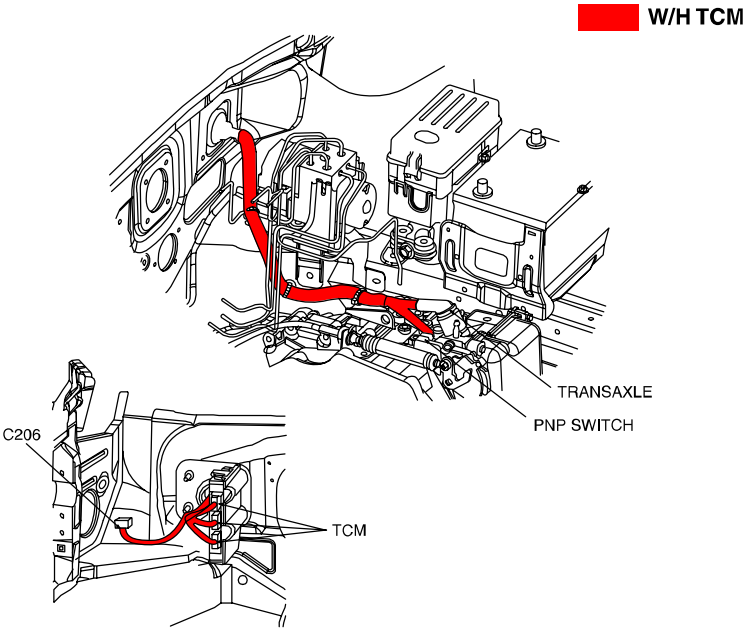


J3B12019

c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

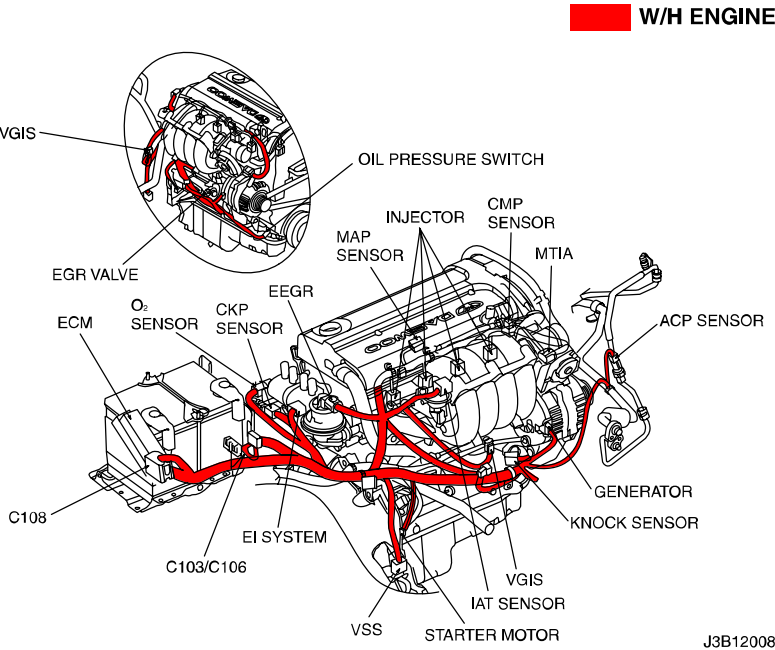


- W/H INSTRUMENT PANEL

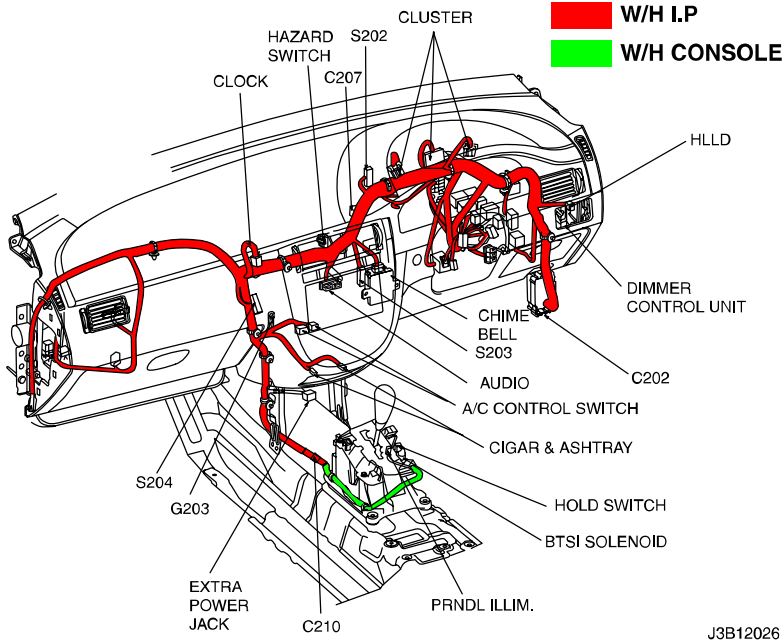


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TCM

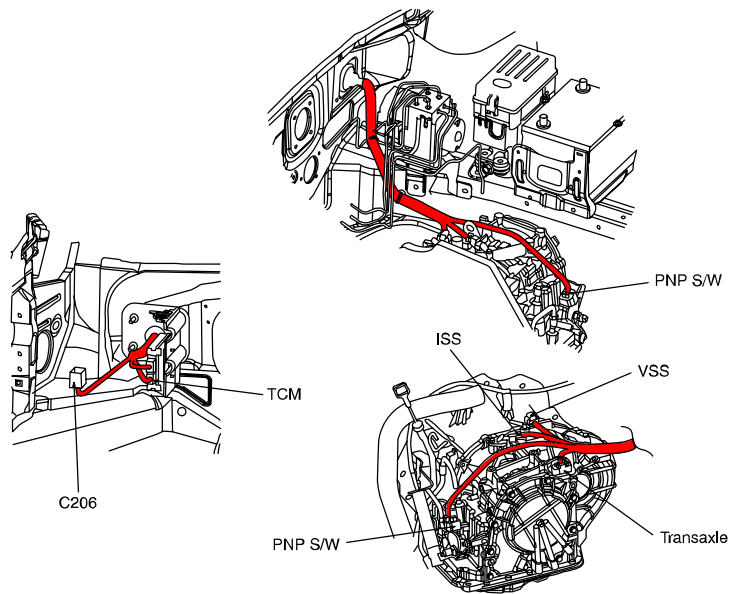

J3B12018


- W/H INSTRUMENT PANEL

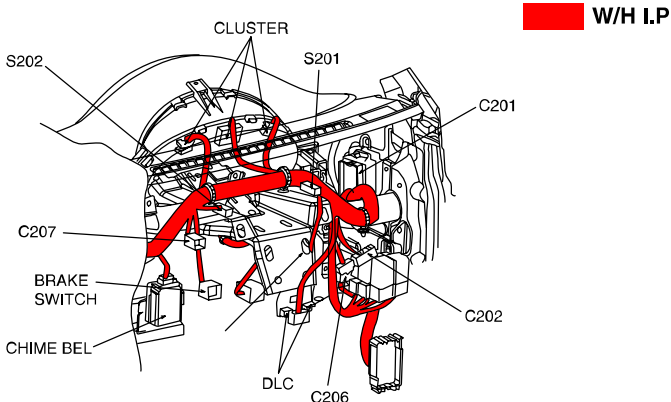

J3B12002

d. SPLICE PACK

S202

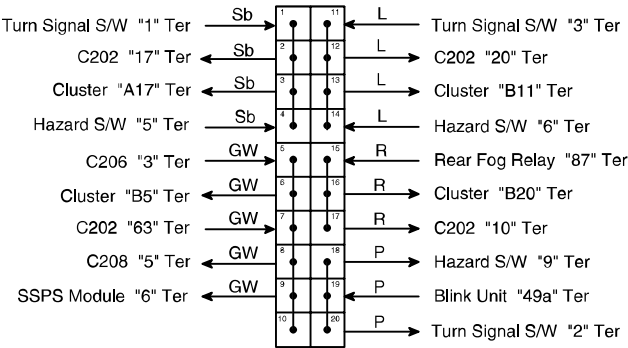

J3D1S003