 

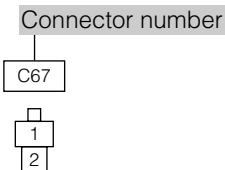


The connector diagram of the J/C shows the female terminal side.

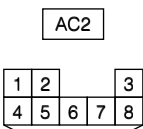

○ 1	○ 7	● 13
○ 2	● 8	● 14
○ 3	● 9	○ 15
4	○	● 16
● 5	○ 11	● 17
○ 6	● 12	○ 18
		● 19

(● shows the power supply side)

The fuse position as viewed from the front is given.

5 ITEMS OMITTED IN THIS MANUAL


1. This manual does not cover the following item given below. When performing the electric system checks and service, please read the General section of this manual and related repair manuals. Moreover, before starting the check operations and service, be sure to be well versed in those operations by reading the General sections of the repair manuals.

- (1) GENERAL SERVICE INSTRUCTION
- (2) SUPPORTING POINTS FOR JACKS AND SAFETY STANDS
- (3) SUPPORTING POINTS OF LIFTS
- (4) SERVICE INSTRUCTIONS FOR FOUR WHEEL DRIVE VEHICLES
- (5) DATA LINK CONNECTOR
- (6) INSTRUCTIONS FOR SYSTEM INSPECTION
- (7) INSTRUCTIONS FOR RADIO INSTALLATION


6 ABBREVIATION CODES

ABBREVIATION CODE	ORIGINAL WORD
2WD	Two wheel drive
4WD	Four wheel drive
ABS	Anti-lock brake system
ABV	Air bypass valve
A/B	Airbag
ACC	Accessory
ACV	Air control valve
A/C	Air conditioner
A/T	Automatic transaxle, Automatic transmission
DLC	Data link connector
E-A/T	Electronic automatic transaxle, Electronic automatic transmission
EBD	Electronic brake force distribution
ECU	Electronic control unit
EFI	Electronic fuel injection
EPS	Electronic power steering
FR	Front
F/L	Fusible link
G	Gravity
GND	Ground
IG	Ignition
ILL	Illumination
ISC	Idle speed control
J/C	Junction connector
LCD	Liquid crystal display
LED	Light emitting diode
LH	Left-hand
MIL	Malfunction indicator lamp
M/T	Manual transaxle, Manual transmission
P/S	Power steering
RAD	Radiator
RH	Right-hand
RR	Rear
R/B	Relay block
SRS	Supplemental restrain system
SW	Switch
TEMP.	Temperature
VSV	Vacuum switching valve
W to W	Wire to wire connector


1 EARTH SYSTEM DIAGRAM

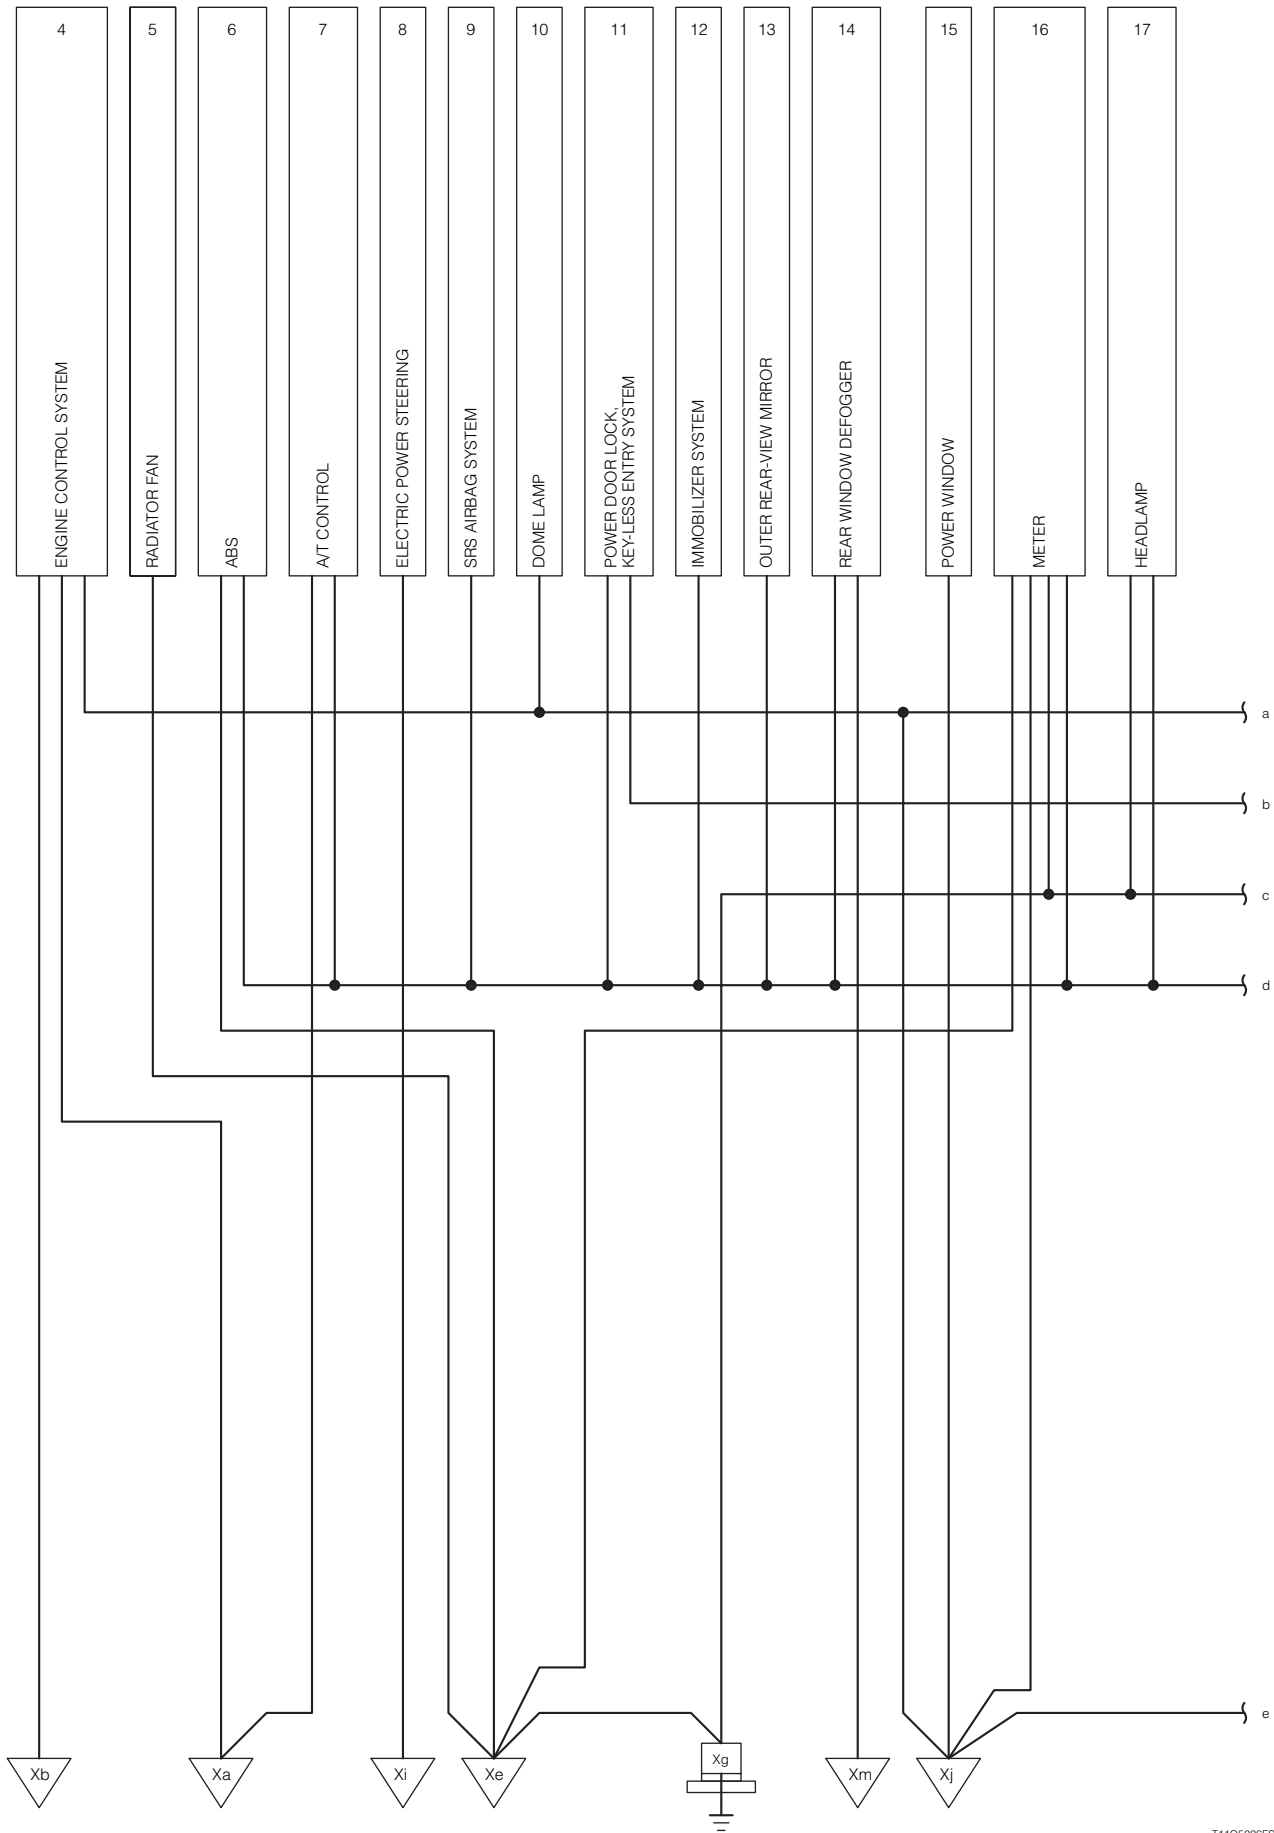

1 POWER SUPPLY SYSTEM DIAGRAM

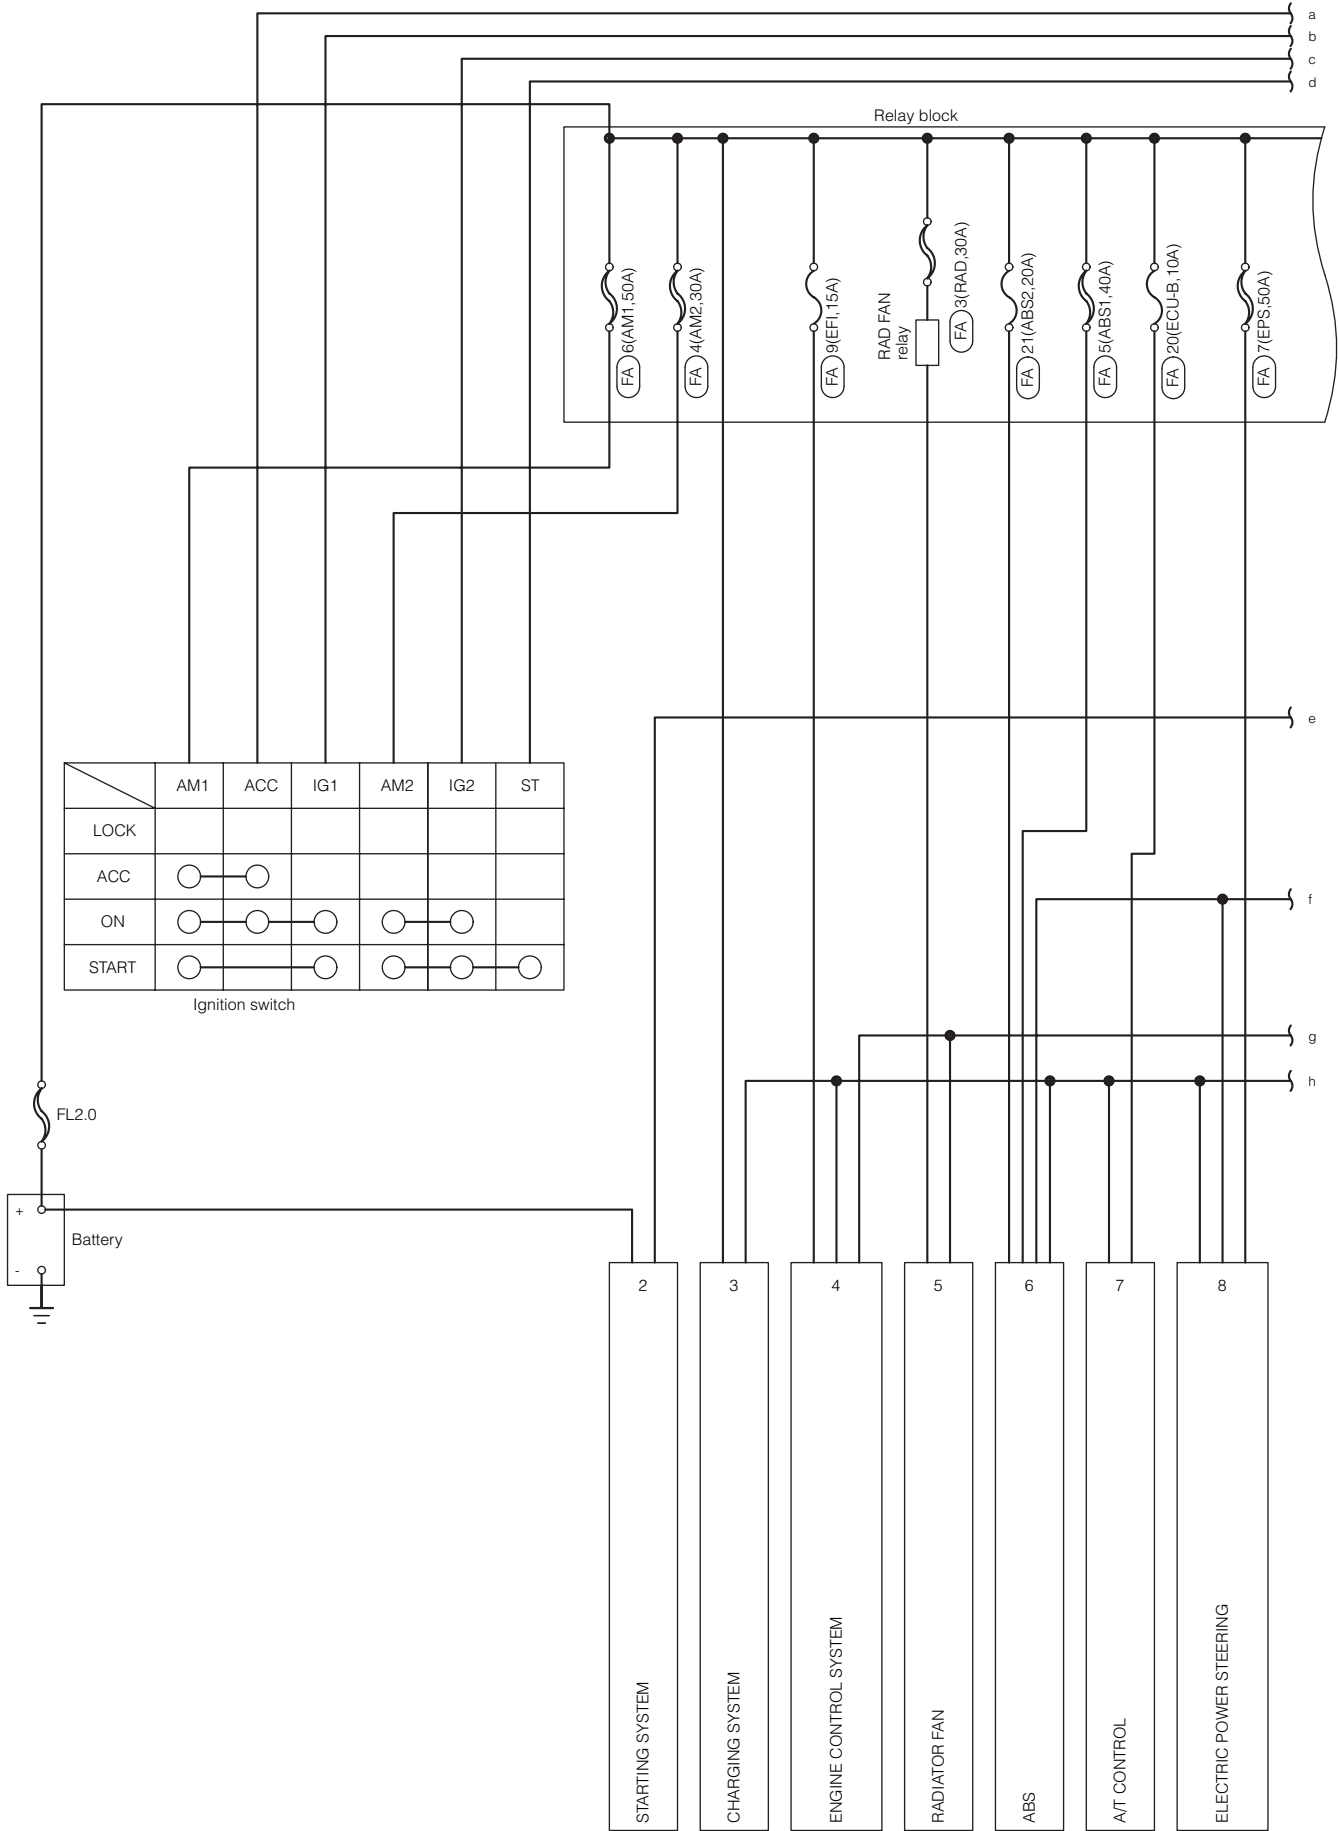


(2) The wires come in two kinds; mono-color wires and dual color wires. The mono-color wire has only a basic color, whereas the dual color wire has stripes on the basic color background.

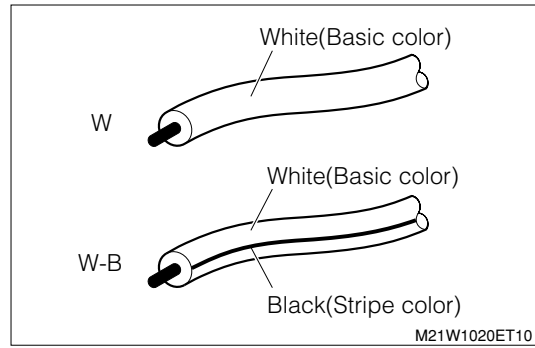

4.EARTH


(1) The circuit diagram by function in this manual explains three kinds of earth.

Bolt earth	The terminal is directly bolted to the vehicle body.
Connector earth	More than one harness are combined to one connector, then which is bolted to the vehicle body.
Inside part earth	Earth connection is made within a part, and this part is directly bolted to the vehicle body.

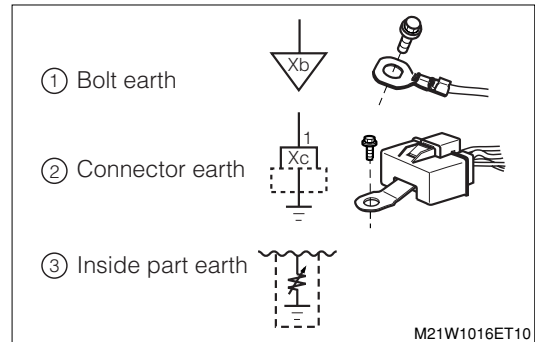


5.WIRE TO WIRE JUNCTION CONNECTOR (W to W J/C)

(1) This connector is a junction connector in which a shorting pin shorts two connectors. The connector diagram of the W to W J/C is given at the right figure.

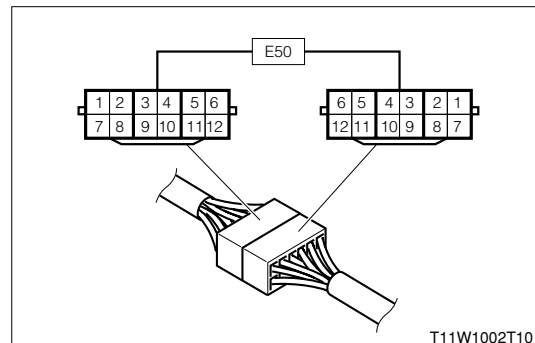

6.FUSE BLOCK, RELAY BLOCK


(1) The position of each fuse is indicated when the fuse block or relay block is viewed from the front. The ● mark indicates the power supply plus side of the fuse and the ○ mark indicates the power supply minus side of the fuse. No fuse is provided where no ● ○ mark is provided.

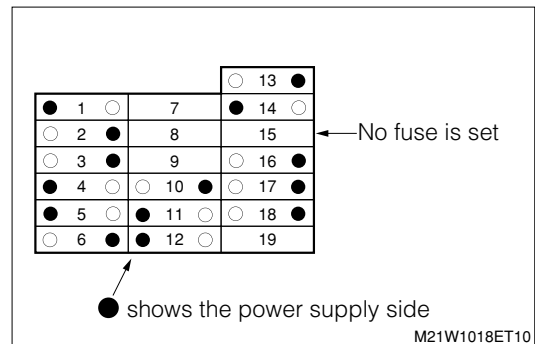


3 HANDLING INSTRUCTIONS



3-1 HANDLING OF HARNESS AND CONNECTOR

1. When assembling the wire harness, do not pull or step on the connectors. Be careful not to allow the harness to be damaged by burrs or edges.
2. When installing the harness, be careful not to allow the harness to wind or twist.

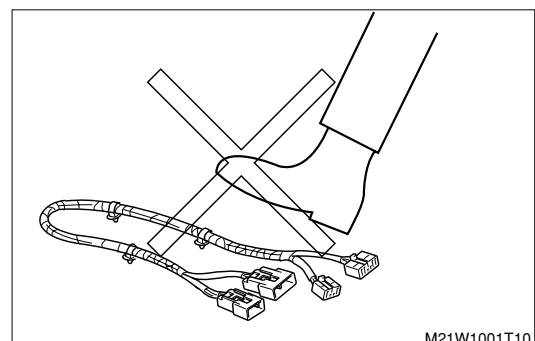


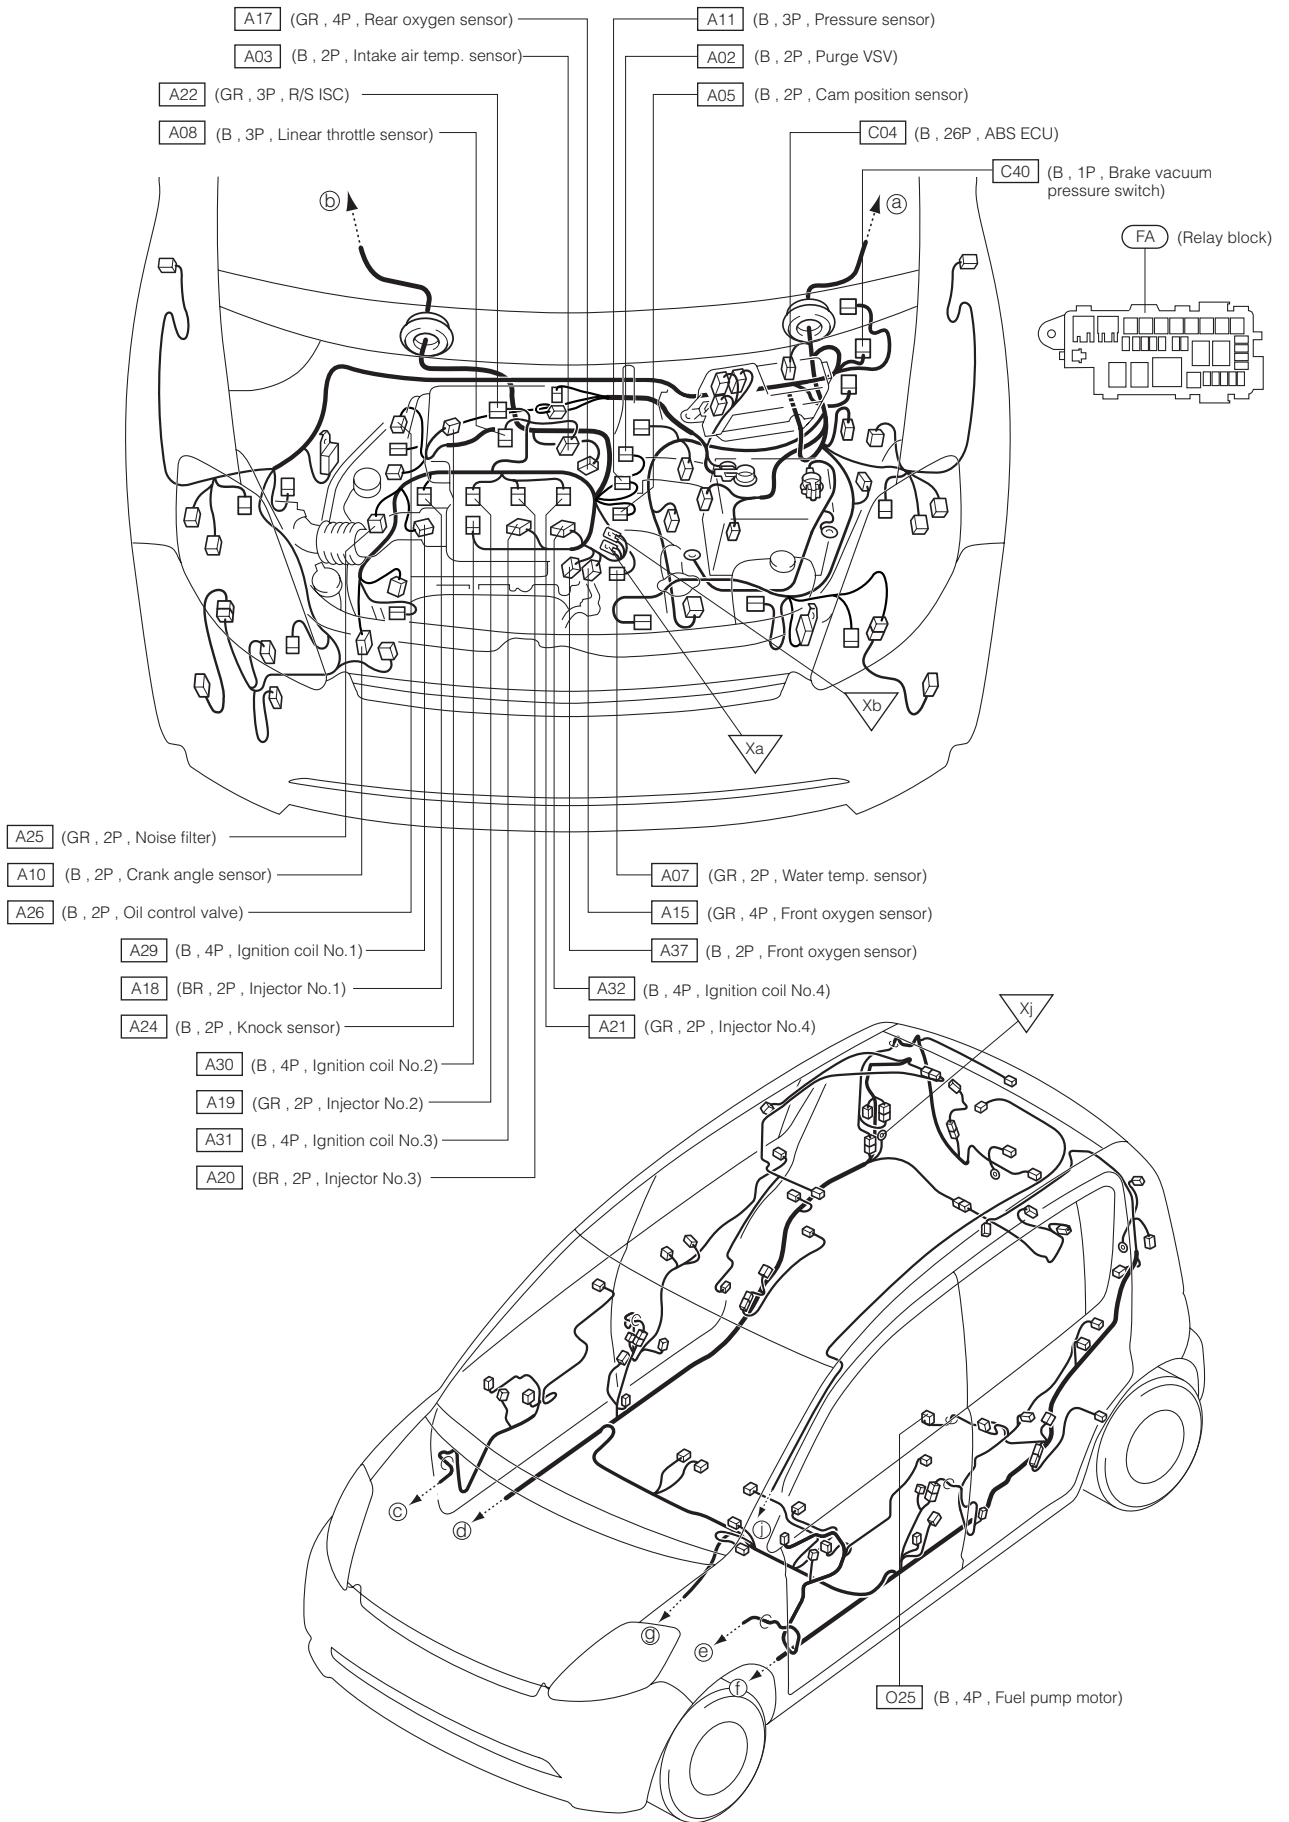



10-2 LHD VEHICLE

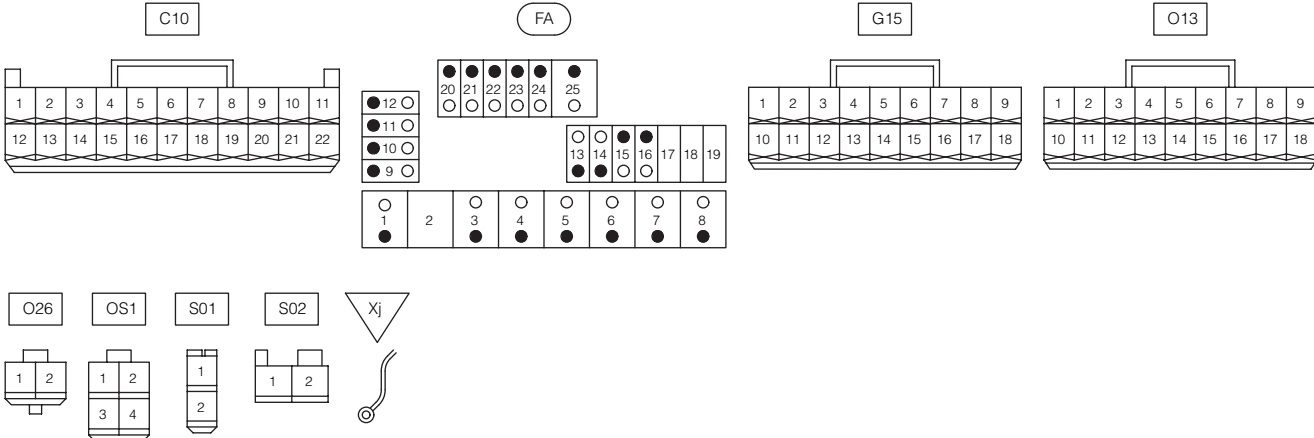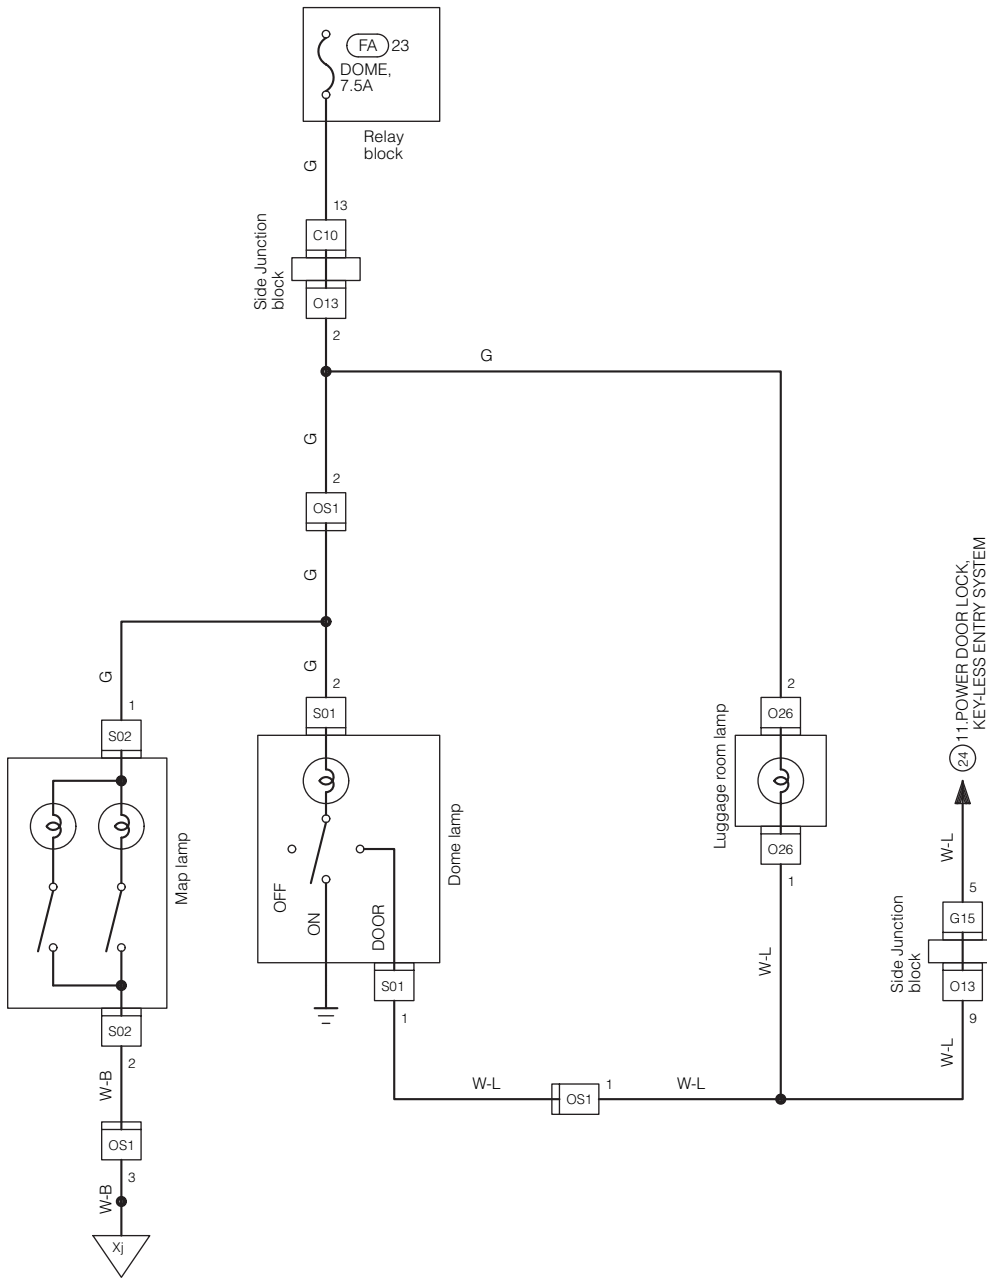



D-117


13 OUTER REAR-VIEW MIRROR 13-1 RHD VEHICLE

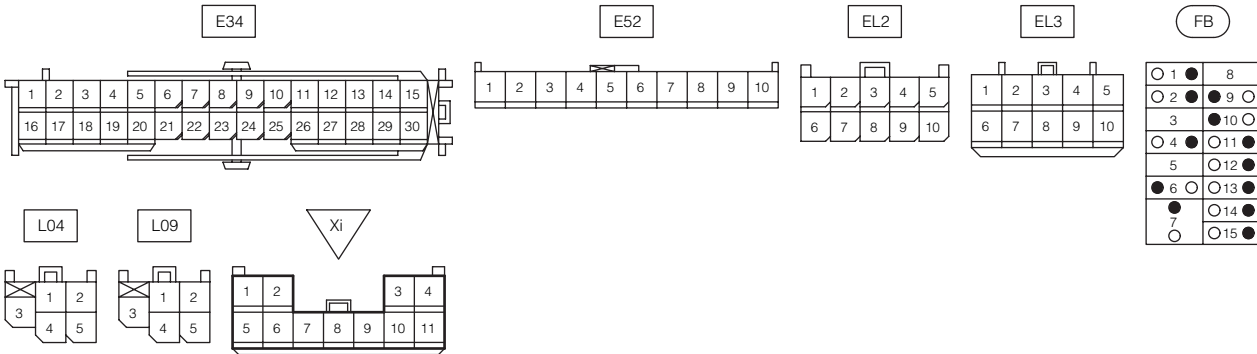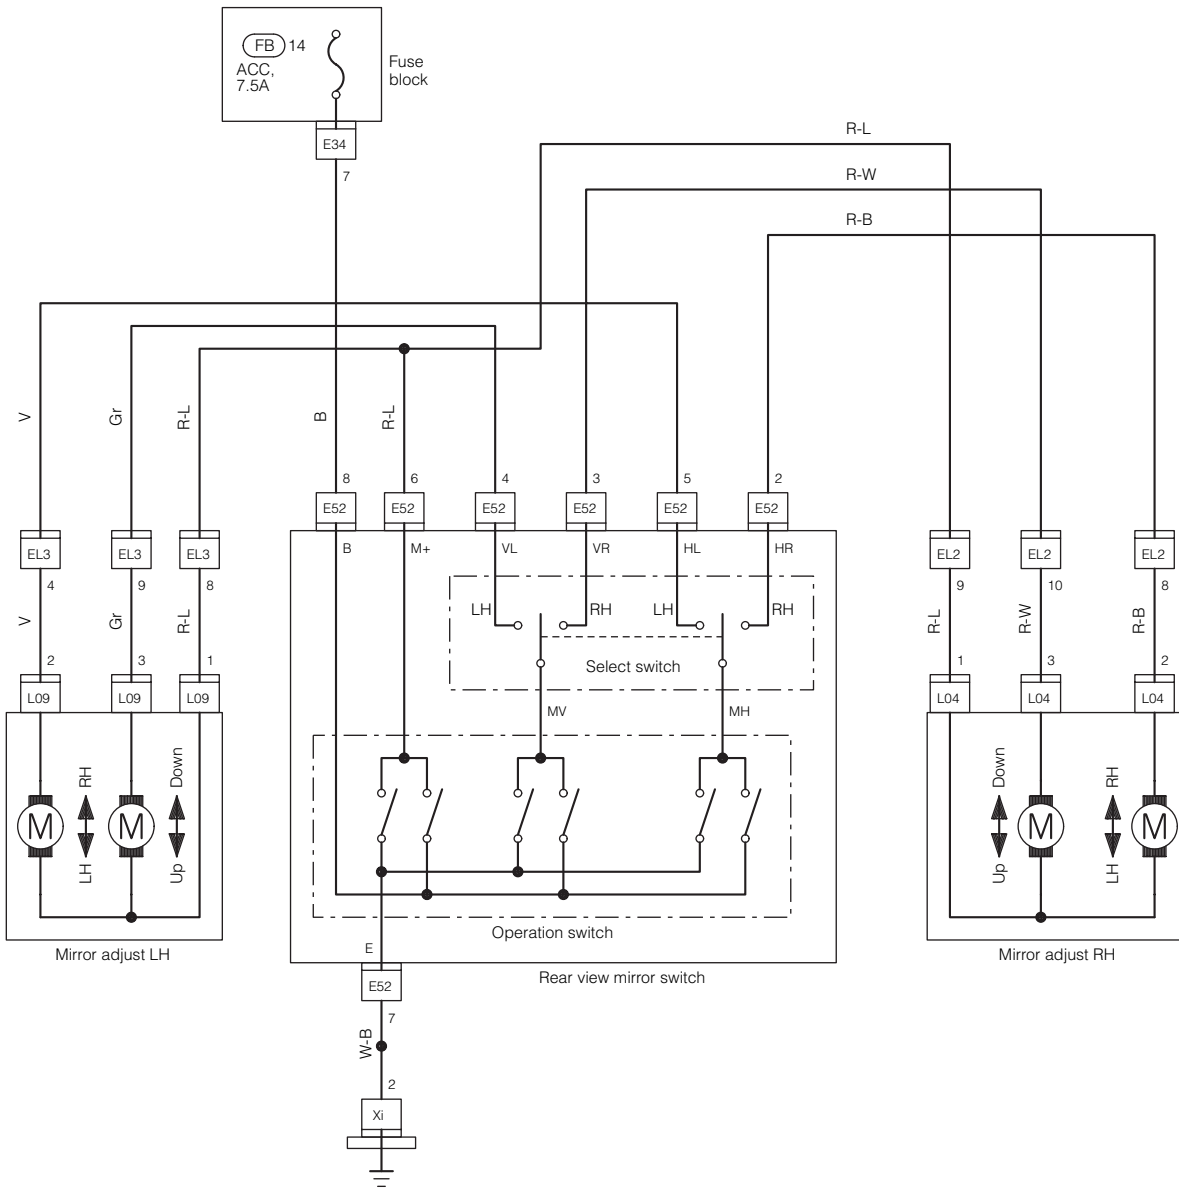

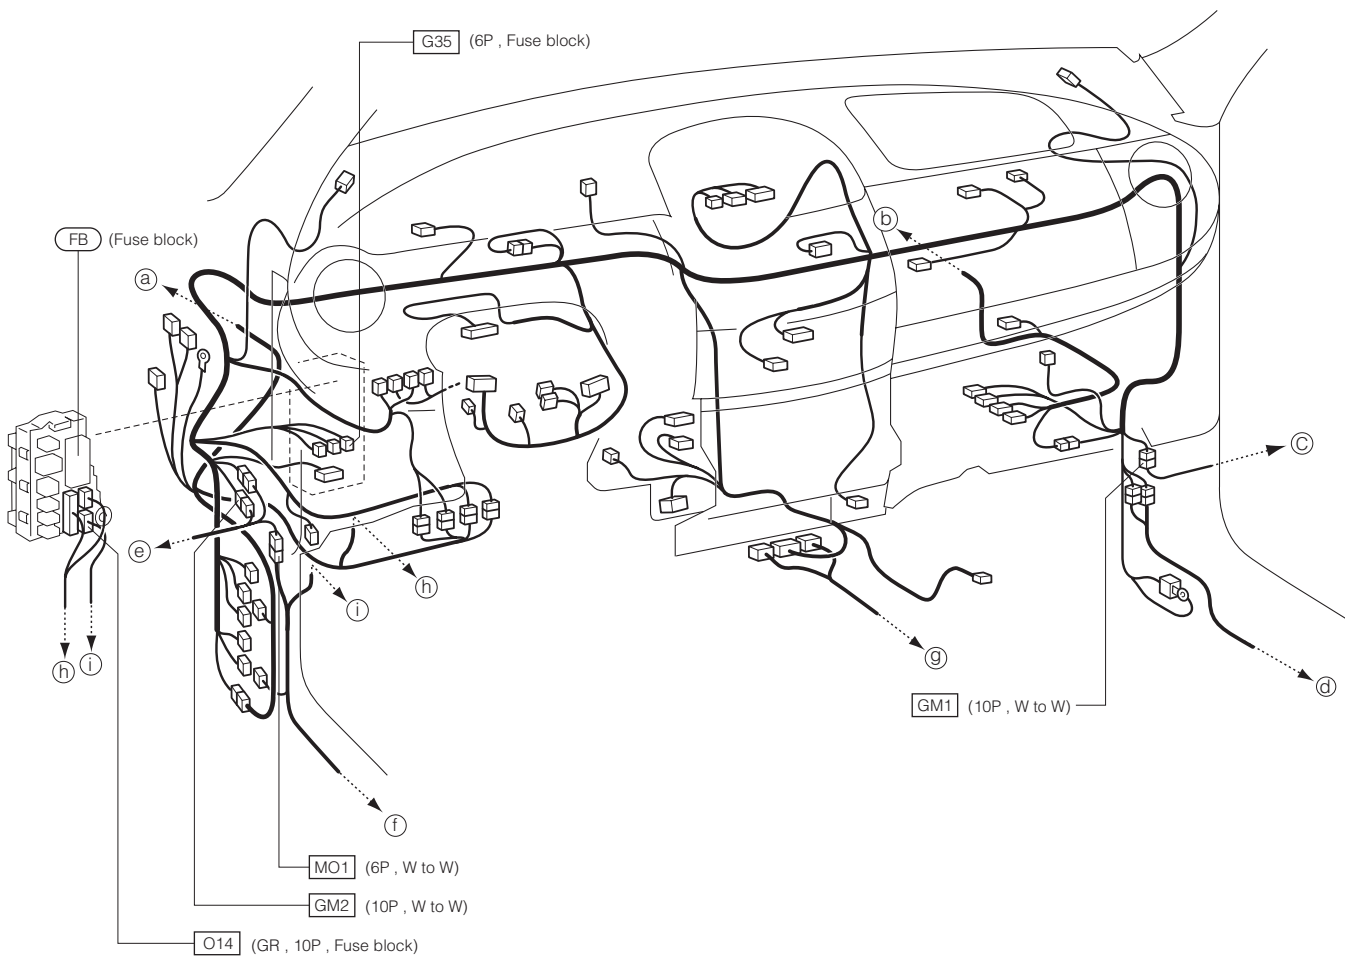



19-2 LHD VEHICLE

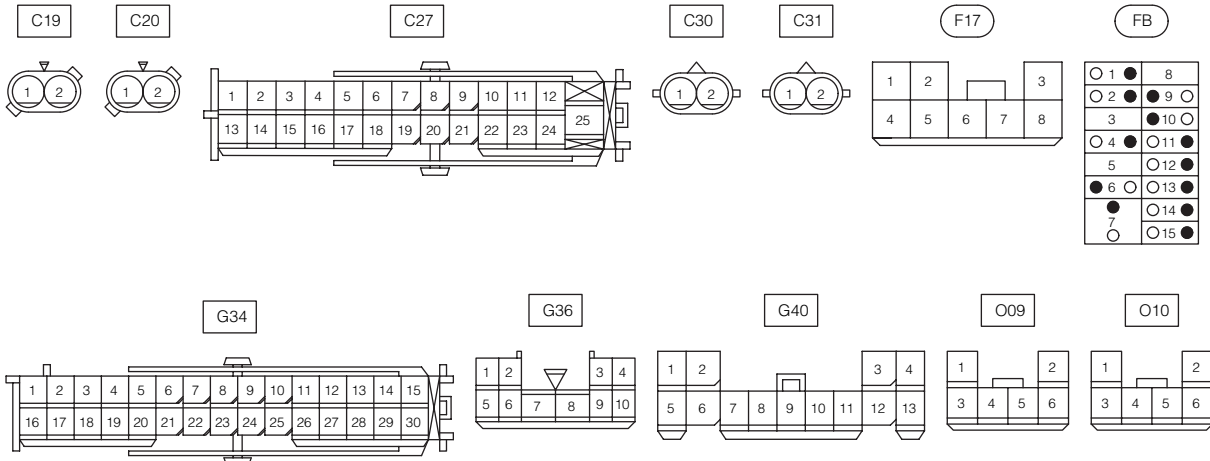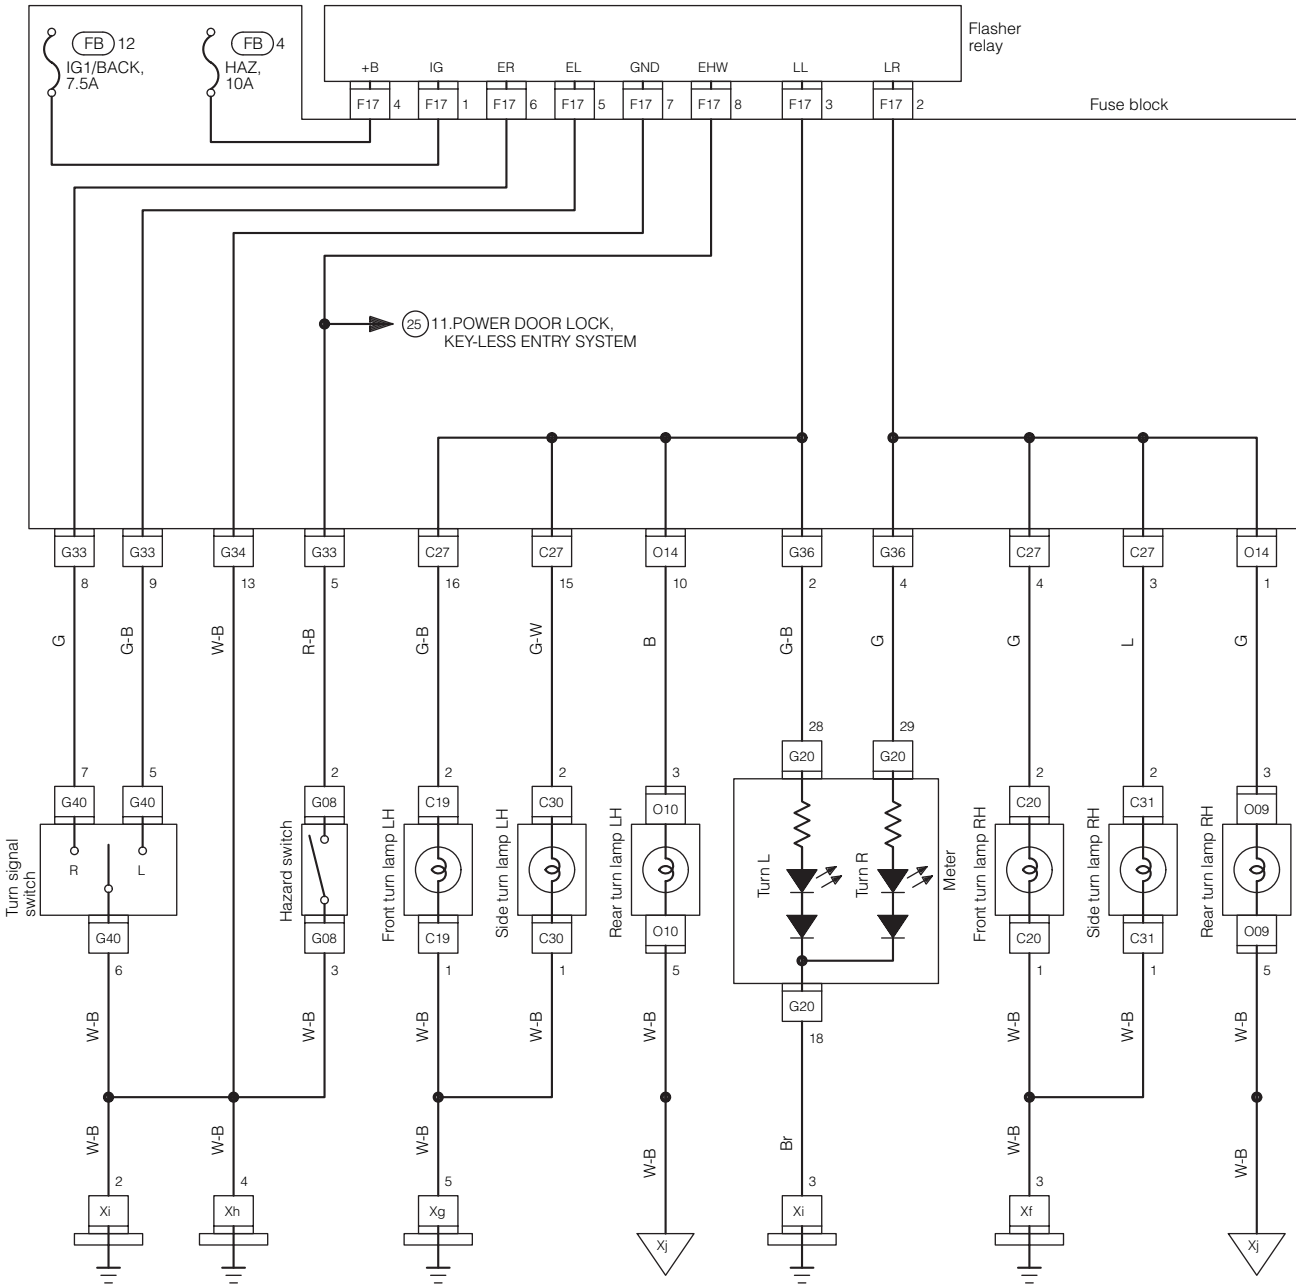


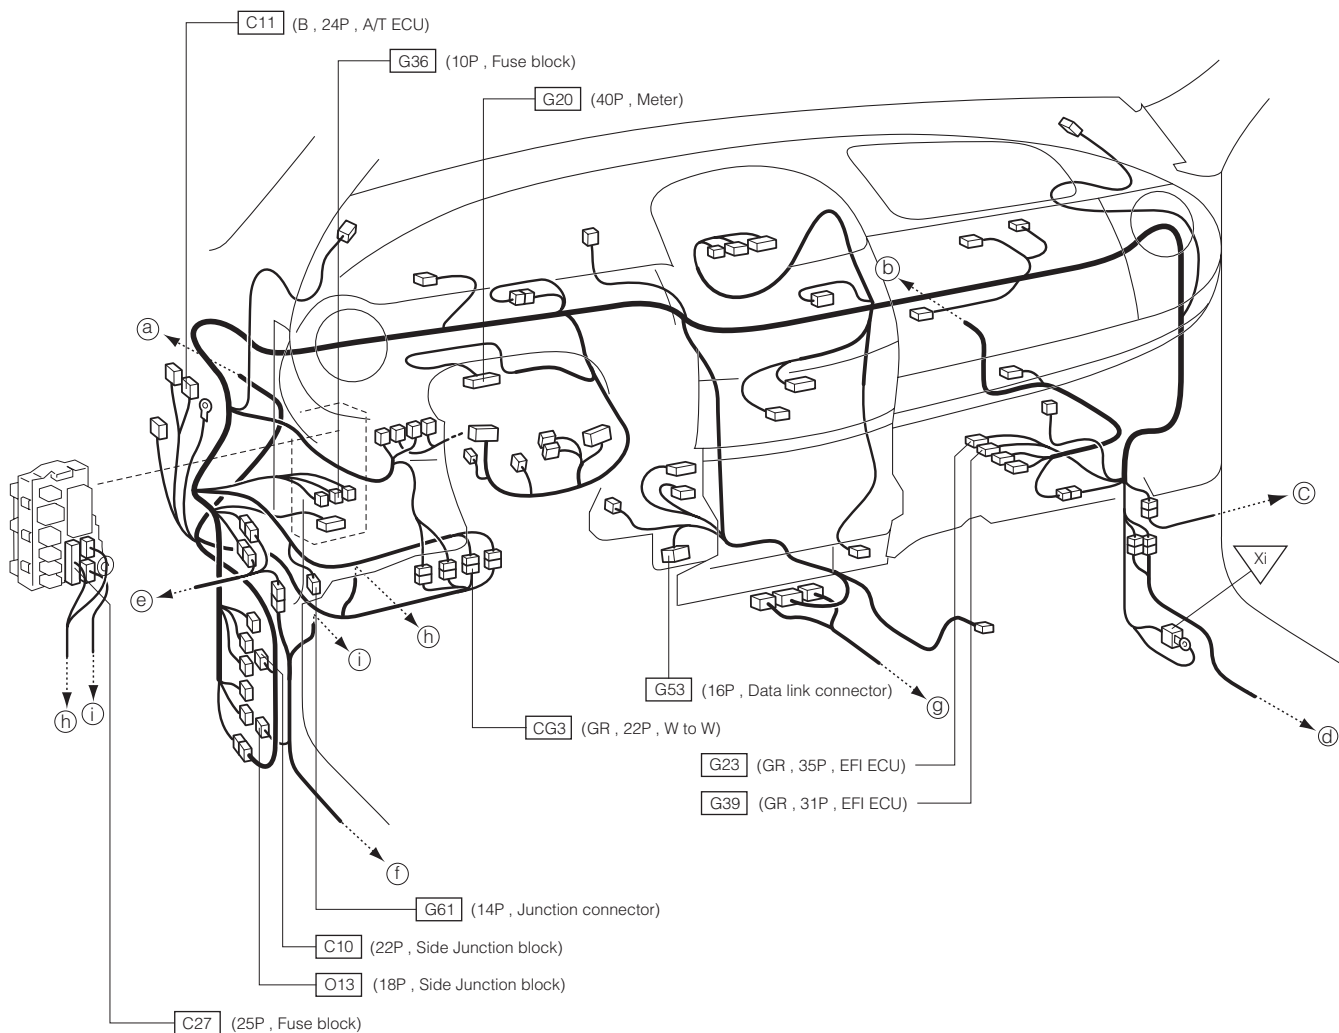


D-217



24-4 LHD VEHICLE(WITHOUT INT SYSTEM)

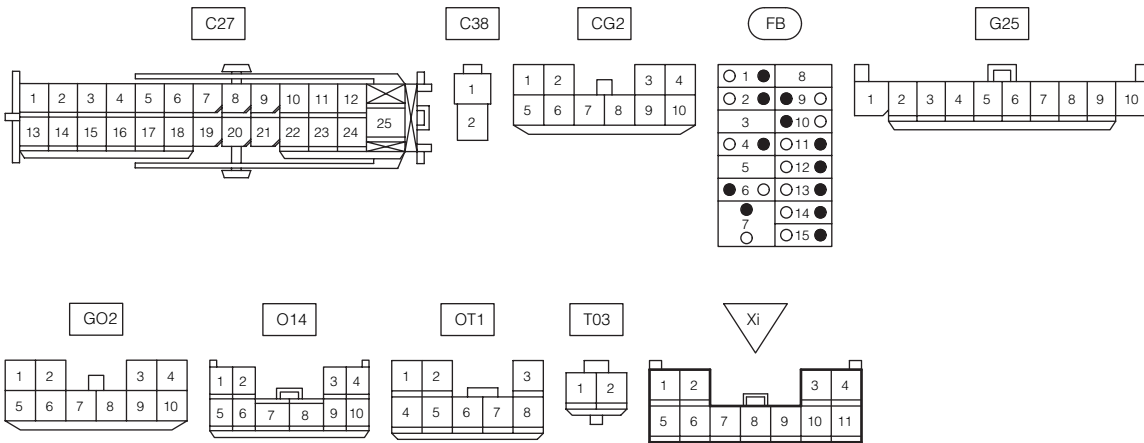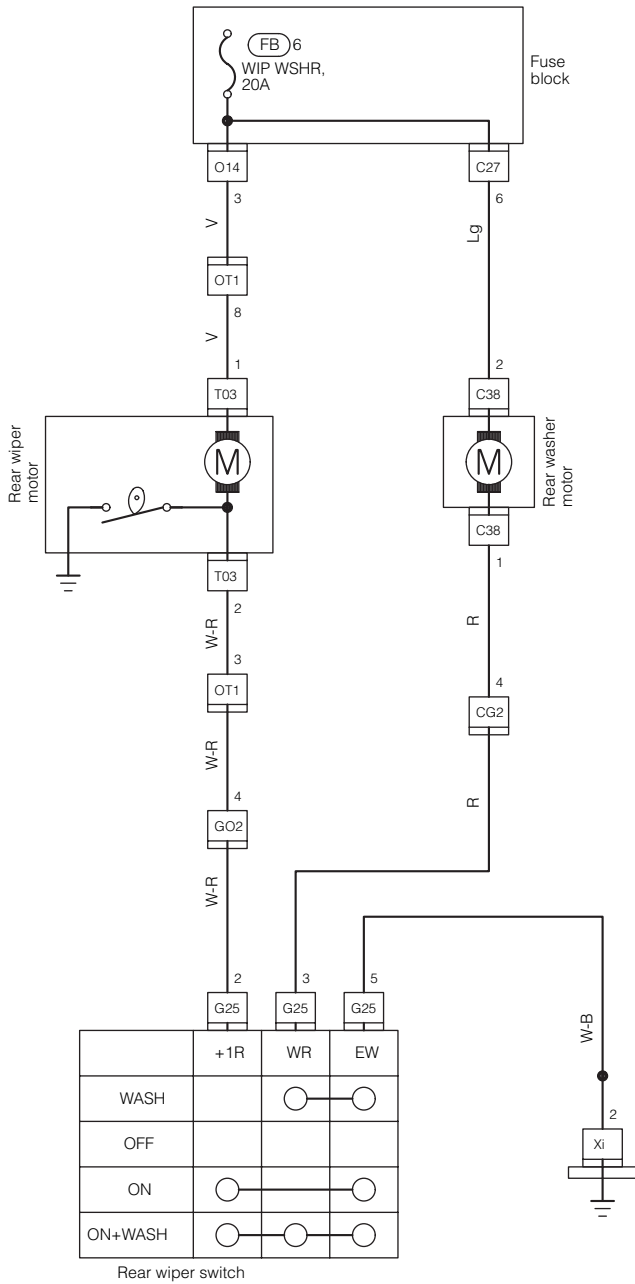

26-2 LHD VEHICLE

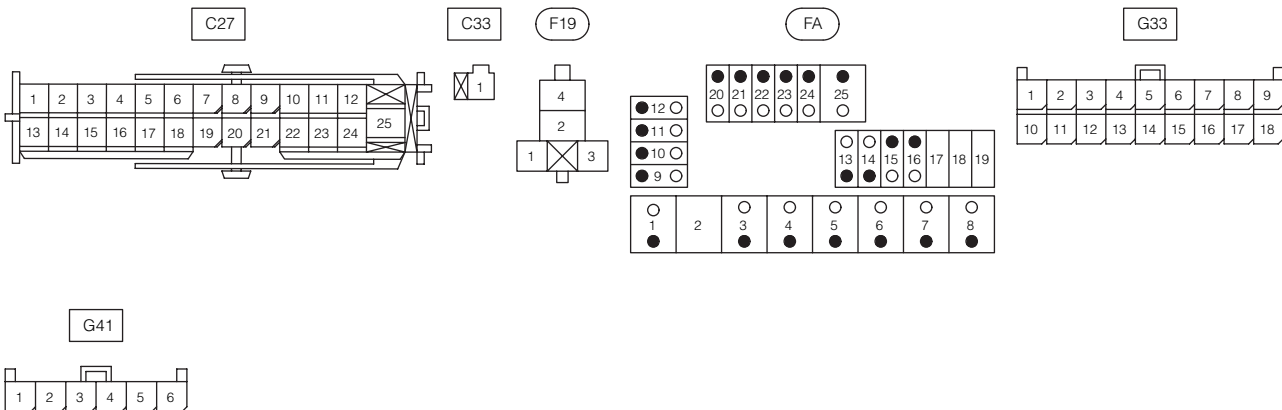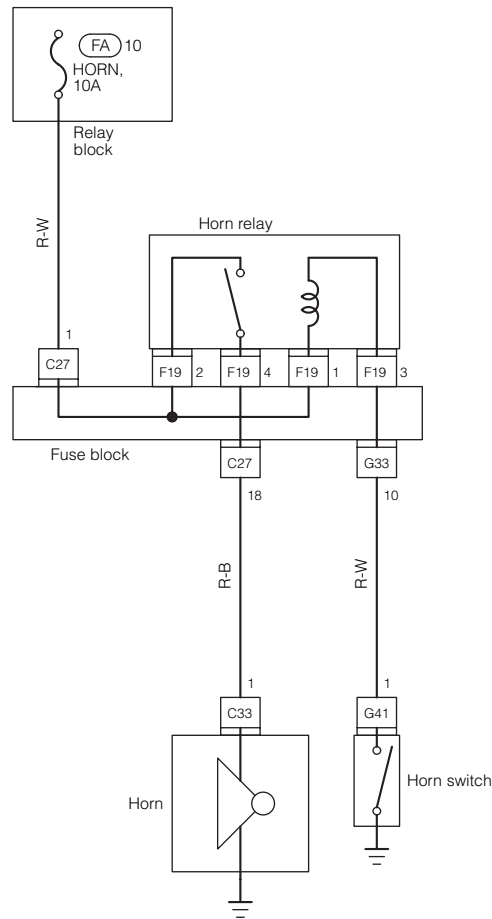

29-2 LHD VEHICLE

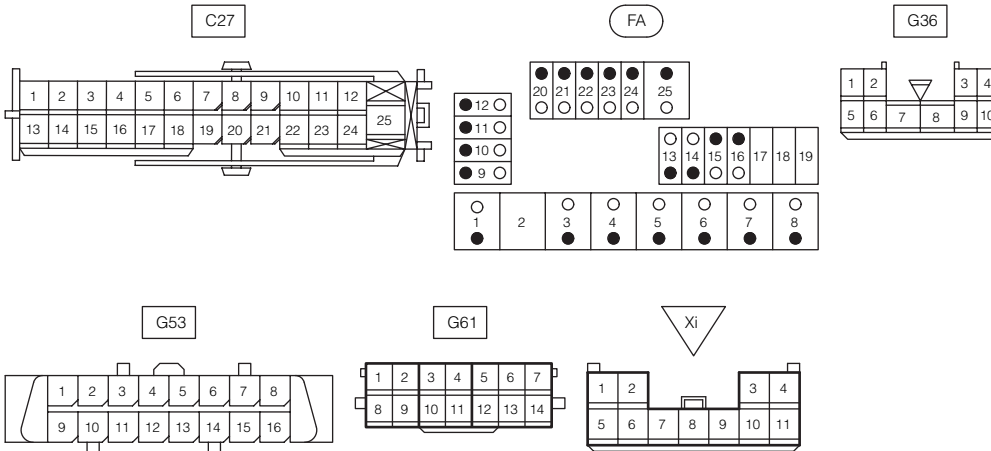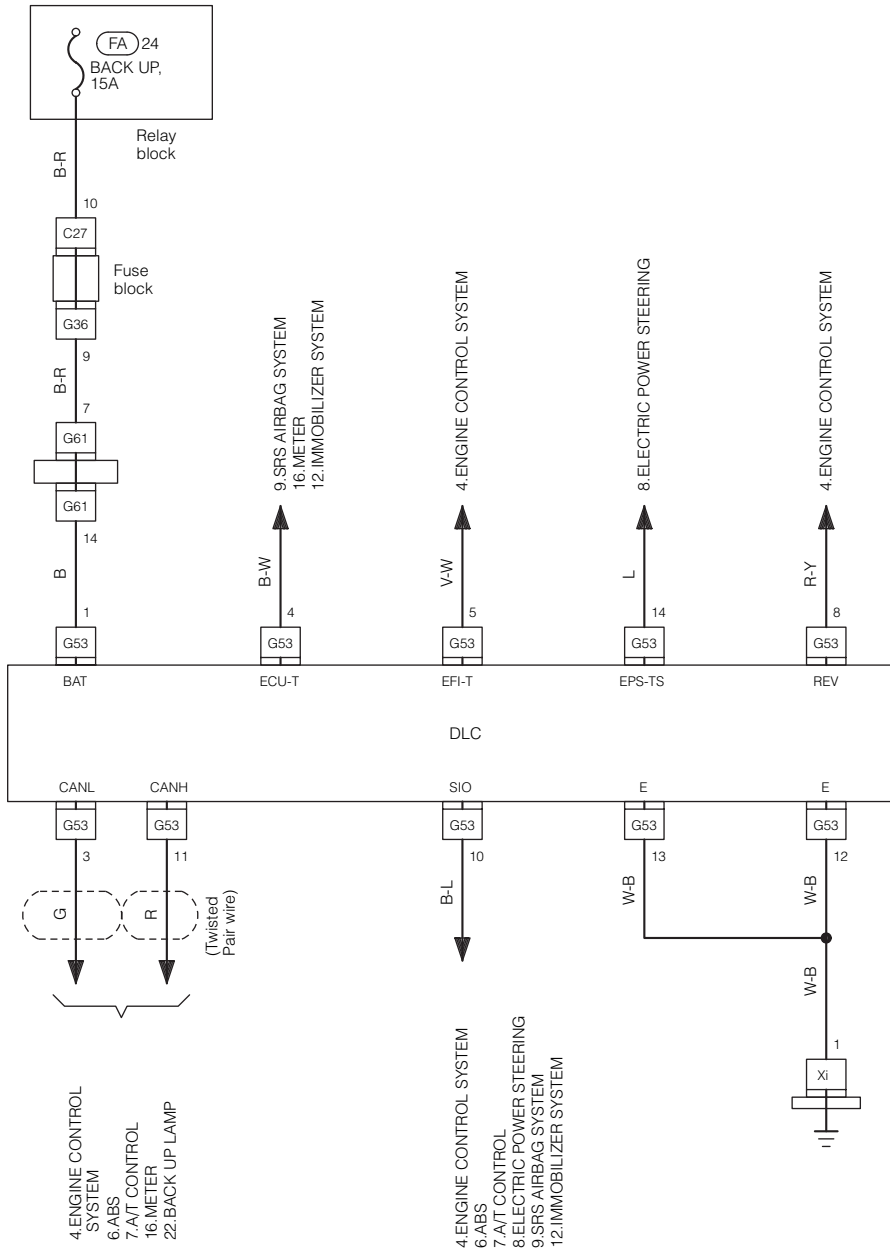

1 INDEX

1-1 RHD VEHICLE

	ITEM	PAGE	ITEM	PAGE		
A	A/C evap. temp. sensor	D-241	Data link connector(Immobilizer)	D-109	D	
	A/C switch	D-241	Data link connector(Meter)	D-141		
	A/T ECU(A/T)	D-69	Defogger	D-125		
	A/T ECU(ABS)	D-62	Defogger switch	D-125		
	A/T ECU(Back up lamp)	D-189	Dome lamp	D-93		
	A/T ECU(Engine)[K3-VE engine]	D-44	Doorlock motor	D-101		
	A/T ECU(Meter)	D-141	Doorlock switch	D-102		
	ABS ECU(A/T)	D-70	Dual pressure switch	D-241		
	ABS ECU(ABS)	D-61	Duty solenoid	D-69		
	ABS ECU(Back up lamp)	D-189	EFI ECU(A/T)	D-70		E
	ABS ECU(Engine)[1KR-FE engine]	D-32	EFI ECU(ABS)	D-62		
	ABS ECU(Engine)[K3-VE engine]	D-44	EFI ECU(Back up lamp)	D-189		
	ABS ECU(Meter)	D-141	EFI ECU(Engine)[1KR-FE engine]	D-29		
	Airbag ECU	D-85	EFI ECU(Engine)[K3-VE engine]	D-41		
	Airbag squib	D-85	EFI ECU(Meter)	D-141		
	Alternator	D-21	EFI main relay(1KR-FE engine)	D-30		
ANT	D-221	EFI main relay(K3-VE engine)	D-42			
Antenna coil	D-109	EPS ECU	D-77			
B	Back-up lamp	D-189	Flasher relay	D-165	F	
	Back-up lamp switch	D-189	Floor console illumination	D-181		
	Brake vacuum pressure switch	D-44	Fog lamp relay	D-158		
C	Cam position sensor(1KR-FE engine)	D-30	Fog lamp switch	D-157		
	Cam position sensor(K3-VE engine)	D-42	Front fog lamp	D-158		
	Cigarette lighter or Power outlet	D-237	Front oxygen sensor(1KR-FE engine)	D-30		
	Clearance lamp	D-181	Front oxygen sensor(K3-VE engine)	D-42		
	Courtesy switch	D-102	Front passenger seat belt warning	D-142		
	Crank angle sensor(1KR-FE engine)	D-30	Front satellite sensor	D-85		
	Crank angle sensor(K3-VE engine)	D-42	Front speaker	D-221		
	Curtain shield airbag	D-86	Front speed sensor	D-61		
D	Data link connector(A/T)	D-69	Front turn lamp	D-165		
	Data link connector(ABS)	D-61	Front washer motor	D-197		
	Data link connector(Airbag)	D-85	Front wiper motor	D-197		
	Data link connector(Back up lamp)	D-189	Front wiper switch	D-197		
	Data link connector(DLC)	D-249	Fuel pump motor(1KR-FE engine)	D-30		
	Data link connector(Engine)[1KR-FE engine]	D-31	Fuel pump motor(K3-VE engine)	D-42		
	Data link connector(Engine)[K3-VE engine]	D-43	Fuel pump relay(1KR-FE engine)	D-30		
	Data link connector(EPS)	D-77	Fuel pump relay(K3-VE engine)	D-42		