


WIRING

TABLE OF CONTENTS

	page		page
WIRING DIAGRAM INFORMATION	8W-01-1	REAR WINDOW DEFOGGER	8W-48-1
COMPONENT INDEX	8W-02-1	OVERHEAD CONSOLE	8W-49-1
POWER DISTRIBUTION	8W-10-1	FRONT LIGHTING	8W-50-1
JUNCTION BLOCK	8W-12-1	REAR LIGHTING	8W-51-1
INTEGRATED POWER MODULE	8W-13-1	TURN SIGNALS	8W-52-1
GROUND DISTRIBUTION	8W-15-1	WIPERS	8W-53-1
BUS COMMUNICATIONS	8W-18-1	TRAILER TOW	8W-54-1
CHARGING SYSTEM	8W-20-1	NAVIGATION/TELECOMMUNICATIONS	8W-55-1
STARTING SYSTEM	8W-21-1	CONVENIENCE SYSTEMS	8W-56-1
FUEL/IGNITION SYSTEM	8W-30-1	POWER WINDOWS	8W-60-1
TRANSMISSION CONTROL SYSTEM	8W-31-1	POWER DOOR LOCKS	8W-61-1
VEHICLE SPEED CONTROL	8W-33-1	POWER MIRRORS	8W-62-1
ANTILOCK BRAKES	8W-35-1	POWER SEAT	8W-63-1
VEHICLE THEFT SECURITY SYSTEM	8W-39-1	POWER SUNROOF	8W-64-1
INSTRUMENT CLUSTER	8W-40-1	SPLICE INFORMATION	8W-70-1
HORN/POWER OUTLET	8W-41-1	CONNECTOR PIN-OUTS	8W-80-1
AIR CONDITIONING/HEATER	8W-42-1	CONNECTOR/GROUND/SPLICE	
AIRBAG SYSTEM	8W-43-1	LOCATION	8W-91-1
INTERIOR LIGHTING	8W-44-1	POWER DISTRIBUTION	8W-97-1
AUDIO/VIDEO SYSTEM	8W-47-1		

DIAGRAMS ARE ARRANGED WITH THE POWER B+ SIDE OF THE CIRCUIT NEAR THE TOP OF THE PAGE, AND THE GROUND SIDE OF THE CIRCUIT NEAR THE BOTTOM OF THE PAGE.

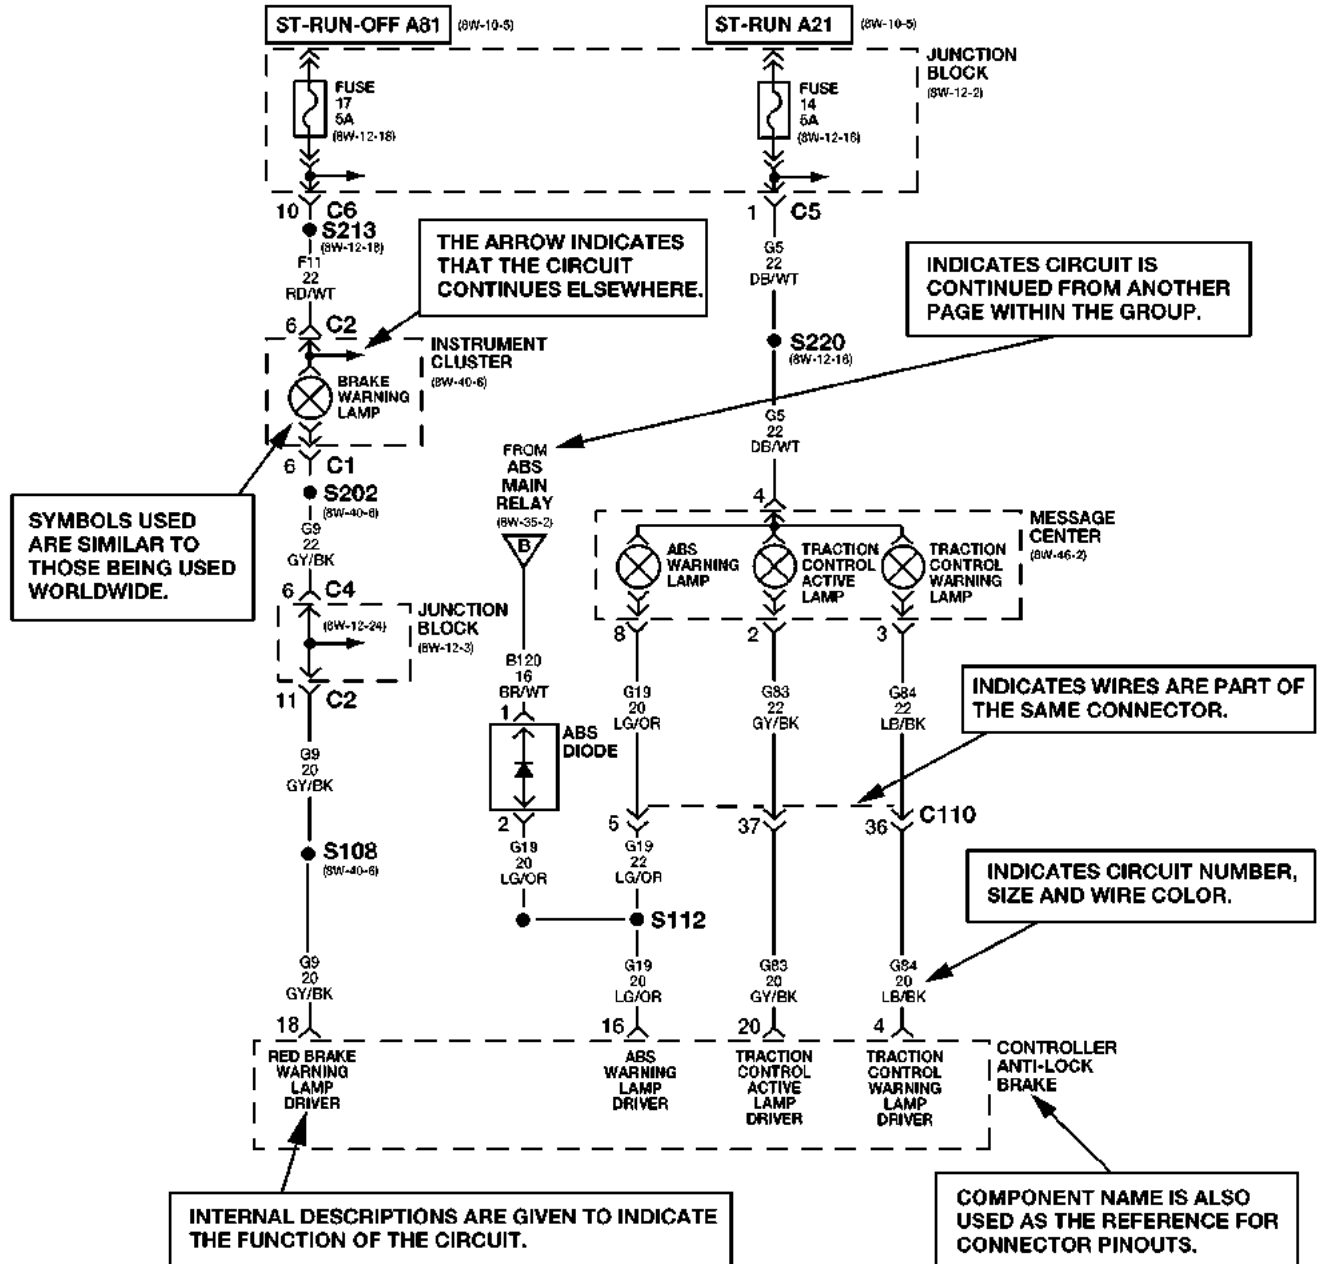

The System shown here is an **EXAMPLE ONLY**. It does not represent the actual circuit shown in the **WIRING DIAGRAM SECTION**.

RELAY-A/C
CLUTCH

CAVITY	CIRCUIT	FUNCTION
30	A917 18RD	FUSED B(+)
85	C13 20LB/OR	A/C CLUTCH RELAY CONTROL
86	A15 16RD/TN ○○	FUSED B(+)
86	F942 20PK/LG ○	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	C3 18DB/YL	A/C CLUTCH RELAY OUTPUT
87A	-	-

RELAY-AUTO
SHUT
DOWN

CAVITY	CIRCUIT	FUNCTION
30	A924 10RD	FUSED B(+)
85	K342 20BR/WT	ASD RELAY OUTPUT
86	A924 10RD	FUSED B(+)
87	A142 10RD/OR	ASD RELAY OUTPUT
87A	-	-

RELAY-BLOWER
MOTOR-

CAVITY	CIRCUIT	FUNCTION
30	A502 12RD/LG	FUSED B(+)
85	Z387 20BK	GROUND
86	F921 20PK/YL	FUSED RUN RELAY OUTPUT
87	C7 12DB	FUSED RUN RELAY OUTPUT
87A	-	-


RELAY-FUEL
PUMP


CAVITY	CIRCUIT	FUNCTION
30	A916 16RD	FUSED B(+)
85	K31 20BR	FUEL PUMP RELAY CONTROL
85	A15 16RD/TN ○○	FUSED B(+)
86	F942 20PK/LG ○	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	A109 16OR/RD	FUSED B(+)
87A	-	-

RELAY-PTC NO. 1
(DIESEL)


CAVITY	CIRCUIT	FUNCTION
30	A923 10RD	FUSED B(+)
85	K360 20GY/BR	PTC NO. 1 RELAY CONTROL
86	A15 16RD/TN	FUSED B(+)
87	N113 10DB/OR	PTC NO. 1 RELAY OUTPUT
87A	-	-

 
○ GAS
○○ DIESEL

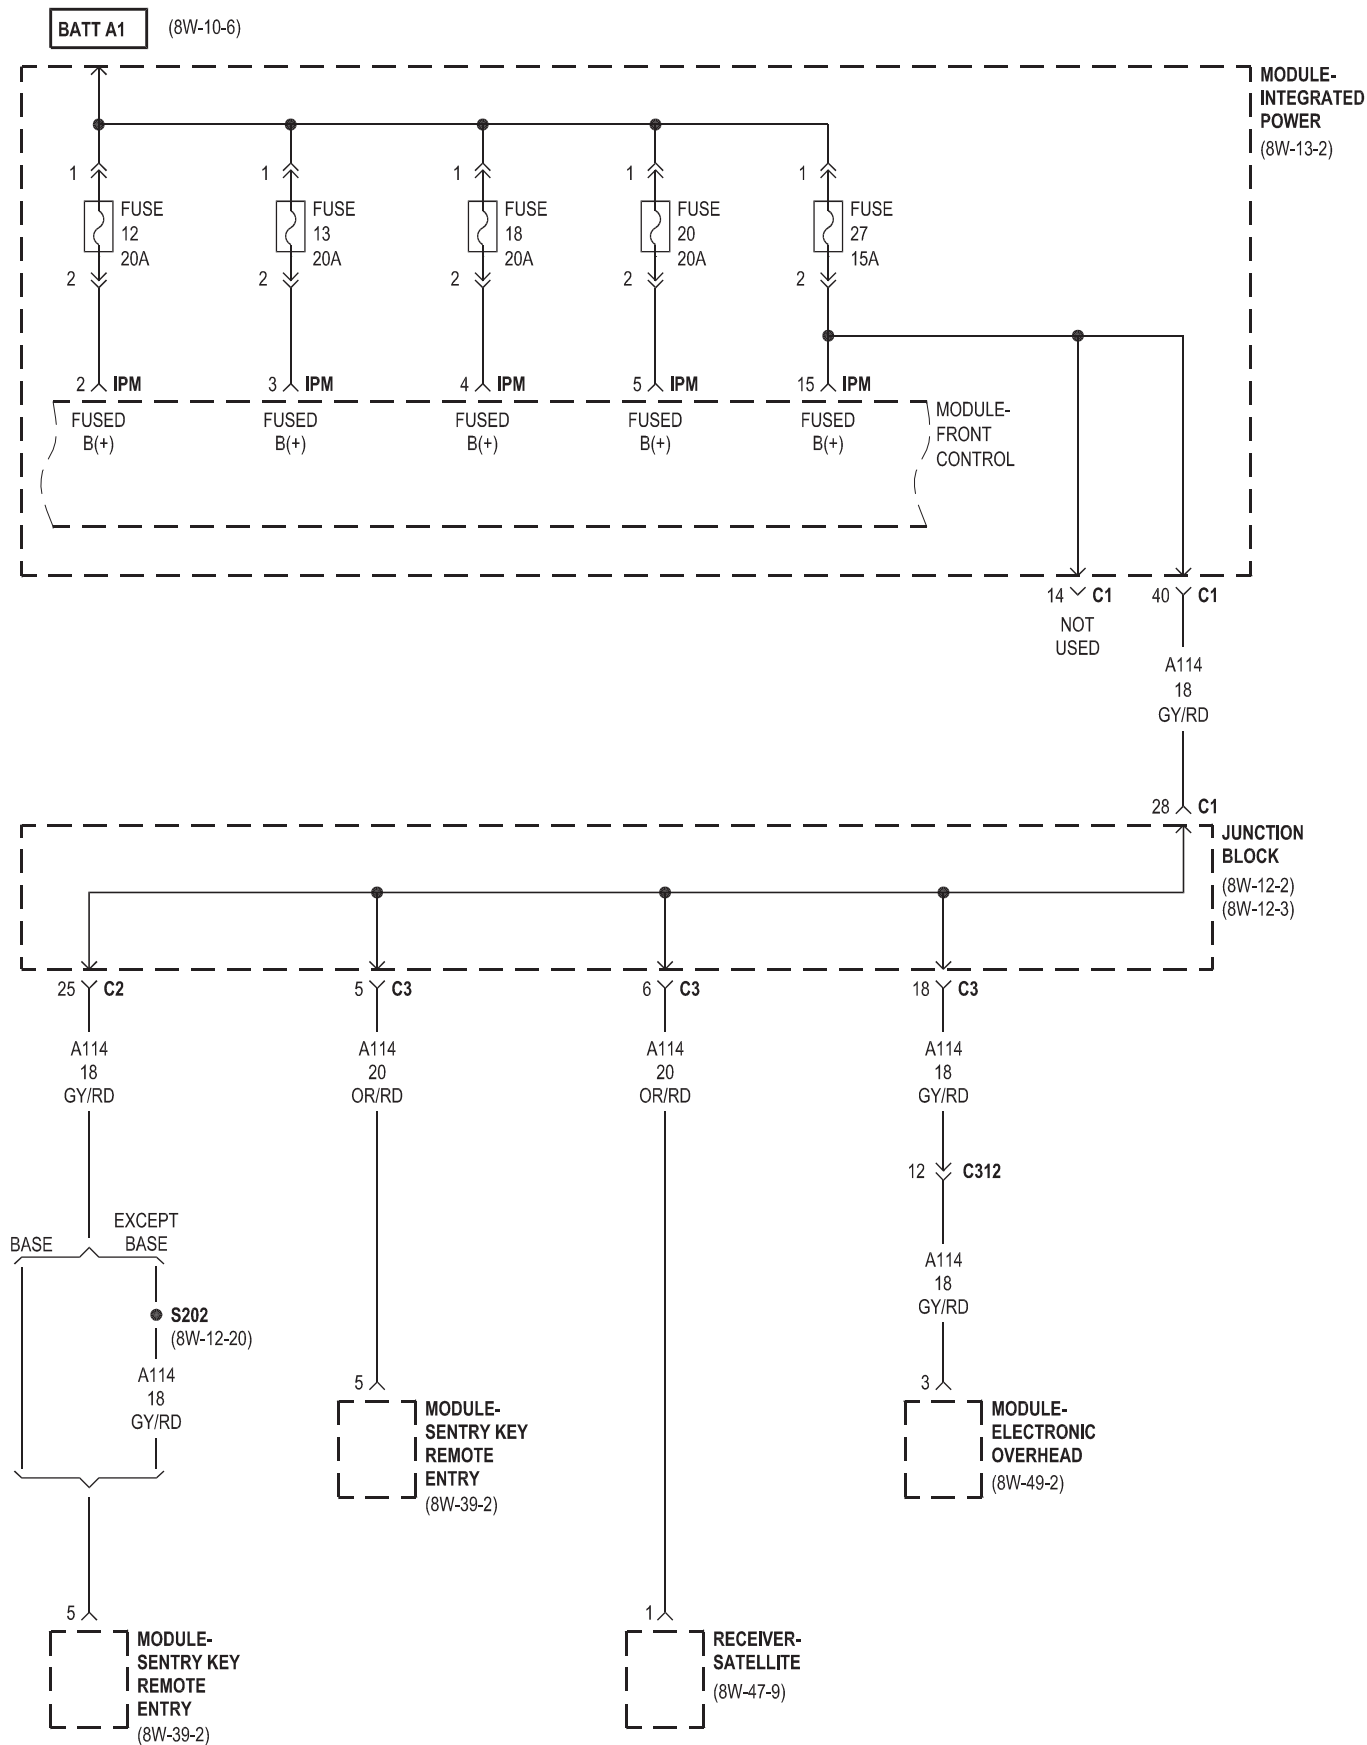






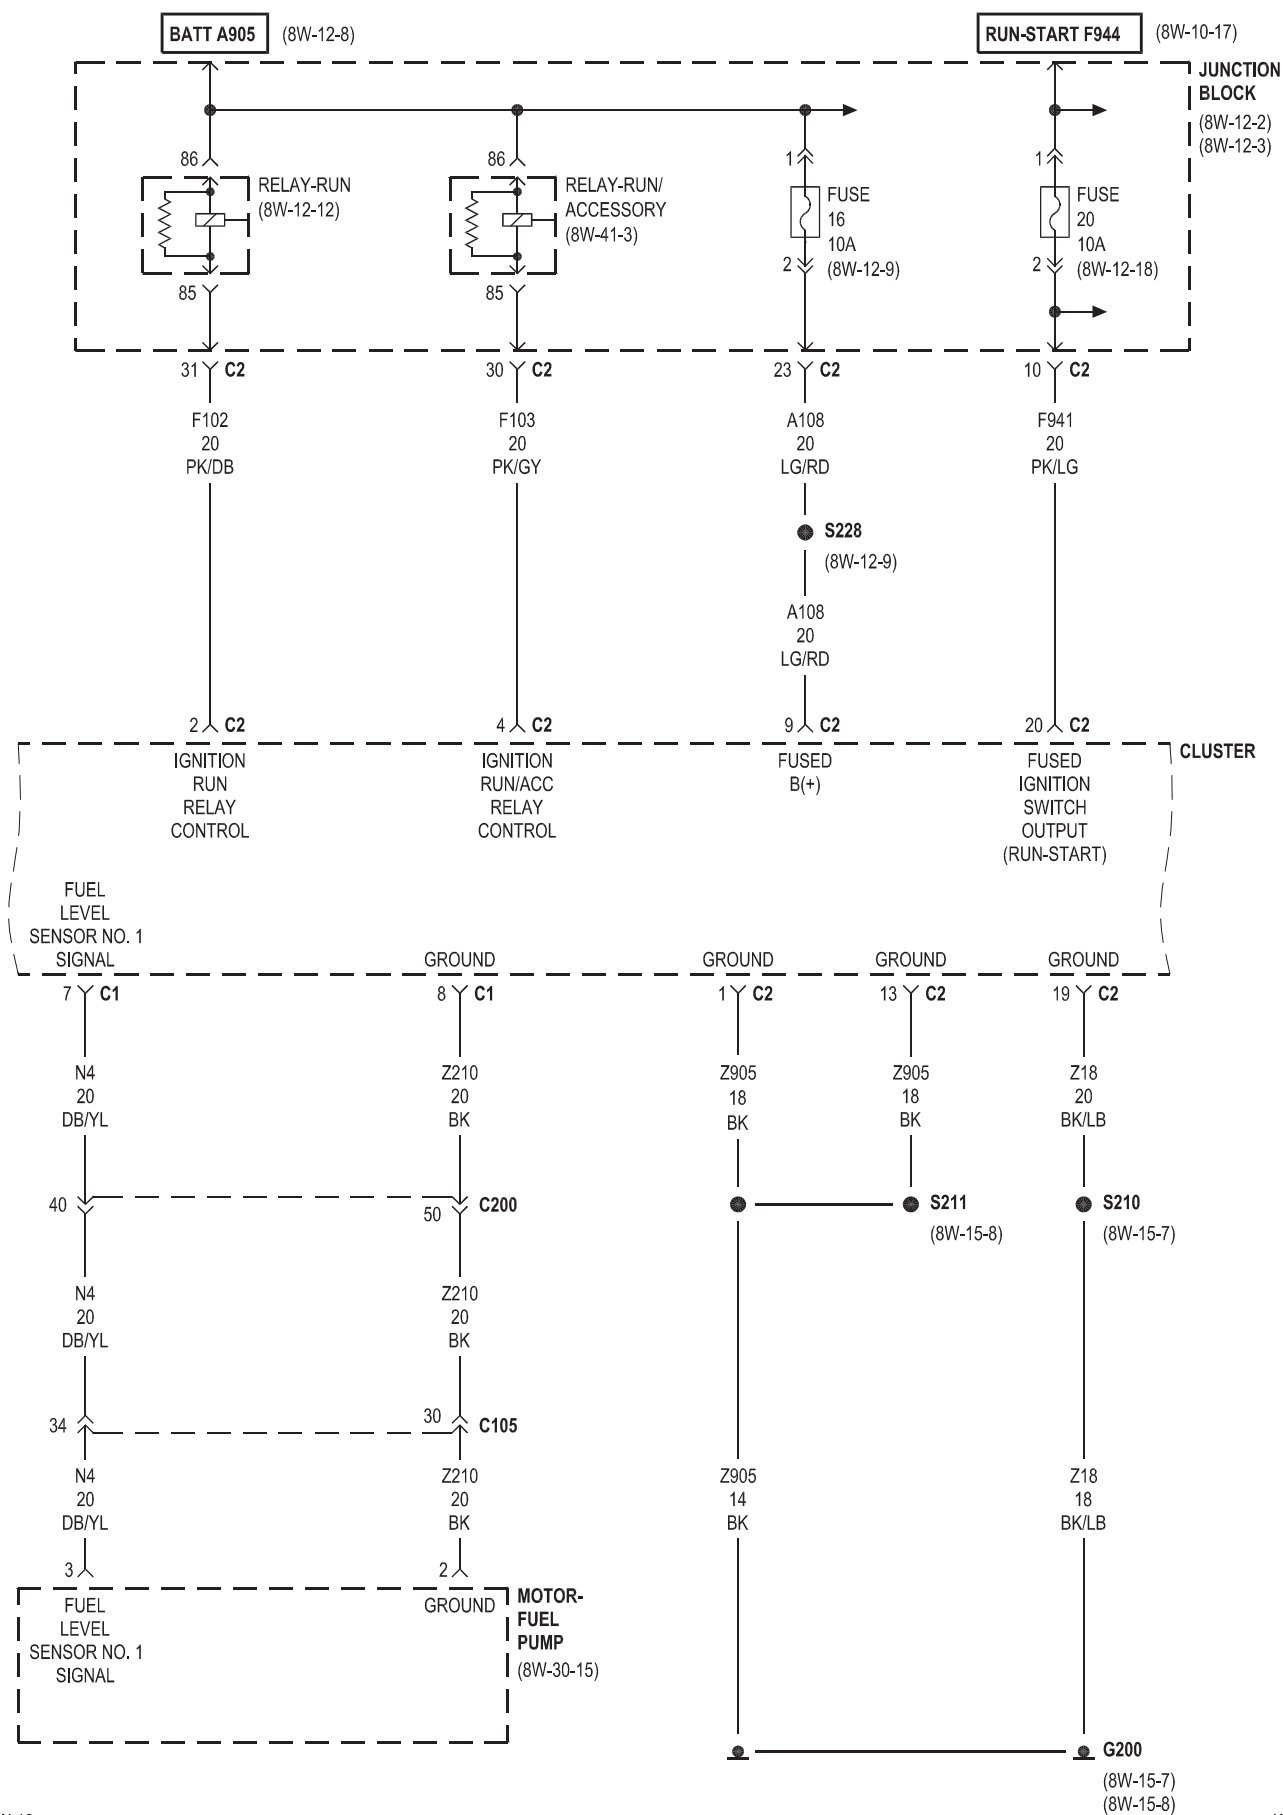

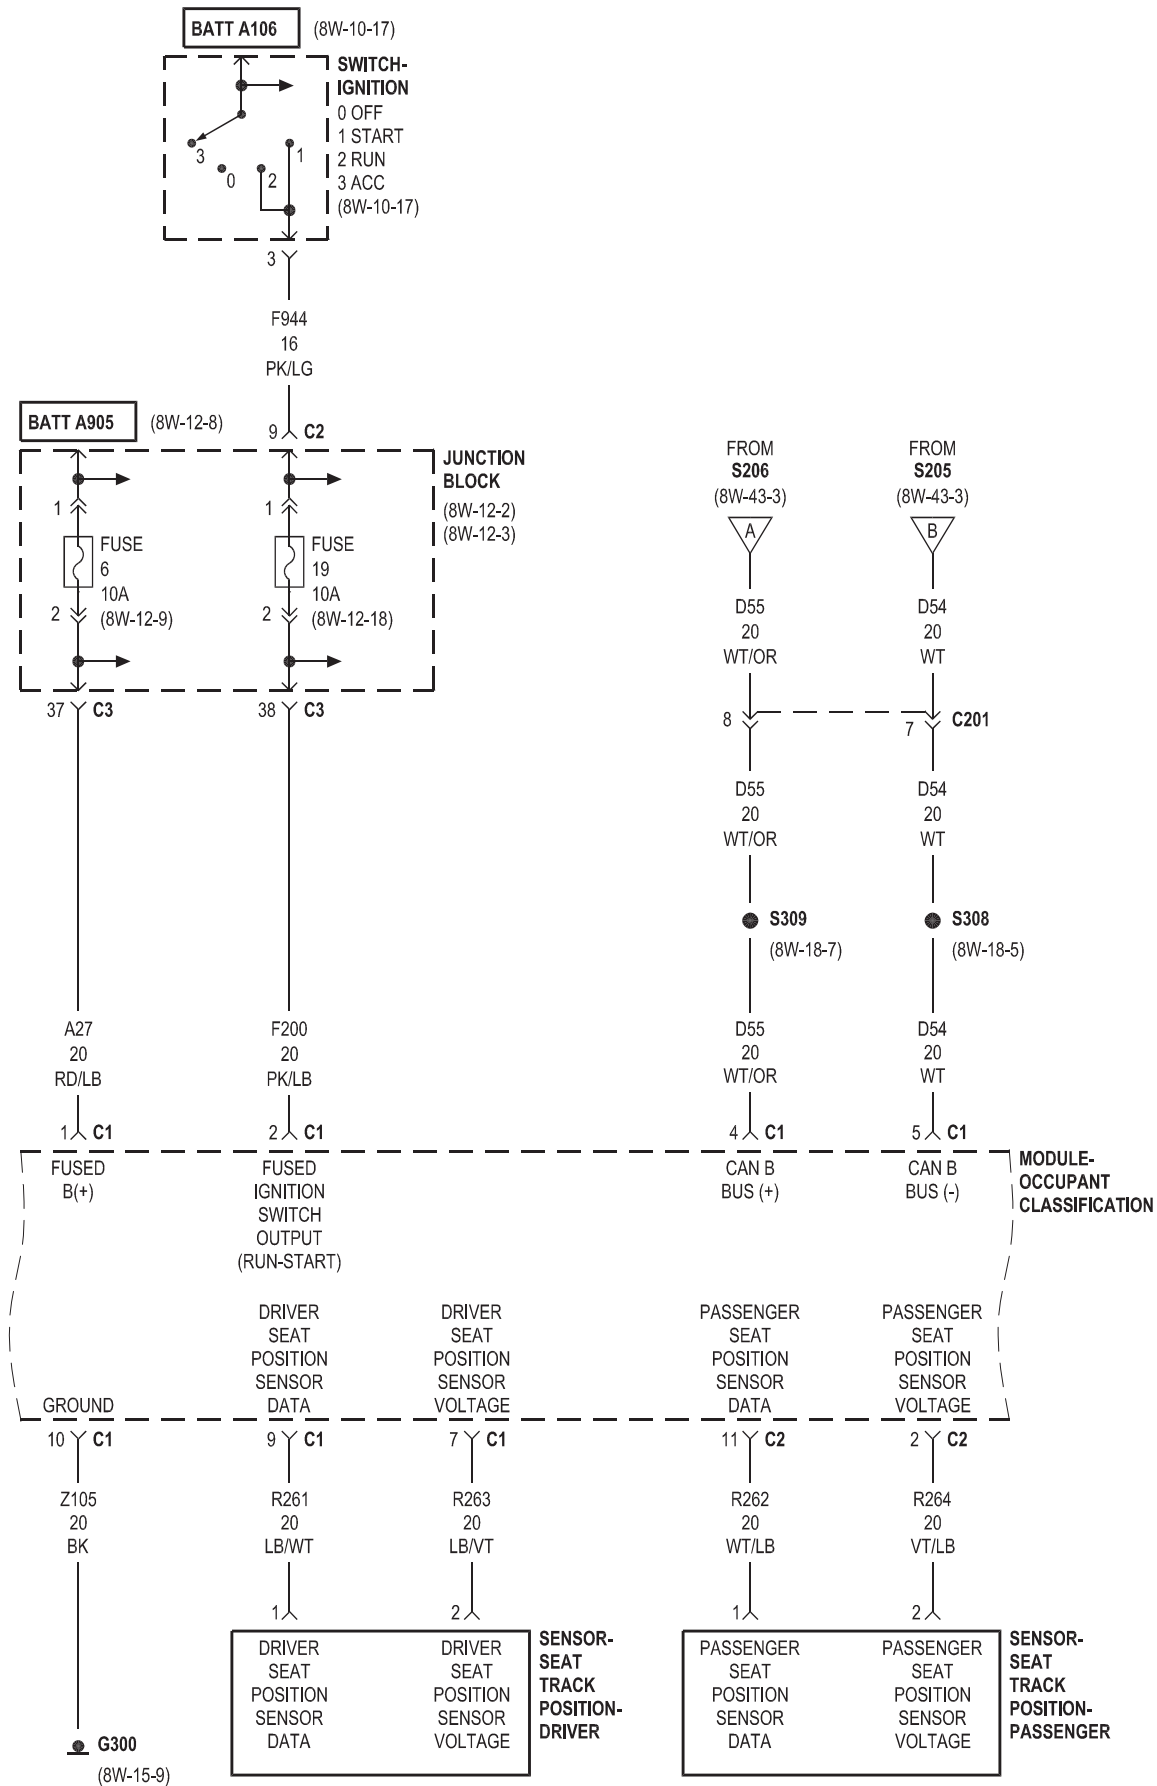


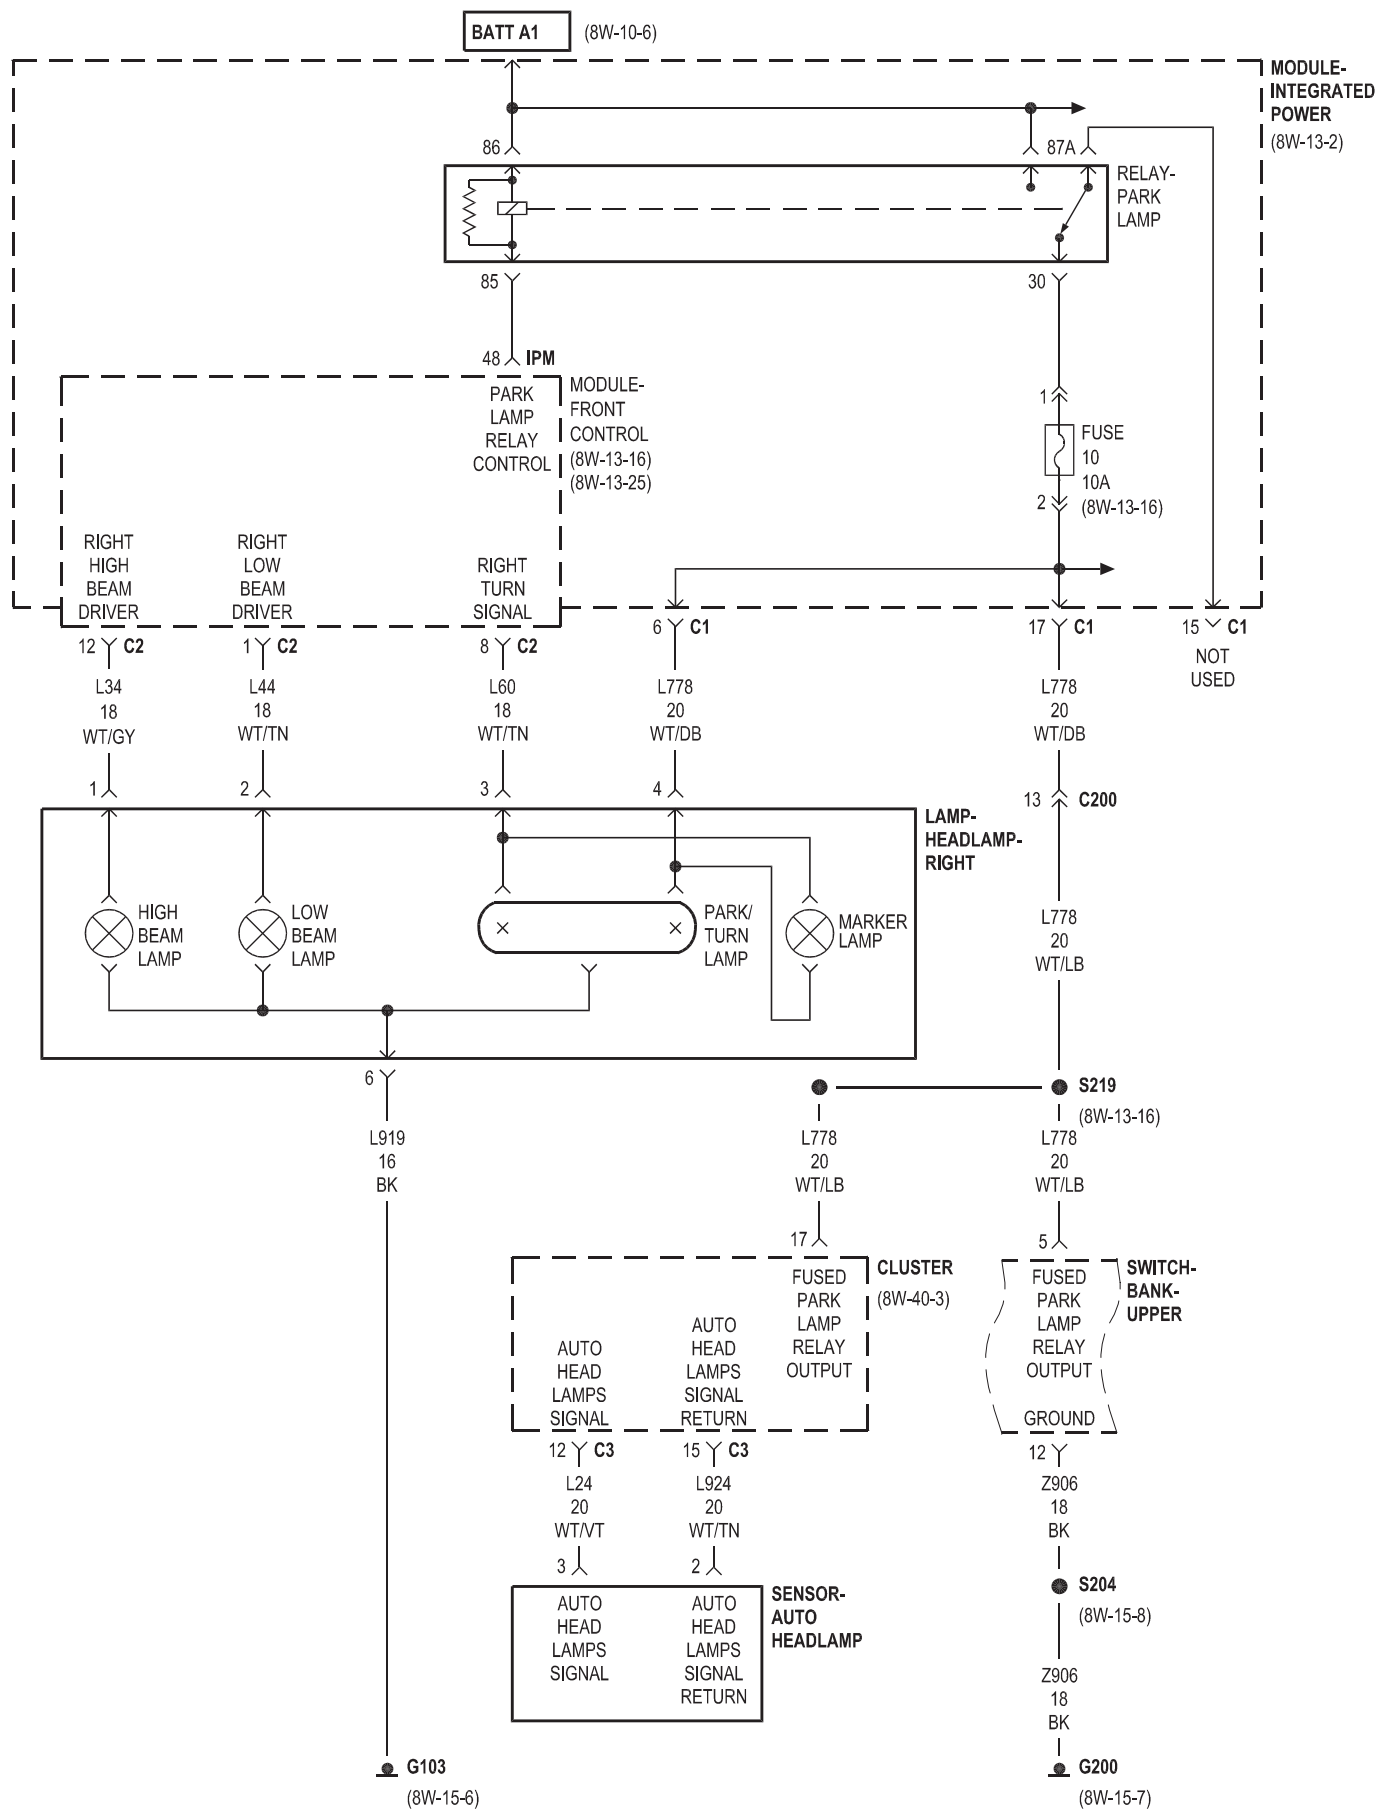



8W-56 CONVENIENCE SYSTEMS

Component	Page
Cluster	8W-56-2
Fuse 10	8W-56-2, 6
Fuse 14	8W-56-6
G200	8W-56-6
G302	8W-56-2
Junction Block	8W-56-2, 6
Module-Front Control	8W-56-6
Module-Integrated Power	8W-56-6
Module-Memory Seat	8W-56-7
Module-Park Assist	8W-56-2, 3, 4, 5

Component	Page
Module-Park Display-Rear	8W-56-5
Motor-Adjustable Pedals	8W-56-6, 7
Relay-Adjustable Pedals	8W-56-6
Relay-Run	8W-56-2, 6
Sensor-Park Assist No. 7	8W-56-3
Sensor-Park Assist No. 8	8W-56-3
Sensor-Park Assist No. 9	8W-56-3, 4
Sensor-Park Assist No. 10	8W-56-3, 4
Switch-Bank-Lower	8W-56-2, 6
Switch-Bank-Upper	8W-56-6

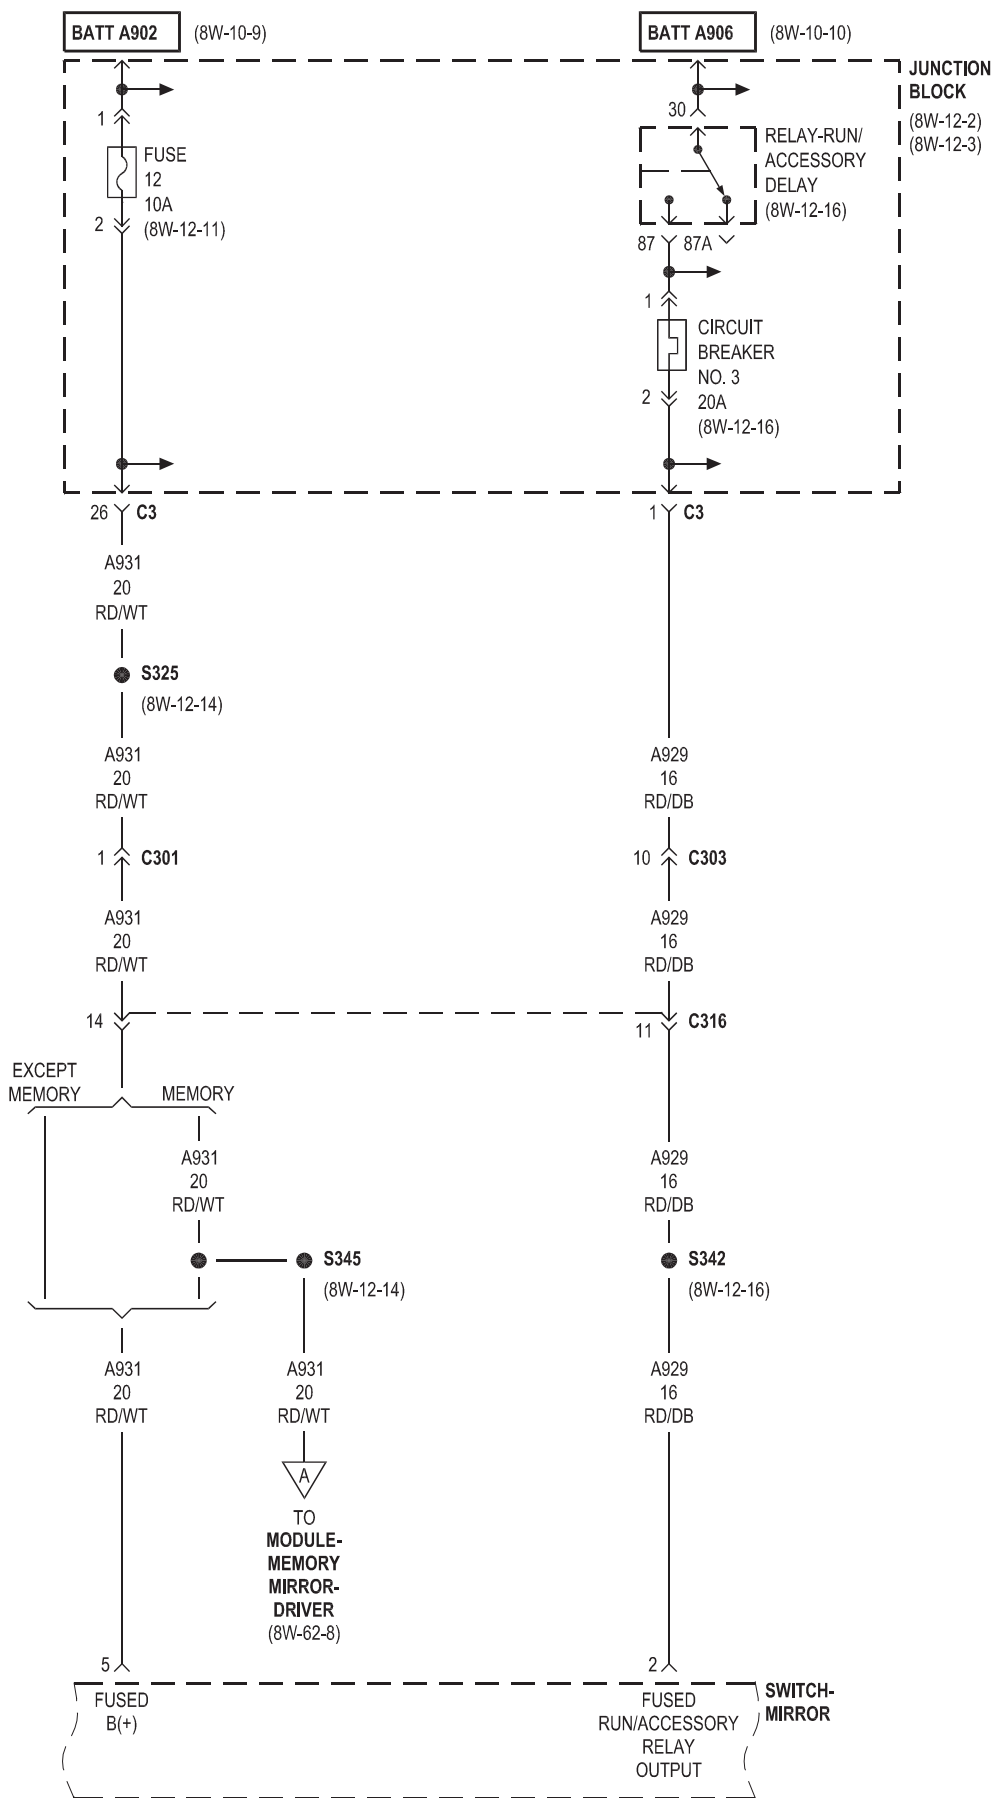


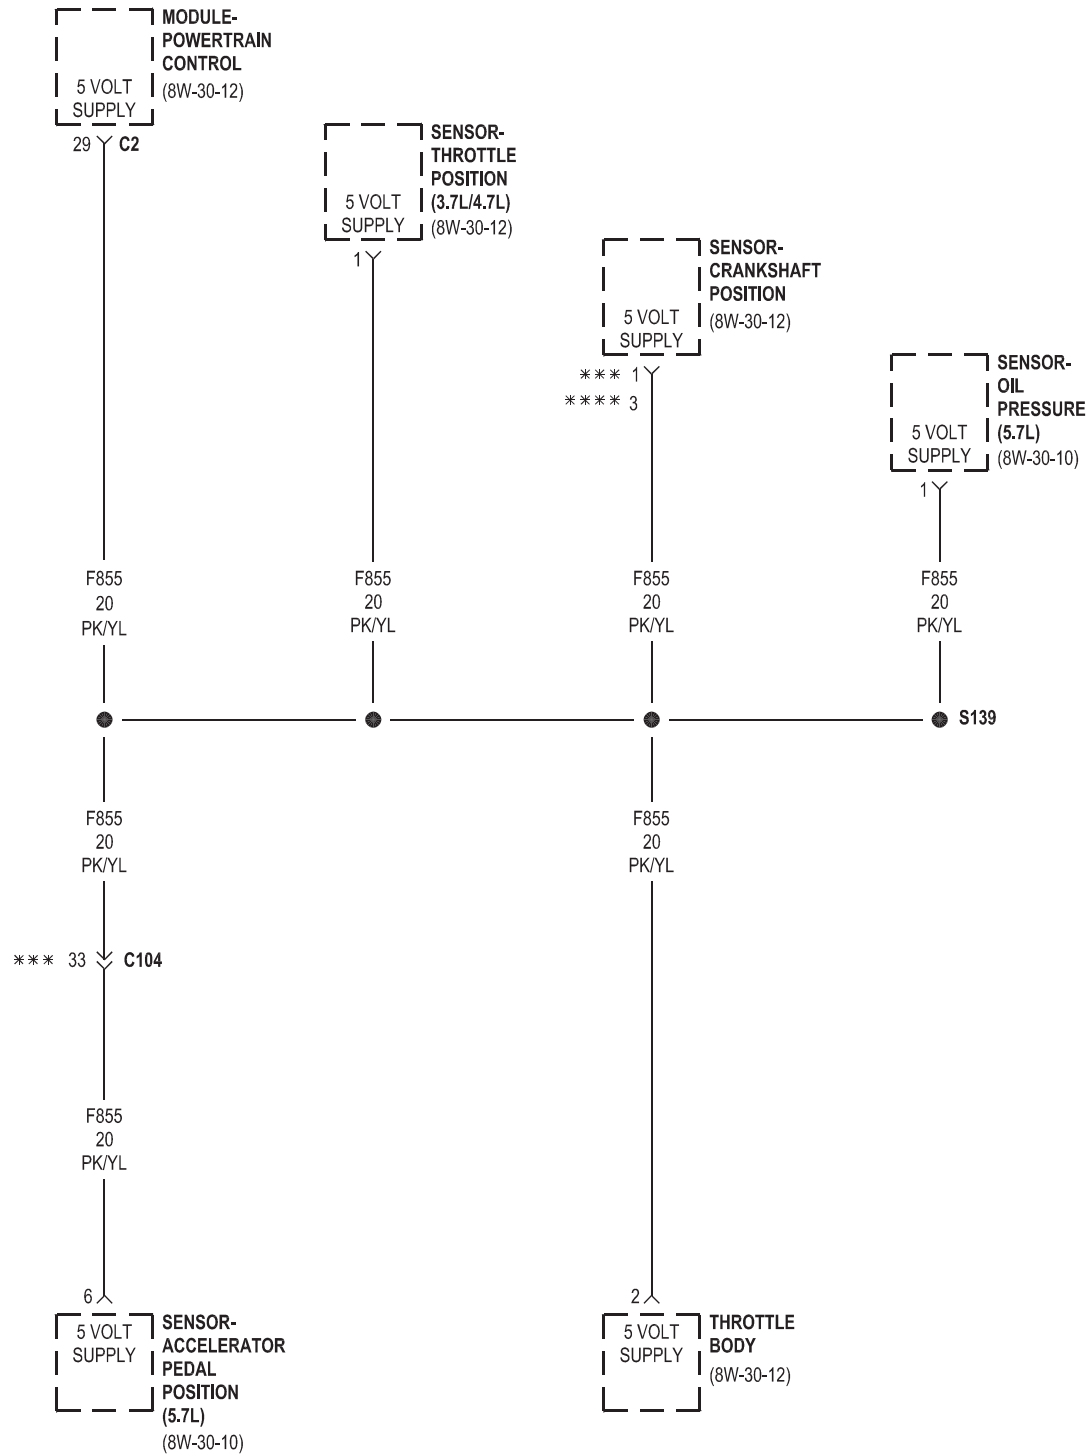

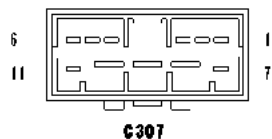


C307 - (LEFT REAR DOOR SIDE)

CAV	CIRCUIT
1	Q611 16OR/GY
2	Q411 16OR/WT
3	G77 20VT/GY
4	Z911 20BK
5	X205 18GY/LG
6	X295 18GY/DG
7	-
8	Q15 16OR/LB
9	P778 16LG/LB
10	P792 16LG/TN
11	-

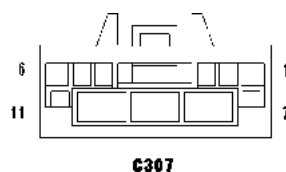


C307 - (BODY SIDE) 11 WAY

CAV	CIRCUIT
1	Q611 16OR/GY
2	Q411 16OR/WT
3	G77 20VT/GY
4	Z911 20BK
5	X51 18DG/DB (EXCEPT PREMIUM AUDIO)
5	X205 18GY/LG (PREMIUM AUDIO)
6	X57 18DG/VT (EXCEPT PREMIUM AUDIO)
6	X295 18GY/DG (PREMIUM AUDIO)
7	-
8	Q15 16OR/LB
9	P778 16LG/LB
10	P792 16LG/TN
11	-

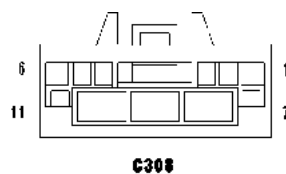


C308 - (BODY SIDE)


CAV	CIRCUIT
1	Q612 16OR/DB
3	G76 20VT/YL
4	Z908 20BK
5	X52 18GY/DB (EXCEPT PREMIUM AUDIO)
5	X52 18GY/DB (PREMIUM AUDIO)
6	X58 18GY/TN (EXCEPT PREMIUM AUDIO)
6	X296 18LG/GY (PREMIUM AUDIO)
7	-
8	Q15 16OR/LB
9	P778 16LG/LB
10	P792 16LG/TN
11	-

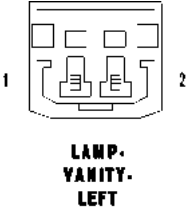


LAMP-VANITY-LEFT - 2 WAY		
CAV	CIRCUIT	FUNCTION
1	A931 20RD	FUSED B(+)
2	M28 20YL/TN	GLOVE BOX LAMP DRIVER

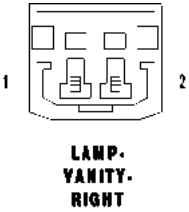


LAMP-VANITY-RIGHT - 2 WAY		
CAV	CIRCUIT	FUNCTION
1	A931 20RD	FUSED B(+)
2	M28 20YL/TN	GLOVE BOX LAMP DRIVER

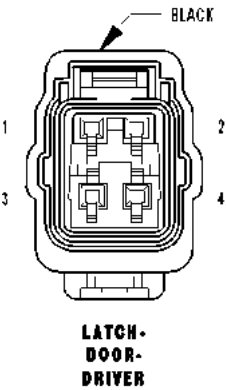


LATCH-DOOR-DRIVER - BLACK 4 WAY		
CAV	CIRCUIT	FUNCTION
1	G75 20VT (LHD)	LEFT FRONT DOOR AJAR SWITCH SENSE
1	G74 20VT/WT (RHD)	RIGHT FRONT DOOR AJAR SWITCH SENSE
2	Z911 16BK	GROUND
3	P701 16LG/DG	DRIVER DOOR UNLOCK RELAY OUTPUT
4	P778 16LG/LB	DOOR LOCK RELAY OUTPUT

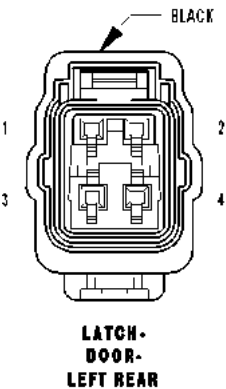


LATCH-DOOR-LEFT REAR - BLACK 4 WAY		
CAV	CIRCUIT	FUNCTION
1	G77 20VT/GY	LEFT REAR DOOR AJAR SWITCH SENSE
2	Z911 20BK	GROUND
3	P792 16LG/TN	DOOR UNLOCK RELAY OUTPUT
4	P778 16LG/LB	DOOR LOCK RELAY OUTPUT

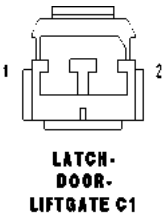


LATCH-DOOR-LIFTGATE C1 - 2 WAY		
CAV	CIRCUIT	FUNCTION
1	Z800 20BK	GROUND
2	G78 20VT/OR	LIFTGATE AJAR SWITCH SENSE

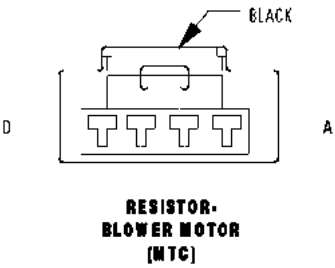


RESISTOR-BLOWER MOTOR (MTC) - BLACK 4 WAY		
CAV	CIRCUIT	FUNCTION
A	C73 12GY/LG	BLOWER M2 SPEED
B	C72 12OR/LG	BLOWER M1 SPEED
C	C71 20RD/LG	BLOWER LOW SPEED
D	C74 12LB	BLOWER HIGH SPEED

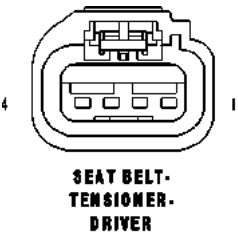

SEAT BELT-TENSIONER-DRIVER - 4 WAY		
CAV	CIRCUIT	FUNCTION
1	R55 20LG/DG	DRIVER SEAT BELT TENSIONER LINE 1
2	R53 20LG/YL	DRIVER SEAT BELT TENSIONER LINE 2
3	Z911 20BK	GROUND
4	G10 20VT/LG	SEAT BELT SWITCH SENSE

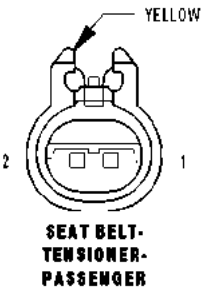

SEAT BELT-TENSIONER-PASSENGER - YELLOW 2 WAY		
CAV	CIRCUIT	FUNCTION
1	R54 20LB/YL	PASSENGER SEAT BELT TENSIONER LINE 2
2	R56 20LB/DG	PASSENGER SEAT BELT TENSIONER LINE 1

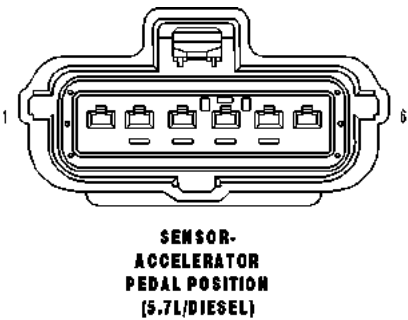

SENSOR-ACCELERATOR PEDAL POSITION (5.7L/DIESEL) - 6 WAY		
CAV	CIRCUIT	FUNCTION
1	F856 20YL/PK	5 VOLT SUPPLY
2	K29 20WT/BR	APPS NO. 2 SIGNAL
3	K400 20BR/VT	APPS NO. 2 RETURN
4	K167 20BR/TN (5.7L)	APPS NO. 1 RETURN
4	K167 16BR/TN (DIESEL)	APPS NO. 1 RETURN
5	K23 20BR/LB	APPS NO. 1 SIGNAL
6	F855 20PK/YL	5 VOLT SUPPLY