

Focus Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Connector Repair Procedures	100-00-05-1
Wiring Harness Overview	100-00-06-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control –	
Traction Control	206-09B-00-1
Anti-Lock Control –	
Stability Assist	206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling	303-03-00-1
Fuel Charging and Controls –	
ZETEC–SE	303-04A-00-1
Fuel Charging and Controls –	
ZETEC–E,	
without LPG fuel system	303-04B-00-1
Fuel Charging and Controls –	
ZETEC–E,	
with LPG fuel system	303-04E-00-1
Fuel Charging and Controls –	
Duratorq TDCi	303-04F-00-1
Fuel Charging and Controls –	
Duratec–ST	303-04G-00-1
Fuel Charging and Controls –	
Duratec–RS	303-04H-00-1
Fuel Charging and Controls –	
Duratec 8V	303-04L-00-1
Starting System	303-06-00-1
Engine Ignition – ZETEC–SE	303-07A-00-1
Engine Ignition – ZETEC–E,	
without LPG fuel system	303-07B-00-1

Glow Plug System – Endura–TDDi	303-07C-00-1
Engine Ignition – ZETEC–E,	
with LPG fuel system	303-07E-00-1
Glow Plug System –	
Duratorq TDCi	303-07F-00-1
Engine Ignition – Duratec–ST	303-07G-00-1
Engine Ignition – Duratec–RS	303-07H-00-1
Engine Ignition – Duratec 8V	303-07L-00-1
Electronic Engine Controls –	
ZETEC–SE	303-14A-00-1
Electronic Engine Controls –	
ZETEC–E,	
without LPG fuel system	303-14B-00-1
Electronic Engine Controls –	
Endura–TDDi	303-14C-00-1
Electronic Engine Controls –	
ZETEC–E,	
with LPG fuel system	303-14E-00-1
Electronic Engine Controls –	
Duratorq TDCi	303-14F-00-1
Electronic Engine Controls –	
Duratec–ST	303-14G-00-1
Electronic Engine Controls –	
Duratec–RS	303-14H-00-1
Electronic Engine Controls –	
Duratec 8V	303-14L-00-1
Automatic Transmission	307-01-00-1
Vehicle Speed Control	310-03-00-1

Group 4 – Electrical

Climate Control System

Heating and Ventilation	412-02A-00-1
Auxiliary Heating	412-02B-00-1
Air Conditioning	412-03A-00-1

Instrumentation and Warning System

Instrument Cluster and	
Panel Illumination	413-00-00-1
Instrument Cluster	413-01-00-1
Horn	413-06-00-1
Clock	413-07-00-1
Information and Message Center	413-08-00-1
Parking Aid	413-13-00-1
Generator and Regulator	414-02-00-1

Audio Systems

Audio Unit	415-01-00-1
Speakers	415-03-00-1

Lighting Systems

Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting – Headlamp levelling	417-01-00-6
Exterior Lighting – Stop Lamps ...	417-01-00-10
Exterior Lighting – Turn Indicating Lamps	417-01-00-14
Exterior Lighting – Position and Parking Lamps	417-01-00-19
Exterior Lighting – Licence Plate Illumination	417-01-00-28
Exterior Lighting – Fog lamps	417-01-00-30
Exterior Lighting – Backup Lamps .	417-01-00-32
Exterior Lighting – Trailer socket ..	417-01-00-41
Interior Lighting	417-02-00-1
Daytime Running Lamps	417-04-00-1

Electrical Distribution

Module Communications Network ..	418-00-00-1
----------------------------------	-------------

Electronic Feature Group

Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Telematics	419-05-00-1
Vehicle Route Guidance/Navigation .	419-07-00-1
Cellular Phone	419-08-00-1

Multifunction Electronic

Control Modules	419-10-00-1
-----------------------	-------------

Group 5 – Body and Paint**Chassis**


Rear View Mirrors	501-09-00-1
Seating	501-10-00-1
Glass, Frames and Mechanisms	501-11-00-1
Instrument Panel and Console	501-12-00-1
Handles, Locks, Latches and Entry Systems	501-14-00-1
Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Occupant Restraints – Active	501-20A-00-1
Occupant Restraints – Passive	501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1
Component Testing	700-09-00-1


Fuse and Relay Information

The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

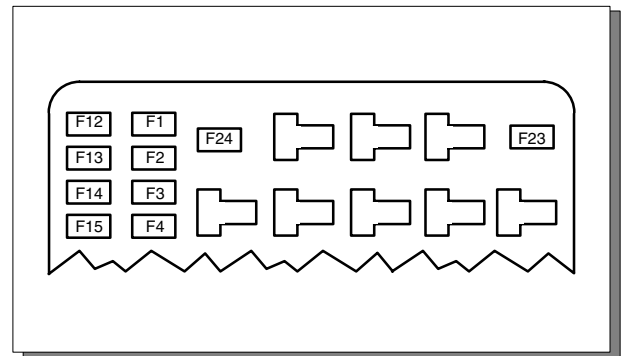


Power Distribution

The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

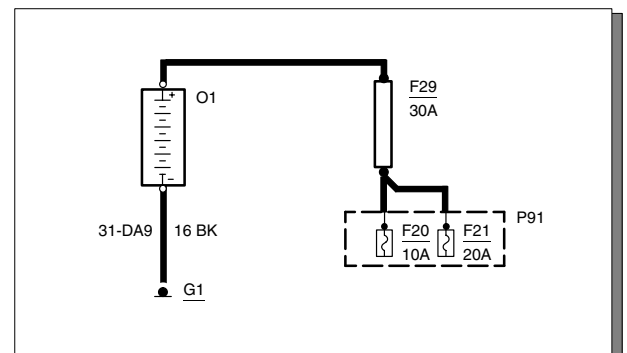


Fuse Details

The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

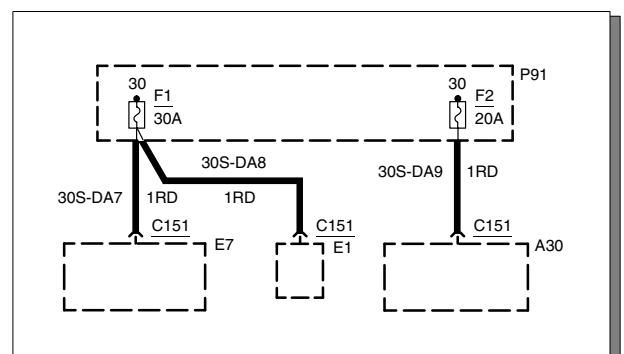


-1

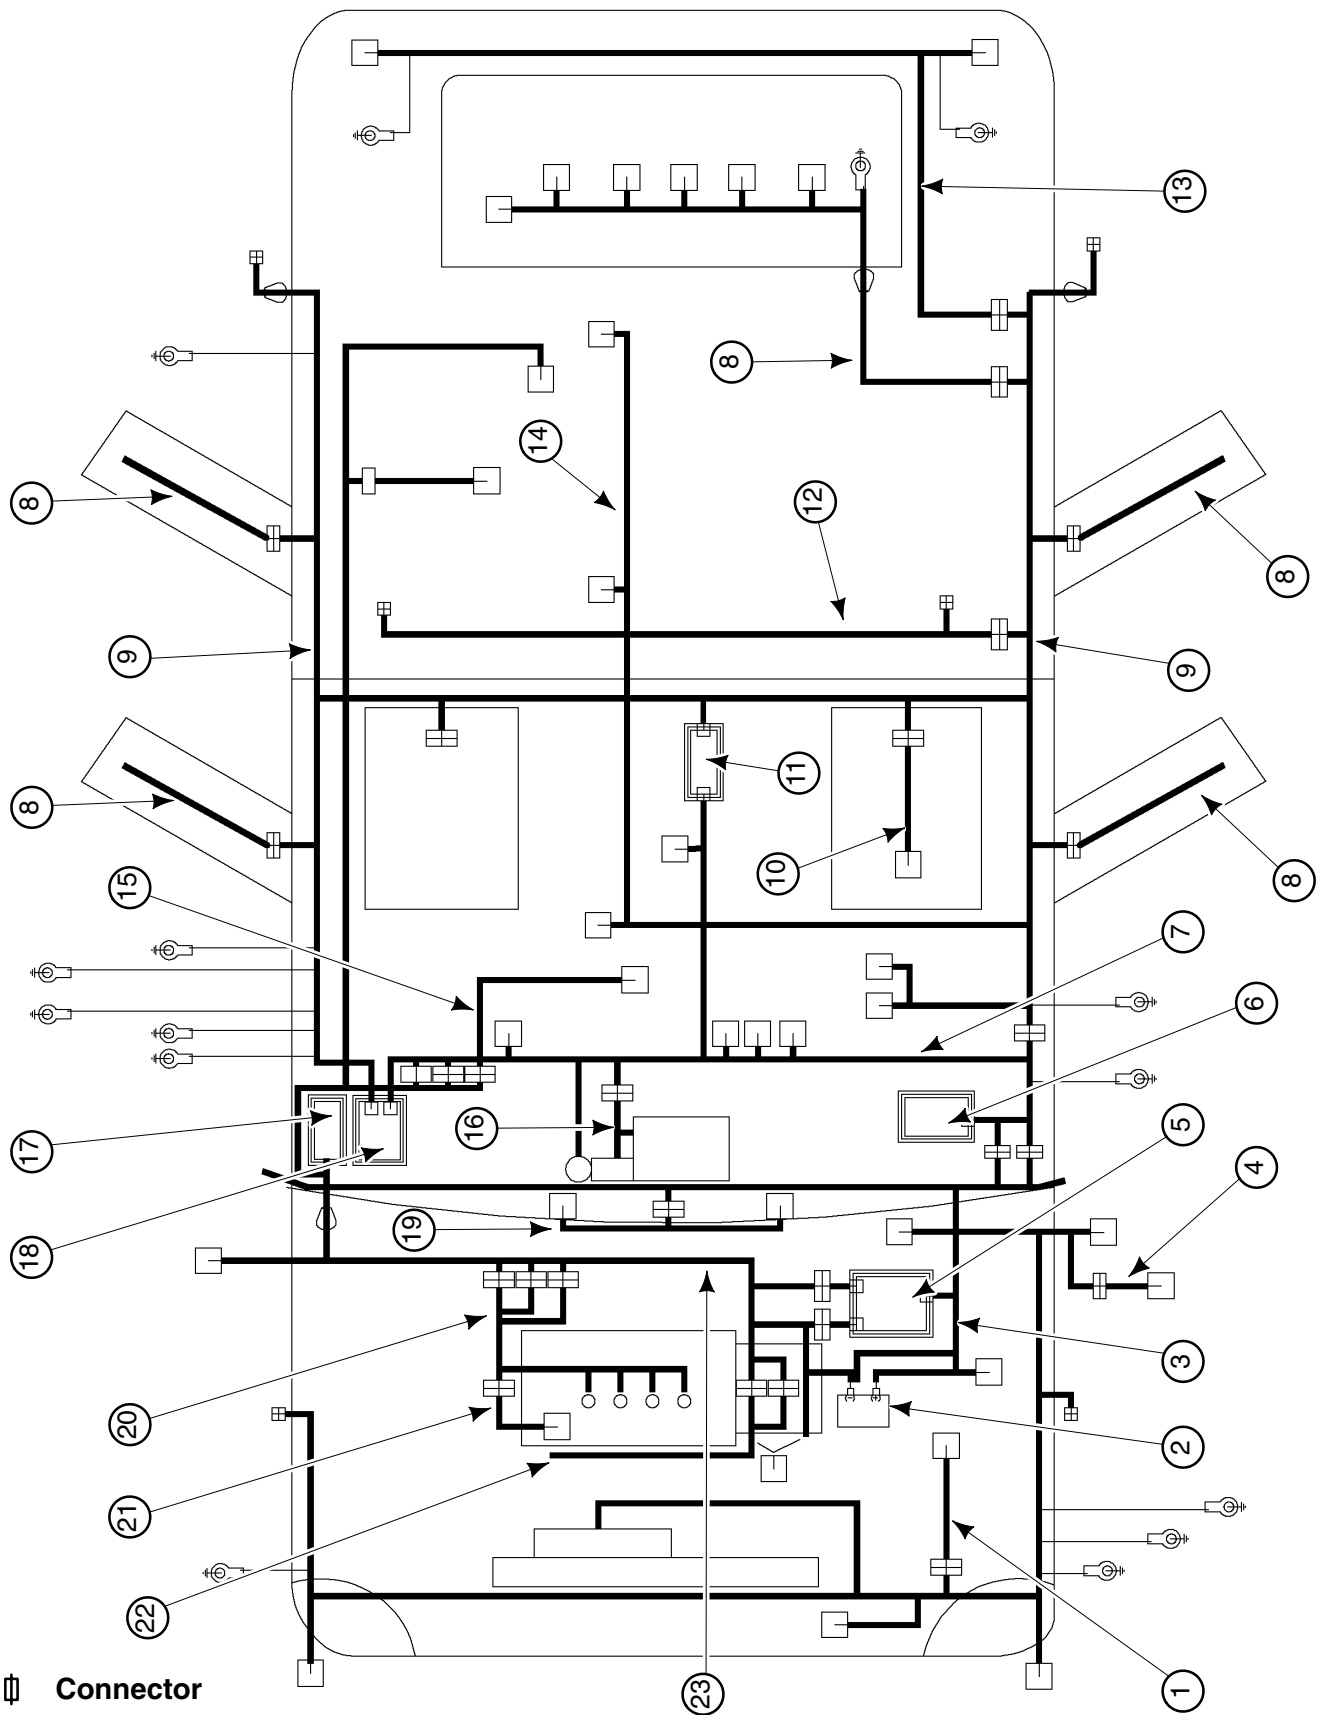


Diesel engines

-4

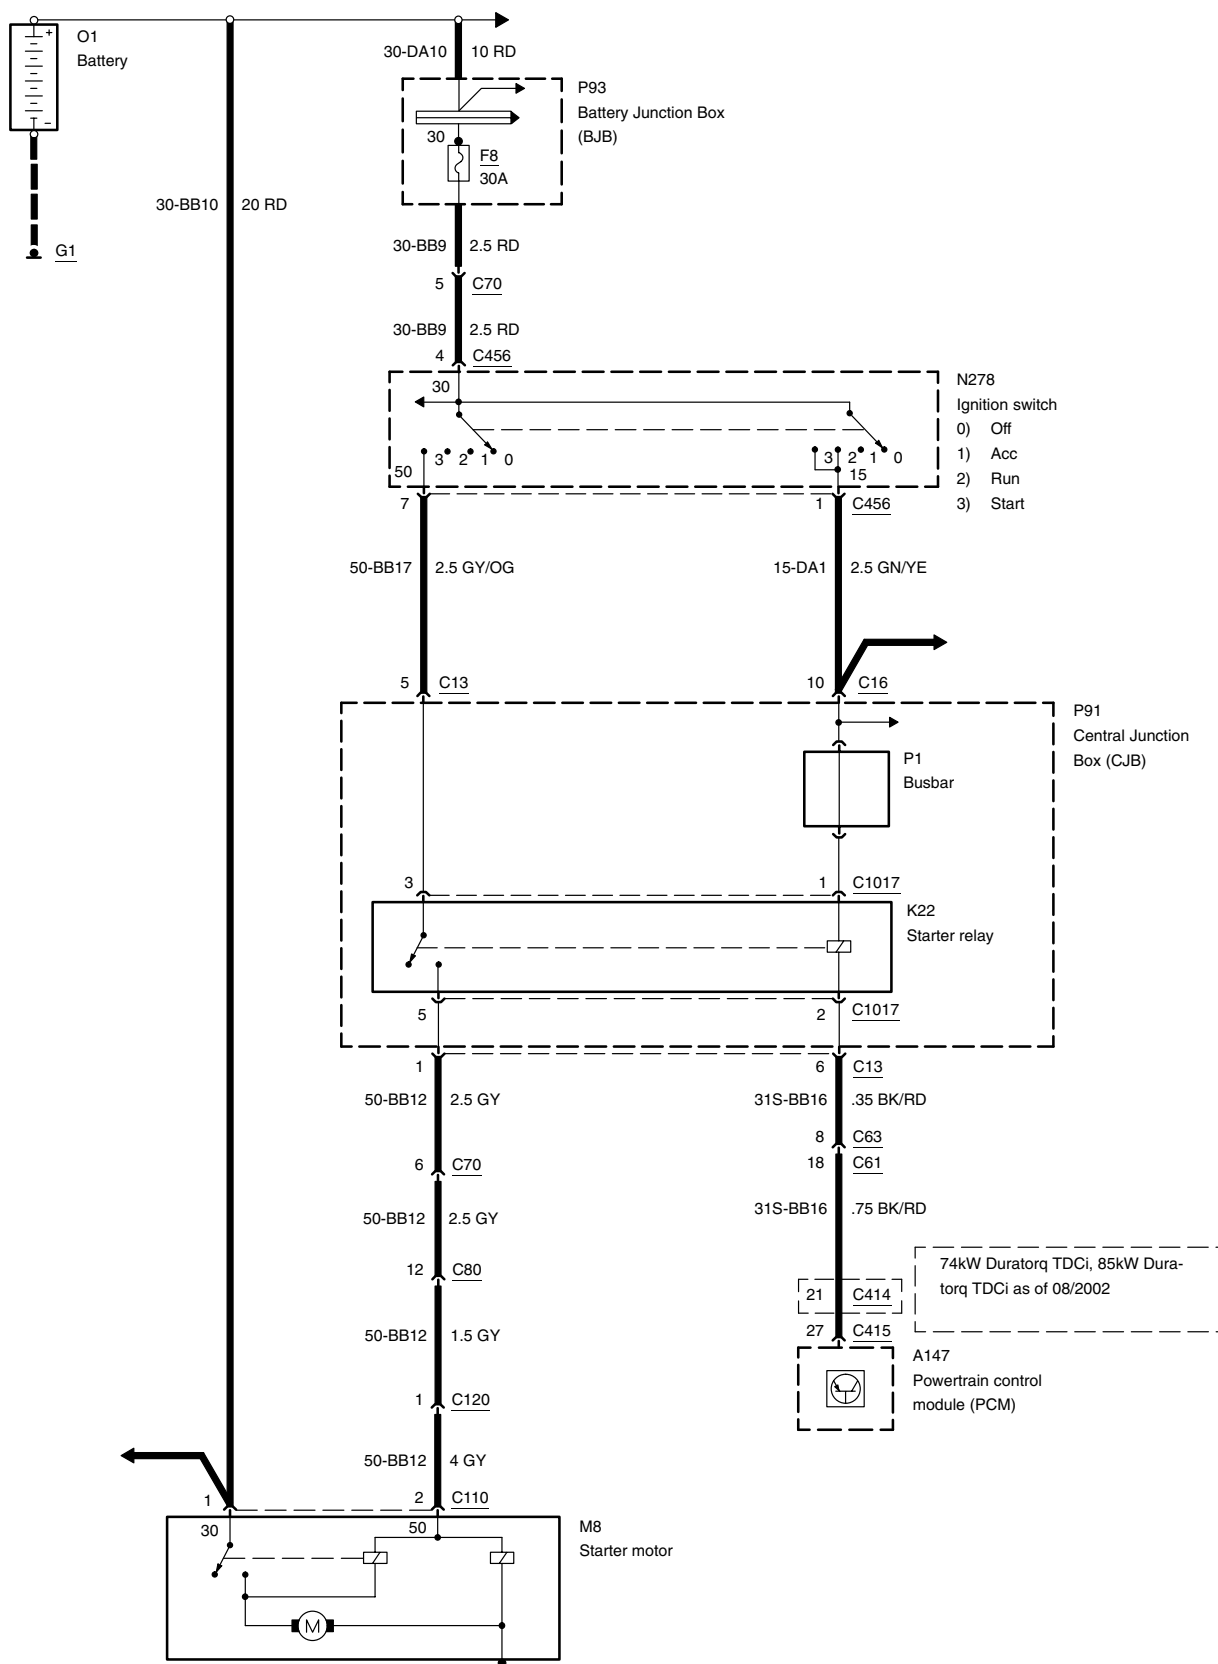


85kW Duratorq TDCi before 08/2002

-3

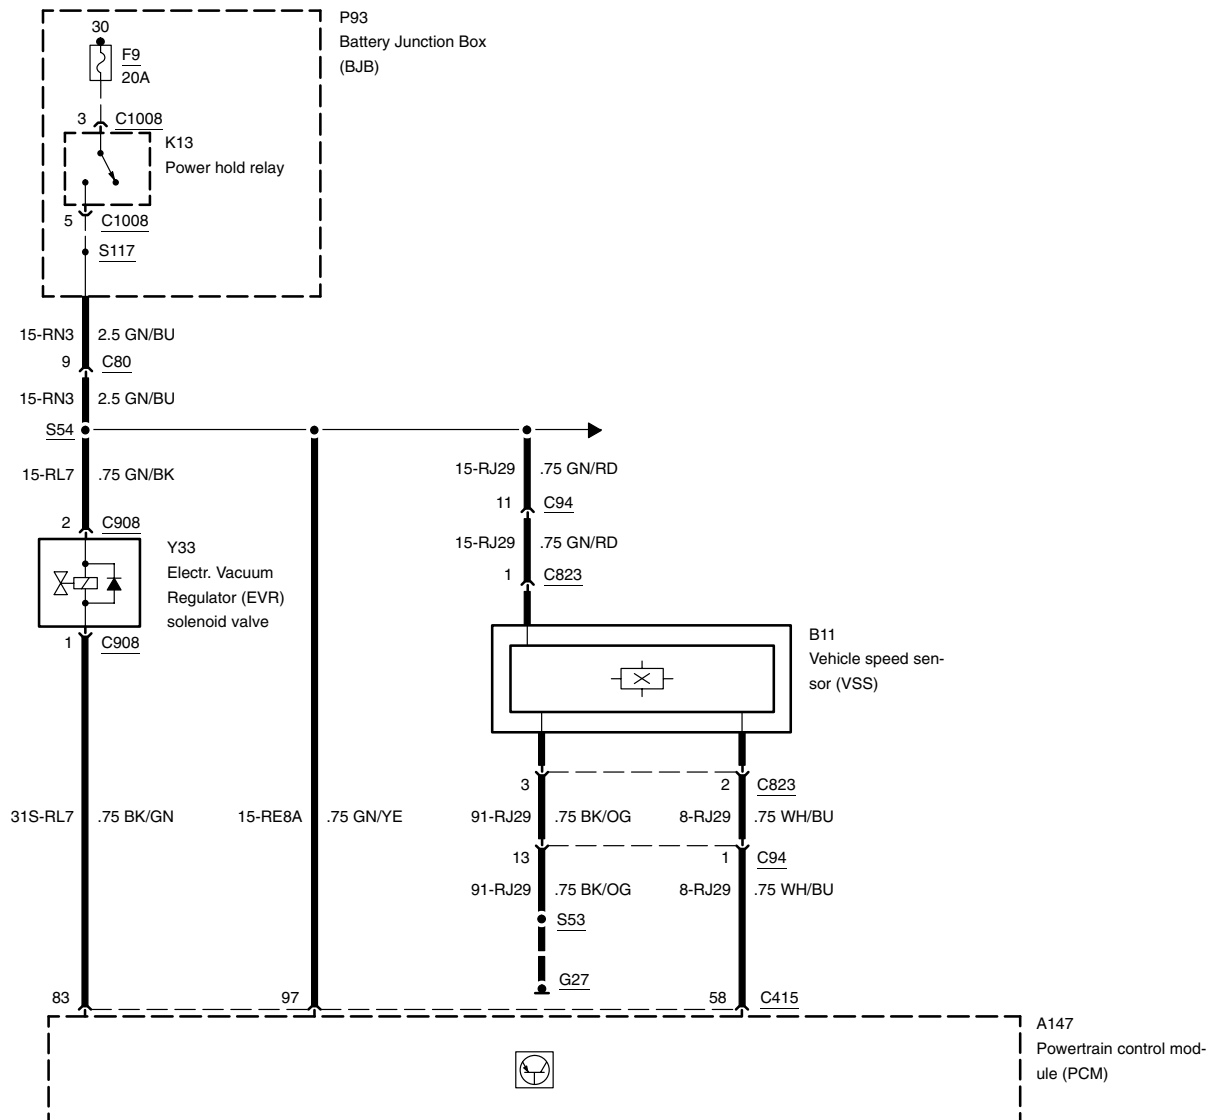


manual transmission

-2

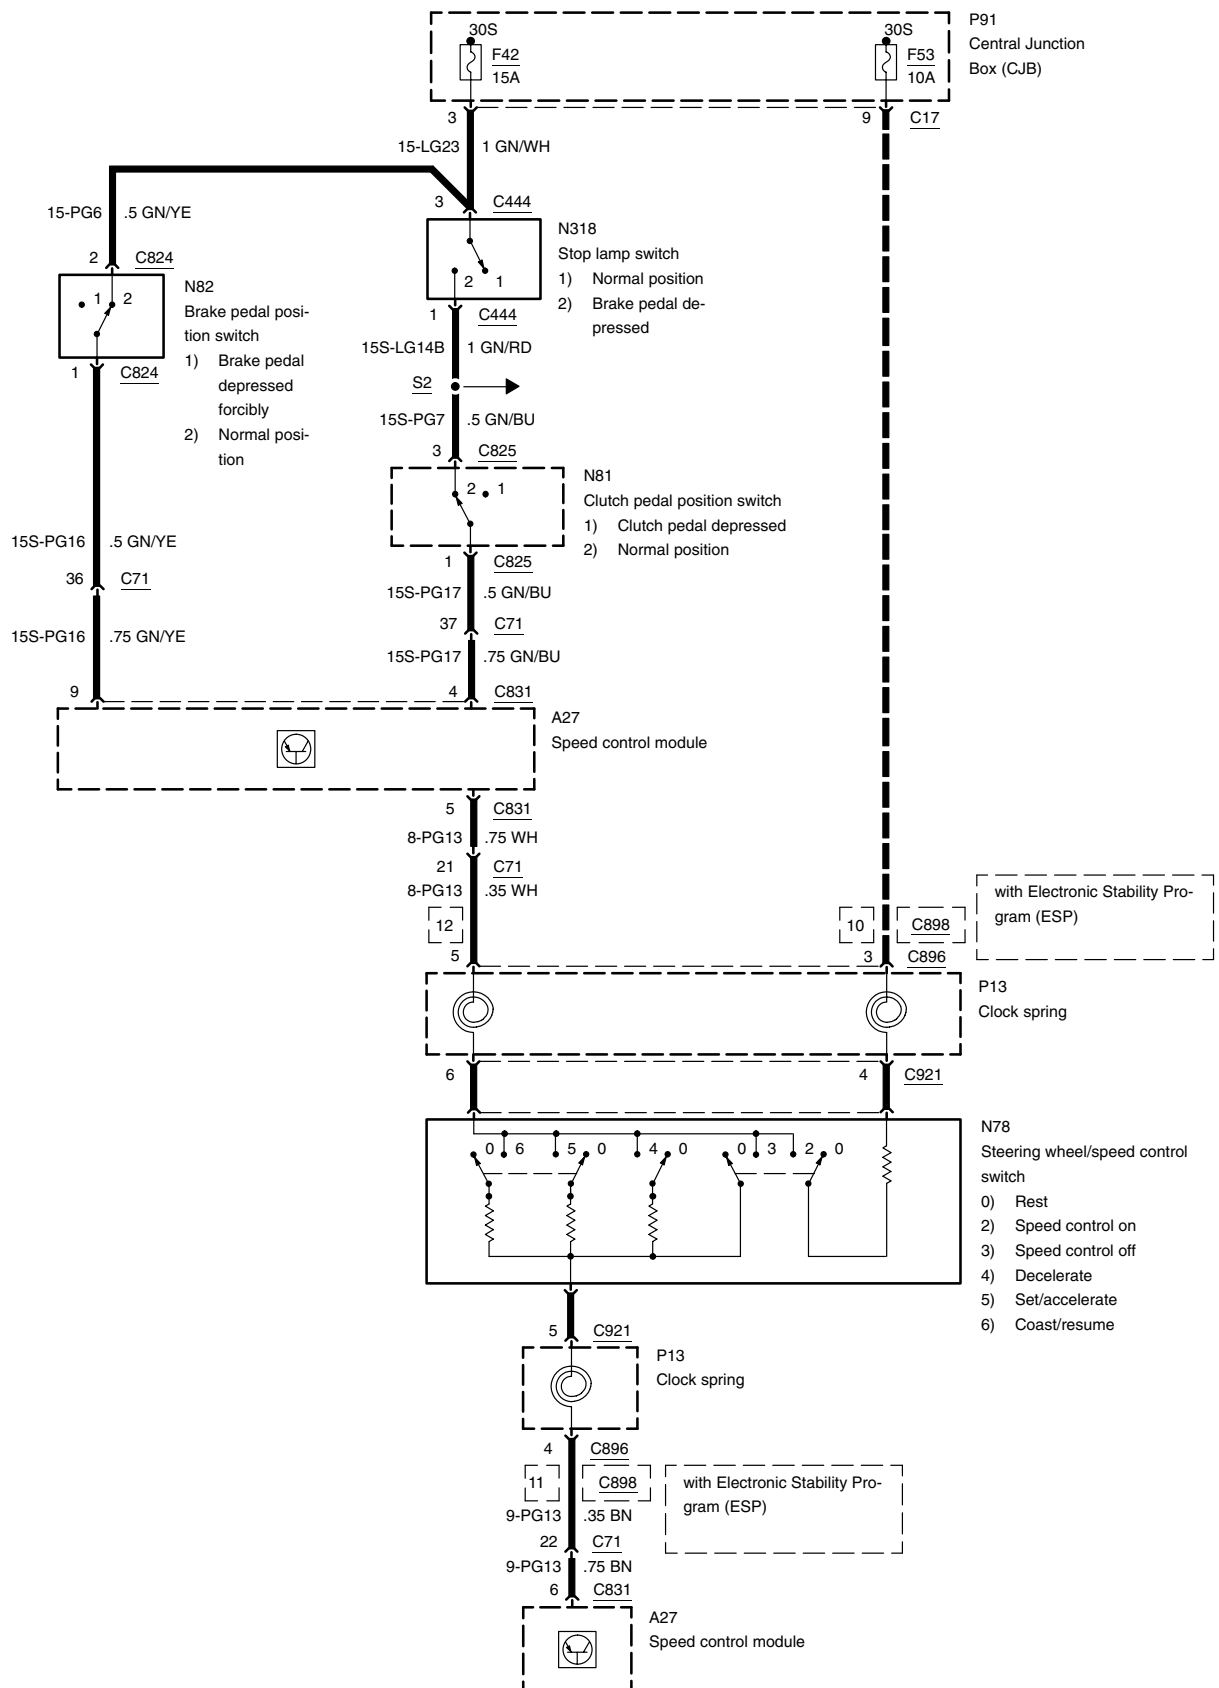


with Travel Pilot, Diesel engines

-16

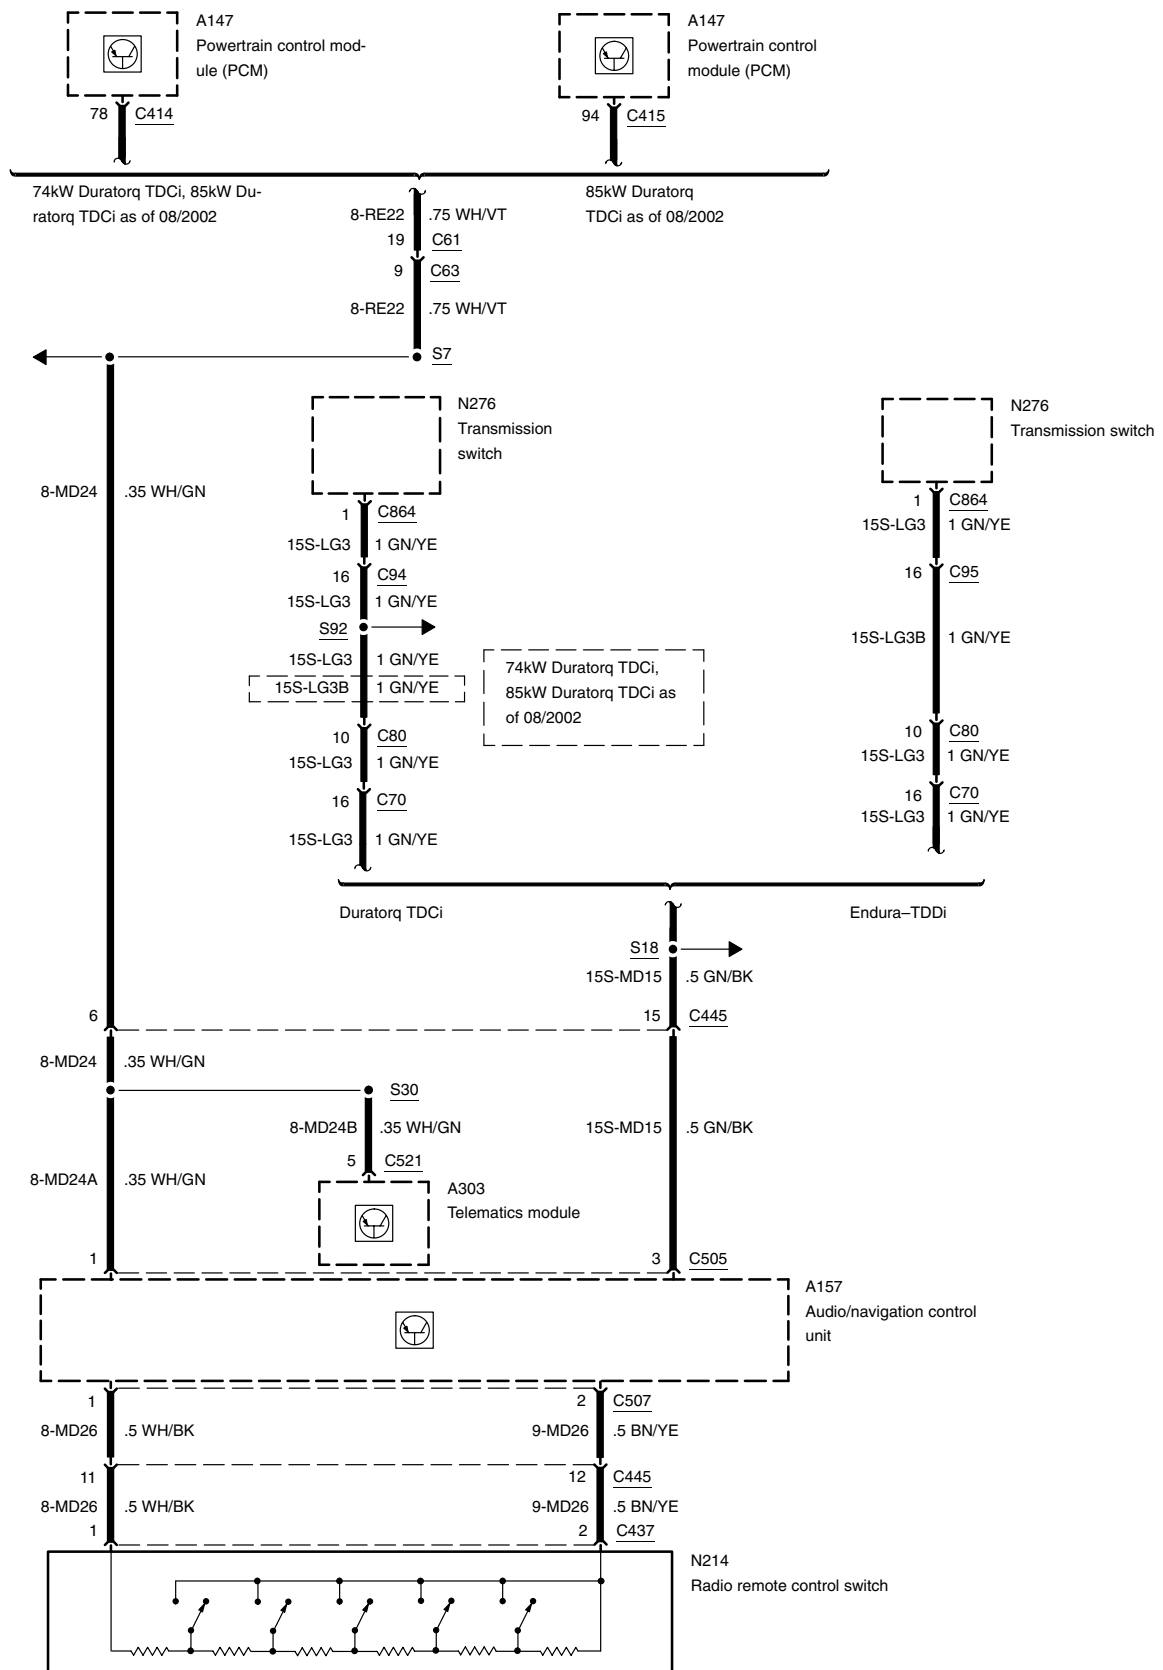


Low beam, without high intensity discharge headlamps

-2

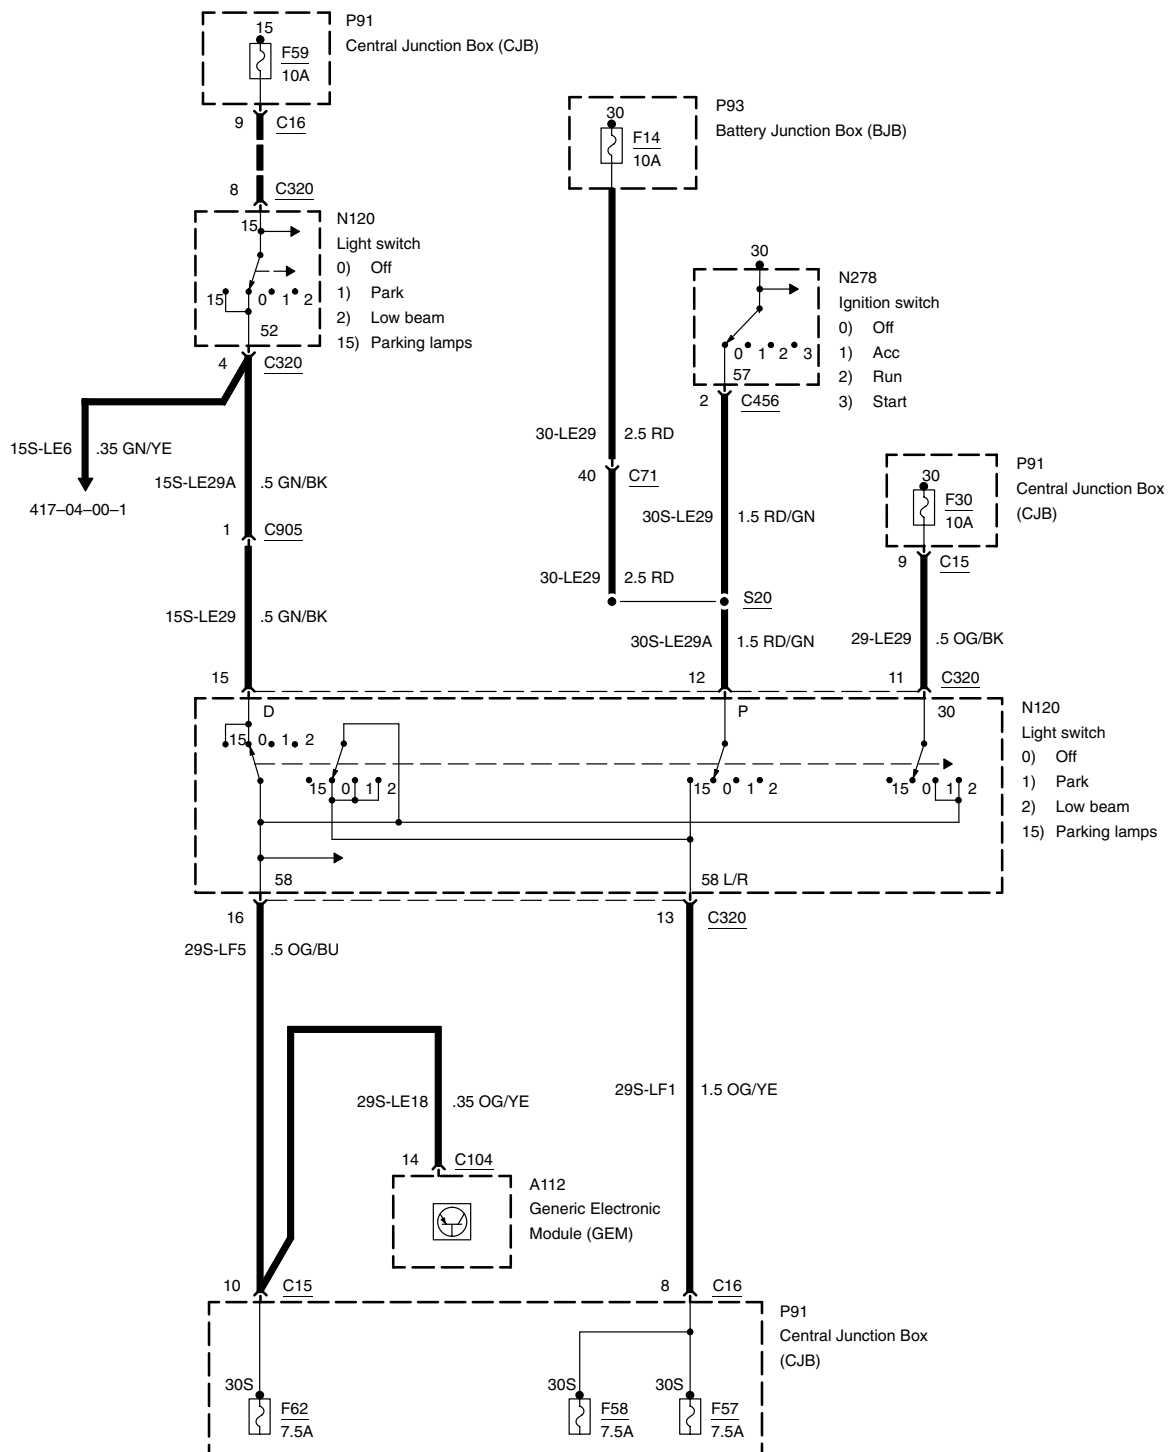


Low beam, with high intensity discharge headlamps

-5

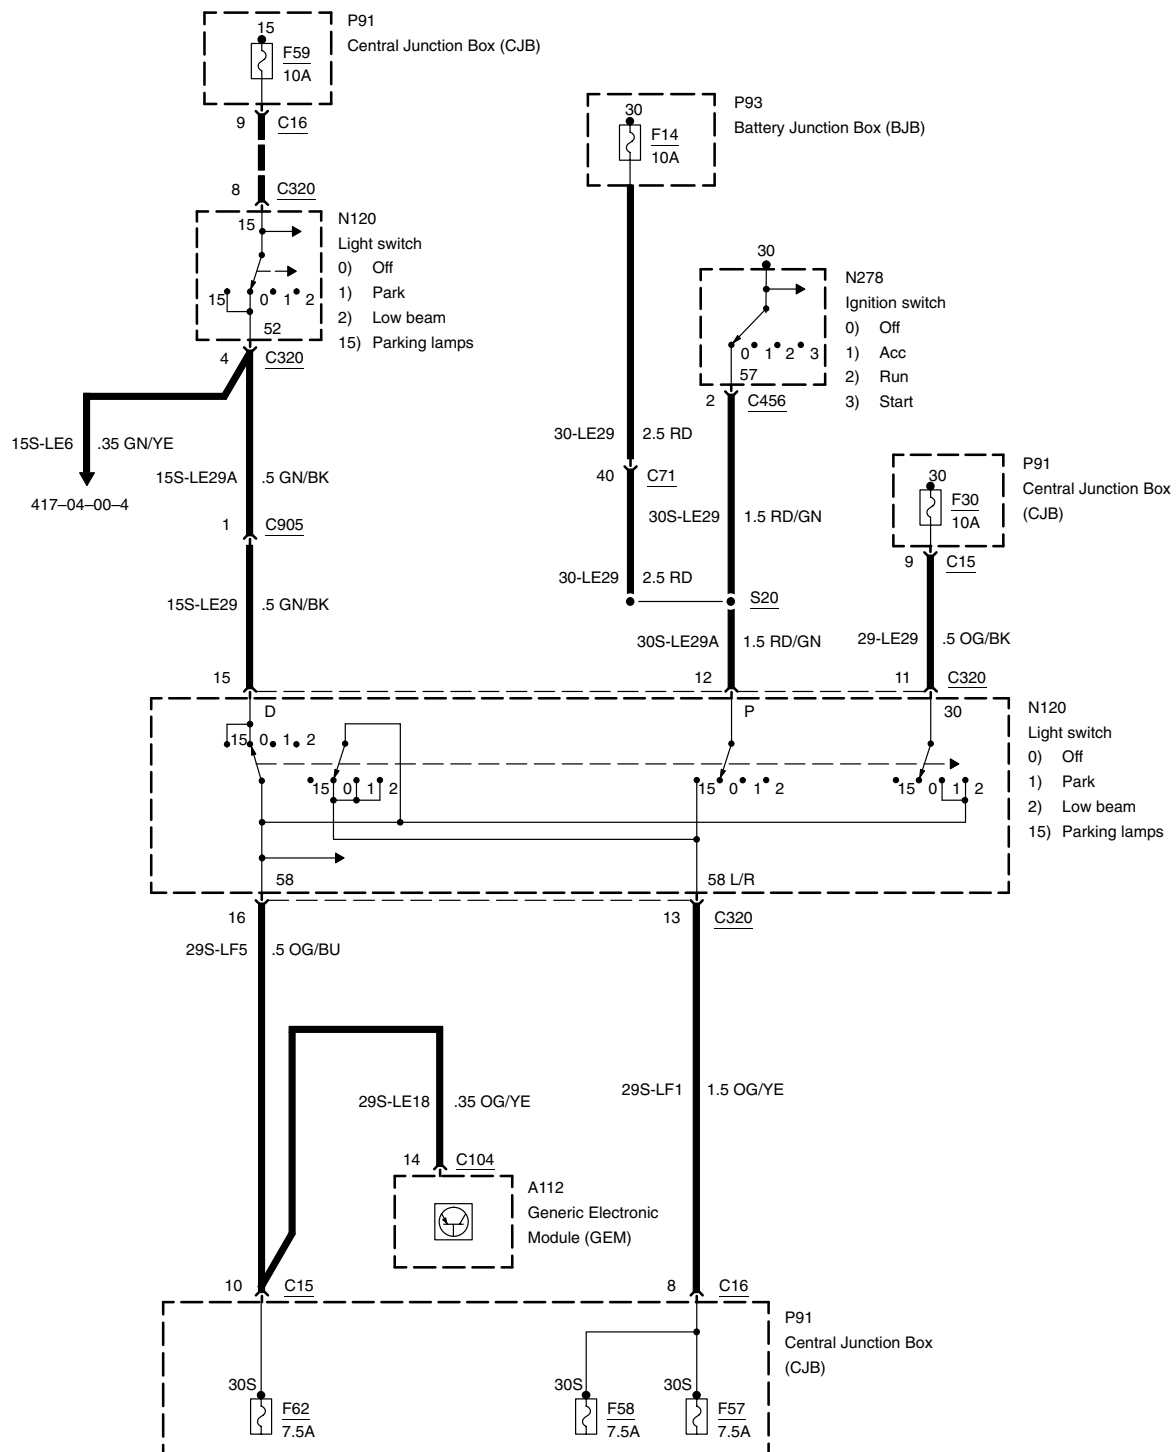


Data link connector, pins 2, 6, 10 and 14, with Traction Control System (TCS)


-5

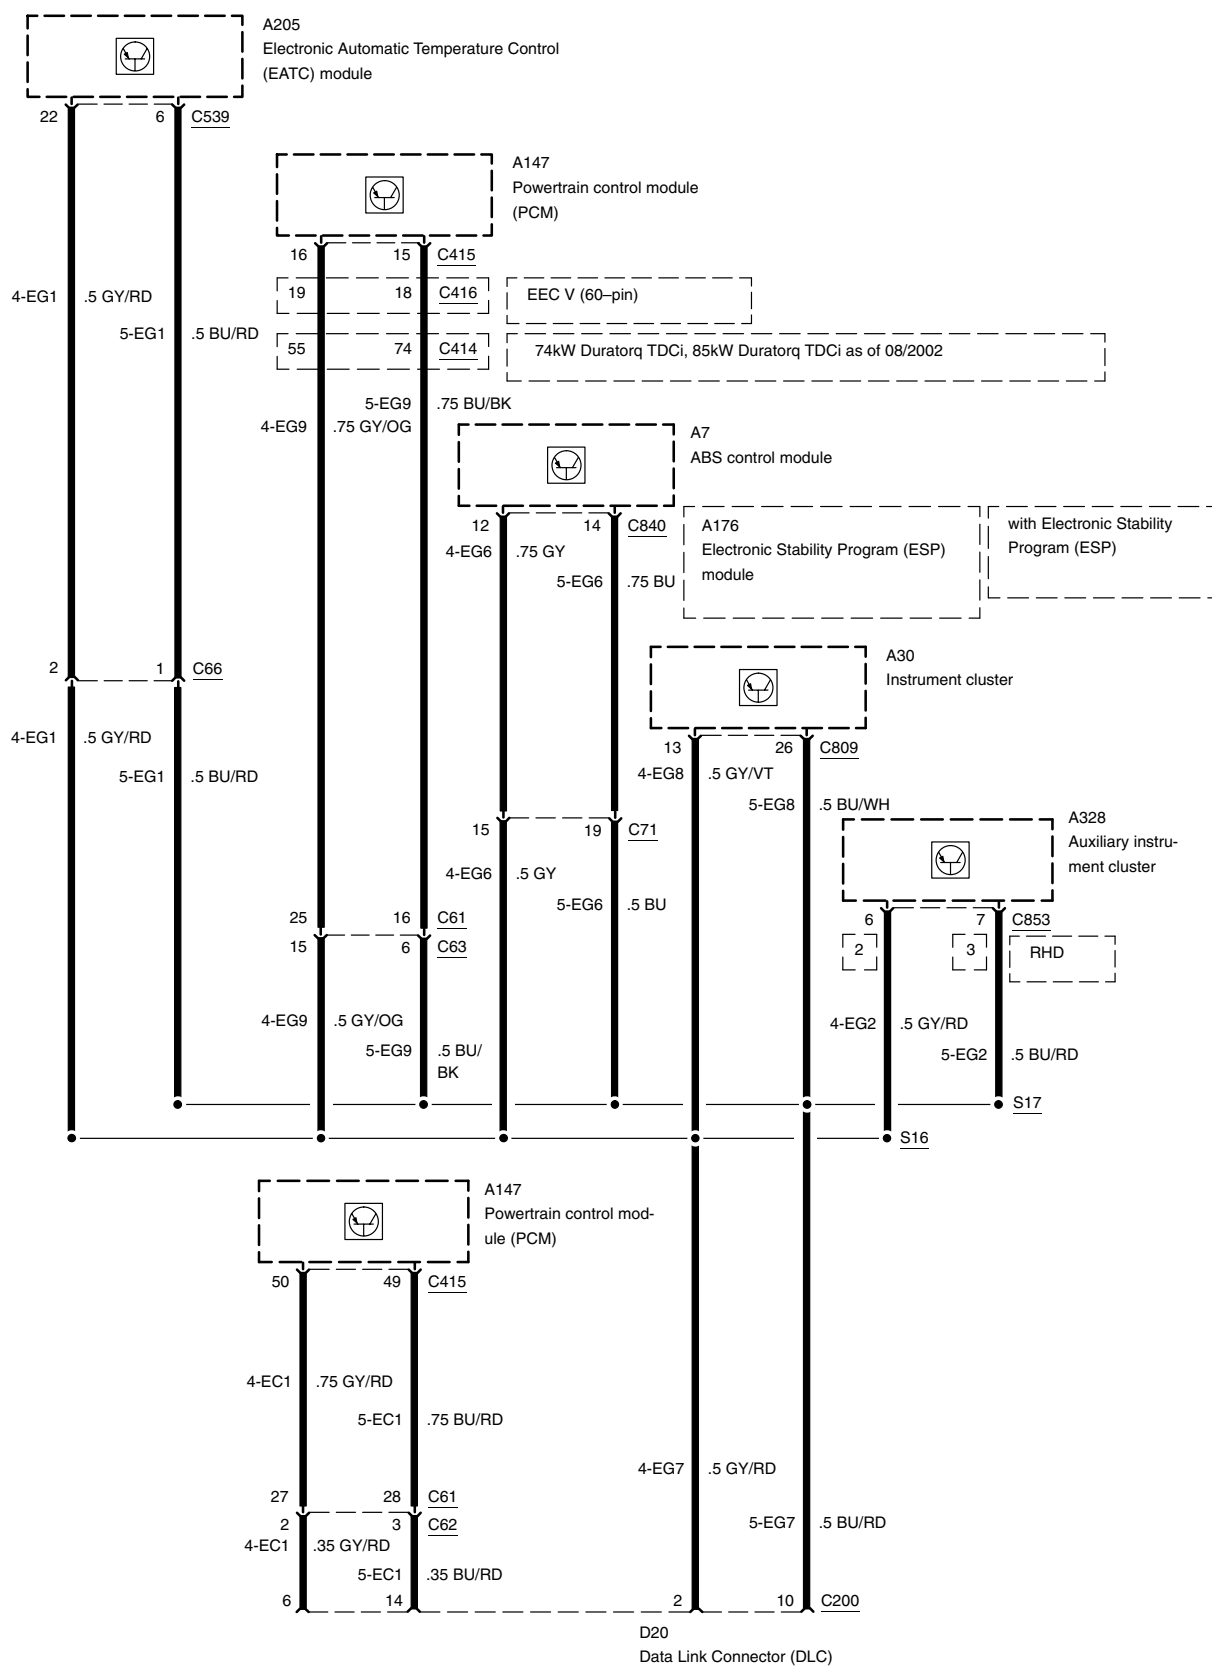

Without daytime running lamps, with high intensity discharge headlamps

-28

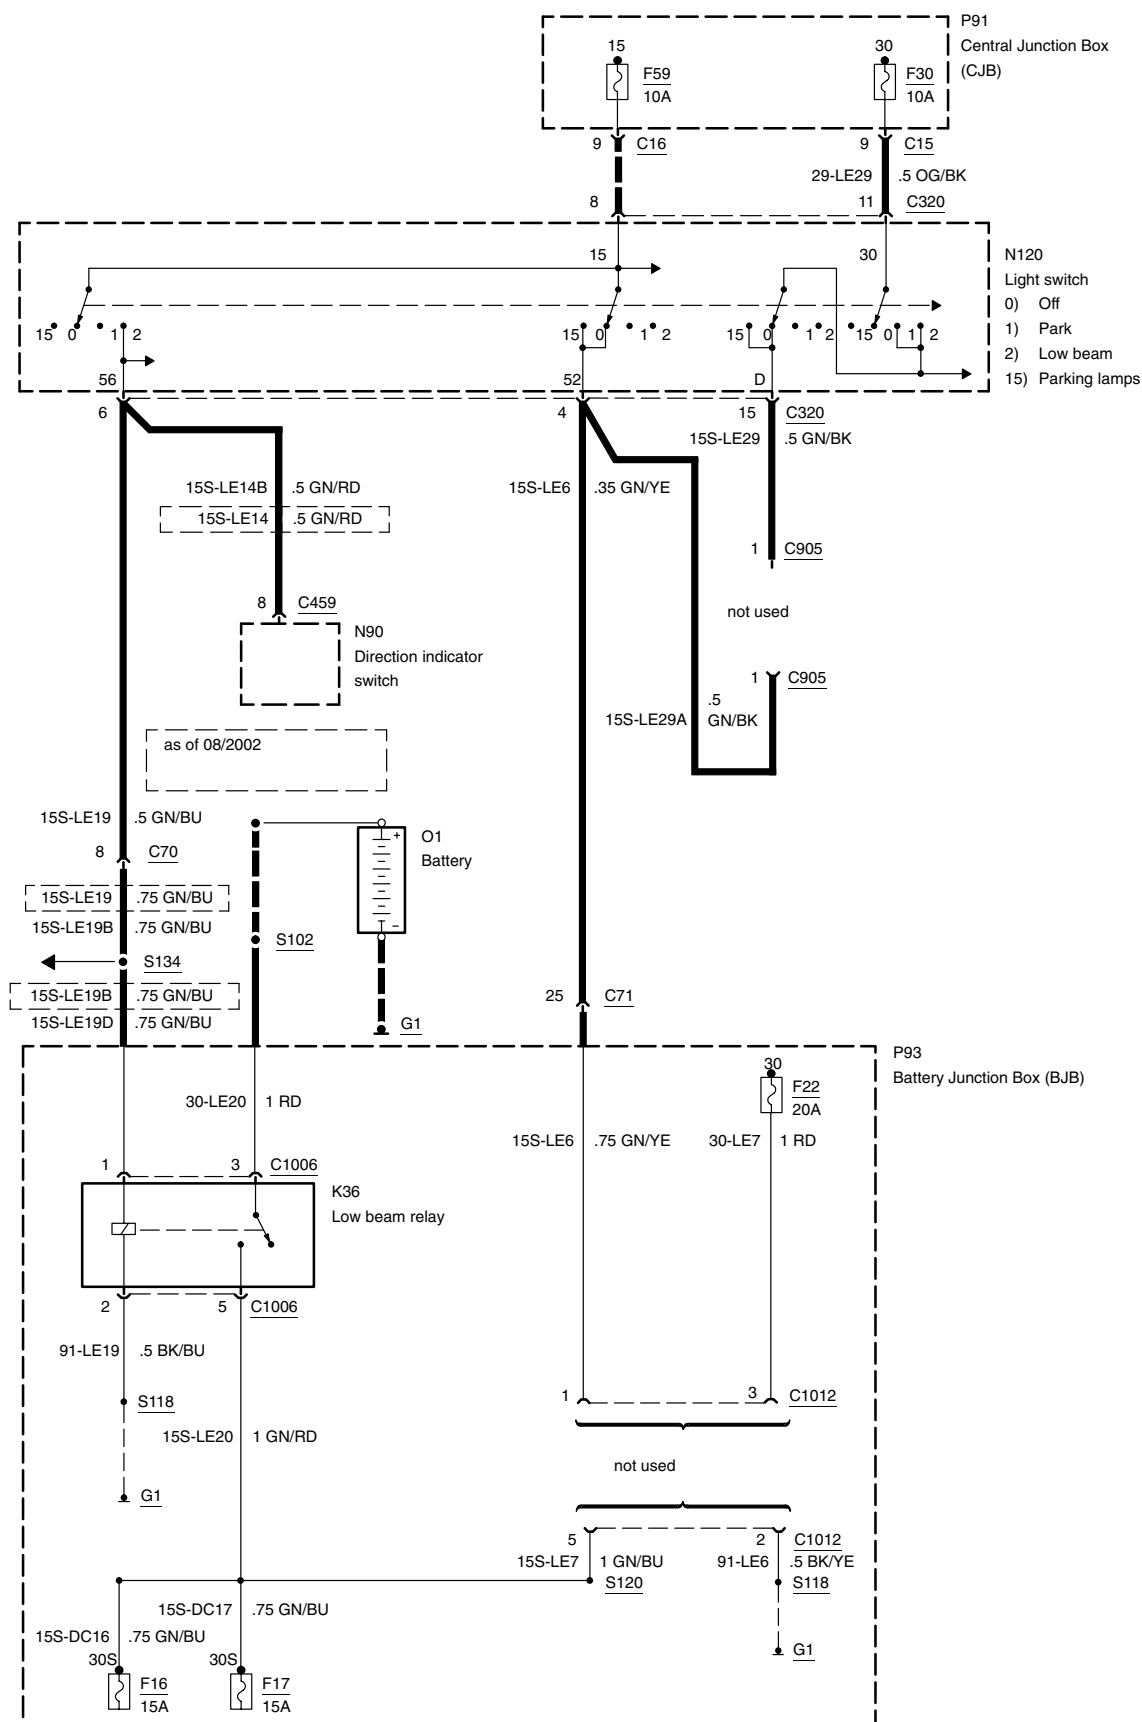

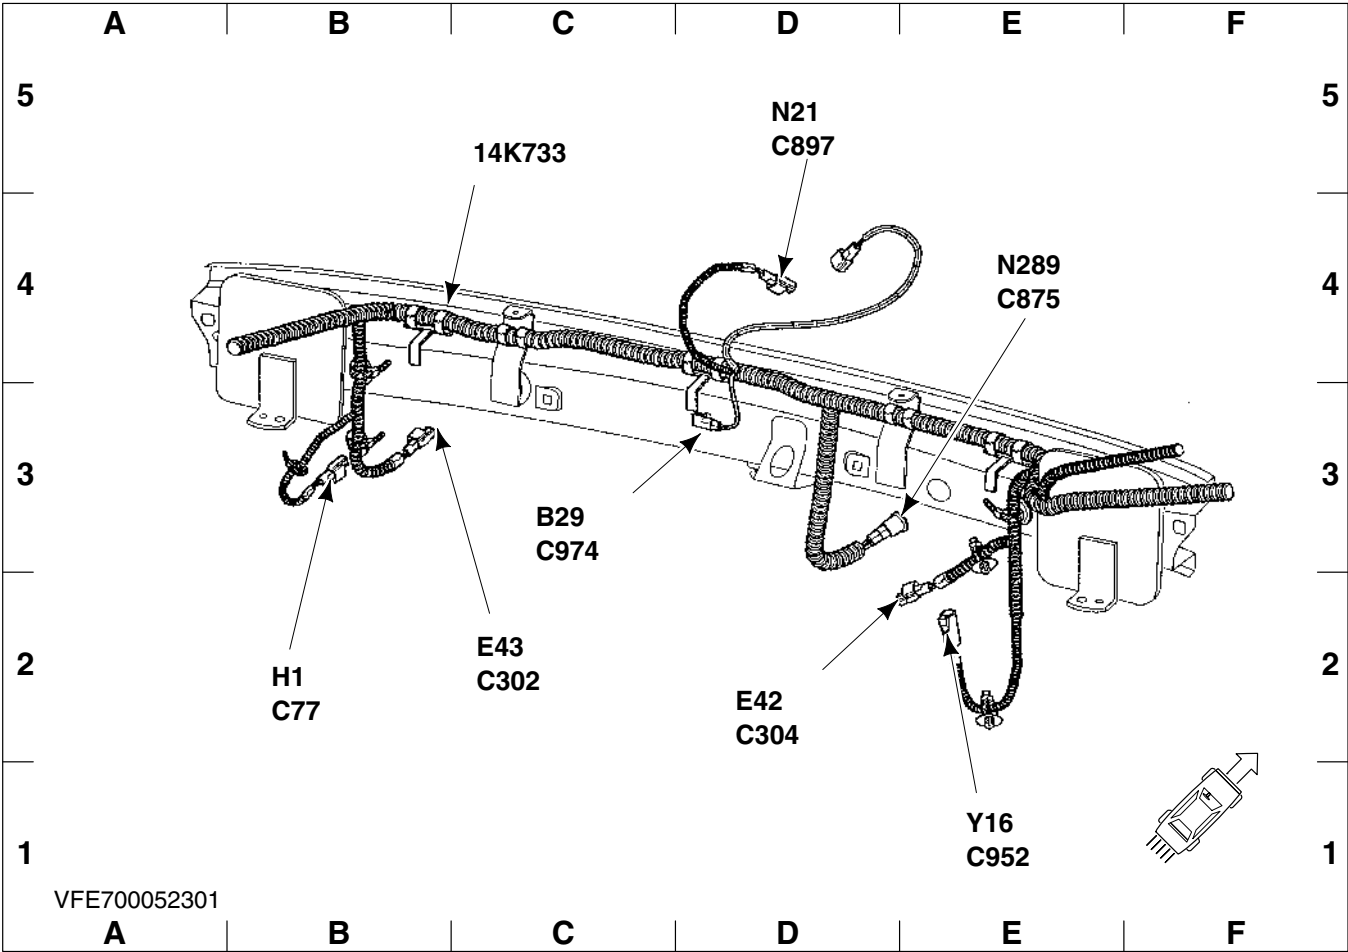


Engine compartment, front

14K733 Wiring harness – Engine compartment .	C 5	C974	C 3
B29 .. Ice warning sensor	C 3	E42 .. Fog lamp, RH side front	D 2
C77	B 2	E43 .. Fog lamp, LH side front	C 2
C302	C 2	H1 ... Horn	B 2
C304	D 2	N21 .. Engine compartment switch	D 5
C875	E 4	N289 . Thermo switch, outside temperature	E 4
C897	D 5	Y16 .. A/C Compressor clutch	E 1
C952	E 1		

C17 (GY)

14401


F11014

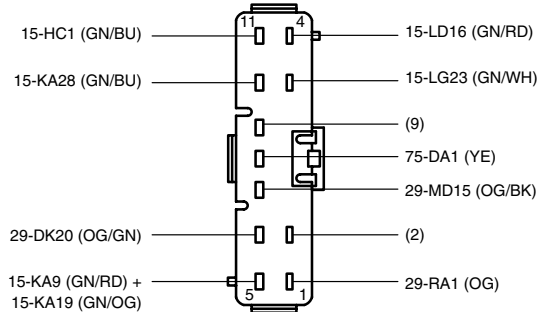

P91
Central Junction
Box (CJB)

C461**14014, 14405**

 F02058



49S-LG12 (BU)

 
31-LG12 (BK)

E49

LH Rear direction indicator lamp

C462**14014, 14405**

F02058



49S-LG19 (BU/RD)


31-LG19 (BK)

E48


RH Rear direction indicator lamp

C464**18K926**


F12019

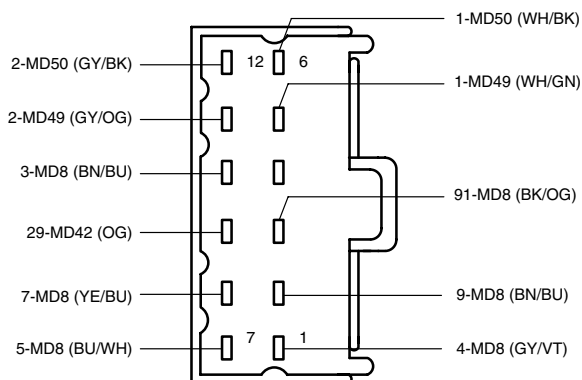A11
Radio**C463****19A442**

F22008

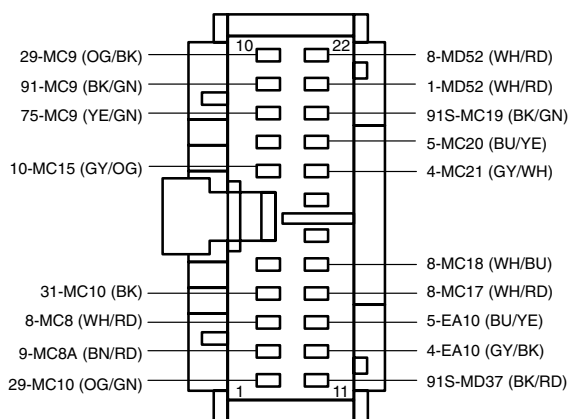A177
Mobile telephone module**C465****18K926**

F12019

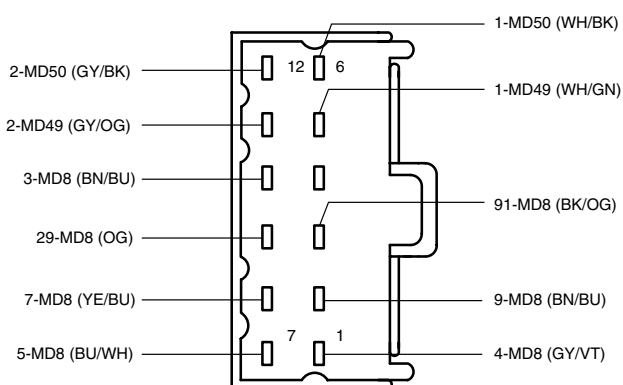A144
CD changer