

Focus Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Wiring Harness Overview	100-00-06-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control –	
Stability Assist	206-09C-00-1

Steering System

Power Steering	211-02-00-1
----------------------	-------------

Group 3 – Powertrain

Engine

Engine Cooling – 1.6L (Z6)	303-03A-00-1
Engine Cooling –	
1.8/2.0L Duratec-HE (MI4)	303-03B-00-1
Engine Cooling –	
2.0L Duratorq-TDCi (DW) Diesel .	303-03C-00-1
Fuel Charging and Controls –	
1.6L (Z6)	303-04A-00-1
Fuel Charging and Controls –	
1.8/2.0L Duratec-HE (MI4)	303-04B-00-1
Fuel Charging and Controls –	
2.0L Duratorq-TDCi (DW) Diesel .	303-04C-00-1
Starting System – 1.6L (Z6)	303-06A-00-1
Starting System –	
1.8/2.0L Duratec-HE (MI4)	303-06B-00-1
Starting System –	
2.0L Duratorq-TDCi (DW) Diesel .	303-06C-00-1
Engine Ignition – 1.6L (Z6)	303-07A-00-1
Engine Ignition –	
1.8/2.0L Duratec-HE (MI4)	303-07B-00-1
Glow Plug System –	
2.0L Duratorq-TDCi (DW) Diesel .	303-07C-00-1

Electronic Engine Controls –

1.6L (Z6)	303-14A-00-1
Electronic Engine Controls –	
1.8/2.0L Duratec-HE (MI4)	303-14B-00-1
Electronic Engine Controls –	
2.0L Duratorq-TDCi (DW) Diesel .	303-14C-00-1
Automatic Transmission	307-01-00-1
Manual Transmission –	
manual transmission (MPS6)	308-00-00-1
Speed Control	310-03-00-1

Group 4 – Electrical

Climate Control System

Heating and Ventilation	412-02A-00-1
Air Conditioning – without EATC ...	412-03-00-1
Air Conditioning – with EATC	412-03-00-6

Instrumentation and Warning Systems

Instrument Cluster and Panel	
Illumination	413-00-00-1
Instrument Cluster	413-01-00-1
Horn	413-06-00-1
Clock	413-07-00-1
Parking Aid	413-13-00-1
Generator and Regulator – 1.6L (Z6)	414-02A-00-1
Generator and Regulator –	
1.8/2.0L Duratec-HE (MI4)	414-02B-00-1
Generator and Regulator –	
2.0L Duratorq-TDCi (DW) Diesel .	414-02C-00-1

Audio Systems

Audio Unit	415-01-00-1
Speakers	415-03-00-1

Lighting

Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting –	
Headlamp leveling	417-01-00-3
Exterior Lighting – Stop Lamps	417-01-00-9
Exterior Lighting –	
Turn Signal Lamps	417-01-00-13
Exterior Lighting –	
Position and Parking Lamps	417-01-00-21
Exterior Lighting –	
Licence plate illumination	417-01-00-23

Exterior Lighting – Fog lamps	417-01-00-25
Exterior Lighting – Reversing lamps	417-01-00-27
Interior Lighting	417-02-00-1

Electrical Distribution

Module Communications Network	418-00-00-1
---	-------------

Electronic Feature Group

Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Multifunction Electronic Control Modules	419-10-00-1

Group 5 – Body and Paint

Chassis

Rear View Mirrors	501-09-00-1
Seating	501-10-00-1
Glass, Frames and Mechanisms – with front power windows	501-11-00-1
Glass, Frames and Mechanisms – with front and rear power windows	501-11-00-3
Glass, Frames and Mechanisms – Heated rear window	501-11-00-19


Glass, Frames and Mechanisms – Heated power mirrors	501-11-00-21
Instrument Panel and Console	501-12-00-1
Handles, Locks, Latches and Entry Systems – with central locking	501-14-00-1
Handles, Locks, Latches and Entry Systems – with double locking	501-14-00-21
Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Safety Belt System	501-20A-00-1
Supplemental Restraint System	501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1


Fuse and Relay Information

The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

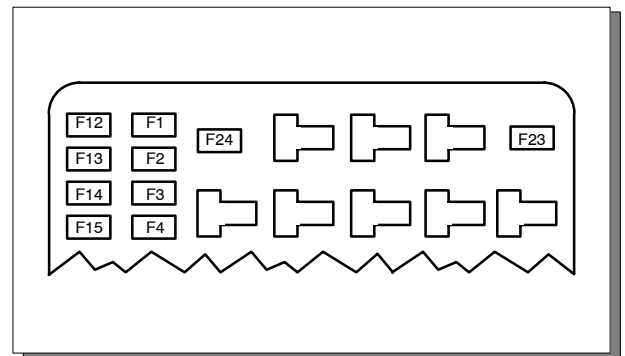


Power Distribution

The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

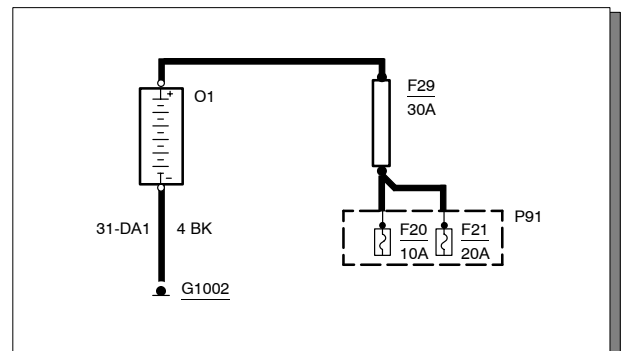


Fuse Details


The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

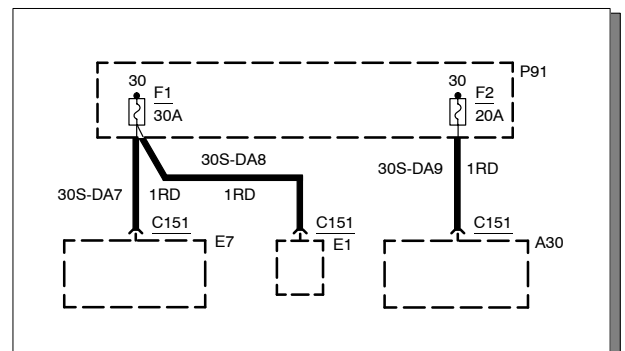

Anti-Lock Control


02/2008
206-09A-00-1
2008.25
Focus

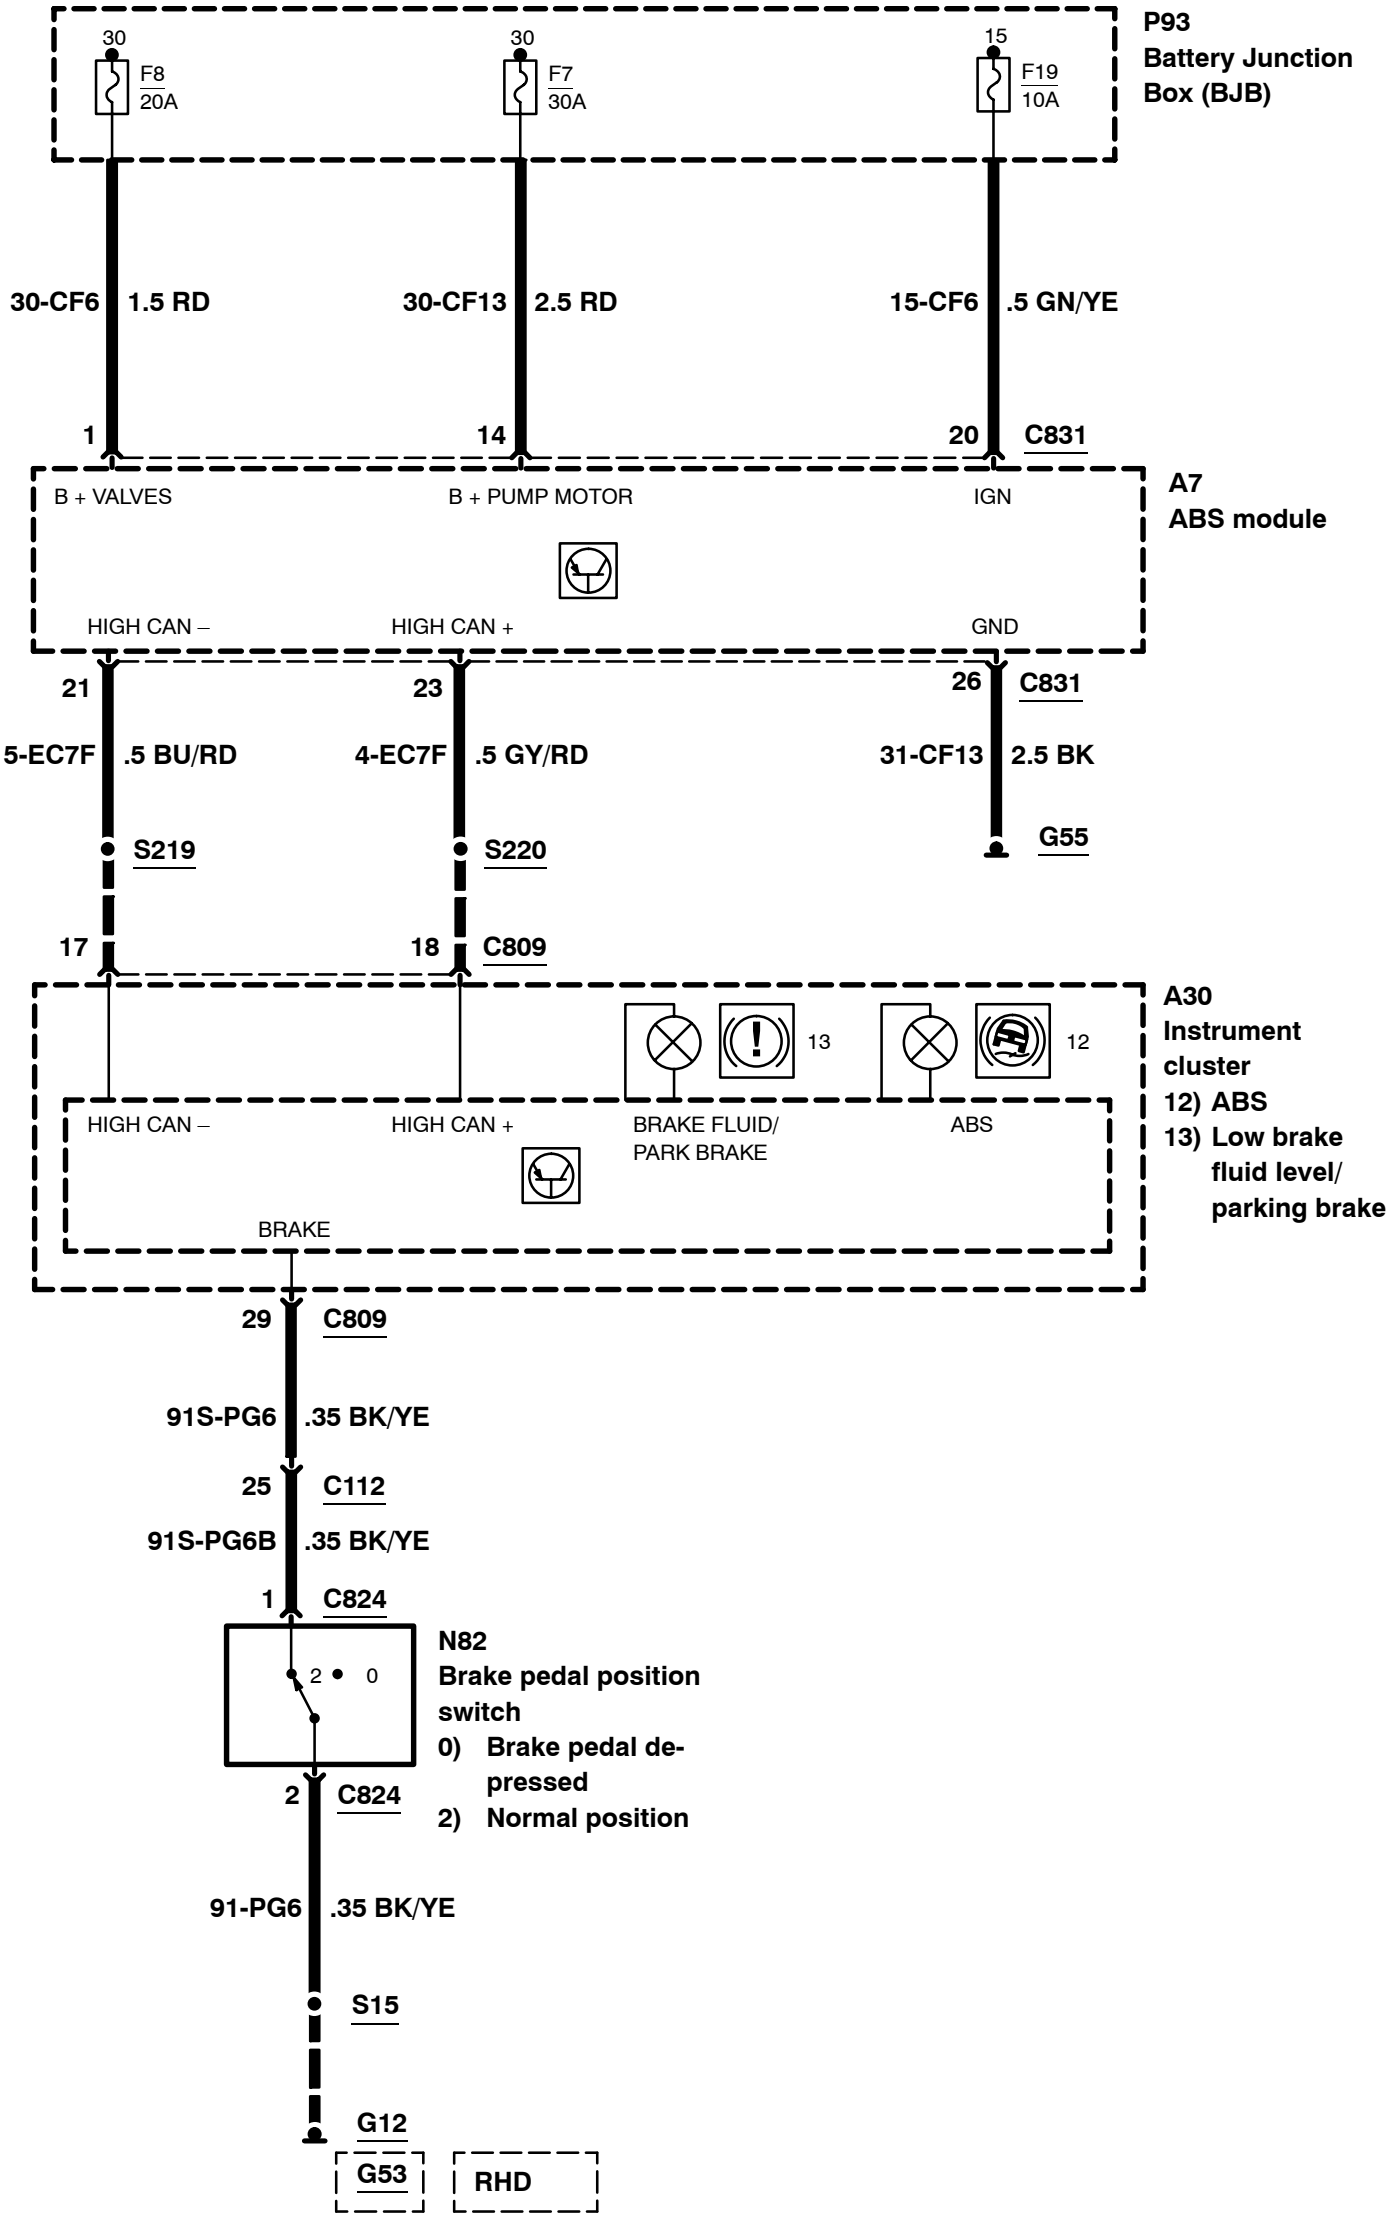

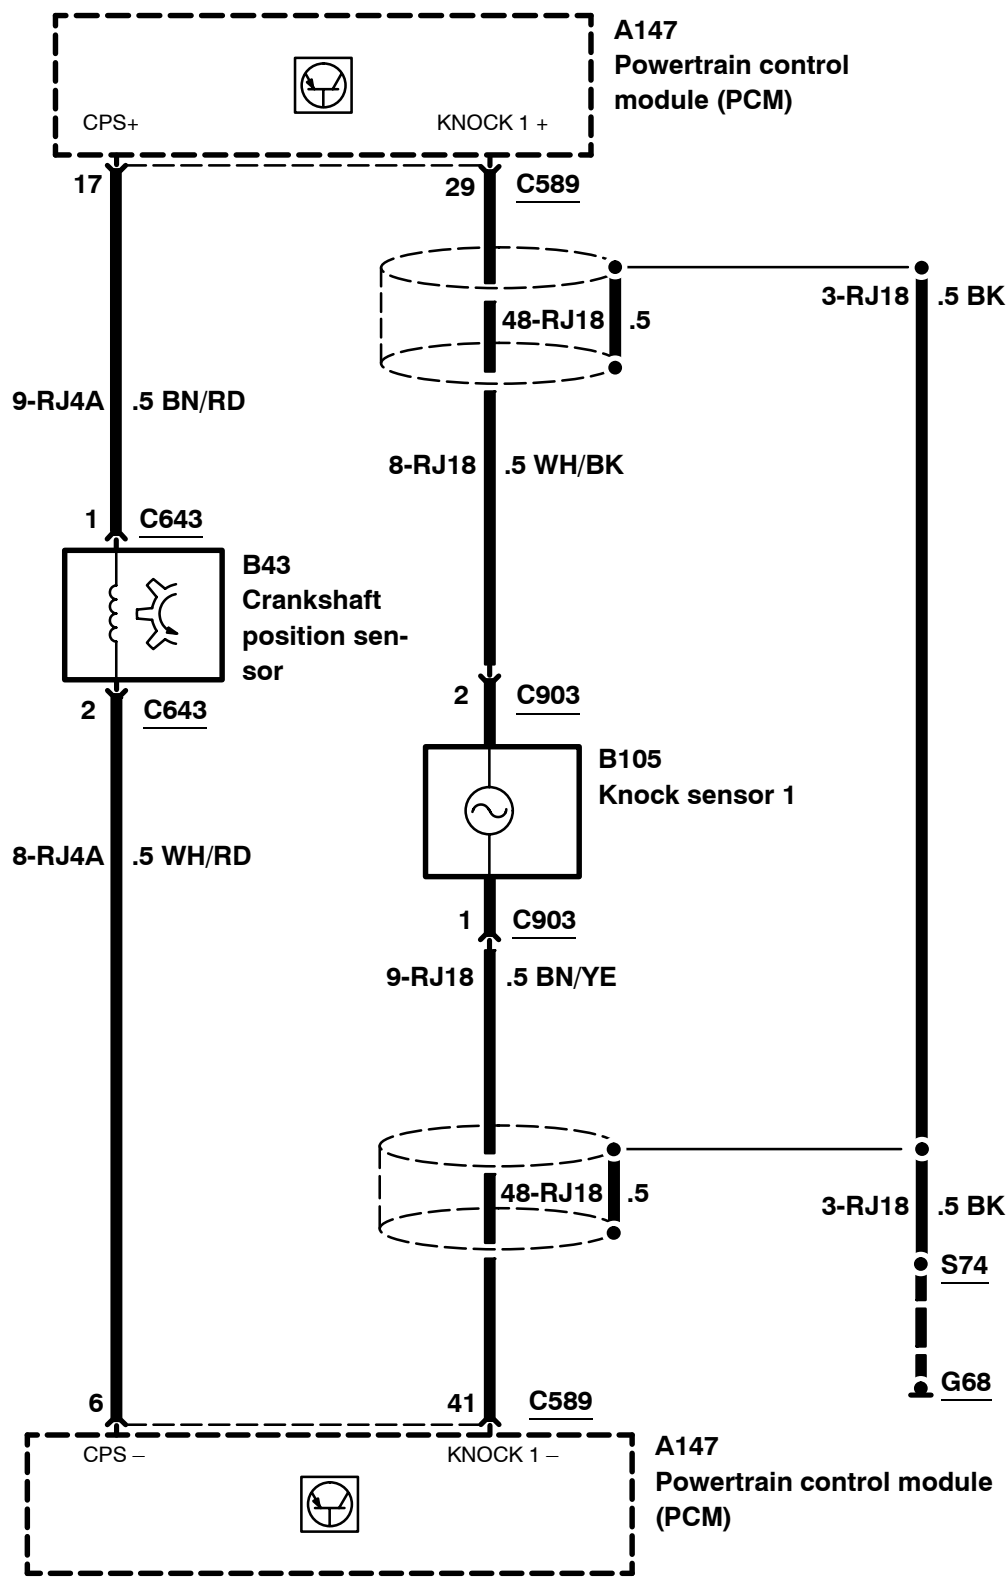


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel, manual trans-
mission (MPS6), with coated diesel particulate filter

02/2008
303-14C-00-11
2008.25
Focus

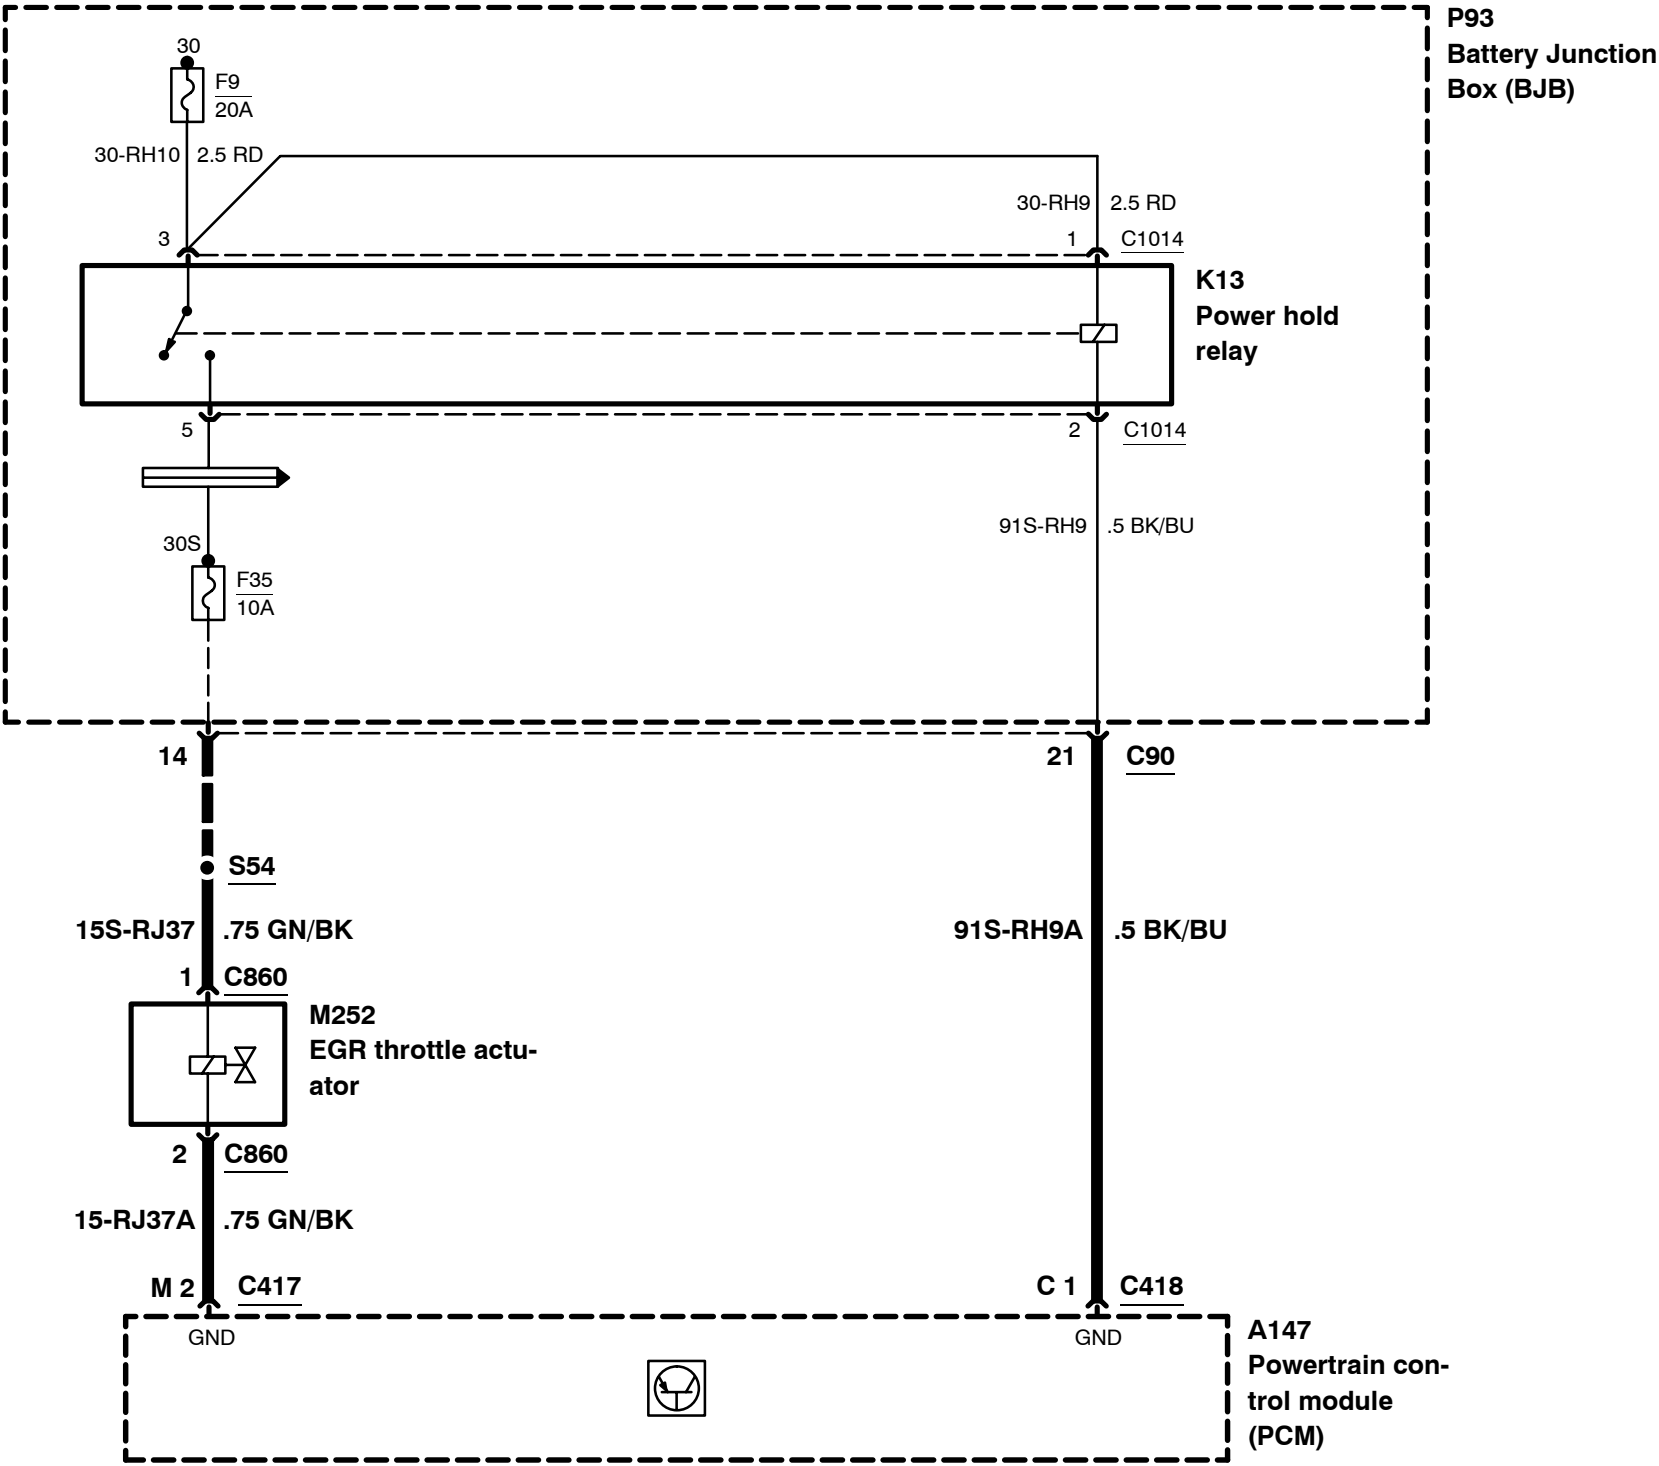


Speakers – LHD, with Sanyo radio

02/2008
415-03-00-3
2008.25
Focus

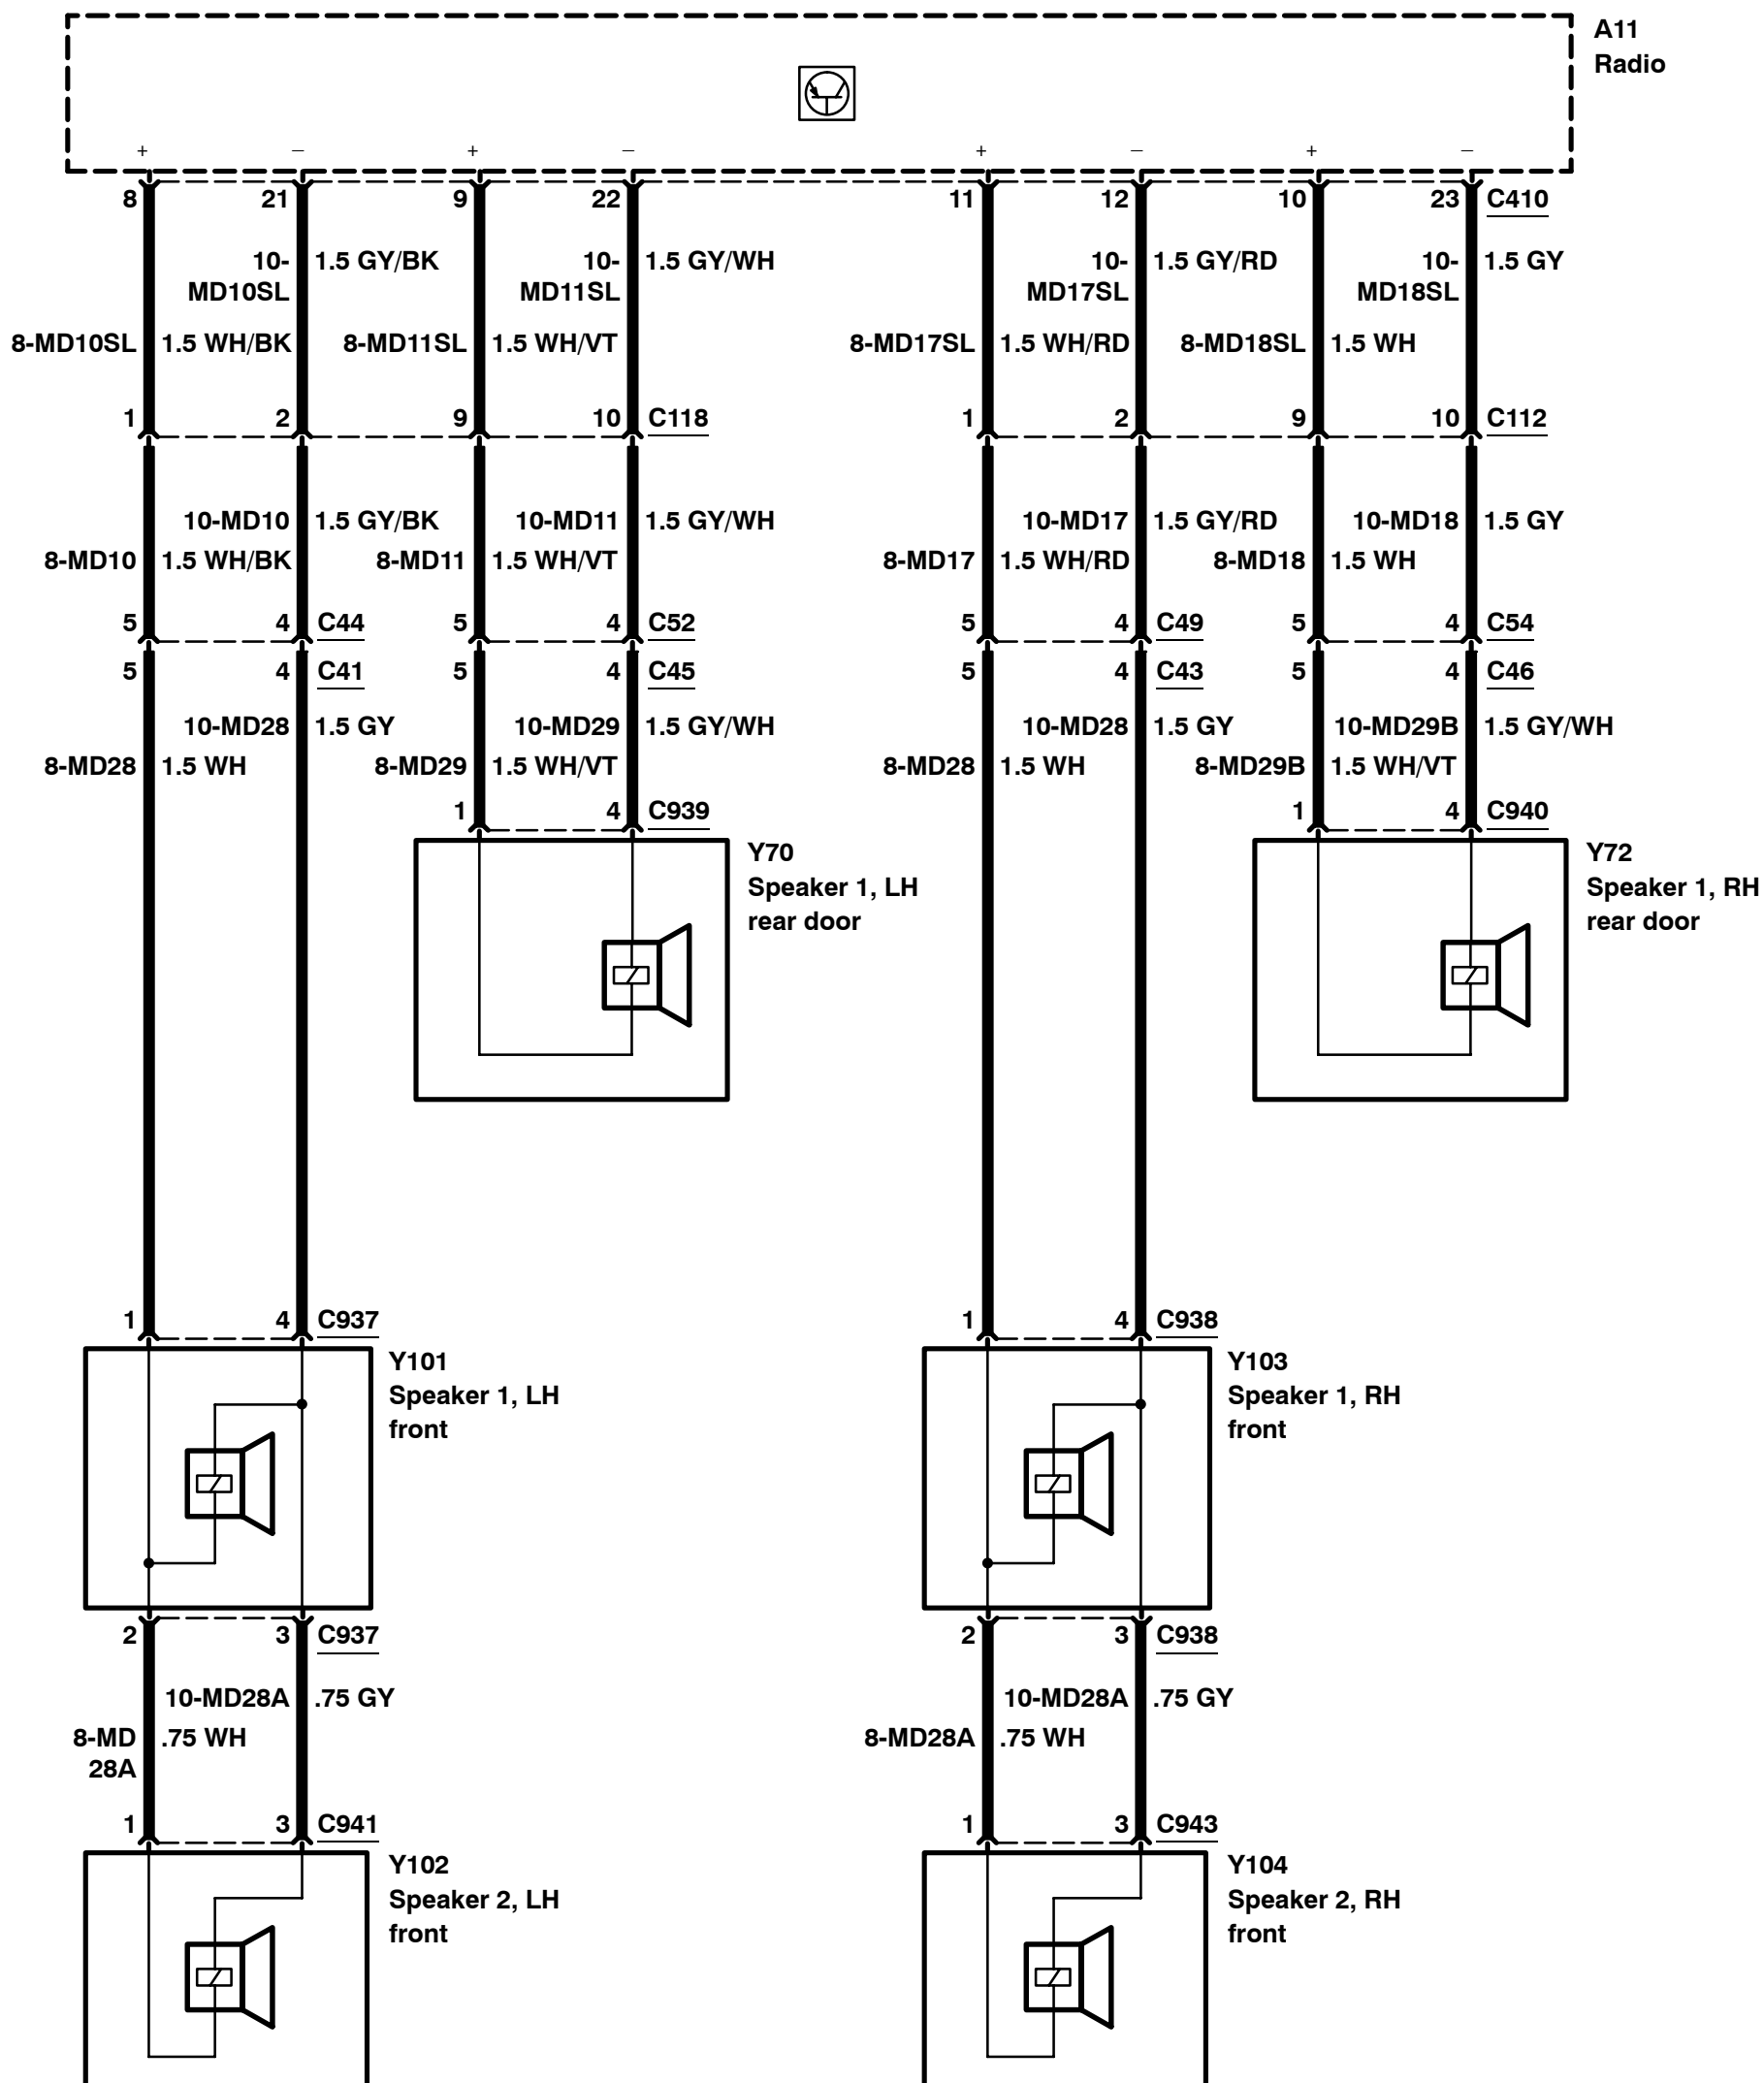

Glass, Frames and Mechanisms – LHD, with front and rear power windows, before model year 2009

02/2008
501-11-00-4
2008.25
Focus

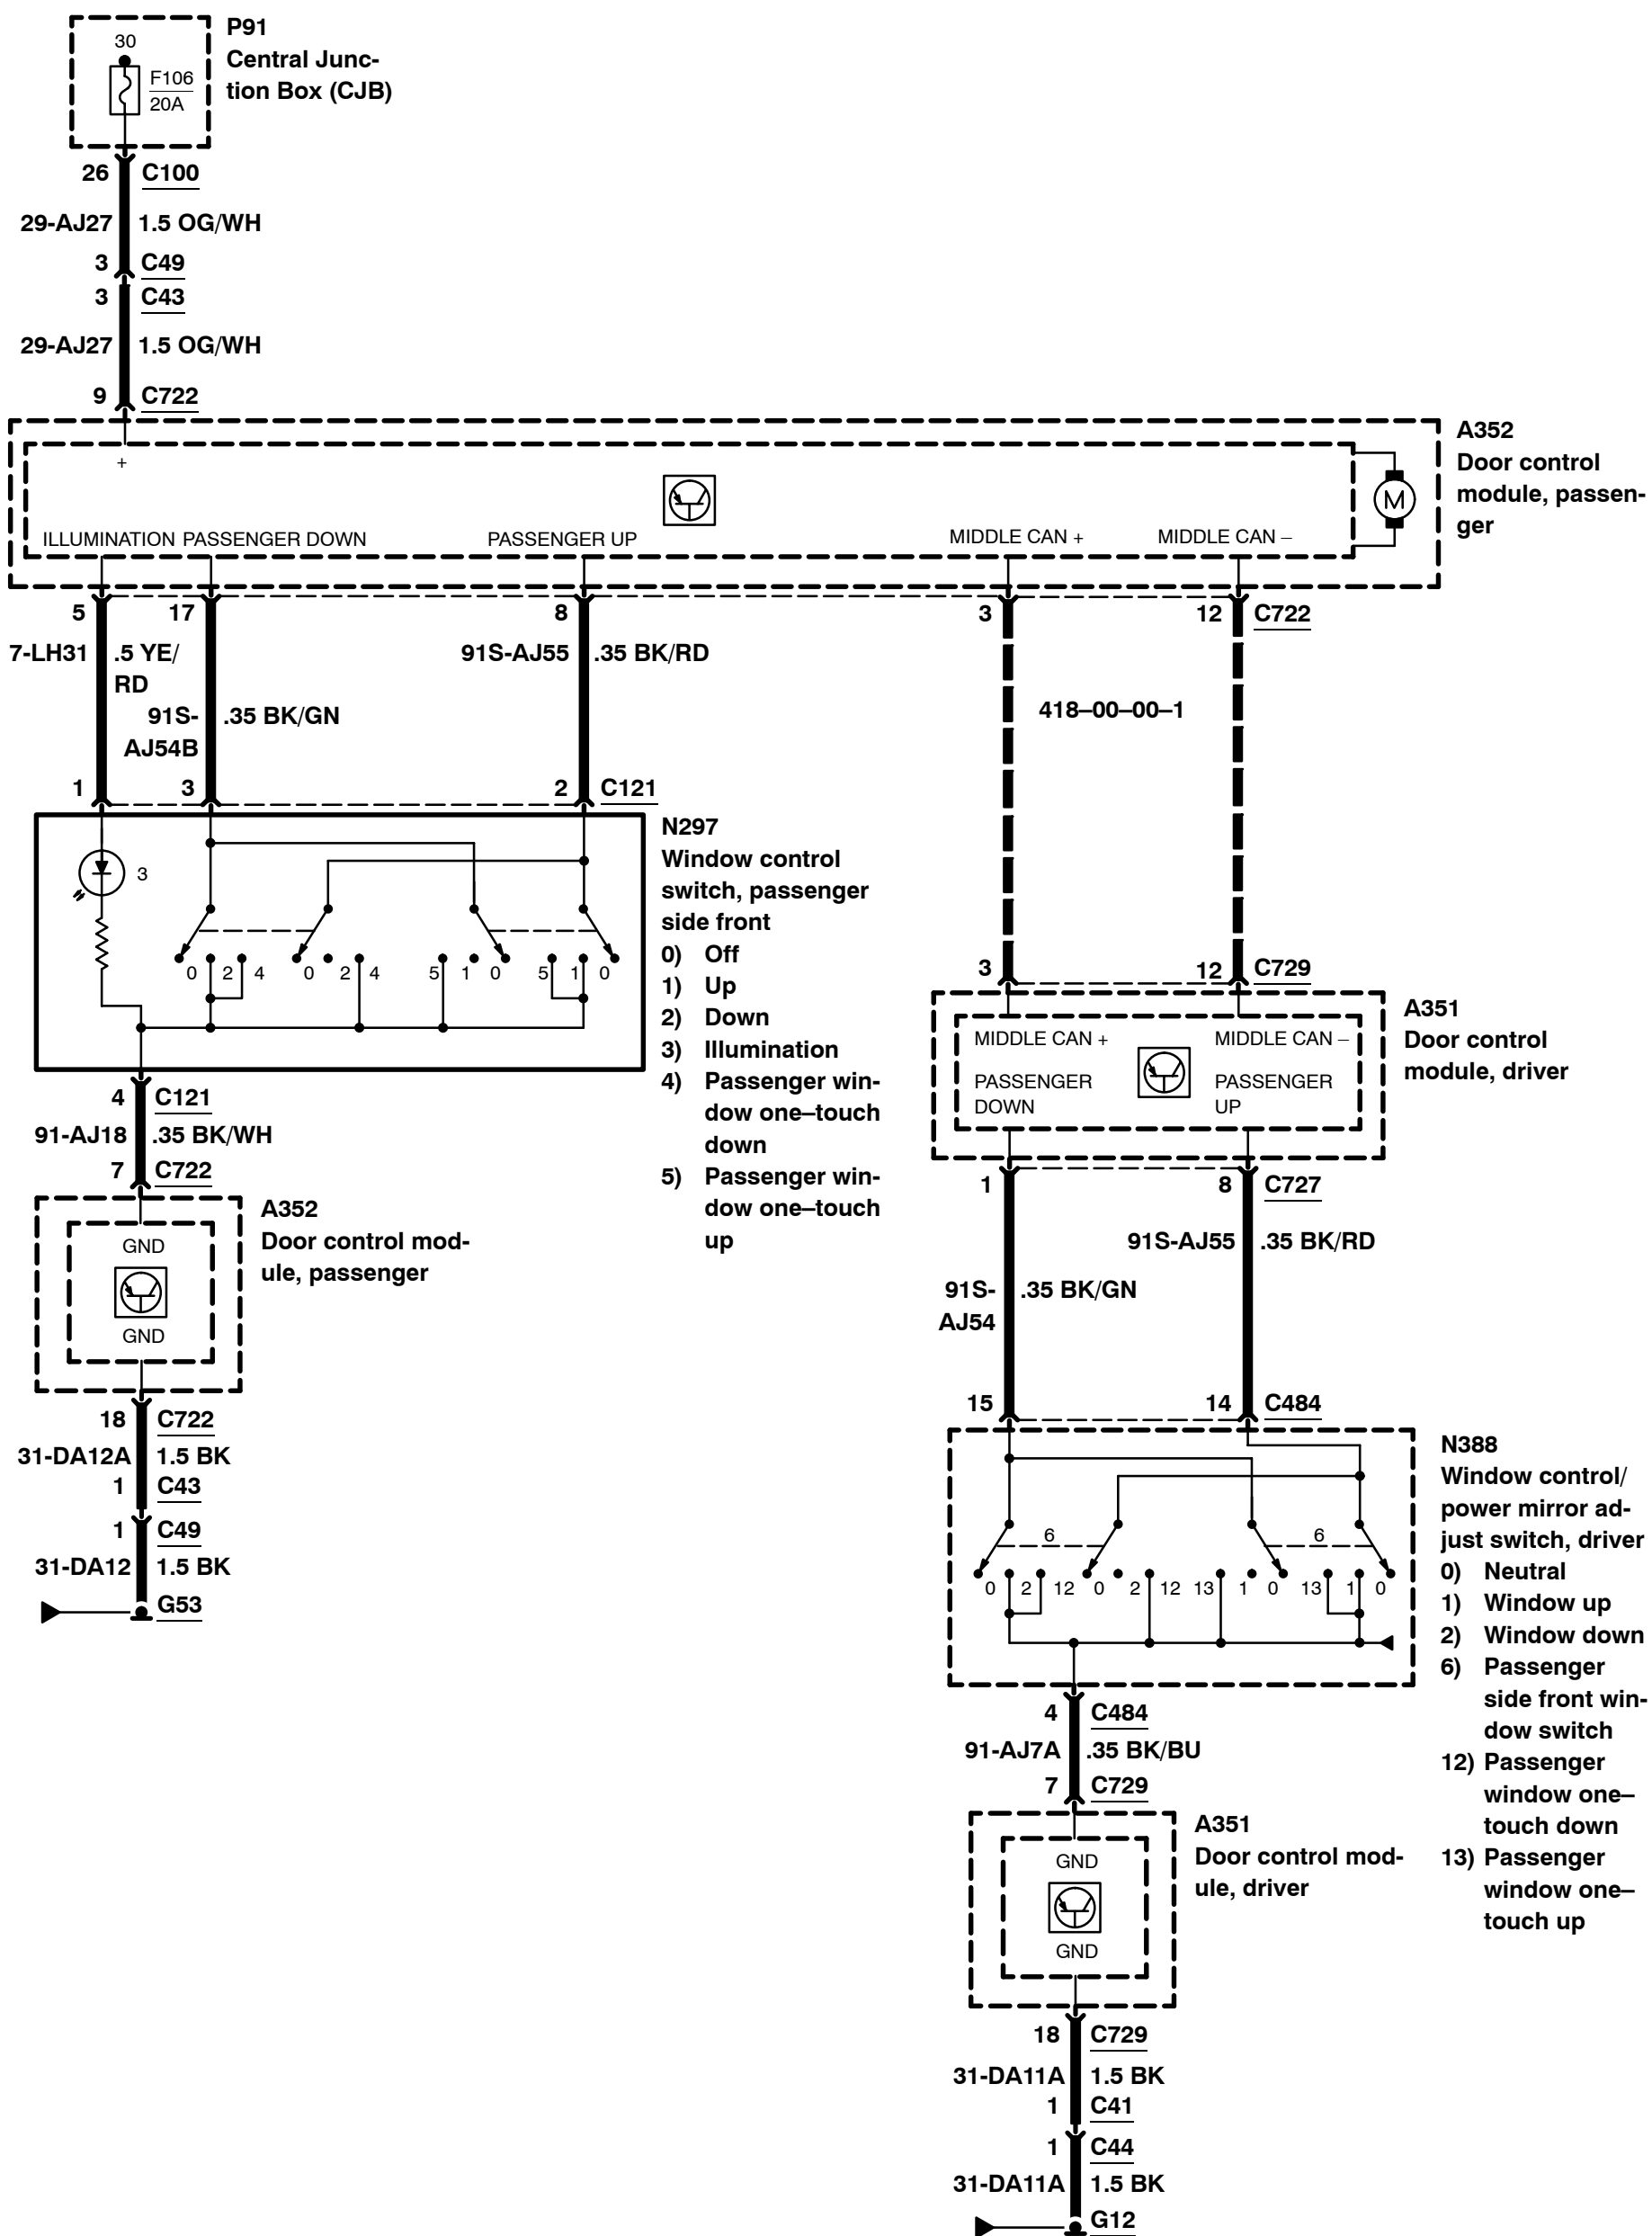

Fuse and Relay Information


02/2008
700-01-00-8
2008.25
Focus

Central Junction Box (CJB)

		Fuse number																
		118	119	120	121	122	123	124	125	126	127	129	131	132	133	134	135	136
Group	Description	20A	25A	20A	20A	10A	7.5A	7.5A	7.5A	20A	25A	20A	15A	15A	25A	20A	20A	15A
501-09-00	Rear View Mirrors															●		
501-10-00	Seating																	
501-11-00	Glass, Frames and Mechanisms	●		●							●				●	●		
501-12-00	Instrument Panel and Console																	
501-14-00	Handles, Locks, Latches and Entry Systems	●		●											●	●		
501-16-00	Wipers and Washers											●	●					●
501-17-00	Roof Opening Panel																	
501-20A-00	Safety Belt System					●												
501-20B-00	Supplemental Restraint System					●												
		118	119	120	121	122	123	124	125	126	127	129	131	132	133	134	135	136
		20A	25A	20A	20A	10A	7.5A	7.5A	7.5A	20A	25A	20A	15A	15A	25A	20A	20A	15A


Fuse Details – F31, except 1.6L (Z6)

02/2008
700-03-00-20
2008.25
Focus

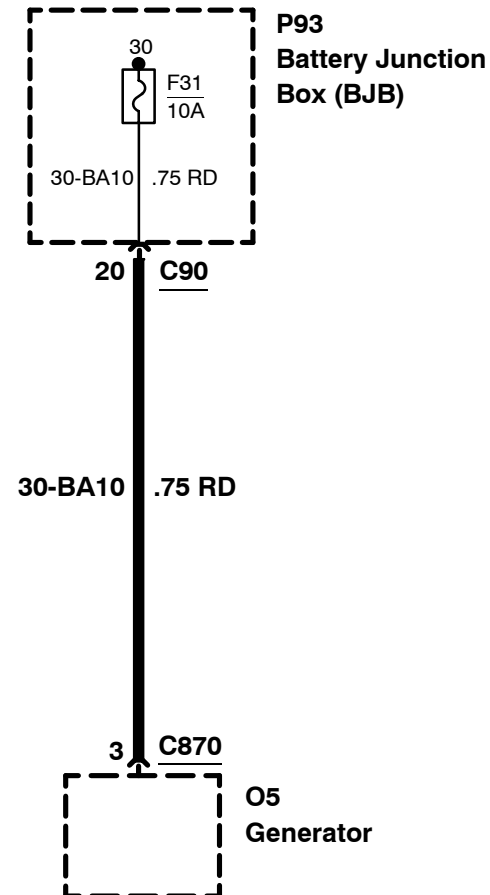


Ground Distribution – G31

02/2008
700-04-00-8
2008.25
Focus

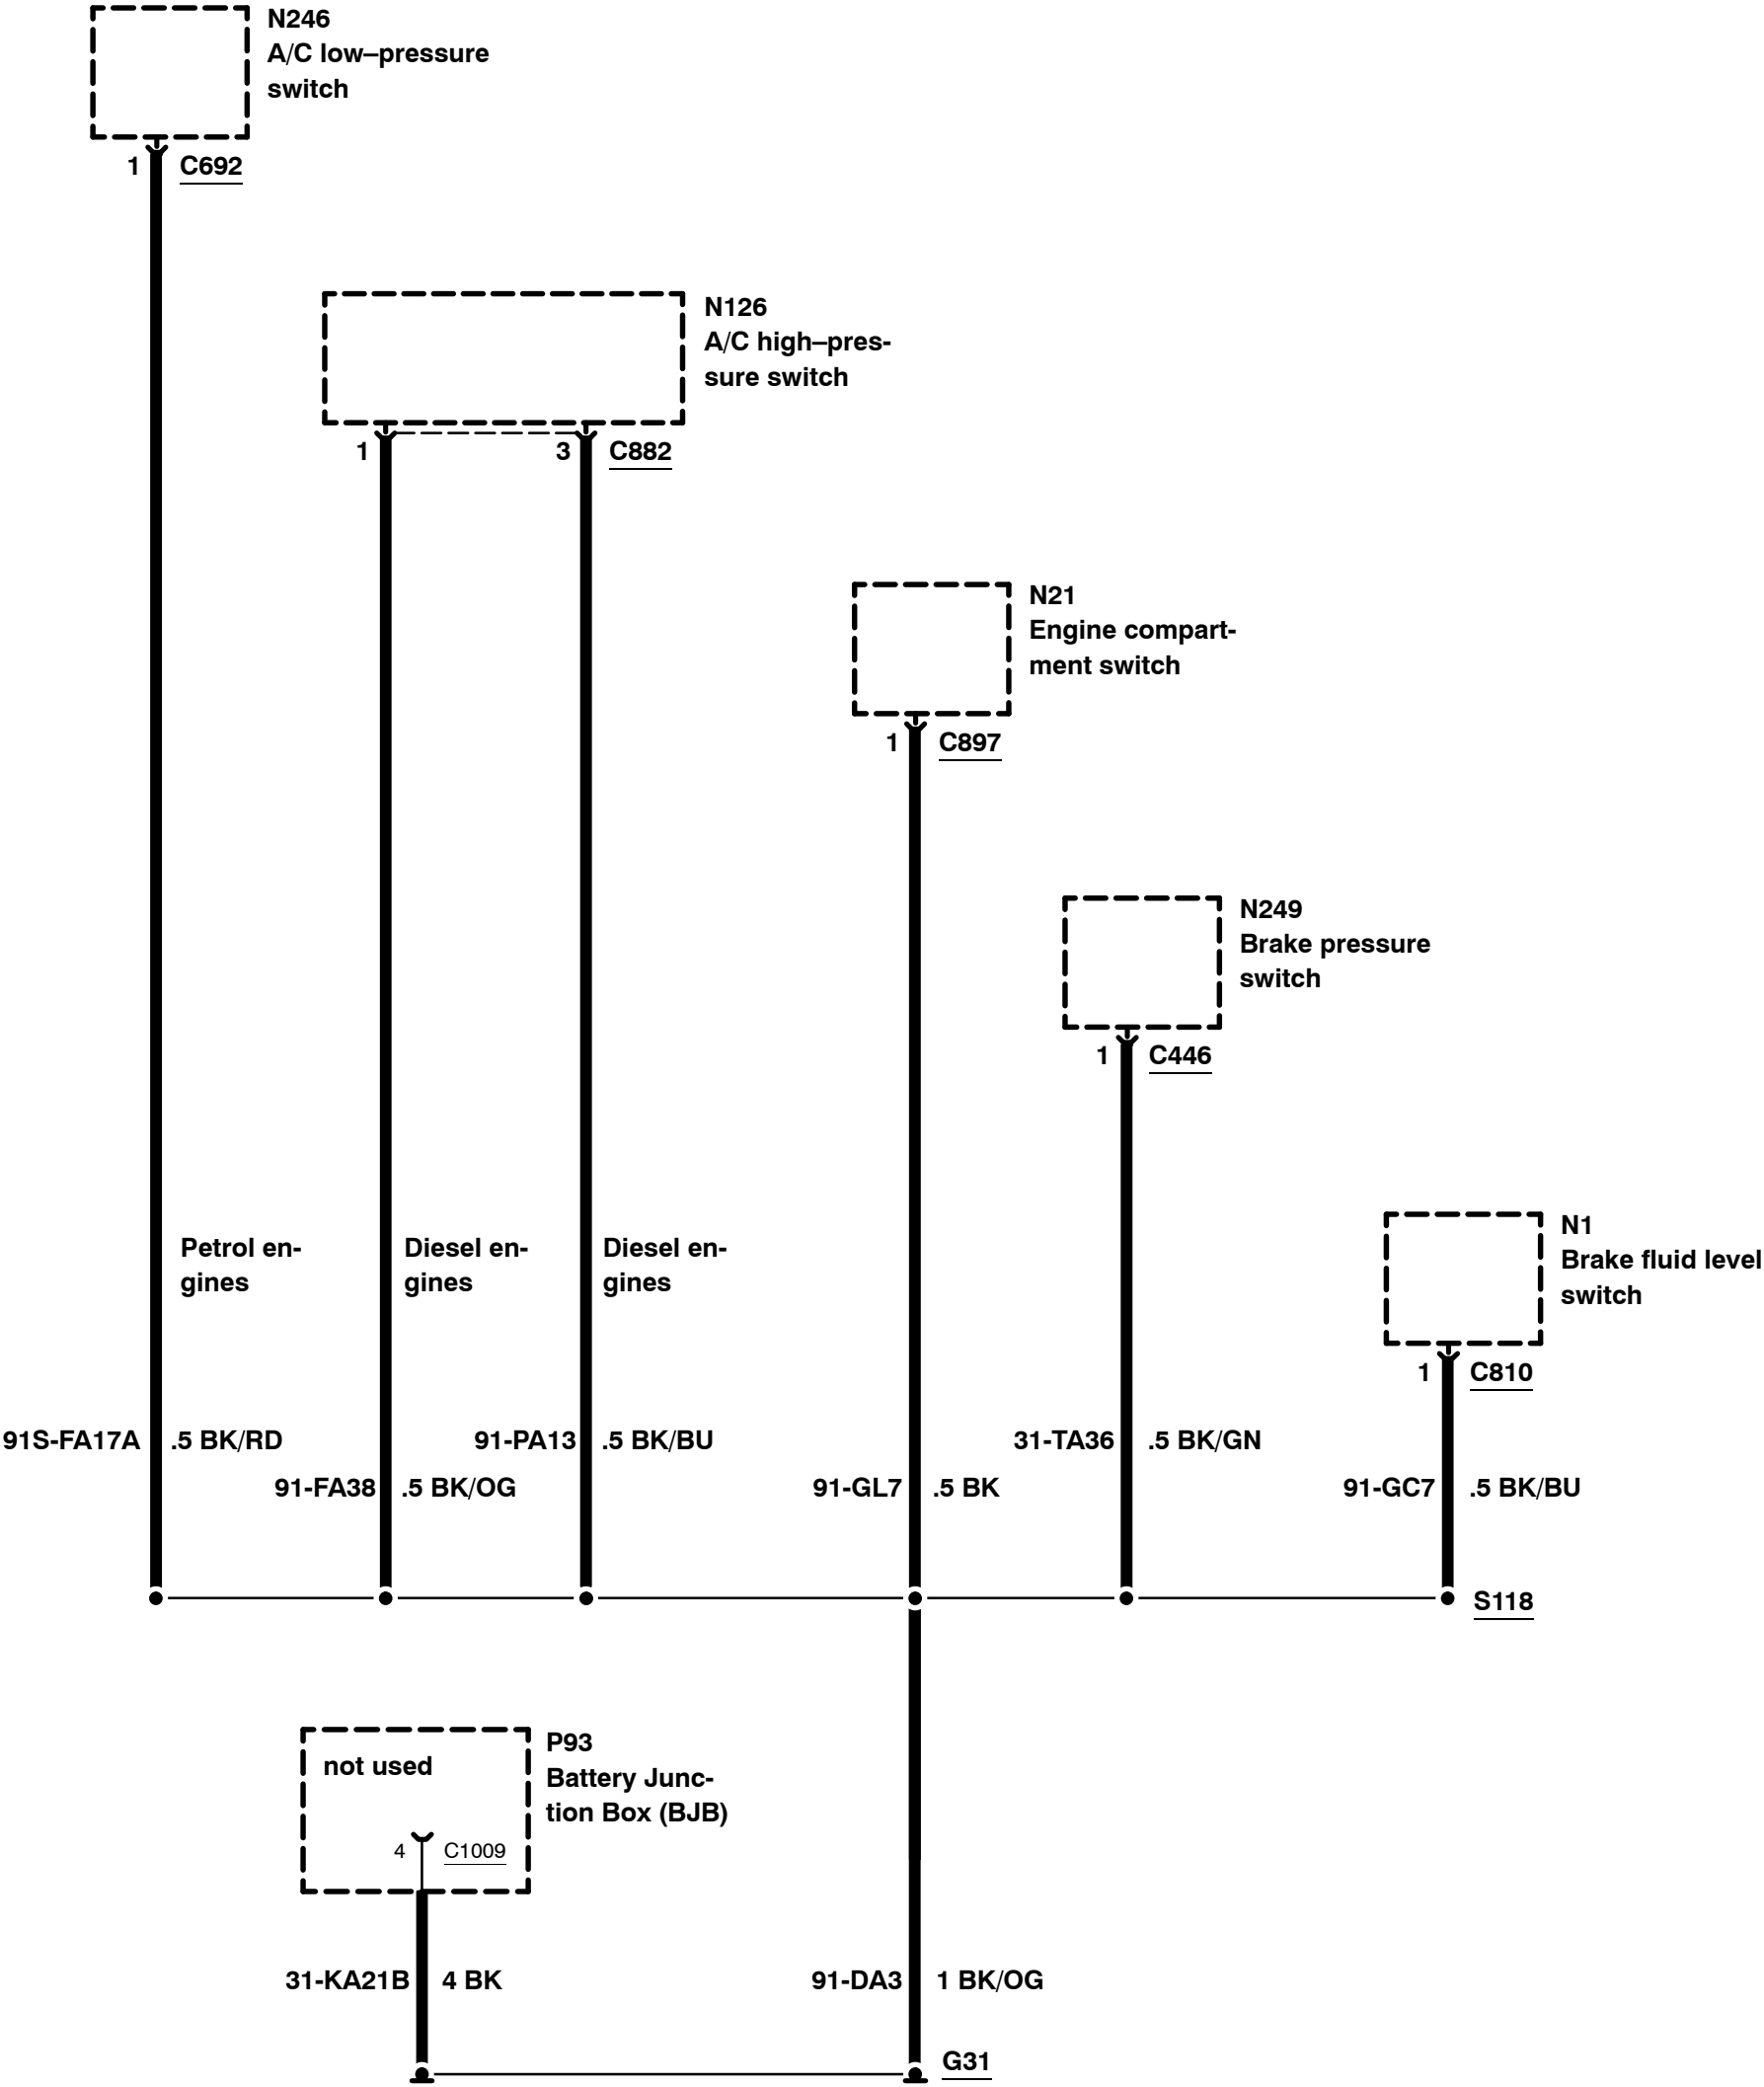


Components**Section 700-06-00**

	Location	Page/coordinates
Y101	Speaker 1, LH front	
	left-hand-drive, Location	44 – B 2
Y101	Speaker 1, LH front	
	right-hand-drive, Location	44 – B 2
Y102	Speaker 2, LH front	
	left-hand-drive, Location	44 – B 5
Y102	Speaker 2, LH front	
	right-hand-drive, Location	44 – B 5
Y103	Speaker 1, RH front	
	left-hand-drive, Location	44 – B 1
Y103	Speaker 1, RH front	
	right-hand-drive, Location	44 – B 1
Y104	Speaker 2, RH front	
	left-hand-drive, Location	44 – B 4
Y104	Speaker 2, RH front	
	right-hand-drive, Location	44 – B 4
Y108	Fuel injector 1	
	Location	12 – B 5
Y108	Fuel injector 1	
	Location	14 – E 5
Y108	Fuel injector 1	
	engine	
Y109	Fuel injector 2	
	Location	12 – C 5
Y109	Fuel injector 2	
	Location	14 – D 5
Y109	Fuel injector 2	
	engine	
Y110	Fuel injector 3	
	Location	12 – C 5
Y110	Fuel injector 3	
	Location	14 – D 5
Y110	Fuel injector 3	
	engine	
Y111	Fuel injector 4	
	Location	12 – D 5
Y111	Fuel injector 4	
	Location	14 – C 5
Y111	Fuel injector 4	
	engine	
Y165	Fuel metering valve	
	engine	
Y185	Intercooler bypass solenoid valve	
	Location	14 – A 2
Y191	Oil control valve	
	engine	

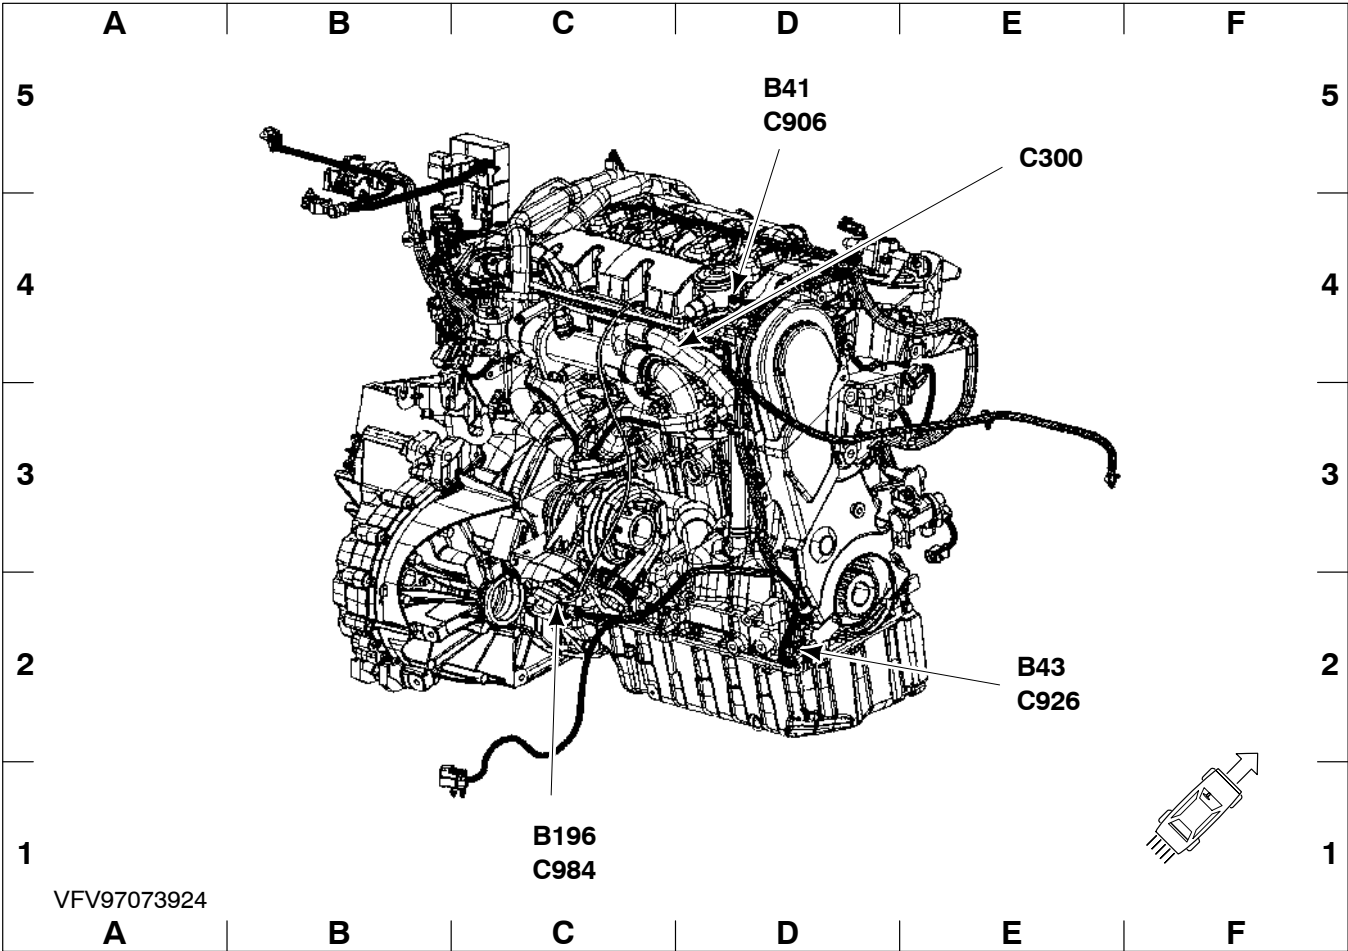

engine, rear, 2.0L Duratorq–TDCi (DW) Diesel

B41 .. Camshaft position sensor	D 5	C906	D 5
B43 .. Crankshaft position sensor	E 2	C926	E 2
B196 . Turbo geometry position sensor	C 1	C984	C 1
C300	E 5		

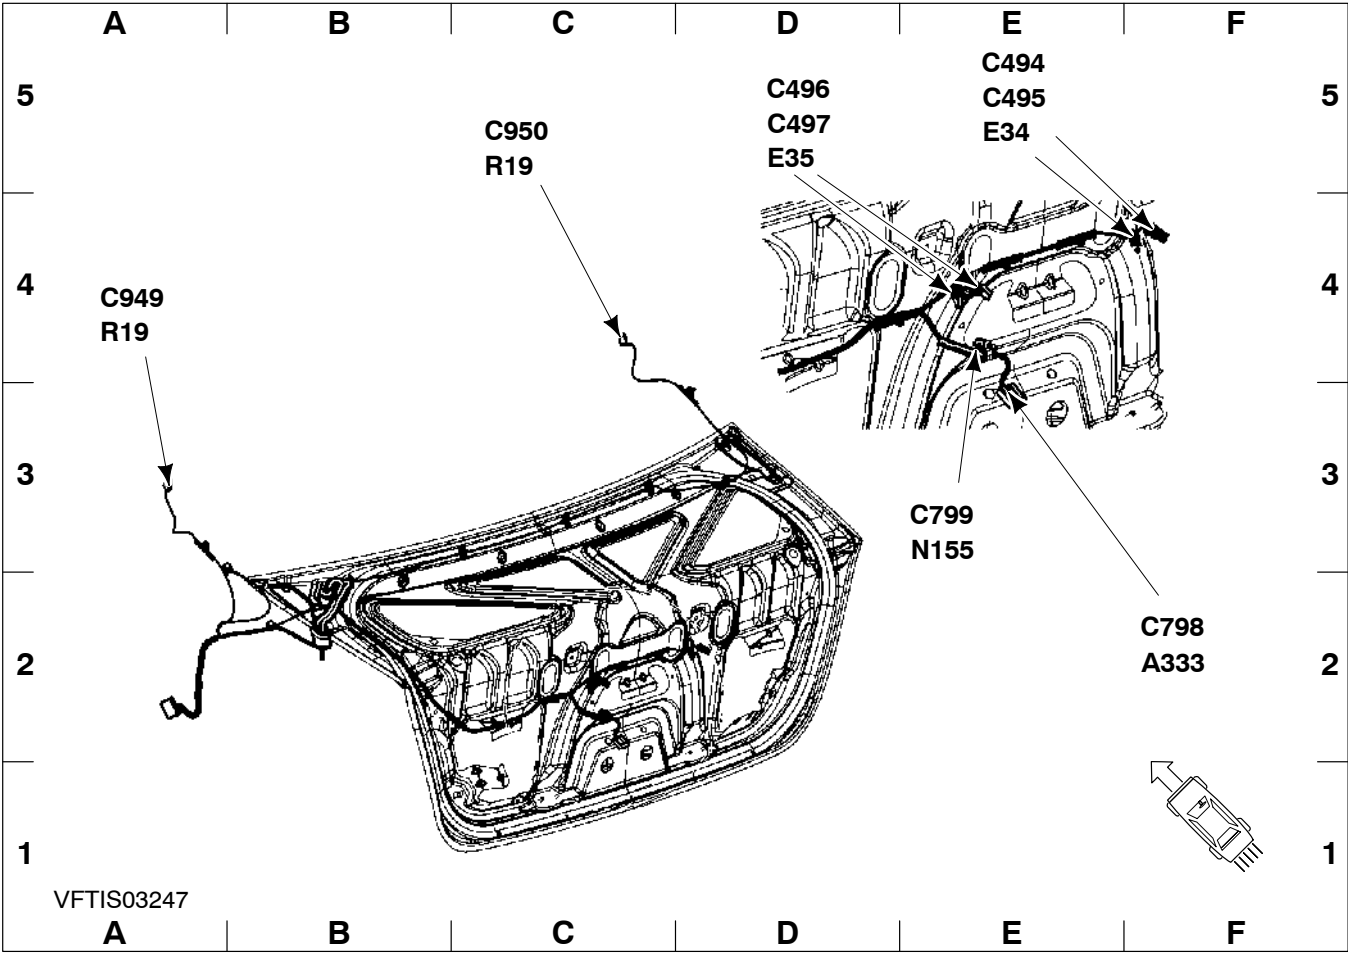

luggage compartment lid, 4-door model

A333 . Door lock unit, liftgate	F 2	C950	C 5
C494	E 5	E34 . . Licence plate lamp, LH side	E 5
C496	D 5	E35 . . Licence plate lamp, RH side	D 5
C497	D 5	N155 . Liftgate/luggage compartment lid release	
C495	E 5	switch	E 3
C798	F 2	R19 . . Rear window heater	A 4
C799	E 3	R19 . . Rear window heater	C 5
C949	A 4		

F94002

C414

12A690

(1) 15-TA55A (GN/BK)

(2) 15-TA55B (GN/BK)

(3) 91-TA55A (BK/GN)

(4) 91-TA55B (BK/GN)

(5)

(6) 15S-TA17 (GN/OG)

15S-TA17A (GN/OG)

(7) 15S-TA64 (GN/OG)

15S-TA64A (GN/OG)

(8) 5-EC7E (BU/RD)

5-EC7F (BU/RD)

(9) 4-EC7E (GY/RD)

4-EC7F (GY/RD)

(10)

(11) 30-TA55 (RD)

30-TA55A (RD)

(12) 15S-TA23 (GN/YE)

15S-TA23A (GN/YE)

(13) 15S-TA24 (GN/BU)

15S-TA24A (GN/BU)

(14) 9-TA36 (BN/GN)

9-TA36A (BN/GN)

(15)

(16)

(17)

(18)

(19)

(20)

(21)

(22)

(23)

(24)

(25)

(26)

(27)

(28)

(29) 15S-TA65 (GN/WH)

15S-TA65A (GN/WH)

(30)

(31)

(32)

(33) 91-TA55 (BK/GN)

91-TA55D (BK/GN)

(34)

(35)

(36)

(37)

(38) 8-TA36 (WH/GN)

8-TA36A (WH/GN)

(39)

(40)

(41)

(42)

(43)

(44)

(45)

(46)

(47)

(48)

(49)

(50)

(51) 15S-TA63 (GN/BK)

15S-TA63A (GN/BK)

(52) 15S-TA39 (GN/RD)

15S-TA39A (GN/RD)

(53) 15S-TA38 (GN/BU)

15S-TA38A (GN/BU)

(54) 15S-TA40 (GN/BK)

15S-TA40A (GN/BK)

(55)

(56)

(57)

(58)

(59) 8-PF36 (WH/GN)

8-PF36A (WH/GN)

(60)

(61)

(62) 8-TA27 (WH/VT)

8-TA27A (WH/VT)

(63)

(64) 9-TA27 (BN/WH)

9-TA27A (BN/WH)

(65) 8-RJ29 (WH/BU)

8-RJ29A (WH/BU)

8-RJ29B (WH/BU)

(66)

(67) 91S-LG45 (BK/GN)

91S-LG45A (BK/GN)

(68)

(69)

(70)

(71)

(72)

(73)

(74) 15S-TA37 (GN/YE)

15S-TA37A (GN/YE)

(75)

(76)

(77)

(78)

(79)

(80)

(81) 10-PF36A (GY/OG)

10-PF36 (GY/OG)

(82)

(83) 91-TA55C (BK/GN)

(84)

(85)

(86) 9-RJ29 (BN/BU)

9-RJ29A (BN/BU)

(87)

(88)

(89)

(90)

(91)

(92) 91S-TA17 (BK/RD)

91S-TA17A (BK/RD)

(93)

(94)

(95)

A318

Transmission control module (TCM)

02/2008

2008.25 Focus