

2011.0 Kuga

Wiring Diagrams

PAGE 1 OF 2

Table of Contents



GROUP 1 General Information

Service Information

General Information 100-00

GROUP 2 Chassis

Brake System

Parking Brake and Actuation 206-05
 Hydraulic Brake Actuation 206-06
 Power Brake Actuation 206-07
 Anti-Lock Control 206-09A
 Anti-Lock Control - Stability Assist 206-09B
 Anti-Lock Brake System (ABS) and Stability Control 206-09C

Steering System

Power Steering 211-02
 Steering Column Switches 211-05

GROUP 3 Powertrain

Engine

Engine Cooling 303-03
 Fuel Charging and Controls - 2.5L Duratec (147kW/200PS) - VI5 303-04A
 Fuel Charging and Controls - Turbocharger - 2.5L Duratec (147kW/200PS) - VI5 303-04B
 Fuel Charging and Controls - 2.0L Duratorq-TDCi (100kW/136PS) - DW, Emission Requirements: Stage IV 303-04C
 Fuel Charging and Controls - 2.0L Duratorq-TDCi (100kW/136PS) - DW/2.0L Duratorq-TDCi (103kW/140PS) - DW/2.0L 303-04D

Duratorq-TDCi (120kW/163PS) - DW, Emission Requirements: Stage V 303-04D
 Fuel Charging and Controls - Turbocharger - 2.0L Duratorq-TDCi (100kW/136PS) - DW, Emission Requirements: Stage IV 303-04E
 Fuel Charging and Controls - Turbocharger - 2.0L Duratorq-TDCi (100kW/136PS) - DW/2.0L Duratorq-TDCi (103kW/140PS) - DW/2.0L Duratorq-TDCi (120kW/163PS) - DW, Emission Requirements: Stage V 303-04F
 Starting System - 2.5L Duratec (147kW/200PS) - VI5 303-06A
 Starting System - 2.0L Duratorq-TDCi (100kW/136PS) - DW, Emission Requirements: Stage IV 303-06B
 Starting System - 2.0L Duratorq-TDCi (100kW/136PS) - DW/2.0L Duratorq-TDCi (103kW/140PS) - DW/2.0L Duratorq-TDCi (120kW/163PS) - DW, Emission Requirements: Stage V 303-06C
 Engine Ignition - 2.5L Duratec (147kW/200PS) - VI5 303-07A
 Glow Plug System - 2.0L Duratorq-TDCi (100kW/136PS) - DW, Emission Requirements: Stage IV 303-07B
 Engine Emission Control - 2.5L Duratec (147kW/200PS) - VI5 303-08A
 Engine Emission Control - 2.0L Duratorq-TDCi (100kW/136PS) - DW, Emission Requirements: Stage IV, 2.0L Duratorq-TDCi (DW) Diesel 303-08B
 Evaporative Emissions 303-13
 Electronic Engine Controls - 2.5L Duratec (147kW/200PS) - VI5 303-14A

PAGE 2 OF 2

Electronic Engine Controls - 2.0L
Duratorq-TDCi (100kW/136PS) - DW,
Emission Requirements: Stage
IV 303-14B

Electronic Engine Controls - 2.0L
Duratorq-TDCi (100kW/136PS) -
DW/2.0L Duratorq-TDCi
(103kW/140PS) - DW/2.0L
Duratorq-TDCi (120kW/163PS) - DW,
Emission Requirements: Stage
V 303-14C

Automatic Transmission/Transaxle

Automatic Transmission/Transaxle -
Vehicles With: 5-Speed Automatic
Transaxle - AW55 AWD 307-01A

Automatic Transmission/Transaxle -
Vehicles With: 6-Speed Automatic
Transaxle - 6DCT450, LHD
4WD/RHD 4WD 307-01B

Automatic Transmission/Transaxle
External Controls 307-05

Manual Transmission/Transaxle, Clutch and Transfer Case

Four-Wheel Drive Systems 308-07

Exhaust System

Exhaust System - 2.0L Duratorq-TDCi
(DW) Diesel 309-00

Fuel System - General Information

Fuel Tank and Lines 310-01
Speed Control 310-03

GROUP 4 Electrical

Climate Control System

Climate Control 412-01
Auxiliary Climate Control 412-02

Instrumentation and Warning Systems

Instrument Cluster 413-01
Horn 413-06
Warning Devices 413-09
Parking Aid 413-13

Battery and Charging System

Battery, Mounting and Cables 414-01

Generator and Regulator 414-02

Information and Entertainment Systems

Information and Entertainment
System 415-01

Lighting

Exterior Lighting 417-01
Interior Lighting 417-02
Daytime Running Lamps
(DRL) 417-04

Electrical Distribution

Module Communications
Network 418-00

Electronic Feature Group

Anti-Theft - Active 419-01
Multifunction Electronic
Modules 419-10

GROUP 5 Body and Paint

Body and Paint

Rear View Mirrors 501-09
Seating 501-10
Glass, Frames and
Mechanisms 501-11
Instrument Panel and Console 501-12
Handles, Locks, Latches and Entry
Systems 501-14
Wipers and Washers 501-16
Safety Belt System 501-20A
Supplemental Restraint
System 501-20B

GROUP 7 General Wiring Information

Wiring Information

General Information 700-00
Fuse and Relay Information 700-01
Power Distribution 700-02
Grounding Strategy 700-03
Electrical Connectors 700-04

Index



DESCRIPTION AND OPERATION

System Code	Sub-system Code	Description
E	A	Diagnostic bus - audio communications protocol
E	B	Diagnostic bus - alternator
E	C	Diagnostic bus - CAN (controller area network)
E	D	Diagnostic bus - diagnostic connector link
E	E	Diagnostic bus - International Standards Organization
E	G	Diagnostic bus - SCP (standard corporate protocol)
F	A	Climate control module
F	B	Climate control module
F	C	Auxiliary climate control
G	A	Instrument cluster, information and message center, tachograph
G	B	Instrument cluster, information and message center, tachograph
G	C	Instrument cluster, information and message center, tachograph
G	E	Instrument cluster, information and message center, tachograph
G	G	Instrument cluster
G	H	Instrument cluster, information and message center, tachograph
G	J	Horn
G	K	Navigation
G	L	Anti-theft
G	M	Audible warnings and indicators
G	N	Parking aid
G	P	Vehicle emergency monitoring
H	A	Auxiliary climate control
H	B	Heated windshield, rear window, mirrors, washer jets
H	C	Heated seats
J	A	RCM (restraints control module), air bag module, side air curtain module
K	A	Windshield wipers and washers, rear window wiper and washer, headlamp washers
L	B	Interior lamps, courtesy lamps
L	C	Interior lamps, courtesy lamps



SECTION 303-06C Starting System — 2.0L Duratorq-TDCi (100kW/136PS)


- DW/2.0L Duratorq-TDCi (103kW/140PS) - DW/2.0L Duratorq-TDCi (120kW/163PS) - DW, Emission

Requirements: Stage V


VEHICLE APPLICATION: 2011.0 Kuga

CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Starting System — LHD 4WD/LHD FWD.....	303-06C-2
Starting System — RHD 4WD/RHD FWD.....	303-06C-4
ELECTRICAL CONNECTORS	
Starter Motor.....	303-06C-6


2011.0 Kuga (G1313078)

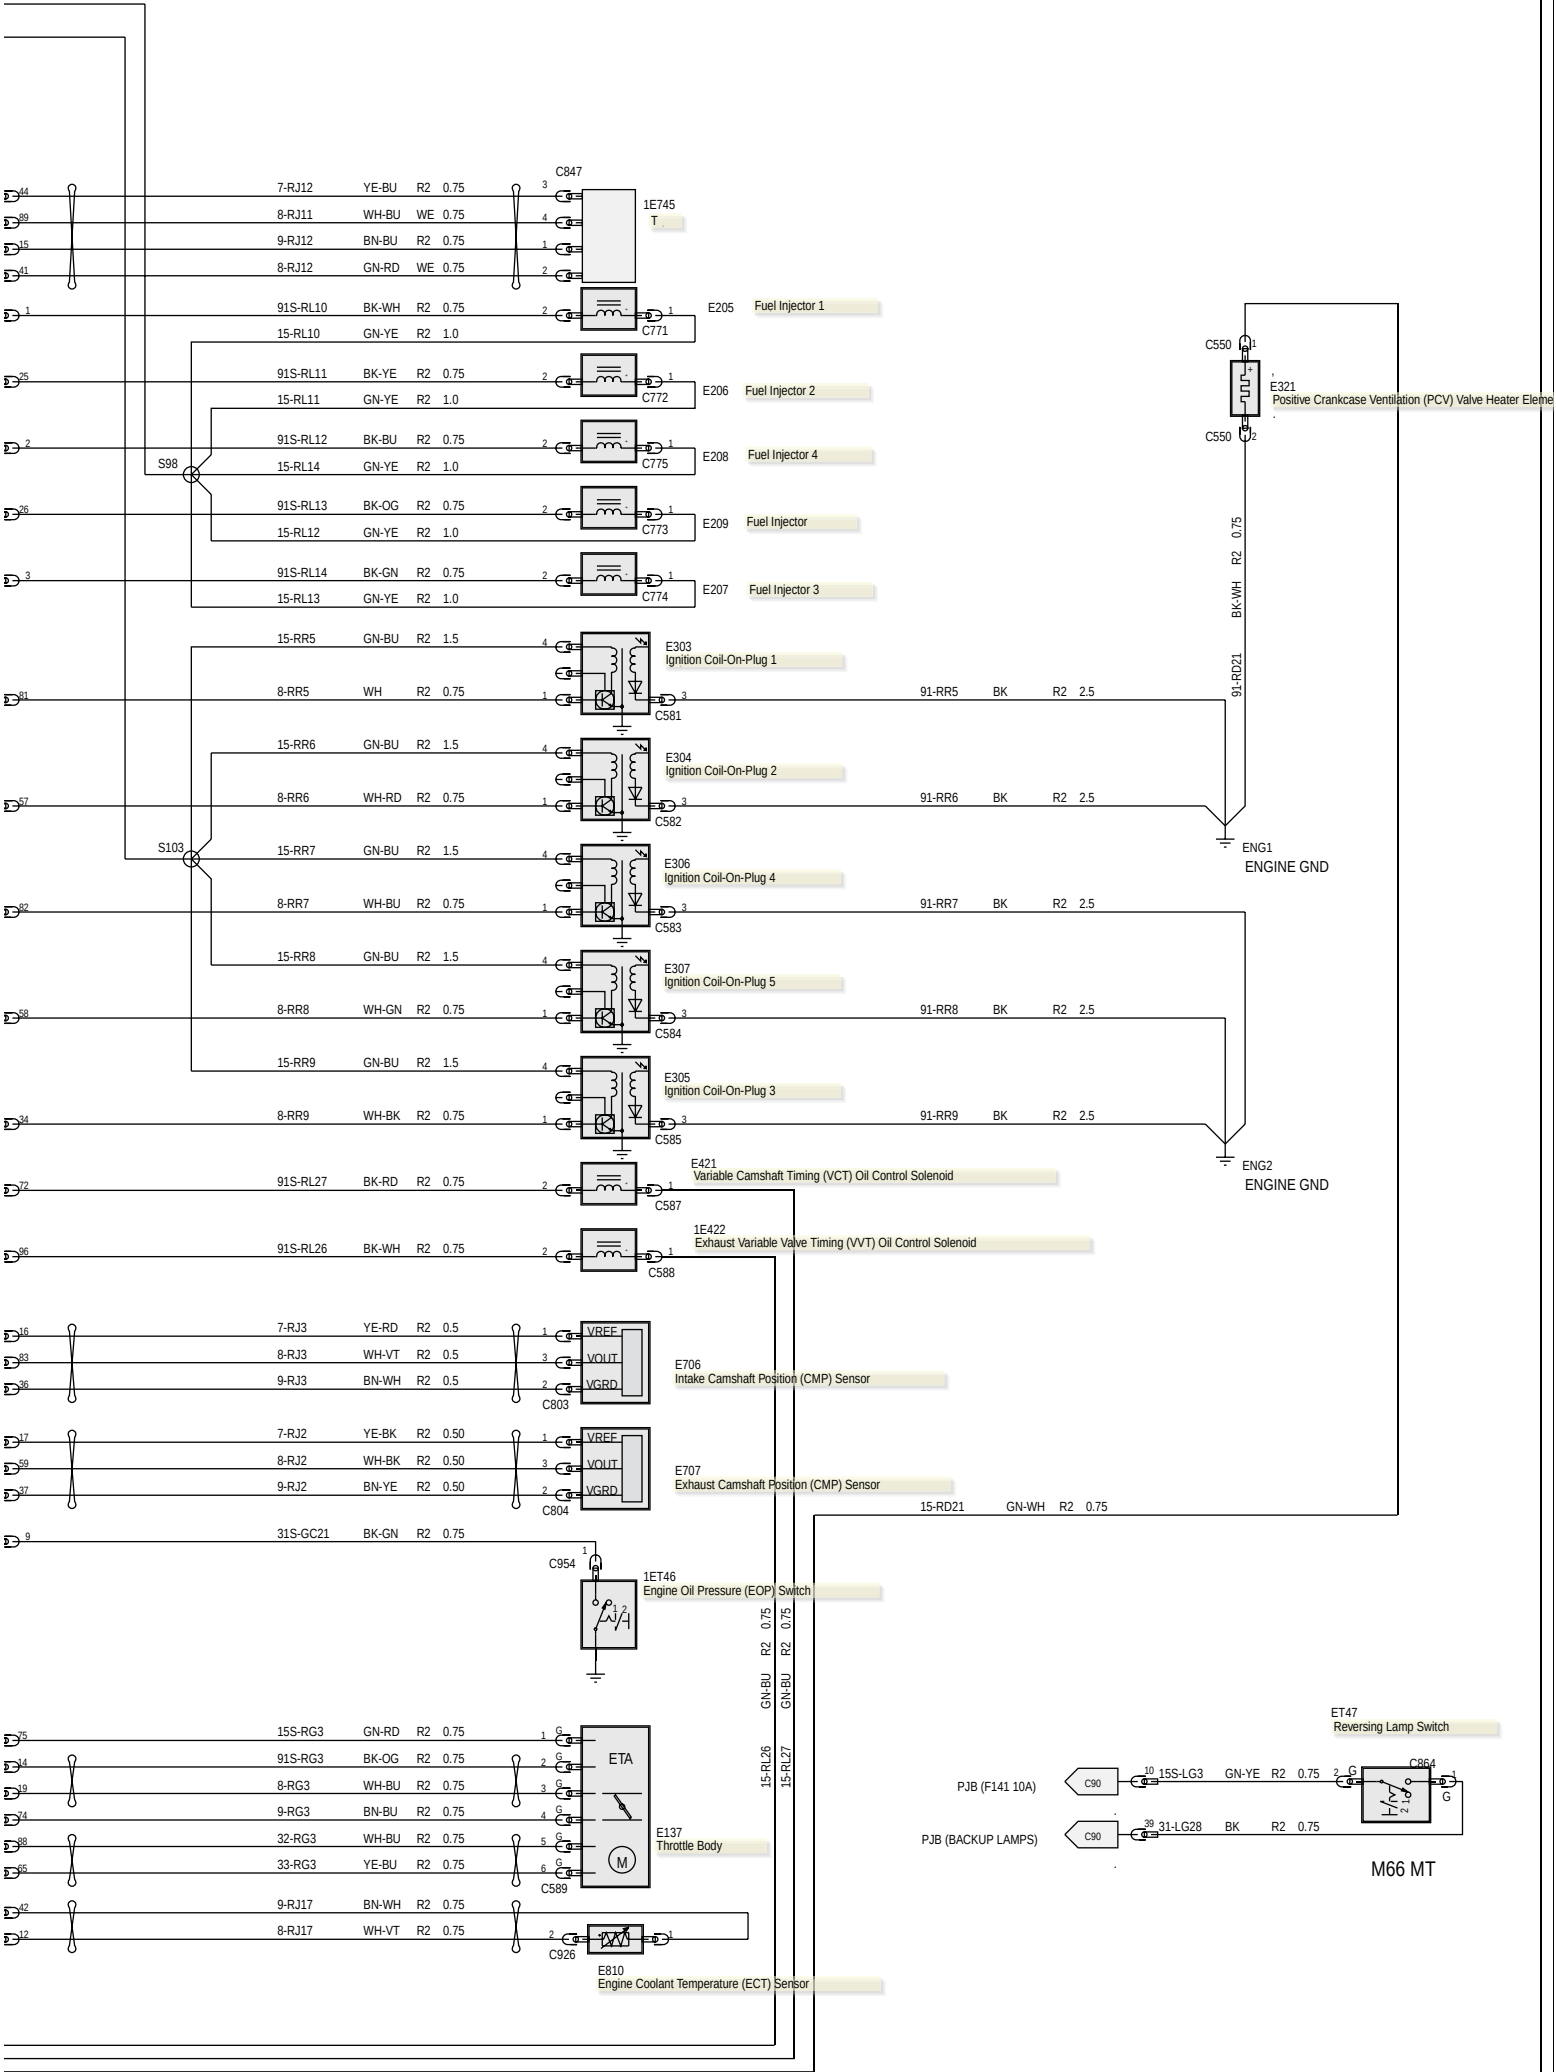


412-01-18 Climate Control—2.5L Duratec (147kW/200PS) - VI5, RHD 4WD, Vehicles With: Manual Temperature Control

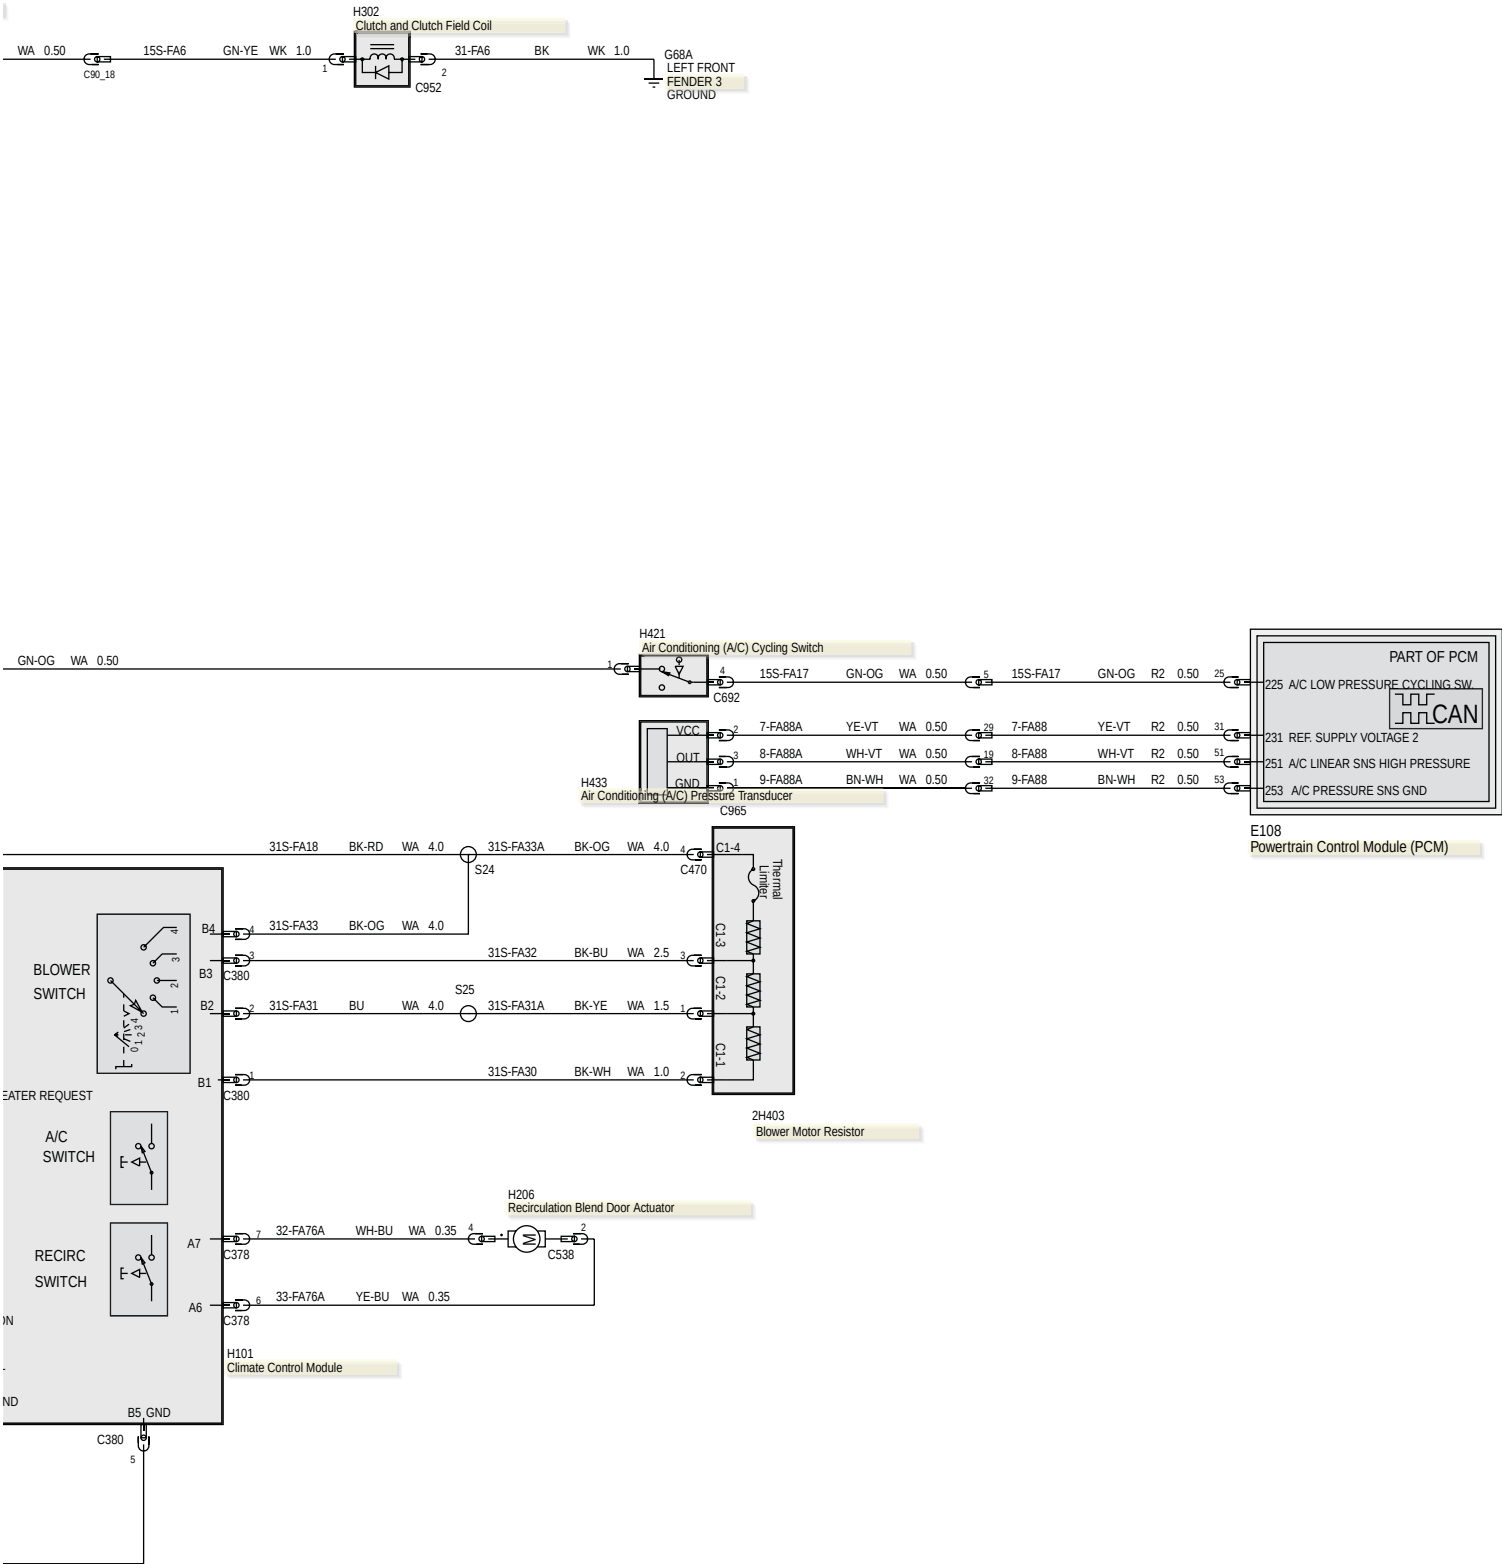


415-01-3 Audio System—Vehicles With: Bluetooth and Voice Control, Vehicles Without: Compact Disc (CD) Changer

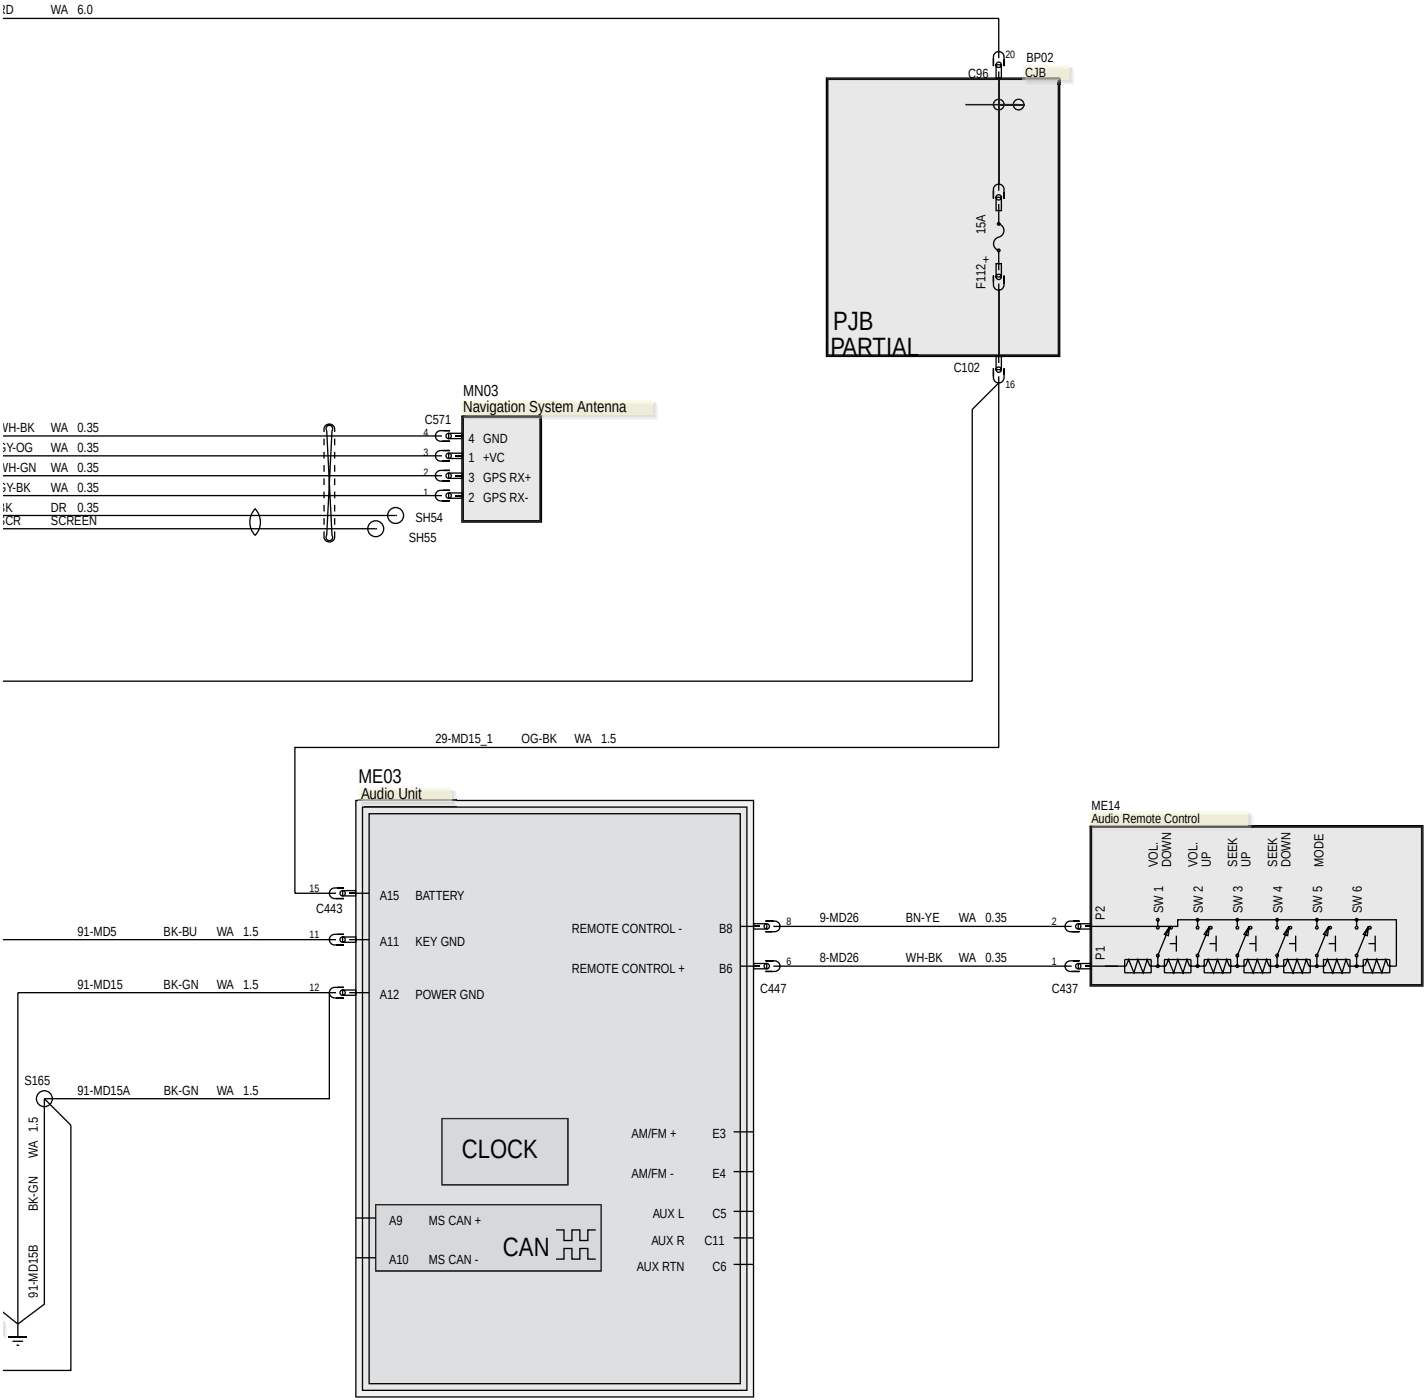


419-01-7 Anti-Theft Alarm System—LHD 4WD/LHD FWD, Vehicles Without: Anti-Theft Alarm Horn with Integral Battery

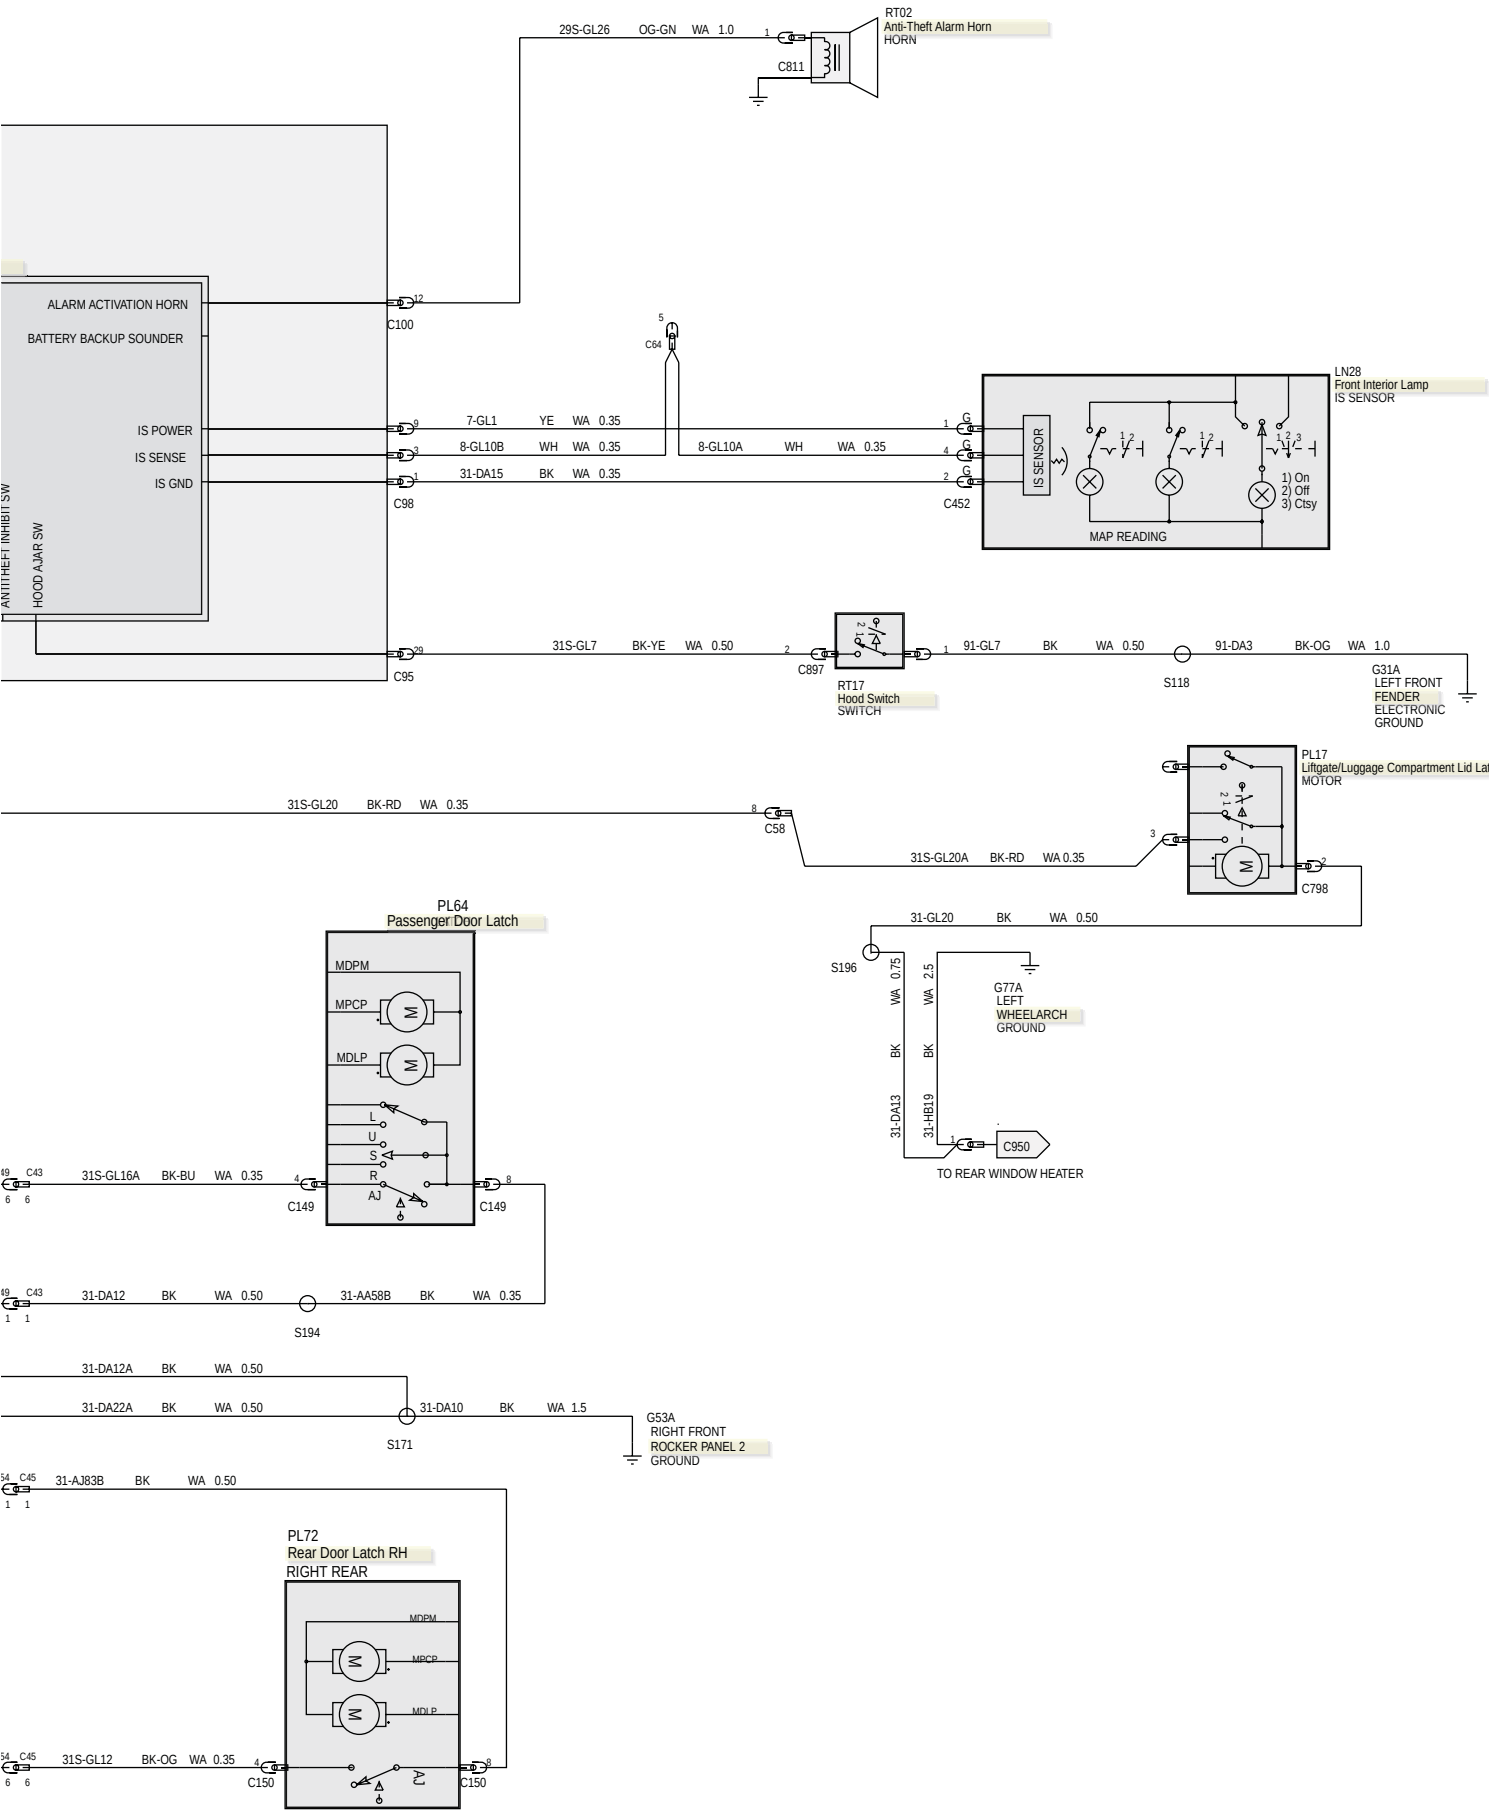


Driver Seat (G1234715)

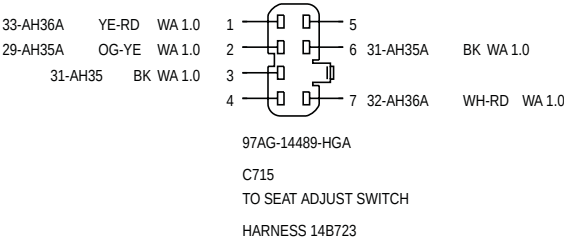


Driver Seat (G1234716)

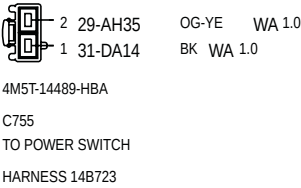


Driver Seat (G1245482)

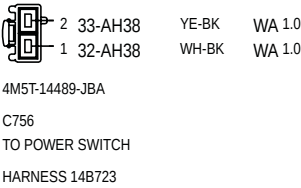


Driver Seat (G1239891)

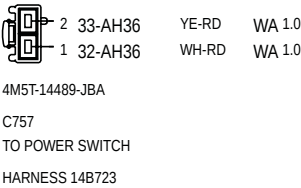


Driver Seat (G1239892)

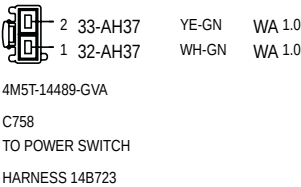


Driver Seat (G1239893)

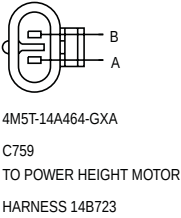


501-14-10 Power Door Locks—2.5L Duratec (147kW/200PS) - V15, LHD 4WD, Vehicles With: Remote Keyless Entry (RKE)

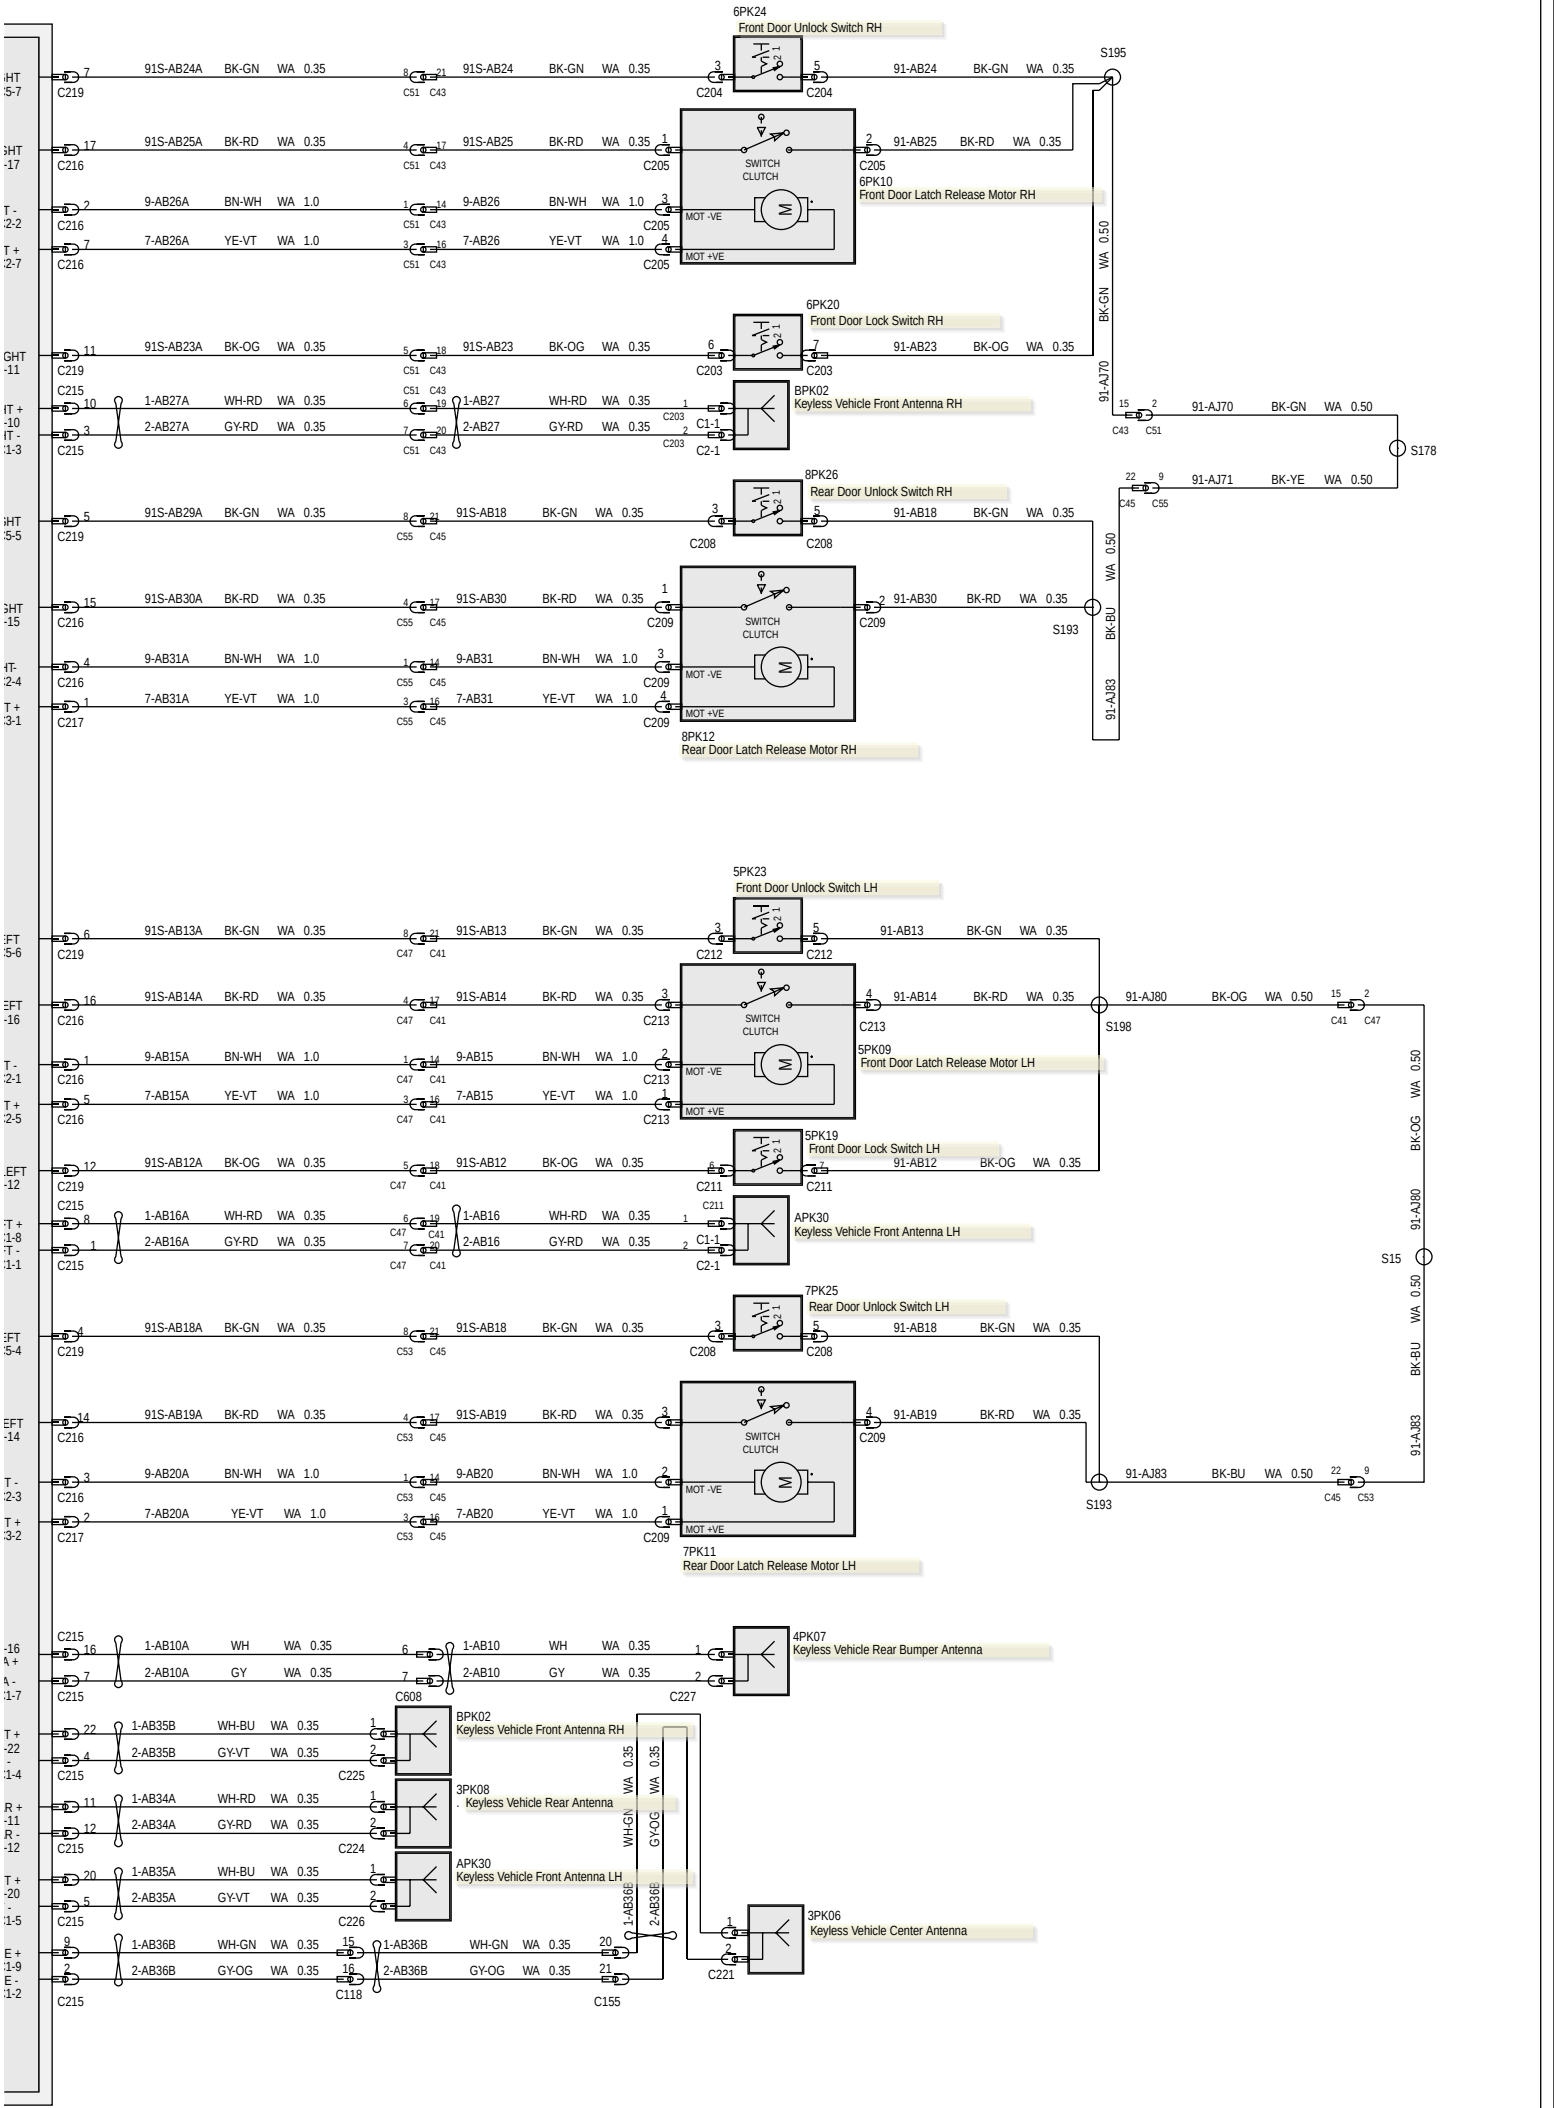

Restraints Control Module (RCM) (G1234812)

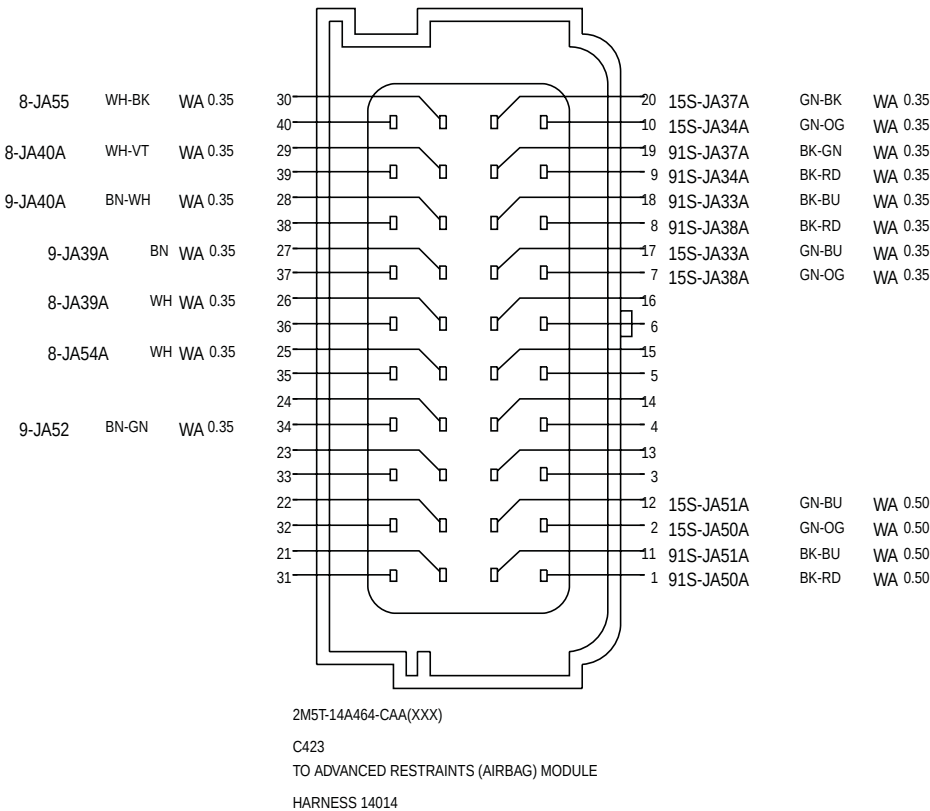


Restraints Control Module (RCM) (G1234813)

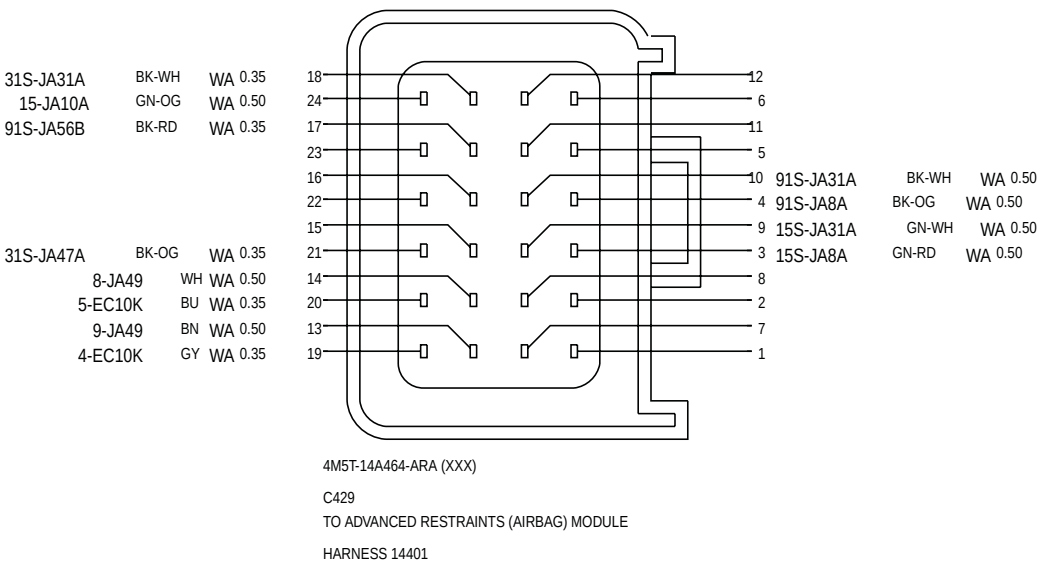



COMPONENT LOCATION


Engine Compartment Right-Hand View - 2.5L Duratec
(147kW/200PS) - VI5, LHD 4WD

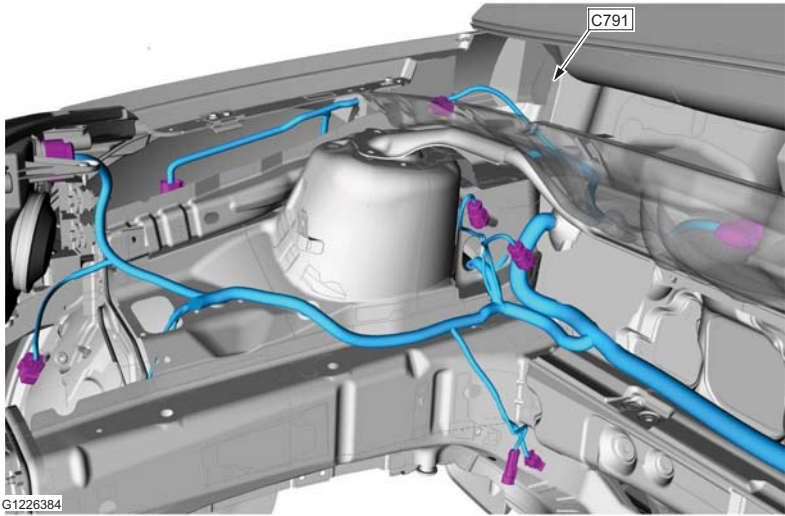




COMPONENT LOCATION



Inner Wheelhouse LH

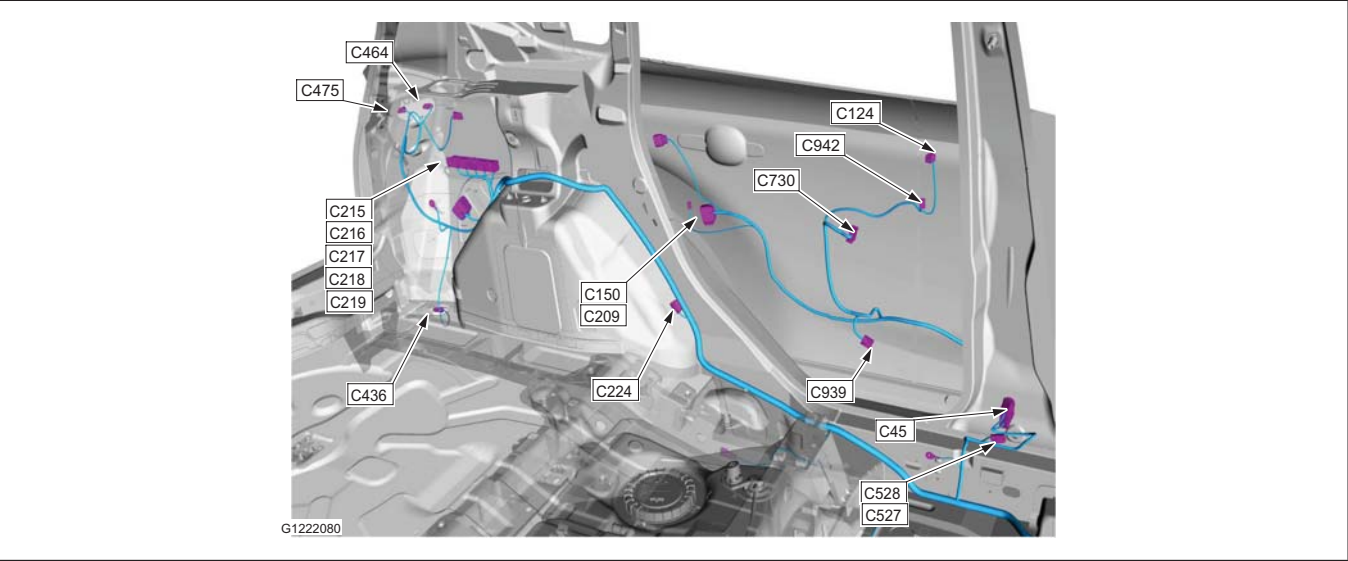


700-02-3 Cigar Lighter and Power Points

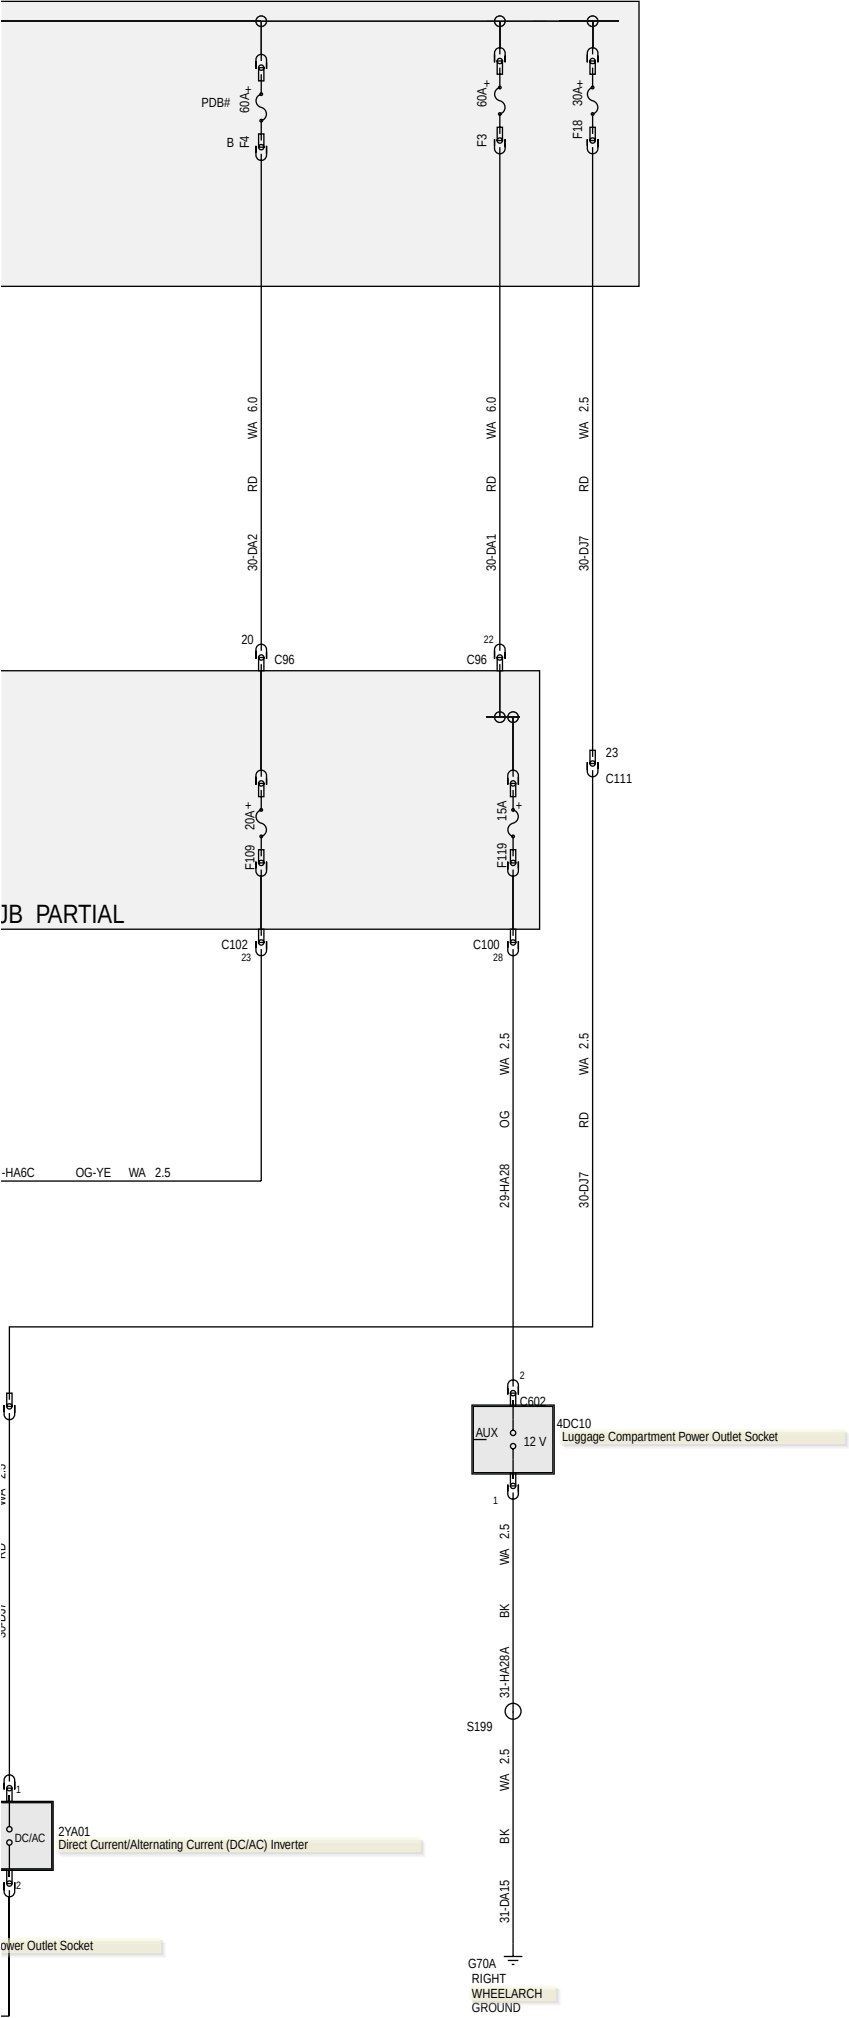

In-Line Connector 11 (G1234831)

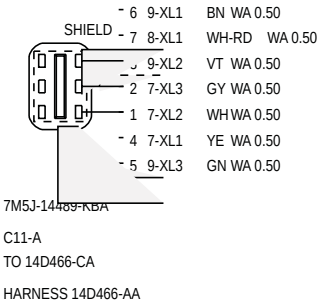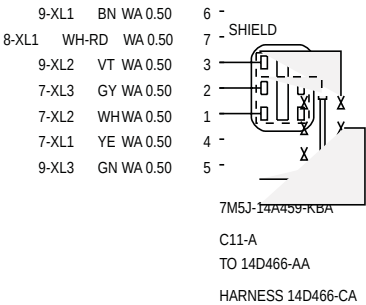

In-Line Connector 11 (G1234832)

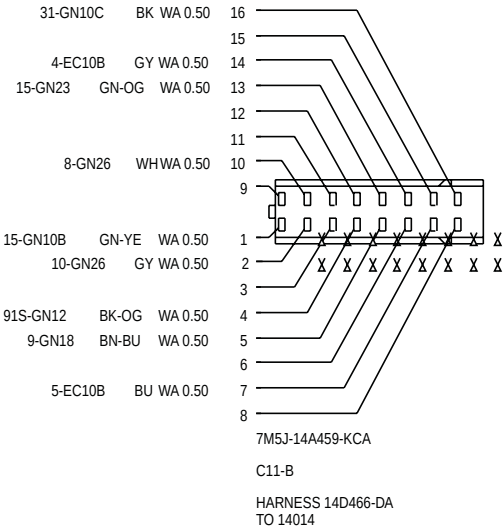

In-Line Connector 11 (G1234833)

