

Mondeo Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Wiring Harness Overview	100-00-06-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control – Traction Control	206-09B-00-1
Anti-Lock Control – Traction Control and Stability Assist	206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling – 1,8 l and 2,0 l ...	303-03A-00-1
Engine Cooling – 2,5 l	303-03B-00-1
Engine Cooling – 2,0 l Diesel	303-03C-00-1
Fuel Charging and Controls – 1,8 l and 2,0 l	303-04A-00-1
Fuel Charging and Controls – 2,5 l .	303-04B-00-1
Fuel Charging and Controls – 2,0 l Diesel	303-04C-00-1
Starting System	303-06-00-1
Engine Ignition – 1,8 l and 2,0 l ...	303-07A-00-1
Engine Ignition – 2,5 l	303-07B-00-1
Glow Plug System – 2,0 l Diesel ...	303-07C-00-1
Electronic Engine Controls – 1,8 l and 2,0 l	303-14A-00-1
Electronic Engine Controls – 2,5 l .	303-14B-00-1
Electronic Engine Controls – 2,0 l Diesel	303-14C-00-1
Automatic Transaxle/Transmission	
External Controls	307-05-00-1
Vehicle Speed Control	310-03-00-1

Group 4 – Electrical

Climate Control System

Climate Control System – General Information	412-00-00-1
---	-------------

Instrumentation and Warning System

Instrument Cluster and Panel	
Illumination	413-00-00-1
Instrument Cluster	413-01-00-1
Horn	413-06-00-1
Clock	413-07-00-1
Warning Devices	413-09-00-1
Generator and Regulator	414-02-00-1

Audio Systems

Entertainment System – General Information	415-00-00-1
Speakers	415-03-00-1

Lighting Systems

Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting – Headlamp Levelling	417-01-00-6
Exterior Lighting – Turn Signal and Hazard Lamps	417-01-00-8
Exterior Lighting – Parking Lamps .	417-01-00-12
Exterior Lighting – Stop Lamps ...	417-01-00-14
Exterior Lighting – Licence plate lamps	417-01-00-16
Exterior Lighting – Reversing Lamps	417-01-00-17
Exterior Lighting – Fog lamps	417-01-00-19
Interior Lighting	417-02-00-1
Daytime Running Lamps	417-04-00-1

Electrical Distribution

Module Communications Network, Diagnostic	418-00-00-1
--	-------------

Electronic Feature Group

Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Vehicle Route Guidance/Navigation .	419-07-00-1
Multifunction Electronic Control Modules	419-10-00-1

Group 5 – Body and Paint


Chassis

Rear View Mirrors	501-09-00-1
Seating	501-10-00-1
Glass, Frames and Mechanisms	501-11-00-1
Instrument Panel and Console	501-12-00-1
Handles, Locks, Latches and	
Entry Systems	501-14-00-1
Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Occupant Restraints – Active	501-20A-00-1
Occupant Restraints – Passive	501-20B-00-1

Group 7 – General Wiring Information


Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1
Component Testing	700-09-00-1

Power mirror fold module, A148	501-09-00-1
Power mirror fold module, A148	501-09-00-2
Power mirror fold motor, driver side, M114	501-09-00-2
Power mirror fold motor, passenger side, M115	501-09-00-2
Power point, RH side rear, D44	501-12-00-2
Power seat switch, driver, N242	501-10-00-1
Power seat switch, driver, N242	501-10-00-2
Power steering pressure switch, N96	303-14A-00-4
Power steering pressure switch, N96	303-14B-00-5
Powertrain control module (PCM), A147	303-14A-00-1
Powertrain control module (PCM), A147	303-14B-00-1
Powertrain control module (PCM), A147	303-14C-00-1
Powertrain control module (PCM), A147	303-14C-00-2
Power window motor, driver side front, M80	501-11-00-1
Power window motor, driver side front, M80	501-11-00-3
Power window motor, LH side rear, M116	501-11-00-5
Power window motor, passenger side front, M79	501-11-00-2
Power window motor, passenger side front, M79	501-11-00-4
Power window motor, RH side rear, M117	501-11-00-6
Pre-catalyst heated oxygen sensor (HO2S), LH, B47	303-14B-00-3
Pre-catalyst heated oxygen sensor (HO2S), RH, B48	303-14A-00-3
Pre-catalyst heated oxygen sensor (HO2S), RH, B48	303-14B-00-3
Pre-glow relay Diesel, K70	303-07C-00-1
Primary brake pressure sensor, B140	206-09C-00-4
Primary brake pressure sensor, B140	206-09C-00-5
Radio, A11	415-00-00-1
Radio remote control switch, N214	415-00-00-2
Rear dome lamp, E64	417-02-00-2
Rear lamp assembly, LH side, E9	417-01-00-10
Rear lamp assembly, LH side, E9	417-01-00-11
Rear lamp assembly, LH side, E9	417-01-00-12
Rear lamp assembly, LH side, E9	417-01-00-13
Rear lamp assembly, RH side, E10	417-01-00-10
Rear lamp assembly, RH side, E10	417-01-00-11
Rear lamp assembly, RH side, E10	417-01-00-12
Rear lamp assembly, RH side, E10	417-01-00-13
Rear View Mirrors	501-09-00-1
Rear window heater, R19	501-11-00-8
Rear window heater relay, K1	501-11-00-8
Rear window heater relay, K1	700-02-00-2
Rear window heater switch, N10	501-11-00-8
Rear window wiper motor, M9	501-16-00-5
Rear wiper relay, K64	501-16-00-5
Rear wiper relay, K64	700-02-00-20
Recirculation door motor, M92	412-00-00-4
Recirculation door motor, M92	412-00-00-8
Restraints Control Module (RCM), A208	501-20A-00-1
Restraints Control Module (RCM), A208	501-20B-00-1
RH Front footwell lamp, E62	417-02-00-1

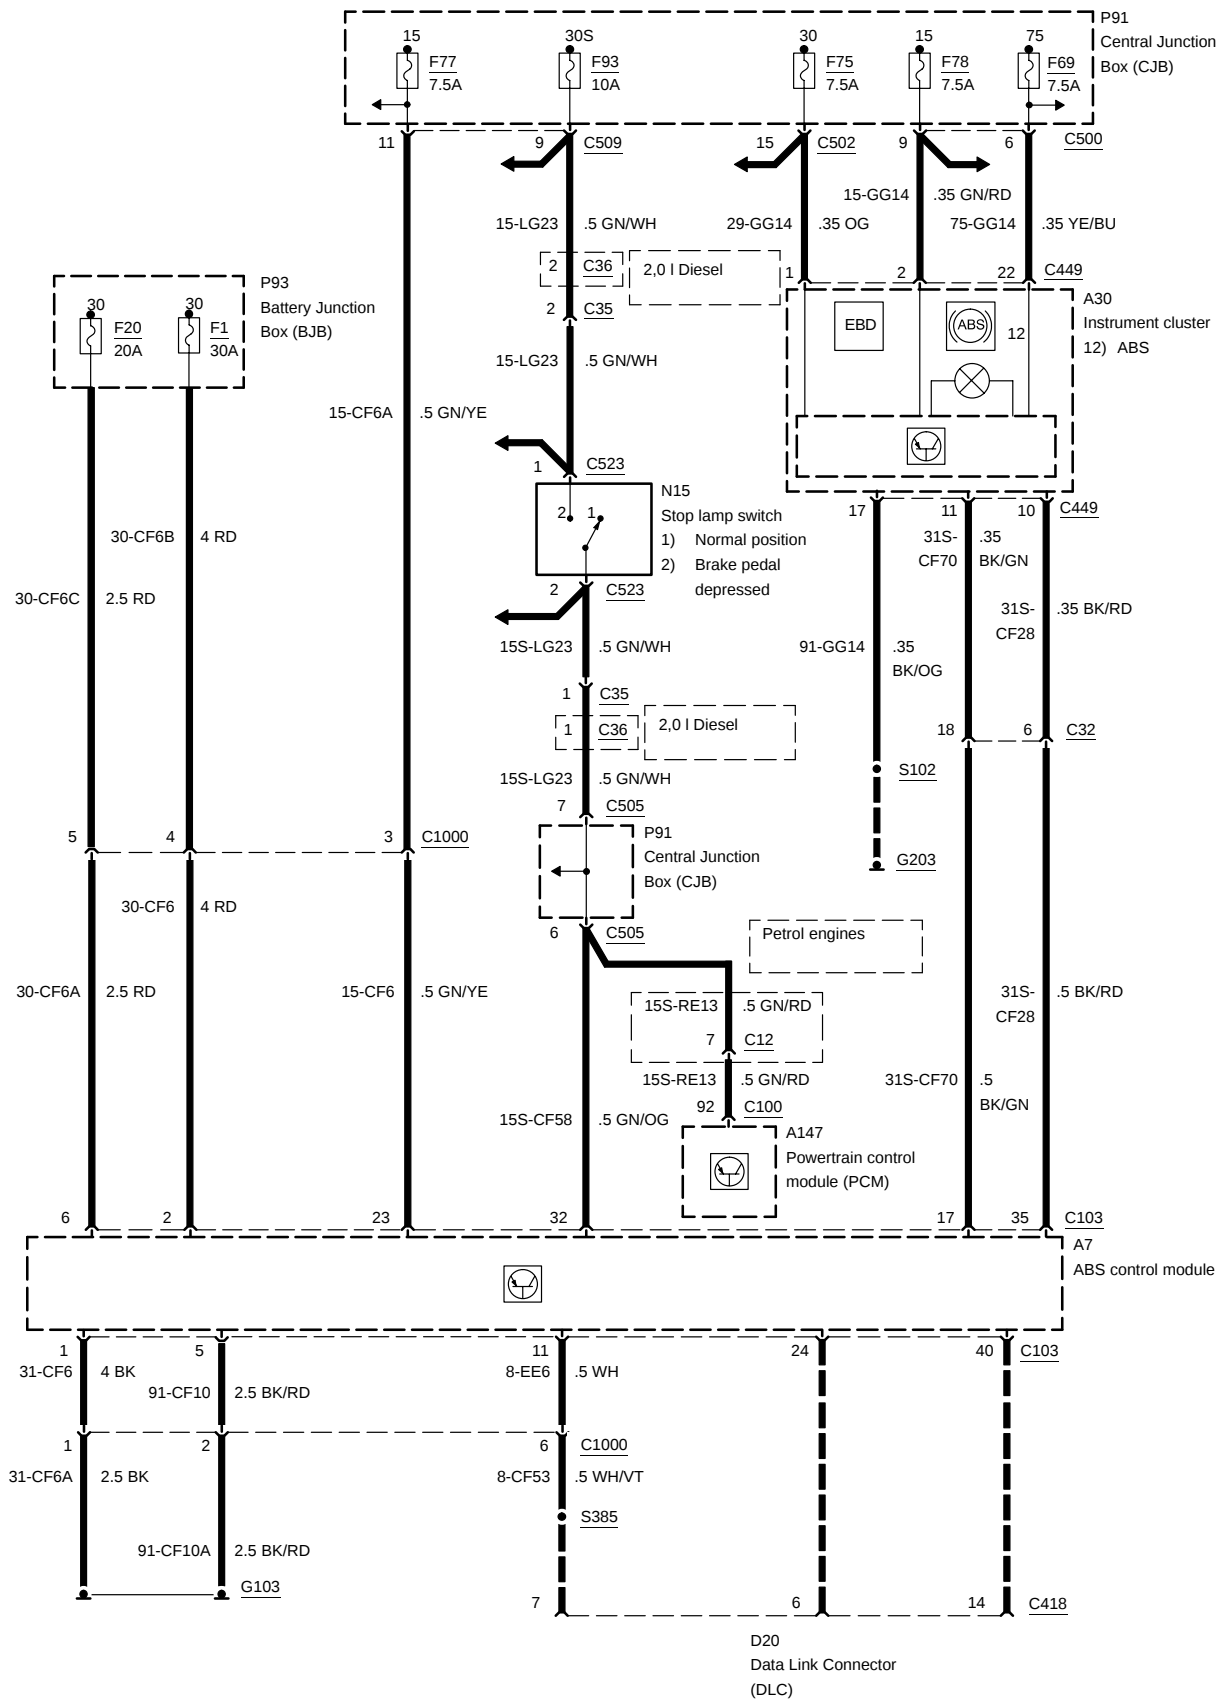


RHD

-4

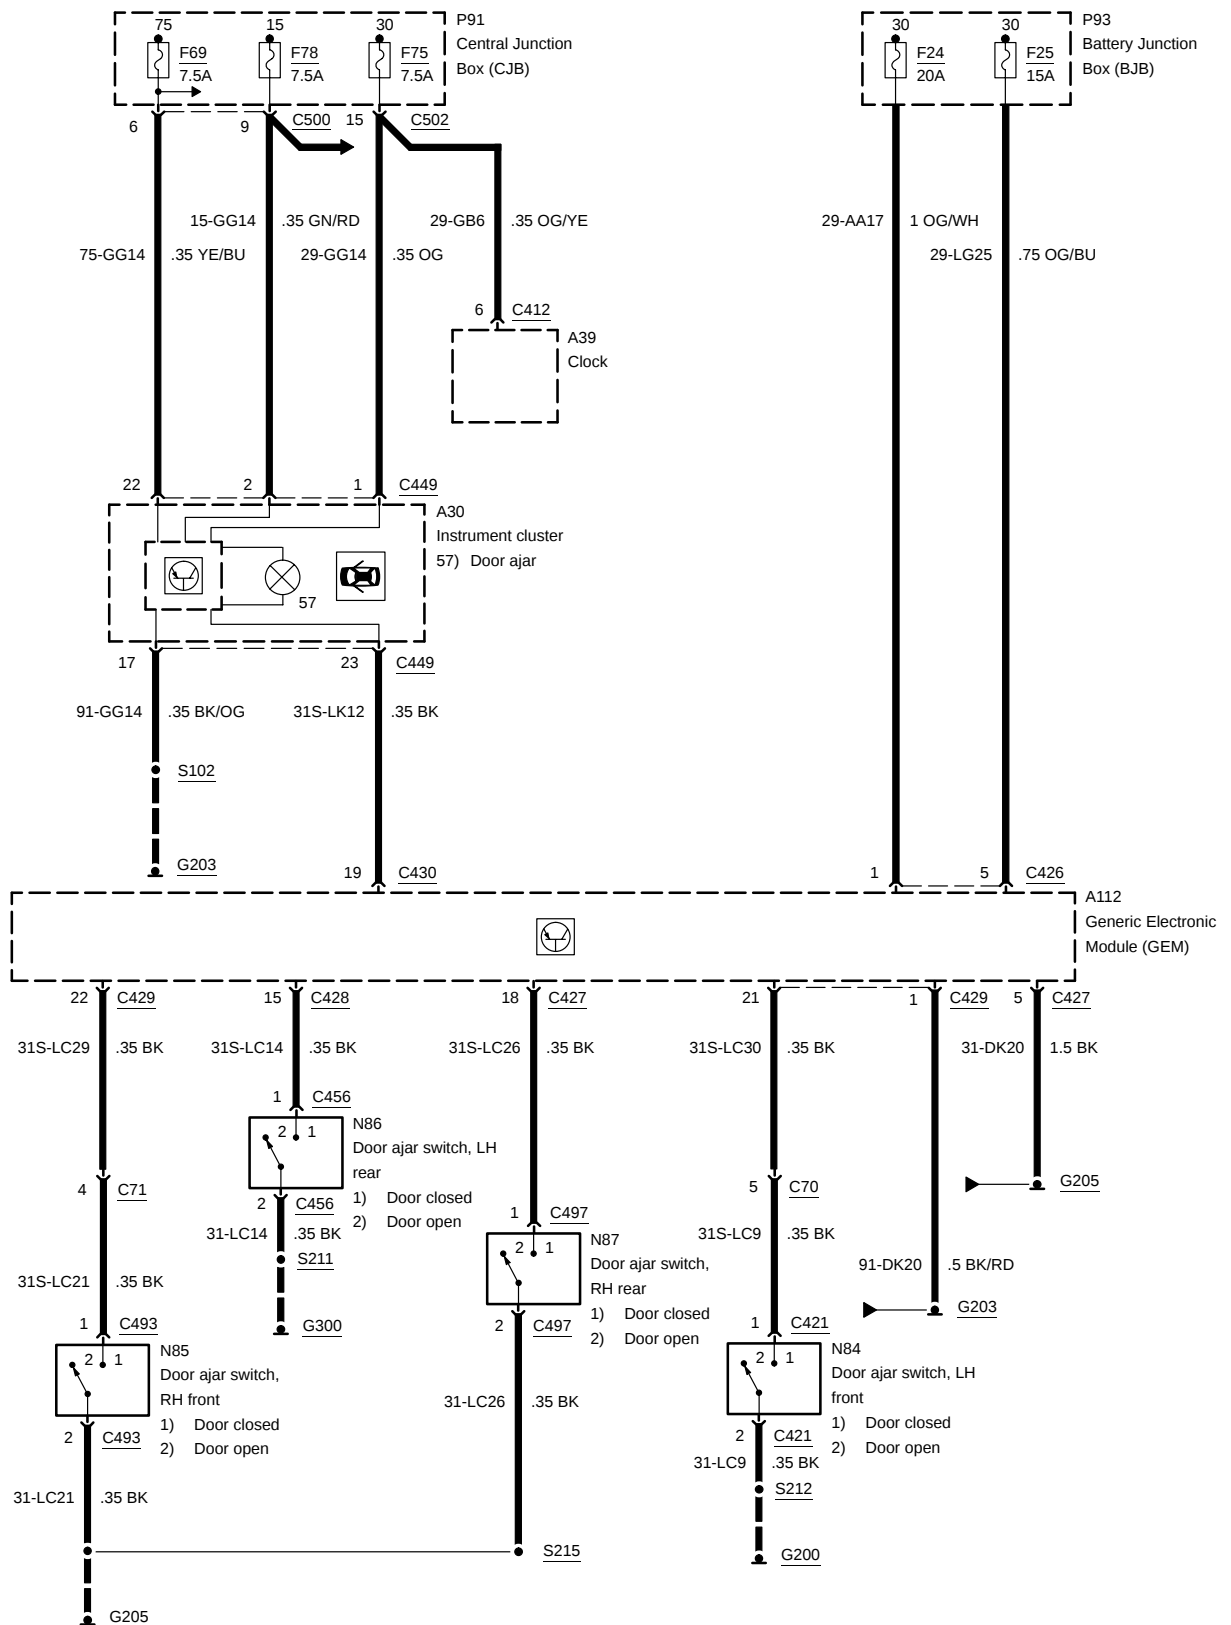


Heated seats, RHD

-4

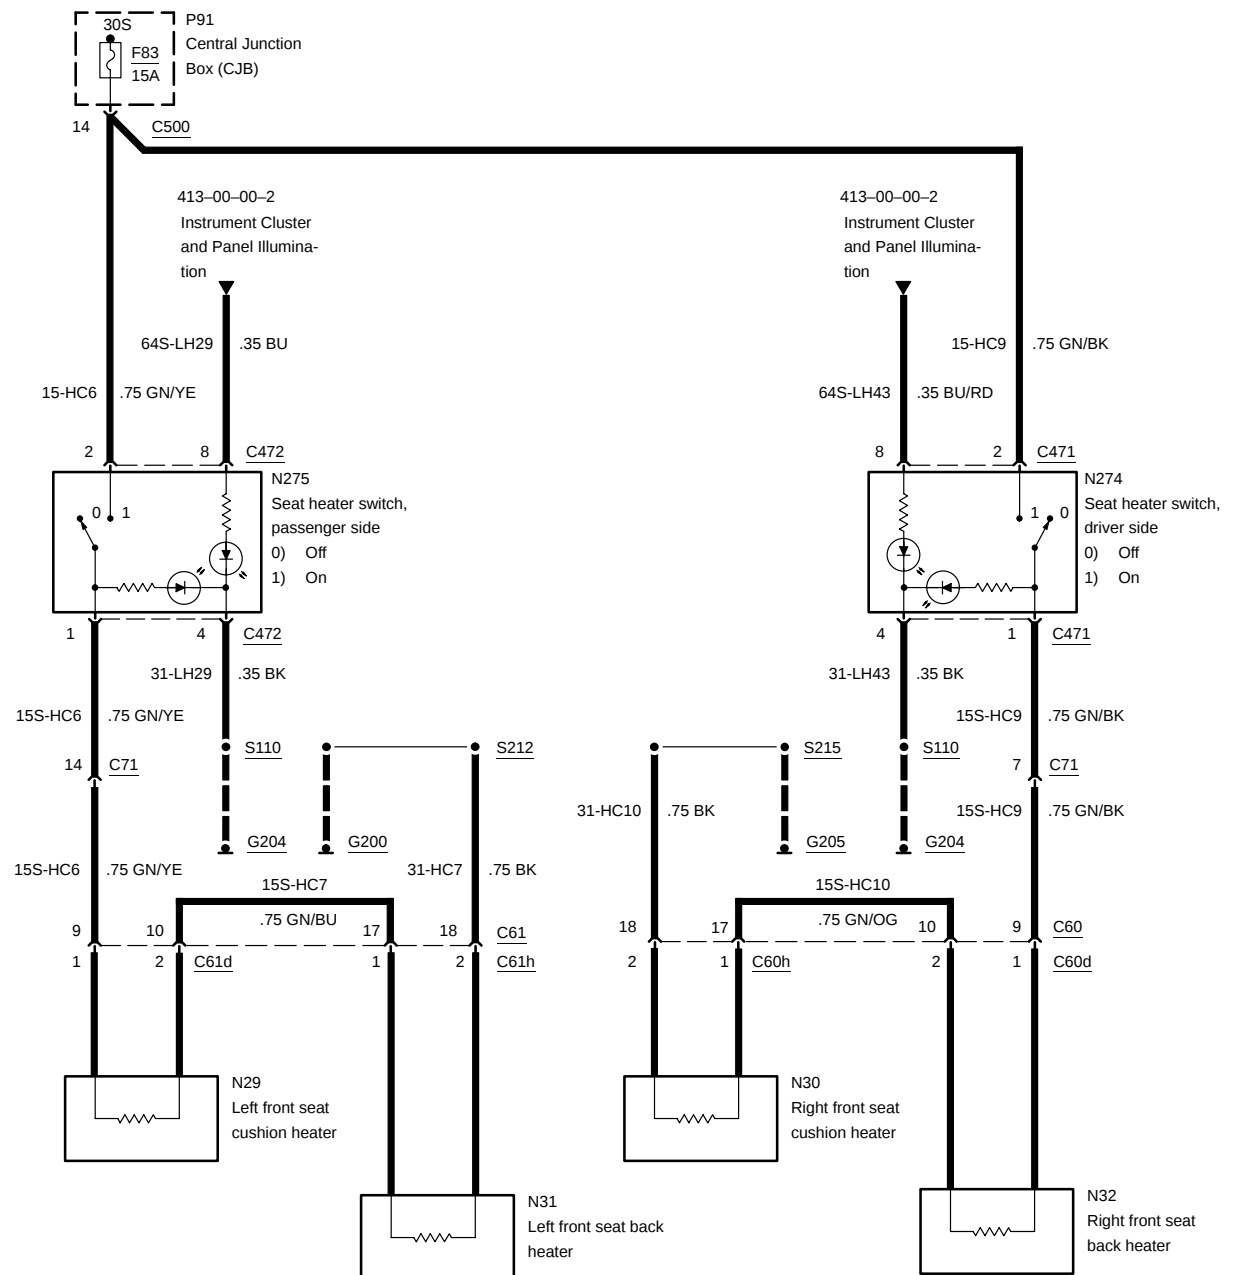


2,0 I Diesel

-5

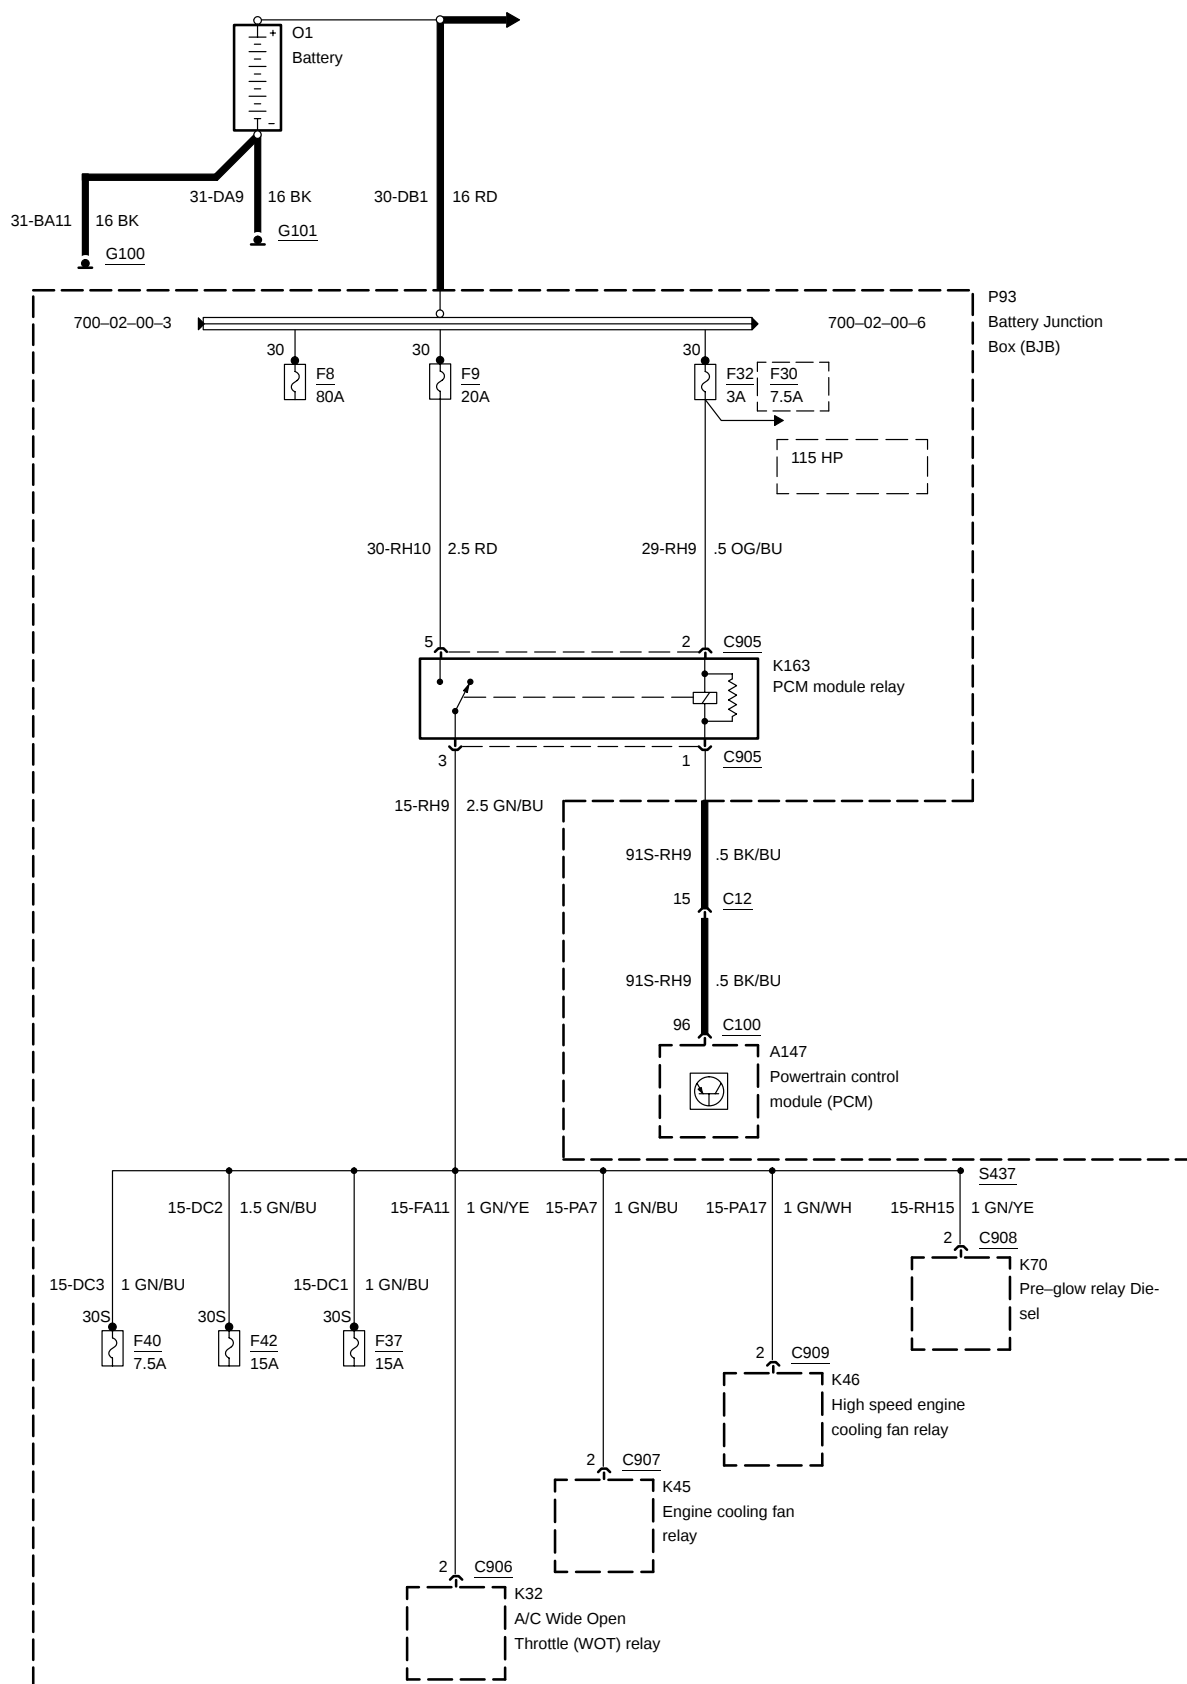

F42, 1,8 l and 2,0 l, automatic transmission

-25

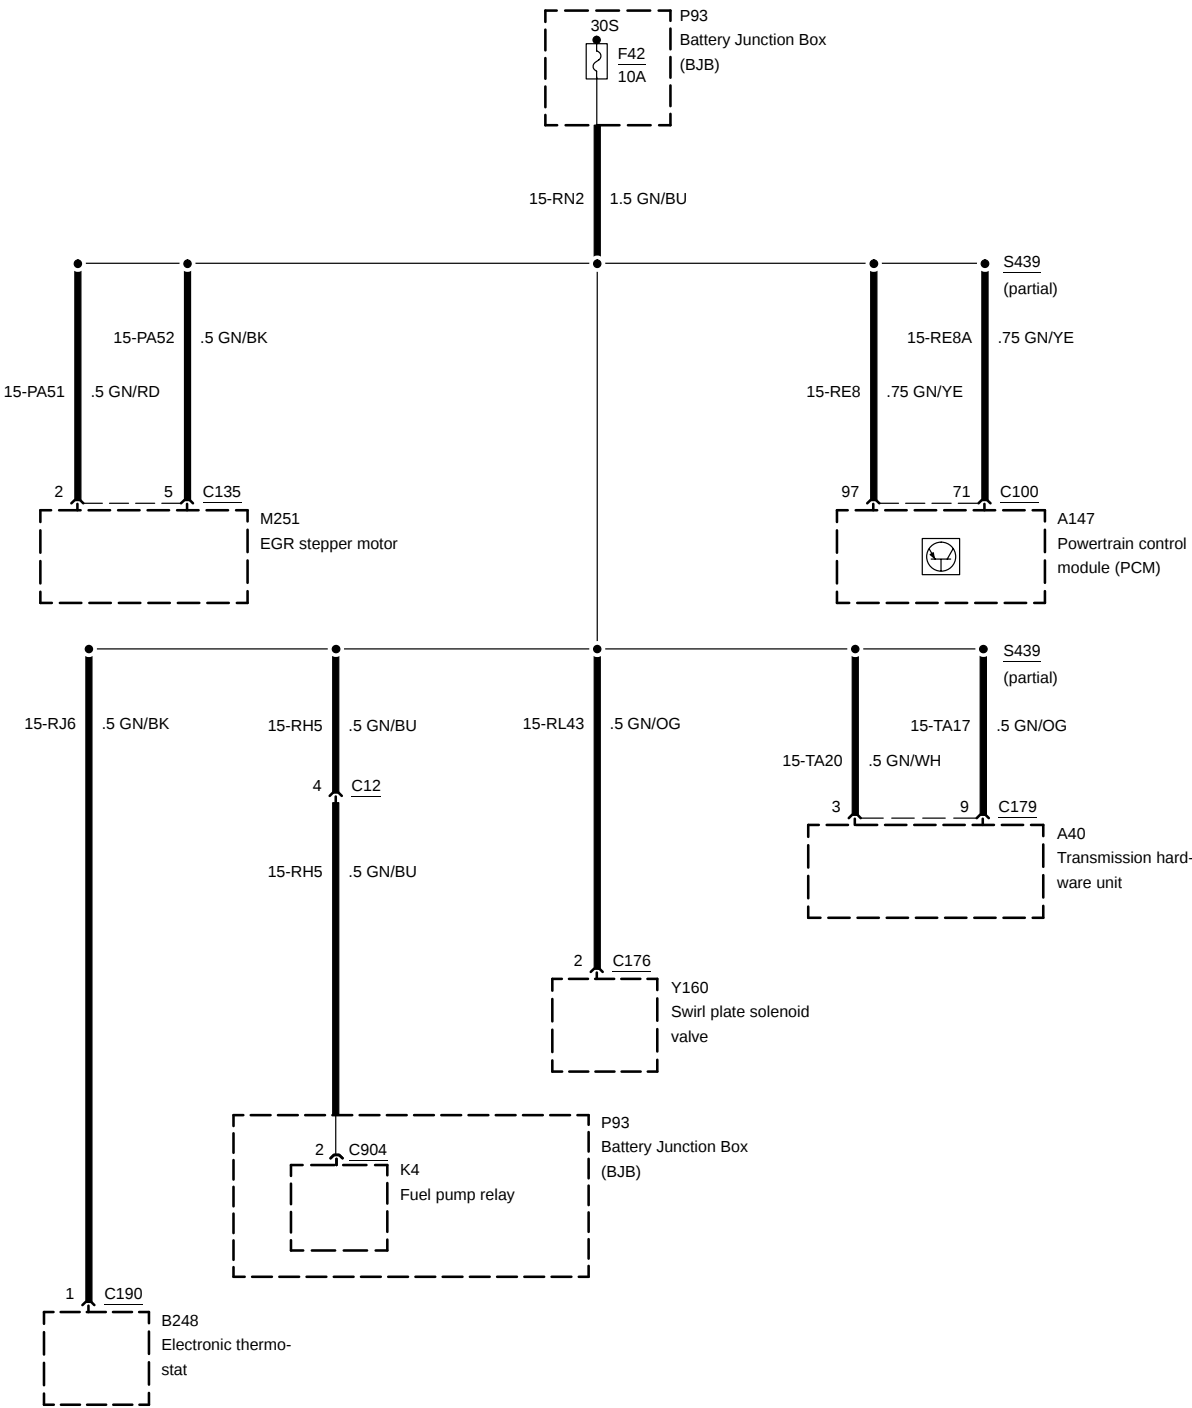


Components**Section 700-06-00****Location****Page/coordinates**

A7	ABS control module engine compartment, bottom, LH side, rear	3 – D 3
A7	ABS control module engine compartment, bottom, LH side, rear	5 – C 1
A11	Radio dash panel, centre console	18 – D 3
A11	Radio dash panel, centre console	20 – C 2
A26	Sunroof unit roof, front, centre	15 – C 2
A26	Sunroof unit roof, front, centre	16 – C 2
A26	Sunroof unit roof, front, centre	17 – C 2
A27	Speed control module engine compartment, rear, LH side	3 – B 1
A30	Instrument cluster dash panel, driver side	18 – E 5
A30	Instrument cluster dash panel, driver side	20 – C 5
A31	Fuel tank unit vehicle underbody, on fuel tank	31 – B 4
A39	Clock dash panel, centre	18 – E 5
A39	Clock dash panel, centre	20 – D 5
A40	Transmission hardware unit transmission	49 – E 3
A40	Transmission hardware unit transmission	
A42	Driver air bag unit in steering wheel	
A43	Passenger air bag unit dash panel, in glove box	18 – D 5
A43	Passenger air bag unit dash panel, in glove box	20 – E 4
A74	Diesel pump unit engine	53 – A 4
A97	Heater blower control module behind dash panel, centre	
A102	Passive anti-theft transceiver module on steering column	30 – E 3
A112	Generic Electronic Module (GEM) LH A-pillar	
A147	Powertrain control module (PCM) on engine bulkhead, LH side	4 – D 5

Connectors


Section 700-06-00

	Location	Page/coordinates
C598	on RH C-pillar, left-hand-drive (LHD)	40 – B 4
C598	on LH C-pillar, right-hand-drive (RHD)	41 – E 4
C600	centre console	33 – D 1
C700	roof, rear, centre, 4-door model	15 – F 4
C700	in tailgate, top, 5-door model	46 – D 3
C700	in tailgate, wagon	
C701	in bottom of LH front door	31 – E 3
C702	in passenger's door	31 – E 2
C703	in LH rear door	32 – E 3
C704	in RH rear door	32 – E 2
C705	in driver's door	31 – B 1
C706	in passenger's door	31 – B 1
C707	in LH rear door	32 – D 1
C708	in RH rear door	32 – D 1
C709	in driver's door	31 – E 3
C710	in passenger's door	31 – E 4
C711	in LH rear door	32 – B 4
C712	in RH rear door	32 – B 4
C720	in bottom of LH front door	31 – C 4
C722	in LH rear door	32 – B 4
C723	in bottom of RH front door	31 – C 5
C724	in RH rear door	32 – B 3
C730	in driver's door, top	31 – A 3
C731	in passenger's door, top	31 – A 3
C733	driver's door, front	
C735a	Decklid, centre, 4-door model	45 – C 5
C735a	in tailgate, 5-door model	46 – C 3
C735a	in tailgate, wagon	47 – C 5
C735b	Decklid, centre, 4-door model	45 – C 5
C735b	in tailgate, 5-door model	46 – C 3
C735b	in tailgate, wagon	47 – C 5
C736a	Decklid, centre, 4-door model	45 – A 1
C736a	in tailgate, 5-door model	46 – A 1
C736a	in tailgate, wagon	47 – B 5
C736b	Decklid, centre, 4-door model	45 – A 1
C736b	in tailgate, 5-door model	46 – A 1
C736b	in tailgate, wagon	47 – B 5
C740	in tailgate, 5-door model	46 – F 3
C740	in tailgate, wagon	47 – F 4
C740	on LH C-pillar, 4-door model	
C741	in tailgate, 5-door model	46 – C 4
C741	in tailgate, wagon	47 – B 4
C741	on LH C-pillar, 4-door model	
C742	in decklid	
C742	in tailgate	
C745	in tailgate, 5-door model	46 – C 3

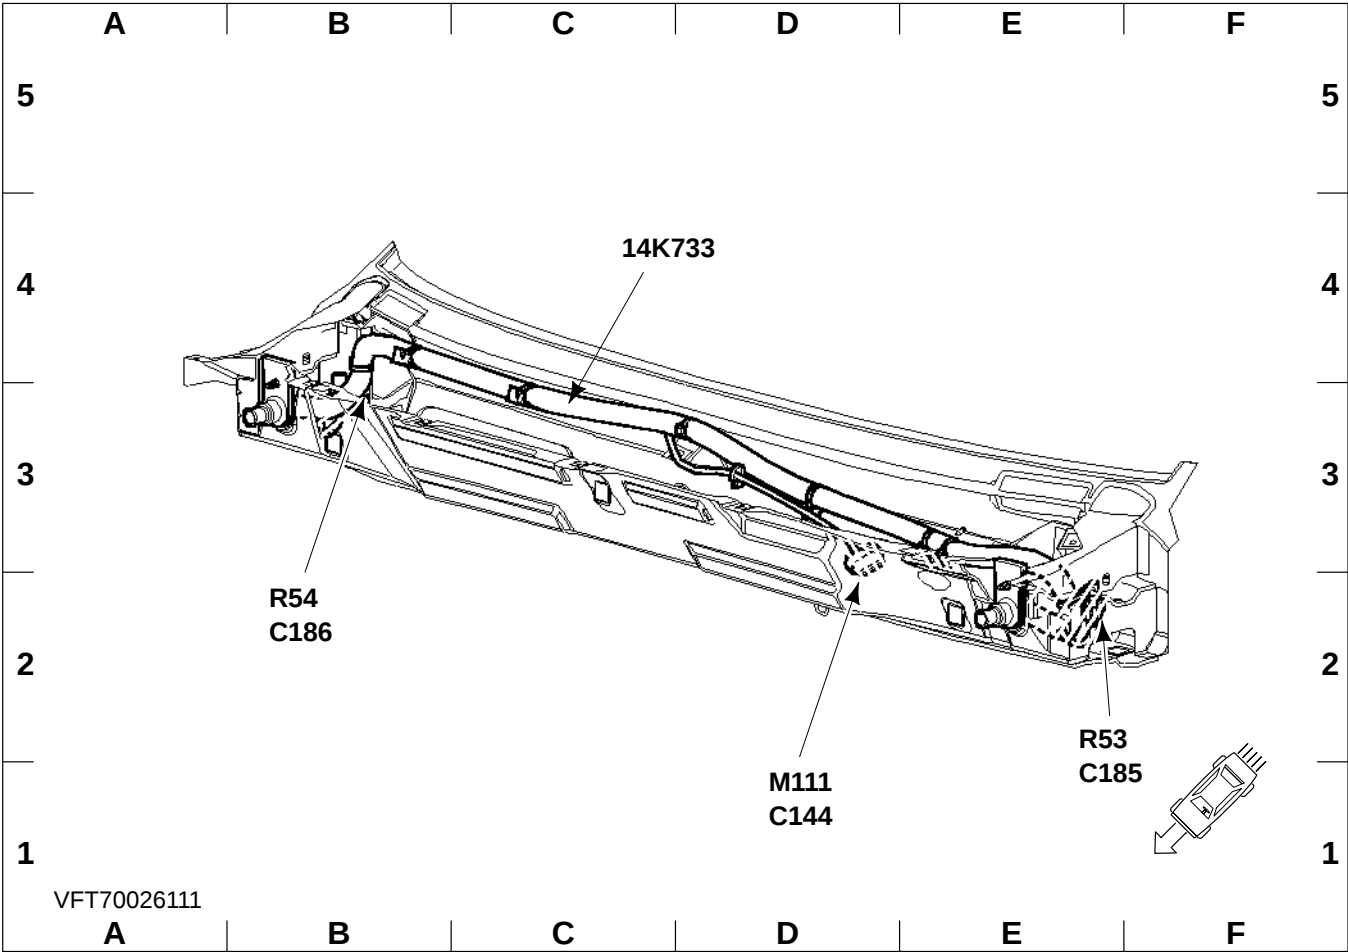


At engine bulkhead LHD

14K733 Wiring harness – Engine compartment .	C 4	M111	Windshield wiper motor	D 1
C144	D 1	R53 ..	Windshield heater, LH side	E 2
C185	E 1	R54 ..	Windshield heater, RH side	B 2
C186	B 2			

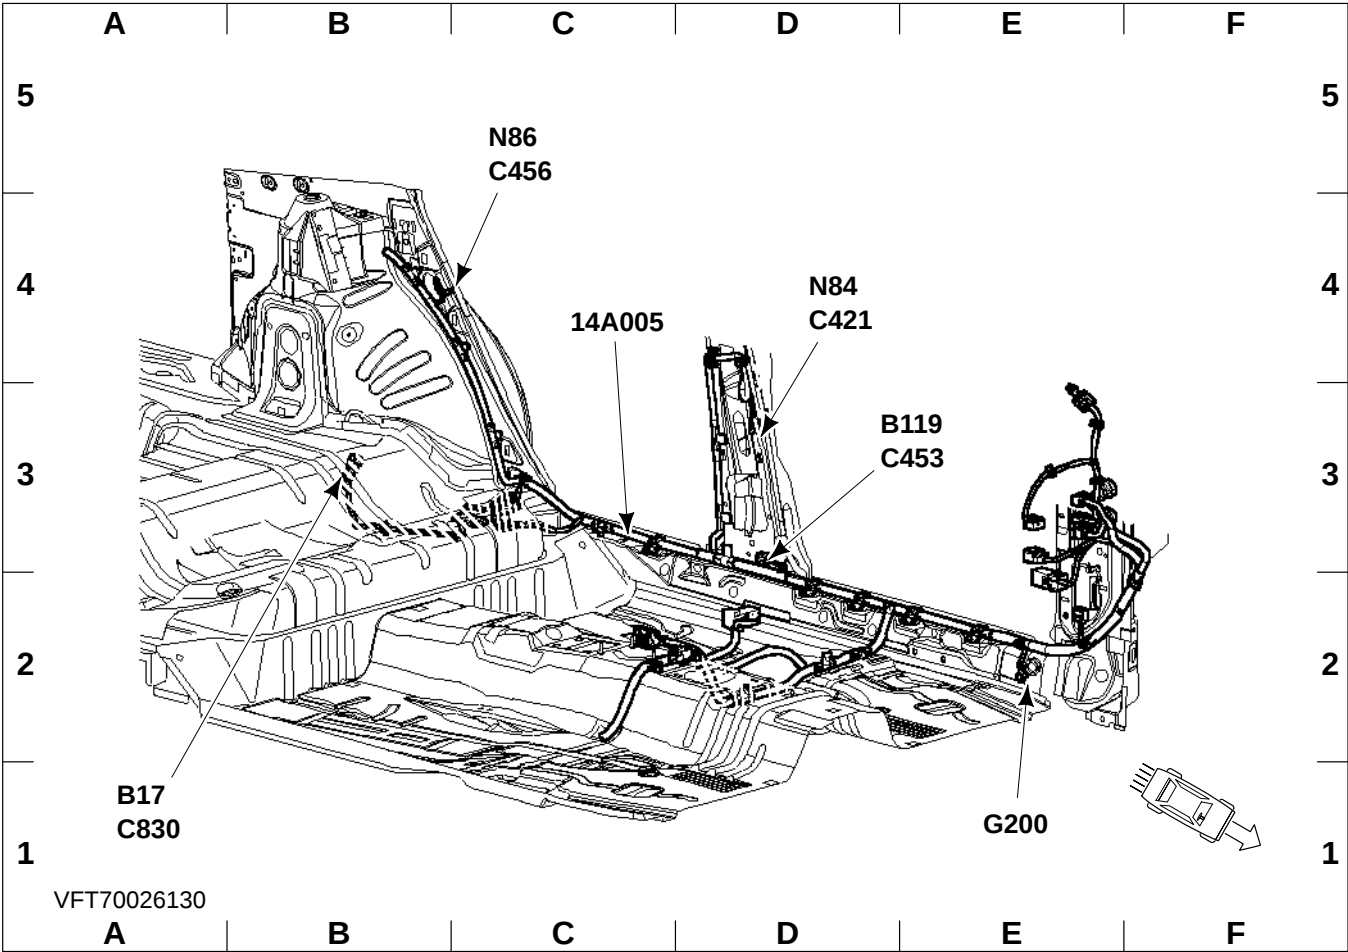


Vehicle floor, LH side

14A005 Wiring harness – Body Main	C 4	C456	C 5
B17 . . Wheel speed sensor, LH side rear	A 1	C830	A 1
B119 . Side air bag sensor, LH side	E 3	G200	E 1
C421	D 4	N84 . . Door ajar switch, LH front	D 4
C453	E 3	N86 . . Door ajar switch, LH rear	C 5

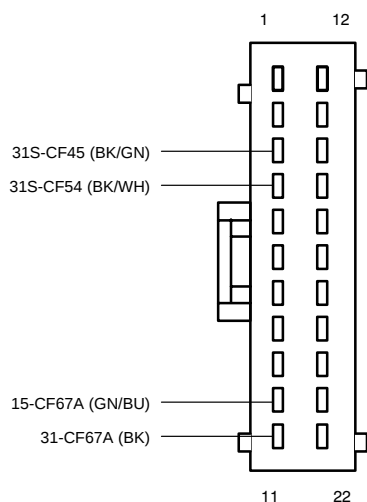C33**14K024**


F22025

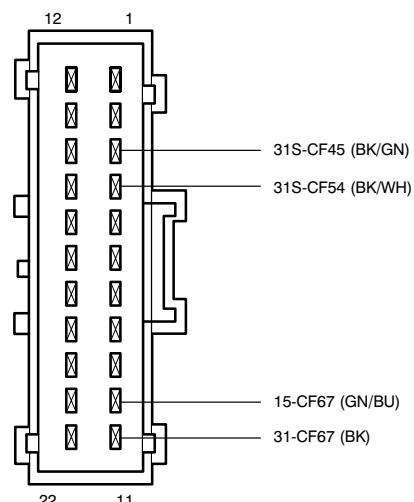14K733


F22023

C35 (GY)

Petrol engines

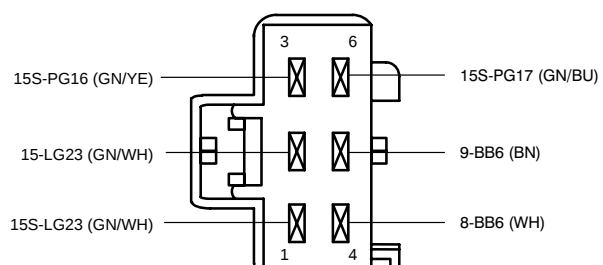13A612


F06112

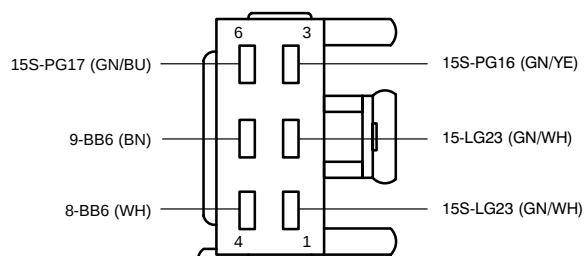14K733

F06109


C413

14K024

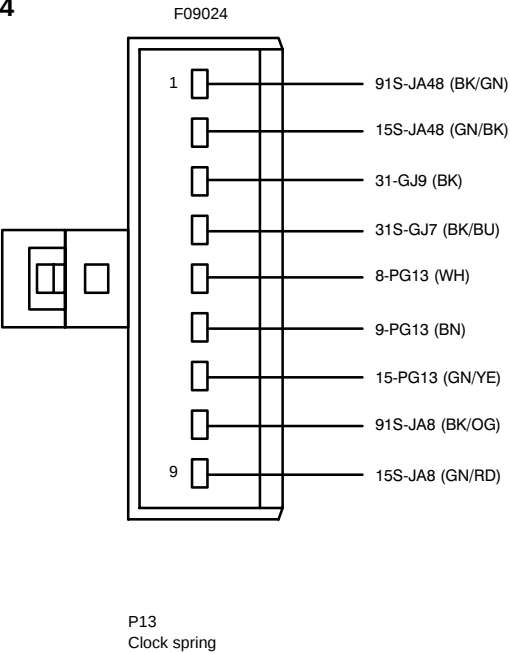


C418

14K024

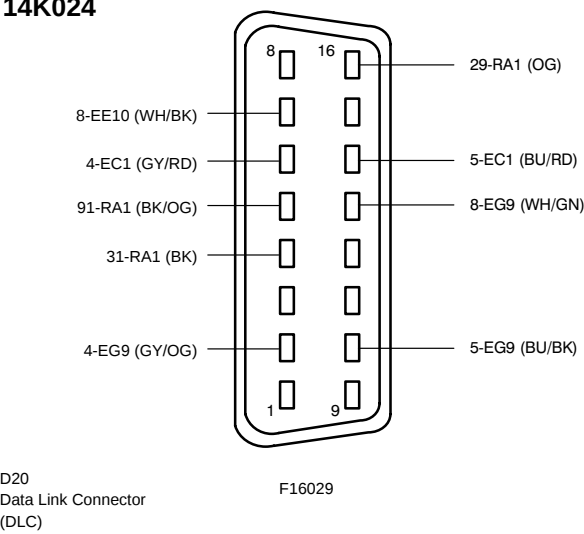


C414

13A612

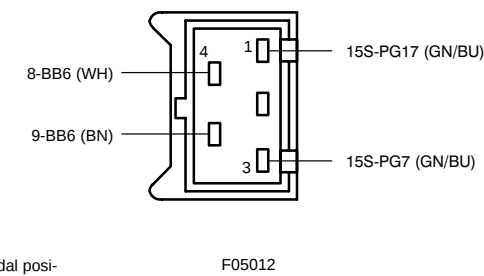


C421

14A005

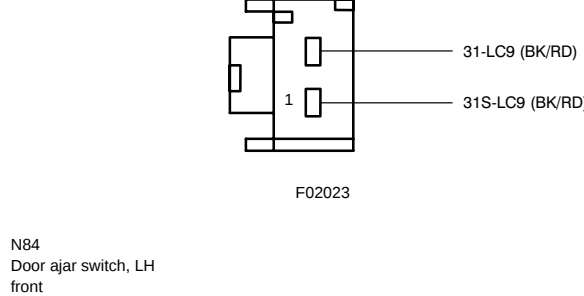


C417 (GY)

14K024

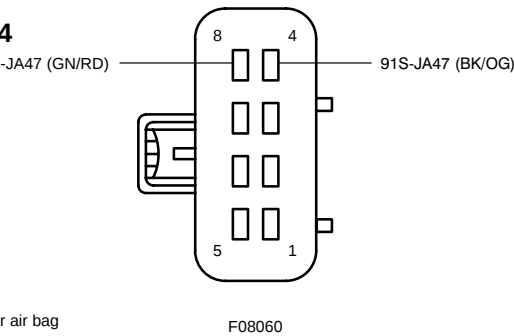

C422

14335

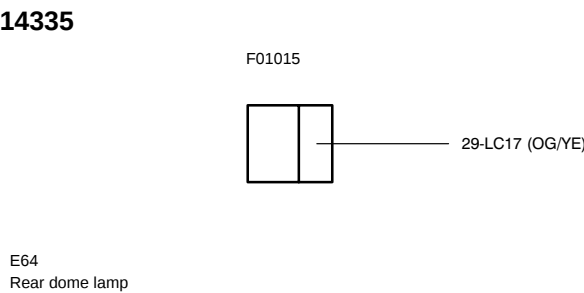

C555 (GY) 14K024 3 2 1 8-MC8 (WH/RD) 9-MC8 (BN/RD) F03173 A164 Microphone	C700 18C619 15S-LG6 (GN/YE) 31-LG6 (BK) F02056 E70 High mounted stop lamp
C597 14A005 91S-JA50 (BK/RD) 15S-JA50 (GN/OG) F02215 A242 Side air bag mod- ule, driver	C701 14A584 31S-AA61 (BK/BU) 31-AA58 (BK) 31S-AA62 (BK/WH) 31S-AA63 (BK/OG) 33-AA59 (YE/BK) 32-AA59 (WH/BK) 33-AA60 (YE) 31S-AA64 (BK/GN) F08083 A172 Door lock unit, driver side front
C598 14A005 91S-JA51 (BK/BU) 15S-JA51 (GN/BU) F02215 A245 Side air bag mod- ule, passenger	C702 14K138 33-AA59 (YE/BK) 32-AA59 (WH/BK) 33-AA60 (YE) 31S-AA64 (BK/GN) 31S-AA61 (BK/BU) 31-AA58 (BK) 31S-AA62 (BK/WH) 31S-AA63 (BK/OG) F08083 A173 Door lock unit, pas- senger side front
C600 14A005 15-TA21 (GN/BK) 15S-TA21 (GN/BK) 64S-LK21 (BU/BK) 31-TA35 (BK) 31S-TA32 (BK/WH) 15S-TA33 (GN/WH) F06109 N93 Gearshift lever unit	C703 14240 33-AA59 (YE/BK) 32-AA59 (WH/BK) 33-AA60 (YE) 31S-AA64 (BK/GN) 31S-AA61 (BK/BU) 31-AA58 (BK) 31S-AA62 (BK/WH) 31S-AA63 (BK/OG) F08083 A275 Door lock unit, left rear