

Mondeo Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Connector Repair Procedures	100-00-05-1
Wiring Harness Overview	100-00-06-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control –	
Traction Control and Stability Assist	206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling –	
1.8L Duratec–SCi (MI4)	303-03A-00-1
Engine Cooling –	
1.8/2.0L Duratec–HE (MI4)	303-03B-00-1
Engine Cooling –	
2.5L Duratec–VE (VE6)	303-03C-00-1
Engine Cooling –	
3.0L Duratec–SE (VE6),	
3.0L Duratec–ST (VE6)	303-03D-00-1
Engine Cooling –	
2.0L Duratorq–DI/TDDi (Puma) Diesel,	
90 HP	303-03E-00-1
Engine Cooling –	
2.0L Duratorq–TDCi (Puma) Diesel,	
2.2L Duratorq–TDCi (Puma) Diesel	303-03F-00-1
Fuel Charging and Controls –	
1.8L Duratec–SCi (MI4)	303-04A-00-1
Fuel Charging and Controls –	
1.8/2.0L Duratec–HE (MI4)	303-04B-00-1
Fuel Charging and Controls –	
2.5L Duratec–VE (VE6)	303-04C-00-1
Fuel Charging and Controls –	
3.0L Duratec–SE (VE6),	
3.0L Duratec–ST (VE6)	303-04D-00-1

Fuel Charging and Controls –

2.0L Duratorq–DI/TDDi (Puma) Diesel,	
90 HP	303-04E-00-1

Fuel Charging and Controls –

2.0L Duratorq–TDCi (Puma) Diesel,	
2.2L Duratorq–TDCi (Puma) Diesel	303-04F-00-1
Starting System	303-06-00-1

Engine Ignition –

1.8L Duratec–SCi (MI4)	303-07A-00-1
------------------------------	--------------

Engine Ignition –

1.8/2.0L Duratec–HE (MI4)	303-07B-00-1
---------------------------------	--------------

Engine Ignition –

2.5L Duratec–VE (VE6)	303-07C-00-1
-----------------------------	--------------

Engine Ignition –

3.0L Duratec–SE (VE6),	
3.0L Duratec–ST (VE6)	303-07D-00-1

Glow Plug System –

2.0L Duratorq–DI/TDDi (Puma) Diesel,	
90 HP	303-07E-00-1

Glow Plug System –

2.0L Duratorq–TDCi (Puma) Diesel,	
2.2L Duratorq–TDCi (Puma) Diesel	303-07F-00-1

Electronic Engine Controls –

1.8L Duratec–SCi (MI4)	303-14A-00-1
------------------------------	--------------

Electronic Engine Controls –

1.8/2.0L Duratec–HE (MI4)	303-14B-00-1
---------------------------------	--------------

Electronic Engine Controls –

2.5L Duratec–VE (VE6)	303-14C-00-1
-----------------------------	--------------

Electronic Engine Controls –

3.0L Duratec–SE (VE6),	
3.0L Duratec–ST (VE6)	303-14D-00-1

Electronic Engine Controls –

2.0L Duratorq–DI/TDDi (Puma) Diesel,	
90 HP	303-14E-00-1

Electronic Engine Controls –

2.0L Duratorq–TDCi (Puma) Diesel,	
2.2L Duratorq–TDCi (Puma) Diesel	303-14F-00-1

Automatic Transmission –

4–speed automatic transmission	
(CD4E)	307-01A-00-1

Automatic Transmission –

5–speed automatic transmission	
(5F31J)	307-01B-00-1

Vehicle Speed Control	310-03-00-1
-----------------------------	-------------

Group 4 – Electrical

Climate Control System

Auxiliary Heating	412-02B-00-1
Air Conditioning	412-03-00-1

Instrumentation and Warning System

Instrument Cluster and Panel Illumination	413-00-00-1
Instrument Cluster	413-01-00-1
Horn	413-06-00-1
Clock	413-07-00-1
Warning Devices	413-09-00-1
Parking Aid – Valeo	413-13A-00-1
Parking Aid – Bosch	413-13B-00-1
Generator and Regulator	414-02-00-1

Audio Systems

Audio Unit	415-01-00-1
Speakers	415-03-00-1
Video System	415-07-00-1

Lighting Systems

Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting – Autolamps	417-01-00-10
Exterior Lighting – Headlamp Levelling	417-01-00-11
Exterior Lighting – Turn Signal and Hazard Lamps	417-01-00-13
Exterior Lighting – Parking Lamps .	417-01-00-19
Exterior Lighting – Stop Lamps ...	417-01-00-27
Exterior Lighting – Licence plate lamps	417-01-00-35
Exterior Lighting – Reversing Lamps	417-01-00-36
Exterior Lighting – Fog lamps	417-01-00-44
Exterior Lighting – Trailer socket .	417-01-00-50
Interior Lighting	417-02-00-1
Daytime Running Lamps	417-04-00-1

Electrical Distribution

Module Communications Network, Diagnostic	418-00B-00-1
--	--------------

Electronic Feature Group

Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Vehicle Route Guidance/Navigation – Travel Pilot	419-07A-00-1
Vehicle Route Guidance/Navigation – DVD navigation system with touch screen	419-07B-00-1
Cellular Phone – without external CD changer and video system	419-08A-00-1
Cellular Phone – Bluetooth voice control	419-08B-00-1
Multifunction Electronic Control Modules	419-10-00-1

Group 5 – Body and Paint

Chassis


Rear View Mirrors	501-09-00-1
Seating	501-10-00-1
Glass, Frames and Mechanisms	501-11-00-1
Instrument Panel and Console	501-12-00-1
Handles, Locks, Latches and Entry Systems	501-14-00-1
Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Occupant Restraints – Active	501-20A-00-1
Occupant Restraints – Passive	501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1


Fuse and Relay Information

 The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

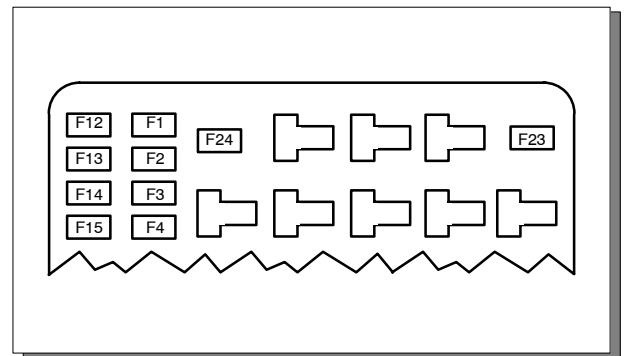


Power Distribution

 
The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

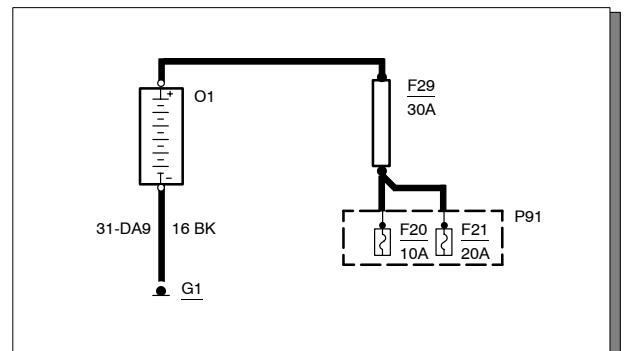



Fuse Details

     
The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

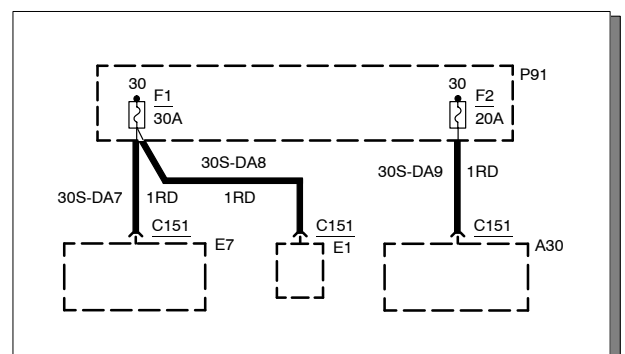

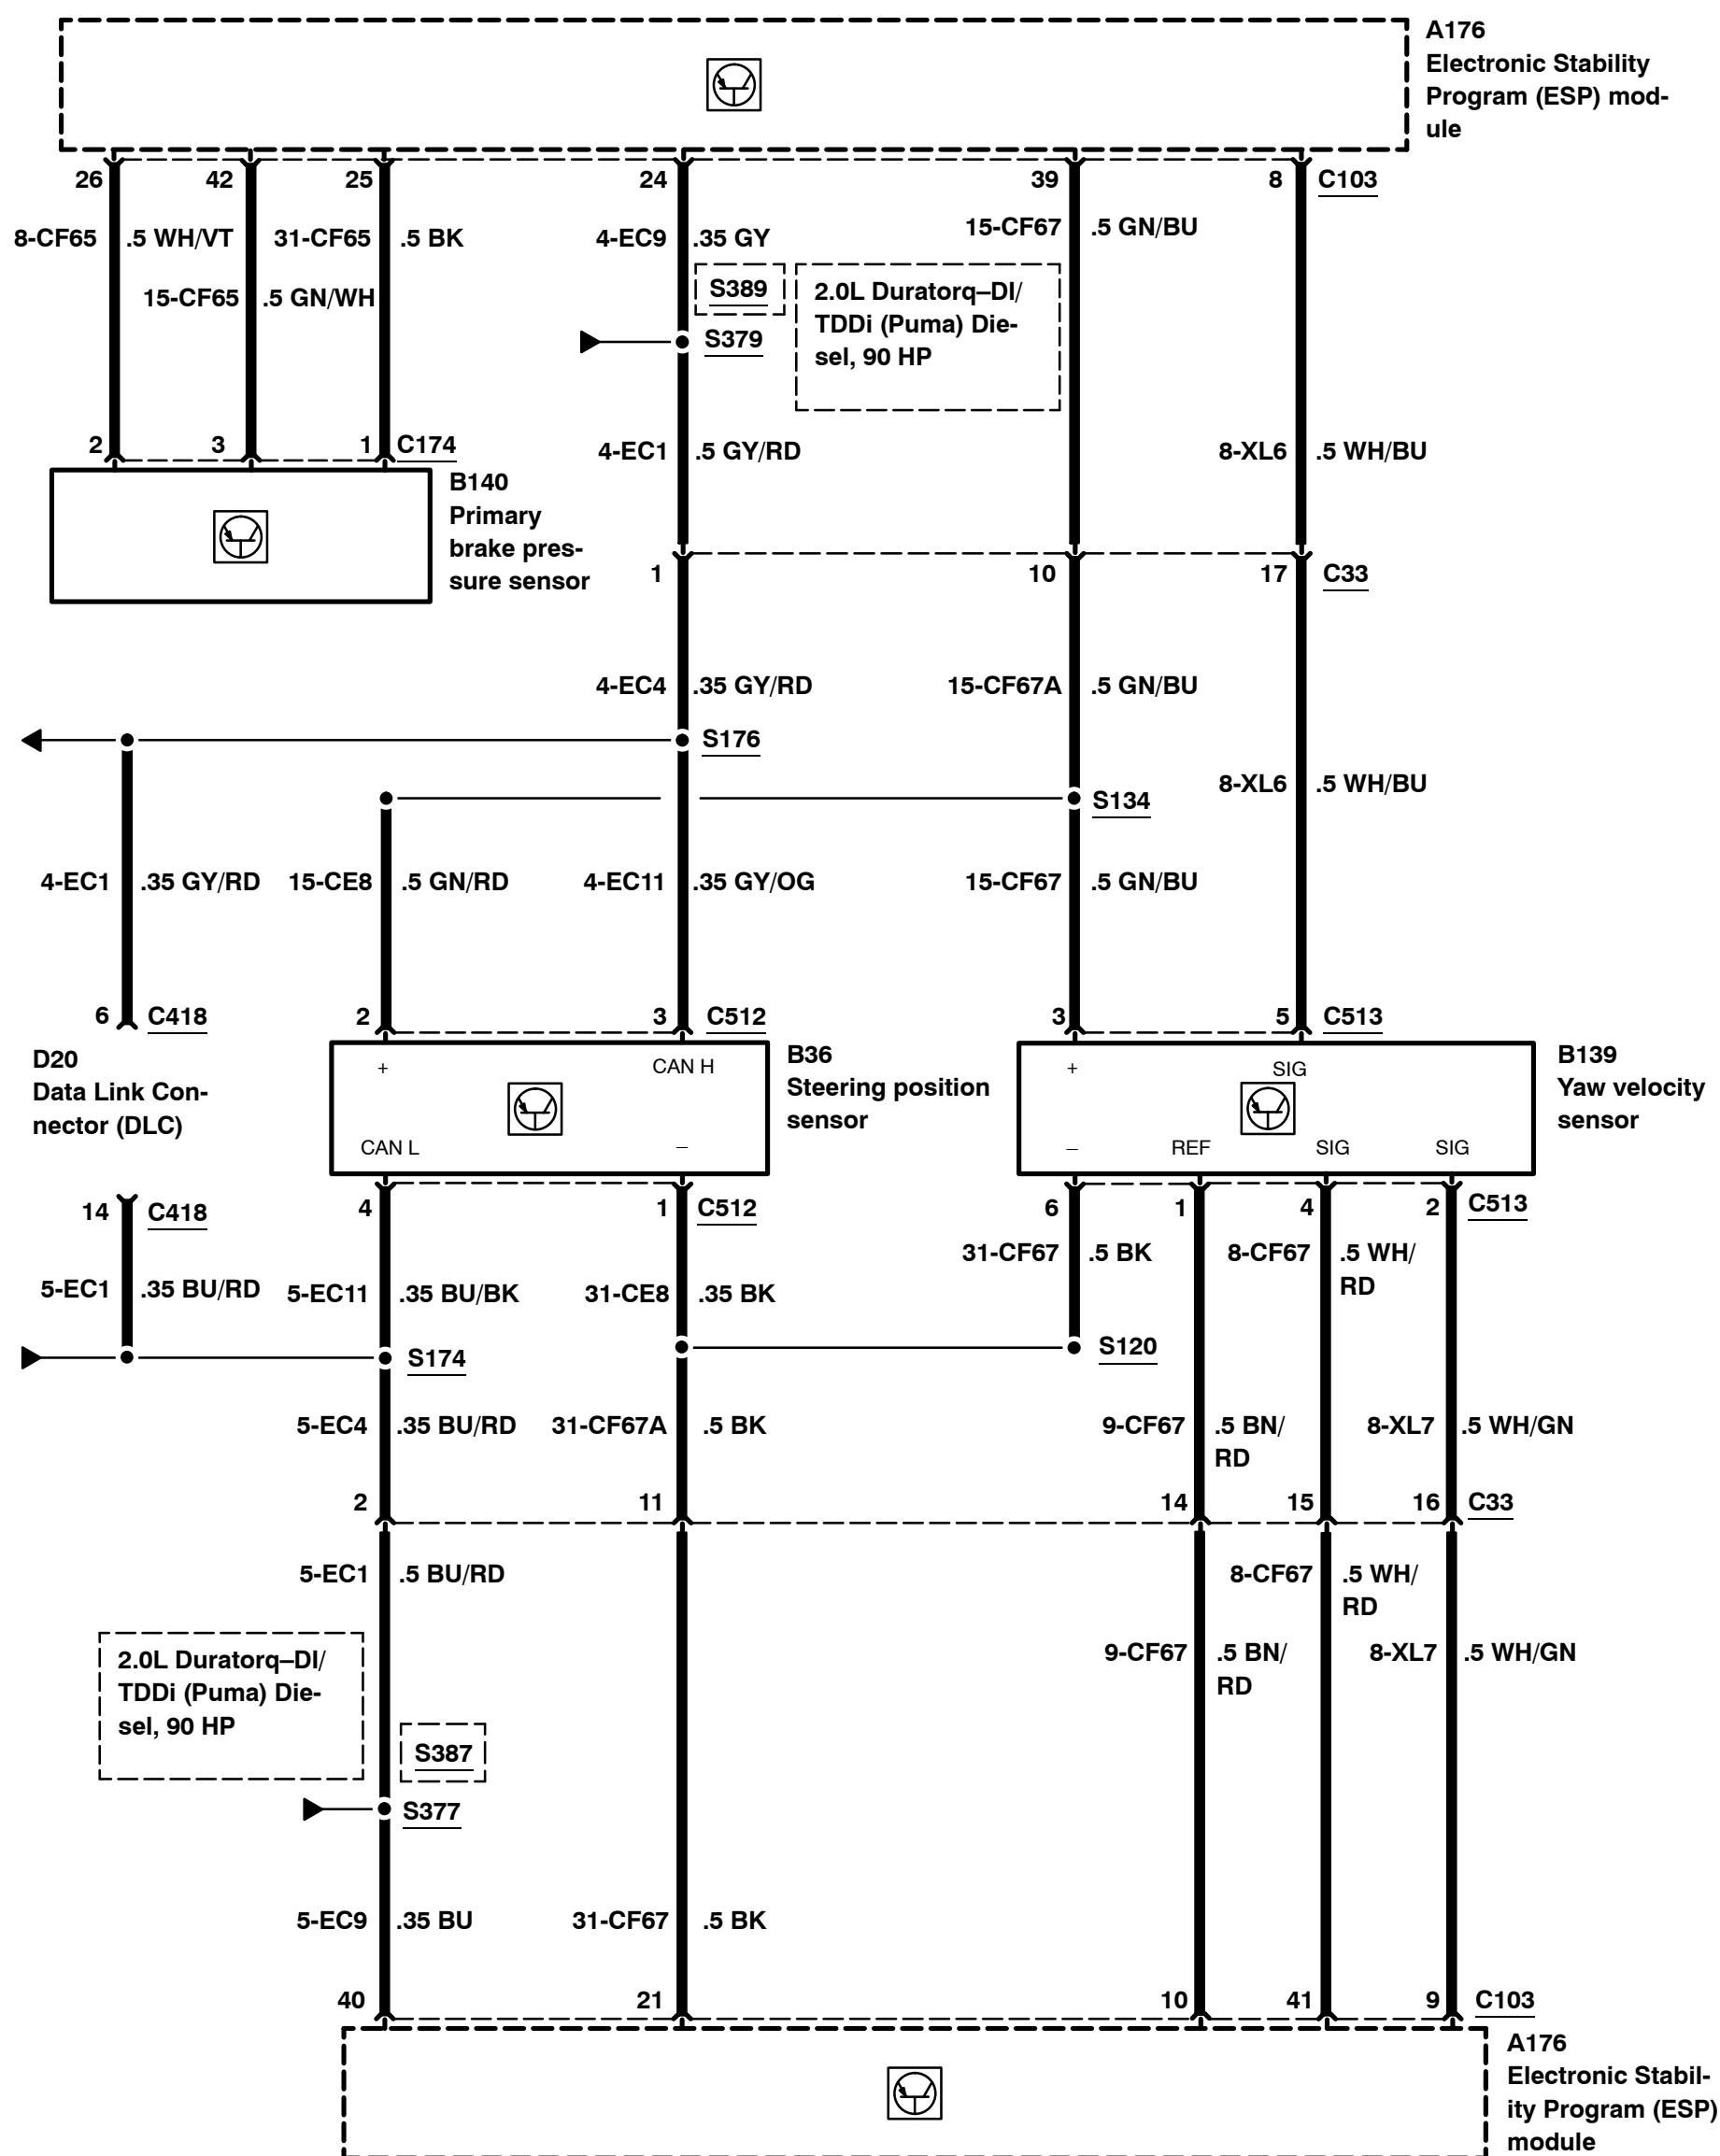

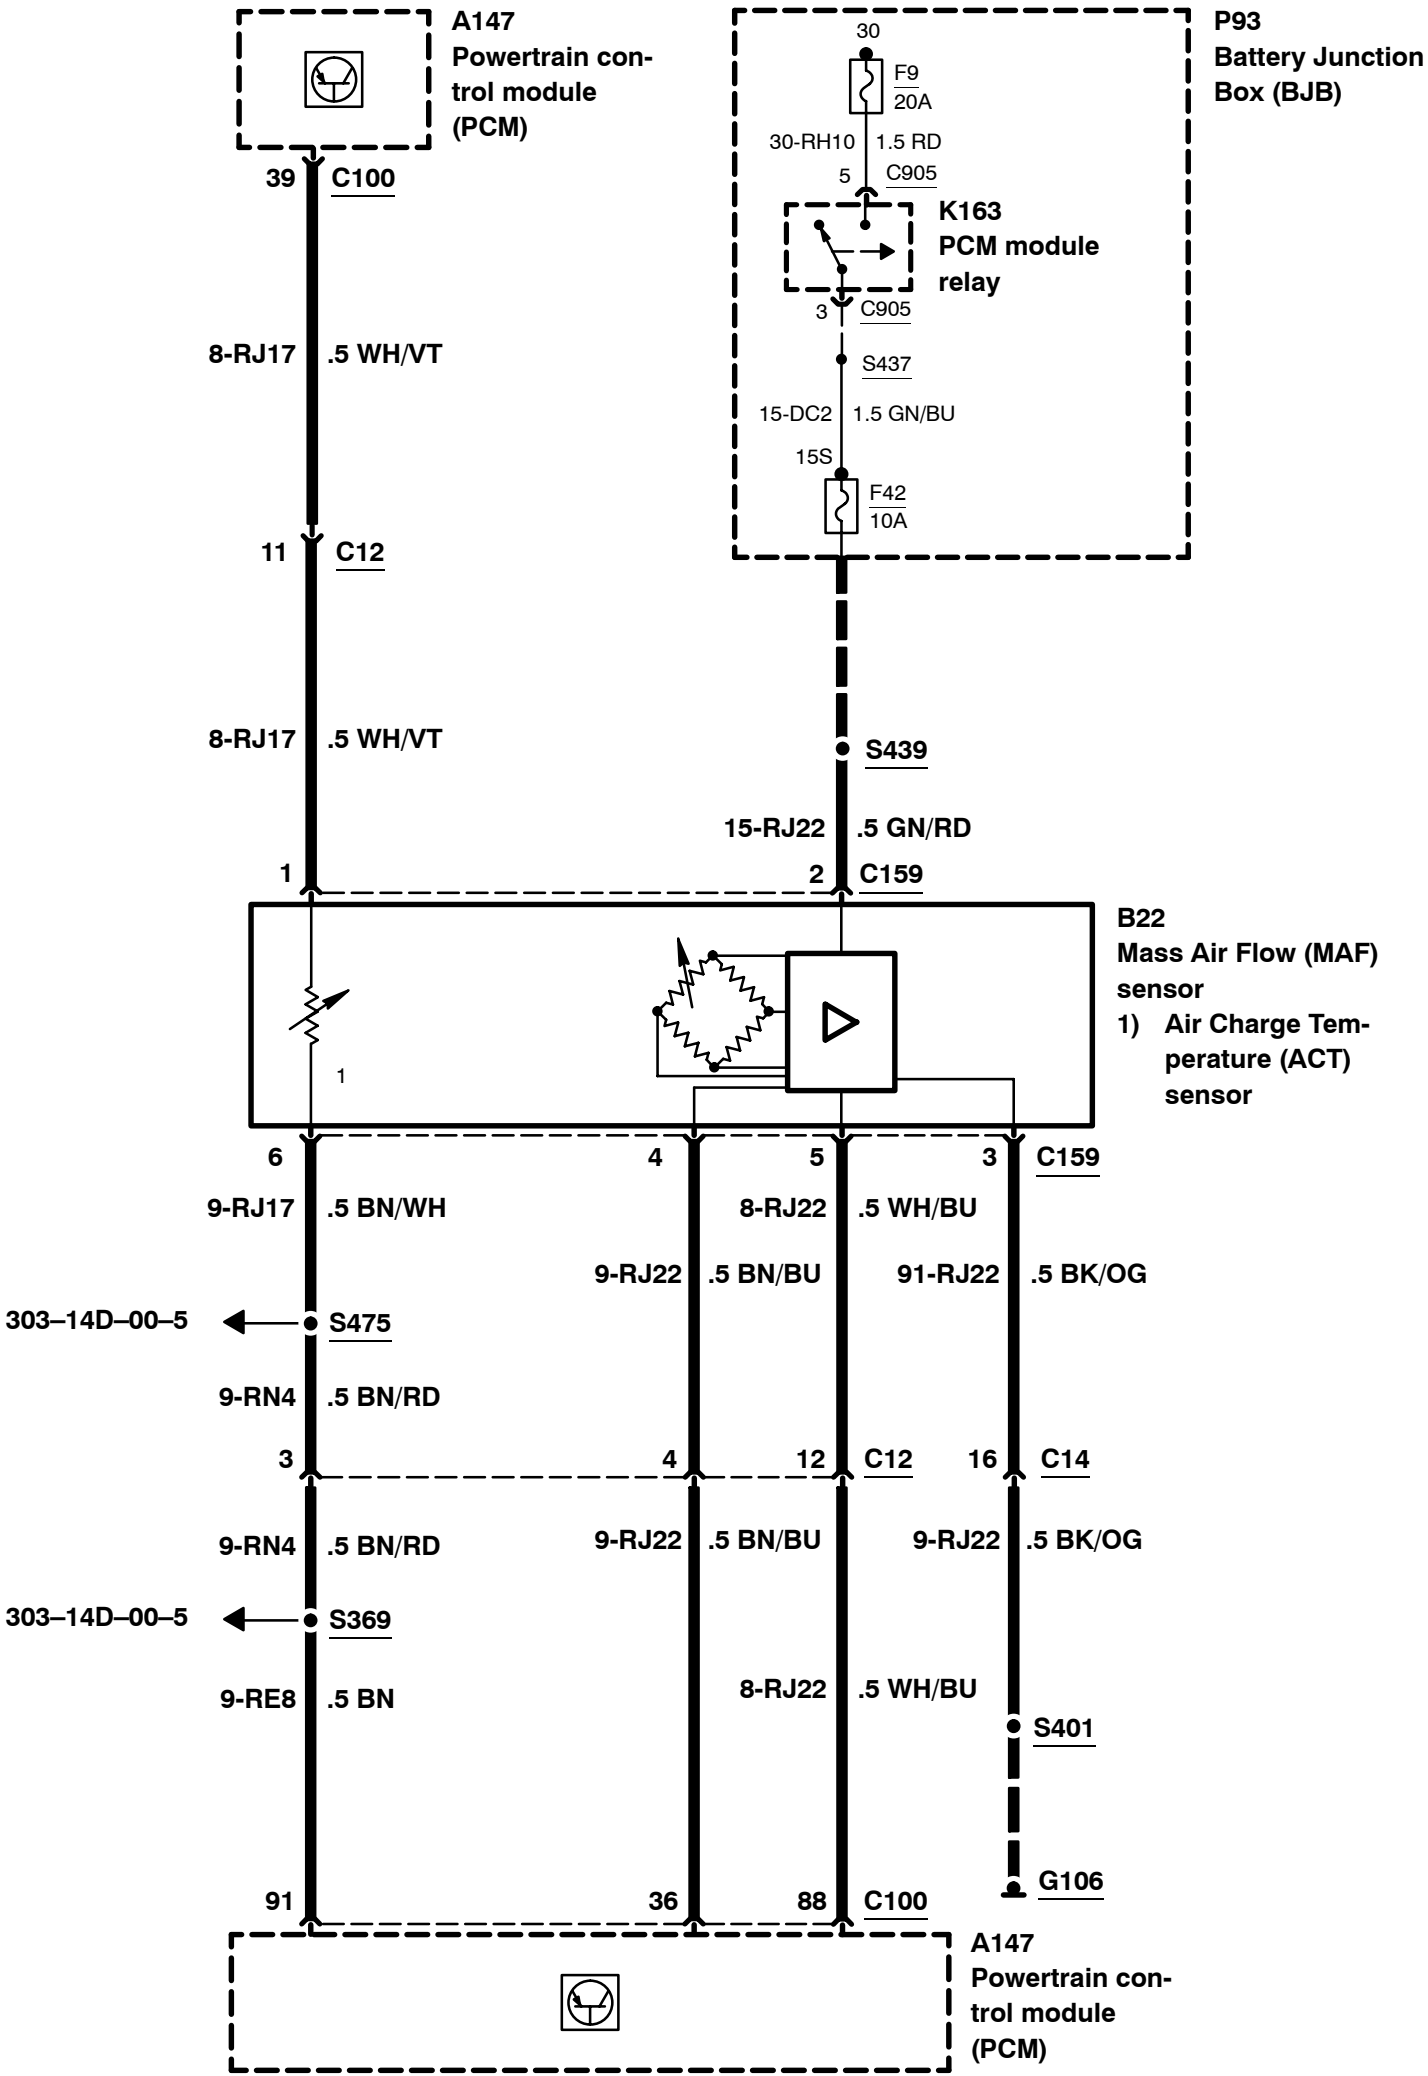


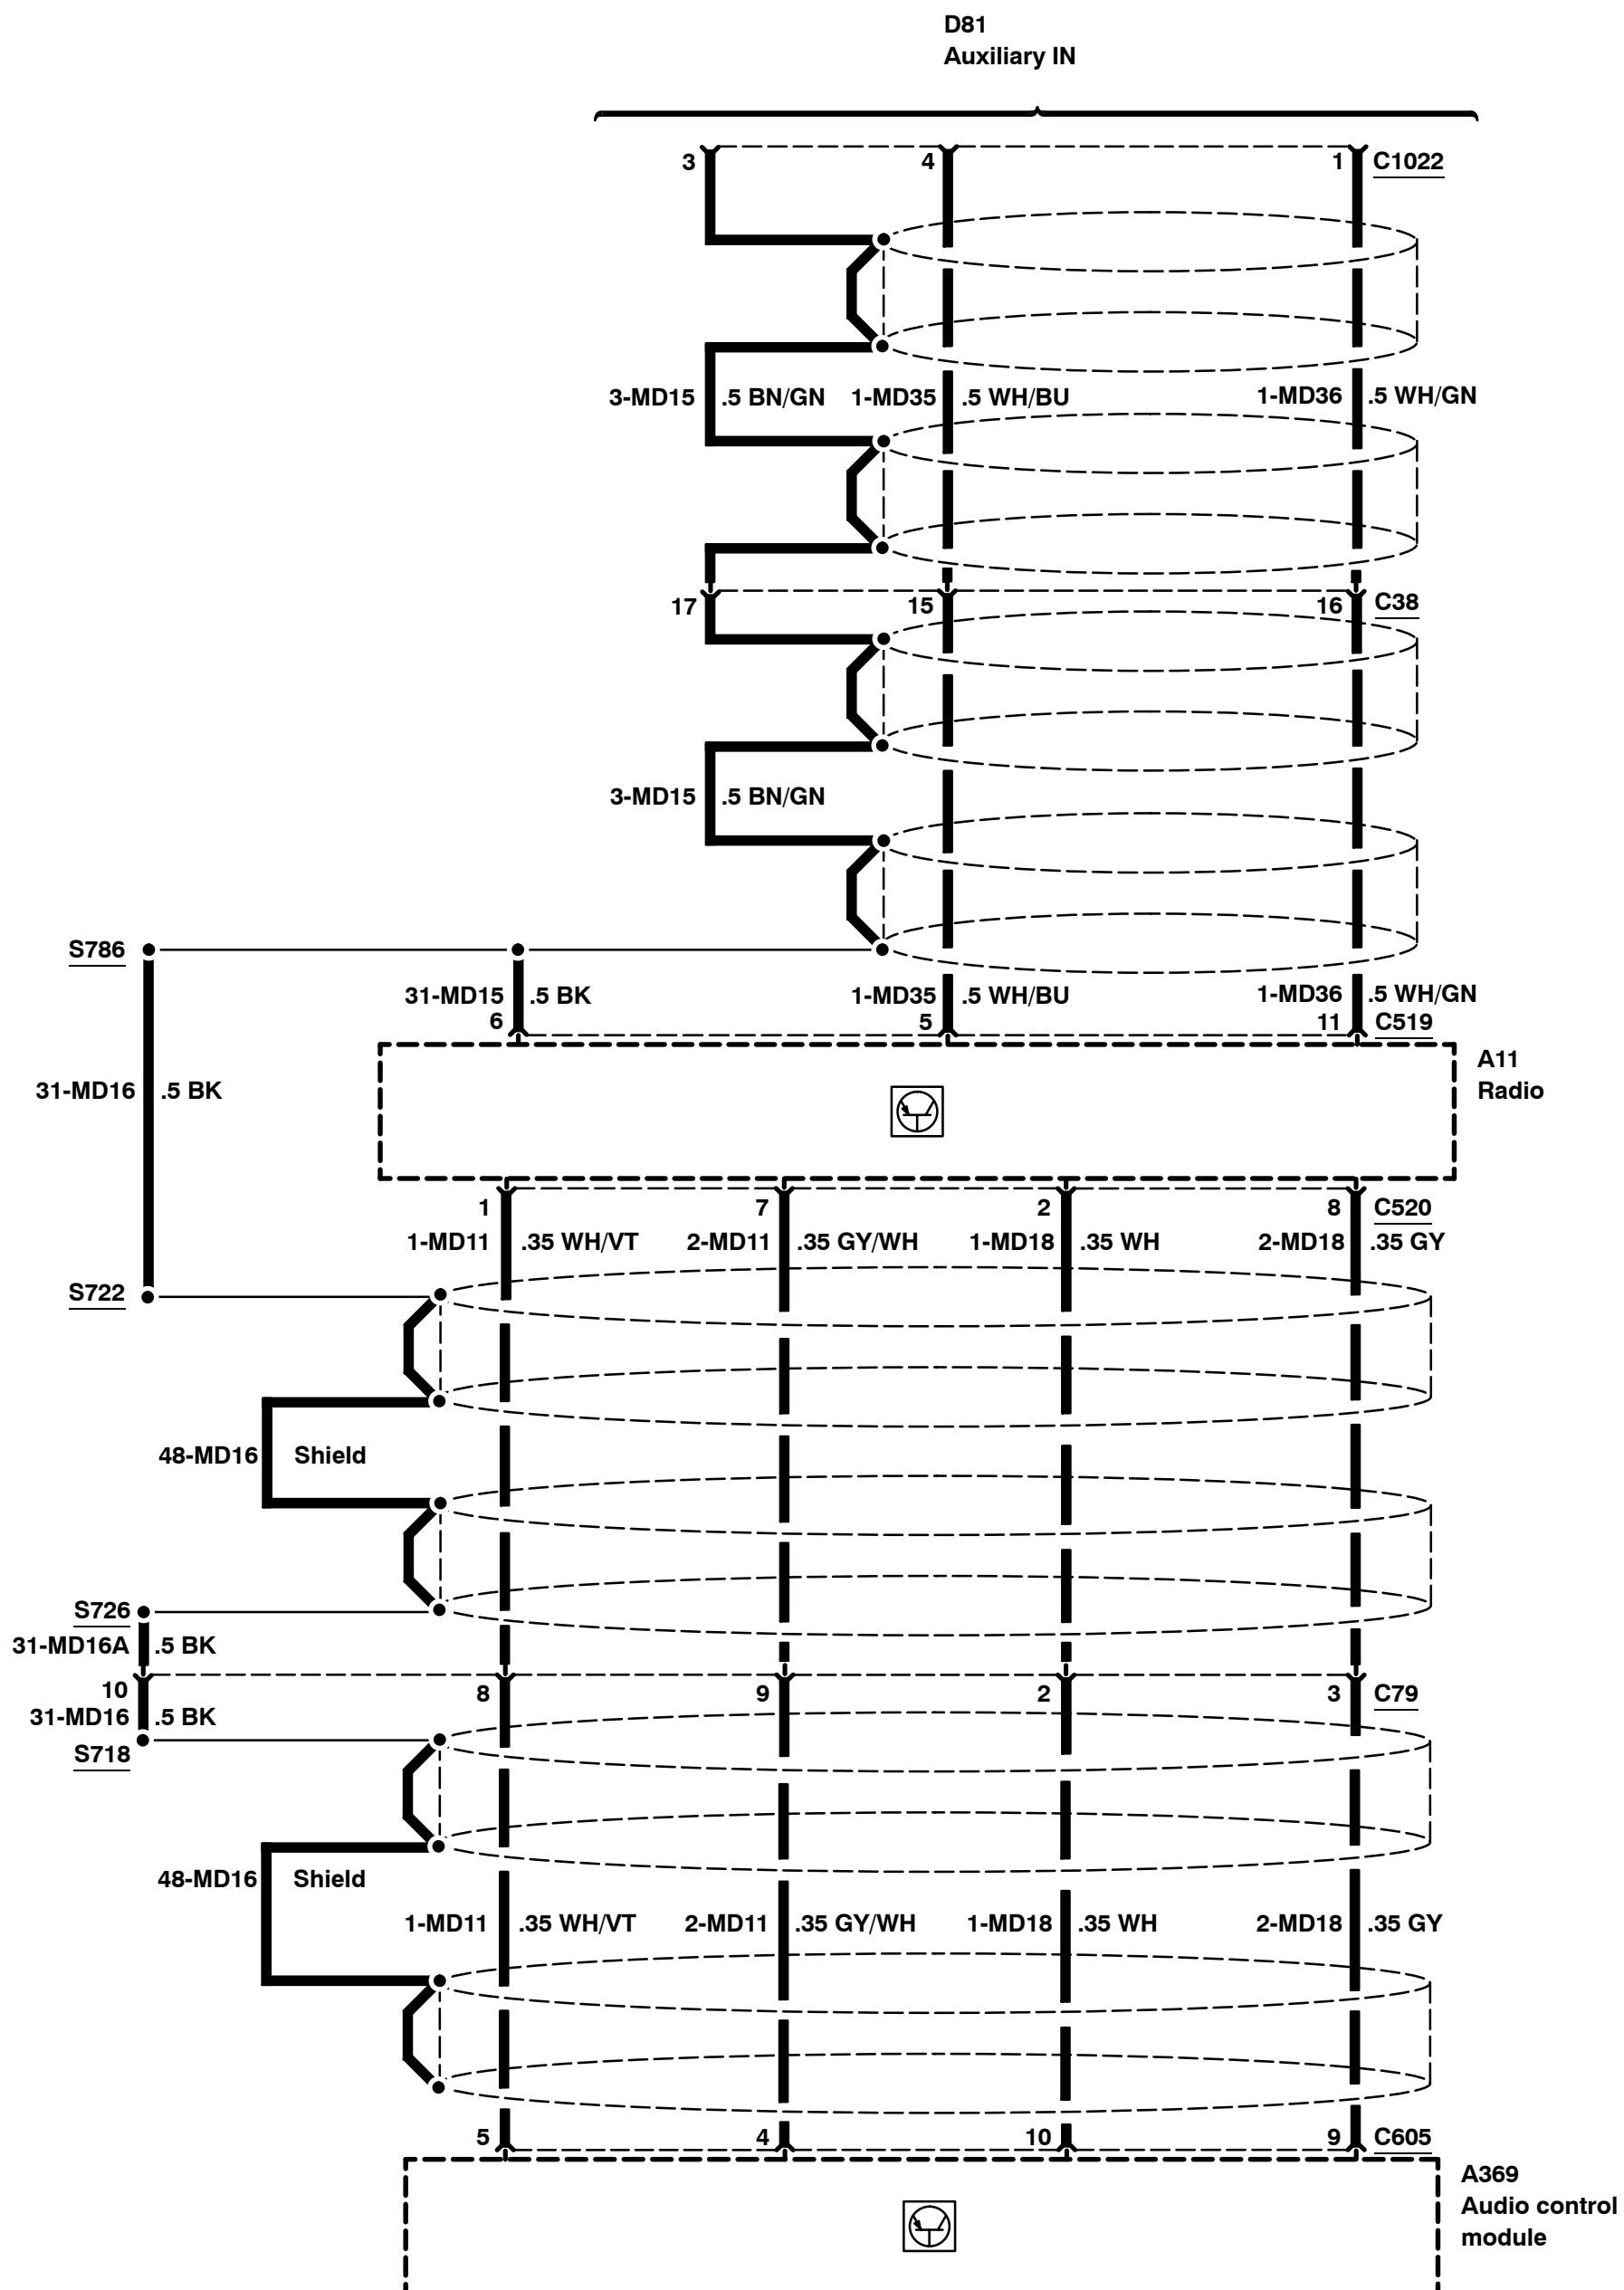

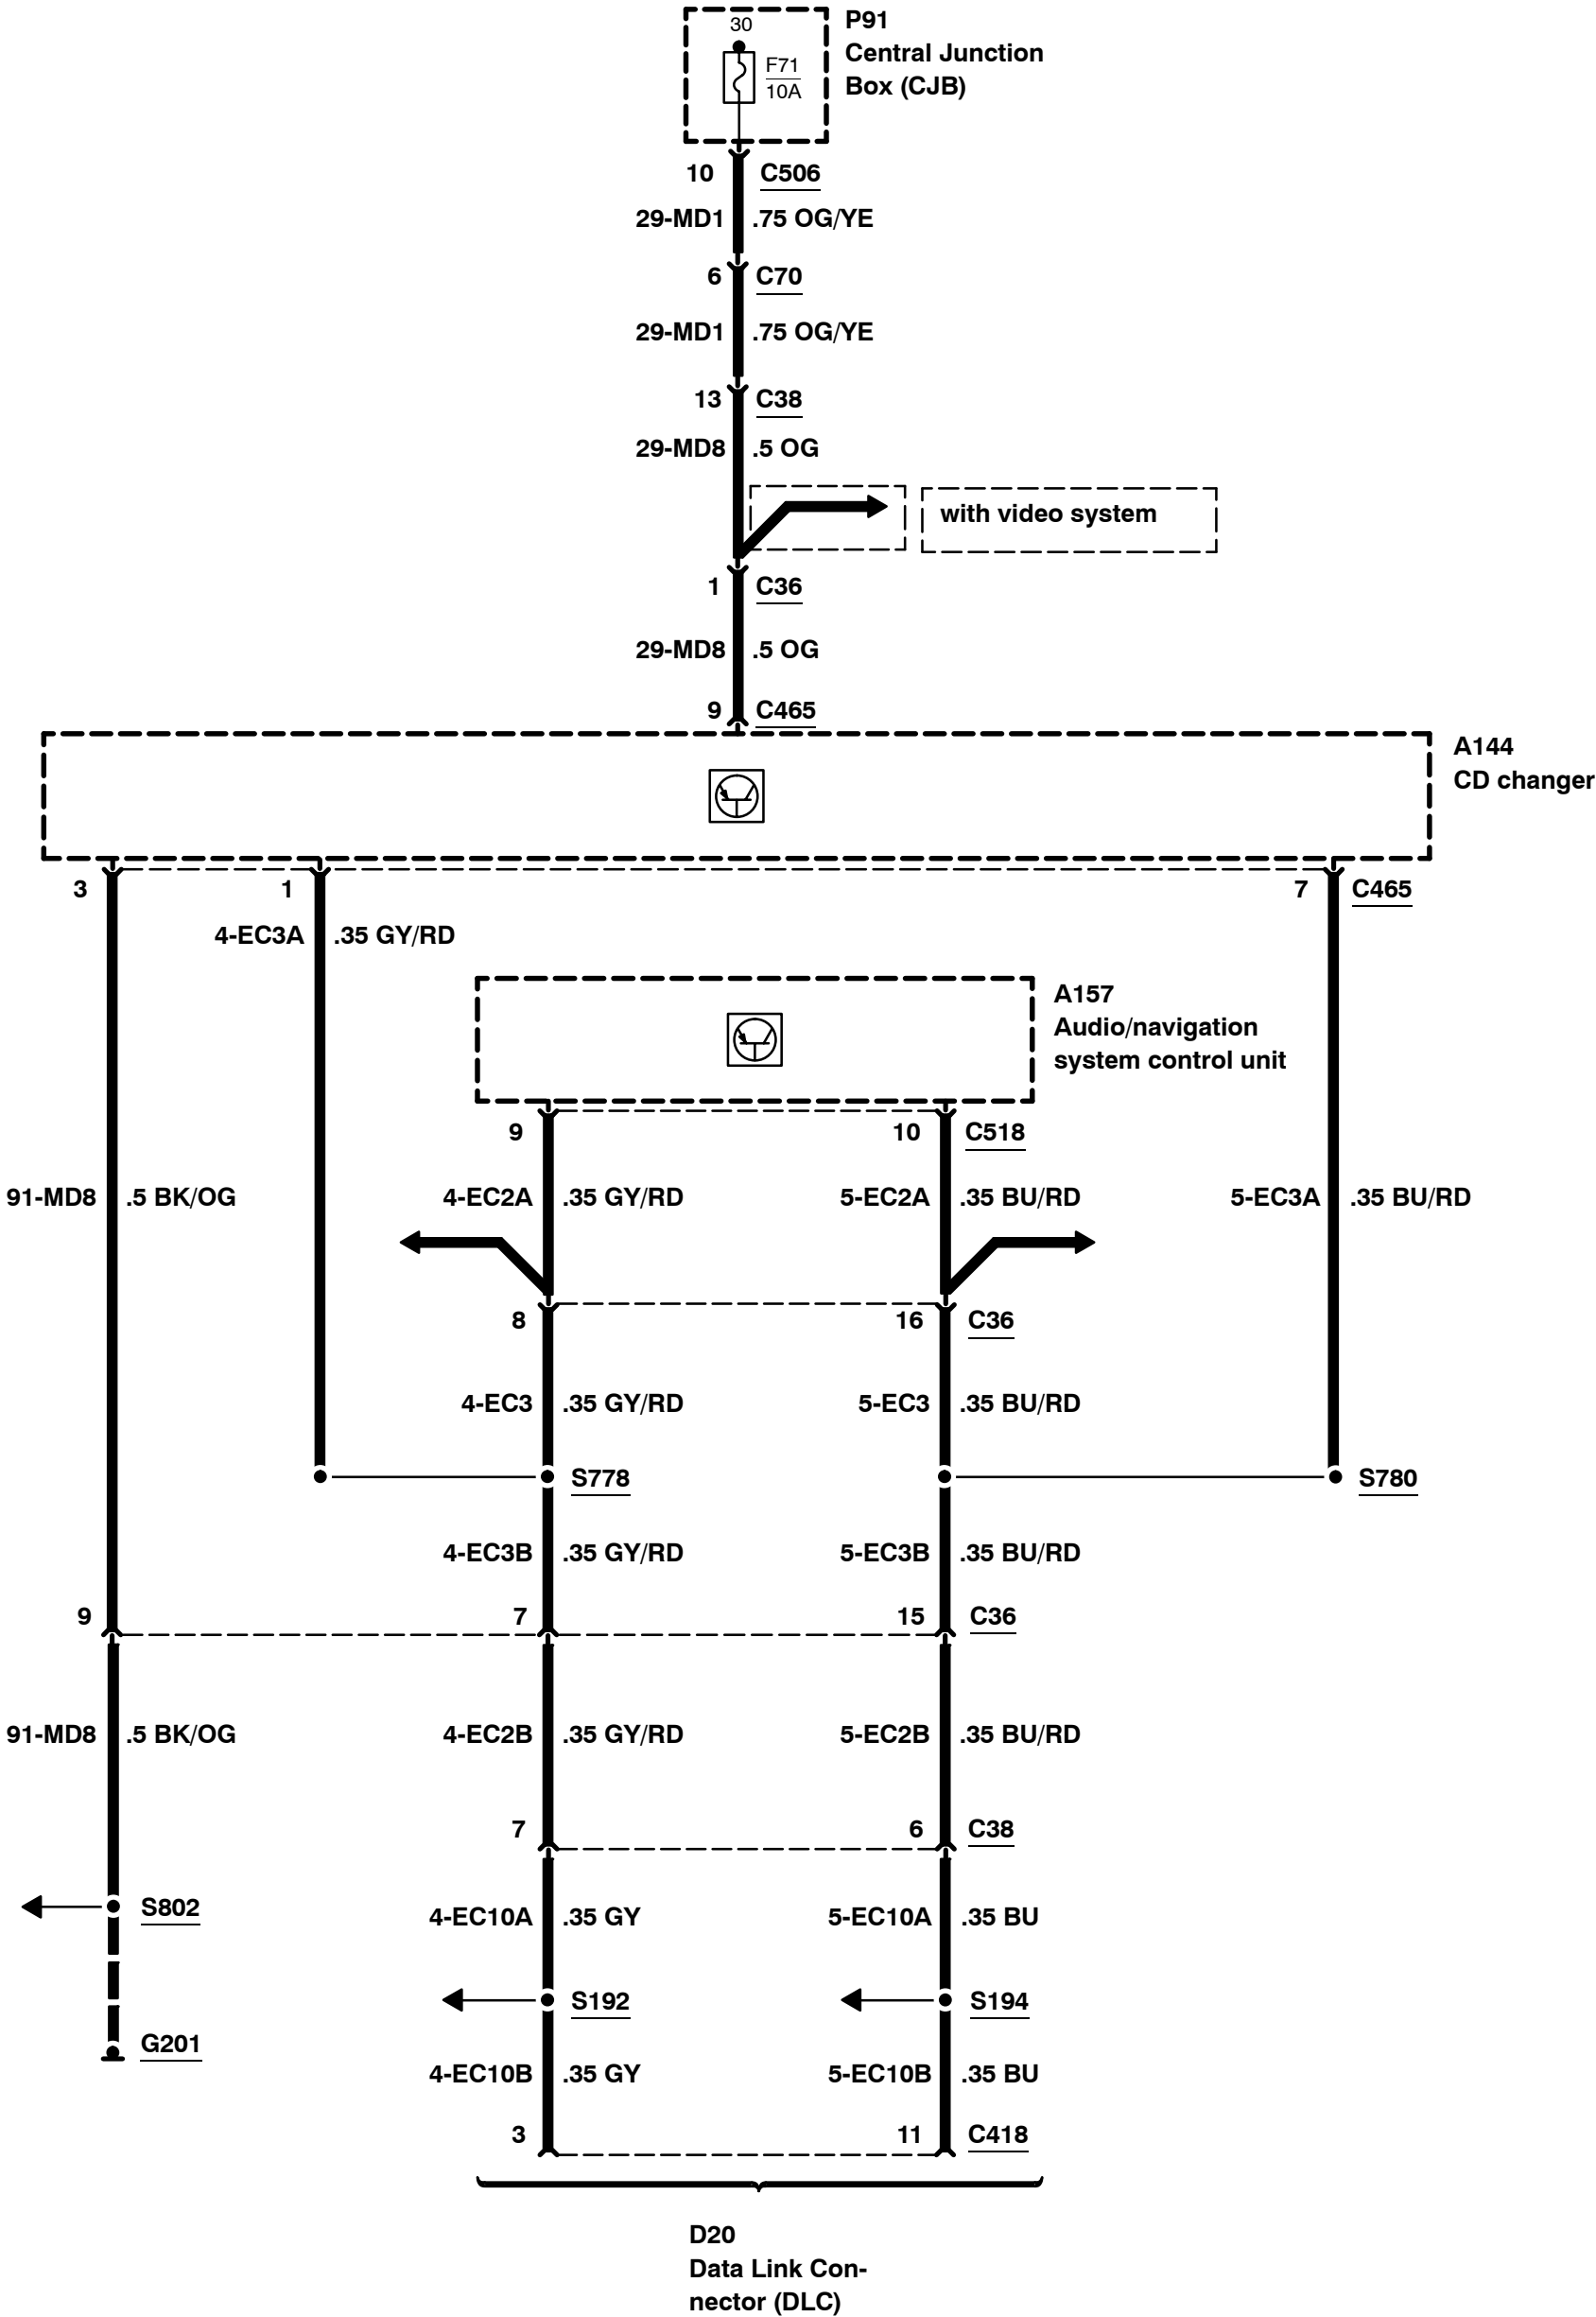


Power Distribution

 03/2004
700-02-00-24
2003.75
Mondeo

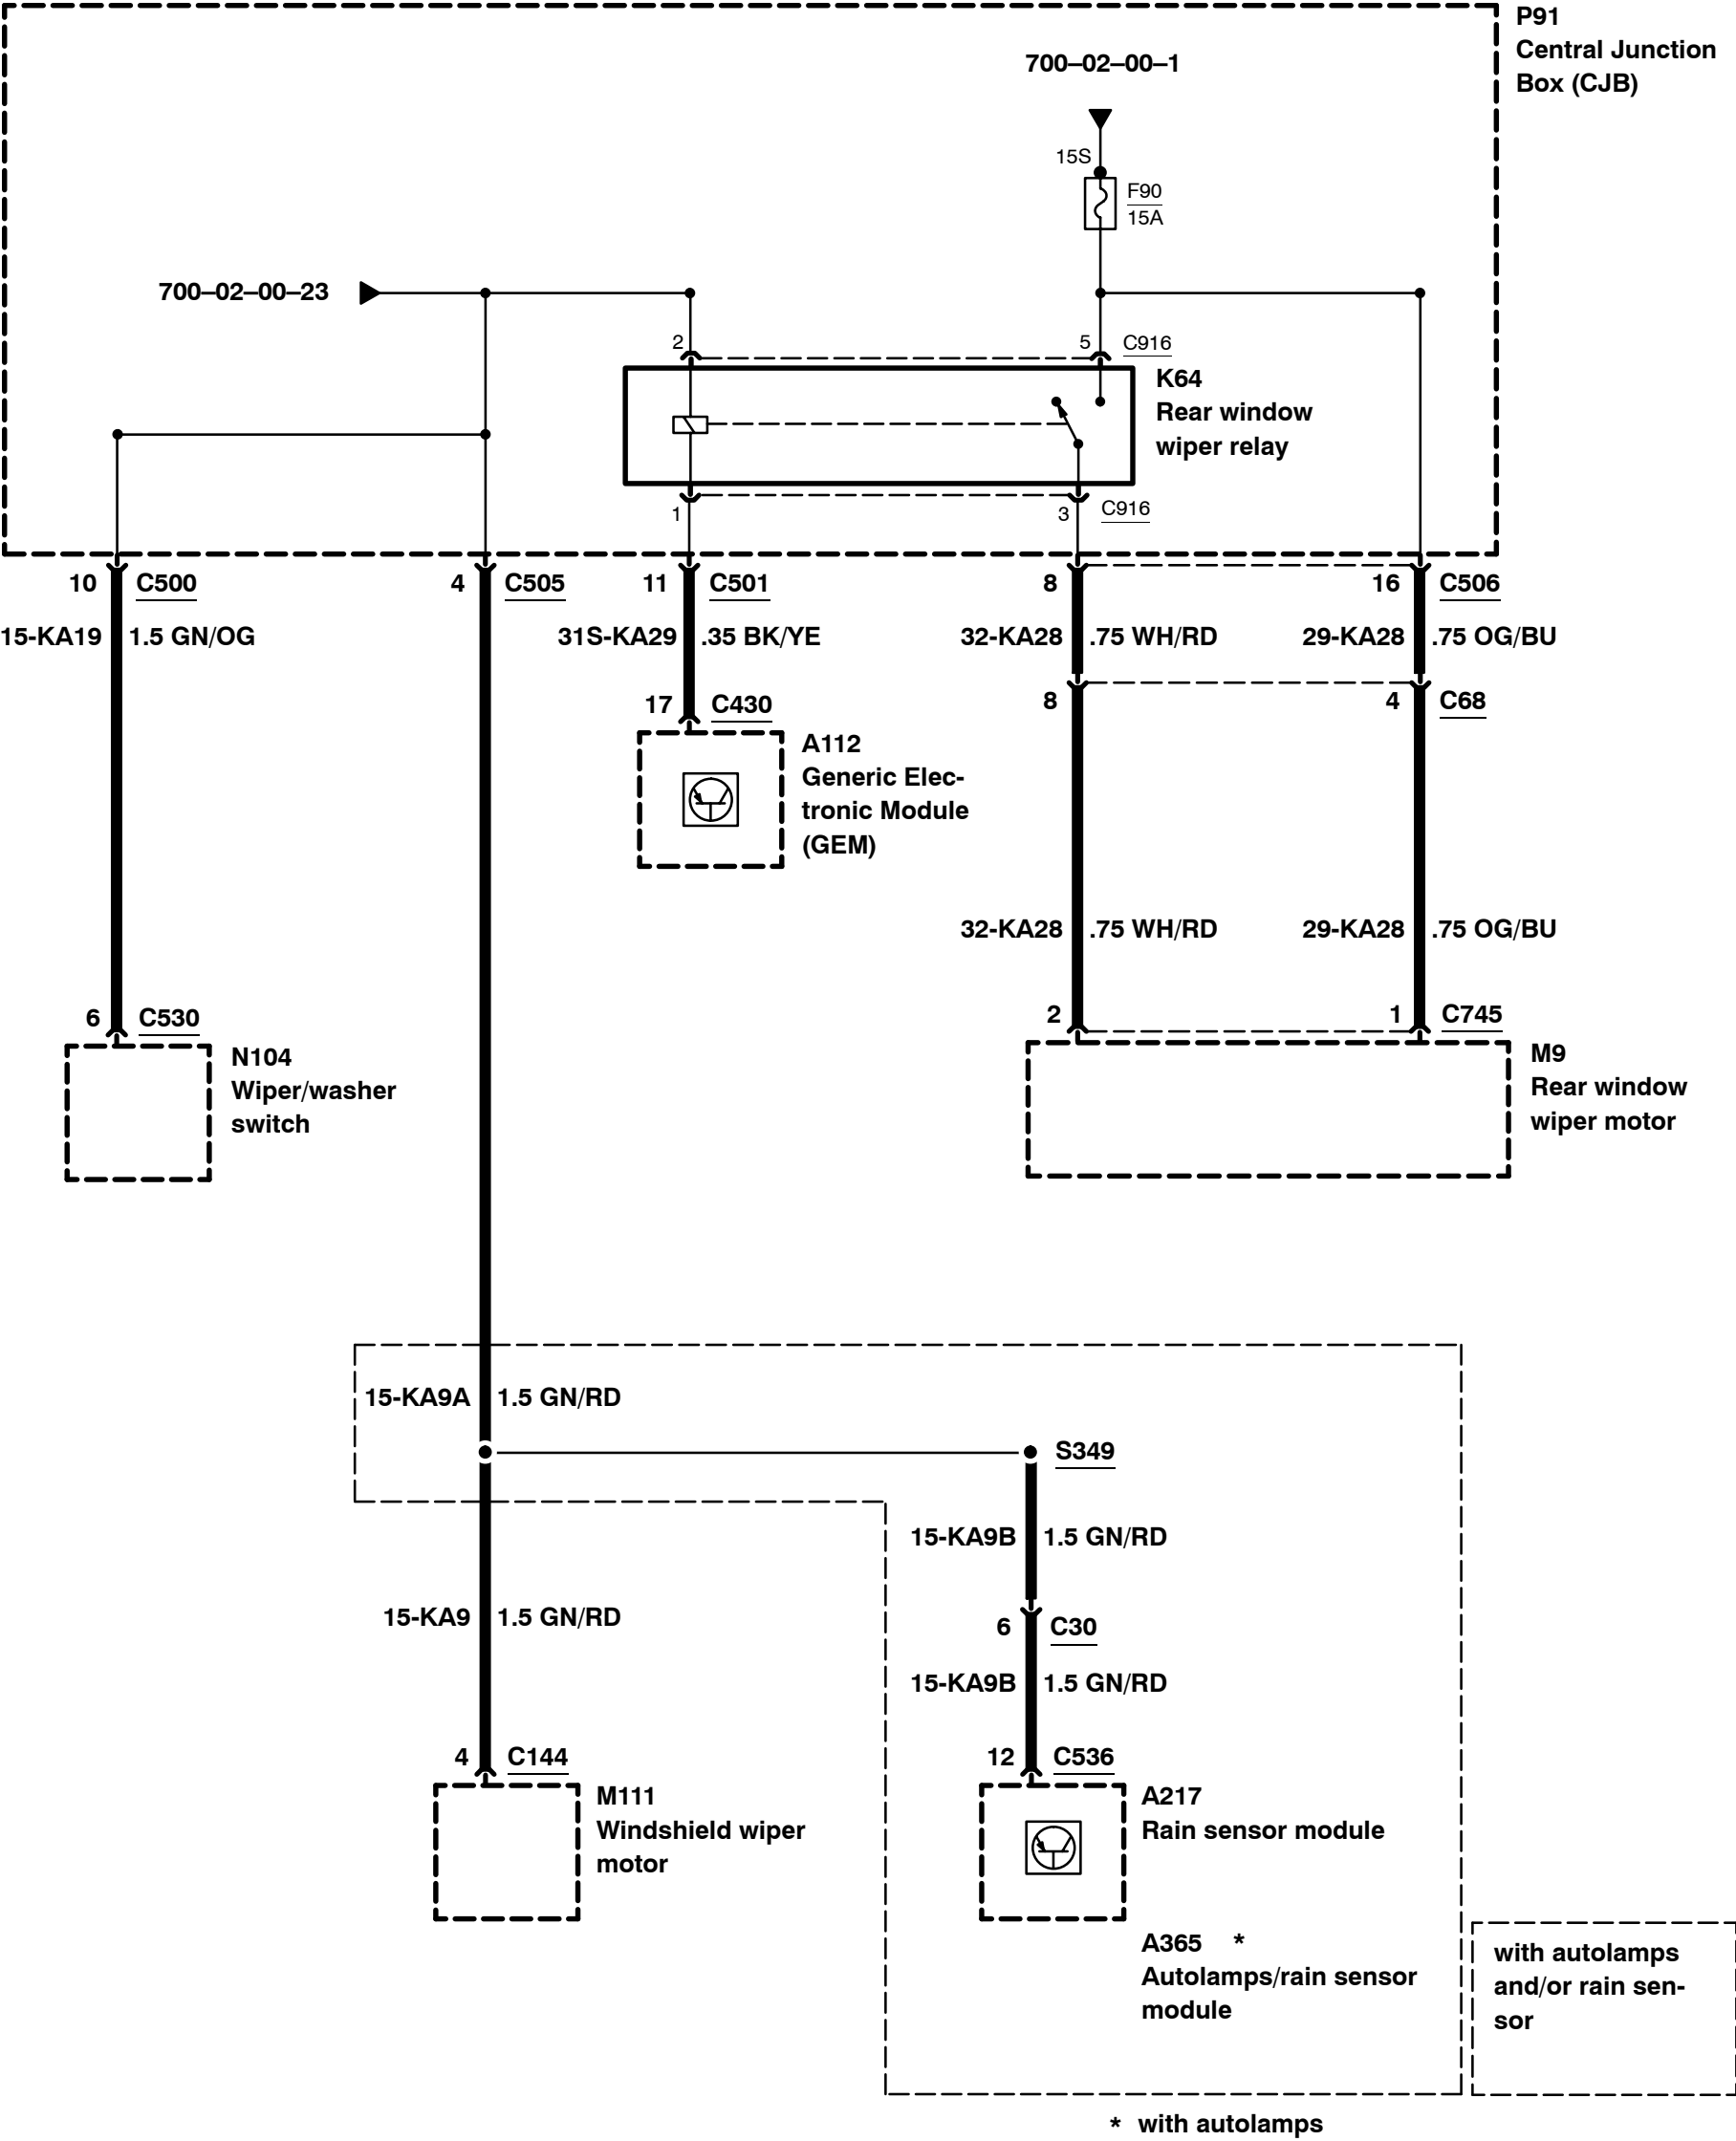

Ground Distribution – G201, with DVD navigation system with touch screen,
before 04/2004

 03/2004
700-04-00-30
2003.75
Mondeo

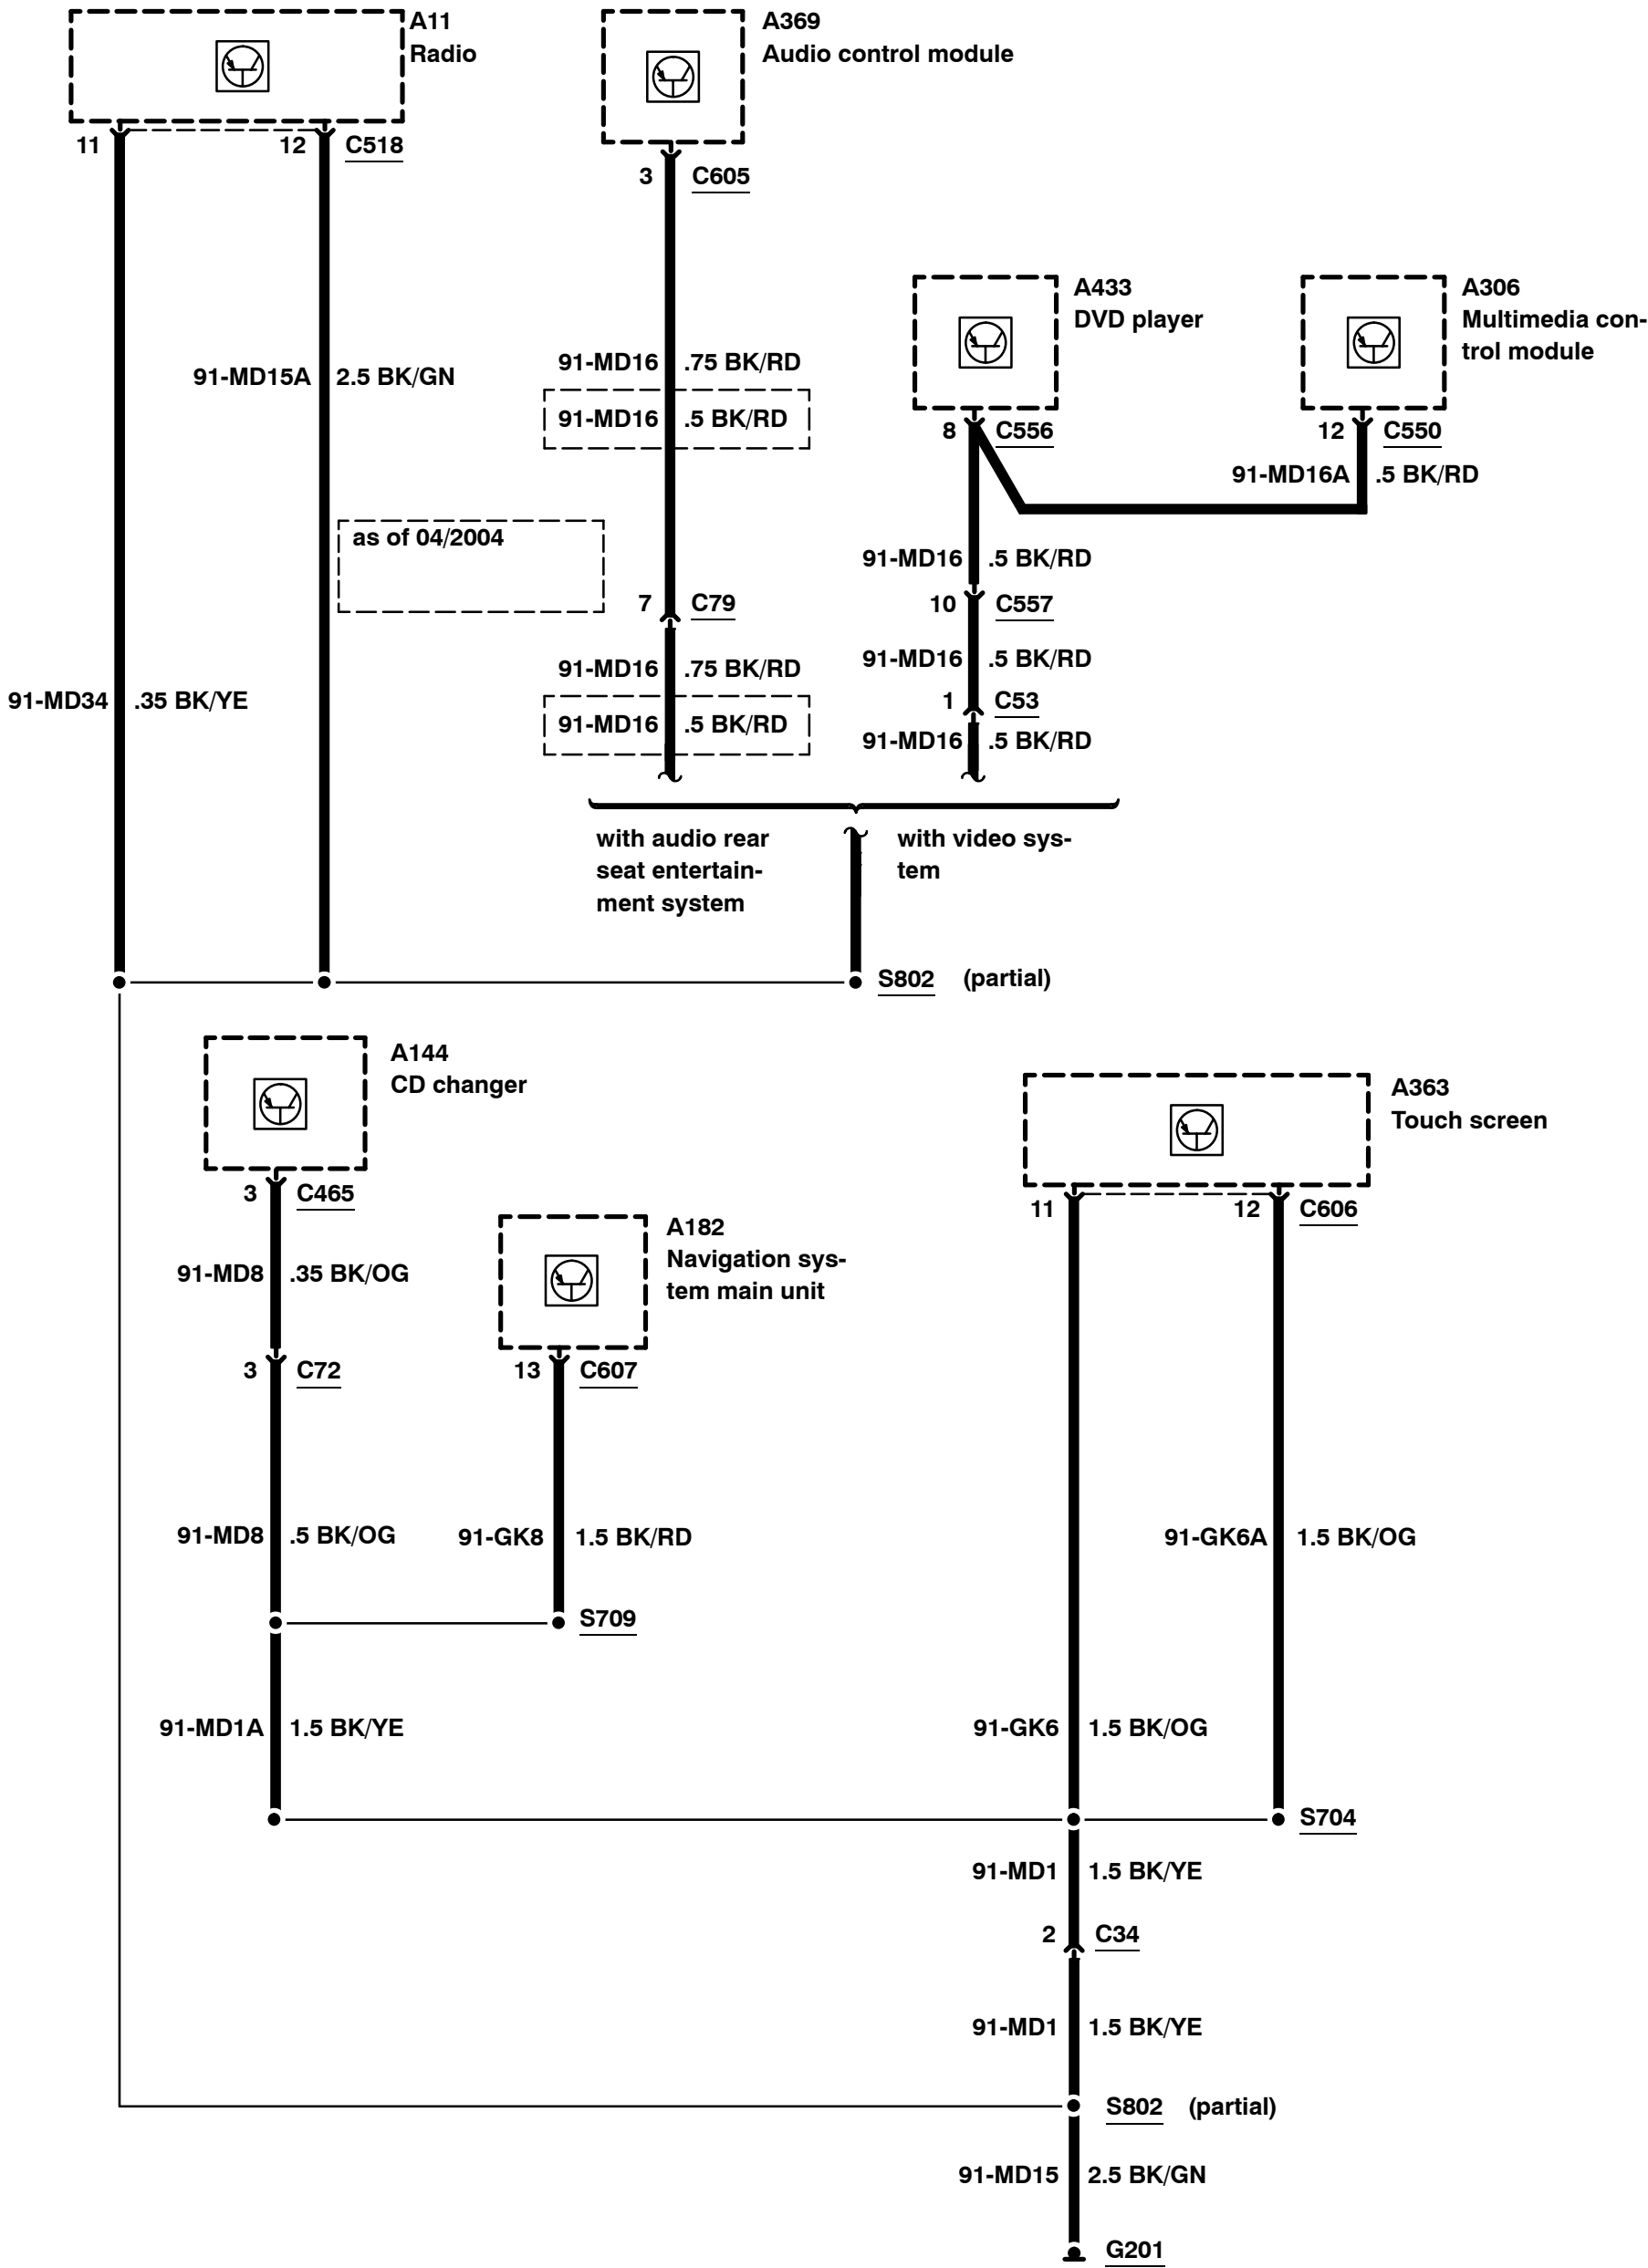

K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F9	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6)	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – B 3
K163	PCM module relay engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – B 3
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – F3, before 12/2003	6 – C 4
K168	Auxiliary electric coolant heater relay 1 engine compartment, rear, LH side – F82, Diesel engines	6 – C 4
K169	Auxiliary electric coolant heater relay 2 engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	6 – C 5
K169	Auxiliary electric coolant heater relay 2 engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	6 – C 5
K169	Auxiliary electric coolant heater relay 2 engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	6 – C 5
K169	Auxiliary electric coolant heater relay 2 engine compartment, rear, LH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel	6 – C 5
K169	Auxiliary electric coolant heater relay 2 engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	6 – C 5

P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F67, 3.0L Duratec–ST (VE6)	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F67, Diesel engines	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F68	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F69, with external CD changer and/or video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F69, without external CD changer and video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F7	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F70	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F71, Bluetooth voice control	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, with video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, without video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F71, with DVD navigation system with touch screen	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F72, with external CD changer and/or video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F72, without external CD changer and video system	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F73	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F74, as of 01/2004, F201, with 7–pin trailer socket	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F74, as of 01/2004, F200, F201, with 13–pin trailer socket	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F74, before 01/2004	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J) . . .	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J)	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel – F76, F77, as of 04/2004	25 – E 2

C465	in luggage compartment, LH side – G201, except DVD navigation system with touch screen, before 04/2004	
C465	in loading space, LH side – G201, except DVD navigation system with touch screen, before 04/2004	
C465	in luggage compartment, LH side – G201, with DVD navigation system with touch screen, before 04/2004	
C465	in loading space, LH side – G201, with DVD navigation system with touch screen, before 04/2004	
C465	in luggage compartment, LH side – with external CD changer	
C465	in loading space, LH side – with external CD changer	
C465	in luggage compartment, LH side – without DVD navigation system with touch screen	
C465	in loading space, LH side – without DVD navigation system with touch screen	
C465	in luggage compartment, LH side	
C465	in loading space, LH side	
C473	roof, front, centre – Auto-dimming interior mirror	21 – C 1
C473	roof, front, centre – F91	21 – C 1
C473	roof, front, centre – G200	21 – C 1
C474	roof, rear, wagon – F99, wagon	20 – E 4
C474	roof, rear, wagon	20 – E 4
C475	below LH sun visor – F99, 4-door model/5-door model	21 – F 4
C475	below LH sun visor – F99, wagon	21 – F 4
C475	below LH sun visor – G200	21 – F 4
C475	below LH sun visor	21 – F 4
C476	below RH sun visor – F99, 4-door model/5-door model	21 – B 4
C476	below RH sun visor – F99, wagon	21 – B 4
C476	below RH sun visor – G200	21 – B 4
C476	below RH sun visor	21 – B 4
C477	in loading space, LH side, wagon – G200	20 – E 4
C477	in loading space, LH side, wagon	20 – E 4
C477	in luggage compartment, LH side, 4-door model – F99, 4-door model/5-door model	47 – C 5
C477	in luggage compartment, LH side, 4-door model – G200	47 – C 5
C477	in luggage compartment, LH side, 4-door model	47 – C 5
C477	in luggage compartment, LH side, 5-door model – F99, 4-door model/5-door model	
C477	in luggage compartment, LH side, 5-door model – G200	
C477	in luggage compartment, LH side, 5-door model	
C478	dash panel, driver side – 4-speed automatic transmission (CD4E)	23 – F 2
C478	dash panel, driver side – 5-speed automatic transmission (5F31J)	23 – F 2
C478	dash panel, driver side – Autolamps	23 – F 2
C478	dash panel, driver side – Cigar lighter	23 – F 2
C478	dash panel, driver side – Climate controlled front seats	23 – F 2
C478	dash panel, driver side – DVD navigation system with touch screen	23 – F 2
C478	dash panel, driver side – EATC, as of 04/2004	23 – F 2
C478	dash panel, driver side – EATC, before 04/2004	23 – F 2
C478	dash panel, driver side – F20, F21	23 – F 2
C478	dash panel, driver side – F62	23 – F 2
C478	dash panel, driver side – F88, F89, with autolamps	23 – F 2
C478	dash panel, driver side – F88, F89, without autolamps	23 – F 2

C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – E 3
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6), automatic transmission	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6), manual transmission	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 3.0L Duratec–SE (VE6)	29 – D 1

G105	engine compartment, front, RH side – Headlamp Levelling, with high intensity discharge headlamps	3 – C 2
G105	engine compartment, front, RH side – Turn Signal and Hazard Lamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4-door model/5-door model, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4-door model/5-door model, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Without high intensity discharge headlamps .	3 – C 2
G105	engine compartment, front, RH side – With high intensity discharge headlamps . . .	3 – C 2
G105	engine compartment, front, RH side – without trailer socket, 4-door model/5-door model	3 – C 2
G105	engine compartment, front, RH side – without trailer socket, wagon	3 – C 2
G105	engine compartment, front, RH side – Heated windshield	3 – C 2
G105	engine compartment, front, RH side – with variable intermittent wipe	3 – C 2
G105	engine compartment, front, RH side – with rain sensor	3 – C 2
G105	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	3 – C 2
G105	engine compartment, front, RH side – With rear window wiper, with headlamp washer	3 – C 2
G105	engine compartment, front, RH side – G105	3 – C 2
G105	engine compartment, front, RH side	3 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	3 – C 2
G105	engine compartment, front, RH side – 5-speed automatic transmission (5F31J), Diesel engines	5 – C 2
G105	engine compartment, front, RH side	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, with high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	5 – C 2

F78	in Central Junction Box (CJB) – F78, F80	34 – E 3
F78	in Central Junction Box (CJB) – LHD	34 – E 3
F78	in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	34 – E 3
F78	in Central Junction Box (CJB) – RHD	34 – E 3
F78	in Central Junction Box (CJB)	34 – E 3
F79	in Central Junction Box (CJB)	34 – B 3
F80	in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	35 – B 3
F80	in Central Junction Box (CJB) – 4-speed automatic transmission (CD4E), 4-door model/5-door model	35 – B 3
F80	in Central Junction Box (CJB) – 4-speed automatic transmission (CD4E), wagon	35 – B 3
F80	in Central Junction Box (CJB) – 5-speed automatic transmission (5F31J), 4-door model/5-door model	35 – B 3
F80	in Central Junction Box (CJB) – 5-speed automatic transmission (5F31J), wagon	35 – B 3
F80	in Central Junction Box (CJB) – Auto-dimming interior mirror	35 – B 3
F80	in Central Junction Box (CJB) – Bosch, 4-door model/5-door model	35 – B 3
F80	in Central Junction Box (CJB) – Bosch, wagon	35 – B 3
F80	in Central Junction Box (CJB) – Diesel engines	35 – B 3
F80	in Central Junction Box (CJB) – DVD navigation system with touch screen	35 – B 3
F80	in Central Junction Box (CJB) – F78, F80	35 – B 3
F80	in Central Junction Box (CJB) – Petrol engines	35 – B 3
F80	in Central Junction Box (CJB) – Pre-equipment pack, Diesel engines	35 – B 3
F80	in Central Junction Box (CJB) – Pre-equipment pack, Petrol engines	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, with trailer socket, 4-door model/5-door model, as of 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, with trailer socket, 4-door model/5-door model, before 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, with trailer socket, wagon, before 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, without trailer socket, 4-door model/5-door model	35 – B 3
F80	in Central Junction Box (CJB) – Reversing lamps, without trailer socket, wagon	35 – B 3
F80	in Central Junction Box (CJB) – Valeo, 4-door model/5-door model, as of 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Valeo, 4-door model/5-door model, before 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Valeo, wagon, as of 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – Valeo, wagon, before 01/2004	35 – B 3
F80	in Central Junction Box (CJB) – With rear window wiper	35 – B 3
F80	in Central Junction Box (CJB)	35 – B 3
F81	in Central Junction Box (CJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission	35 – C 2
F81	in Central Junction Box (CJB) – 4-speed automatic transmission (CD4E)	35 – C 2
F81	in Central Junction Box (CJB) – 5-speed automatic transmission (5F31J)	35 – C 2
F81	in Central Junction Box (CJB) – Climate controlled front seats	35 – C 2
F81	in Central Junction Box (CJB) – EATC	35 – C 2
F81	in Central Junction Box (CJB) – F81	35 – C 2
F81	in Central Junction Box (CJB) – Heated front seats	35 – C 2
F81	in Central Junction Box (CJB) – with EATC, as of 04/2004	35 – C 2
F81	in Central Junction Box (CJB) – with EATC, before 04/2004	35 – C 2
F81	in Central Junction Box (CJB) – with heated rear seats	35 – C 2

