

2008.50 Mondeo

Wiring Diagrams



Table of Contents

GROUP 1 General Information

Service Information

General Information	100-00
---------------------	--------

GROUP 2 Chassis

Suspension

Front Suspension	204-01
Rear Suspension	204-02
Vehicle Dynamic Suspension	204-05

Brake System

Parking Brake and Actuation	206-05
Hydraulic Brake Actuation	206-06
Anti-Lock Control	206-09A
Anti-Lock Control - Stability Assist	206-09B

Steering System

Power Steering	211-02
Steering Column Switches	211-05

GROUP 3 Powertrain

Engine

Engine Cooling - 1.6L Duratec-16V Ti-VCT (Sigma)	303-03A
Engine Cooling - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	303-03B
Fuel Charging and Controls - 1.6L Duratec-16V Ti-VCT (Sigma)	303-04A
Fuel Charging and Controls - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	303-04B
Fuel Charging and Controls - 2.5L Duratec (VI5)	303-04C

Fuel Charging and Controls - 1.8L Duratorq-TDCi (Lynx) Diesel	303-04D
Fuel Charging and Controls - 2.0L Duratorq-TDCi (DW) Diesel	303-04E
Fuel Charging and Controls - 2.2L Duratorq-TDCi (DW) Diesel	303-04F
Fuel Charging and Controls - Turbocharger - 1.8L Duratorq-TDCi (Lynx) Diesel	303-04G
Fuel Charging and Controls - Turbocharger - 2.0L Duratorq-TDCi (DW) Diesel	303-04H
Fuel Charging and Controls - Turbocharger - 2.2L Duratorq-TDCi (DW) Diesel	303-04I
Starting System - 1.6L Duratec-16V Ti-VCT (Sigma)	303-06A
Starting System - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	303-06B
Starting System - 2.5L Duratec (VI5)	303-06C
Starting System - 1.8L Duratorq-TDCi (Lynx) Diesel	303-06D
Starting System - 2.0L Duratorq-TDCi (DW) Diesel	303-06E
Starting System - 2.2L Duratorq-TDCi (DW) Diesel	303-06F
Engine Ignition - 1.6L Duratec-16V Ti-VCT (Sigma)	303-07A
Engine Ignition - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	303-07B
Engine Ignition - 2.5L Duratec (VI5)	303-07C
Engine Emission Control - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	303-08A

Engine Emission Control - 1.8L Duratorq-TDCi (Lynx) Diesel	303-08B
Engine Emission Control - 2.0L Duratorq-TDCi (DW) Diesel	303-08C
Engine Emission Control - 2.2L Duratorq-TDCi (DW) Diesel	303-08D
Evaporative Emissions	303-13
Electronic Engine Controls - 1.6L Duratec-16V Ti-VCT (Sigma)	303-14A
Electronic Engine Controls - 2.0L Duratec-HE (MI4)	303-14B
Electronic Engine Controls - 2.3L Duratec-HE (MI4)	303-14C
Electronic Engine Controls - 2.5L Duratec (VI5)	303-14D
Electronic Engine Controls - 1.8L Duratorq-TDCi (Lynx) Diesel	303-14E
Electronic Engine Controls - 2.0L Duratorq-TDCi (DW) Diesel	303-14F
Electronic Engine Controls - 2.2L Duratorq-TDCi (DW) Diesel	303-14G
Automatic Transmission/Transaxle	
Automatic Transmission/Transaxle - Vehicles With: 6-Speed Automatic Transaxle (AWF21)	307-01A
Automatic Transmission/Transaxle - Vehicles With: 6-Speed Automatic Transaxle (AWF21)	307-01B
Automatic Transmission/Transaxle External Controls - Vehicles With: 6-Speed Automatic Transaxle (AWF21)	307-05
Exhaust System	
Exhaust System - 2.0L Duratec-HE (MI4)/2.3L Duratec-HE (MI4)	309-00A
Exhaust System - 2.0L Duratorq-TDCi (DW) Diesel	309-00B
Fuel System	
Fuel Tank and Lines	310-01

GROUP 4 Electrical

Climate Control System

Climate Control	412-01
Auxiliary Climate Control	412-02

Instrumentation and Warning Systems

Instrument Cluster	413-01
Horn	413-06
Warning Devices	413-09
Parking Aid	413-13

Battery and Charging System

Generator and Regulator	414-02
-------------------------	--------

Information and Entertainment Systems

Information and Entertainment System	415-01
--------------------------------------	--------

Lighting

Exterior Lighting	417-01
Interior Lighting	417-02

Electrical Distribution

Module Communications Network	418-00
-------------------------------	--------

Electronic Feature Group

Anti-Theft - Active	419-01
Multifunction Electronic Modules	419-10

GROUP 5 Body and Paint

Body and Paint

Rear View Mirrors	501-09
Seating	501-10
Glass, Frames and Mechanisms	501-11
Instrument Panel and Console	501-12
Handles, Locks, Latches and Entry Systems	501-14
Wipers and Washers	501-16
Roof Opening Panel	501-17
Safety Belt System	501-20A
Supplemental Restraint System	501-20B

GROUP 7 General Wiring Information

Wiring Information

General Information	700-00
Fuse and Relay Information	700-01

DESCRIPTION AND OPERATION

About This Manual


How to Use This Manual

This manual is structured into Systems, Groups and Sections. A System covers a specific portion of the vehicle. The manual is divided into six Systems: General Information, Chassis, Powertrain, Electrical, Body and Paint and General Wiring Information. Each System contains a number of Groups that contain a number of

Sections relating to specific vehicle systems. Each Section contains a wiring diagram containing all of the information relating to the specific vehicle system. Some Sections contain a number of wiring diagrams that cover a number of different vehicle variants. Connector location information and connector face views are provided through links within the wiring diagram for each vehicle system.


Example: Chassis > Brake System > Anti-Lock Control (System > Group > Section)


Wiring Diagram Format

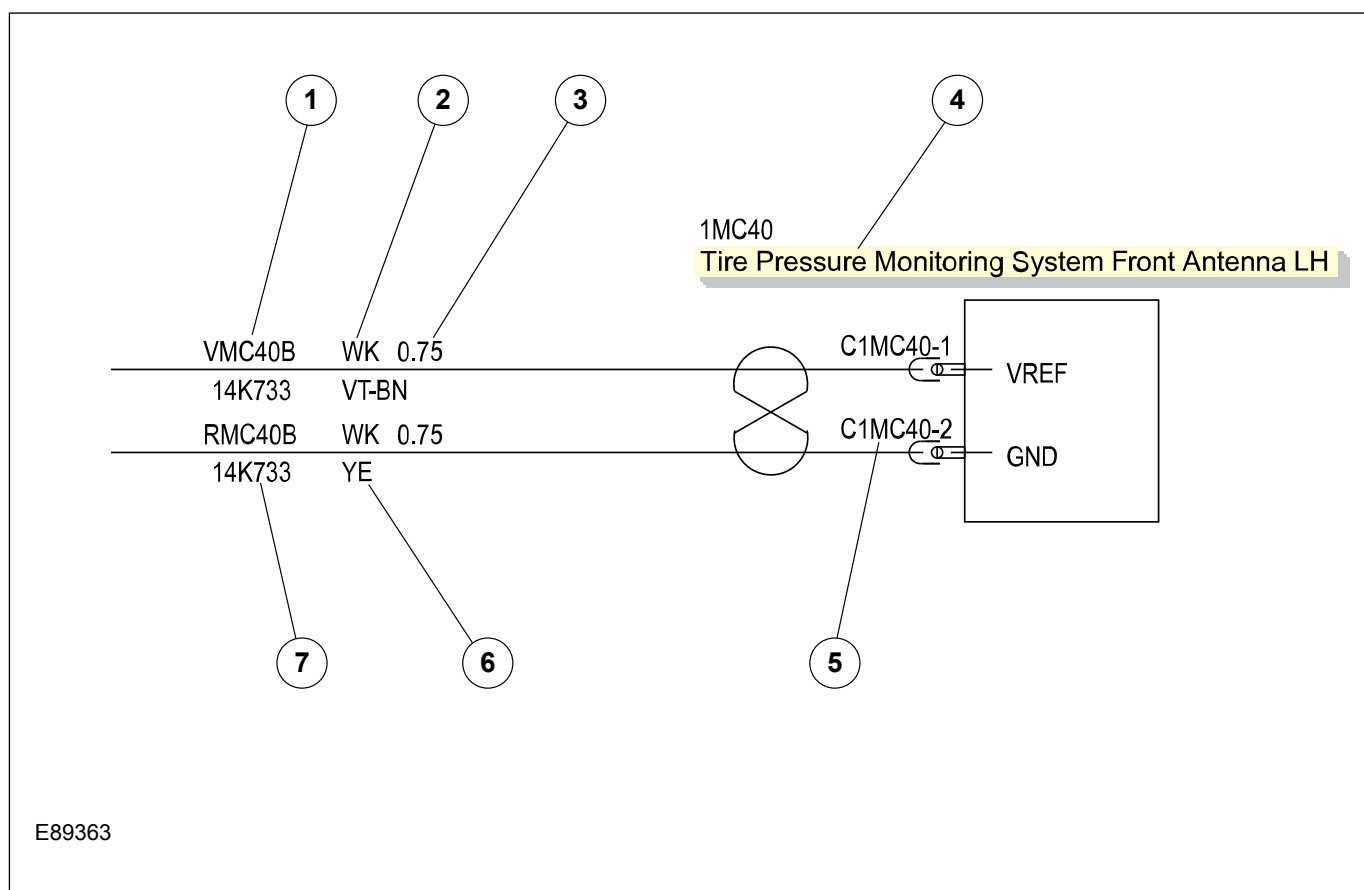


Item	Description
1	Circuit code
2	Wire insulation specification (temperature)
3	Wire diameter (mm ²)

Item	Description
4	Component name
5	Connector code
6	Wire color code
7	Wiring harness code

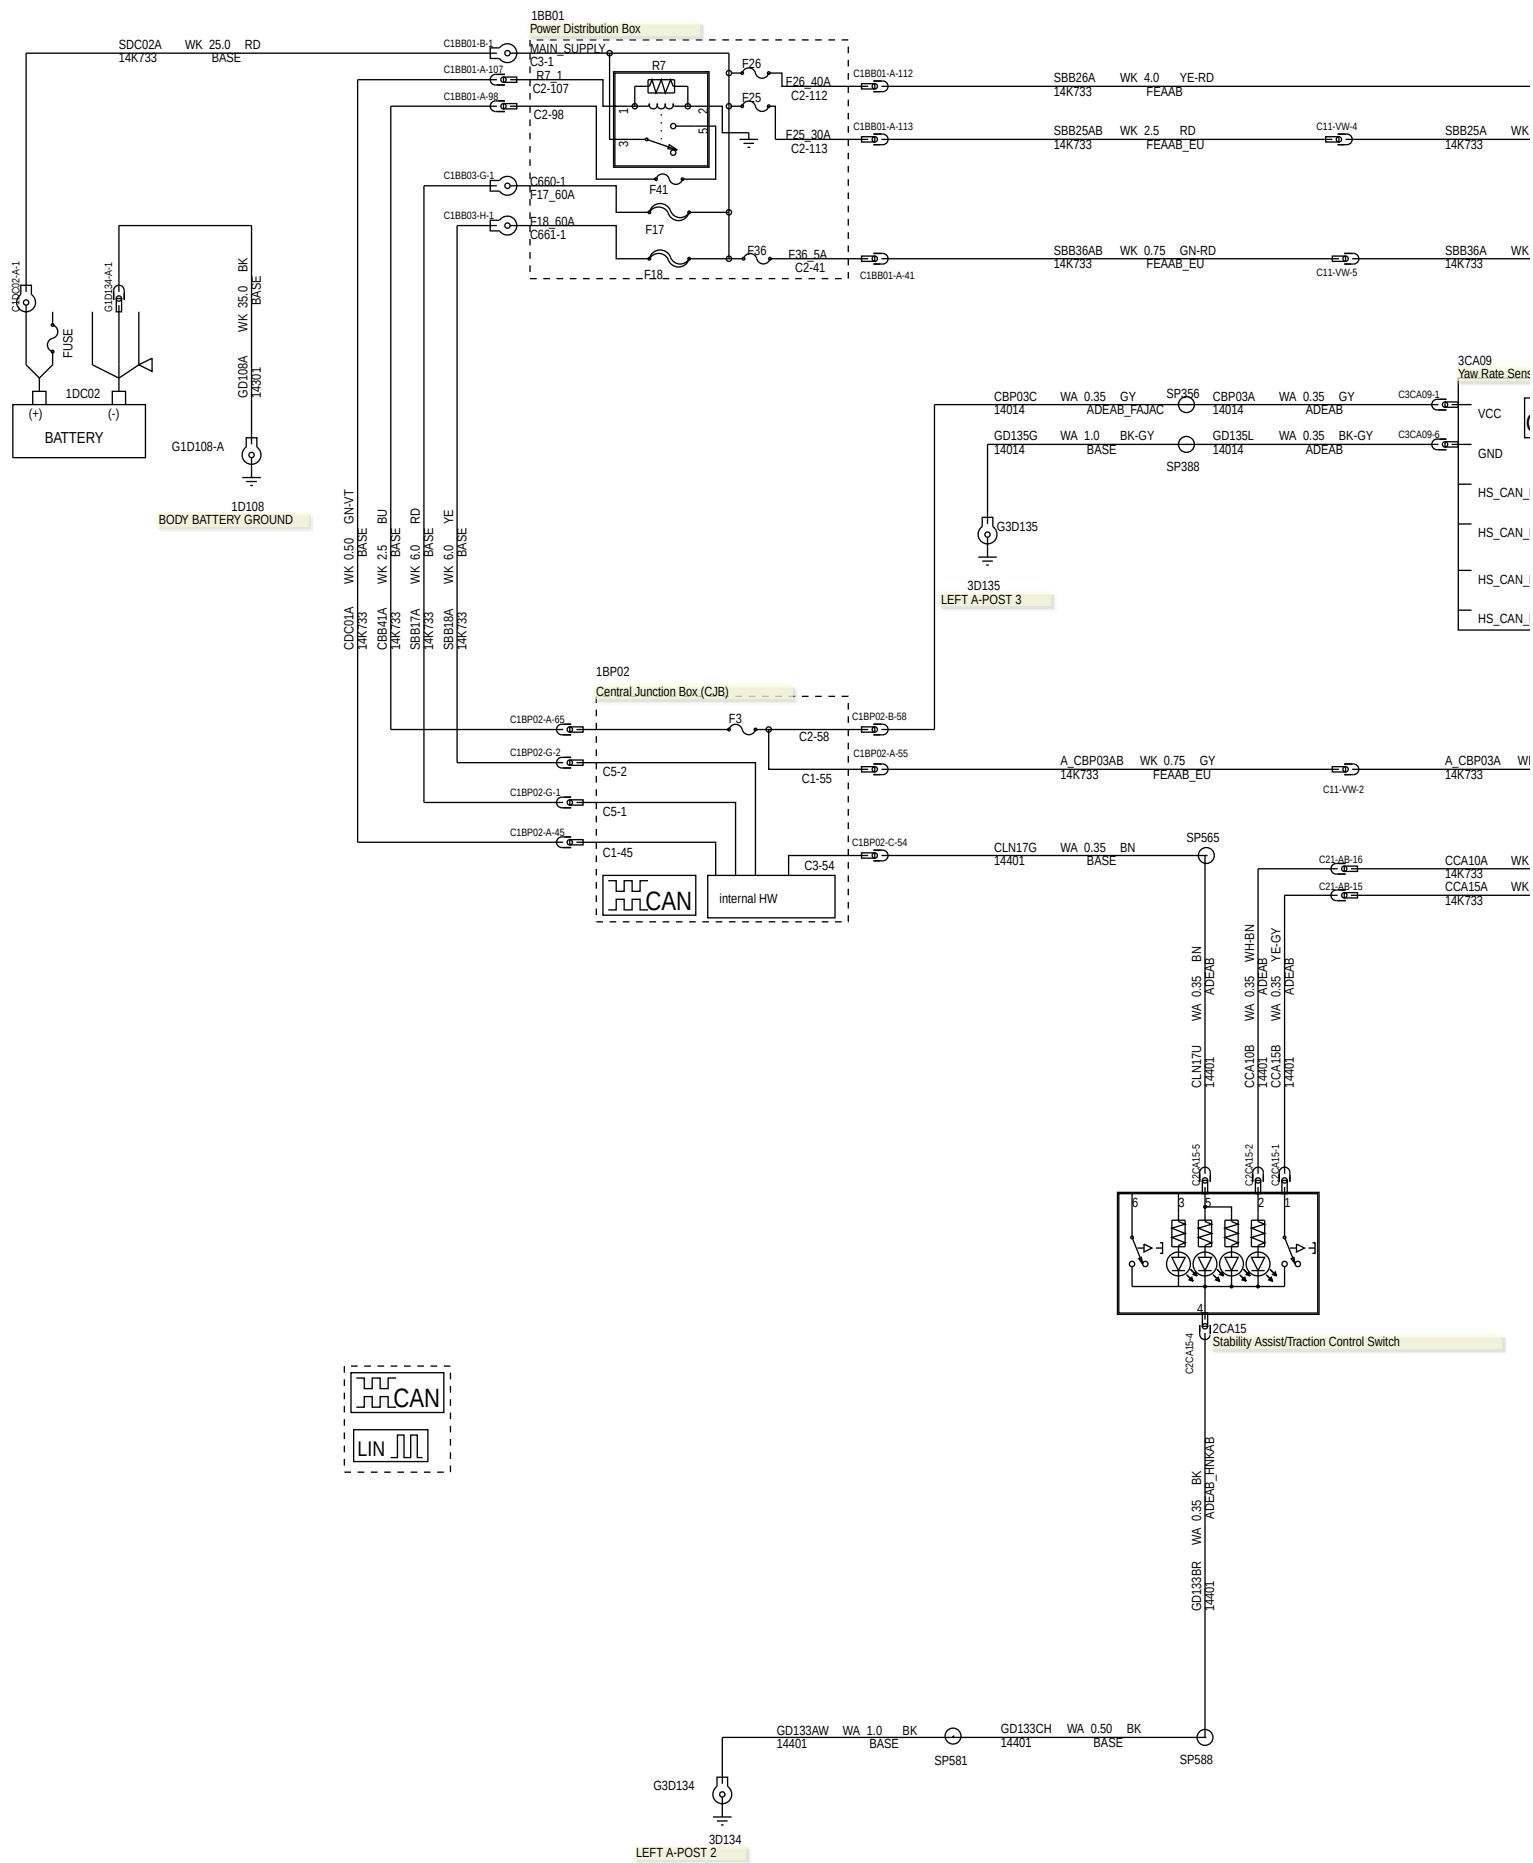

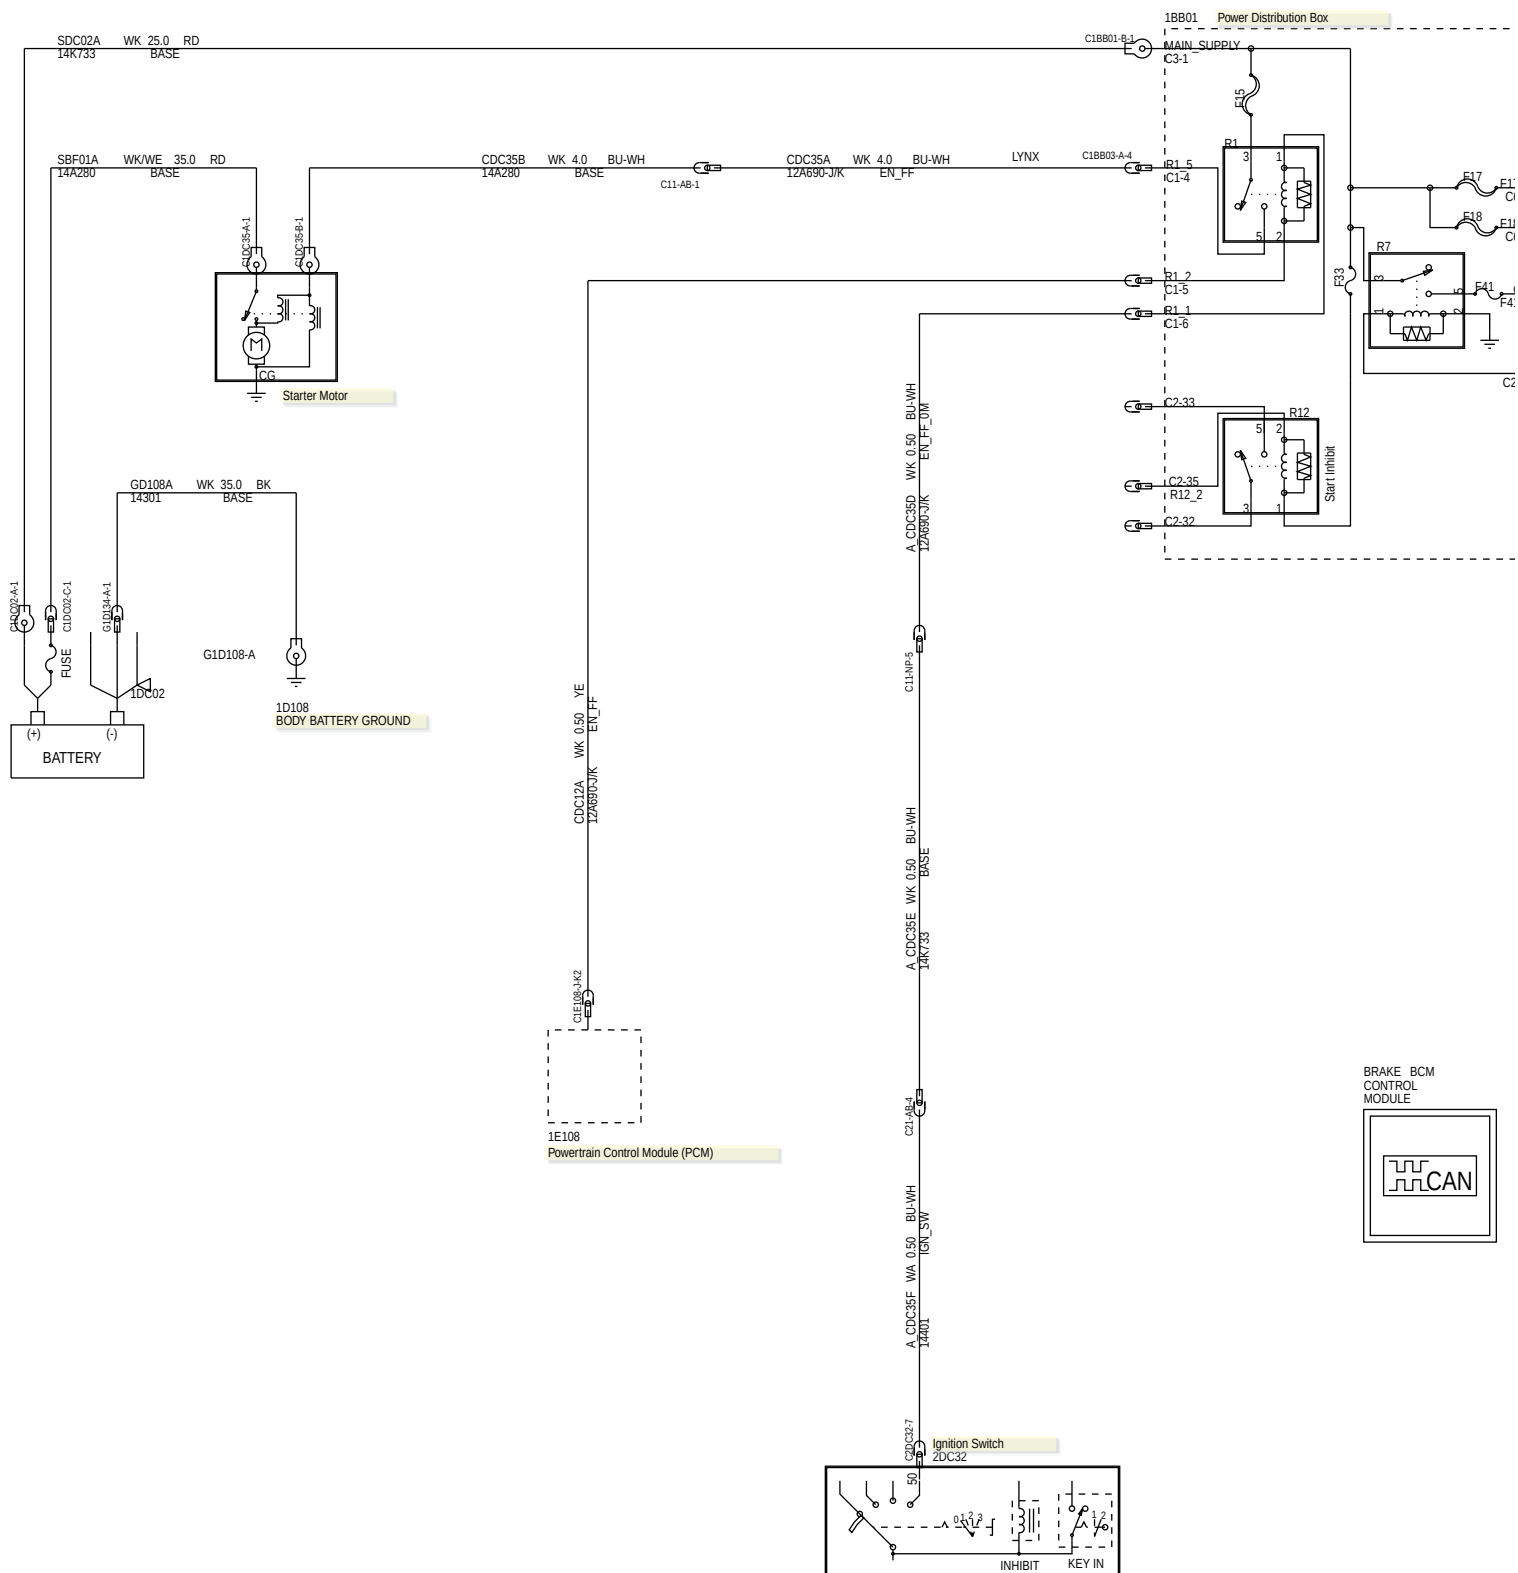

Ignition Coil-On-Plug 1—A (G881913)

 


1F1T-14A464-AB

C1E303-A

TO COIL ON PLUG 1

HARNESS 12A690

 Ignition Coil-On-Plug 1—B (G1081647)




F0CB-14A464-AA

C1E303-B

TO COIL ON PLUG 1

HARNESS 12A690

 Ignition Coil-On-Plug 2—A (G881914)




1F1T-14A464-AB

C1E304-A

TO COIL ON PLUG 2

HARNESS 12A690

 Ignition Coil-On-Plug 2—B (G881922)




F0CB-14A464-AA

C1E304-B

TO COIL ON PLUG 2

HARNESS 12A690

 Ignition Coil-On-Plug 3—A (G881915)




1F1T-14A464-AB

C1E305-A

TO COIL ON PLUG 3

HARNESS 12A690

 Ignition Coil-On-Plug 3—B (G881923)




F0CB-14A464-AA


C1E305-B

TO COIL ON PLUG 3

HARNESS 12A690

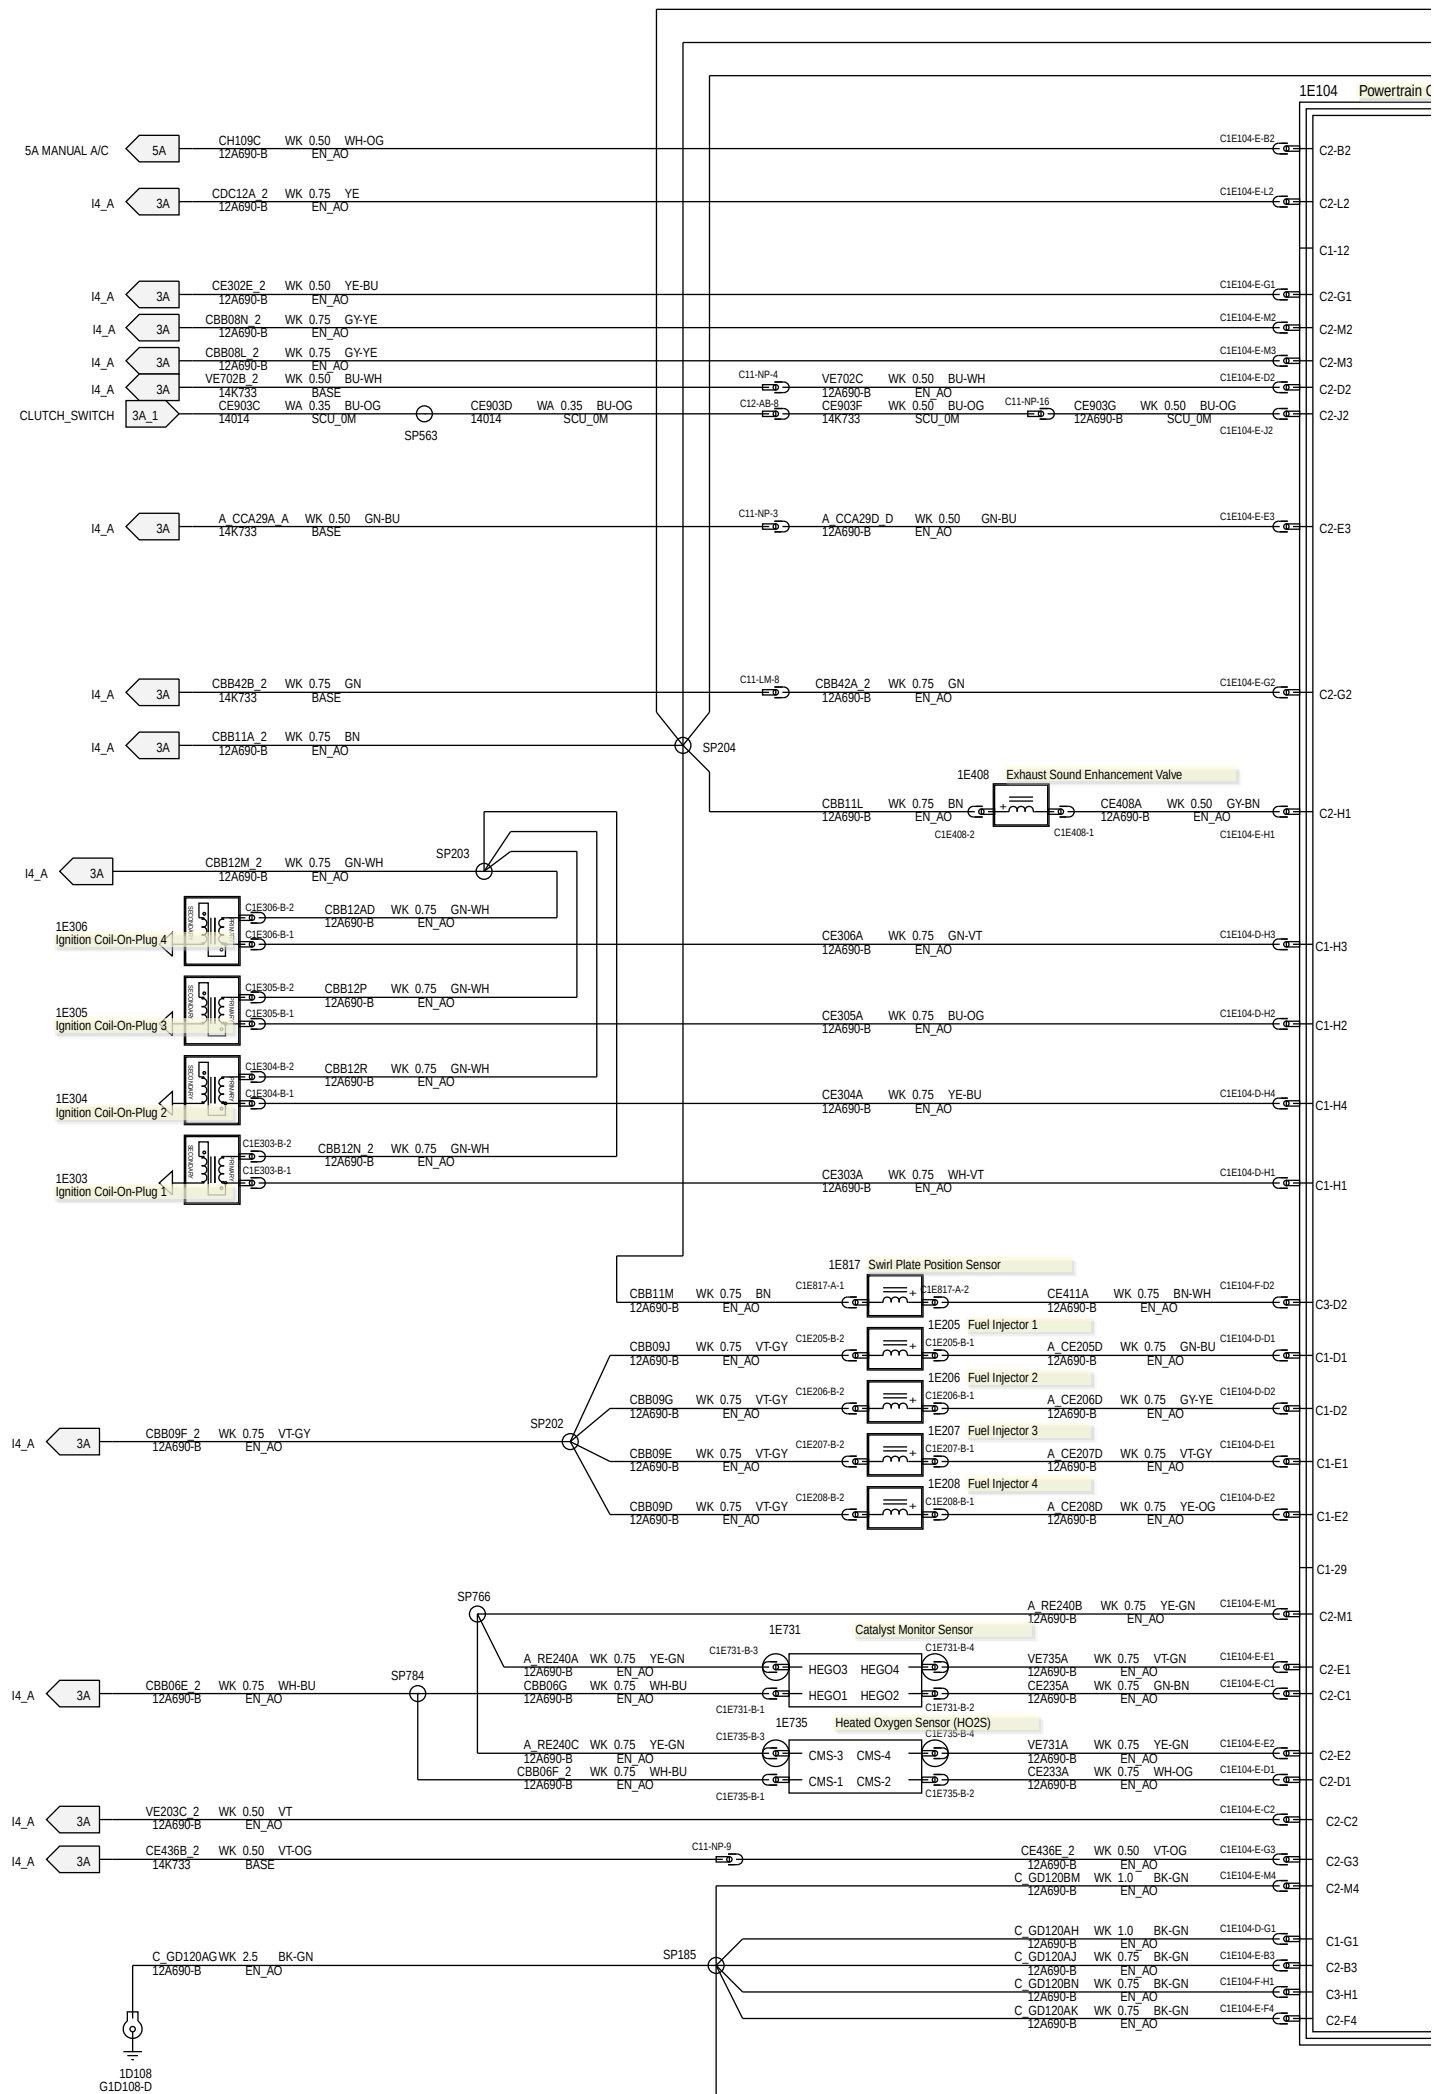

Powertrain Control Module (PCM)—K (G1080026)

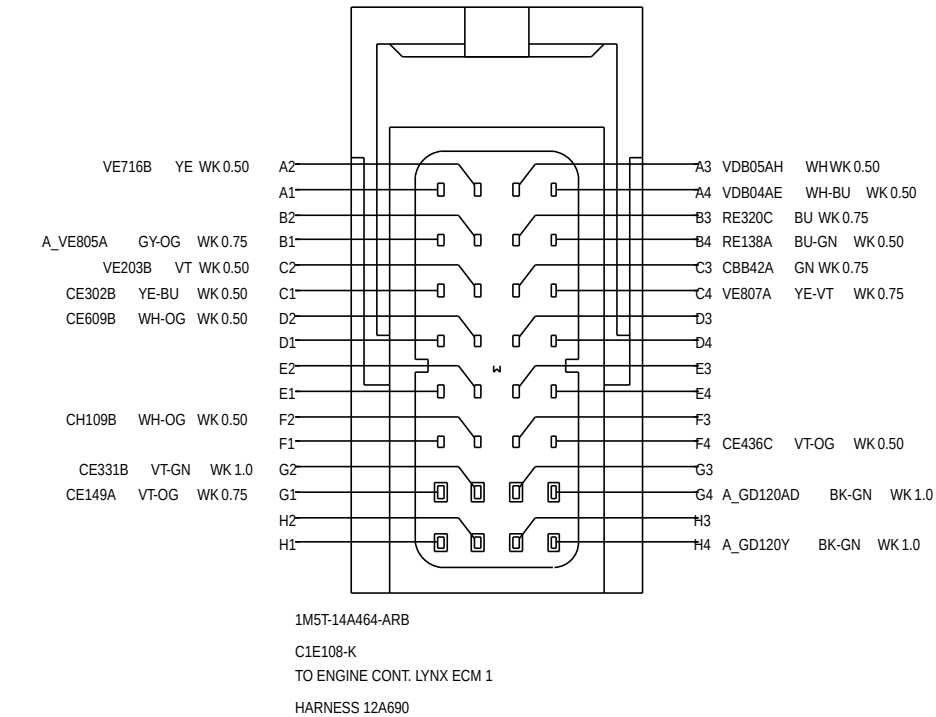

Powertrain Control Module (PCM)—L (G1080027)

