


SYSTEM CONTENS-1


Wire Color	CL
Power-Supply Distribution	W
Ground Point	Y
Charging System/Start-up System	A
Engine Control System	B
Combination Instrument	C
Windshield Wiper And Washer	D
BCM Control Unit	F
Heating And Air Conditioning System	G
Tire Pressure Monitoring System	H
Cigarette Lighter/Standby Power	I
Sound System	J
Power Window System	K
Lighting System	L
Power Sunroof	M
Anti-theft System	N
ABS	O


SYSTEM CONTENS-2

Air Bag/ESC	P
EPS/Steering Angle Sensor	Q
Fuel Pump Control System	R
Cooling Fan Control System	S
Reversing Radar System	T
Diagnosis Link Connector	U
Power Seat	V
Fuse Box Wiring Diagram	FB
Junction Box And Battery Fuse	JB
Commom Connector List	X

Color	Code	Color	Code
Red	R	Black	B
Yellow	Y	Pink	P
Blue	L	Orange	O
Green	G	Brown	BR
Violet	V	Grey	GR
White	W	Light Green	LG

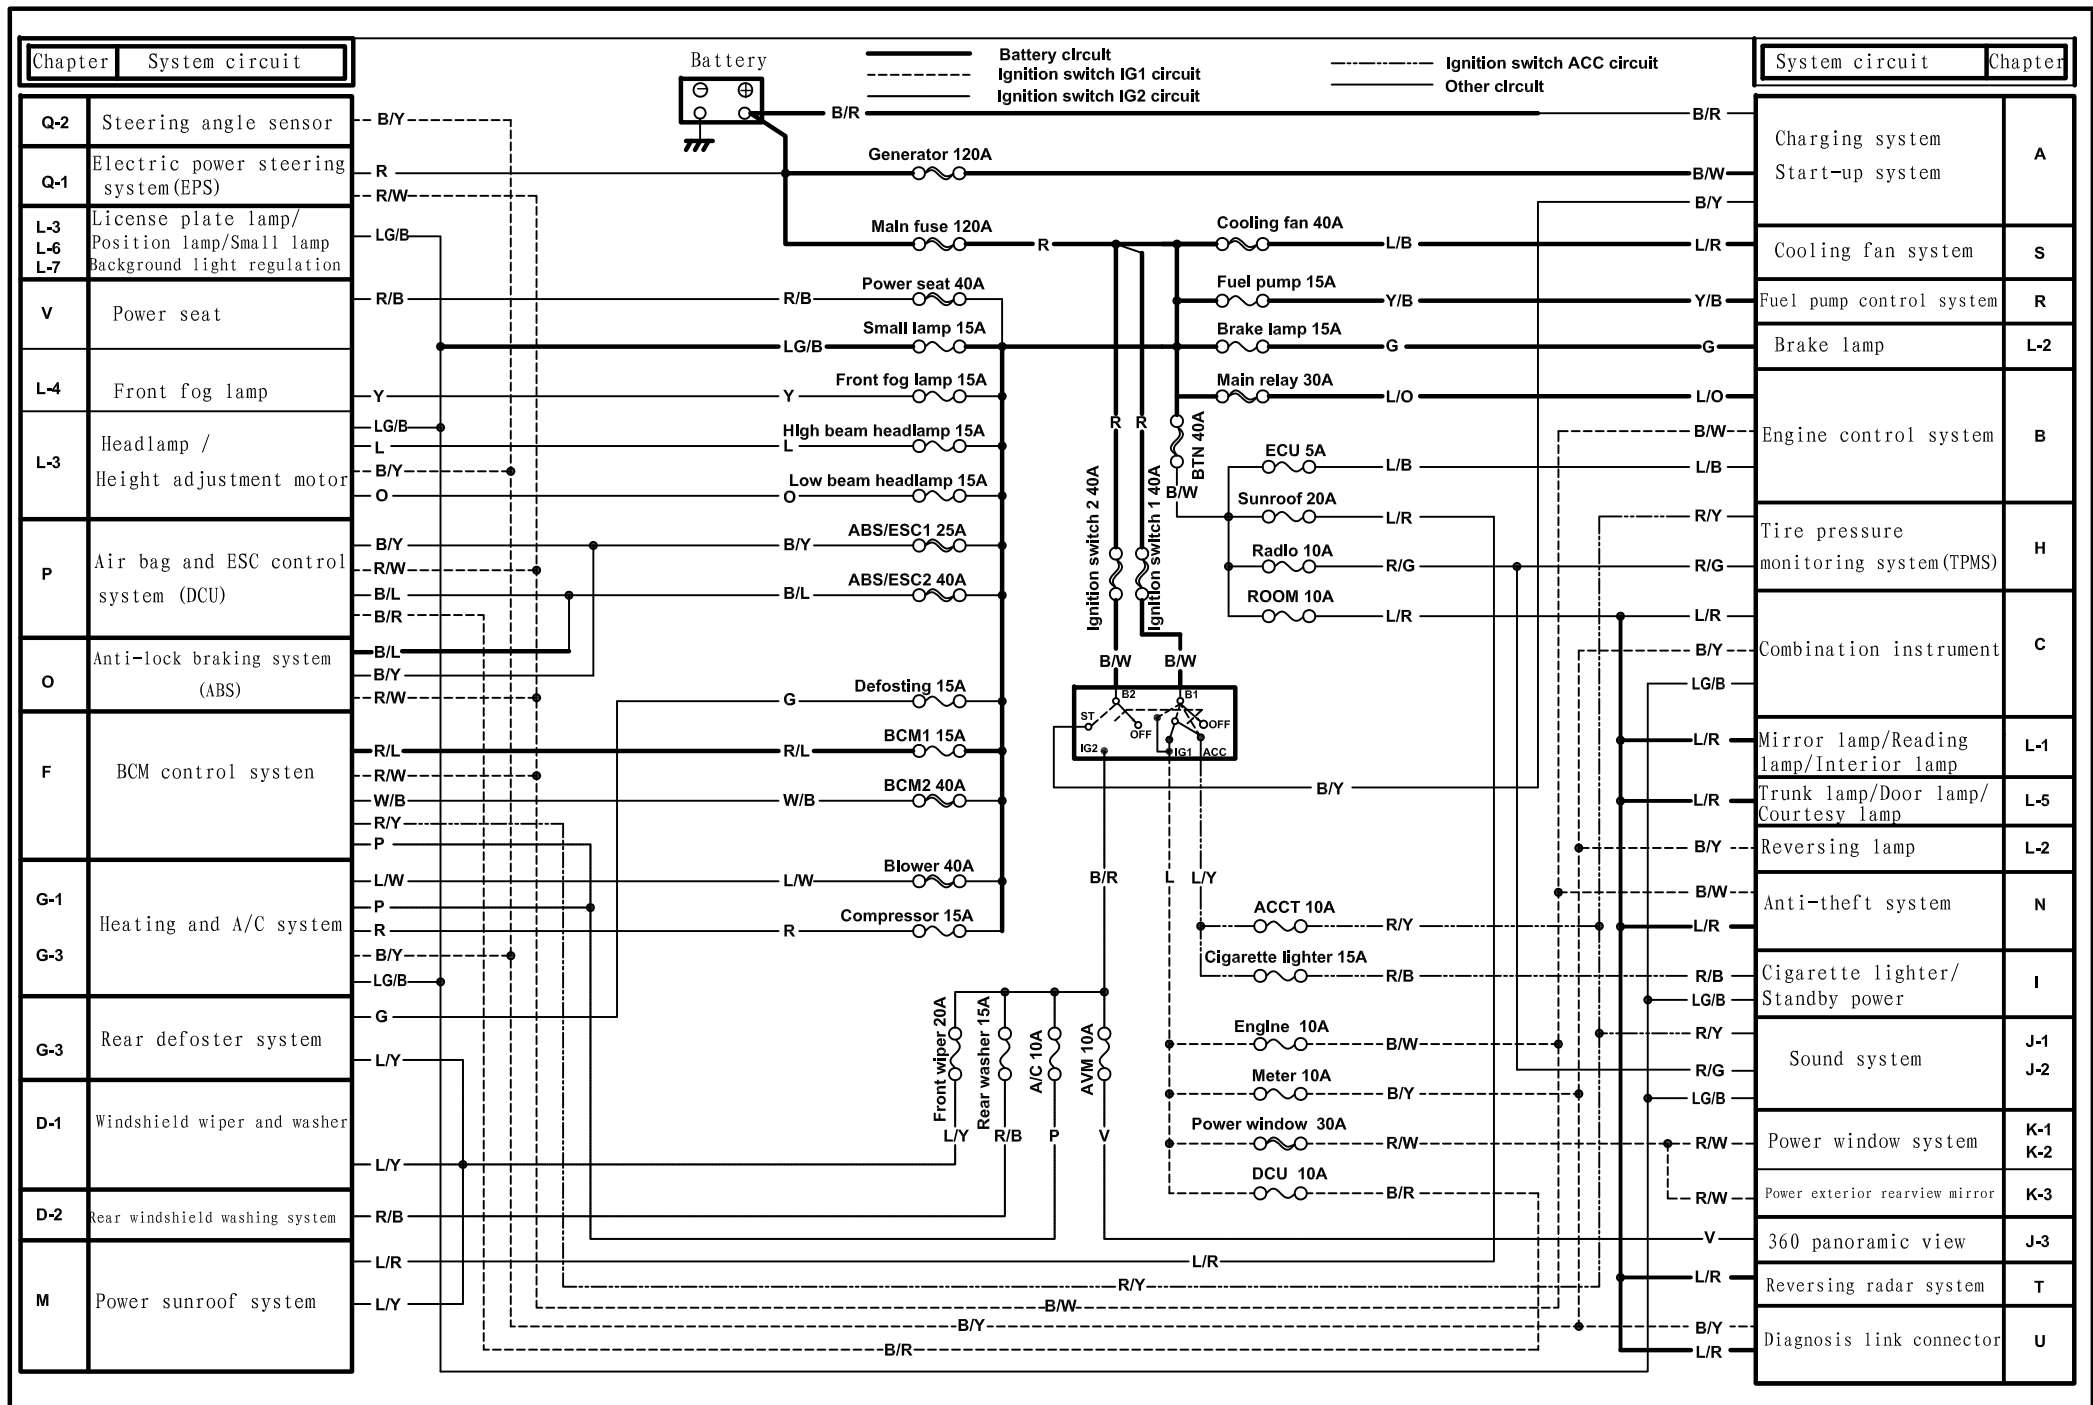

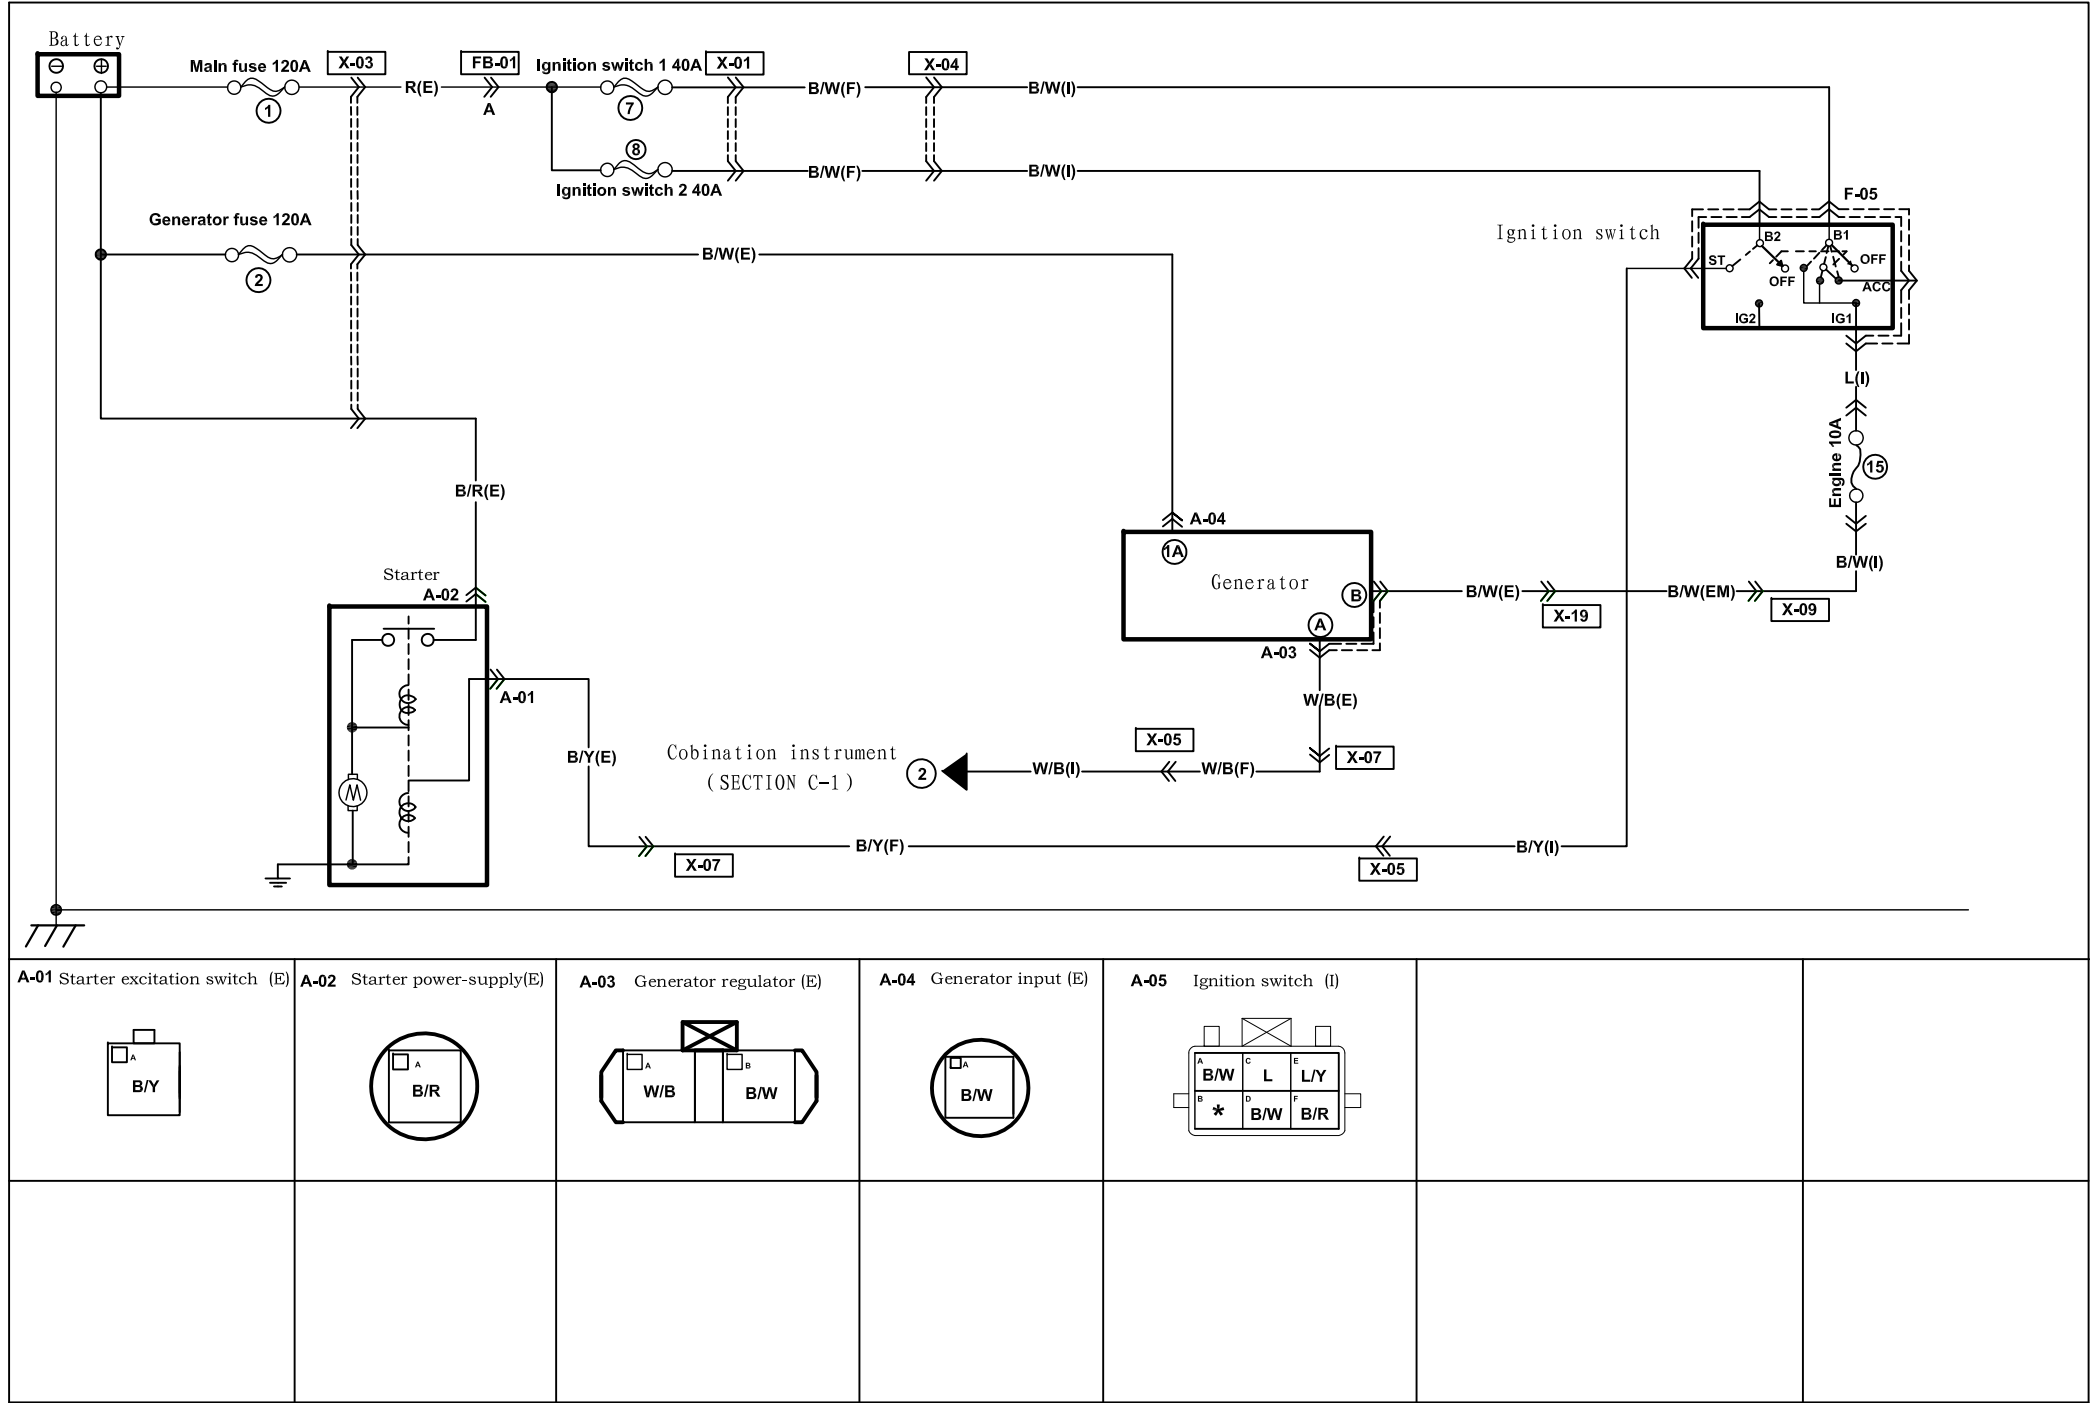


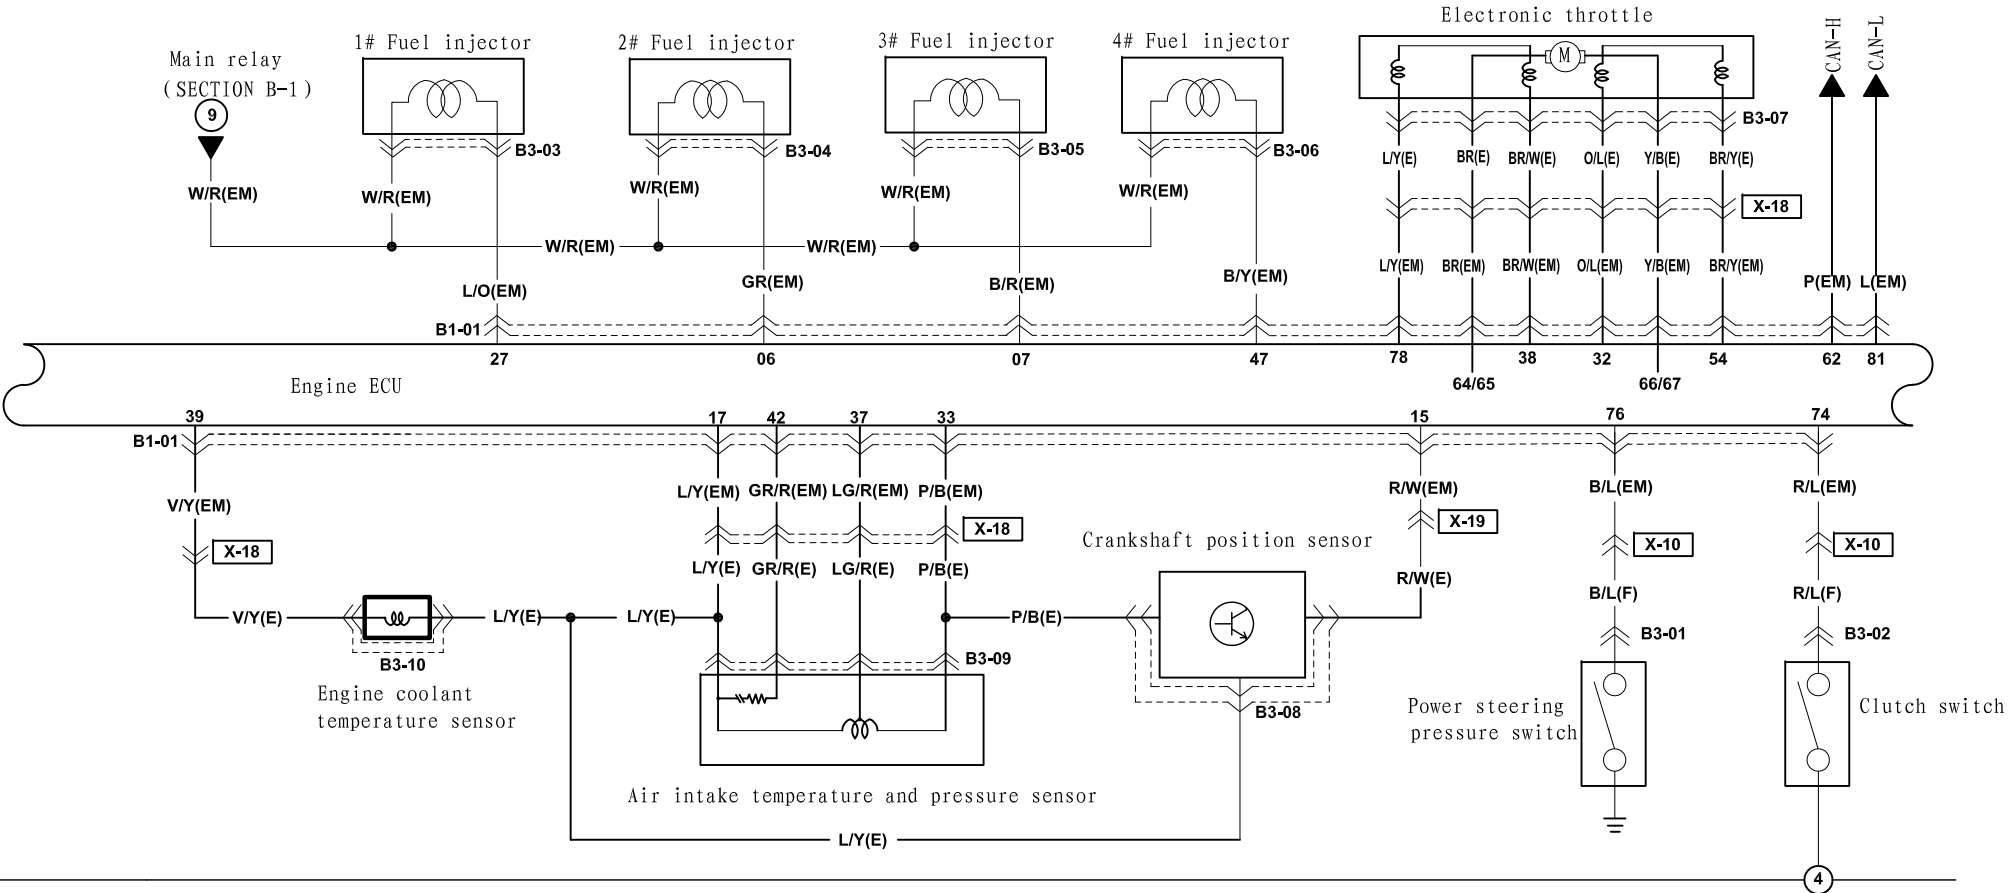


B1-01 ECU(EM)


81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63
F	L	*	N	R	Y	F	AD	AH	AL	AP	AT	AX	BB	BF	BJ	BH	BR	BZ
G	P	*	O	S	W	AA	AE	AI	AM	AQ	AU	AY	BC	BG	BK	BO	BS	CA
H	GR/R	P	T	X	AB	AF	AJ	AN	AR	AV	AZ	BD	BH	BL	BP	BT	BX	CB
I	M	G	U	Y	AC	AG	AK	AO	AS	AW	BA	BE	BI	BM	BQ	BU	BY	CD
24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06

B3-01 Power steering switch 	B3-03 1# Fuel injector 	B3-04 2# Fuel injector 	B3-05 3# Fuel injector 	B3-06 4# Fuel injector
B3-09 Air intake temperature and pressure sensor 	B3-07 Electronic throttle 		B3-08 Crankshaft position sensor 	
B3-02 Clutch switch 	B3-10 Coolant temperature sensor 			

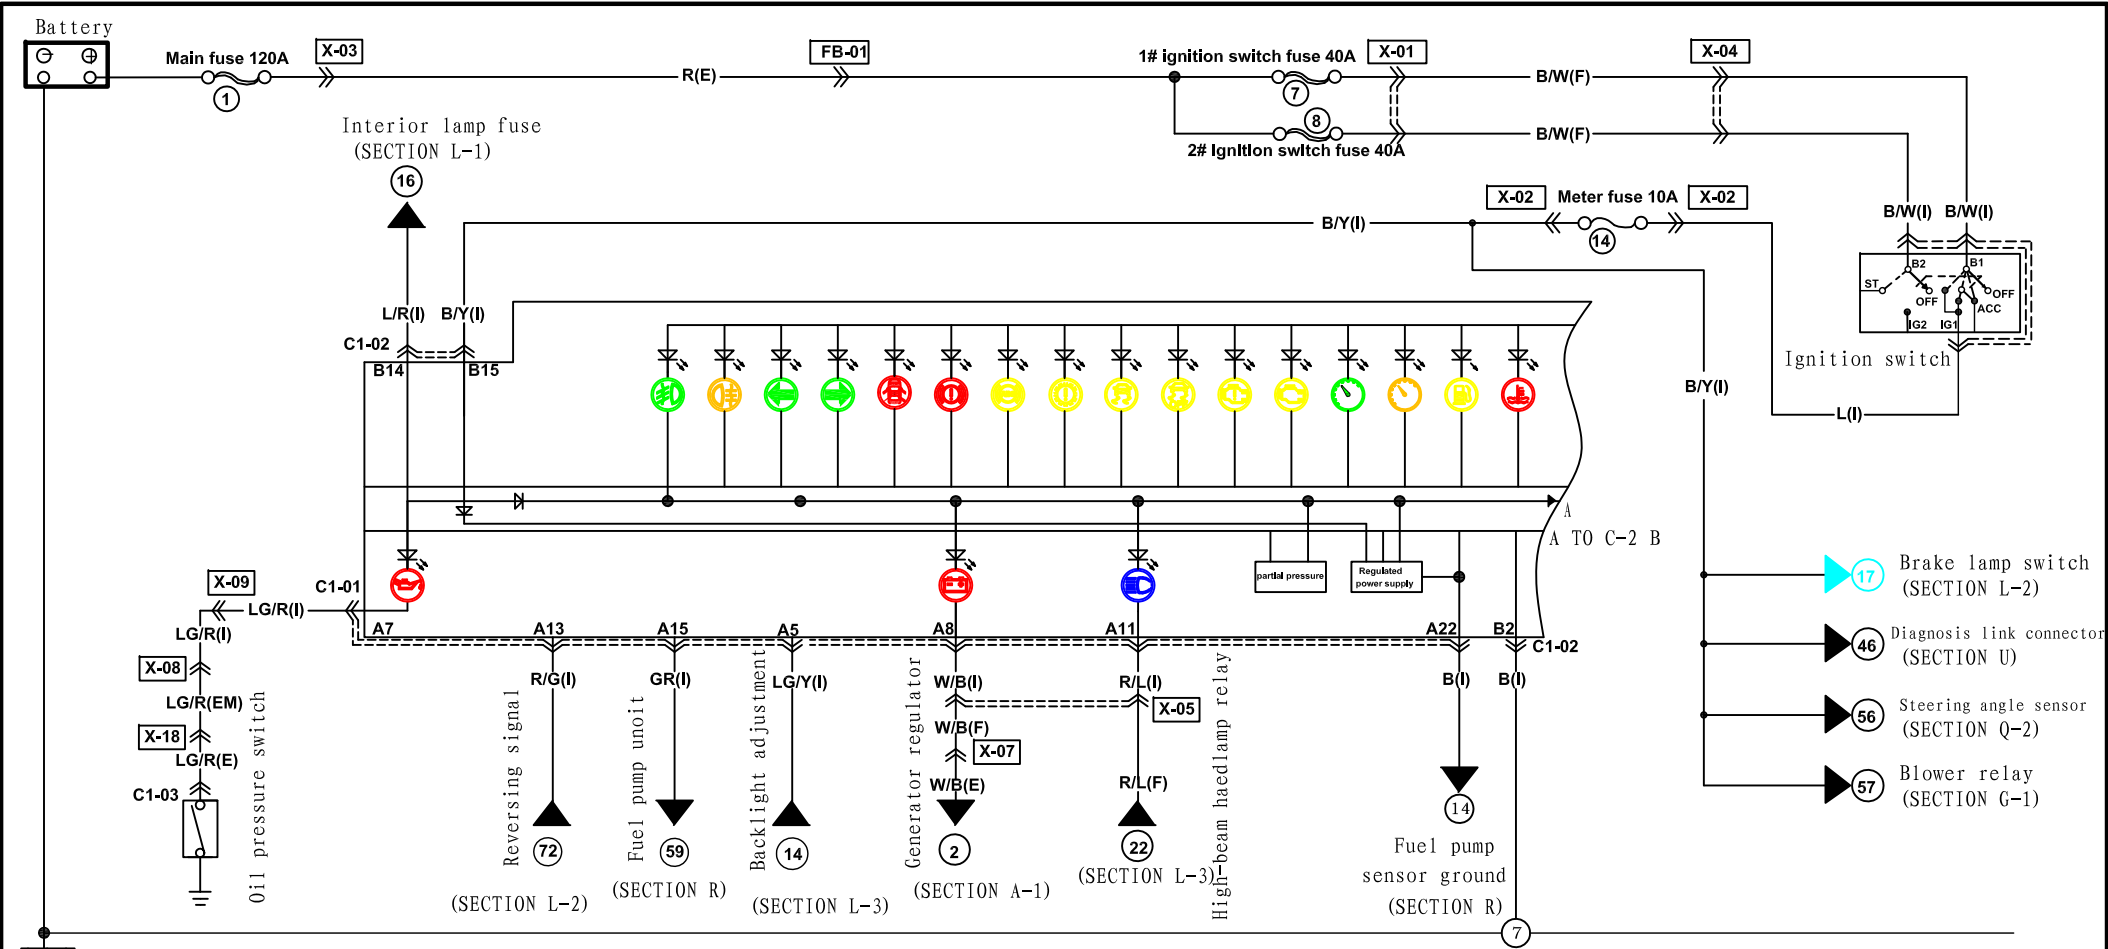


C1-01 Combination Instrument 1 Yellow	C1-03 Oil pressure switch			
C1-02 Combination Instrument 2 Blue				

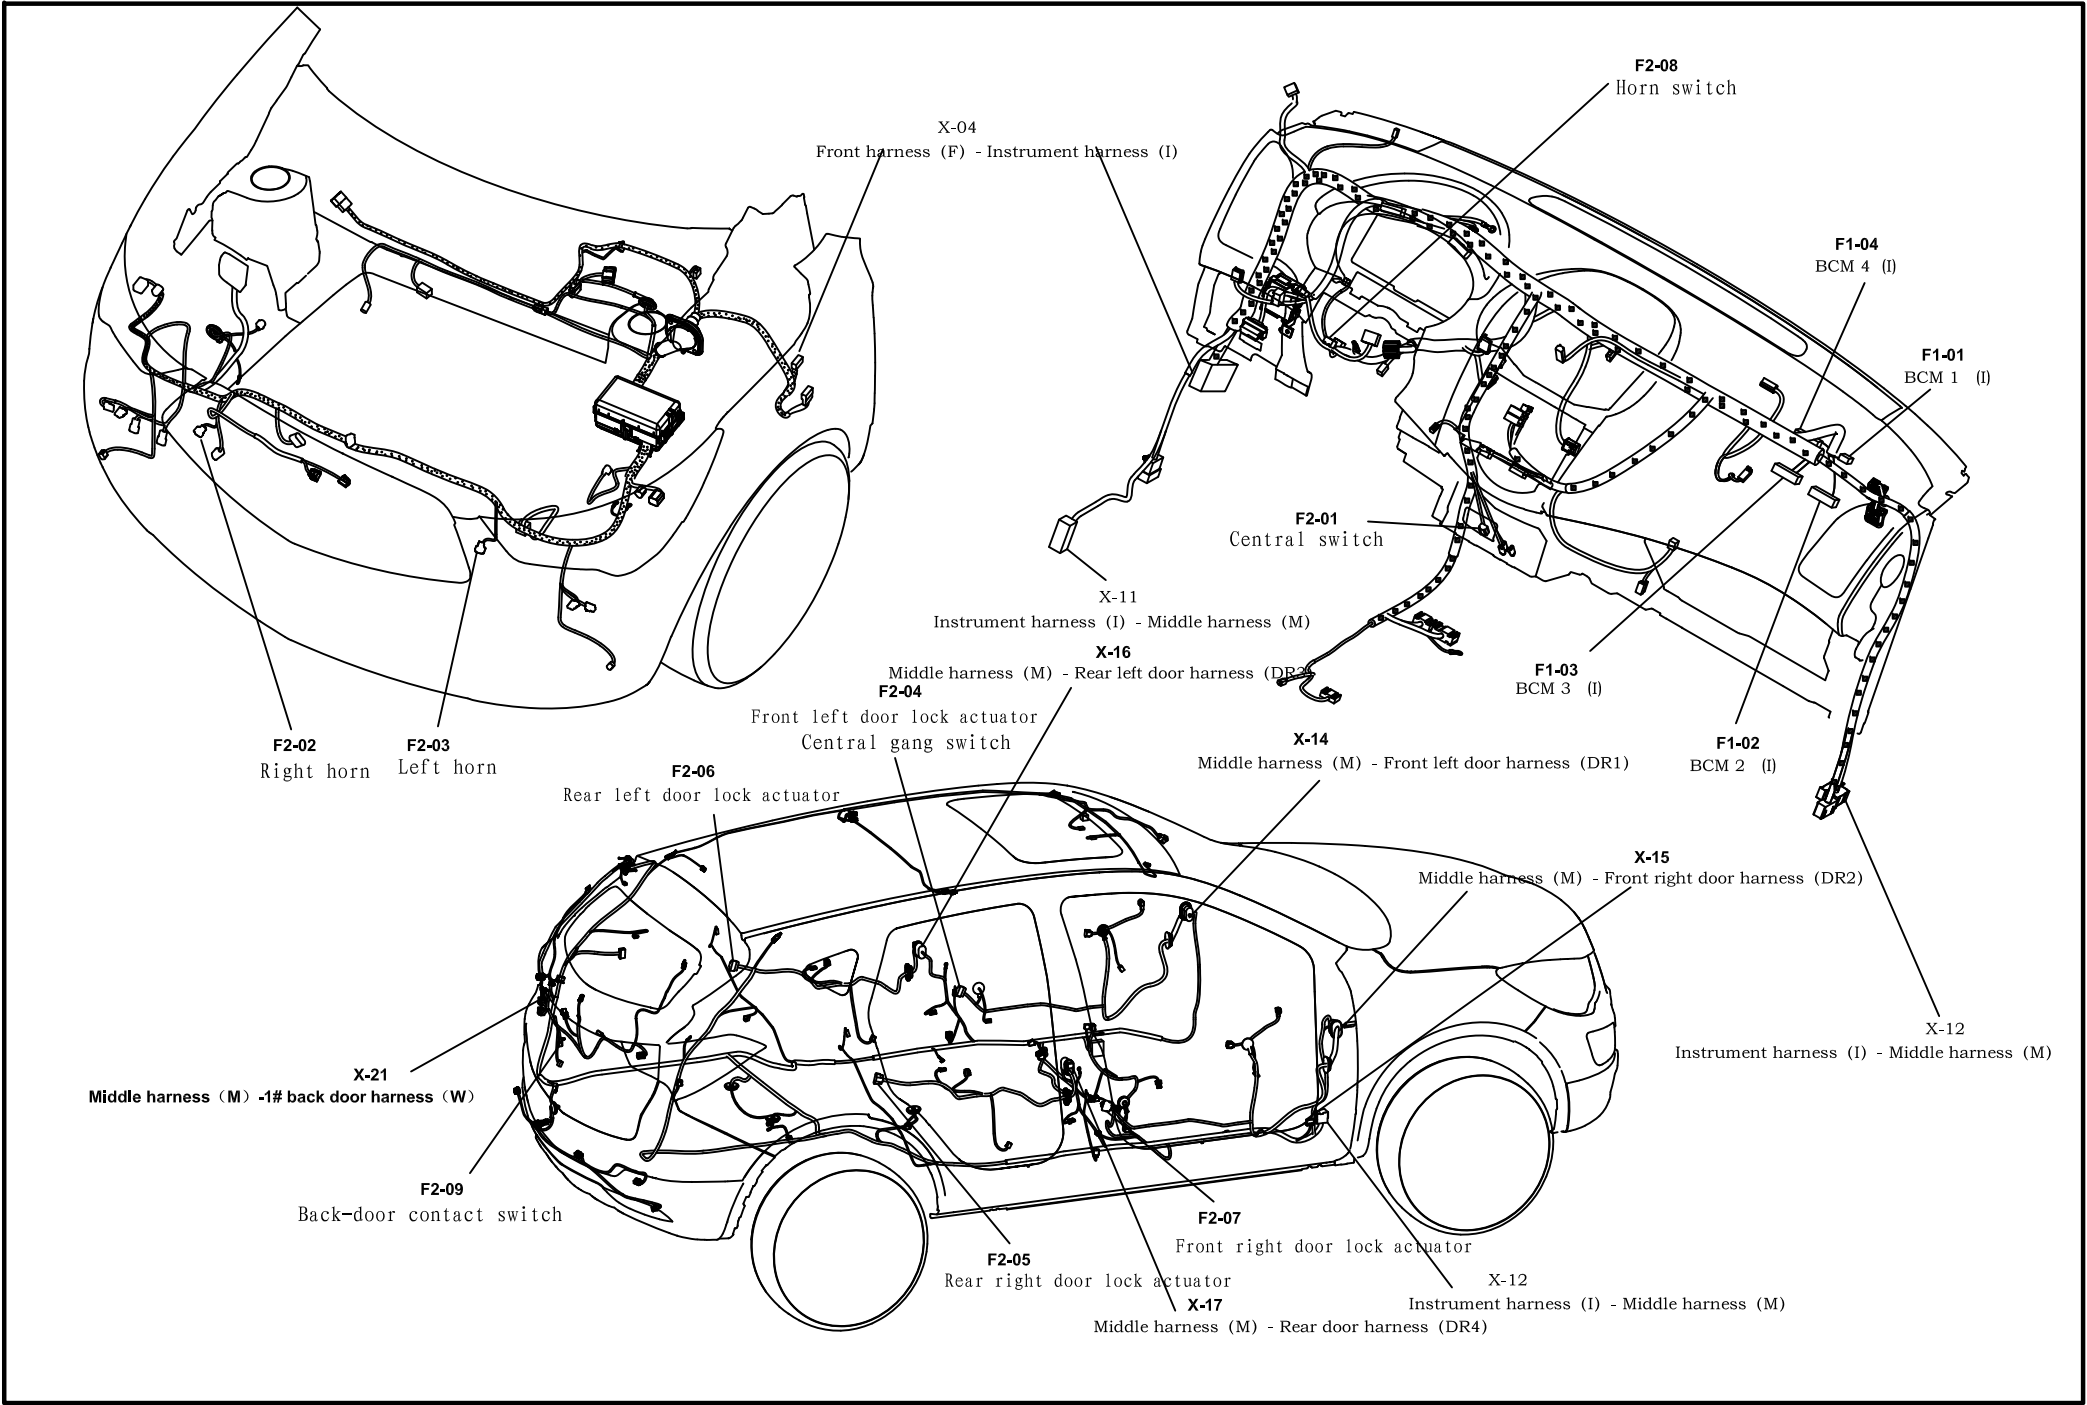


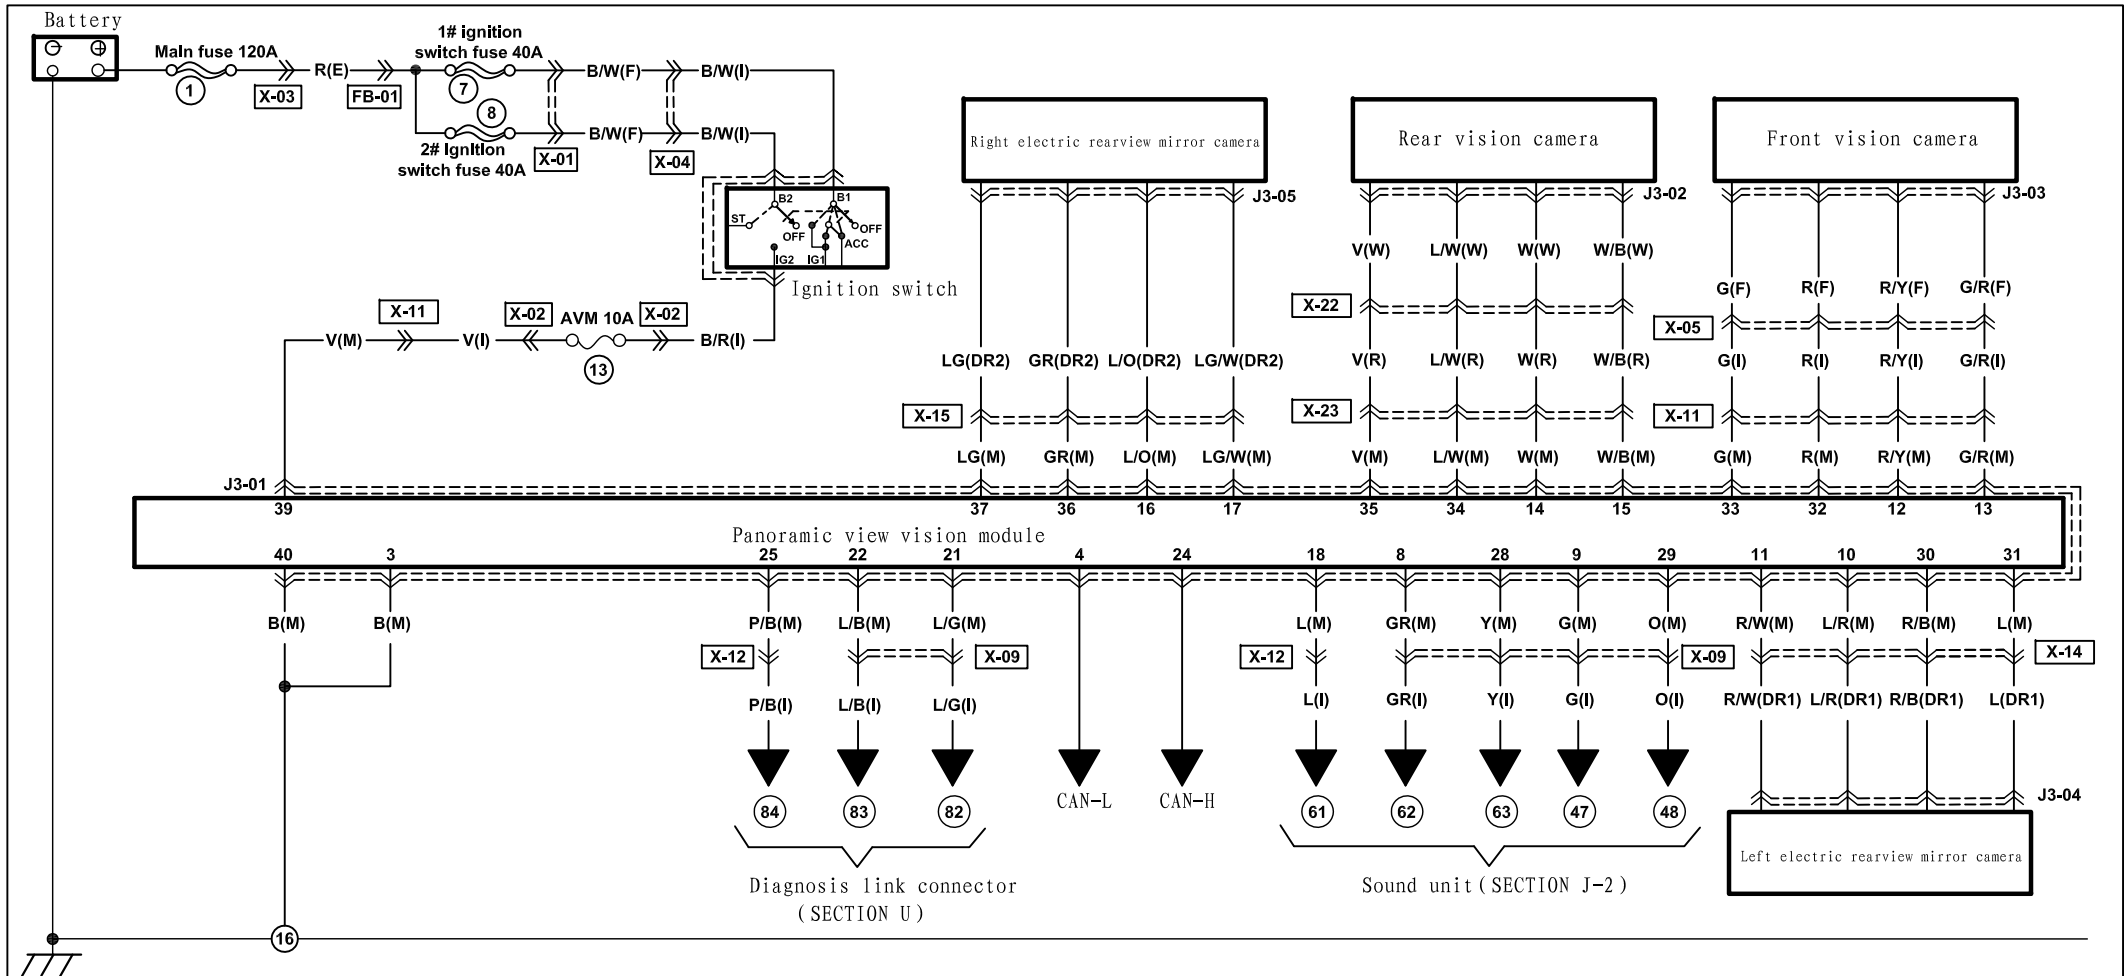


J3-01 Panoramic view vision module(M)

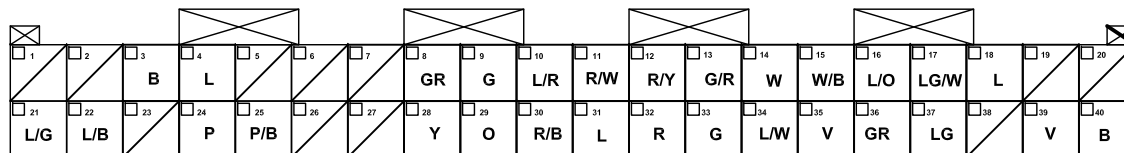


J3-02 Rear vision camera(W)

 


J3-03 Front vision camera(F)

 


 
J3-04 Left electric rearview mirror(DR1)











  
J3-05 Right electric rearview mirror (DR2)




Harness mark :  F  I  E

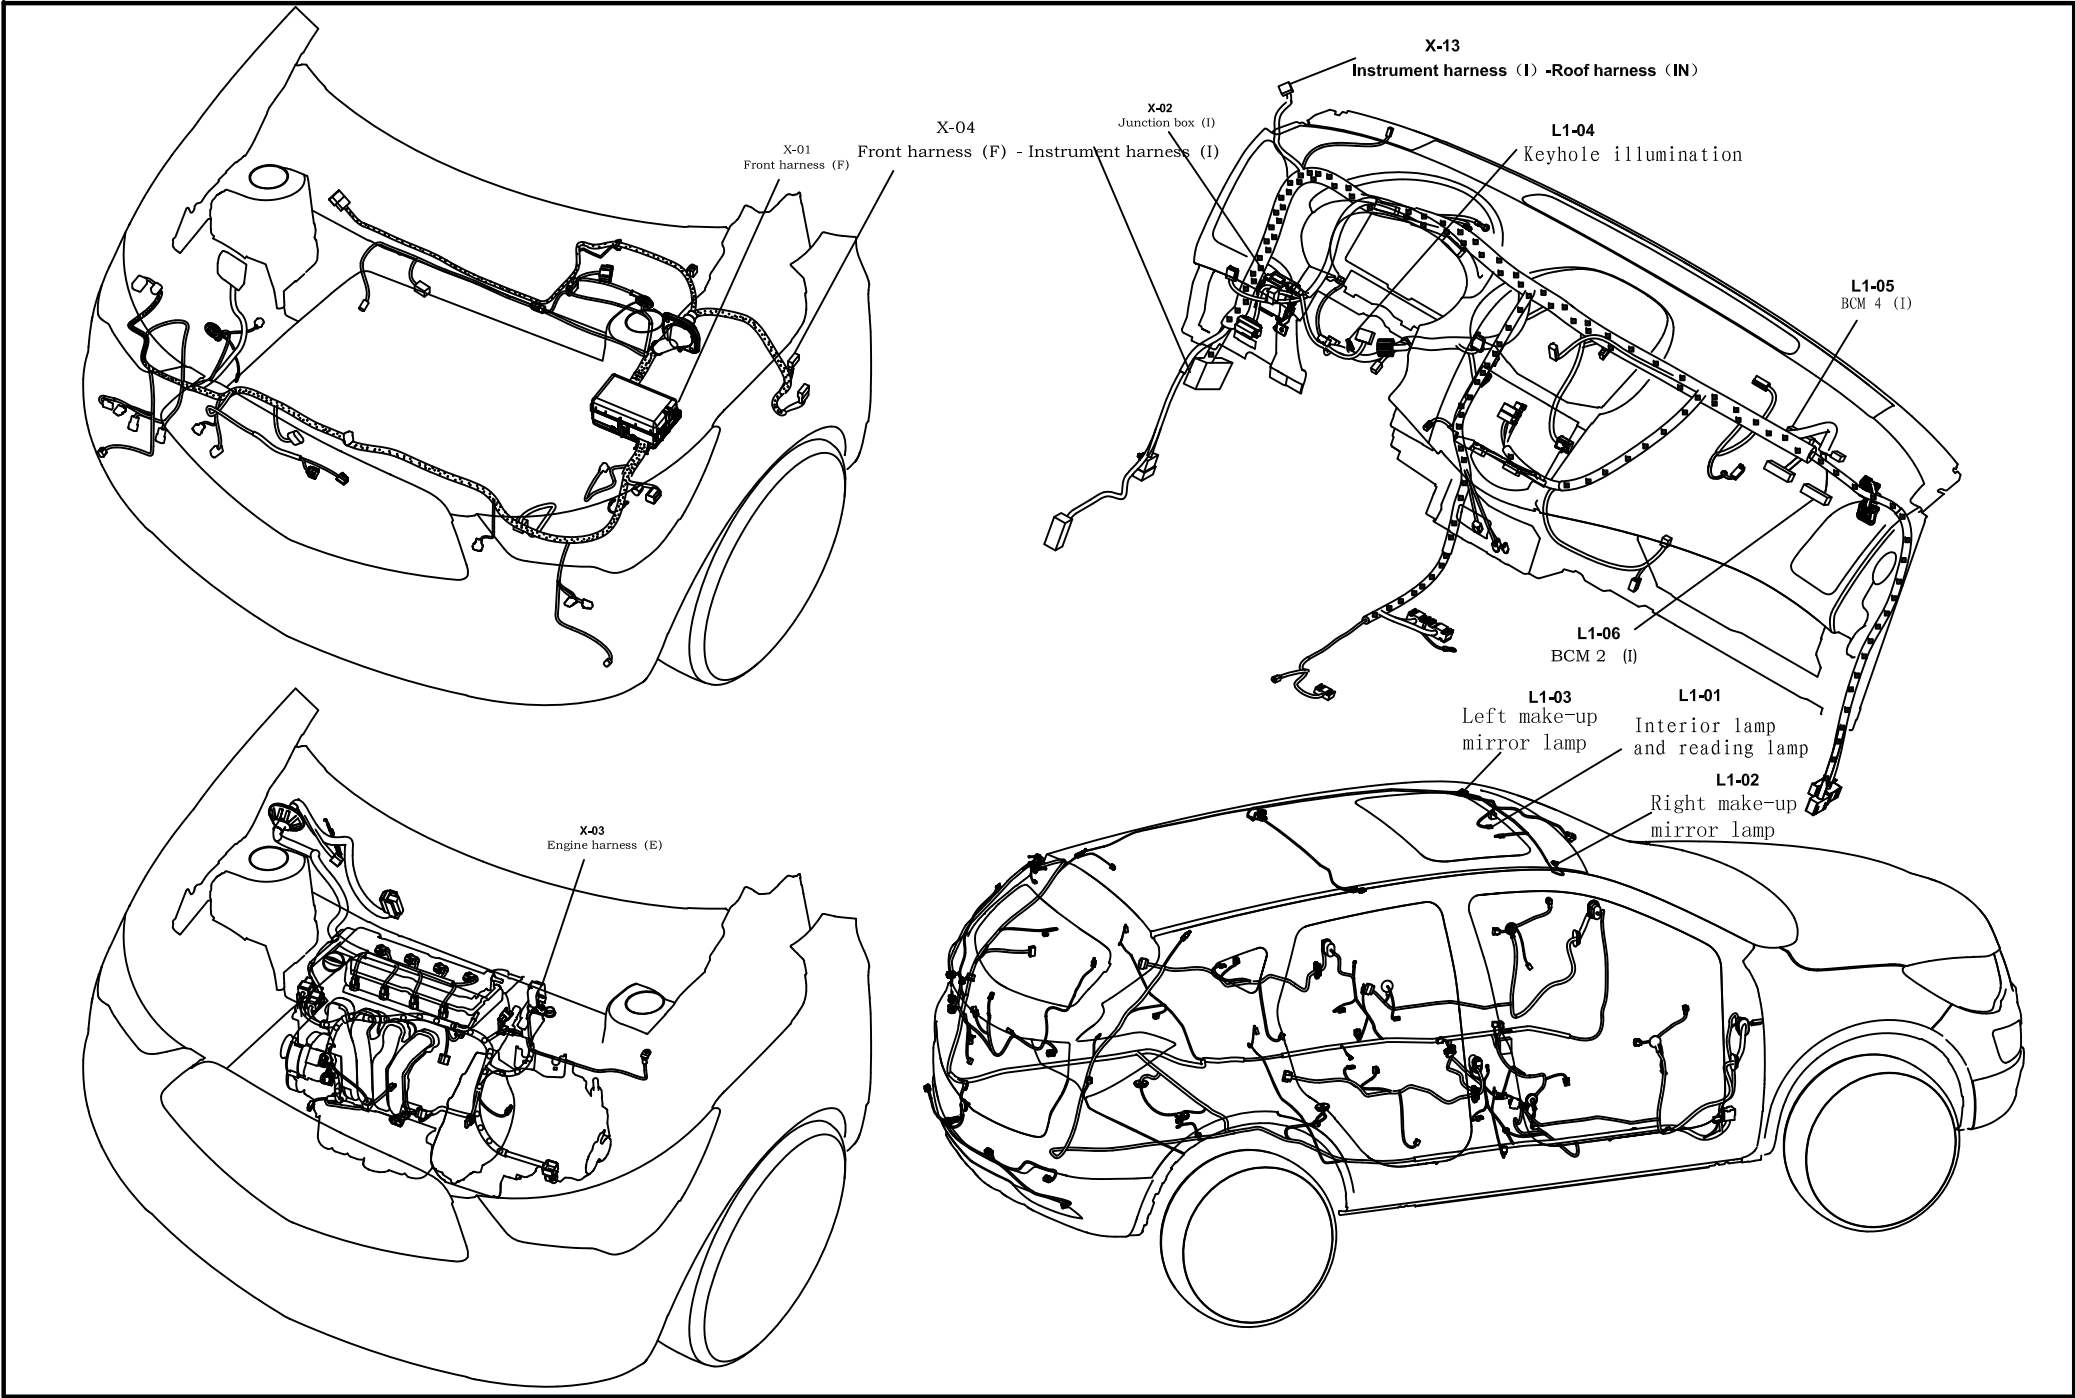

      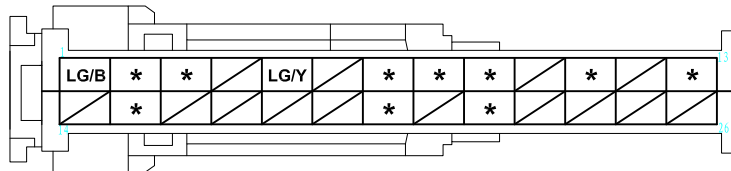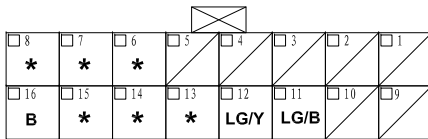

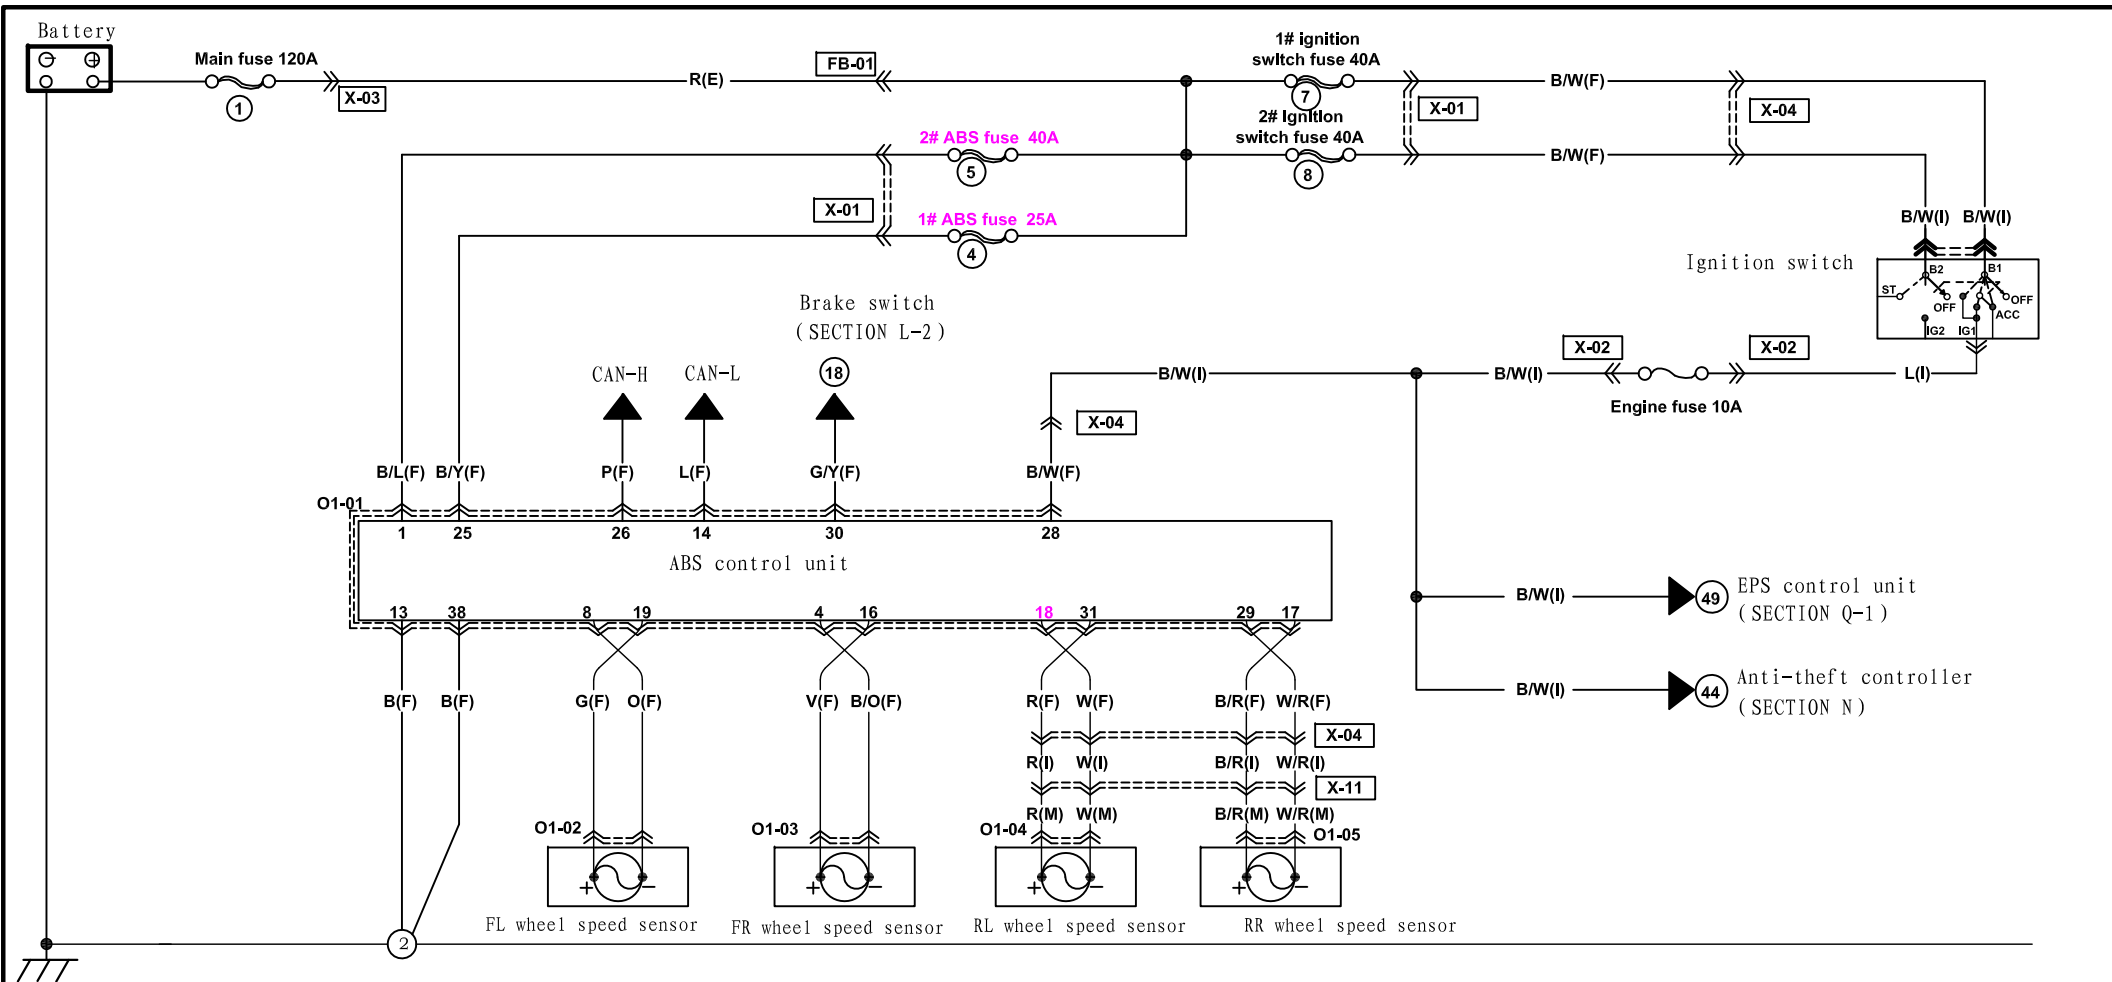


O1-01 ABS control unit

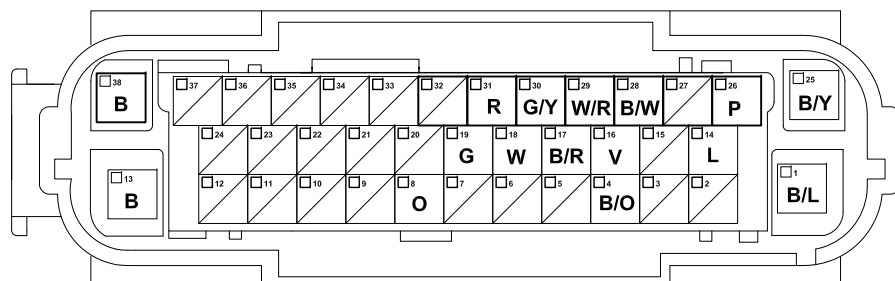


O1-02

 FL wheel speed sensor




O1-03

 FR wheel speed sensor




O1-04

 
RL wheel speed sensor



O1-05

  
RR wheel speed sensor





Fuel Pump Control System

R

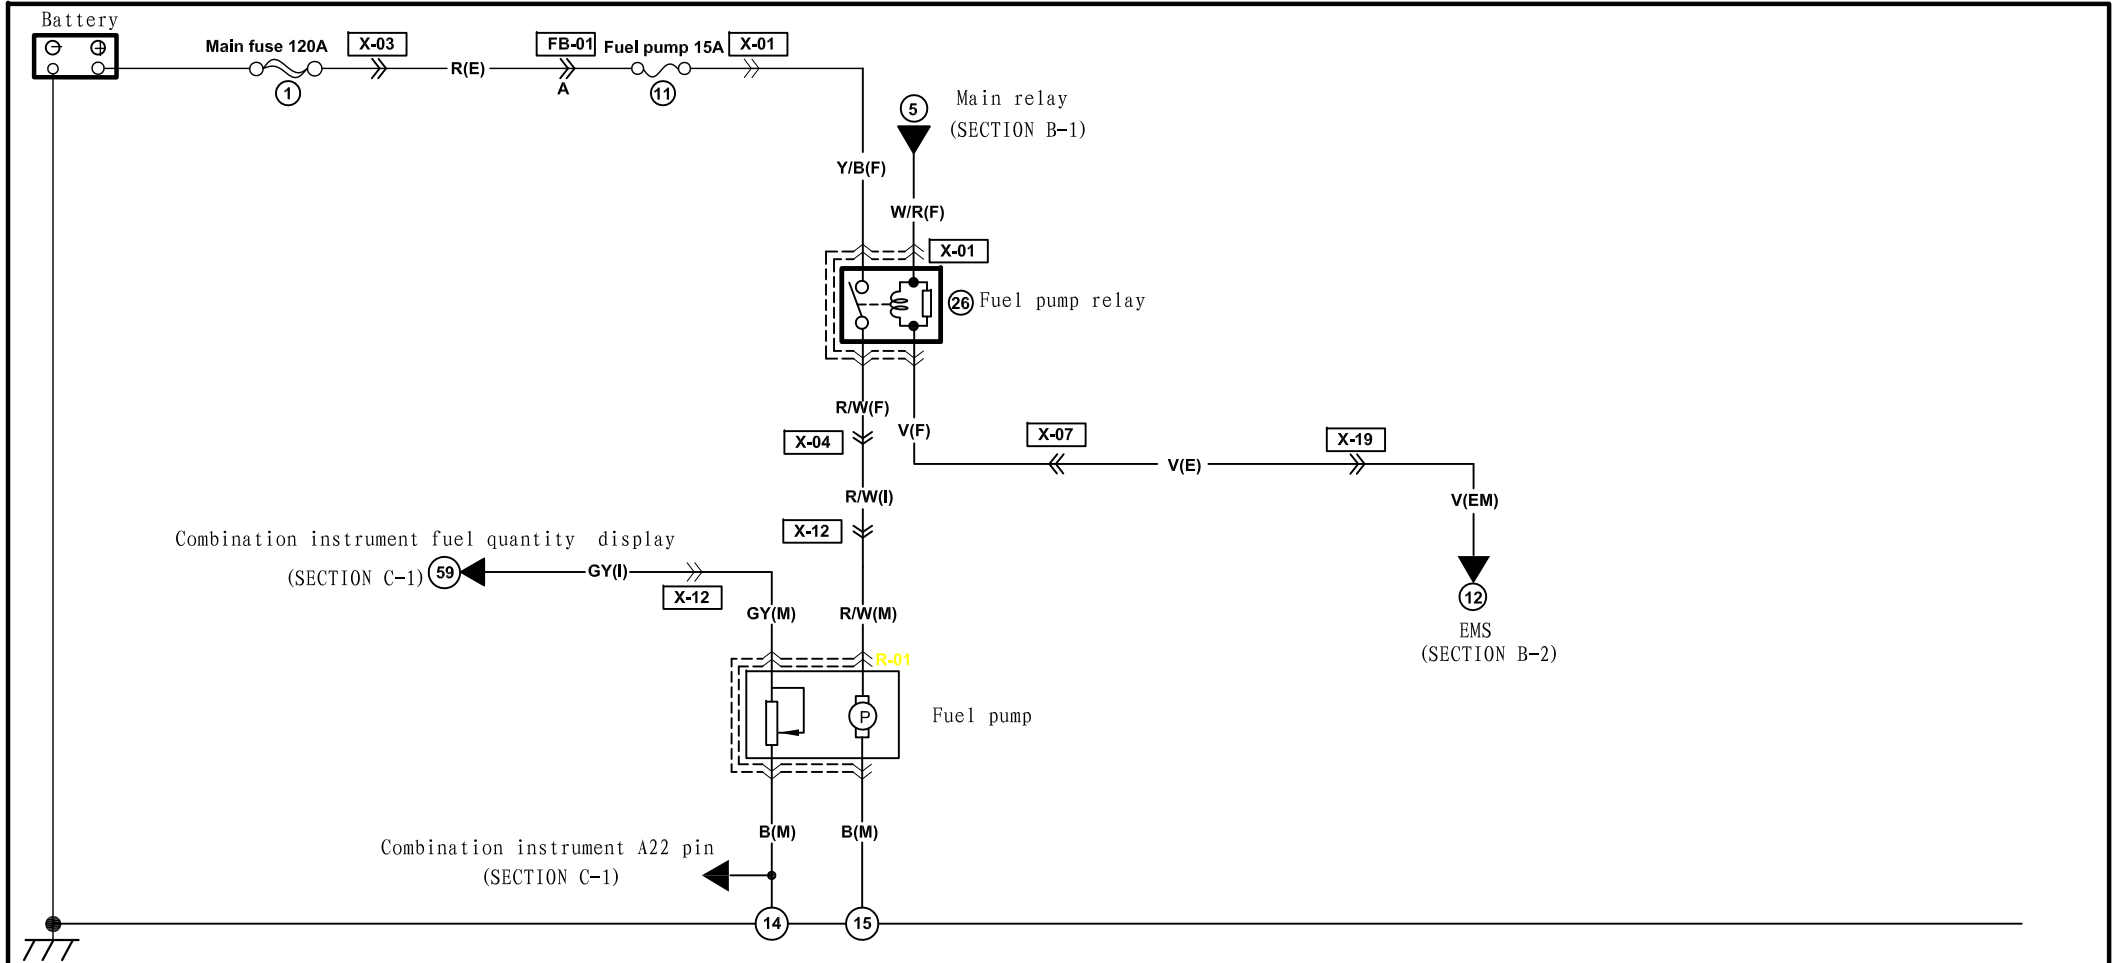

R-01 Fuel pump (R)



Commom Connector List

X-13 Instrument harness (I) -Roof harness (IN) (I) (IN)		X-13 Instrument harness (I) -Roof harness (IN) (I) (IN)	
X-19 Engine harness (E) - EM harness (EM) (E) (EM)		X-18 Engine harness (E) - EM harness (EM) (E) (EM)	
X-20 Middle harness (M) - Reversing radar harness (S) (M) (S)		X-21 Rear harness (R) - 1# back door harness (W) (R) (W)	
X-22 Rear harness (R) - 1# back door harness (W) (R) (W)	X-24 Middle harness (M) - Middle harness (M) (M) (M)	X-23 Middle harness (M) - Rear harness (R) (R) (M)	