



POWER DISTRIBUTION

Circuit Schematic

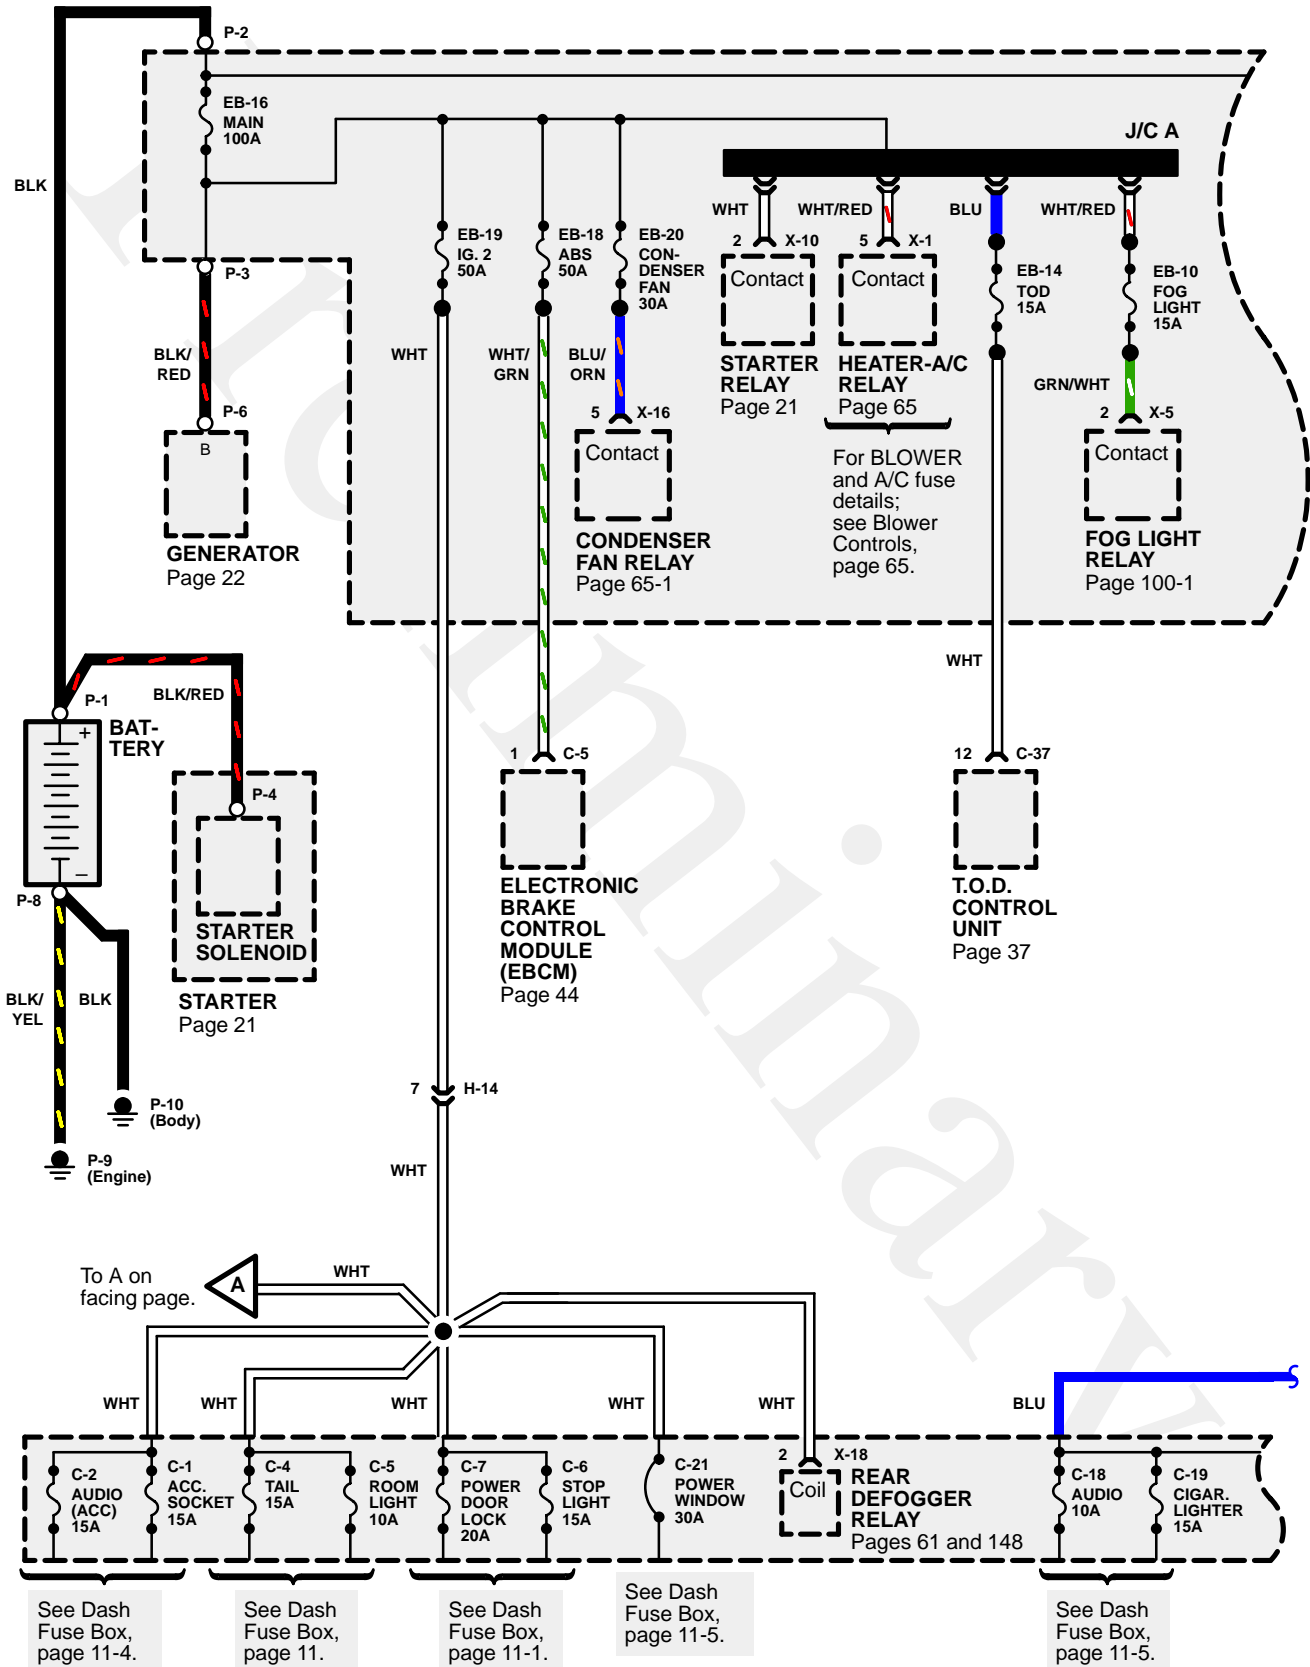


DASH FUSE BOX

Circuit Schematic

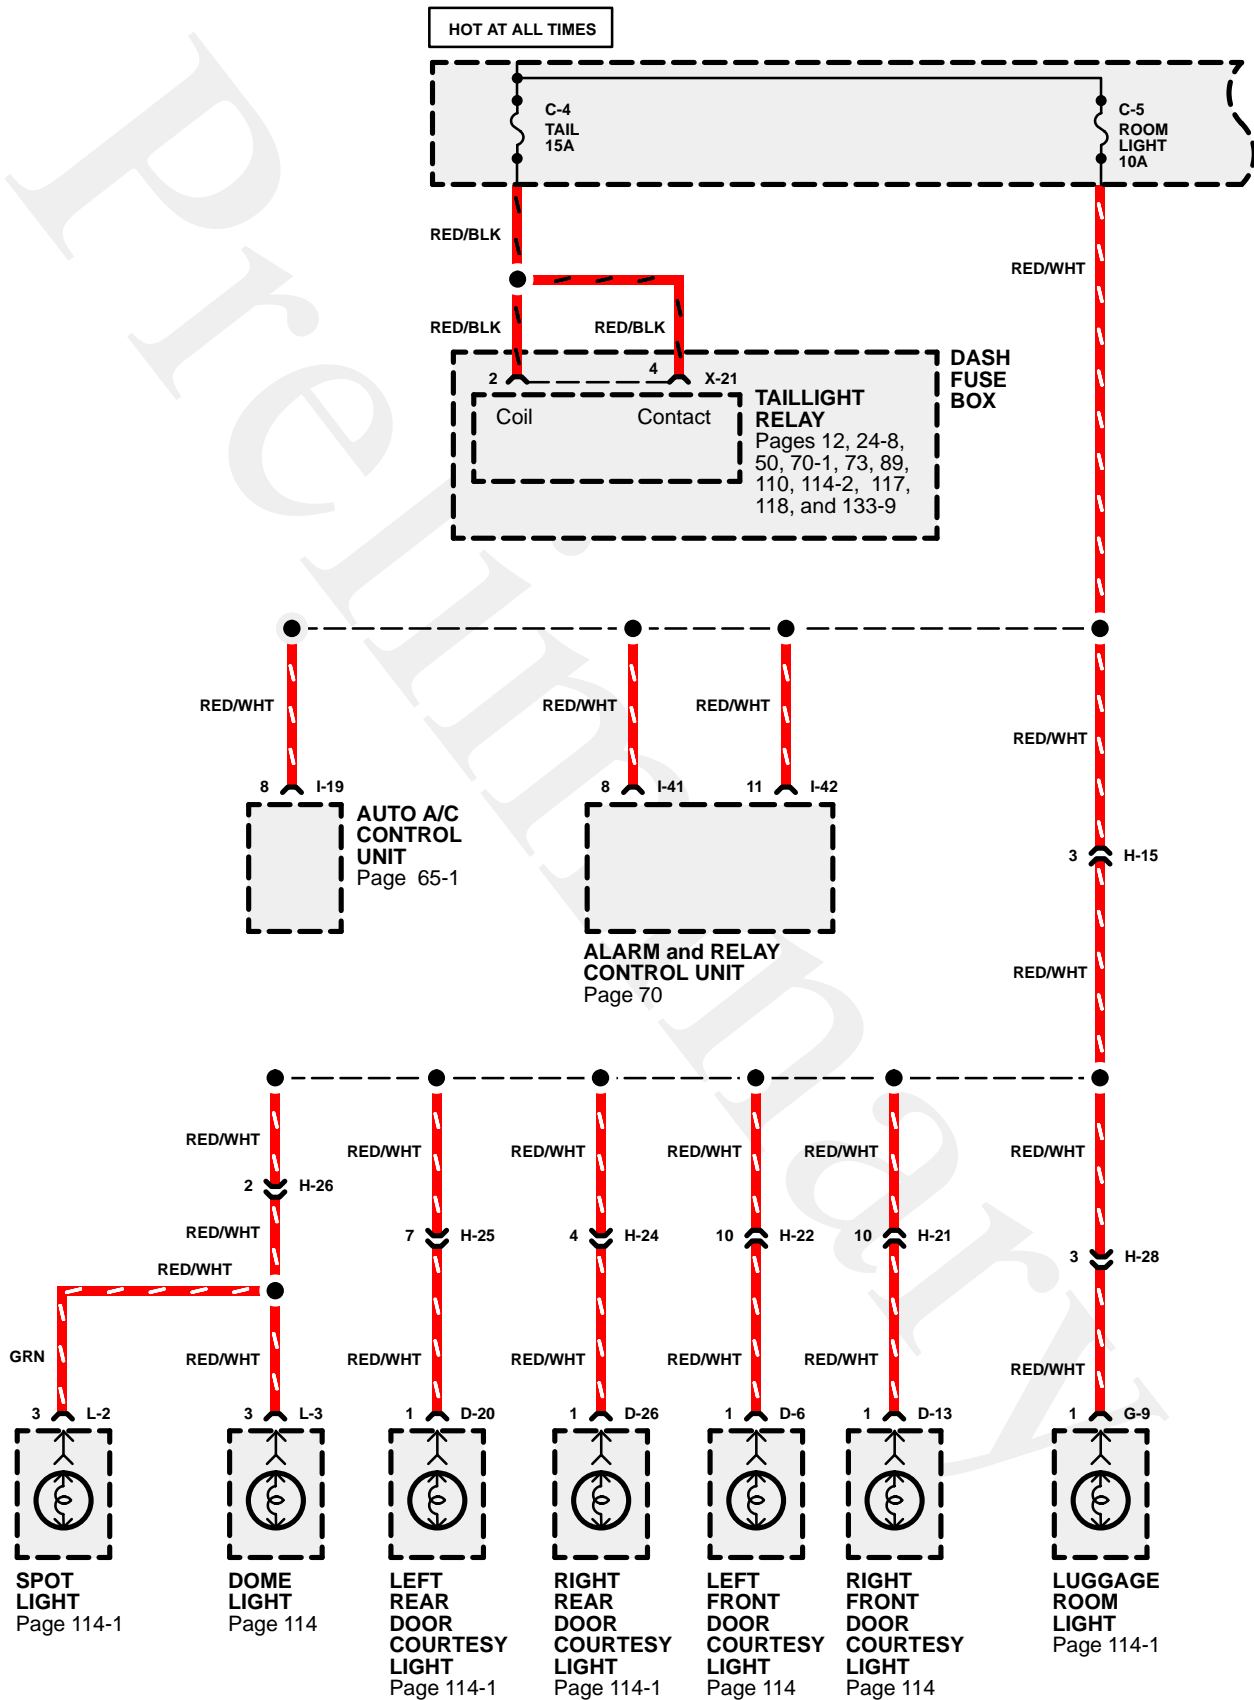


ENGINE CONTROLS

Circuit Schematic

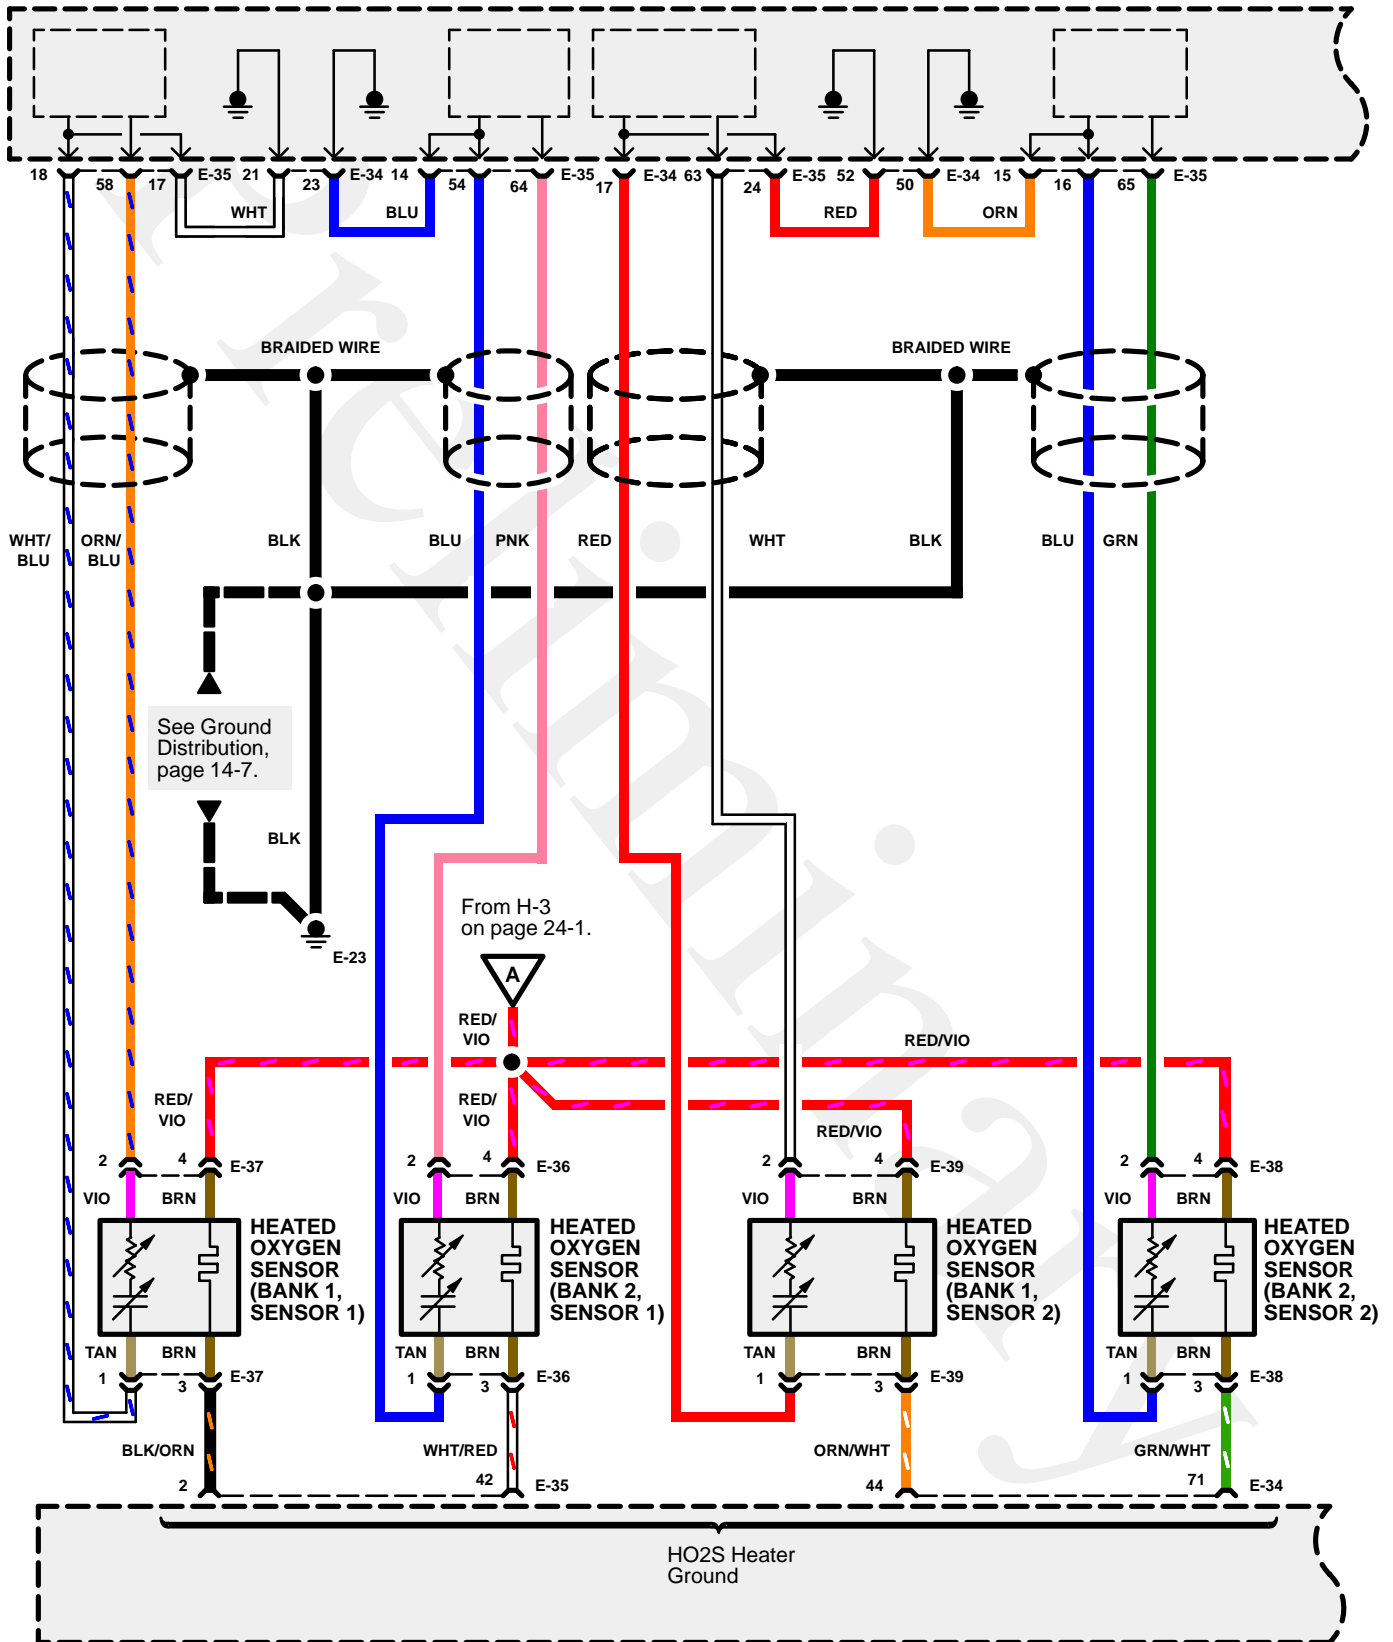


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Circuit Schematic

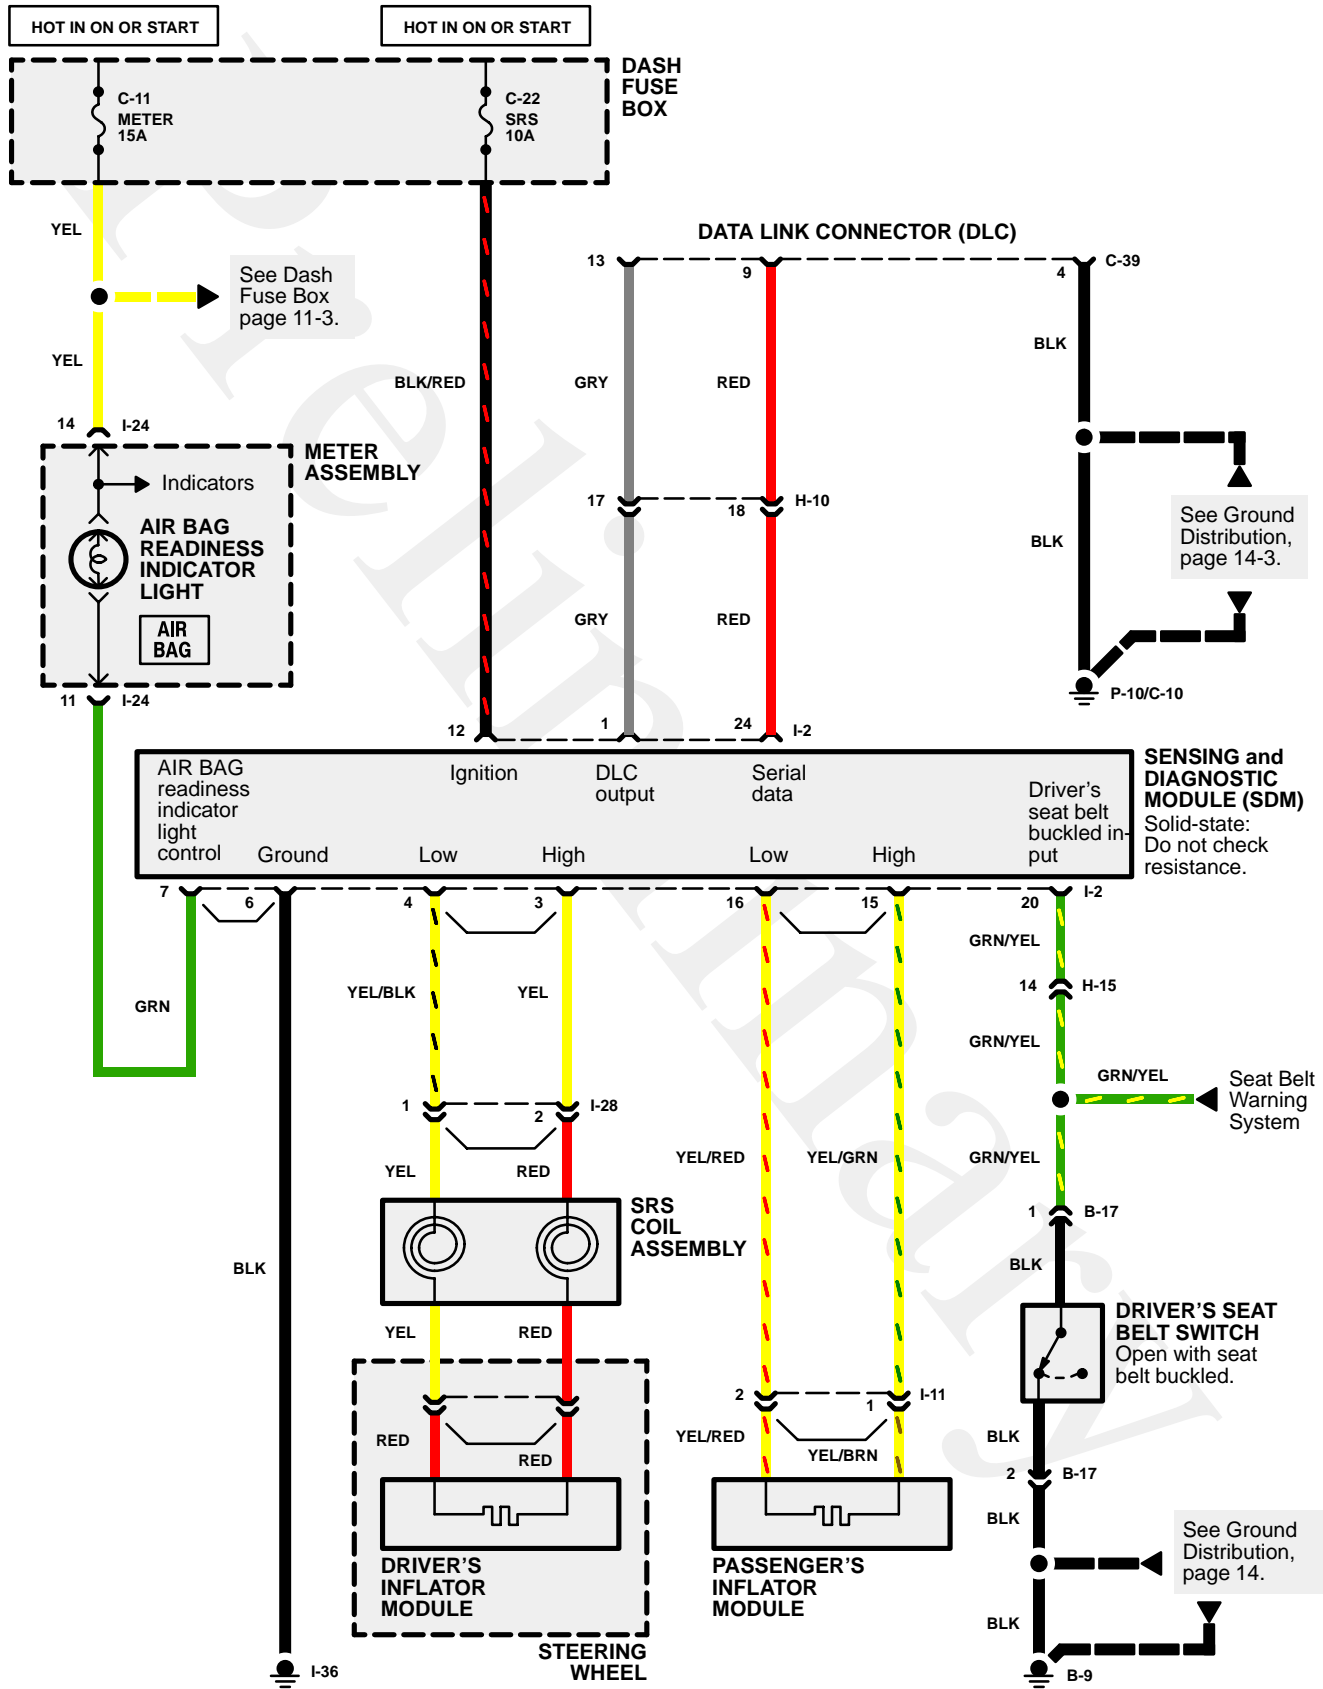


PARK, TAIL, AND LICENSE LIGHTS

Circuit Schematic

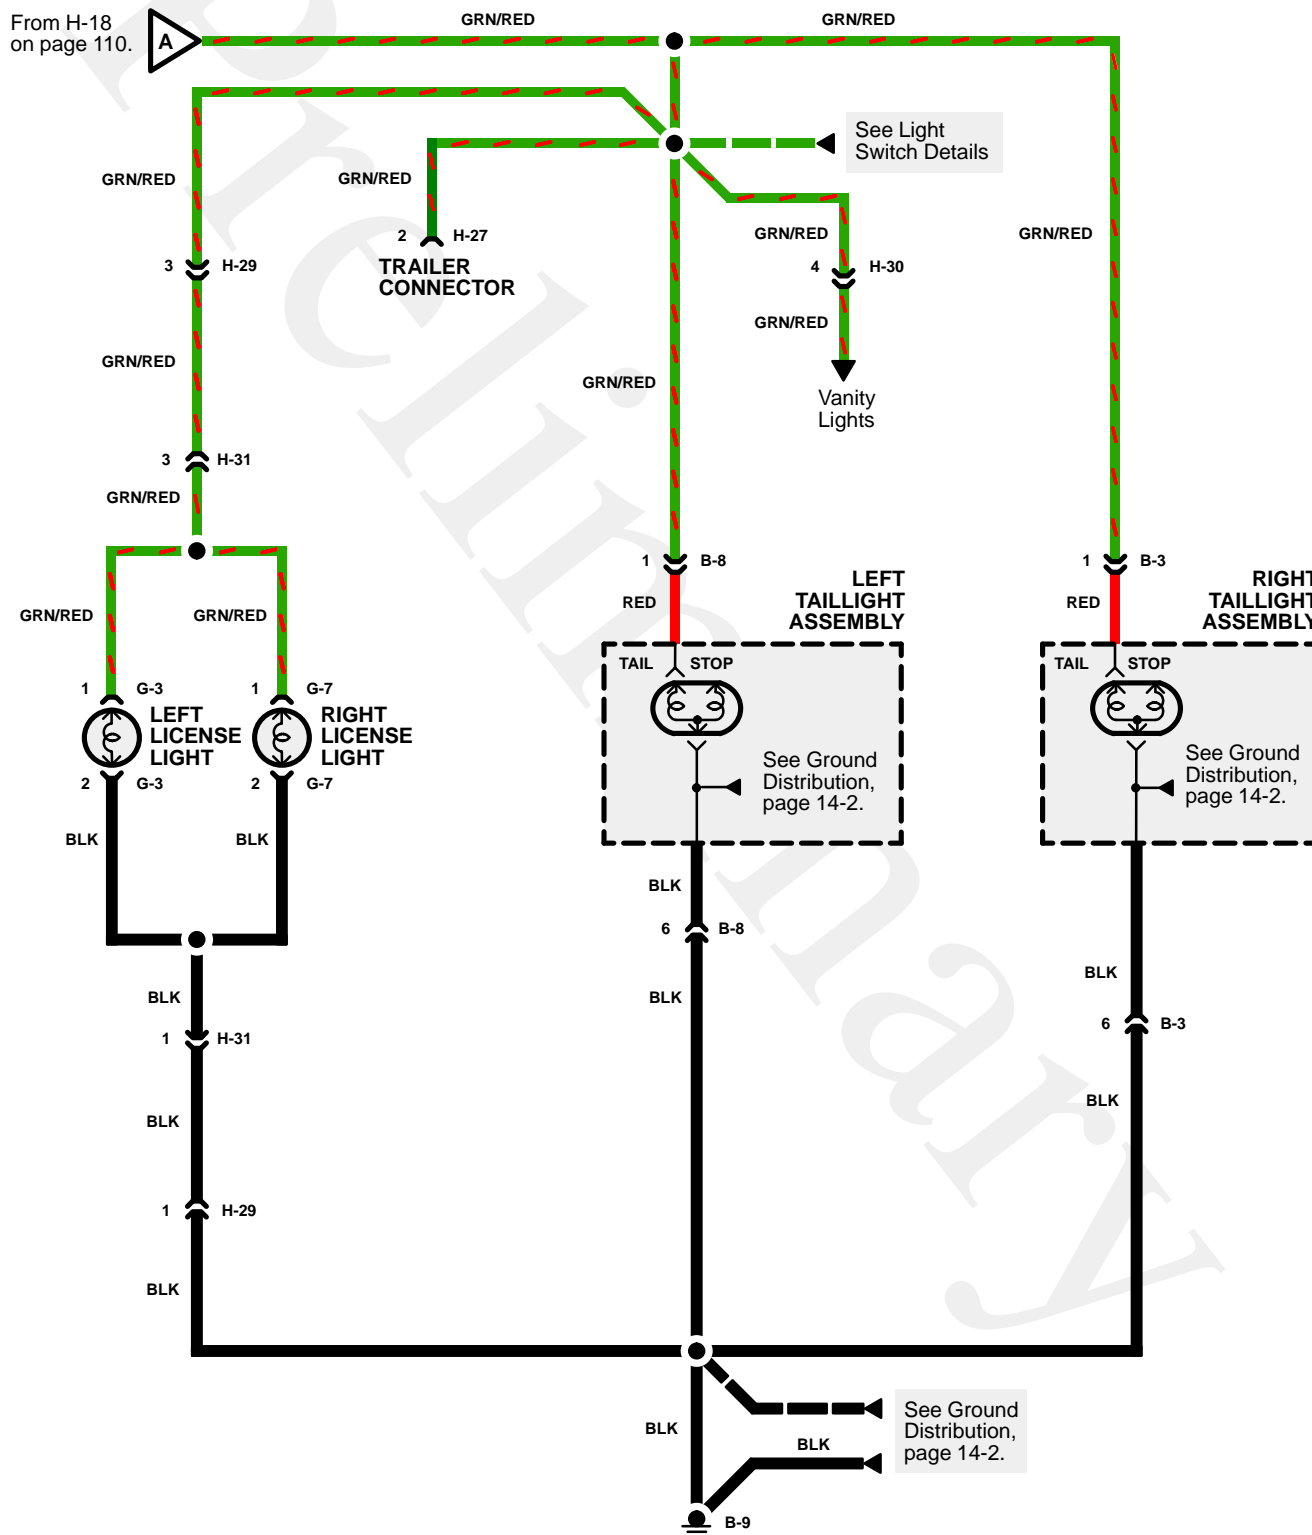


KEYLESS ENTRY AND ANTI-THEFT SYSTEM

Circuit Schematic

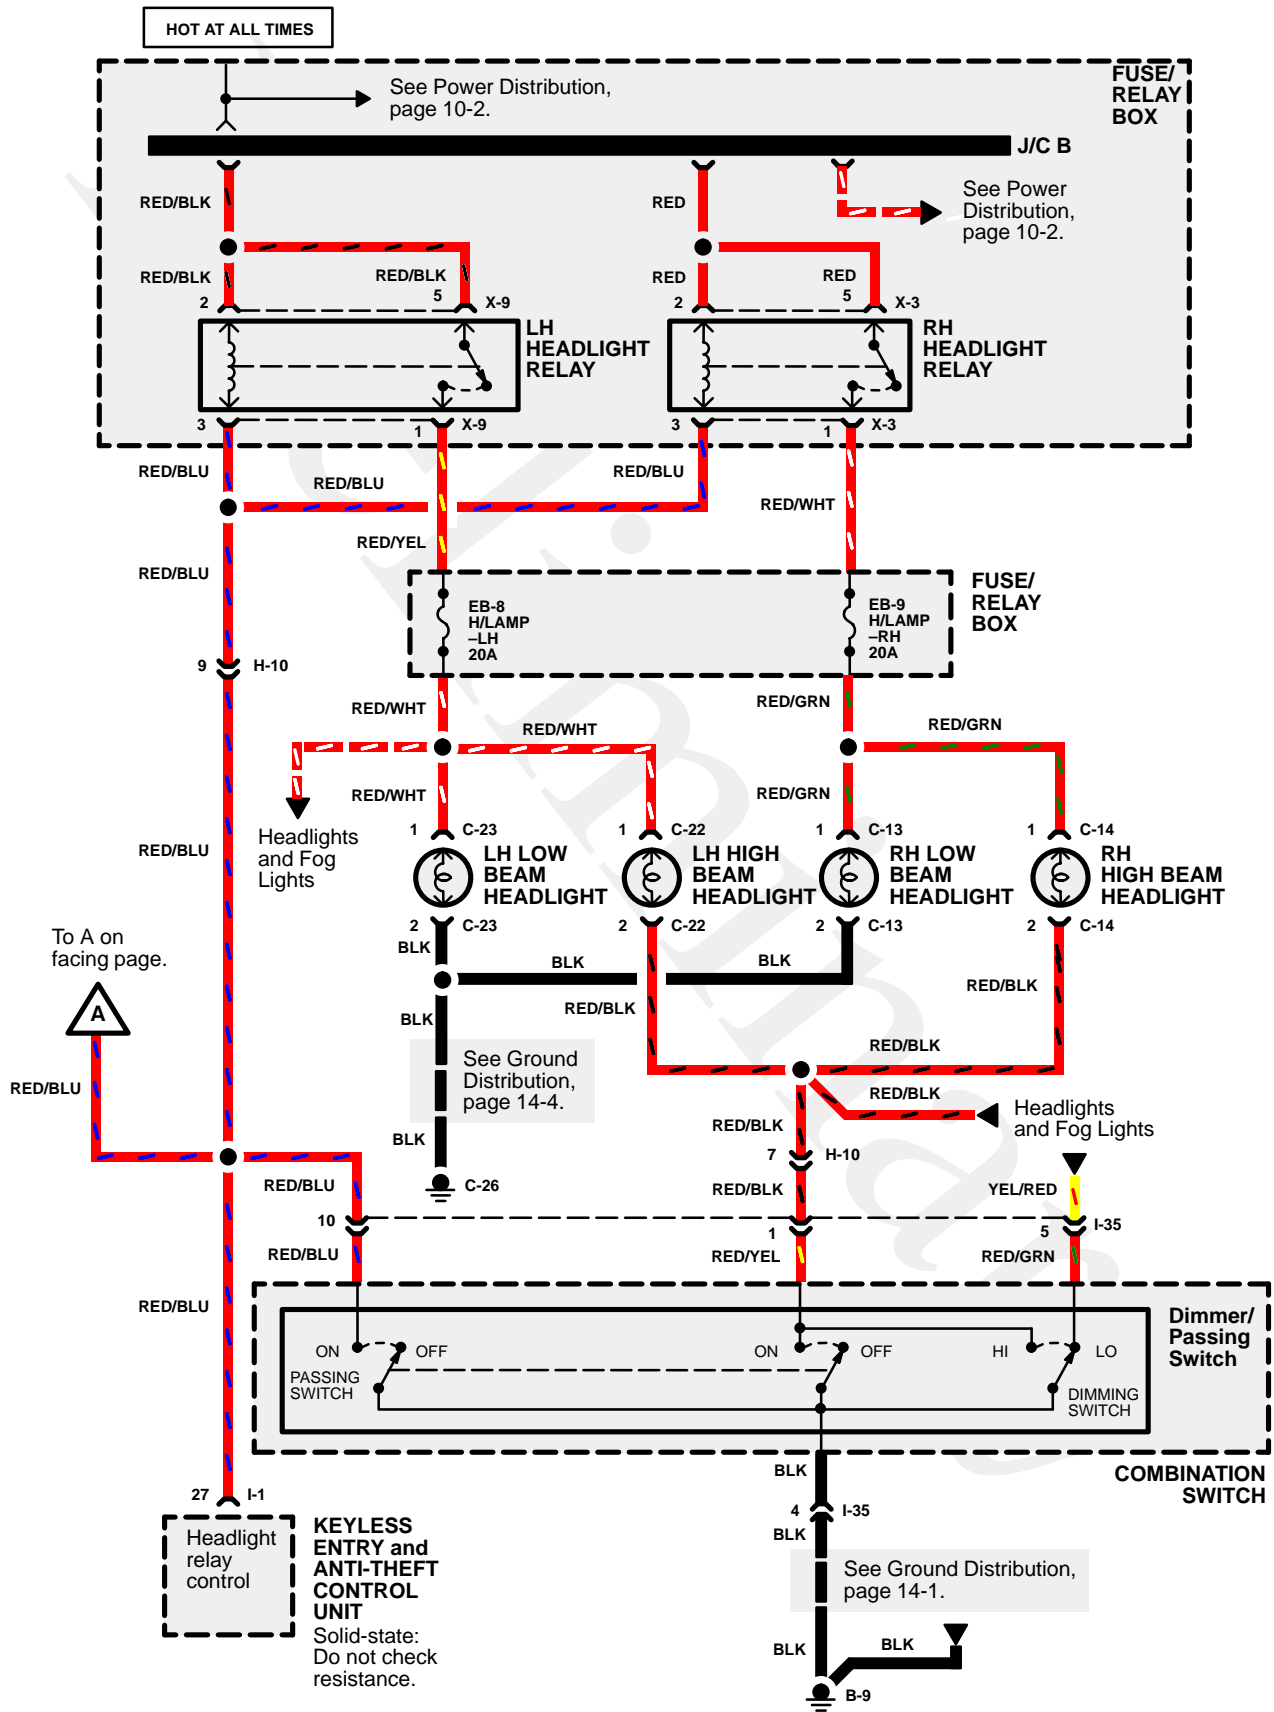


POWER DISTRIBUTION

Circuit Schematic

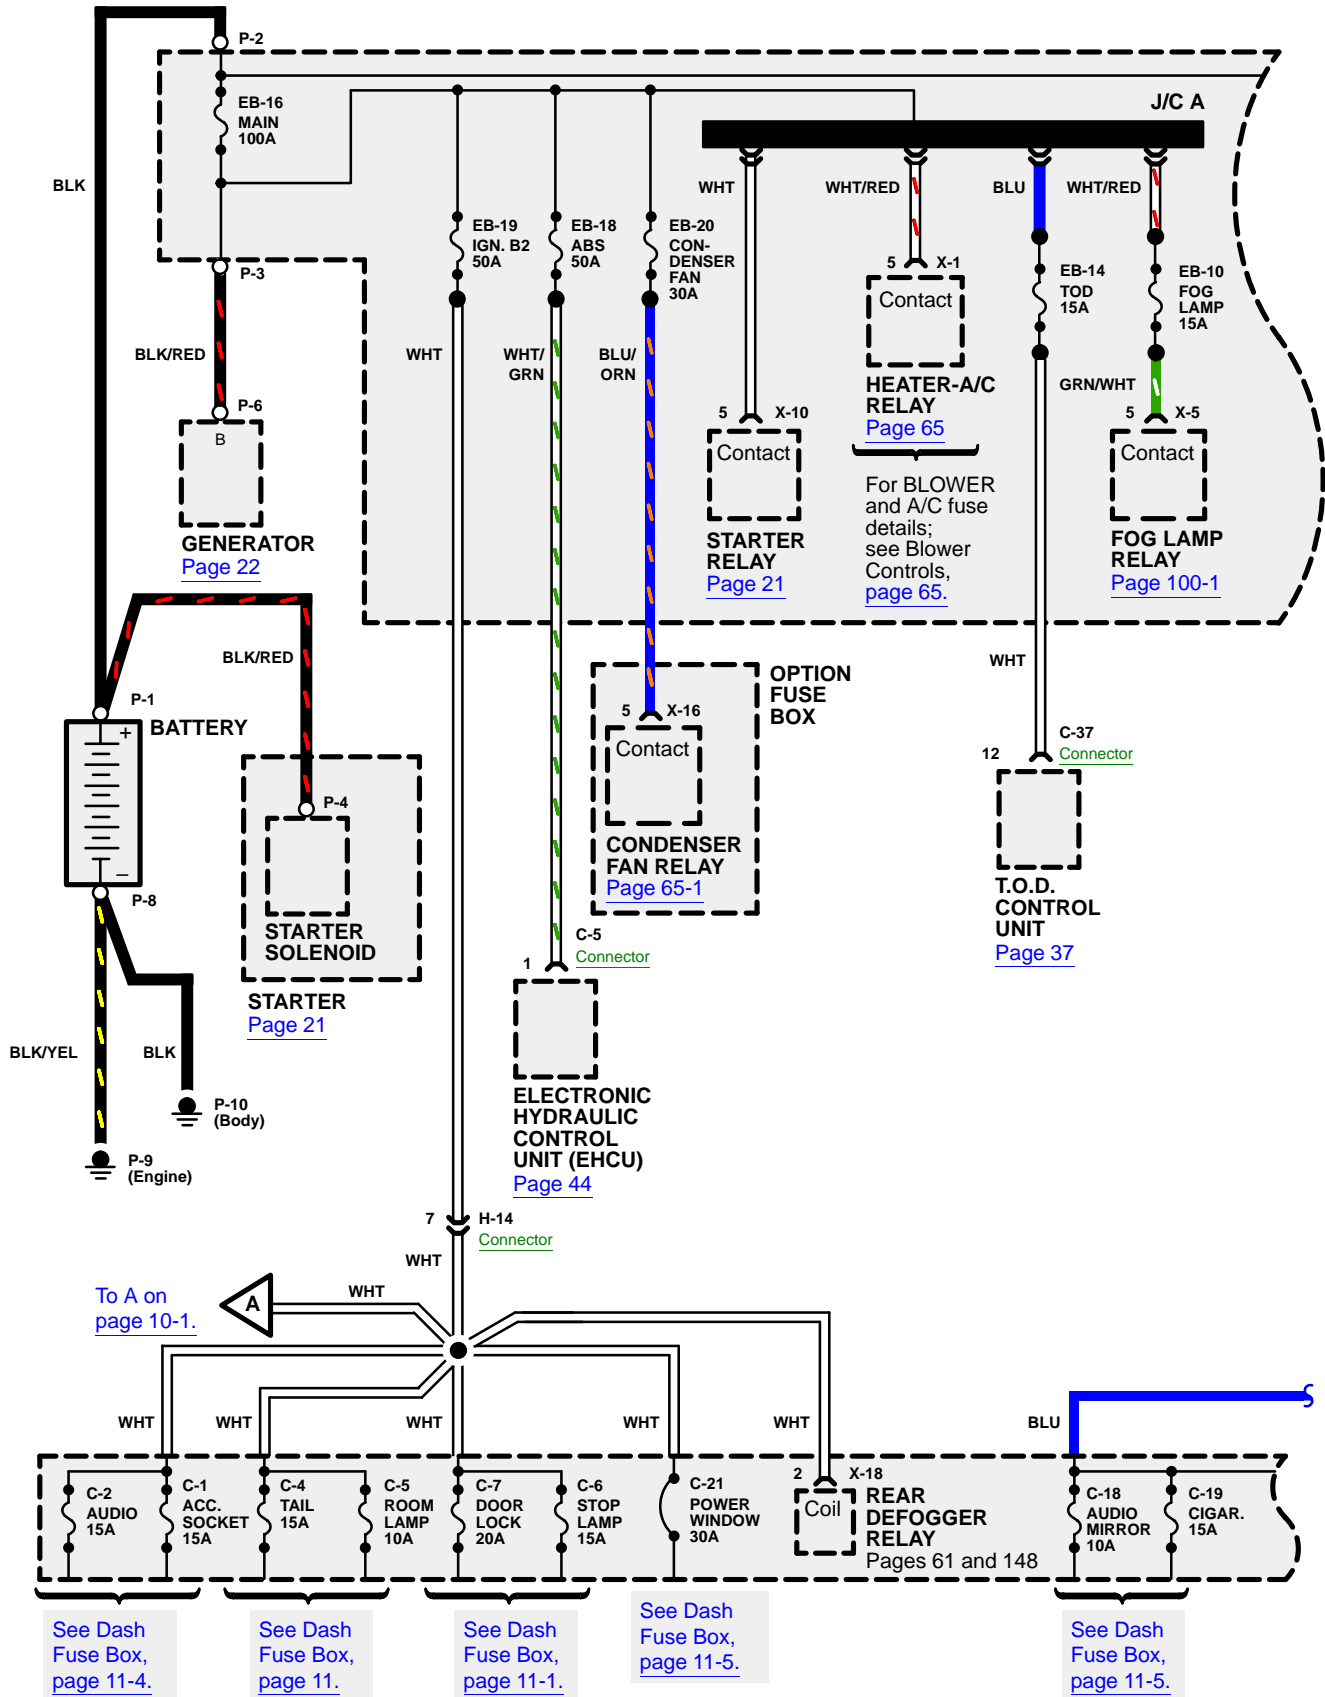

GROUND DISTRIBUTION: E-19 & E-23, I-36

Circuit Schematic

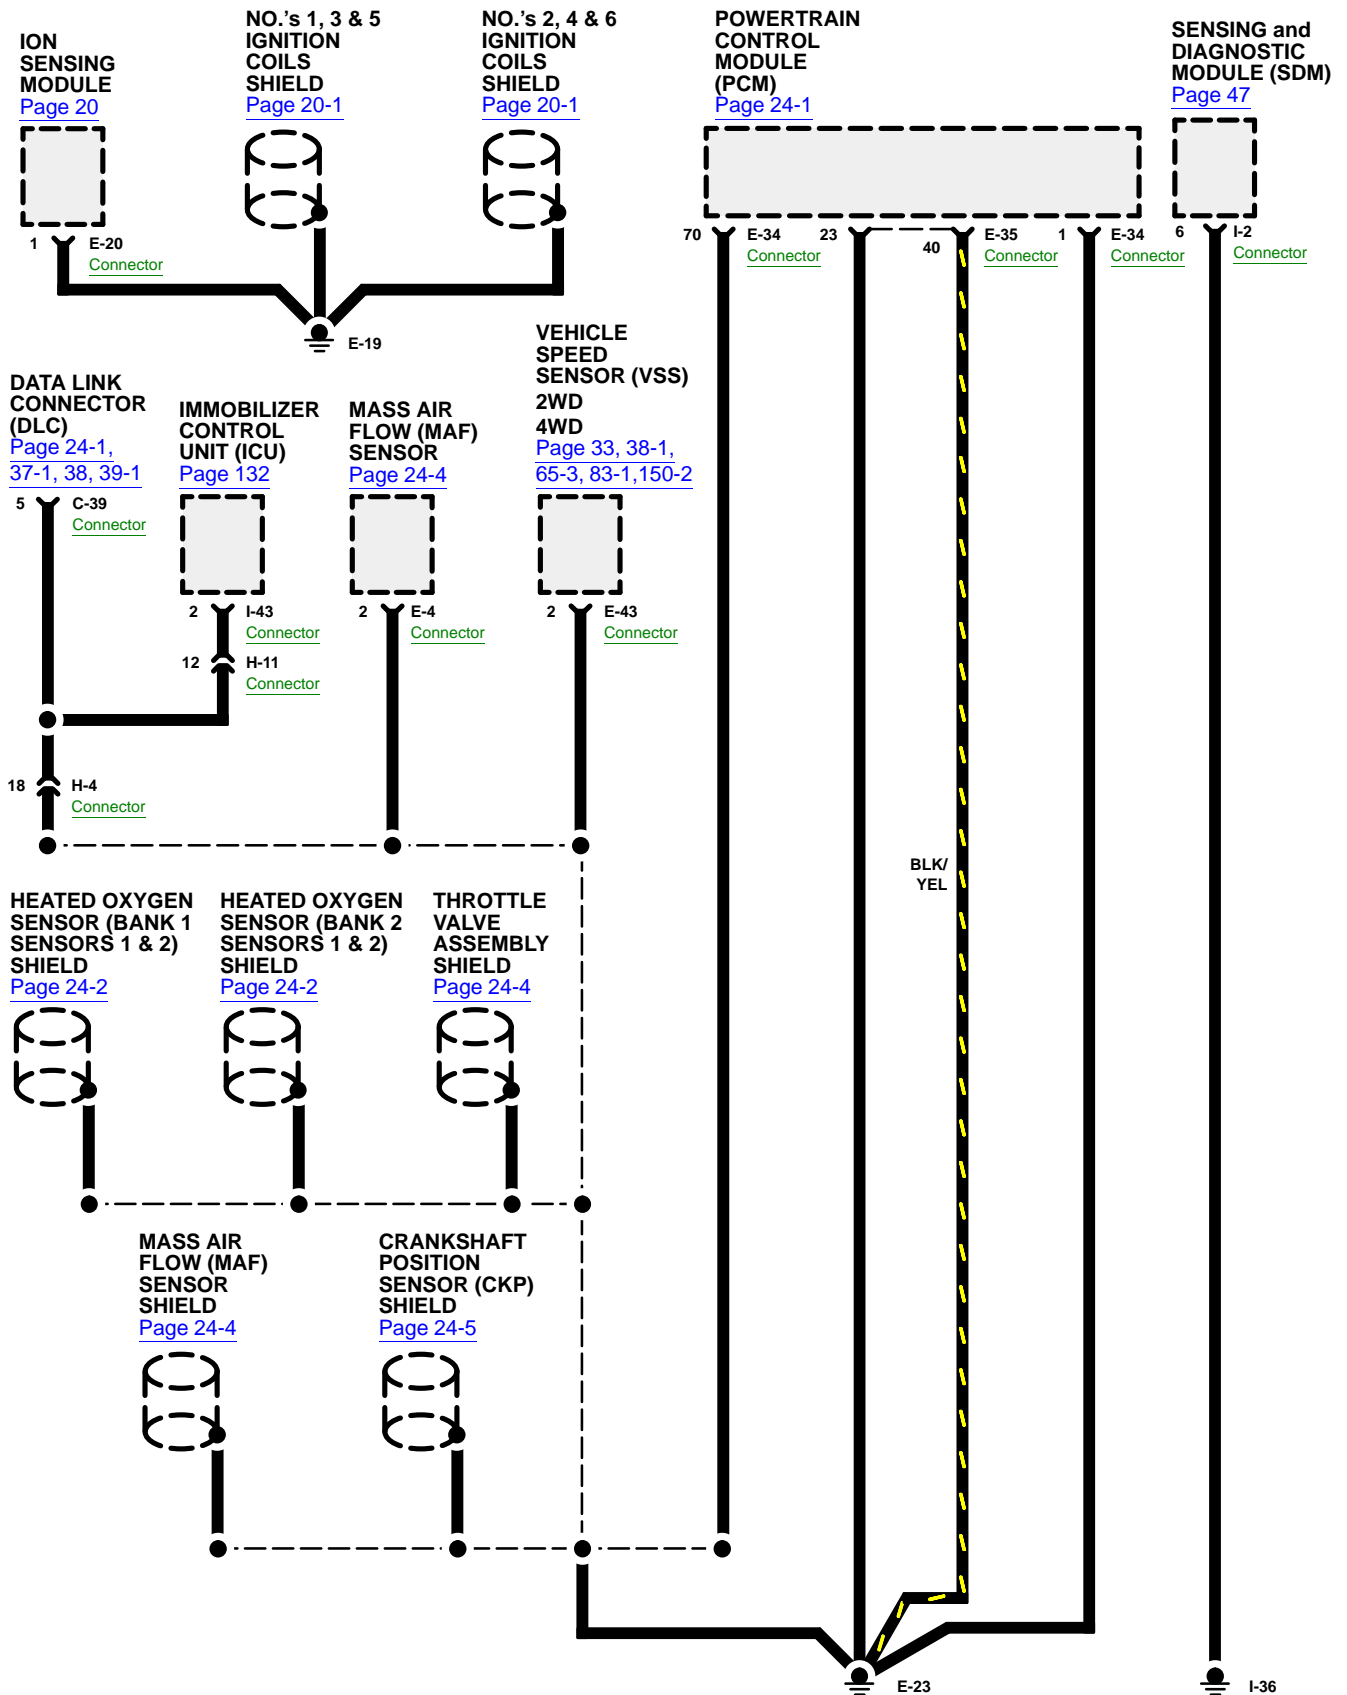

INTELLIGENT SUSPENSION SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Brake Switch	51
Dash Fuse Box	42
Data Link Connector (DLC)	
C-39 (16-BLK)	45
Fuse/Relay Box	8
G-Sensor	111
Intelligent Suspension	
Control unit	68
Junction Connector B	14
Left Front Actuator Assembly	41
Left Rear Actuator Assembly	112
Meter Assembly	55
Option Box	8
Powertrain Control Module (PCM)	26
Right Front Actuator Assembly	41
Right Rear Actuator Assembly	112
Vehicle Speed Sensor (2WD)	99
Vehicle Speed Sensor (4WD)	109
<u>Connector</u>	
C-8 (6-GRY)	15
C-9 (4-BLK)	15
C-30 (6-GRY)	29
C-31 (4-BLK)	29
F-6 (4-BLK)	111
F-7 (8-GRY)	112
H-4 (52-GRY)	31
H-8 (20-BLU)	61
H-9 (20-BLU)	47
H-10 (22-BLK)	46
H-11 (19-BLK)	46
H-14 (19-BLK)	62
H-19 (22-WHT)	56
I-10 (14-GRY)	66
I-22 (14-GRN)	54
I-24 (30-GRN)	54
I-31 (4-WHT)	51
<u>Ground</u>	
C-10	15
C-26	25
E-23	19

REAR WIPER/WASHER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Alarm and Relay Control Unit . . . Right side of I/P	60
Dash Fuse Box	Behind left I/P side trim panel 42
Rear Washer Motor	Right front of engine compartment 7
Rear Wiper Motor	On tailgate door, panel removed 92
Tailgate Open Switch	Bottom of tailgate door
Connector	
G-4 (4-NAT)	On tailgate door 92
H-13 (19-WHT)	Behind right kick panel 62
H-15 (22-WHT)	Behind left kick panel 47
H-17 (4-WHT)	Behind right kick panel 61
H-20 (10-WHT)	Below driver's seat 56
H-28 (6-WHT)	Left rear side of roof 91
H-29 (6-BLK)	Left rear side of roof 91
H-30 (6-WHT)	Upper left side of tailgate (panel removed) 89
H-31 (6-BLK)	Upper left side of tailgate (panel removed) 89
Ground	
B-9	Under center console 71
C-10	At the rear of the battery tray, right side of engine compartment 15
P-10	Right side of engine compartment 15


Circuit Operation

With the starter switch in ON, battery voltage is applied through the C-16 (RR WIPER) fuse to the alarm and relay control unit and the rear washer switch.

Once the rear wiper switch is pressed, the alarm and relay control unit energizes the wiper motor. The rear wiper motor will run intermittently until the rear wiper switch is depressed.


TRAILER ADAPTER

Circuit Schematic

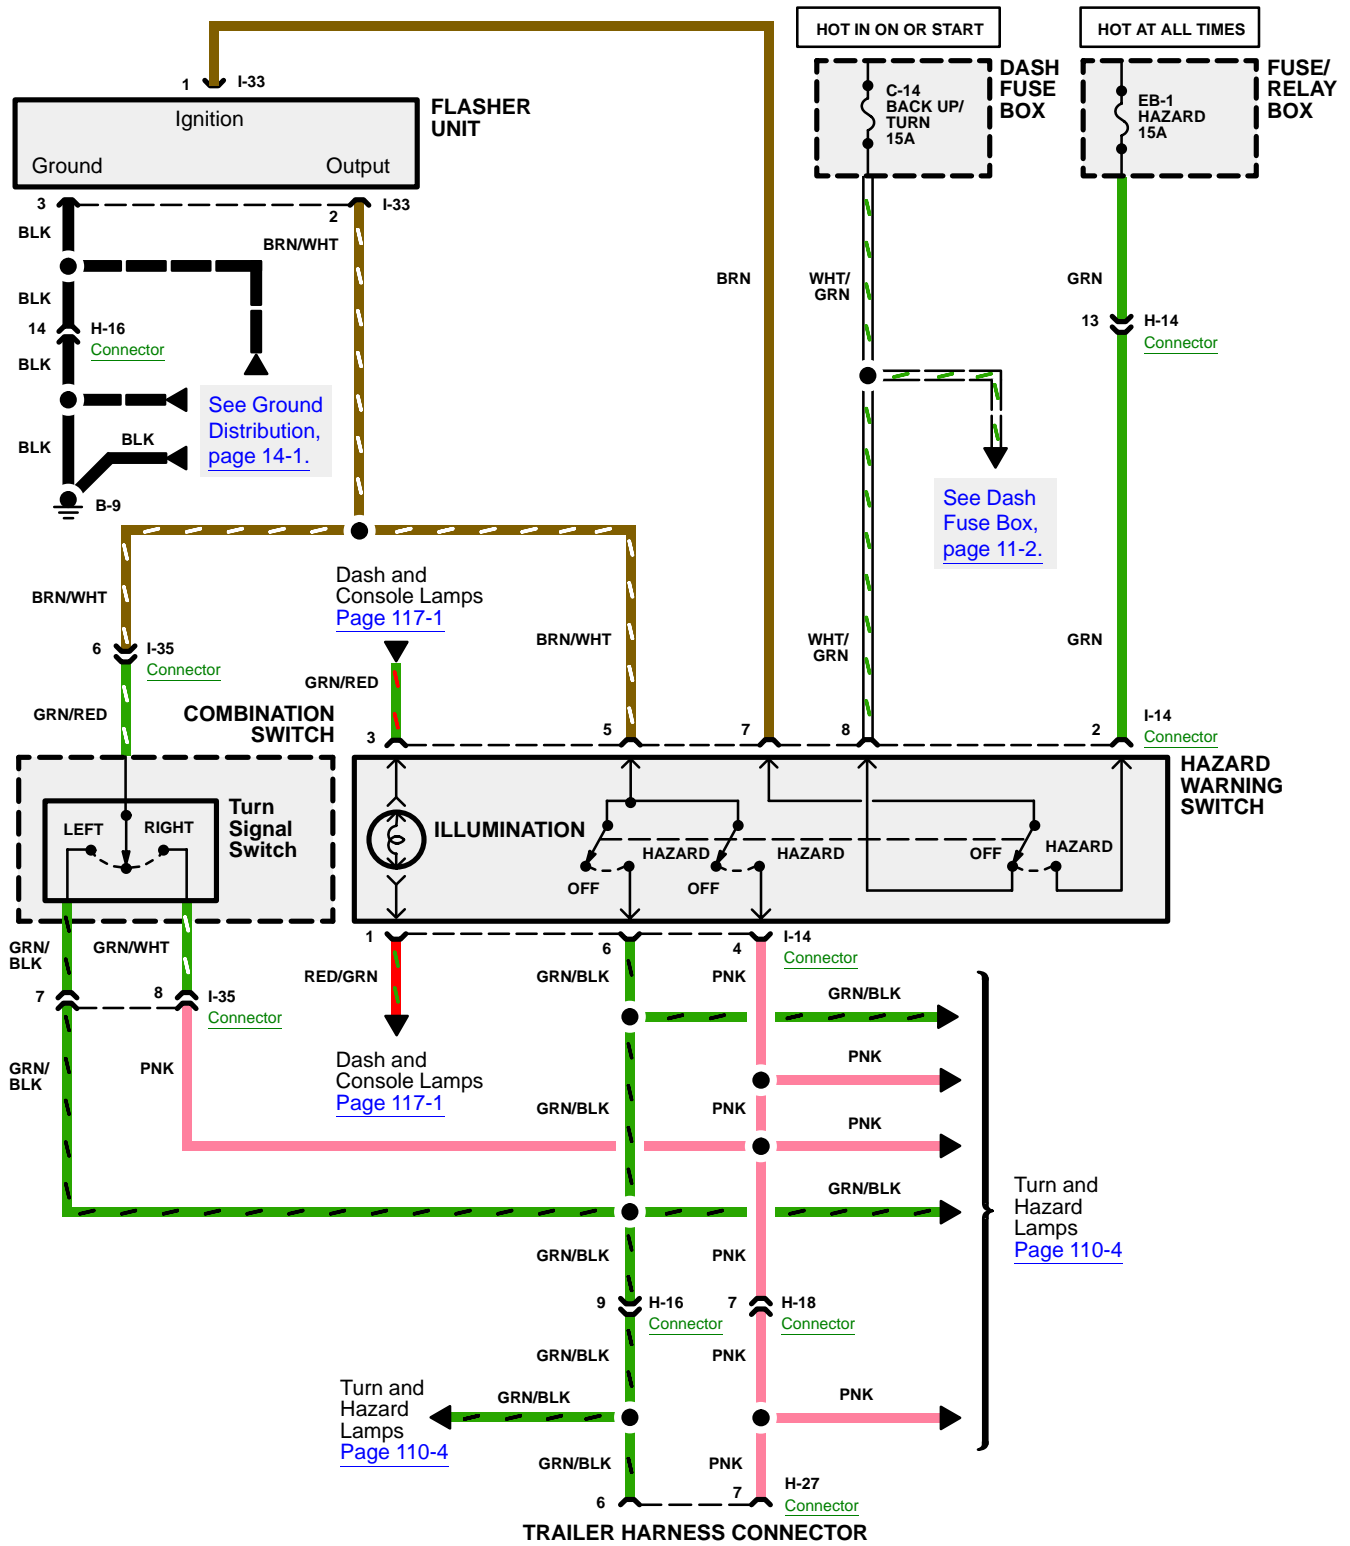

SOUND SYSTEM

Circuit Schematic

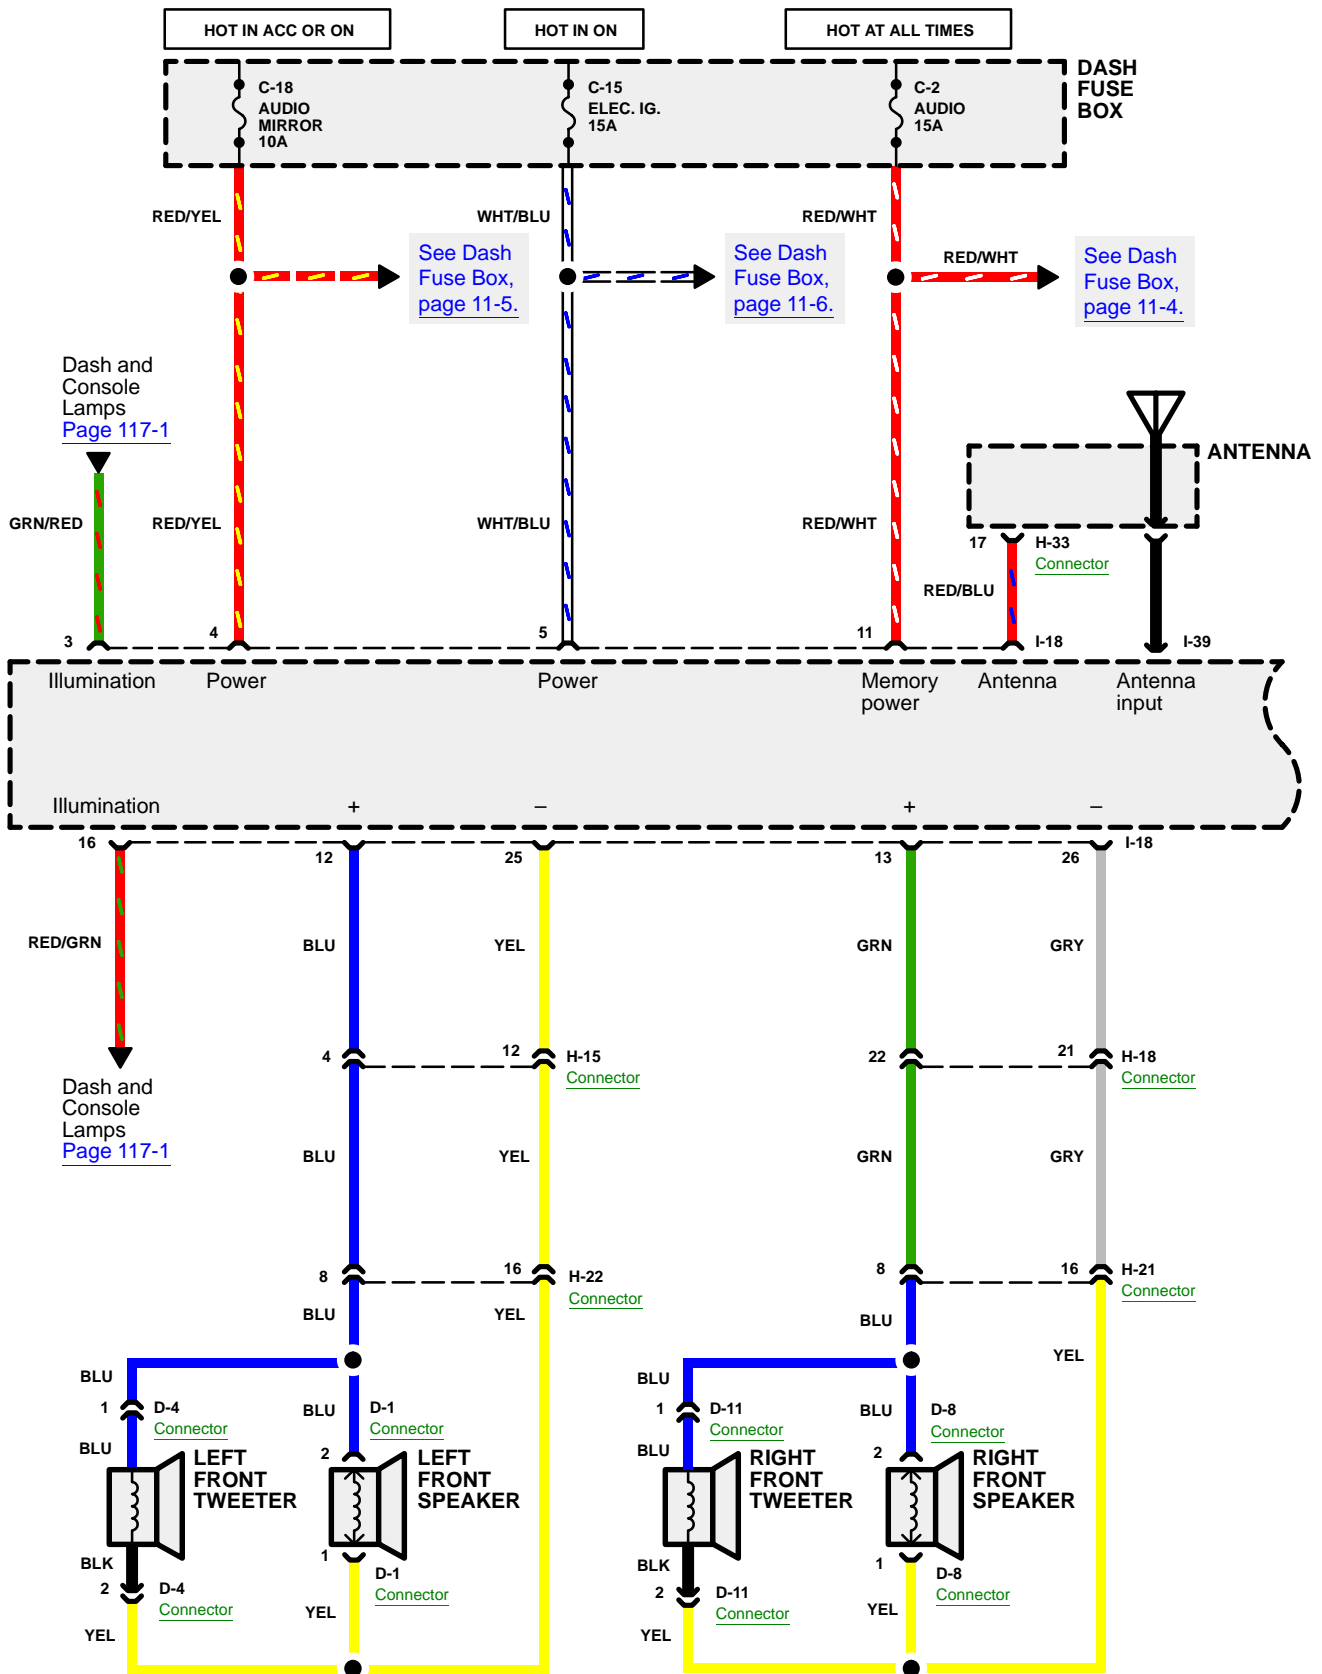

30. Left Side of Engine Compartment





67. Behind Audio Unit




HARNESS CONNECTOR VIEWS

E-35

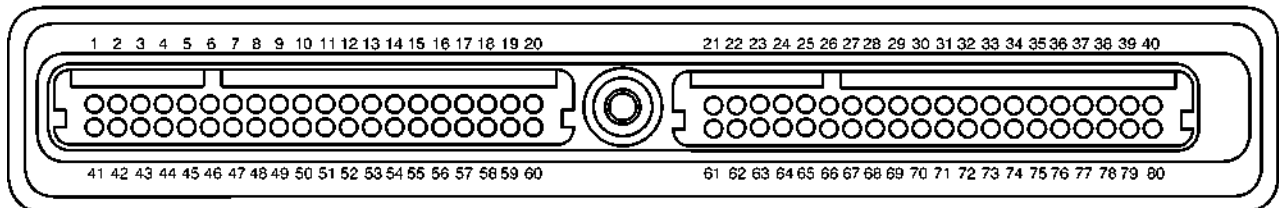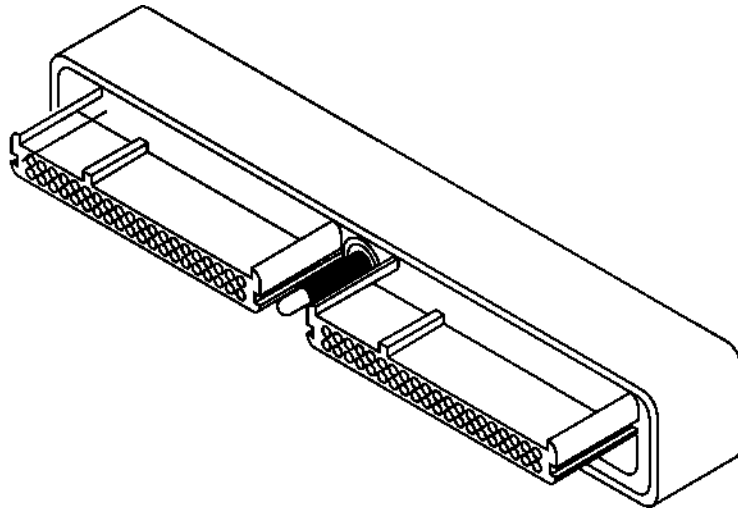

E-36

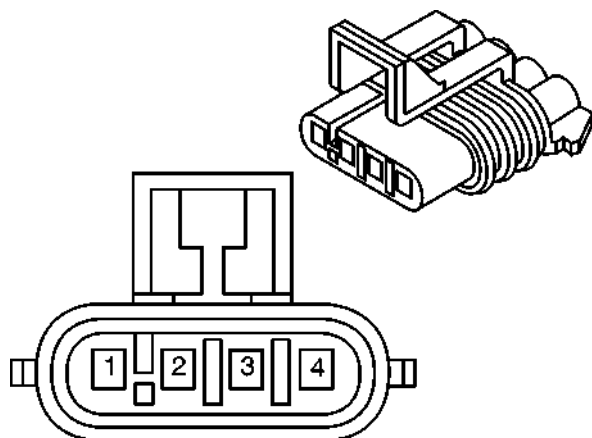

E-37

