


ABBREVIATIONS

Abbreviation	Description
ABS	Anti-lock braking system
ADRC	Adaptive damping
AFS	Adaptive front lighting system
AMP	Audio amplifier
AUTO	Automatic transmission
BSM	Blind spot monitoring
CAN	Controller area network
DAB	Digital audio broadcasting
DSC	Dynamic stability control
D4	Diesel engine - Straight-four
DPF	Diesel particulate filter
DV6	Diesel engine - V6
DV8	Diesel engine - V8
EGR	Exhaust gas recirculation
EMS	Engine management system
ETS	Electronic transmission shift
FET	Field effect transistor
GPS	Global positioning system
HID	High intensity discharge
HS CAN	High speed controller area network bus
IC	Instrument cluster
IP	Instrument panel
PV6	Petrol engine - V6
PV8	Petrol engine - V8
PV8NA	Naturally aspirated engine - V8
PV8SC	Super charged engine - V8
LH	Left-hand
LIN	Local interconnect network
MAF/IAT	Mass air flow / intake air temperature
MS CAN	Medium speed controller area network bus
MMM	Navigation system module
N/A	Normally aspirated
NAS	North American specification
PDC	Park distance control
RF	Radio frequency
RH	Right-hand
SAI	Secondary air injection
SCL	Steering column locking
SDARS	Satellite digital audio receiver system
TPMS	Tire pressure monitoring system
TSD	Touch screen display
TV	Television
ULEV	Ultra low emission vehicle
USB	Universal serial bus
VICS	Vehicle information control system


Sensor-Manifold Absolute-Pressure (MAP) 35
 Sensor-MAP-Secondary air injection (SAI) 42
 Sensor-Mass air-flow (MAF) 16, 27, 36, 44, 71, 72, 73, 75
 Sensor-Oil-temperature 26, 35, 43
 Sensor-Oxygen-Even-Post catalyst 28, 37, 45, 74
 Sensor-Oxygen-Even-Pre-catalyst 28, 37, 45, 74
 Sensor-Oxygen-Odd-Post catalyst 28, 37, 45, 74
 Sensor-Oxygen-Odd-Pre-catalyst 28, 37, 45, 74
 Sensor-Position-Accelerator pedal 29, 38, 46, 56
 Sensor-Pressure-Air Conditioning 58, 60
 Sensor-Pressure-Fuel rail 26, 35, 43
 Sensor-Pressure-mat 97, 174
 Sensor-Rain 88, 92, 120, 172
 Sensor-Safety belt tension 174
 Sensor-Seat-occupancy 174
 Sensor-Side impact-LH side-Front 175, 176
 Sensor-Side impact-LH side-Rear 175, 176
 Sensor-Side impact-RH side-Front 175, 176
 Sensor-Side impact-RH side-Rear 175, 176
 Sensor-Steering-angle 4, 90
 Sensor-Temperature and Manifold-Absolute Pressure (TMAP) 26, 35, 43
 Sensor-Temperature-Fuel rail 26, 35, 43
 Sensor-Temperature-In-car 58, 60, 90, 95
 Sensor-Temperature-Catalytic converter-Downstream-Bank 1 14
 Sensor-Temperature-Catalytic converter-Downstream-Bank 2 14
 Sensor-Temperature-Catalytic converter-Upstream-Bank 1 14
 Sensor-Temperature-Catalytic converter-Upstream-Bank 2 14
 Sensor-Temperature-DPF 14
 Sensor-Tire-Front-LH 1
 Sensor-Tire-Front-RH 1
 Sensor-Tire-Rear-LH 1
 Sensor-Tire-Rear-RH 1
 Sensor-twin knock 35, 43
 Sensor-Yaw Rate 4, 90, 98
 Slip rings-Steering wheel 5, 90, 95, 158
 Socket-Accessory-Front 87, 98, 162
 Socket-Accessory-Rear 87
 Socket-auxiliary-trailer 79, 162
 Solenoid-Damper-Front-LH 2
 Solenoid-Damper-Front-RH 2
 Solenoid-Damper-Rear-LH 2
 Solenoid-Damper Rear-RH 2
 Solenoid-Lumbar-pump 152, 154
 Solenoid-Vacuum (SAI) 24, 33, 42, 74, 76
 Sounder-Battery backed 88, 92, 139
 Speaker-Low range-Front door-LH 107, 108, 109
 Speaker-Low range-Front door-RH 107, 108, 109
 Speaker-Low range-Rear door-LH 107, 108, 109
 Speaker-Low range-Rear door-RH 107, 108, 109
 Speaker-Mid range-Front door-LH 107
 Speaker-Mid range-Front door-RH 107
 Speaker-Subwoofer 107, 109
 Speed control sensor 57, 76, 90, 93
 Start control unit 64, 69, 70, 85, 95, 140
 Starter motor 9, 10, 11, 12, 69, 70, 77, 101, 102, 103, 104
 Stepper Motor-EGR 39, 47, 71, 72
 Stop lamp switch 3, 55, 56, 84, 85, 89, 90, 118
 Stud-cable junction 9, 10, 11, 12, 69, 70, 101, 102, 103, 104
 Stud-through panel 4, 7, 8, 9, 10, 11, 12, 13, 15, 16, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 61, 64, 69, 70, 115, 116, 139, 162, 172
 Super charger coolant pump 34, 72, 93
 Suppressor-Ignition-coil 31, 40, 48
 Switch pack-Center Instrument panel 83, 84, 86, 89, 92, 95, 124, 161
 Switch pack-Seat-Driver 86, 97, 148, 149, 152, 153, 154, 155
 Switch pack-Seat-Passenger 86, 97, 150, 151
 Switch pack-Mirror-window-Driver 86, 96, 145, 159
 Switch-Auxiliary lighting 57, 63, 65, 77, 92, 93, 95, 115, 117, 123, 124, 168
 Switch-Brake-fluid level 64
 Switch-Buckle-Driver 97, 174
 Switch-Buckle-Passenger 97, 174
 Switch-Glove-compartment 95, 121
 Switch-Horn-LH 5, 139
 Switch-Horn-RH 5, 139
 Switch-Oil pressure 64
 Switch-Passenger air bag disable (dealer installation) 95, 177
 Switch-Remote-ICE 5, 55, 56, 105, 106, 124, 139
 Switch-Seat memory-Driver 96, 152, 153, 154, 155
 Switch-Steering column adjustment 6, 63, 65
 Switch-Steering column-Lighting 63, 65, 117, 119, 120
 Switch-Steering column-Wiper 63, 65, 172
 Switch-Window-Rear-LH 160
 Switch-Window-Rear-RH 160
 Tail lamp unit-LH 82, 99, 118, 119, 120
 Tail lamp unit-RH 82, 99, 118, 119, 120
 TCM and Control Valve Body 49, 50, 51, 52, 75, 76, 90, 94, 133
 Touch screen display 67, 79, 95, 114, 134, 141, 156, 157, 158
 Tweeter-Rear-LH 107, 108, 109
 Tweeter-Rear-RH 107, 108, 109
 Unit-Leak detection 53, 71, 72, 73
 Unit-Steering column 6, 63, 65, 95
 Upshift paddle switch 5
 Valve-Control-Fuel volume 16
 Valve-Inlet manifold tuning bank 1 25, 73
 Valve-Inlet manifold tuning bank 2 25, 73
 Valve-Oil-Variable-valve timing 71, 72, 73
 Valve-Pressure-control 75
 Variable Camshaft Timing (VCT) Unit-Bank 1 30, 39, 47
 Variable Camshaft Timing (VCT) Unit-Bank 2 30, 39, 47
 Wheel speed sensor-LH front 4
 Wheel speed sensor-LH rear 4
 Wheel speed sensor-RH front 4
 Wheel speed sensor-RH rear 4
 Windshield LH heater element 61, 78, 96

ph8r83-70165-a-a1


ph8r83-70030-a-af

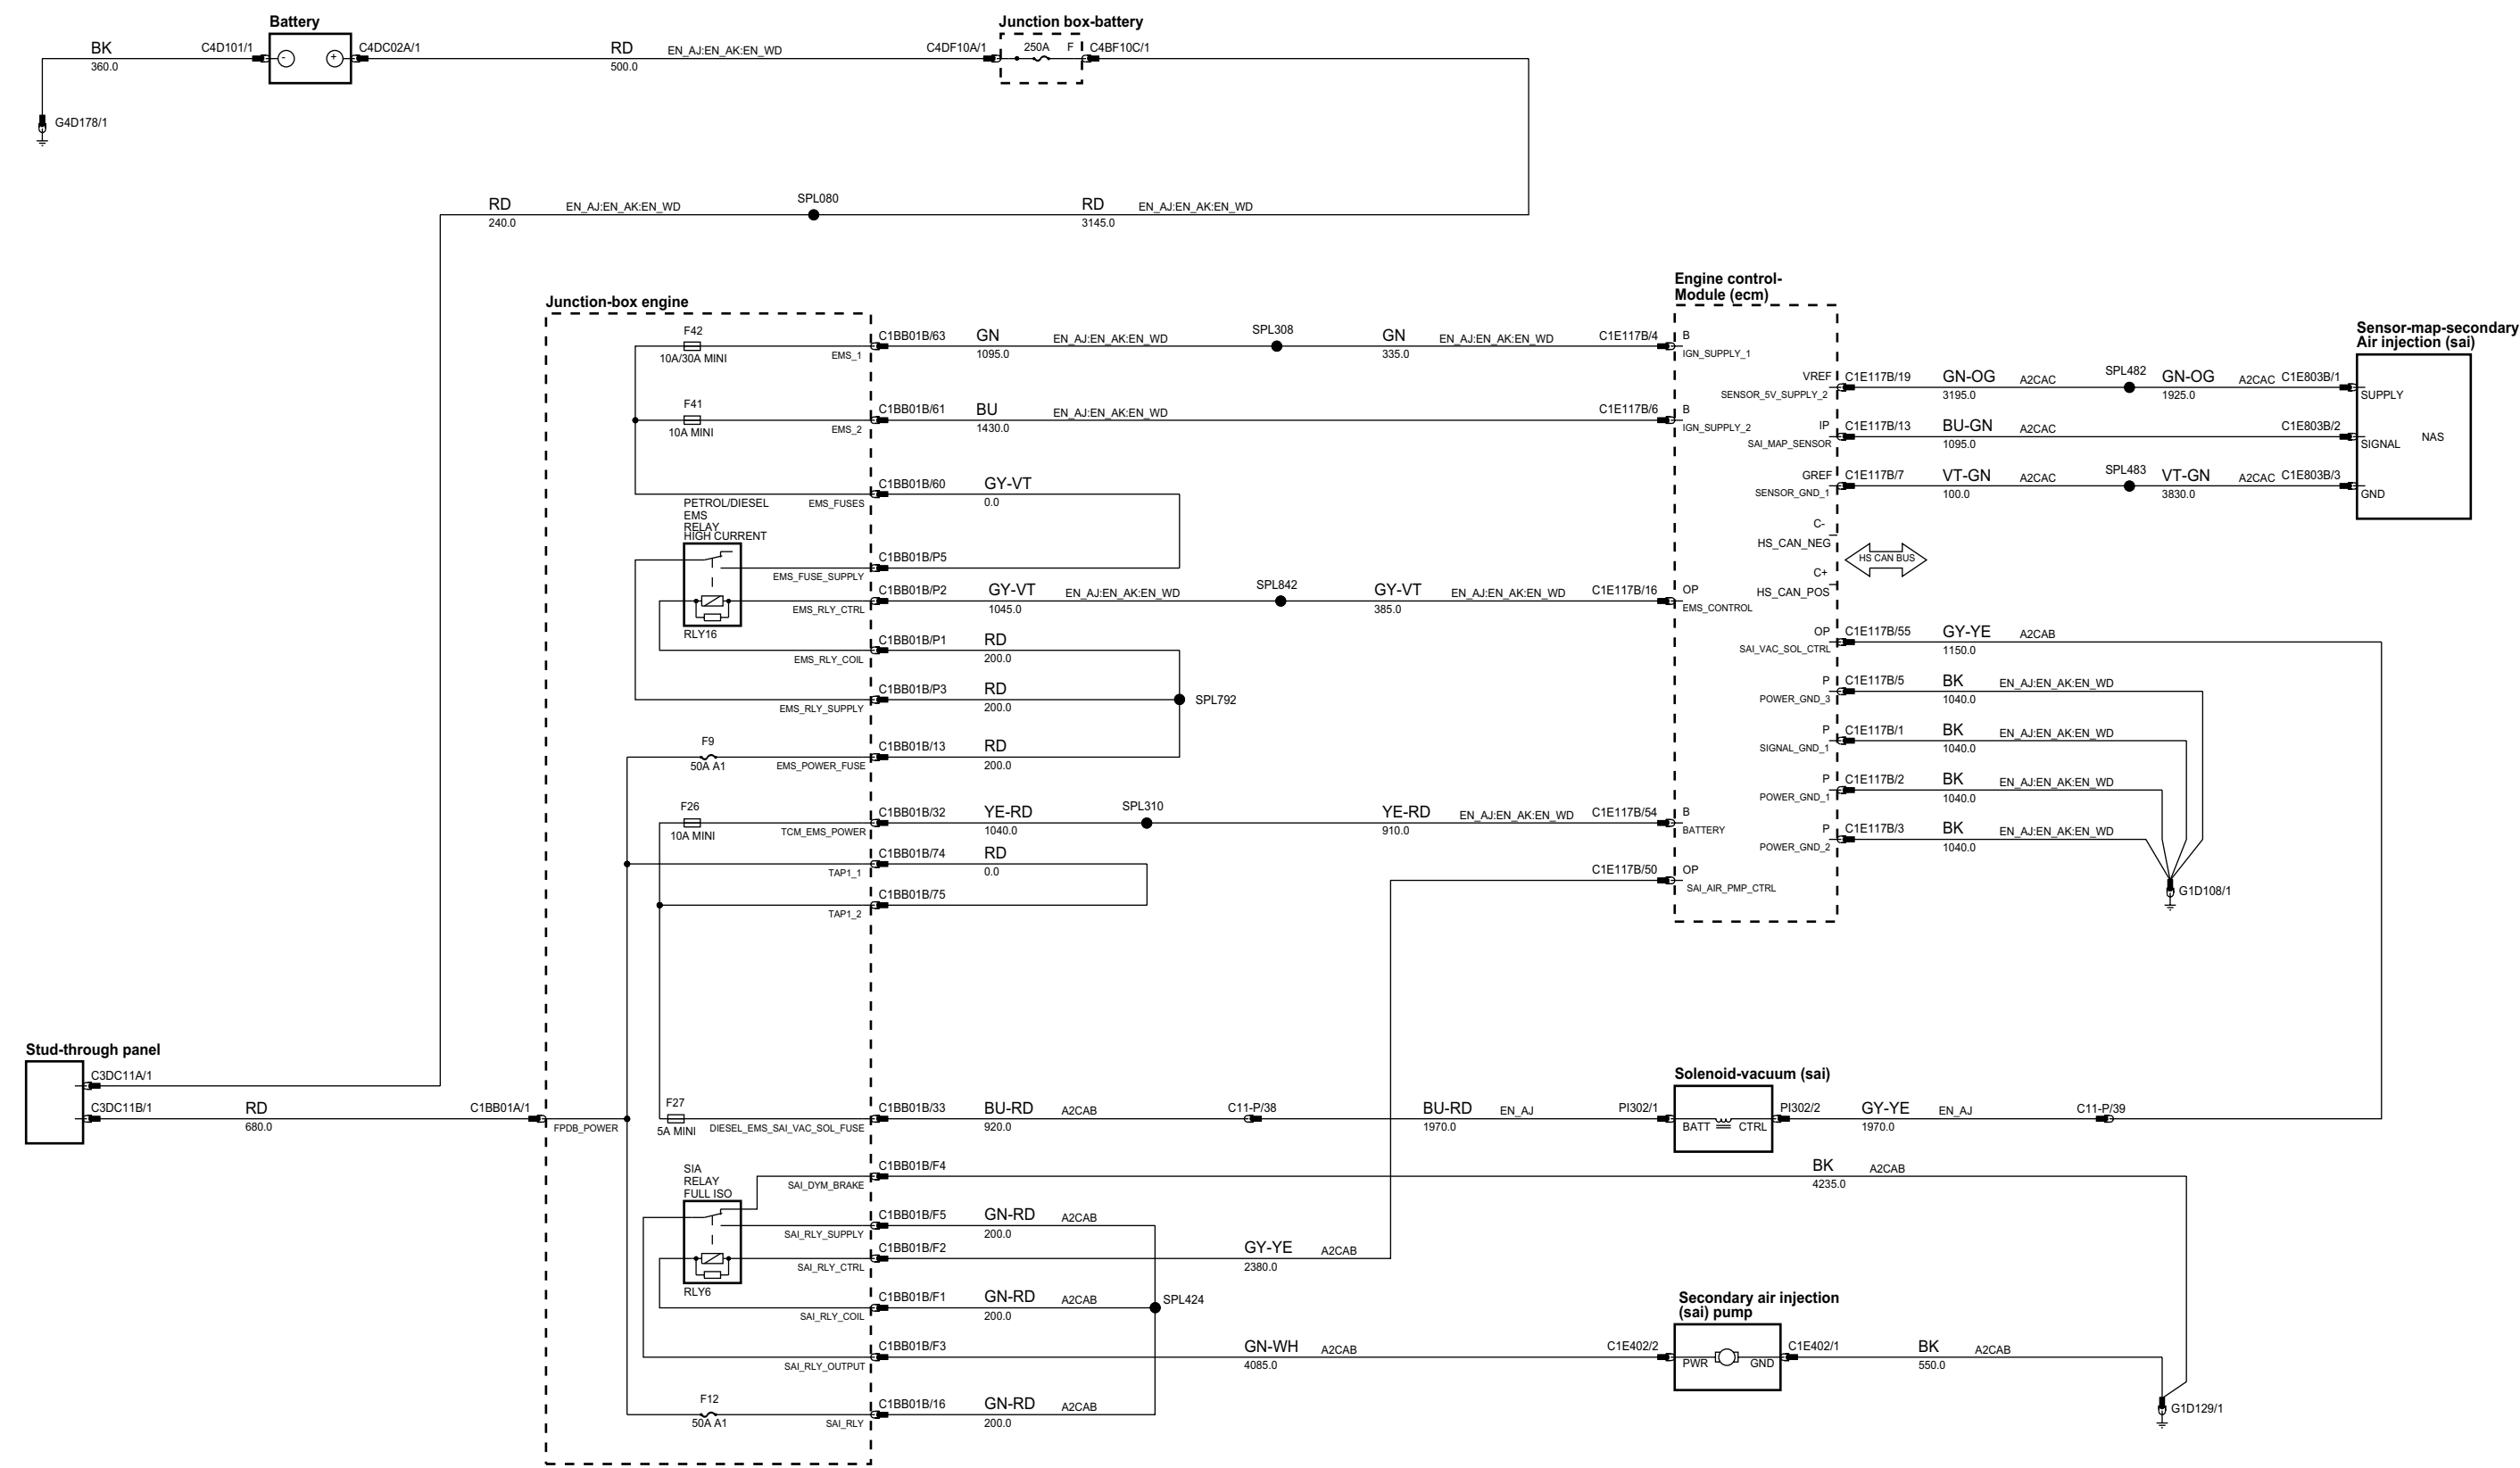


ph8R63-70035-c-af

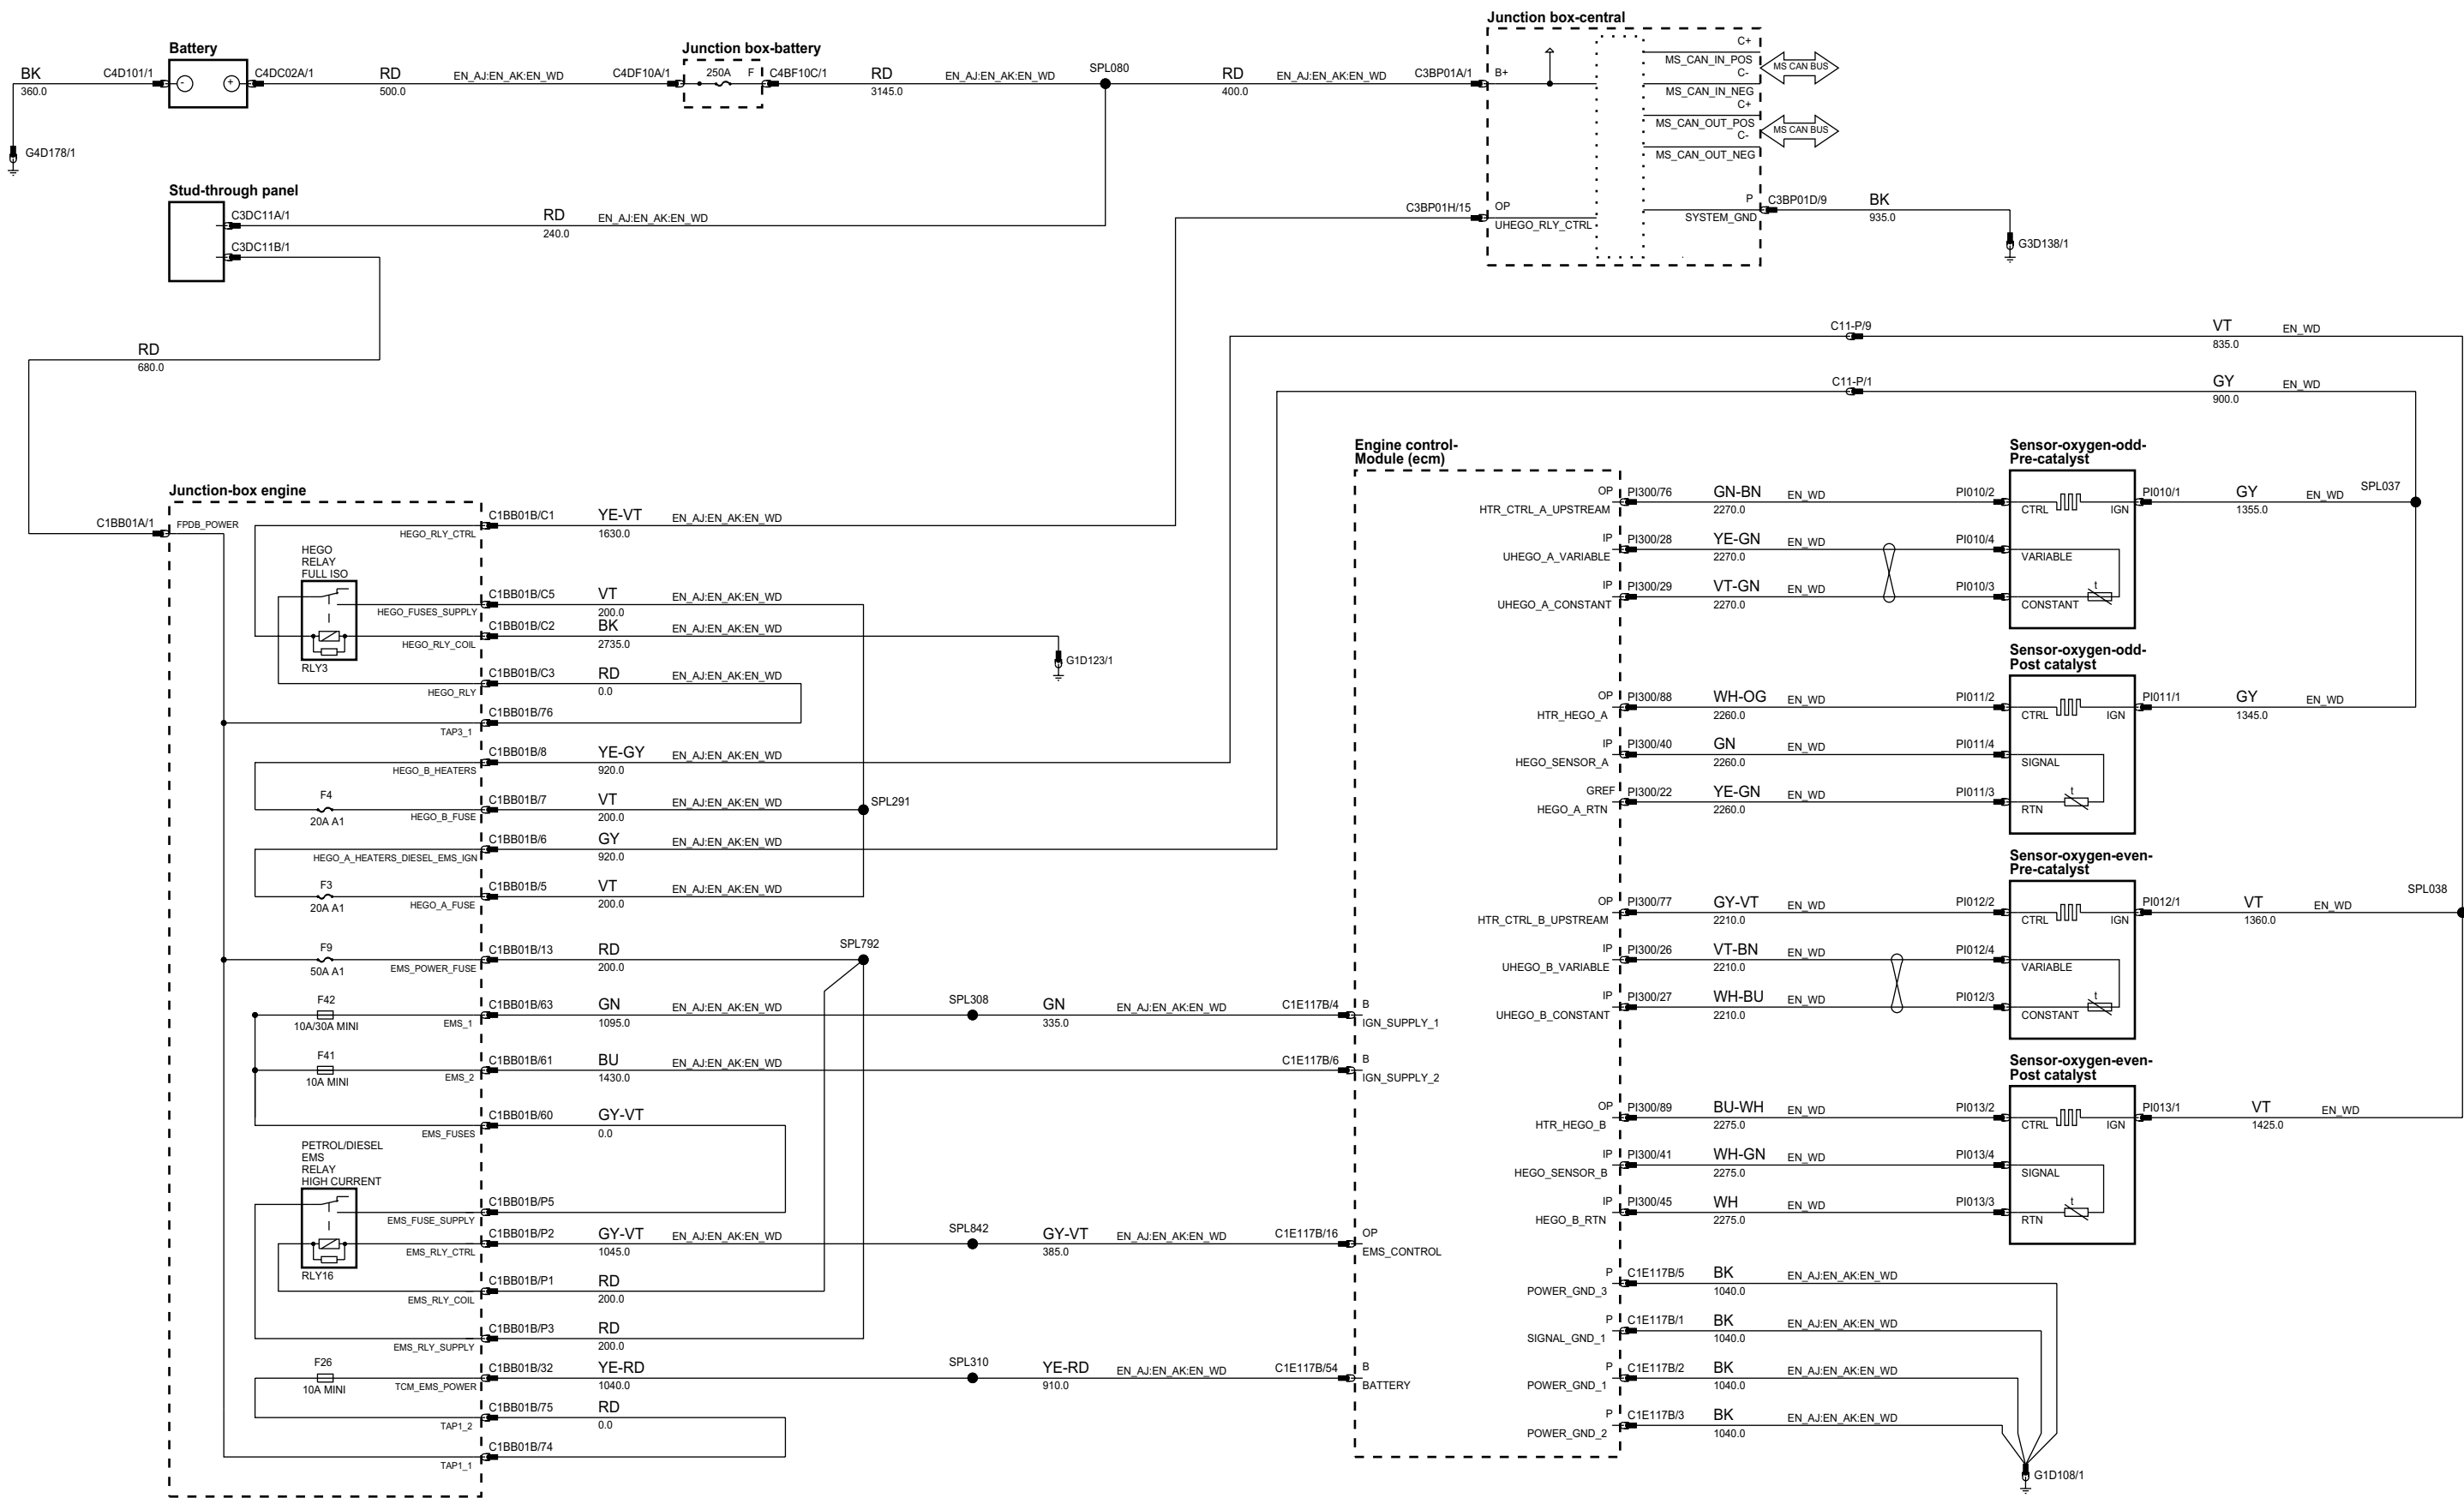


ph8r83-70034-b-af

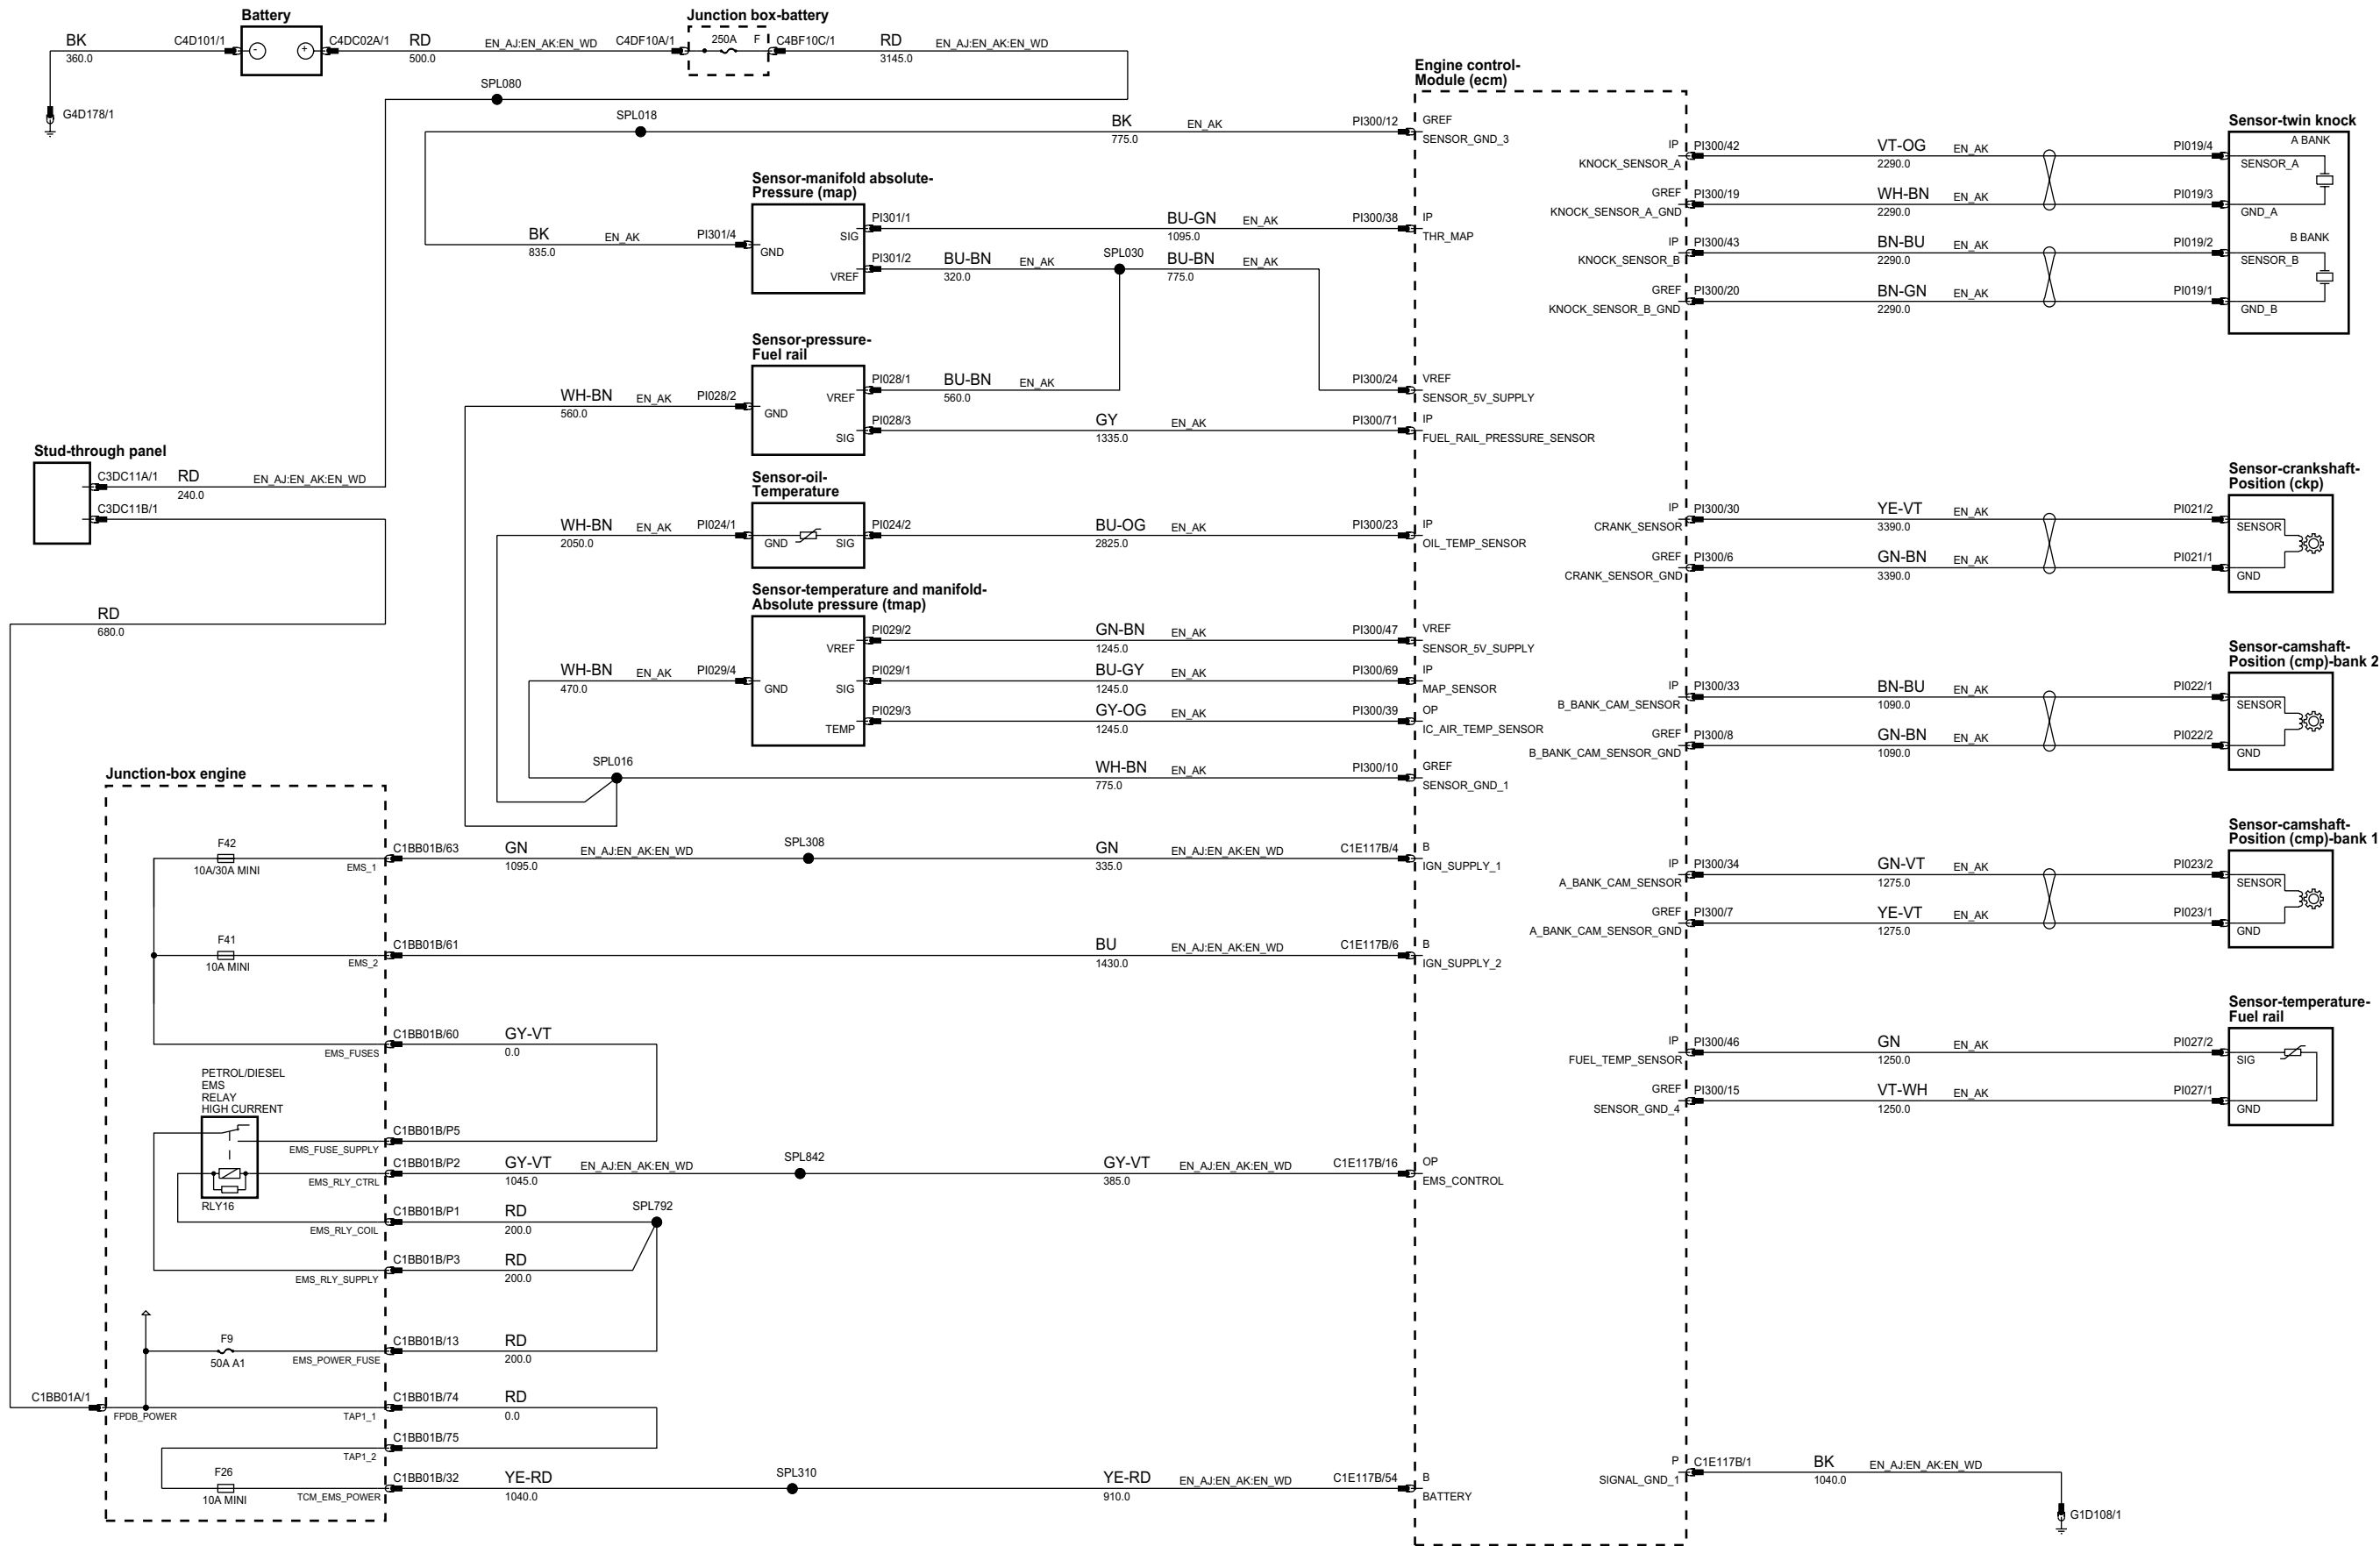


ph8r83-70041-d-af

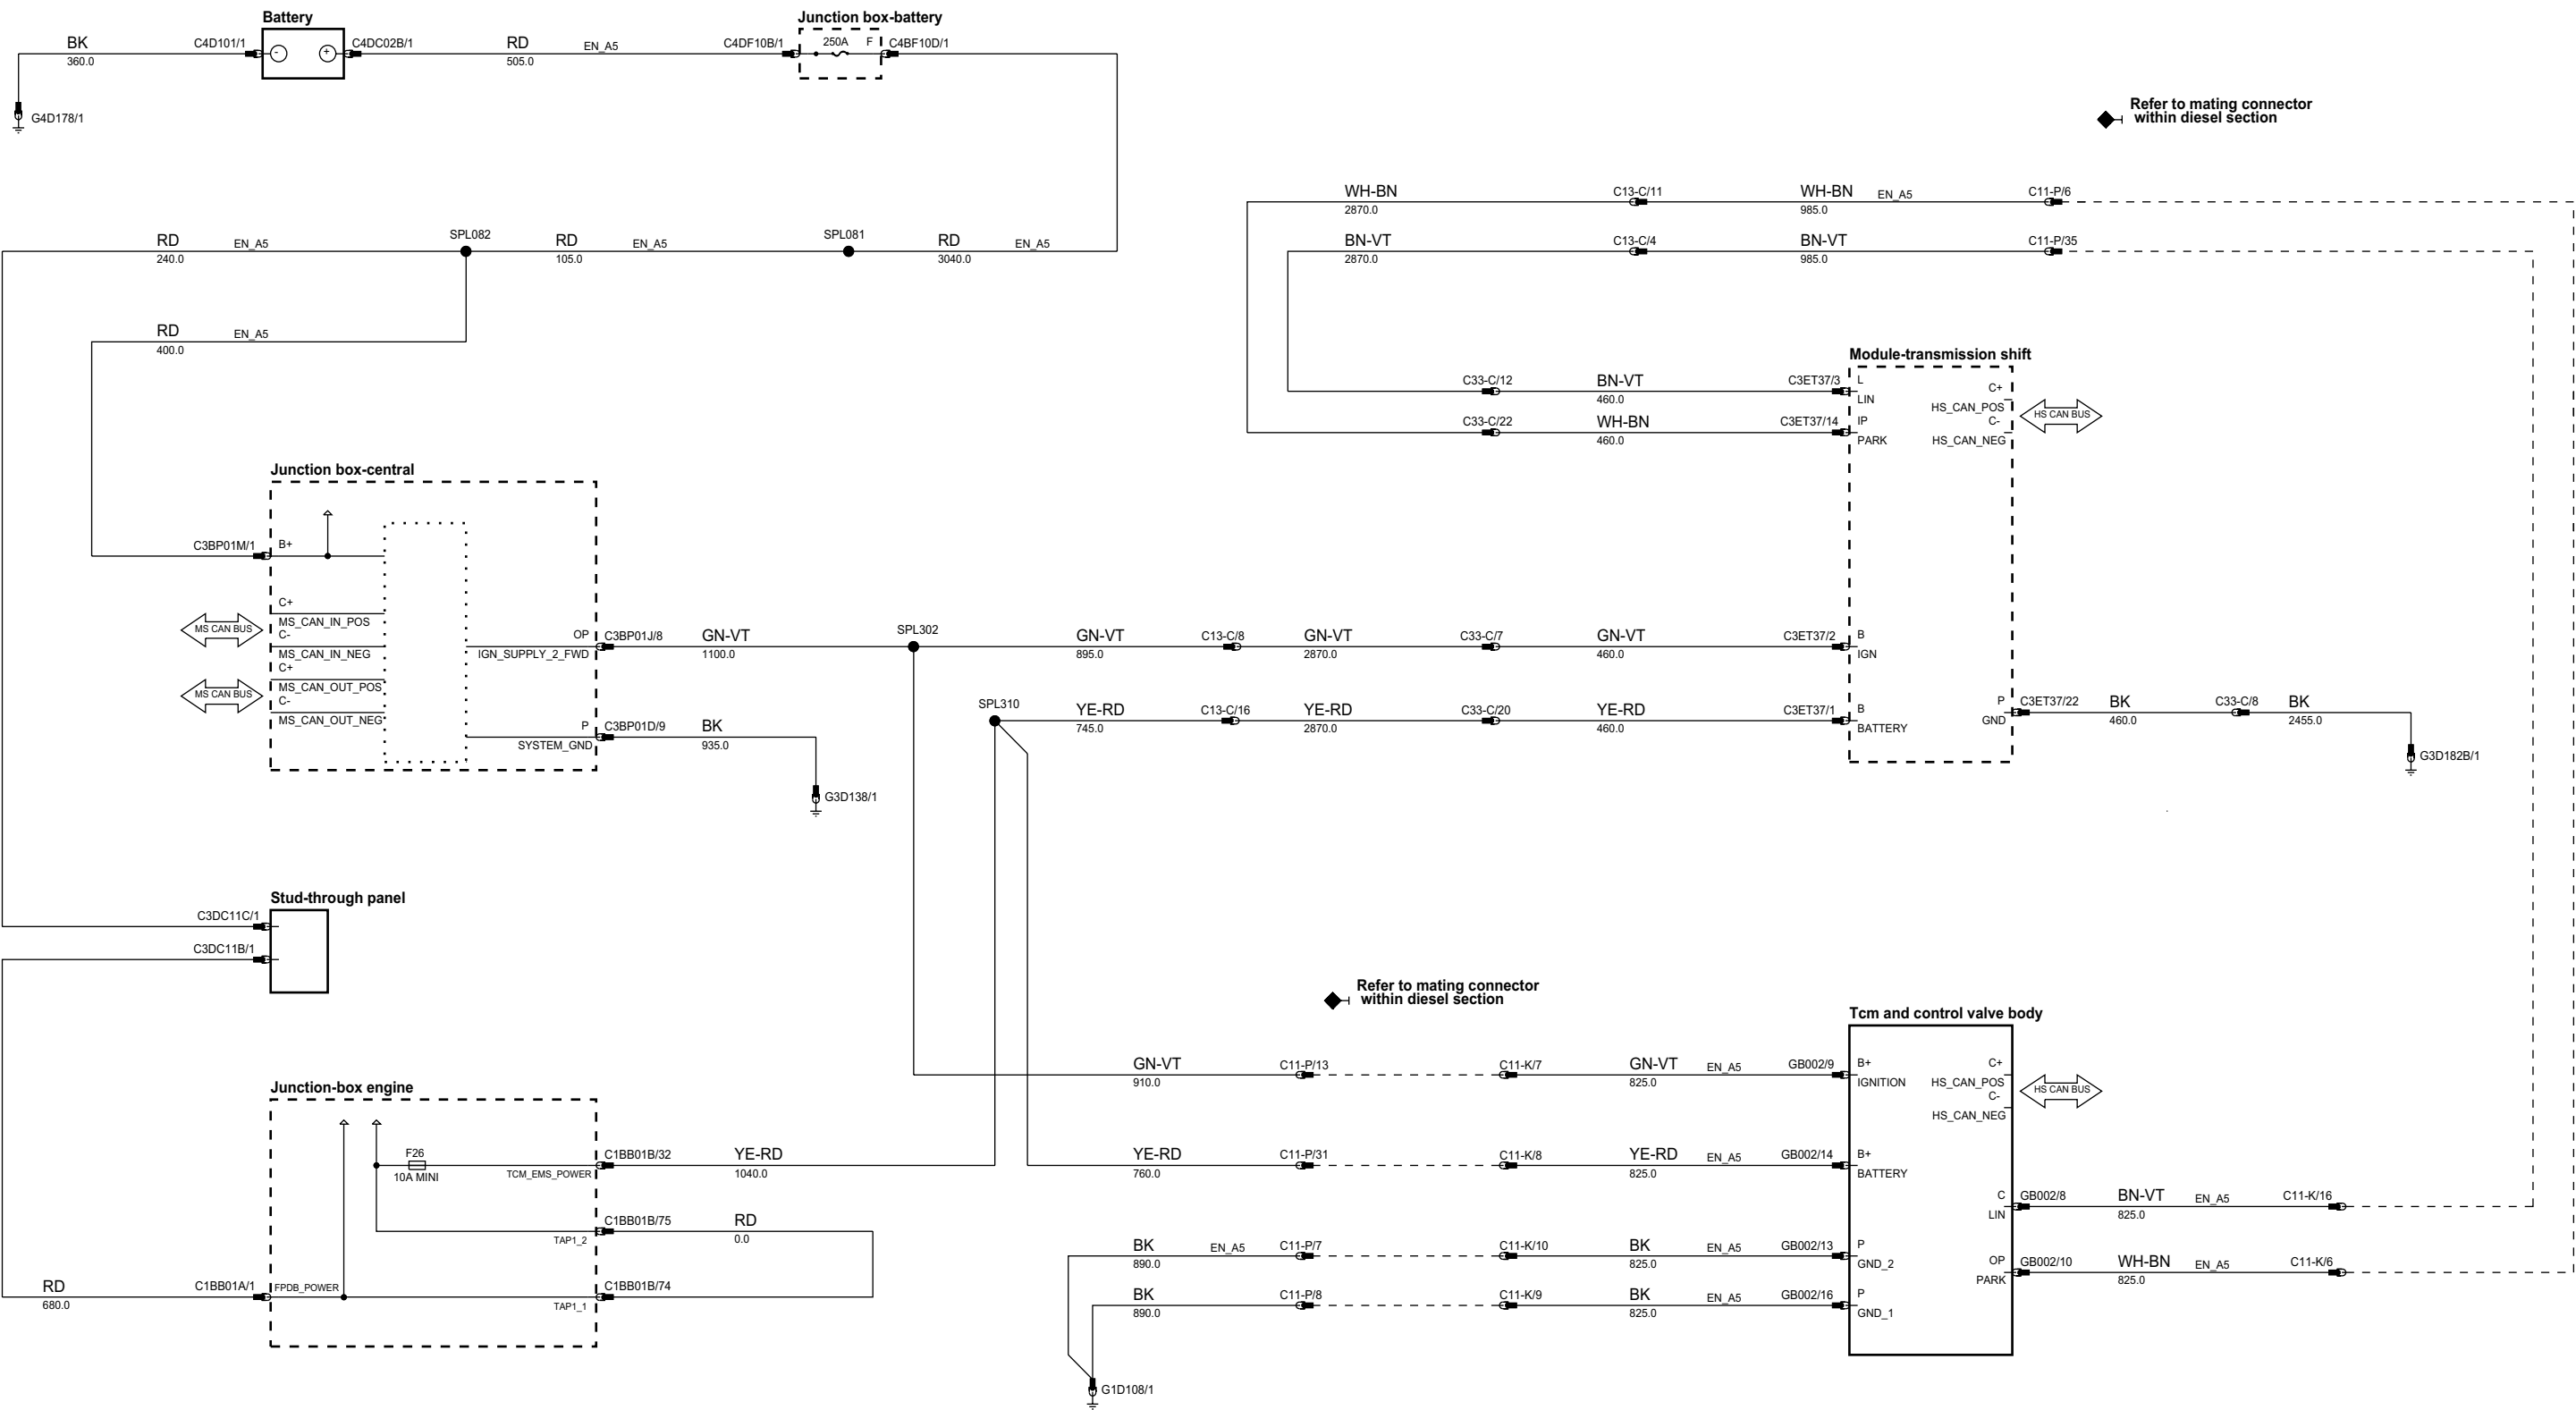


ph8r83-70010-a-af

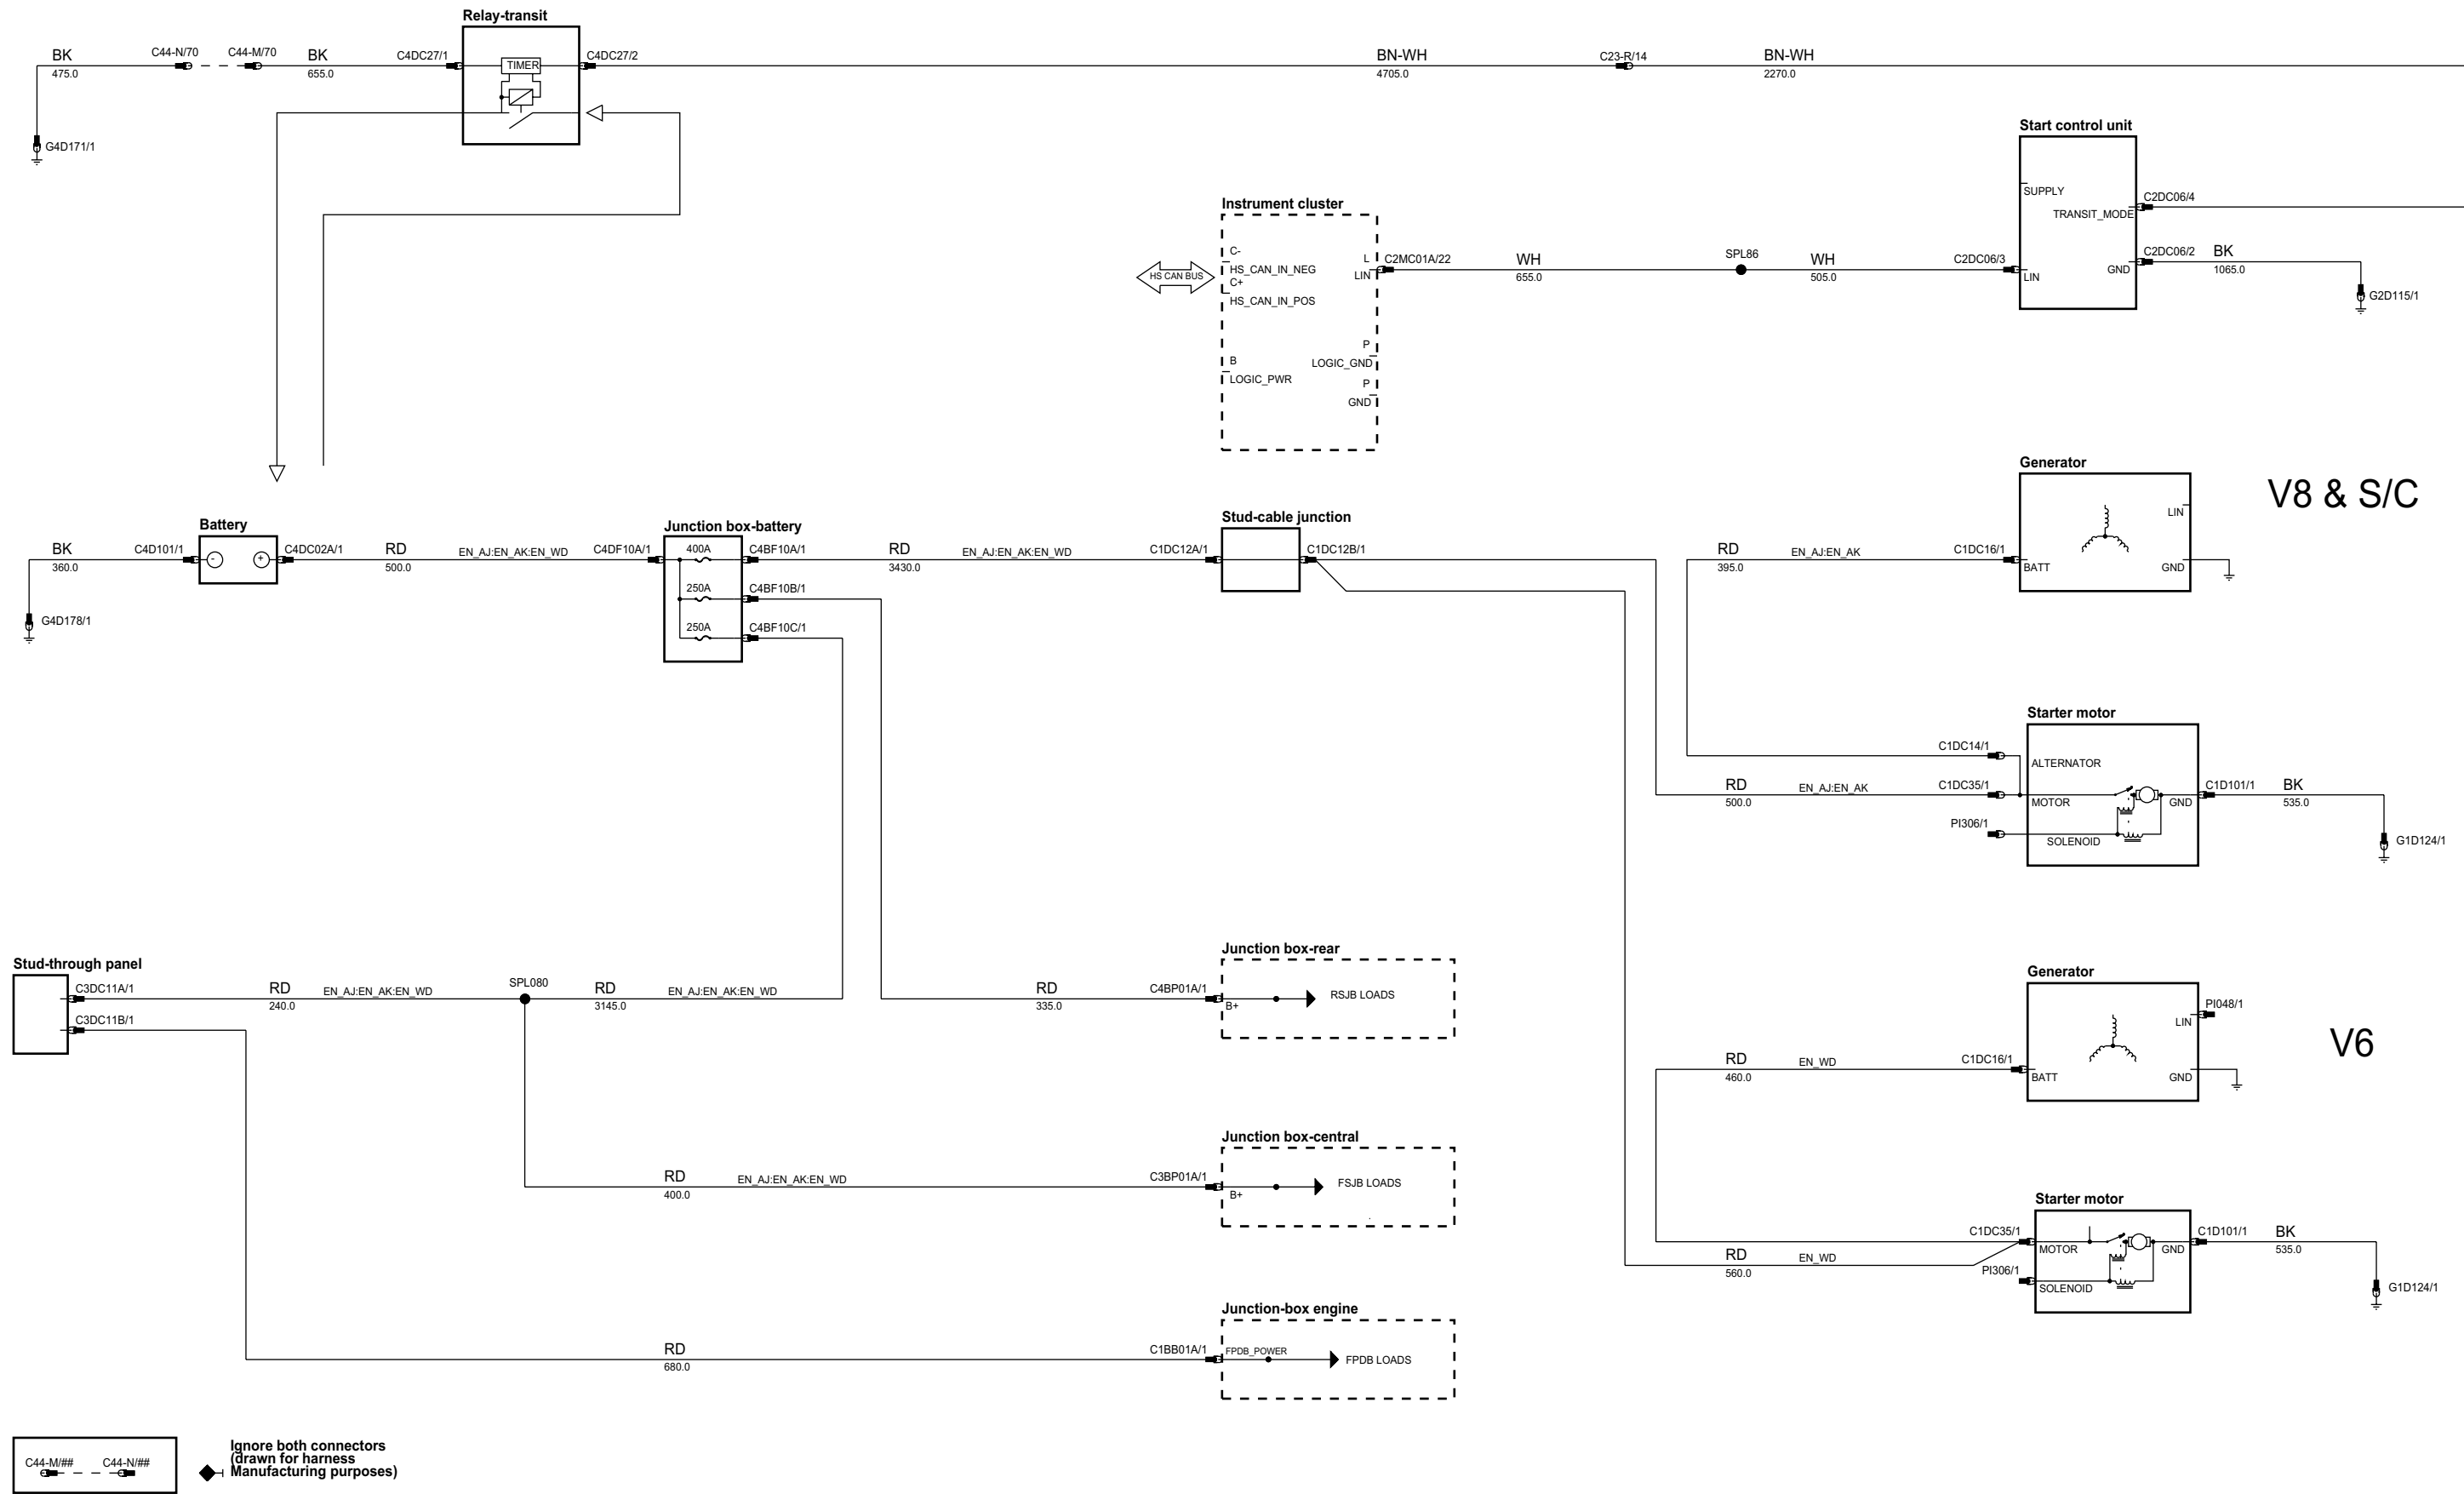

ph8r83-70010-k-af

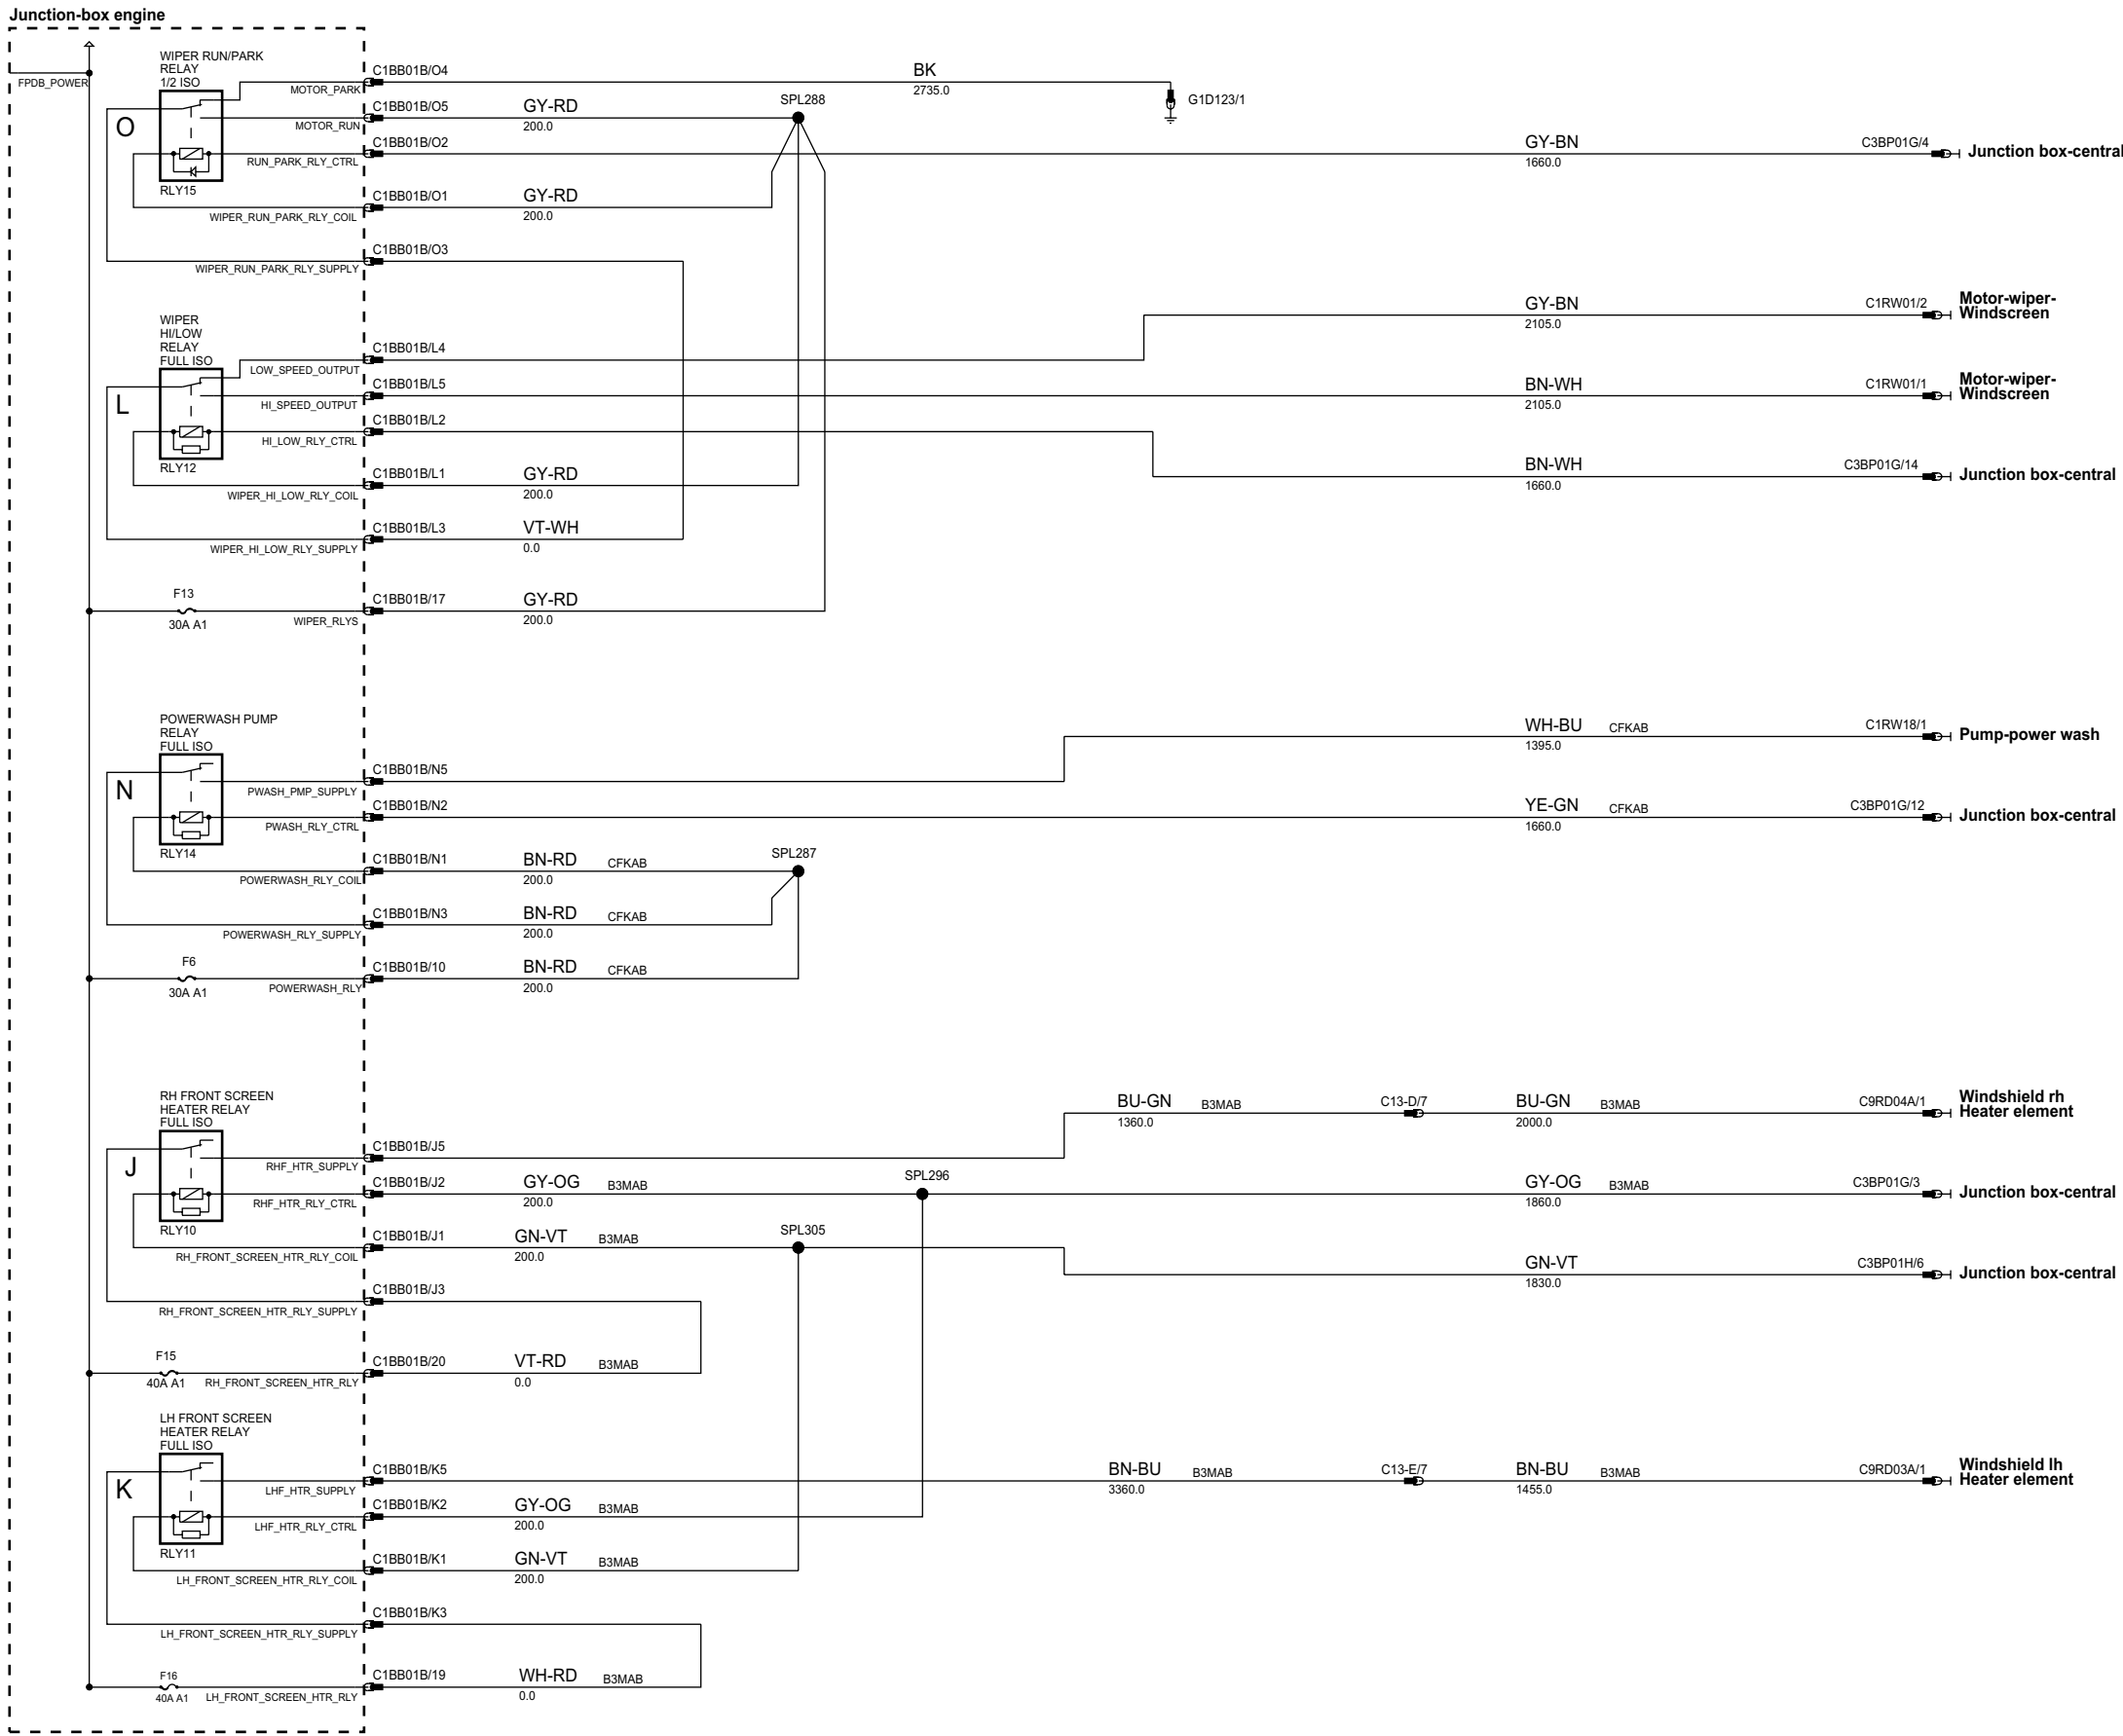


ph8r63-70010-za-af

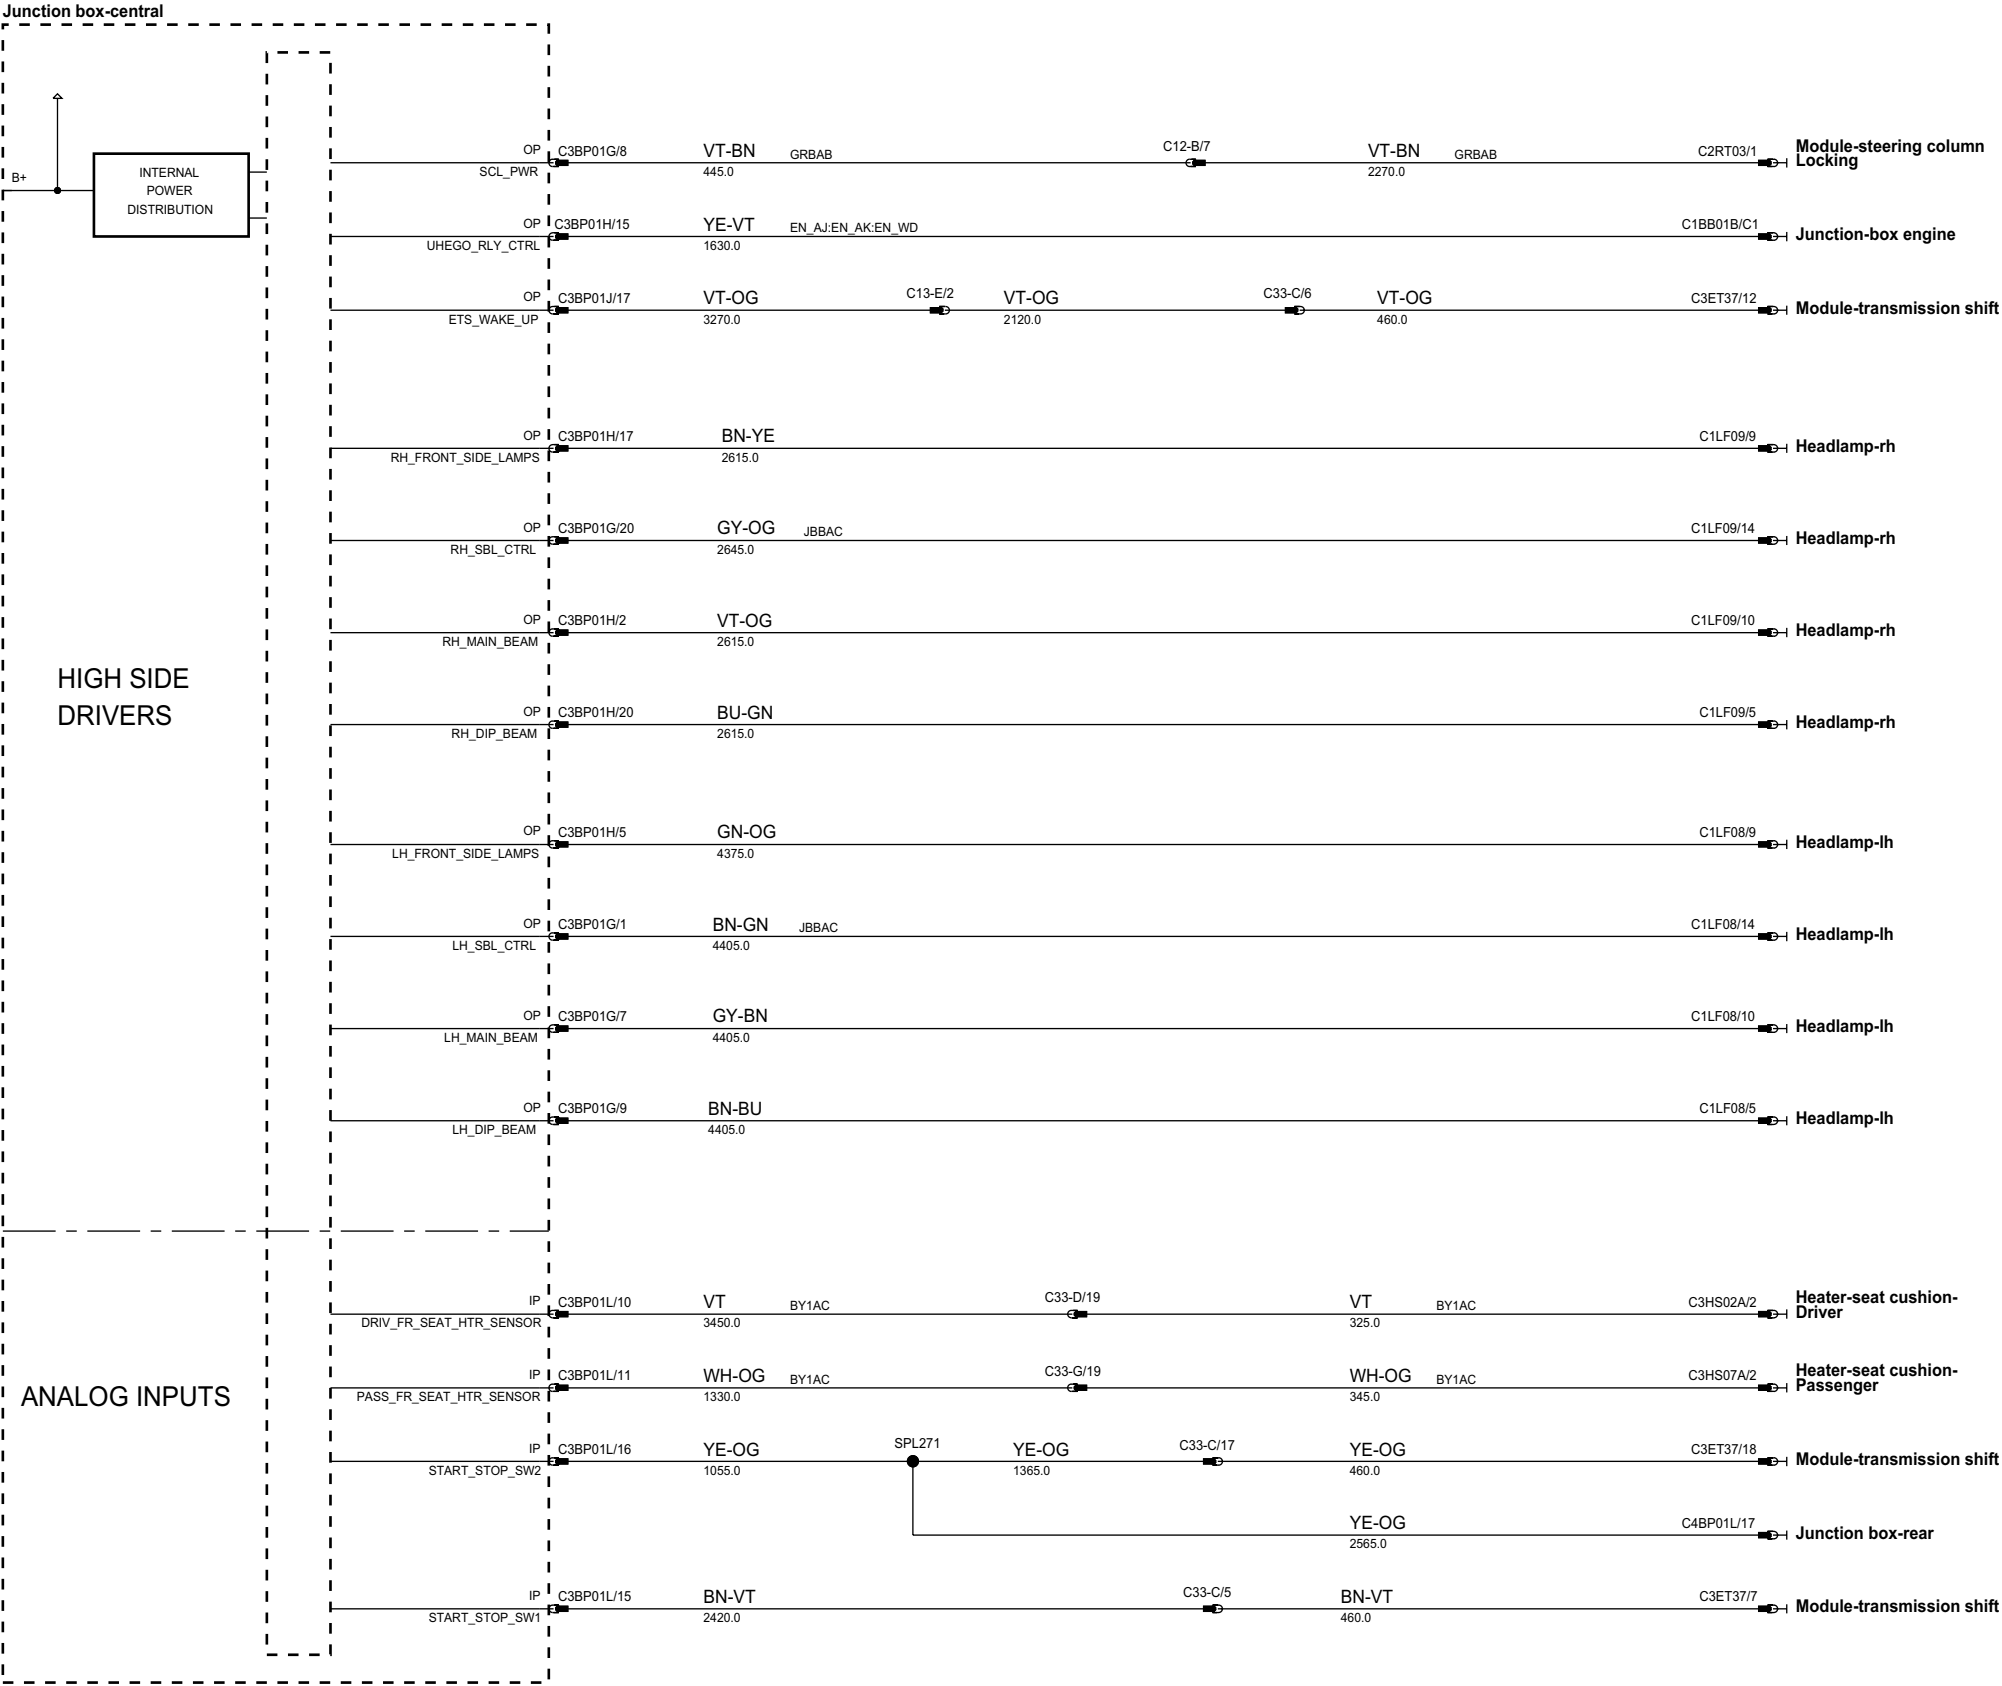


x


X

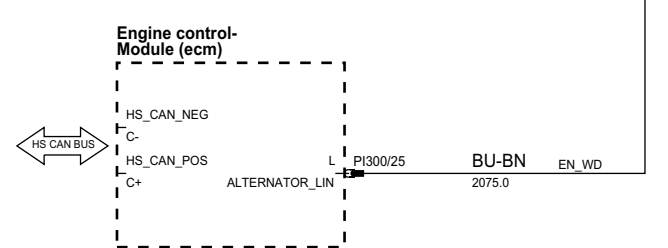


ph8r63-70061-b-af

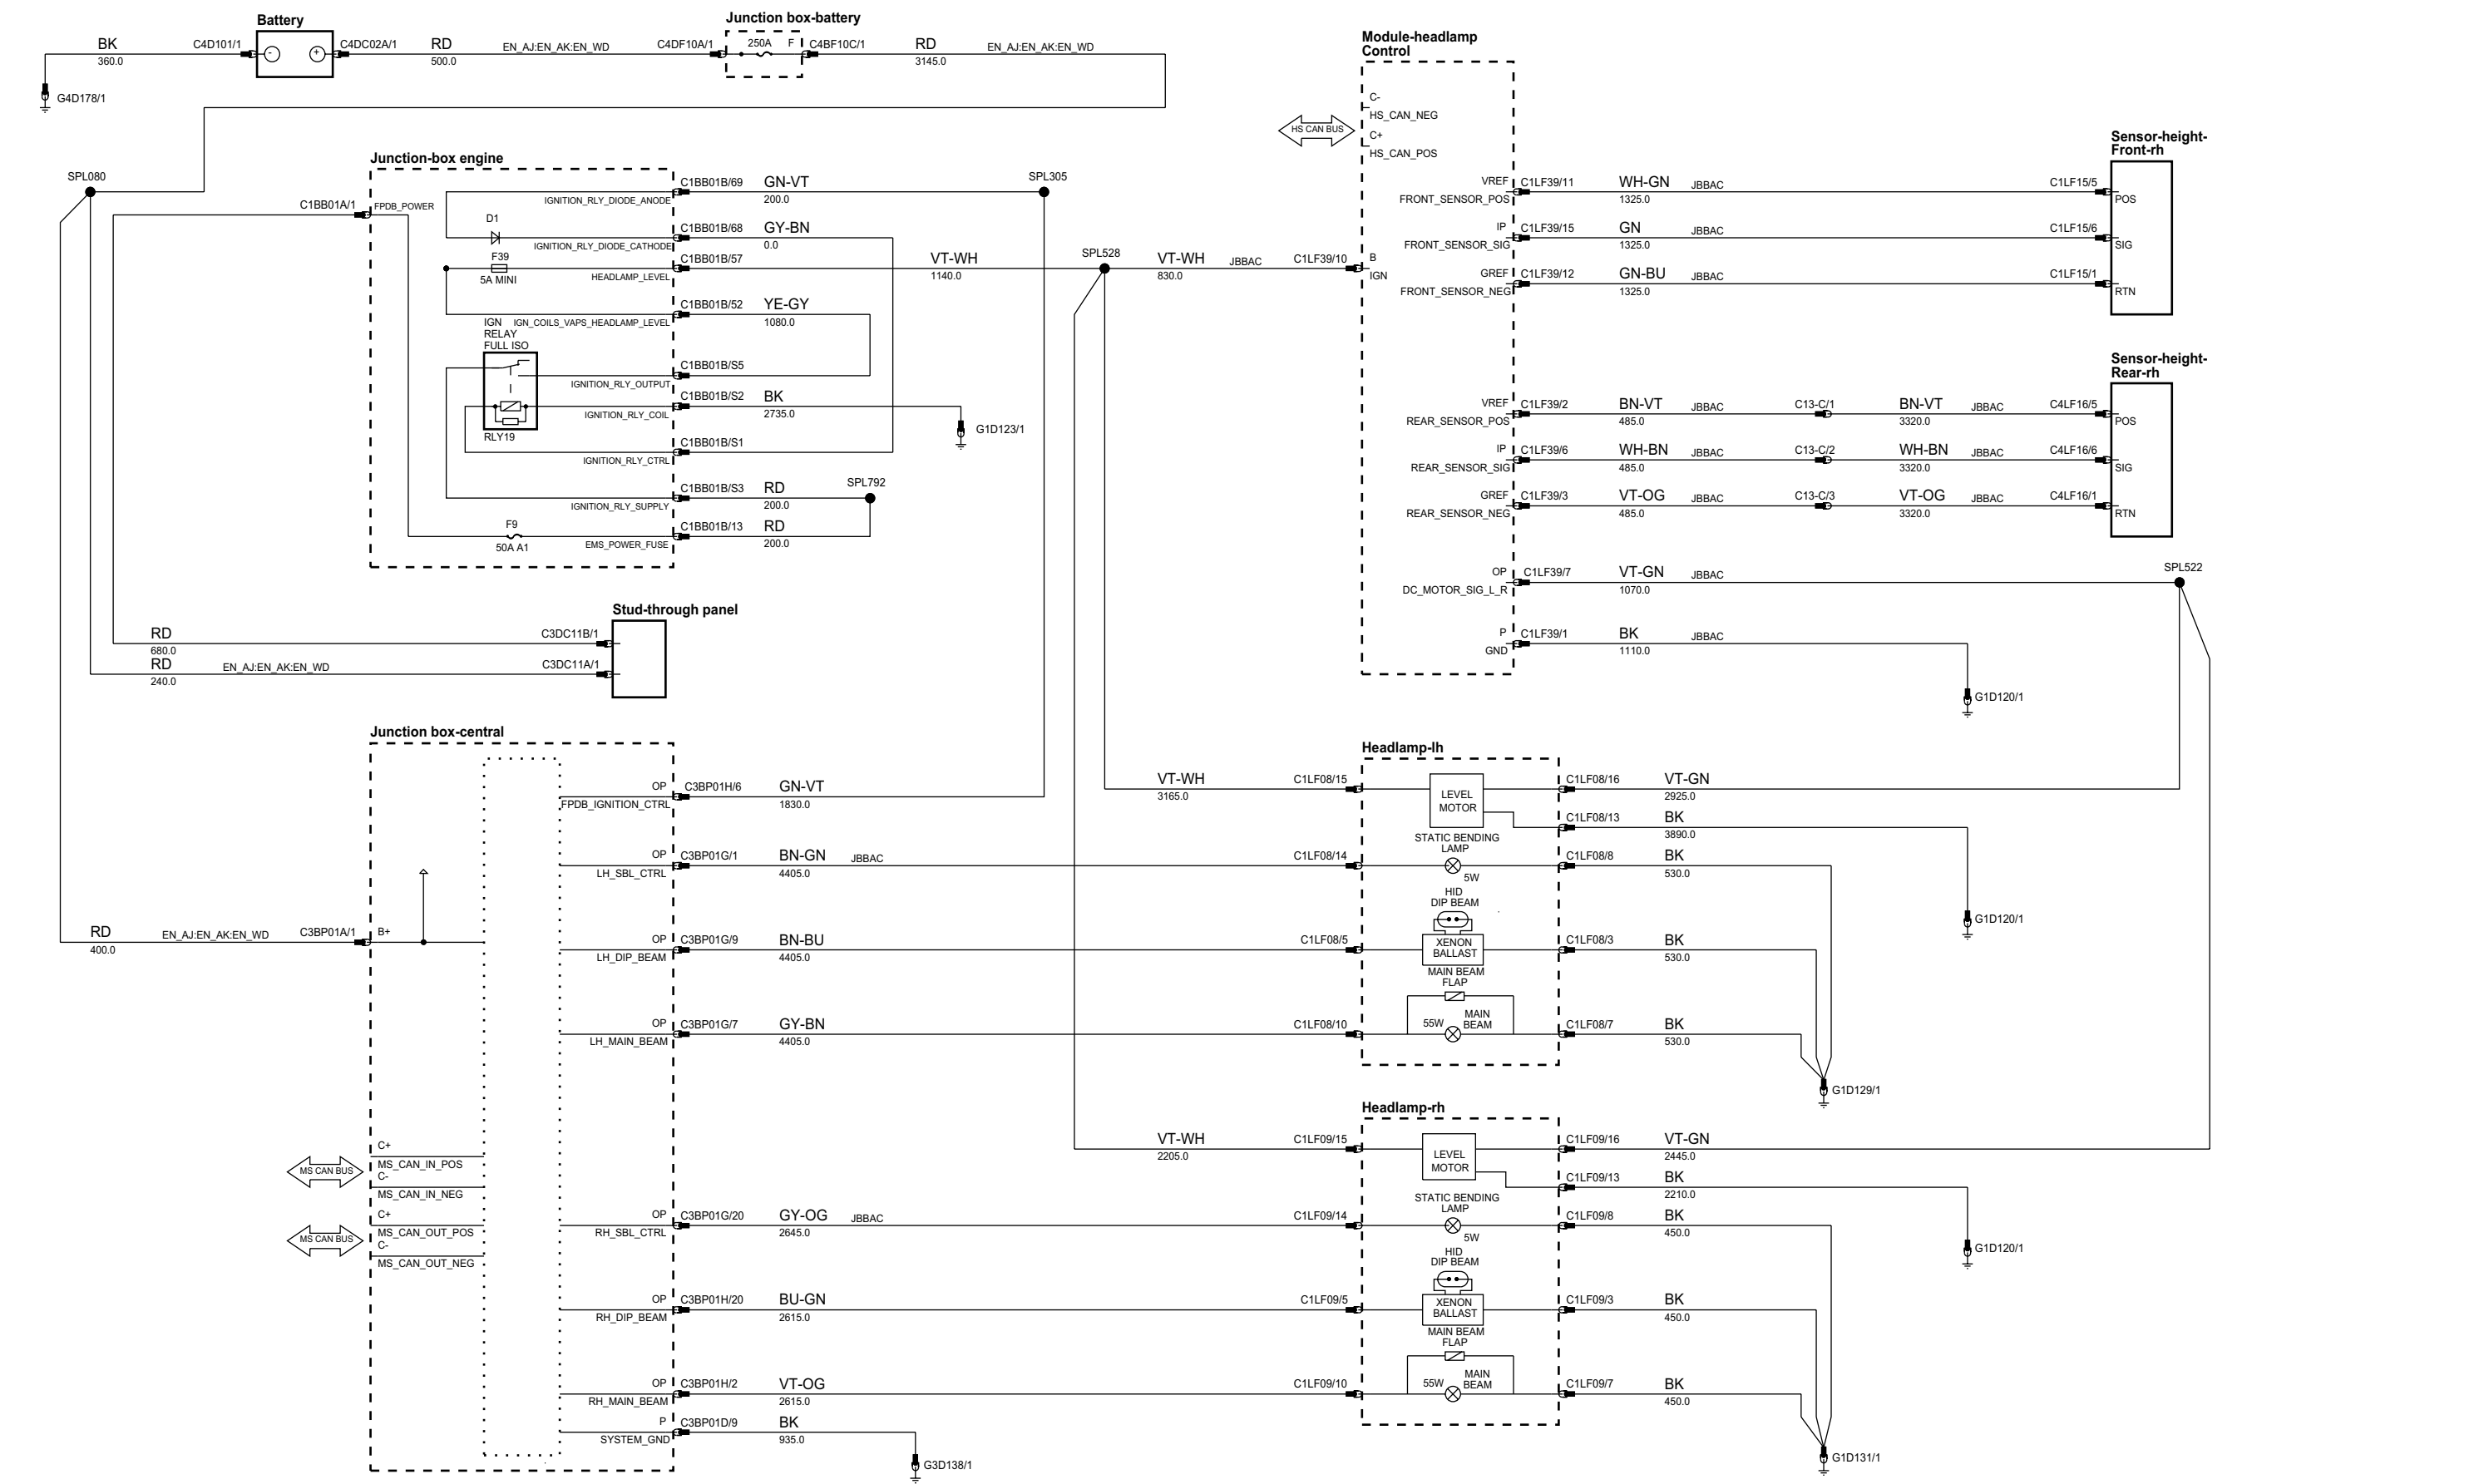

ph8r70016-f-af

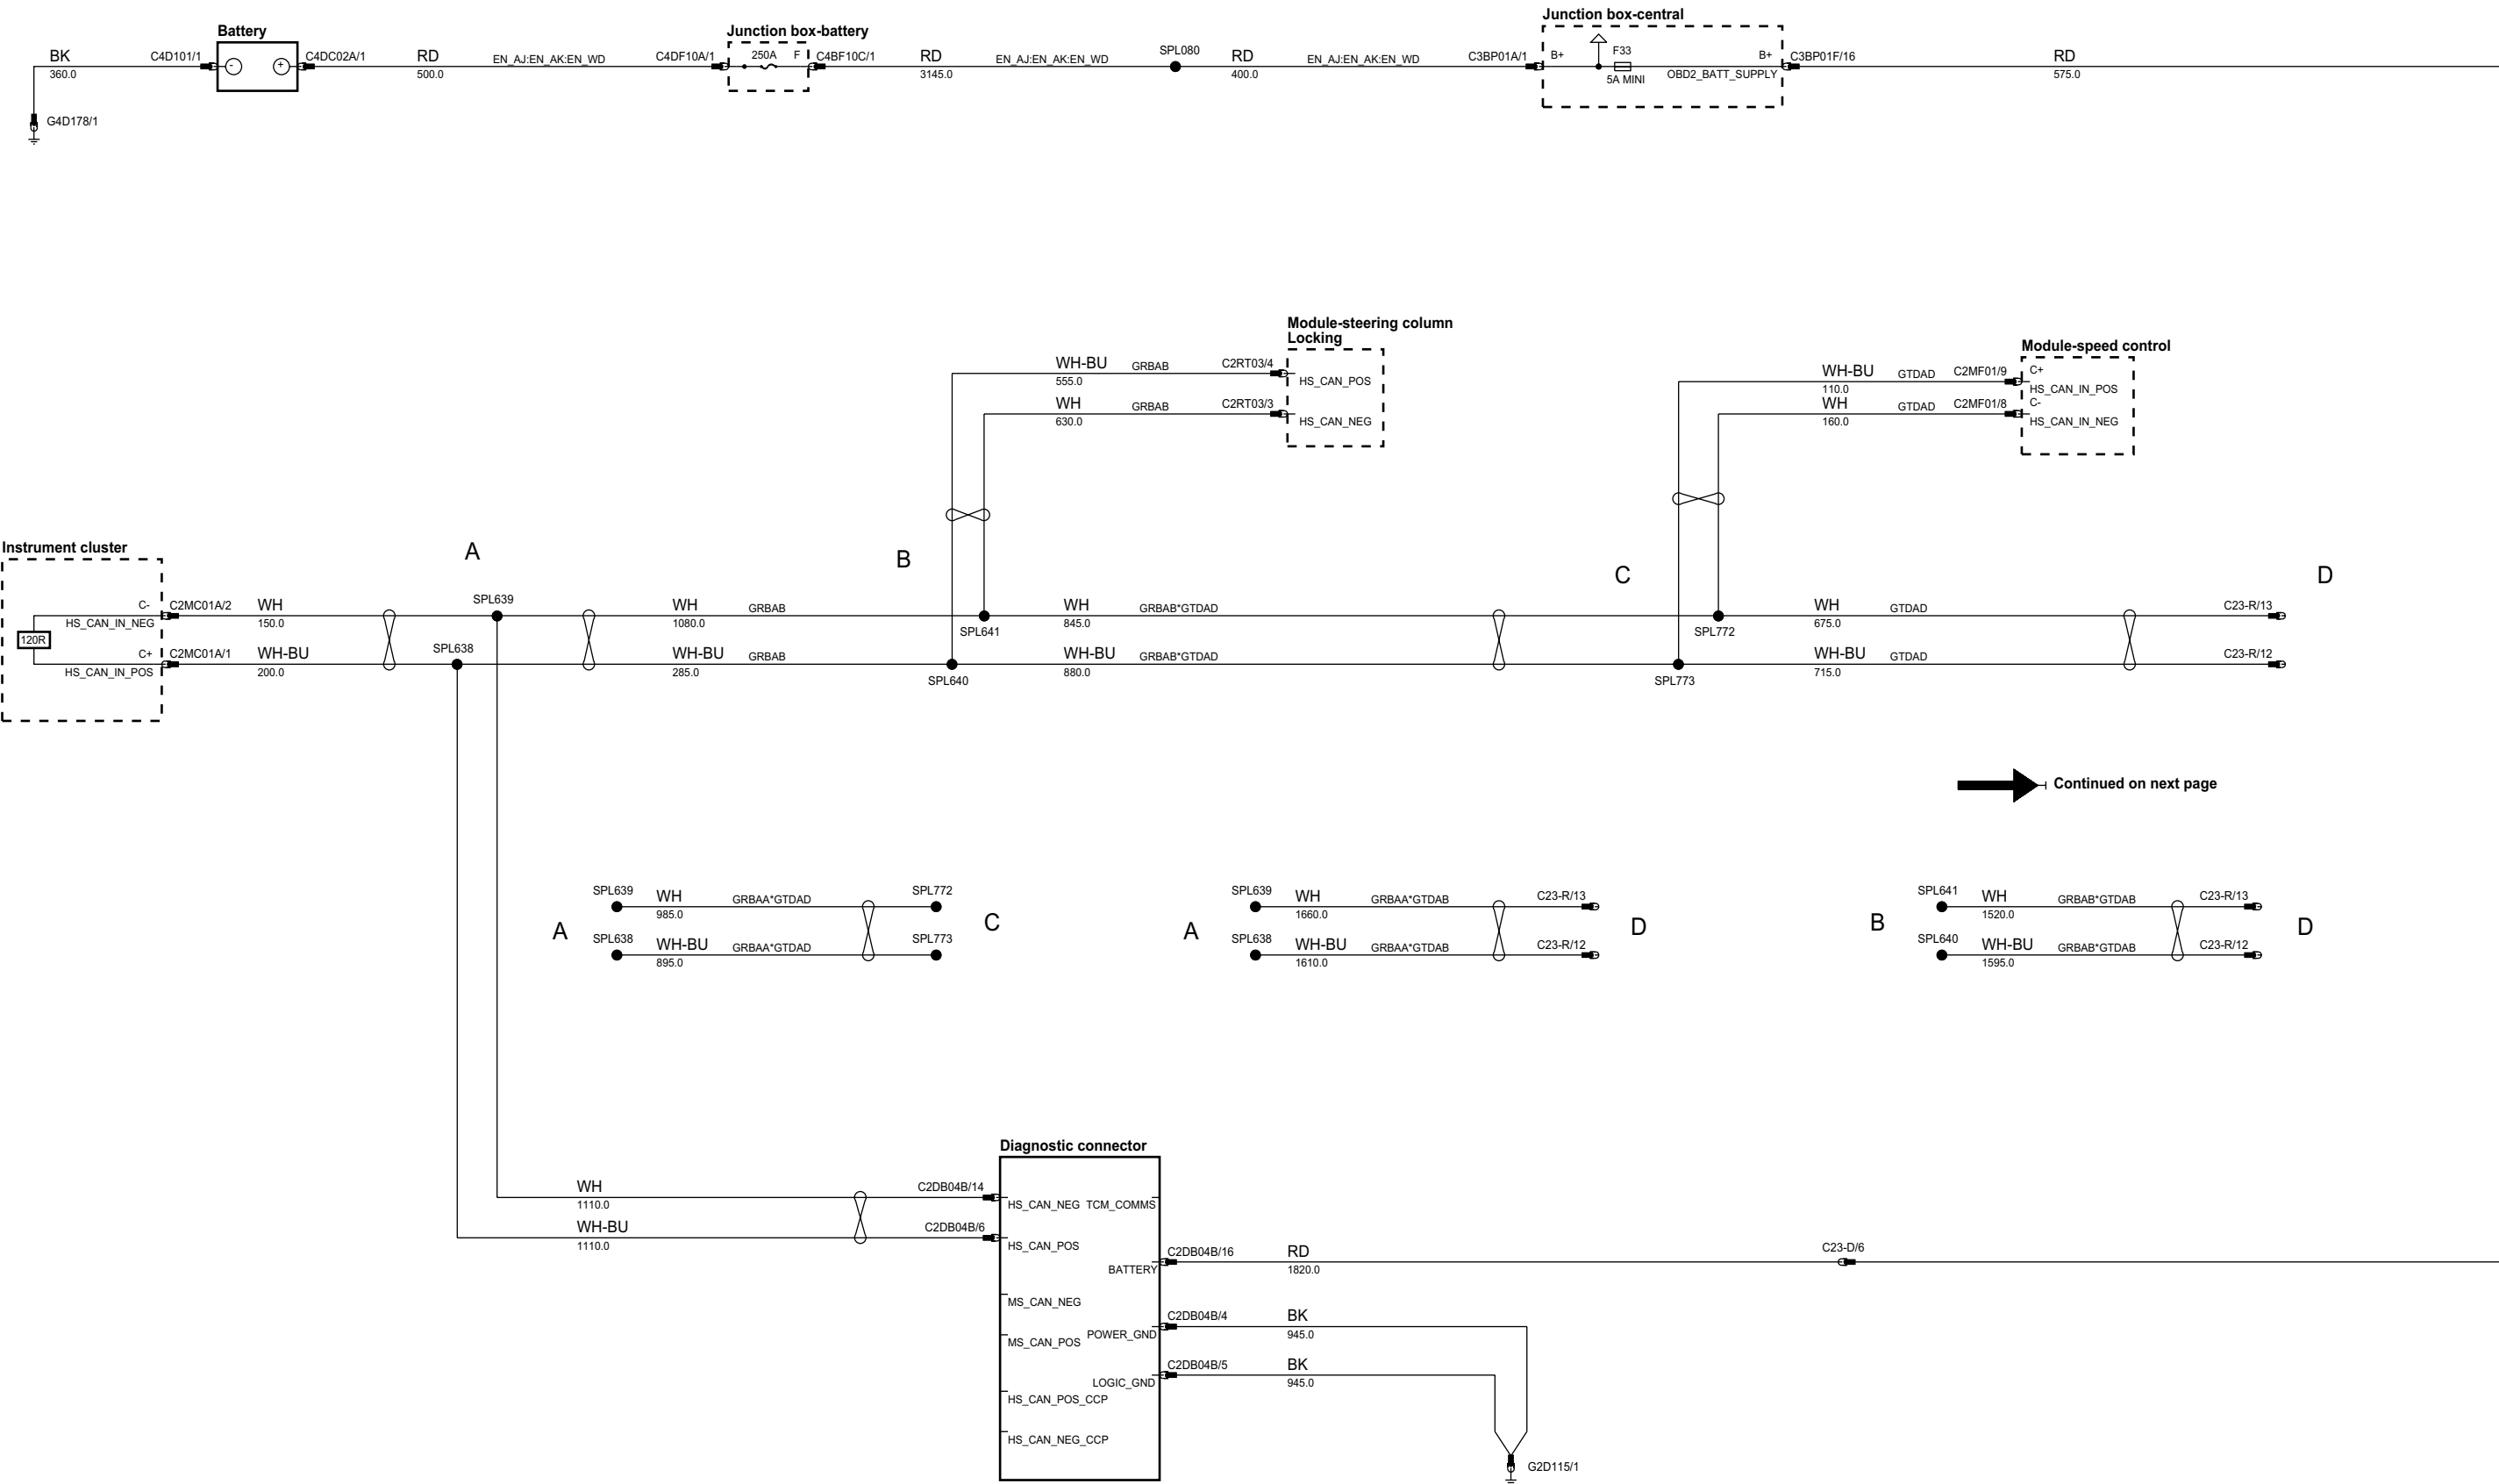

ph8r83-70477-a-af

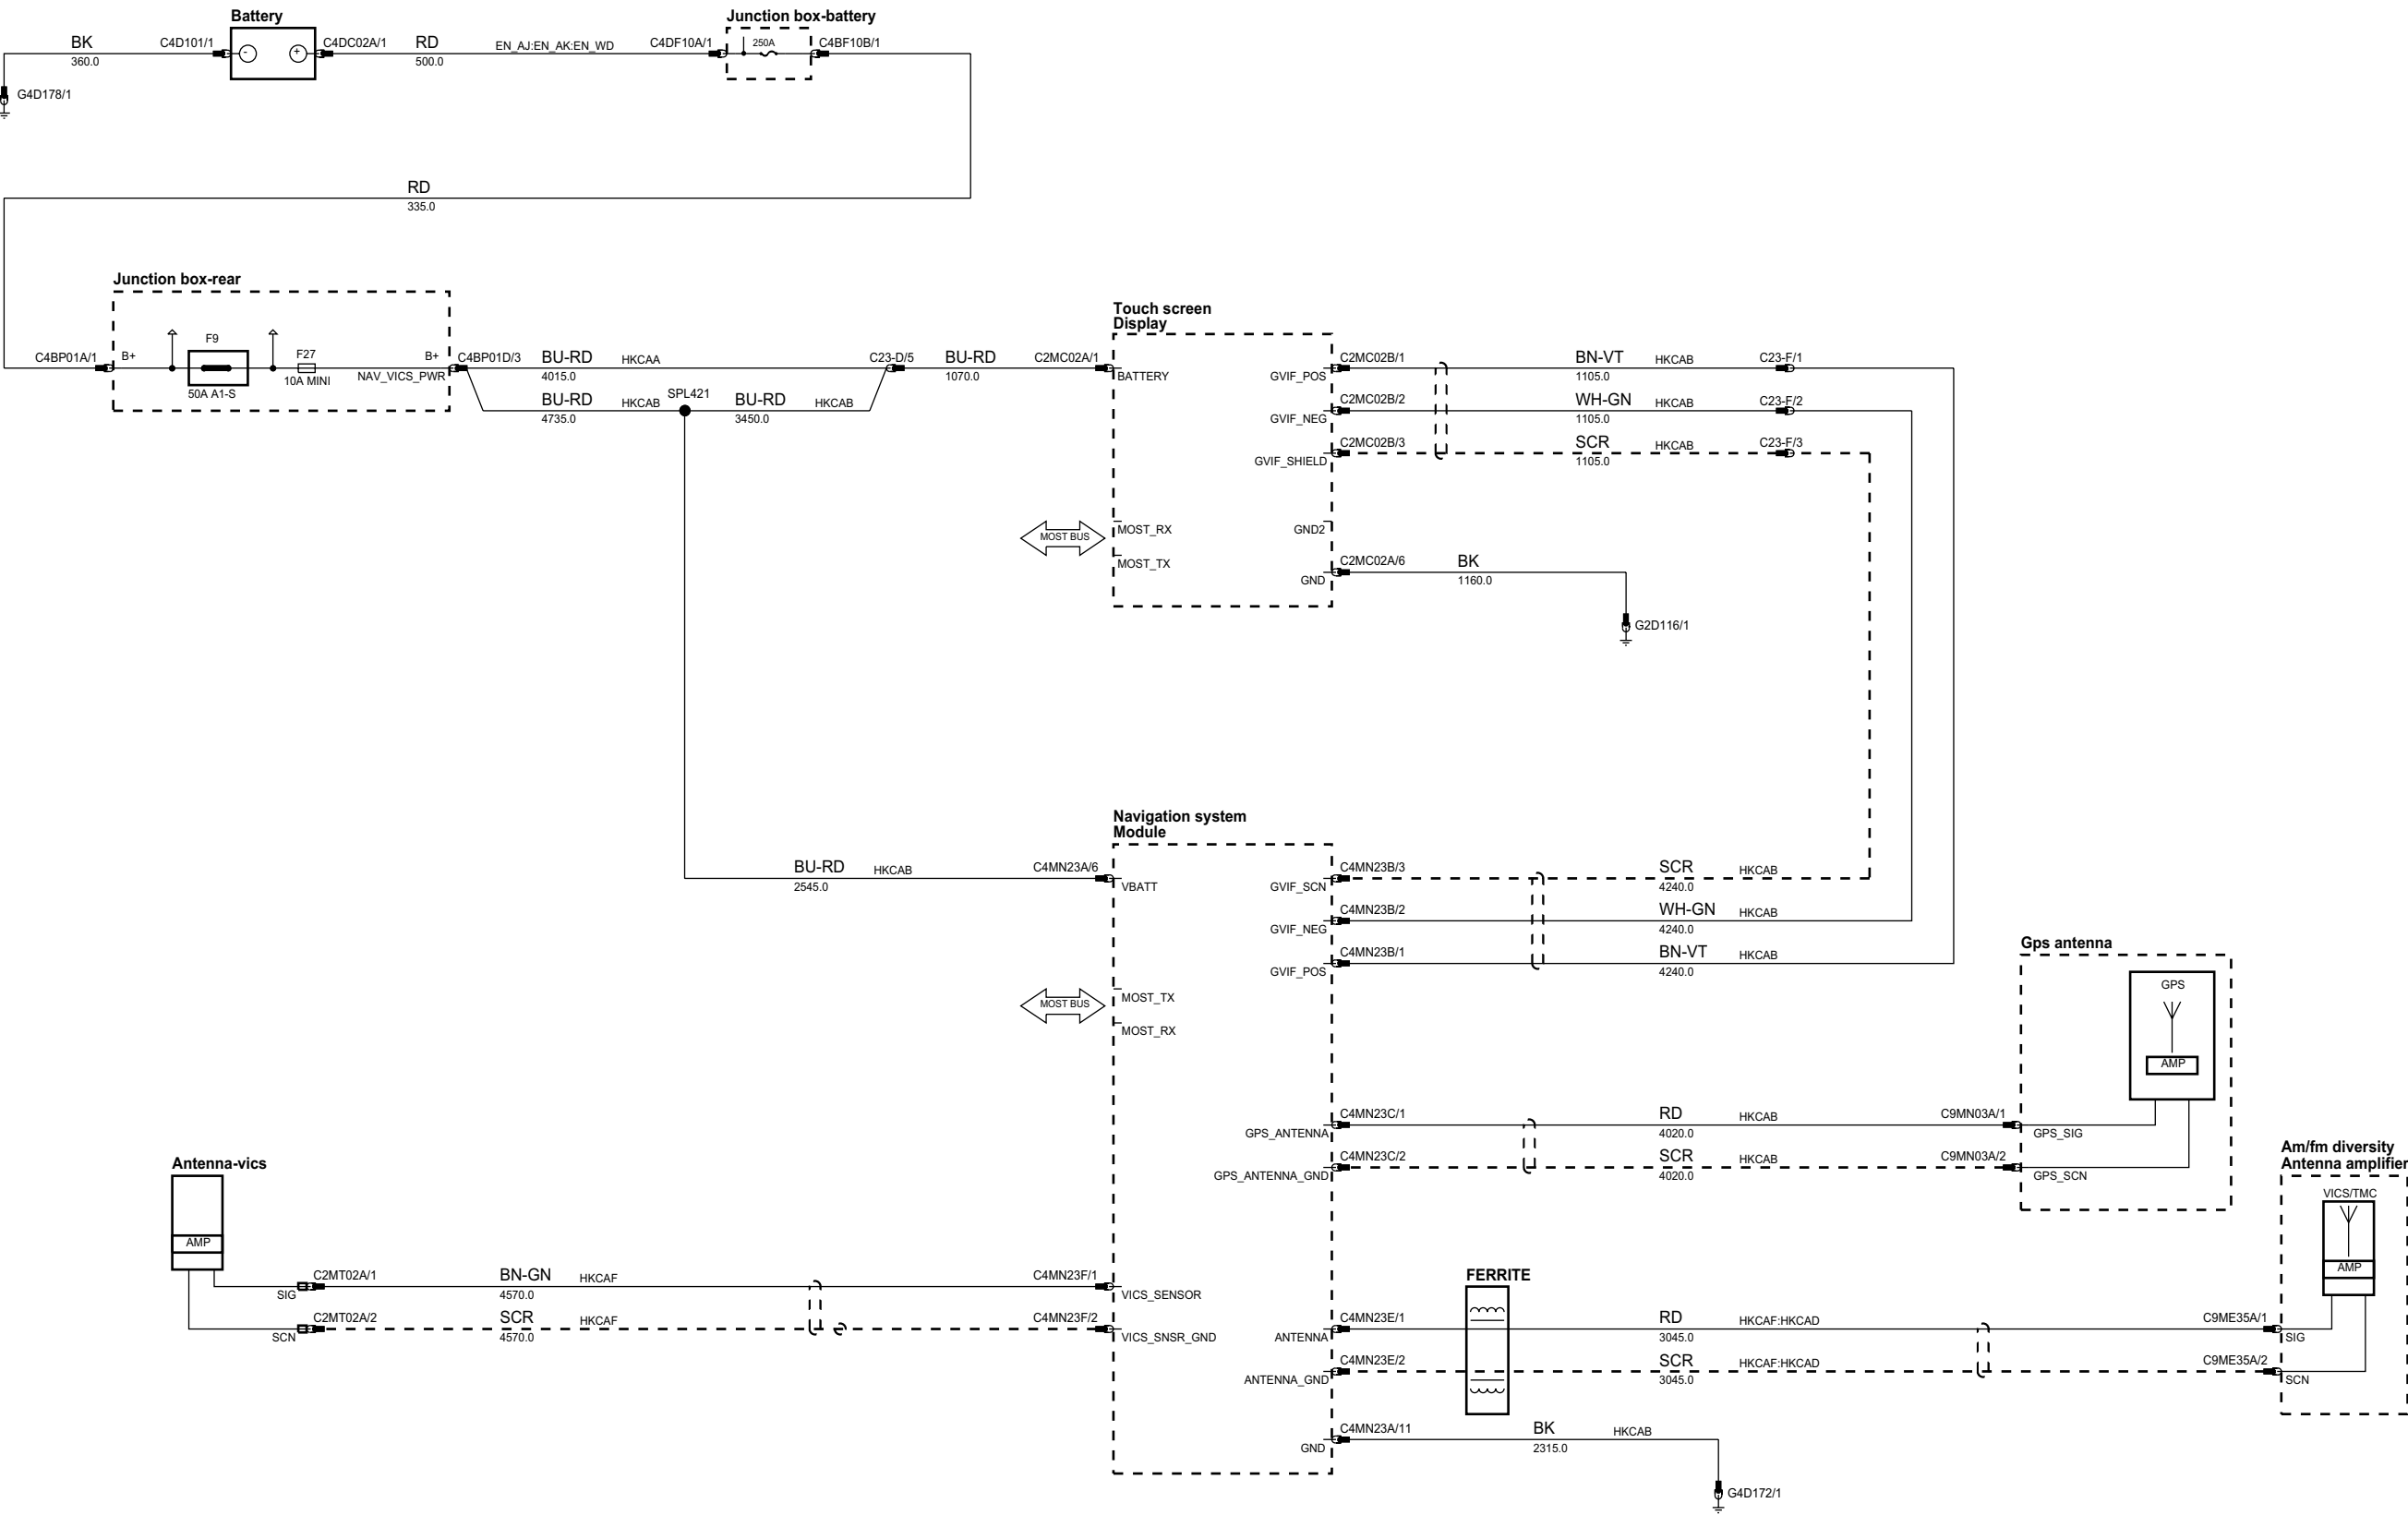

ph8r83-70316-a-af

