

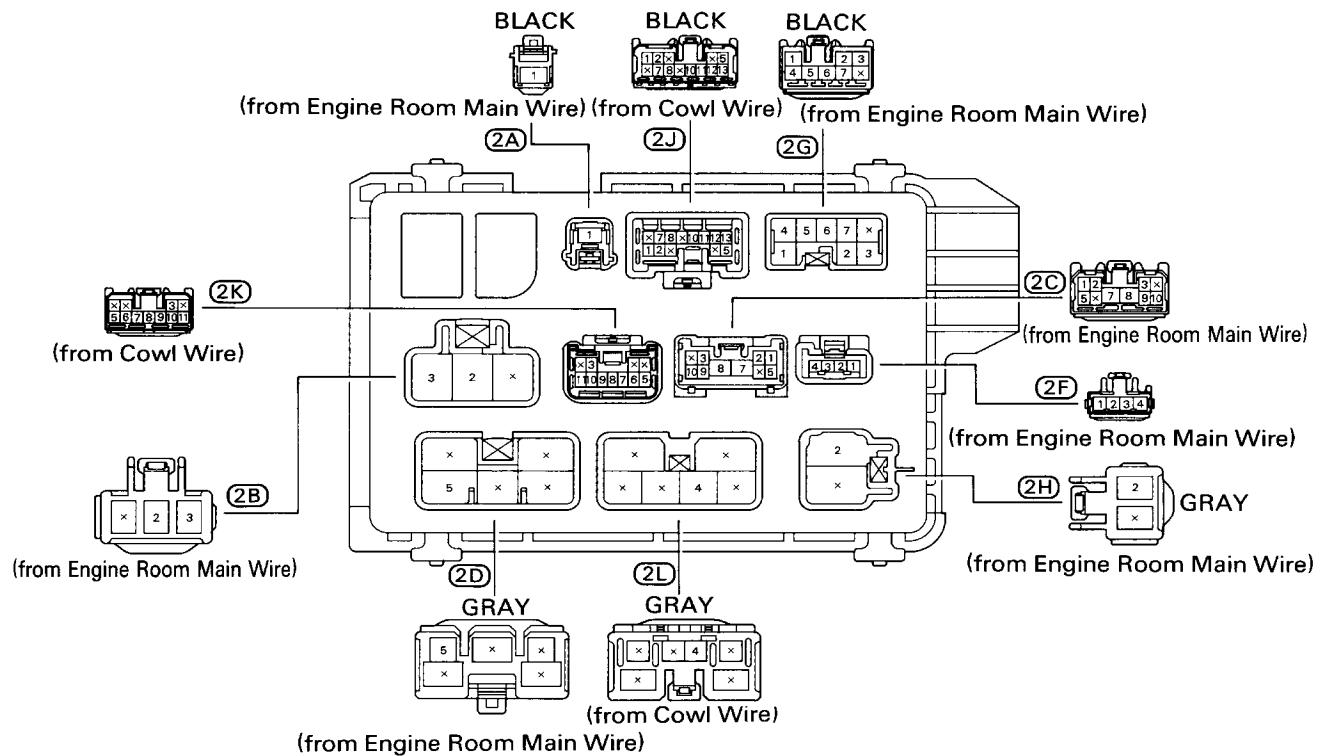


F RELAY LOCATIONS

○ : Engine Room J/B	Engine Compartment Left (See Page 18)
---------------------	---------------------------------------

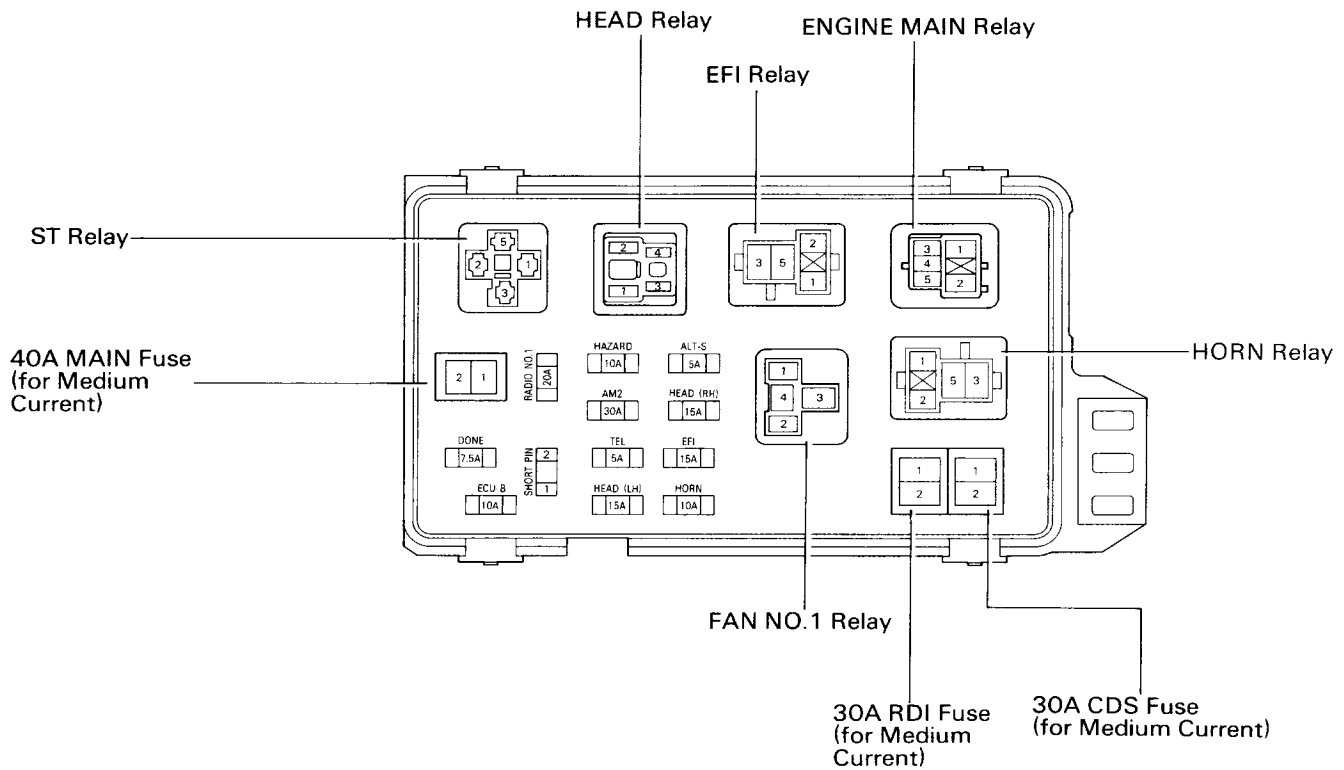


(Engine Room J/B Inner Circuit)

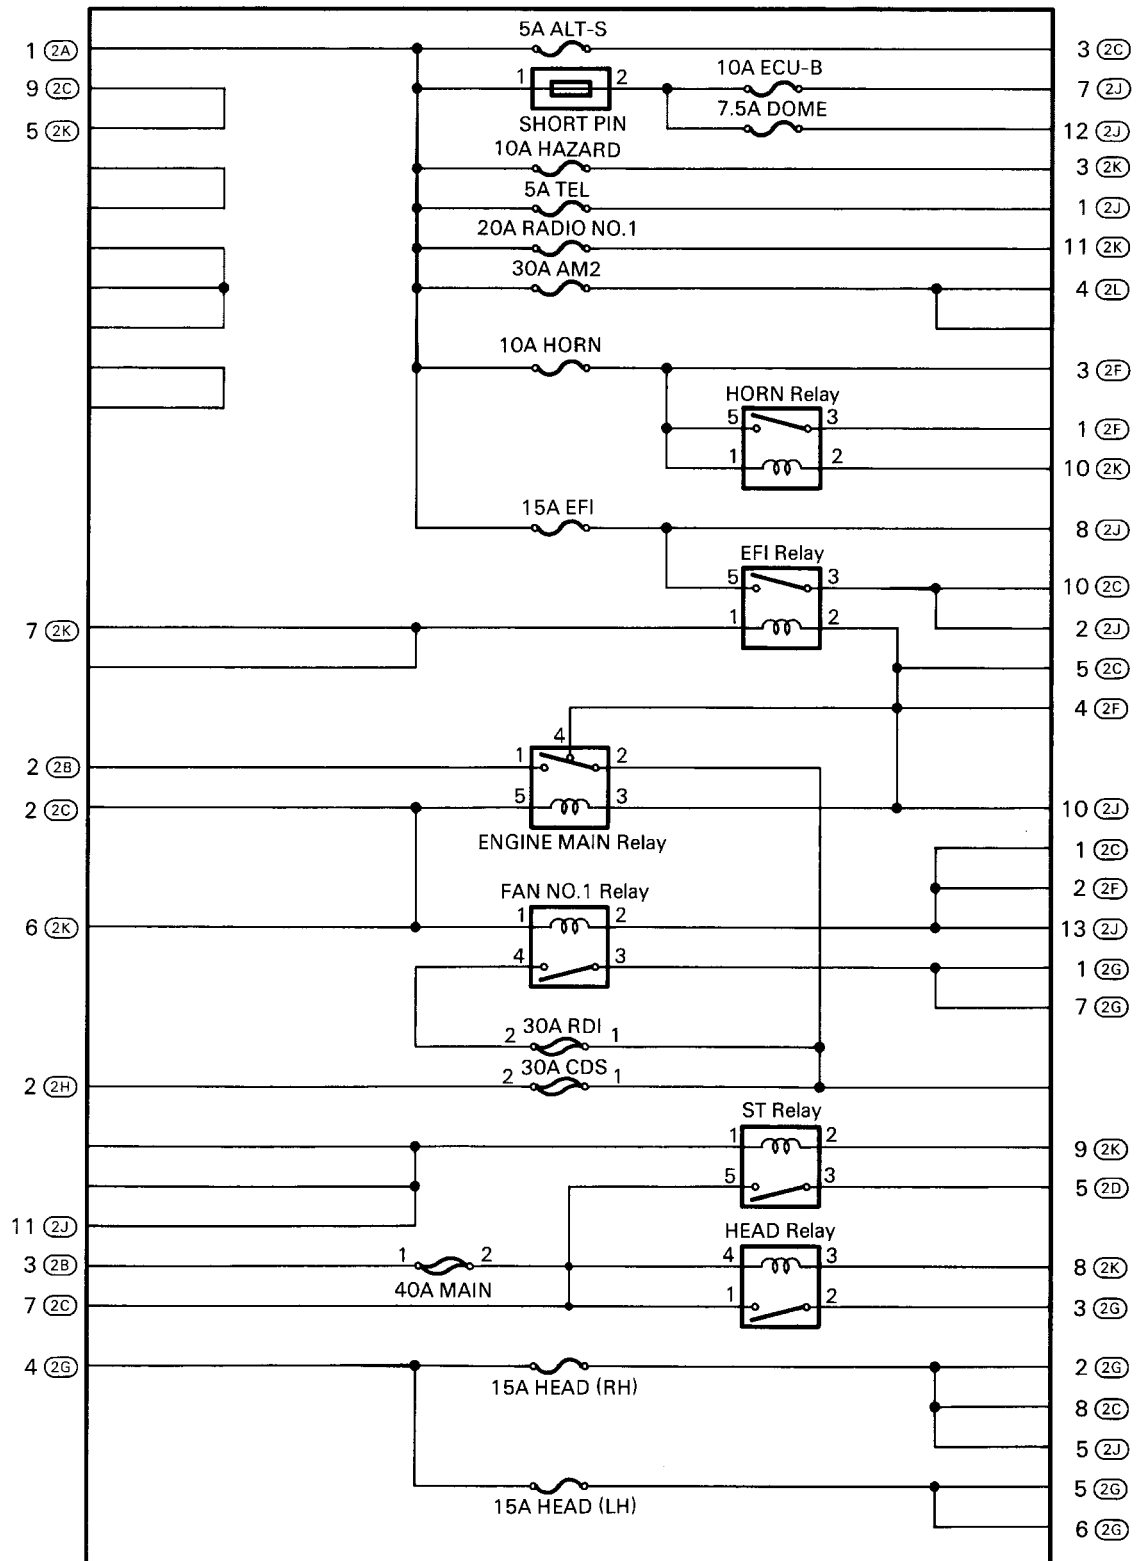

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

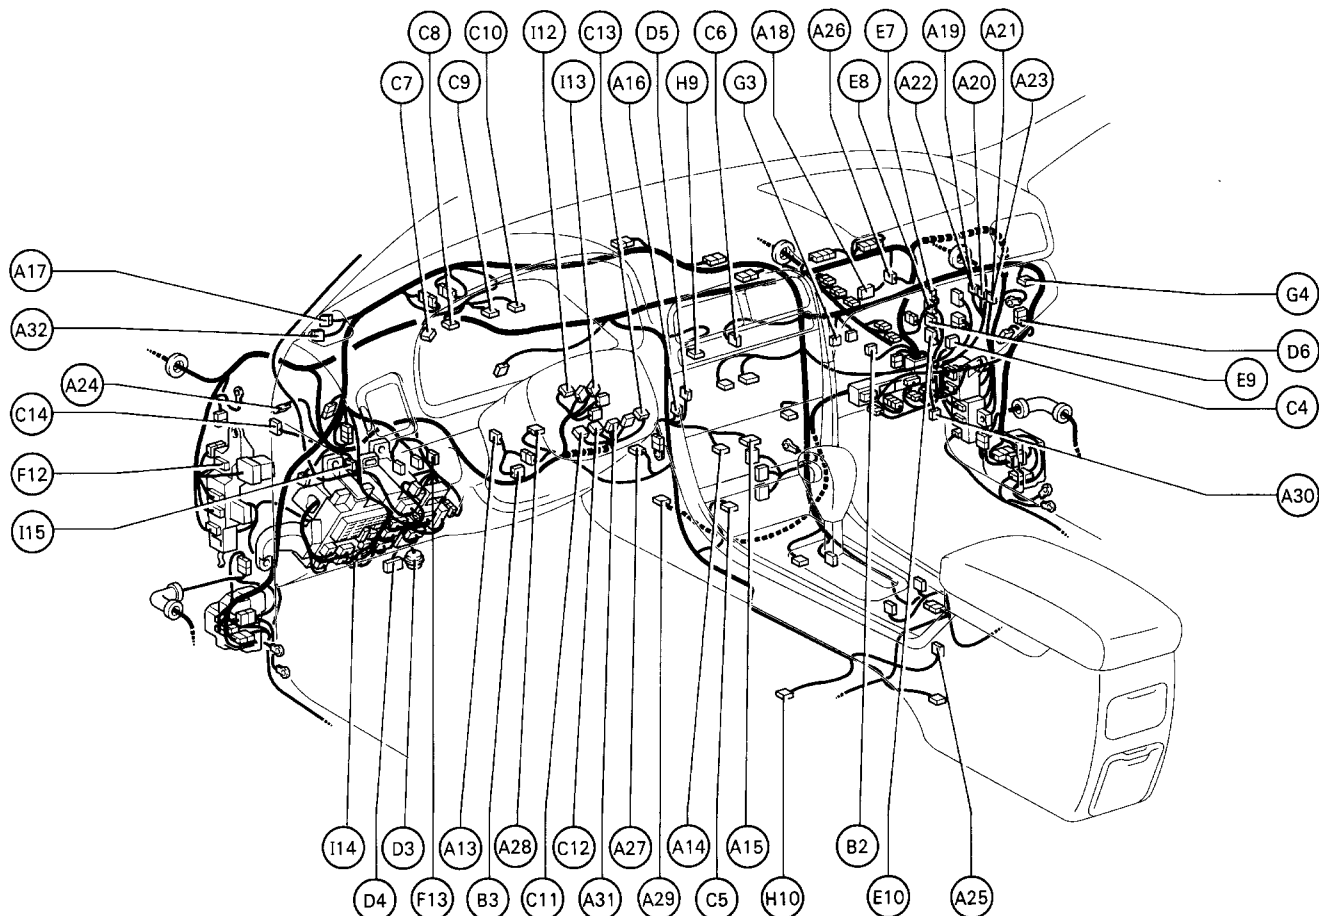


- | | | | |
|------|--|------|---|
| A 13 | A/C Blower Motor Linear Controller | C 11 | Combination SW |
| A 14 | A/C Control Assembly | C 12 | Combination SW |
| A 15 | A/C Control Assembly | C 13 | Combination SW |
| A 16 | A/C Room Temp. Sensor | C 14 | Cruise Control ECU |
| A 17 | A/C Solar Sensor | D 3 | Data Link Connector 2 |
| A 18 | A/C Thermistor | D 4 | Data Link Connector 3 |
| A 19 | ABS and Traction ECU | D 5 | Daytime Running Light Relay (Main) |
| A 20 | ABS and Traction ECU | D 6 | Diode (Courtesy) |
| A 21 | ABS and Traction ECU | E 7 | Engine Control Module |
| A 22 | ABS ECU | E 8 | Engine Control Module |
| A 23 | ABS ECU | E 9 | Engine Control Module |
| A 24 | Absorber Control ECU | E 10 | Engine Control Module |
| A 25 | Absorber Control SW | F 12 | Front Fog Light Relay |
| A 26 | Air Inlet Control Servo Motor | F 13 | Fuel Lid and Luggage Compartment Door Opener SW |
| A 27 | Air Mix Control Servo Motor | G 3 | Generator Box Light |
| A 28 | Air Vent Mode Control Servo Motor | G 4 | Generator Box Light SW |
| A 29 | Airbag Sensor Assembly | H 9 | Hazard SW |
| A 30 | Airbag Squib (Front Passenger Airbag Assembly) | H 10 | Heated Oxygen Sensor (Bank 1 Sensor 2) |
| A 31 | Airbag Squib (Steering Wheel Pad) | I 12 | Ignition Key Cylinder Light |
| A 32 | Automatic Light Control Sensor | I 13 | Ignition SW |
| B 2 | Blower Motor | I 14 | Integration Relay |
| B 3 | Blower Resistor | I 15 | Integration Relay |
| C 4 | CD Automatic Changer | | |
| C 5 | Cigarette Lighter | | |
| C 6 | Clock | | |
| C 7 | Combination Meter | | |
| C 8 | Combination Meter | | |
| C 9 | Combination Meter | | |
| C 10 | Combination Meter | | |

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

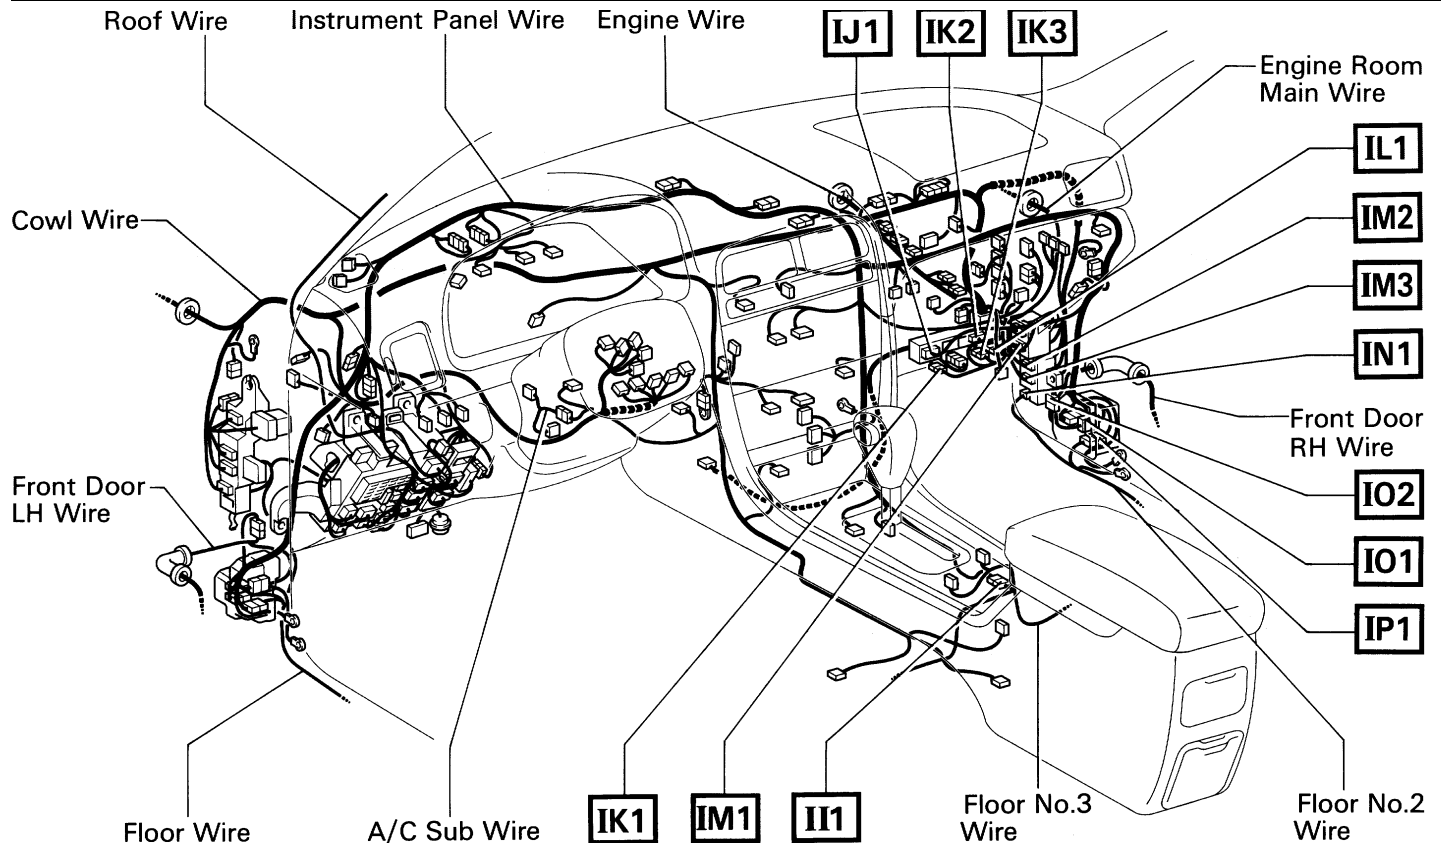

○ : Location of Splice Points

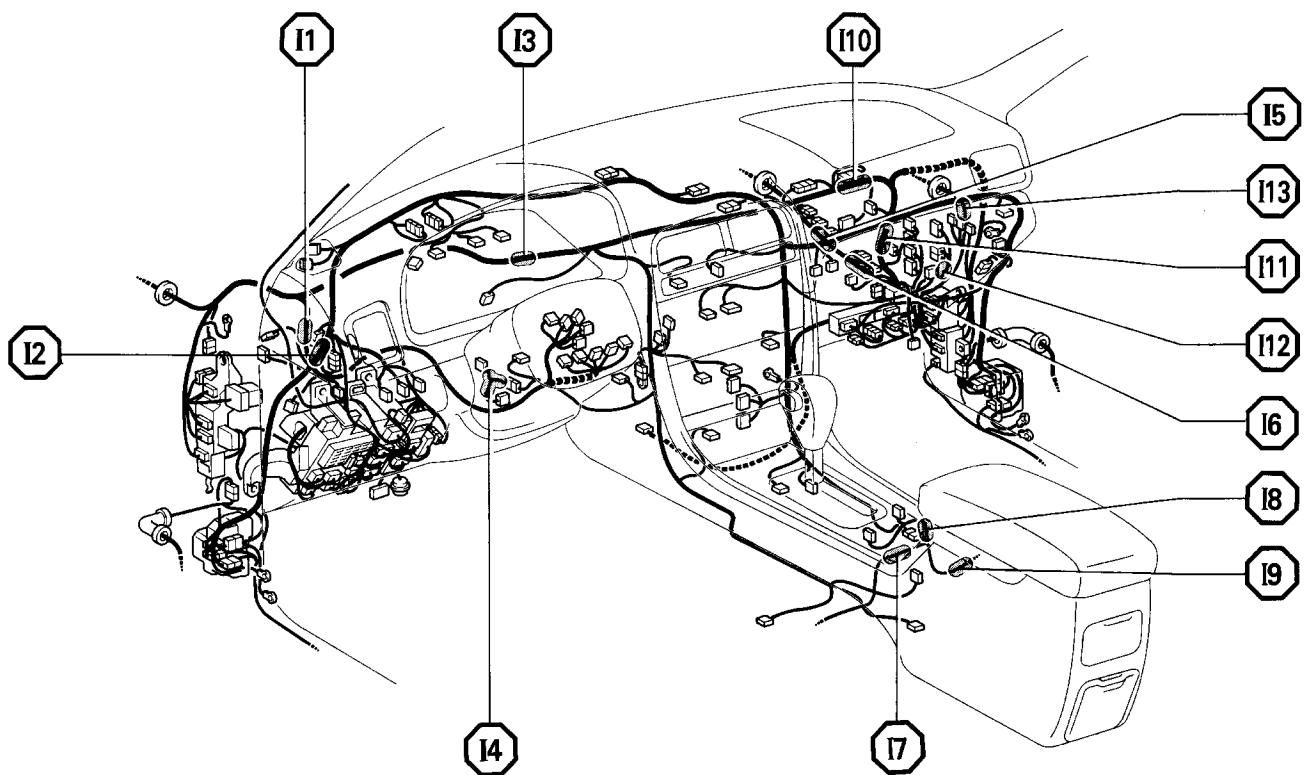

ENGINE CONTROL




: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EC	34	LEFT RADIATOR SIDE SUPPORT
ED	34	SURGE TANK RH
EE	34	REAR SIDE OF SURGE TANK
II	36	INSTRUMENT PANEL BRACE LH
IJ	36	INSTRUMENT PANEL BRACE RH
BN	40	UNDER THE LEFT CENTER PILLAR




: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	38	ENGINE WIRE	I11	38	INSTRUMENT PANEL WIRE
I 6					

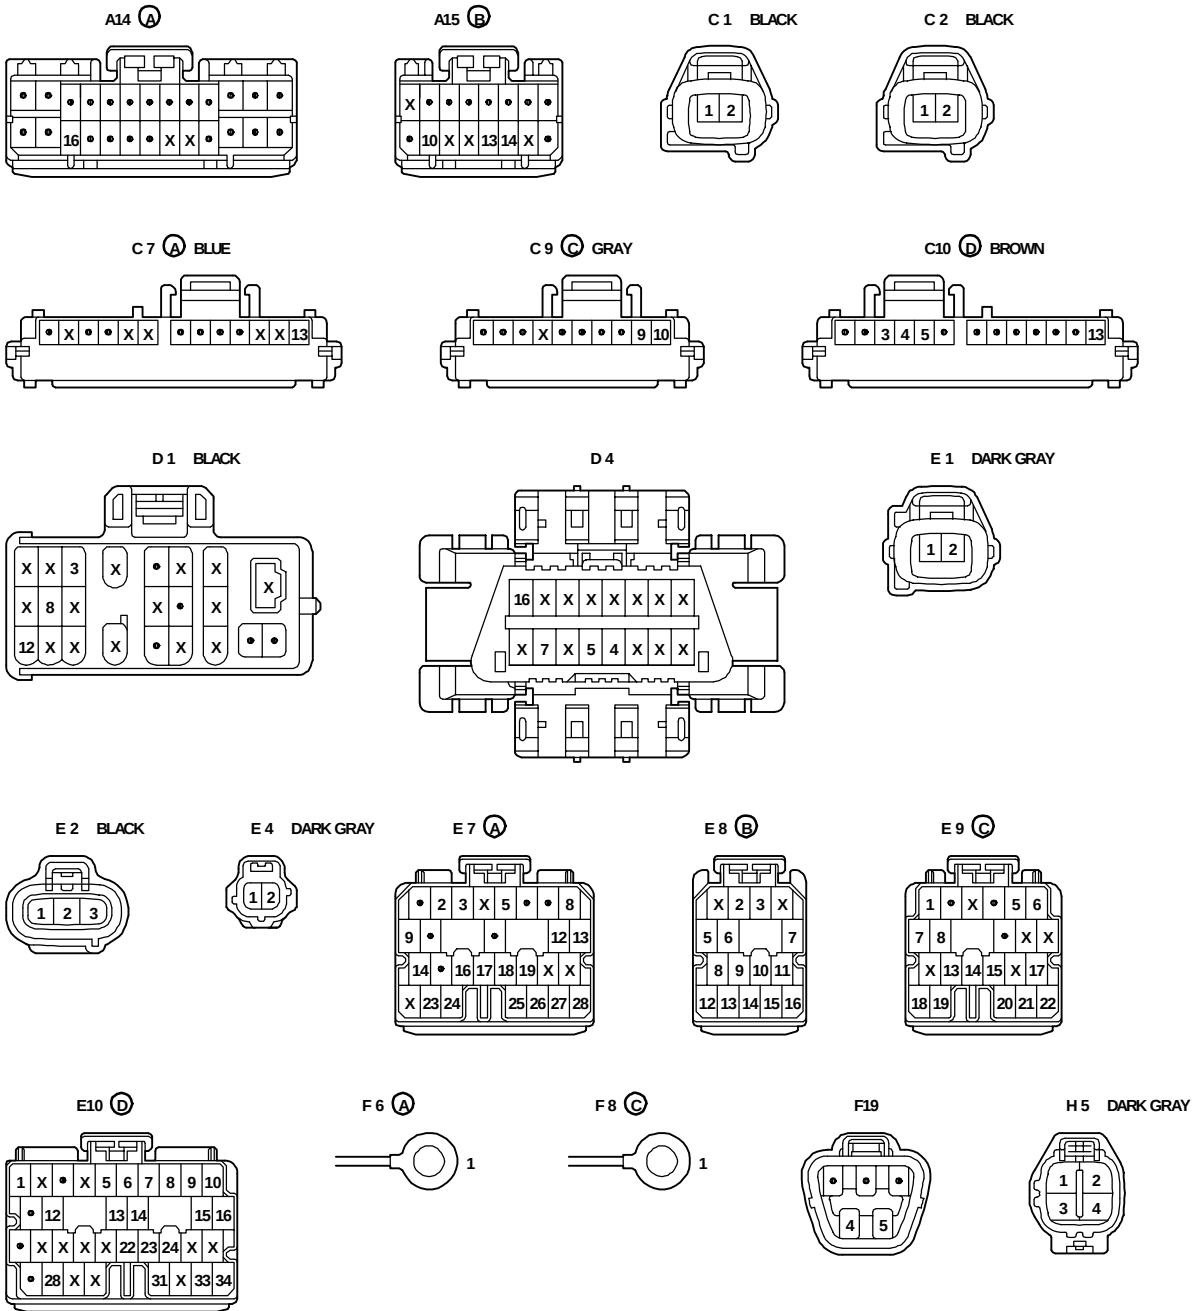

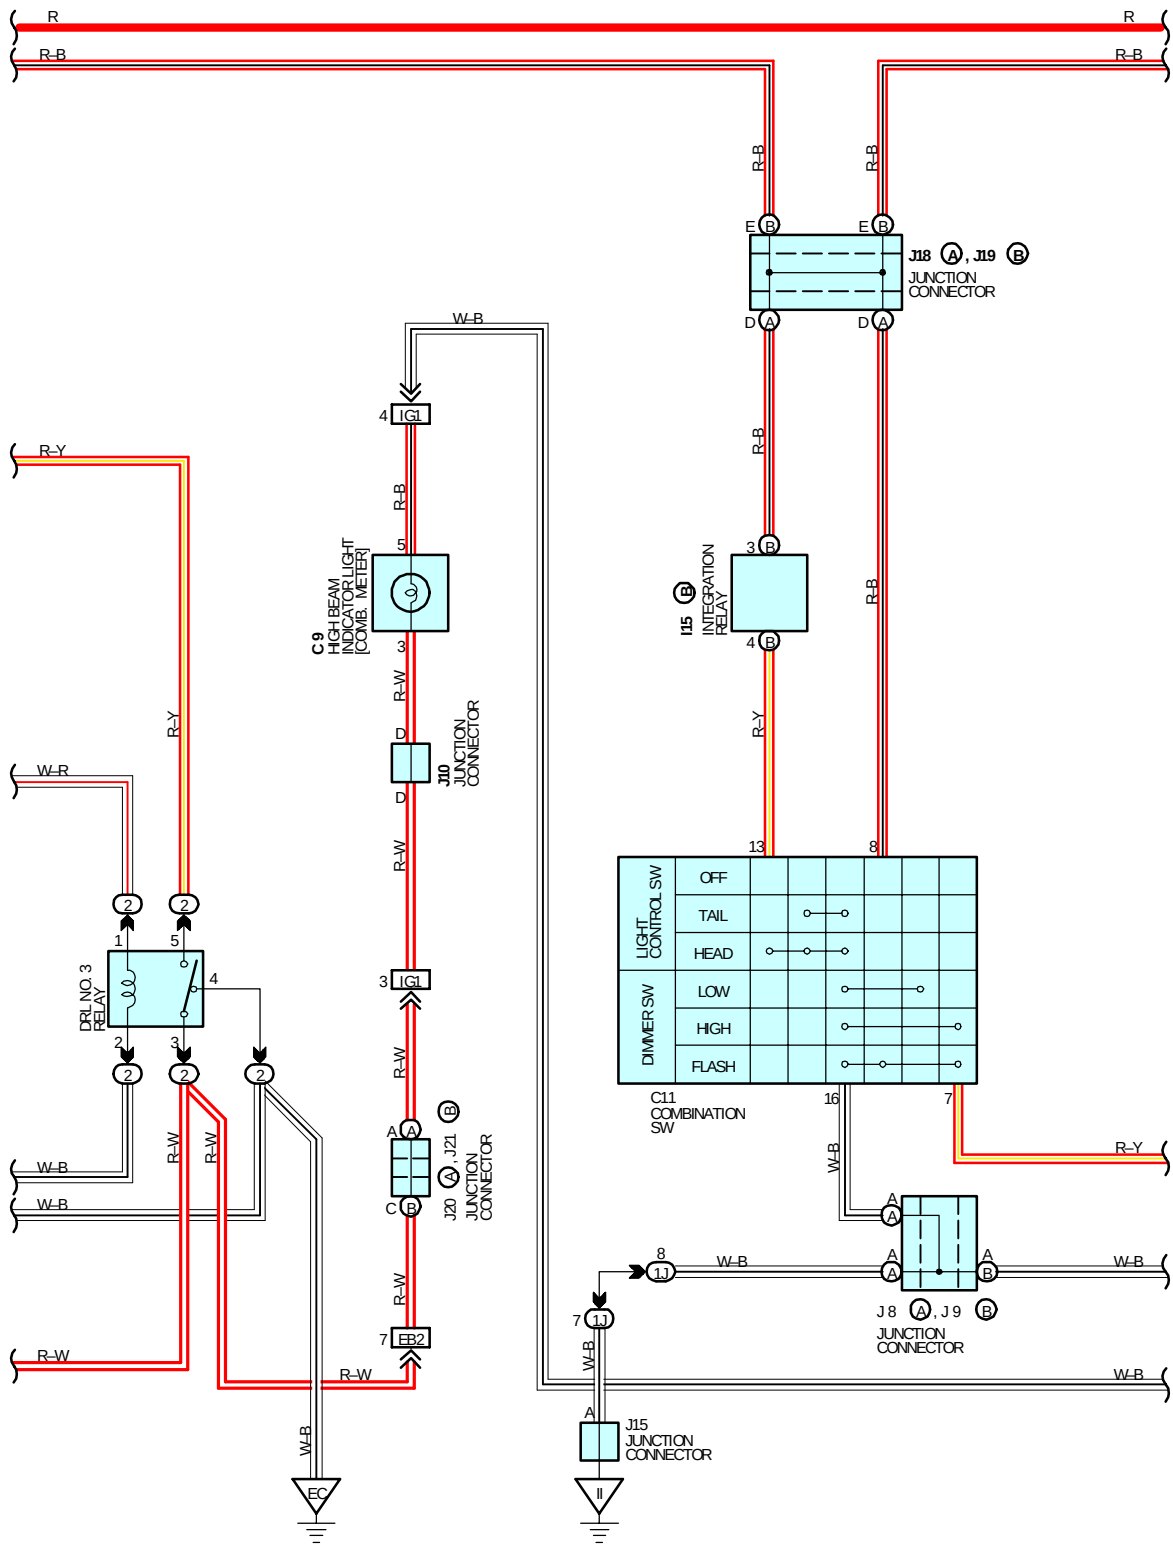

INTERIOR LIGHT

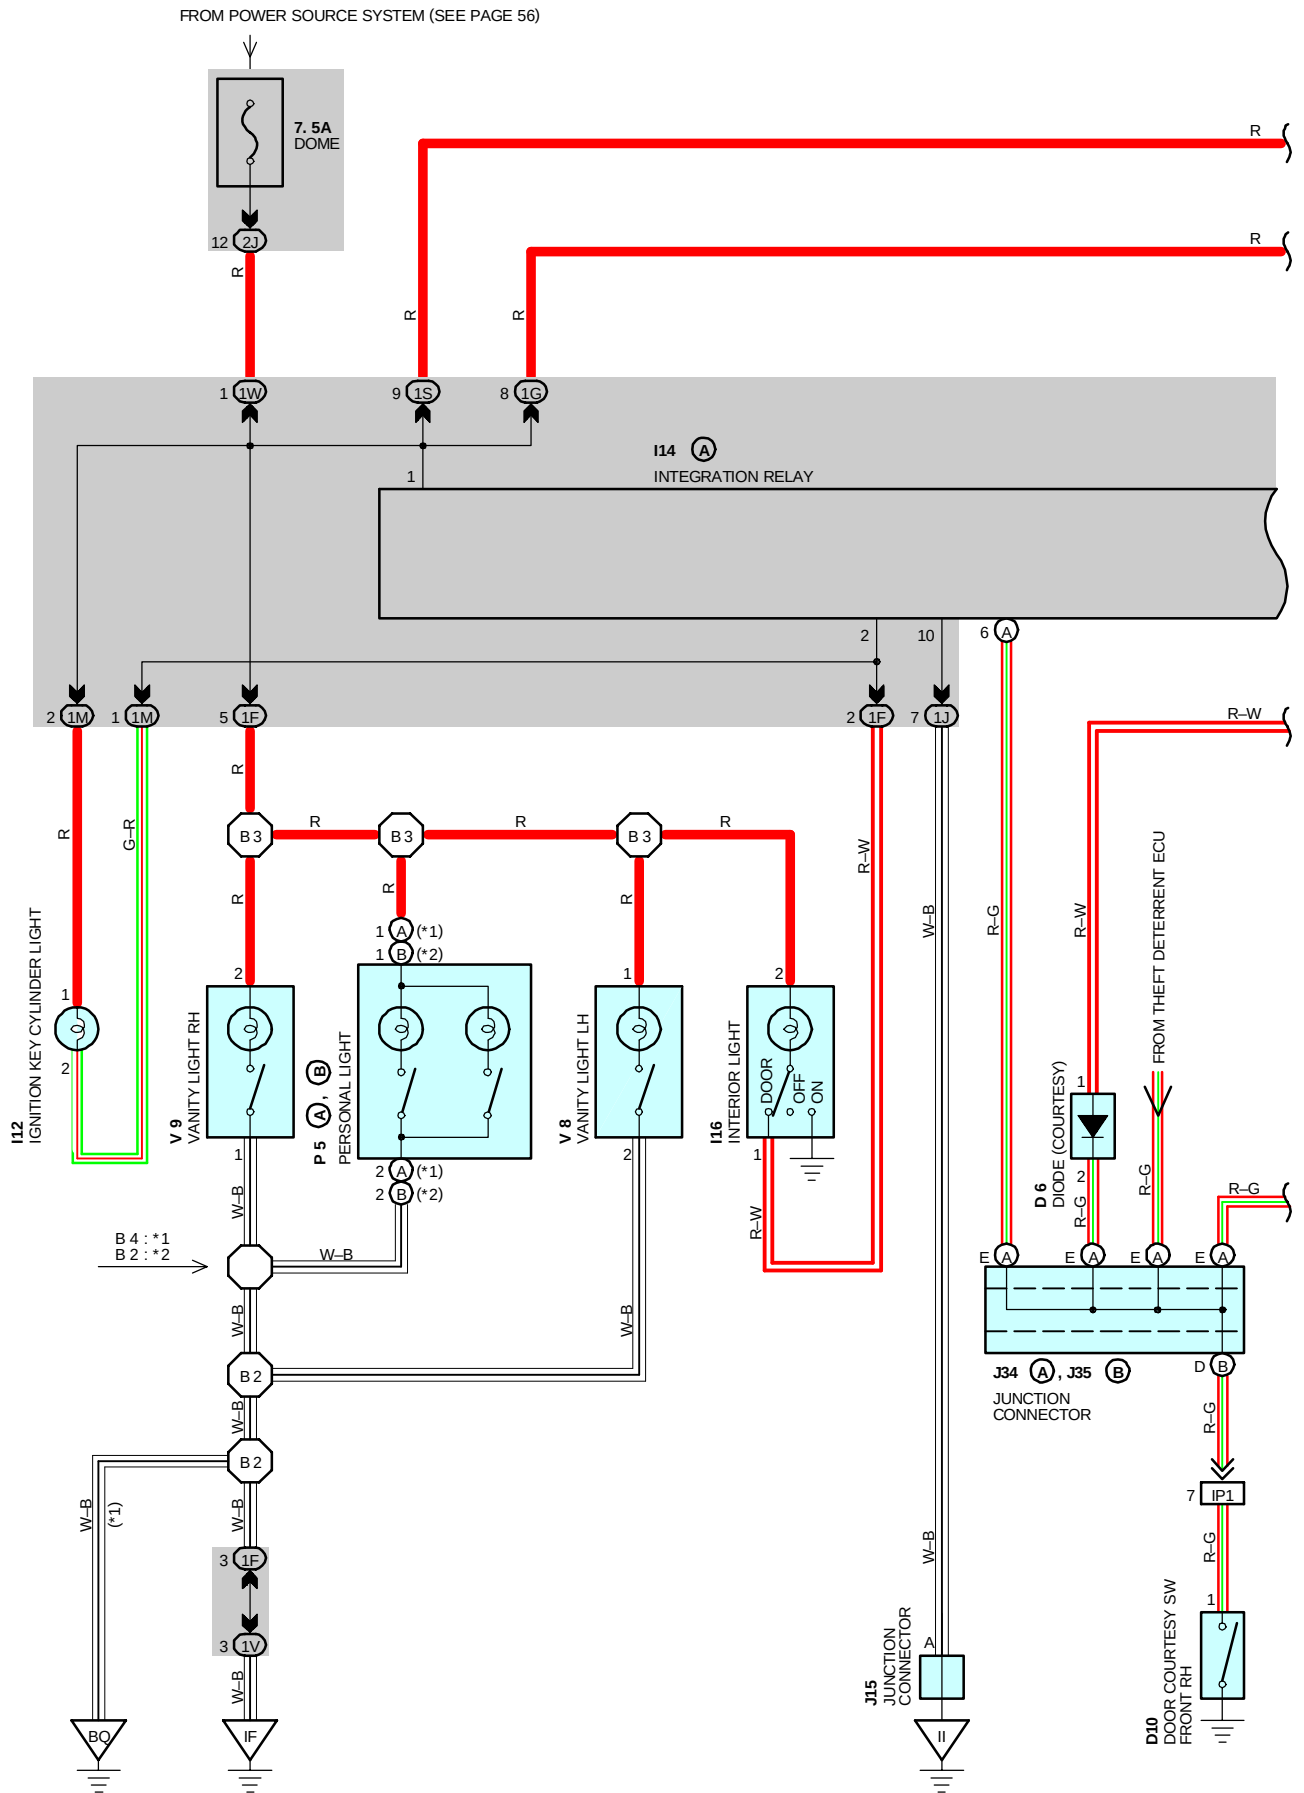

TAILLIGHT

SYSTEM OUTLINE

WHEN THE LIGHT CONTROL SW IS TURNED TO **TAIL** OR **HEAD** POSITION, THE CURRENT FLOWS TO **TERMINAL 3** OF THE LIGHT FAILURE SENSOR THROUGH THE **TAIL** FUSE.
WHEN THE IGNITION SW IS TURNED ON, THE CURRENT FLOWS FROM THE **GAUGE** FUSE TO **TERMINAL 8** OF THE LIGHT FAILURE SENSOR, AND ALSO FLOWS THROUGH THE REAR LIGHT WARNING LIGHT TO **TERMINAL 4** OF THE LIGHT FAILURE SENSOR.

TAILLIGHT DISCONNECTION WARNING

WITH THE IGNITION SW ON AND THE LIGHT CONTROL SW TURNED TO **TAIL** OR **HEAD** POSITION, IF THE TAILLIGHT CIRCUIT IS OPEN, THE LIGHT FAILURE SENSOR DETECTS THE FAILURE BY THE CHANGE IN CURRENT FLOWING FROM **TERMINAL 3** OF THE LIGHT FAILURE SENSOR TO **TERMINAL 9** AND THE WARNING CIRCUIT OF THE LIGHT FAILURE SENSOR IS ACTIVATED.
AS A RESULT, THE CURRENT FLOWS FROM **TERMINAL 4** OF THE LIGHT FAILURE SENSOR → **TERMINAL 11** → **GROUND** AND TURNS THE REAR LIGHTS WARNING LIGHT ON, WHICH REMAINS ON UNTIL THE LIGHT CONTROL SW IS TURNED OFF.

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

L4 LIGHT FAILURE SENSOR

4,8-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ON** POSITION

3-GROUND : APPROX. **12** VOLTS WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

11-GROUND : ALWAYS CONTINUITY



: PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
C 7	A	28	J 4		29	L 3	30
C10	D	28	J 8		29	L 4	30
C11		28	J15		29	R 6	31
F 3		26	J18	A	29	R 7	31
F 4		26	J19	B	29	R 8	31
F 6	A	26	J31	A	29	R 9	31
F11	F	26	J32	B	29	R12	31
I15	B	28	J37		30	R13	31
J 2		29	L 2		30		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	24	COWL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1C		
1D	24	INSTRUMENT PANEL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1J	24	COWL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1S	24	FLOOR WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF3	36	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	RIGHT RADIATOR SIDE SUPPORT
EC	34	LEFT RADIATOR SIDE SUPPORT
II	36	INSTRUMENT PANEL BRACE LH
BN	40	UNDER THE LEFT CENTER PILLAR
BP	40	BACK PANEL CENTER



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	34	COWL WIRE	B12	40	FLOOR WIRE
B10	40	FLOOR WIRE	B13		
B11			B14		

SERVICE HINTS

F12 FRONT FOG LIGHT RELAY

3-5 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FRONT FOG LIGHT SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	28	J 8	29	J31	A 29
F 1	26	J15	29	J32	B 29
F 2	26	J20	A 29		
F12	26	J21	B 29		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	23	ENGINE ROOM NO.2 R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR


CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	24	COWL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1J		
2J	20	COWL WIRE AND ENGINE ROOM J/B (ENGINE COMAPRTMENT LEFT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IN3	38	ENGINE ROOM MAIN WIRE AND COWL WIRE (RIGHT KICK PANEL)


▽ : GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	RIGHT RADIATOR SIDE SUPPORT
EC	34	LEFT RADIATOR SIDE SUPPORT
II	36	INSTRUMENT PANEL BRACE LH

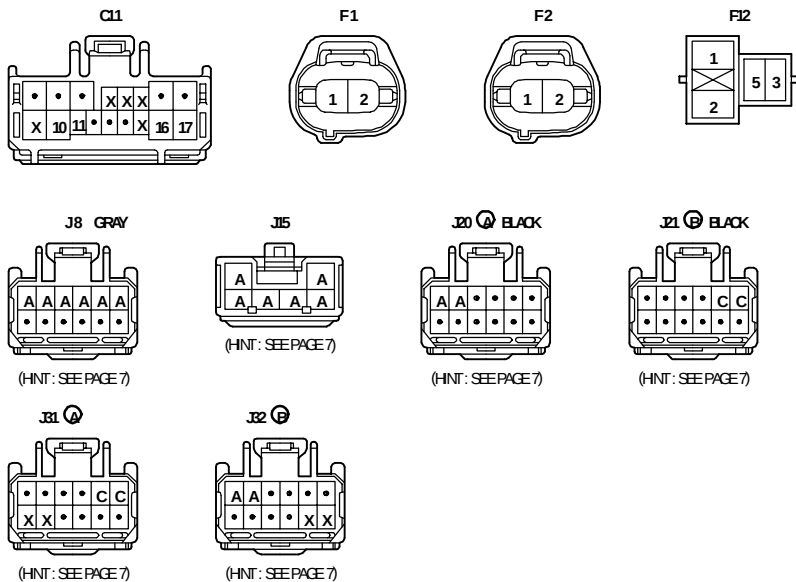




LIGHT AUTO TURN OFF

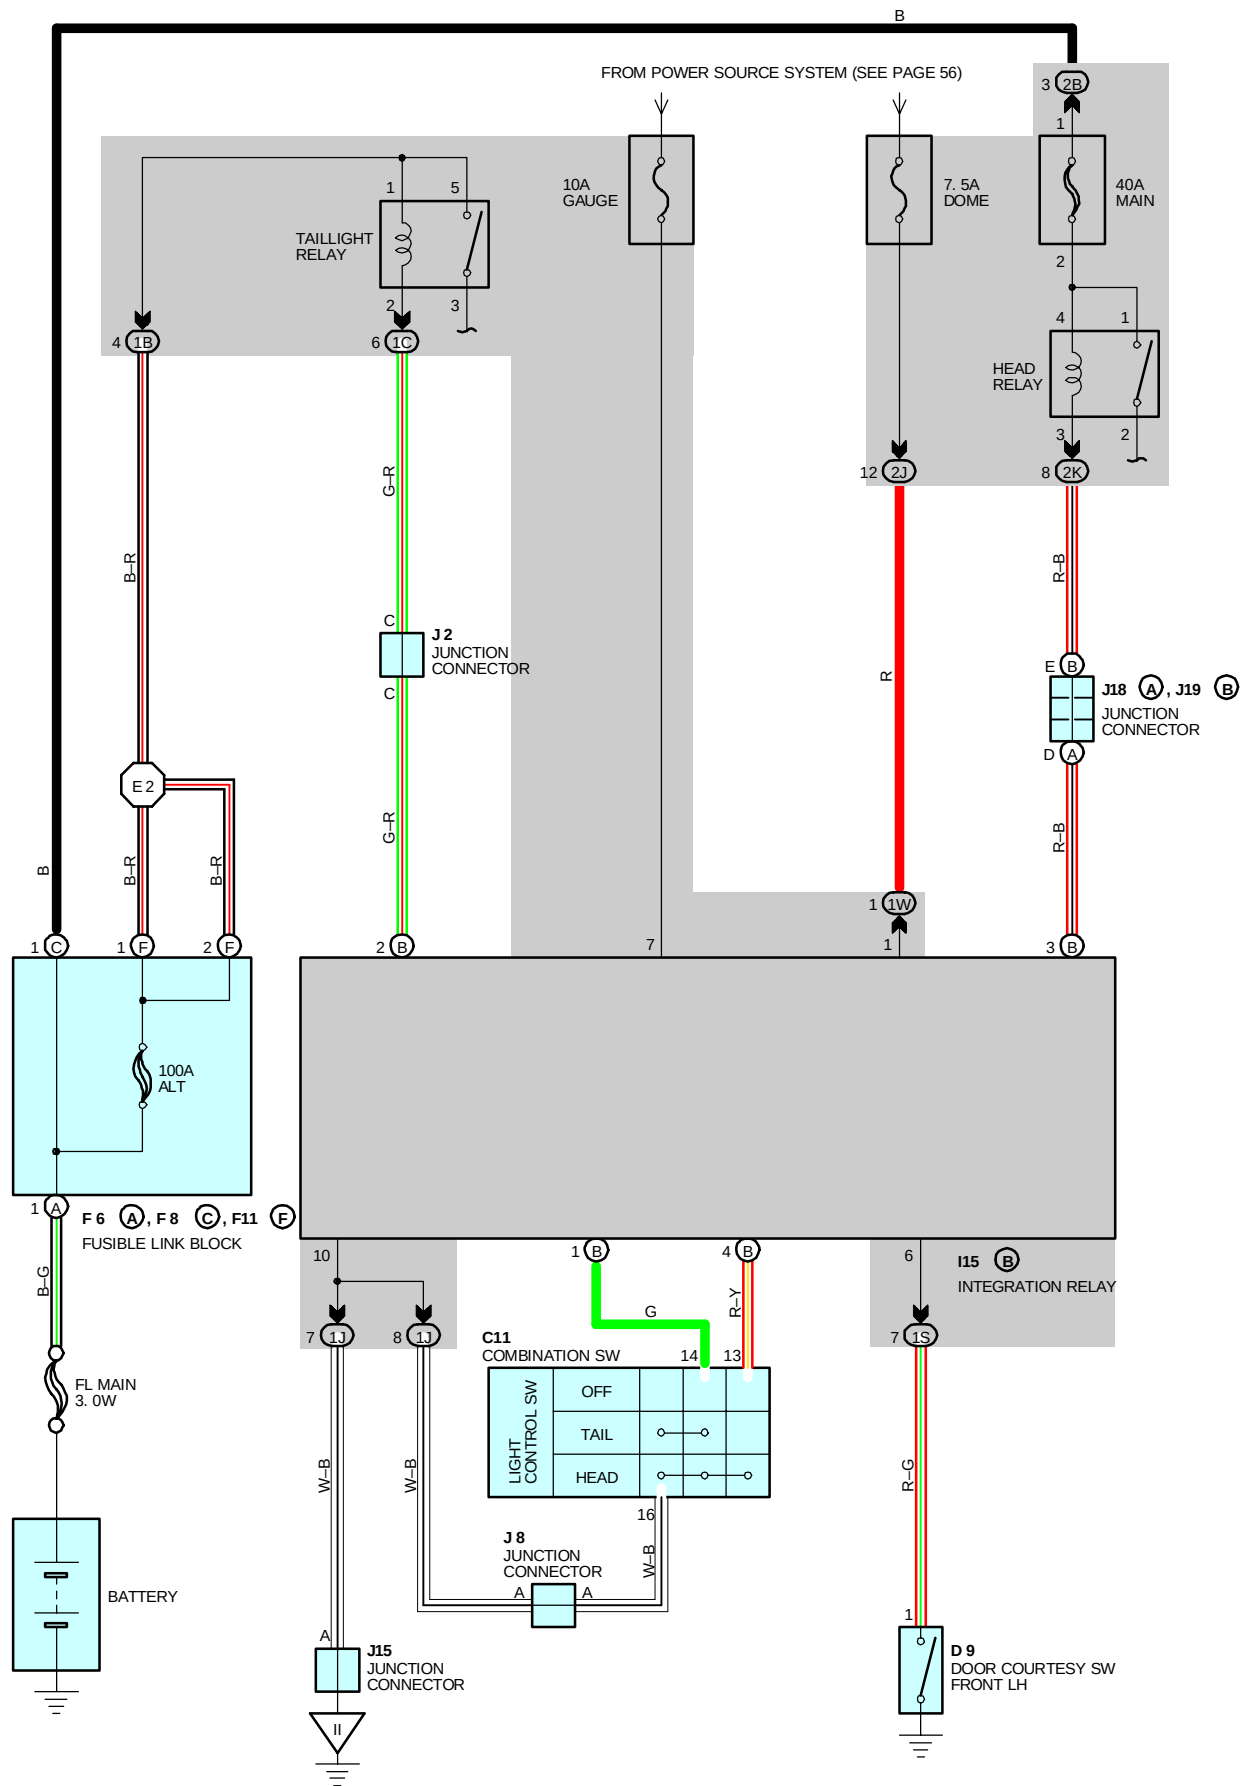

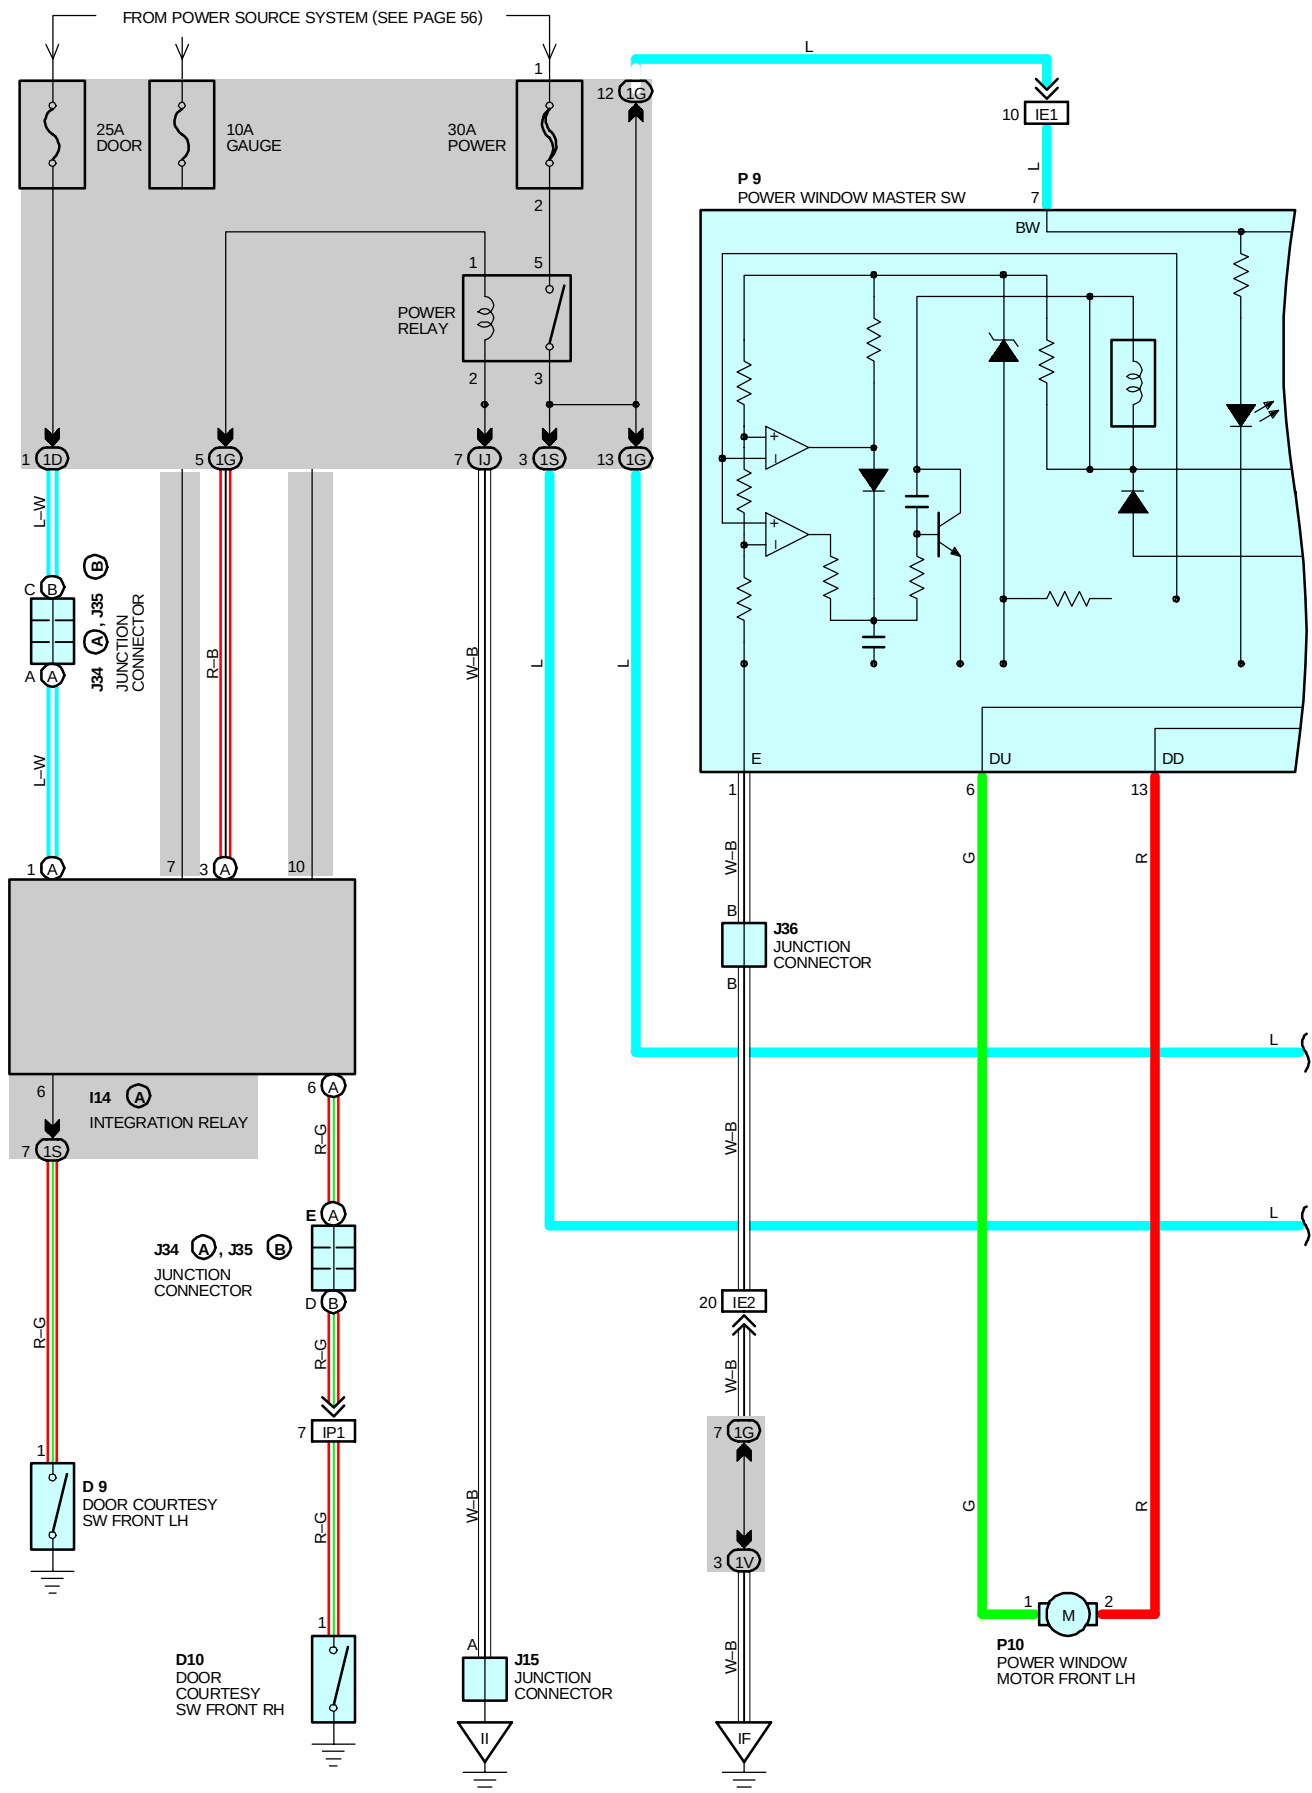


POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

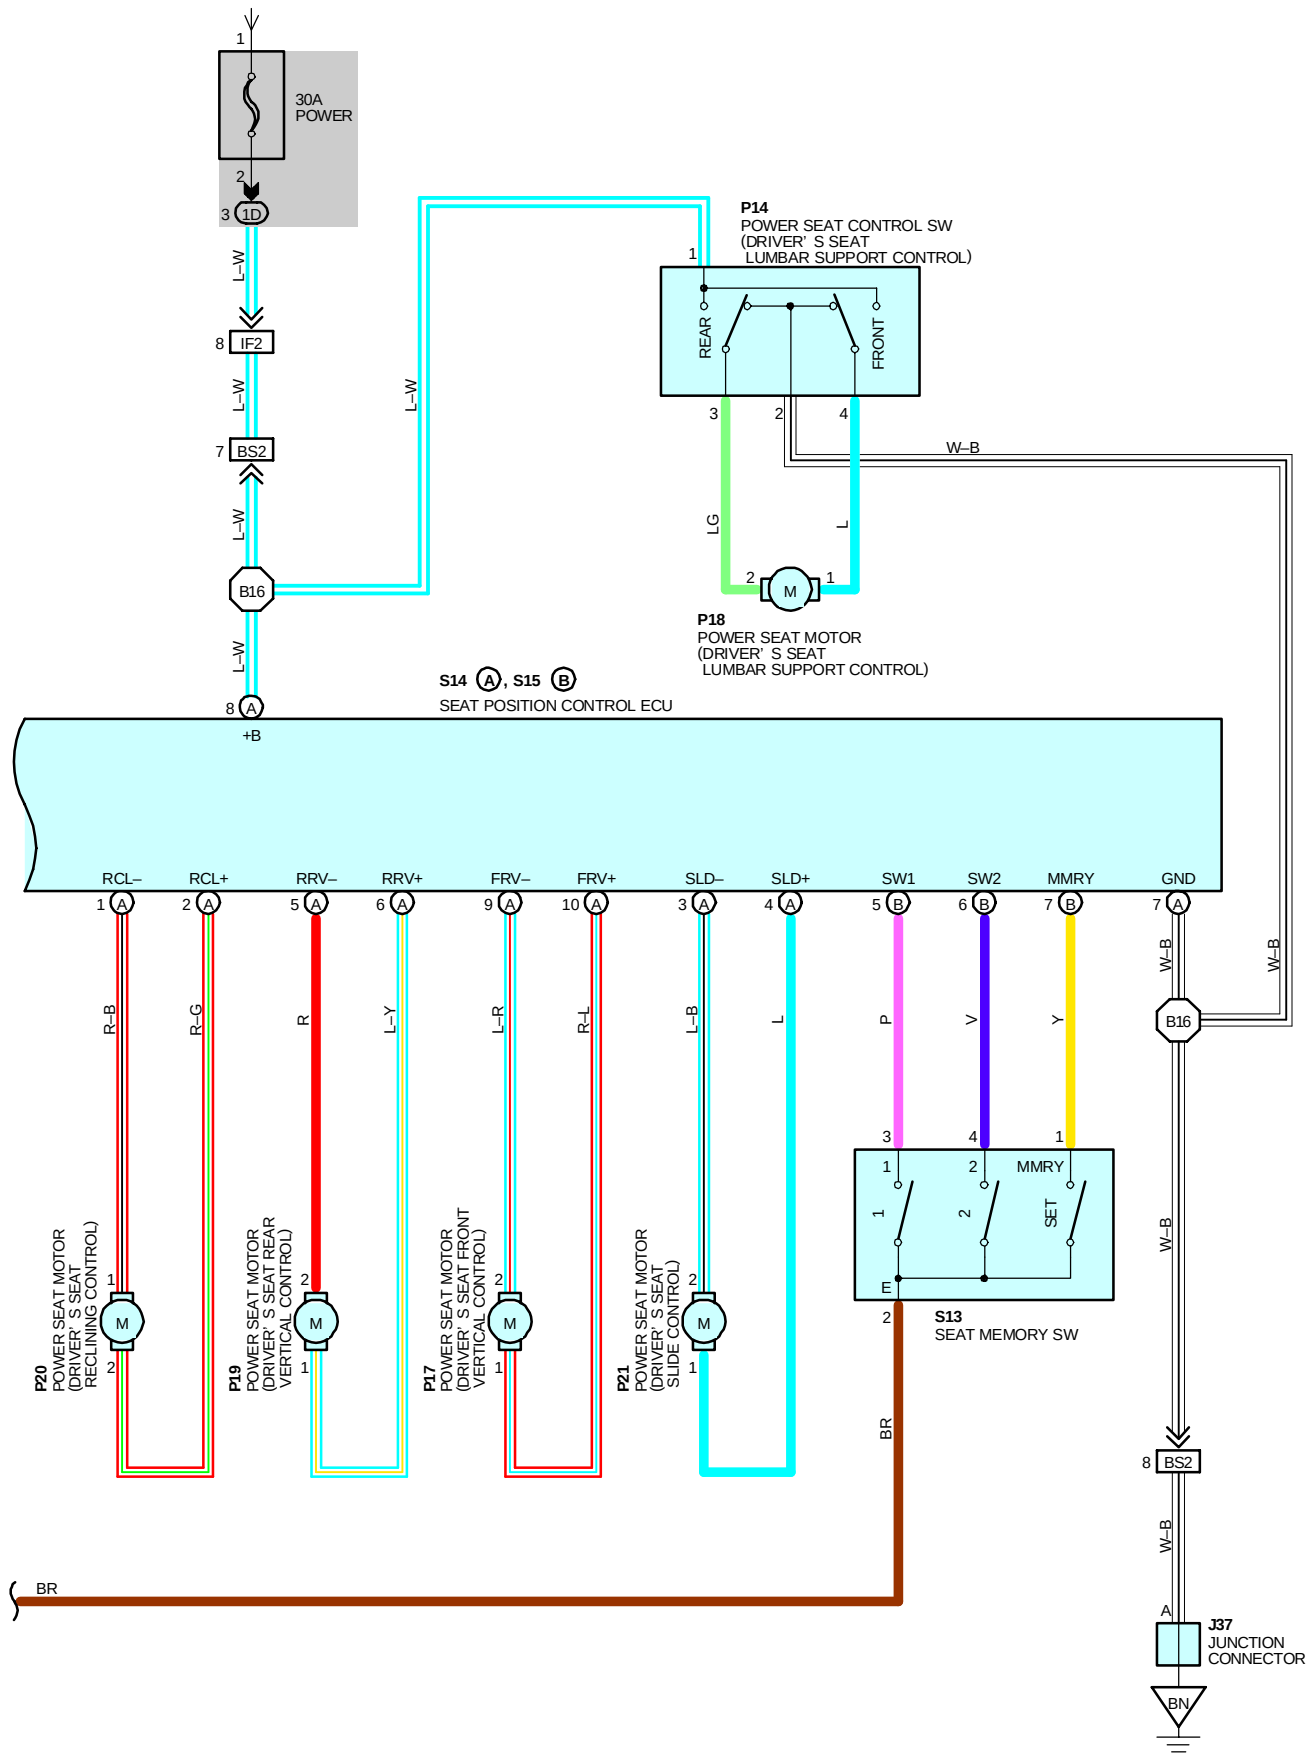

DOOR LOCK CONTROL

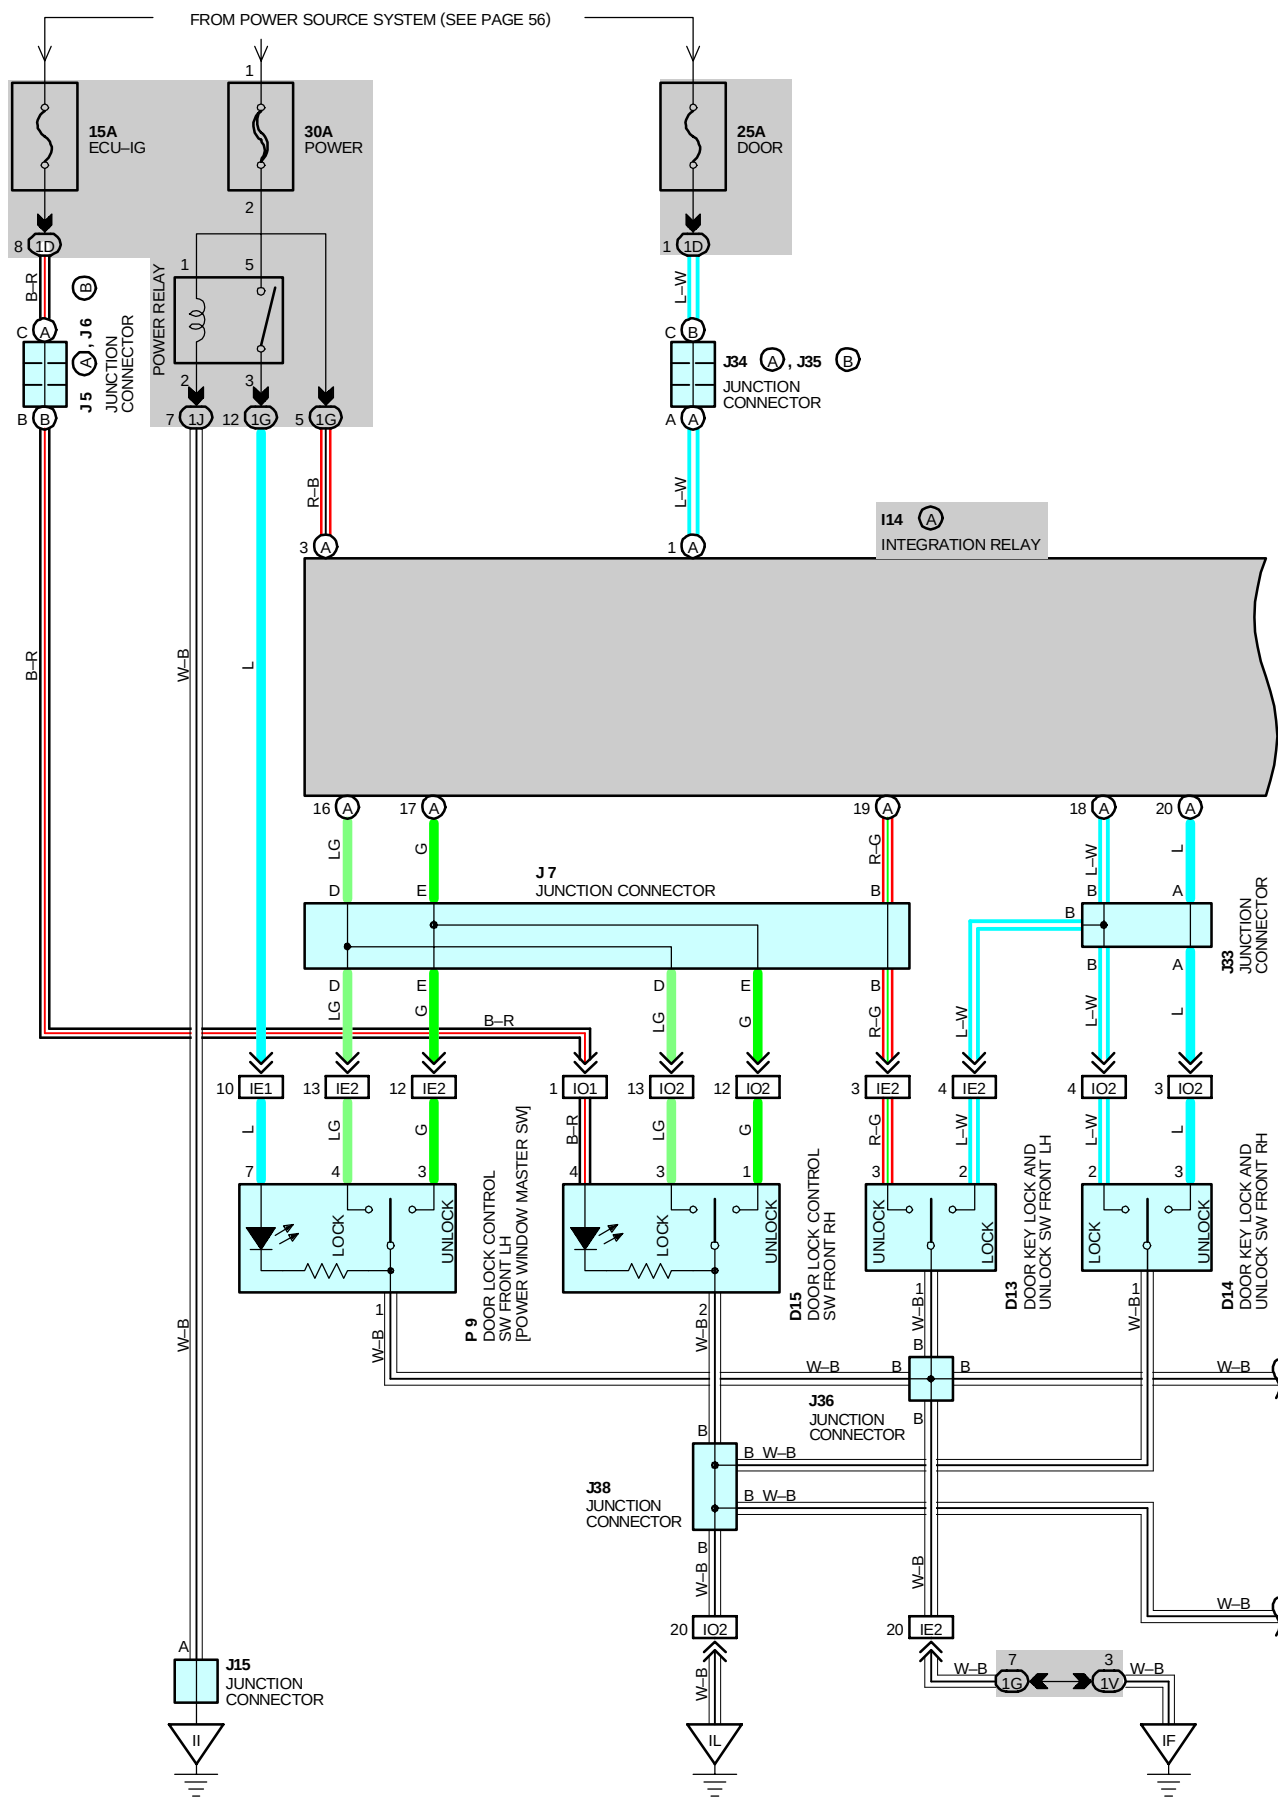

THEFT DETERRENT

