



{ } NAME INDICATED ON FUSE BOX COVER

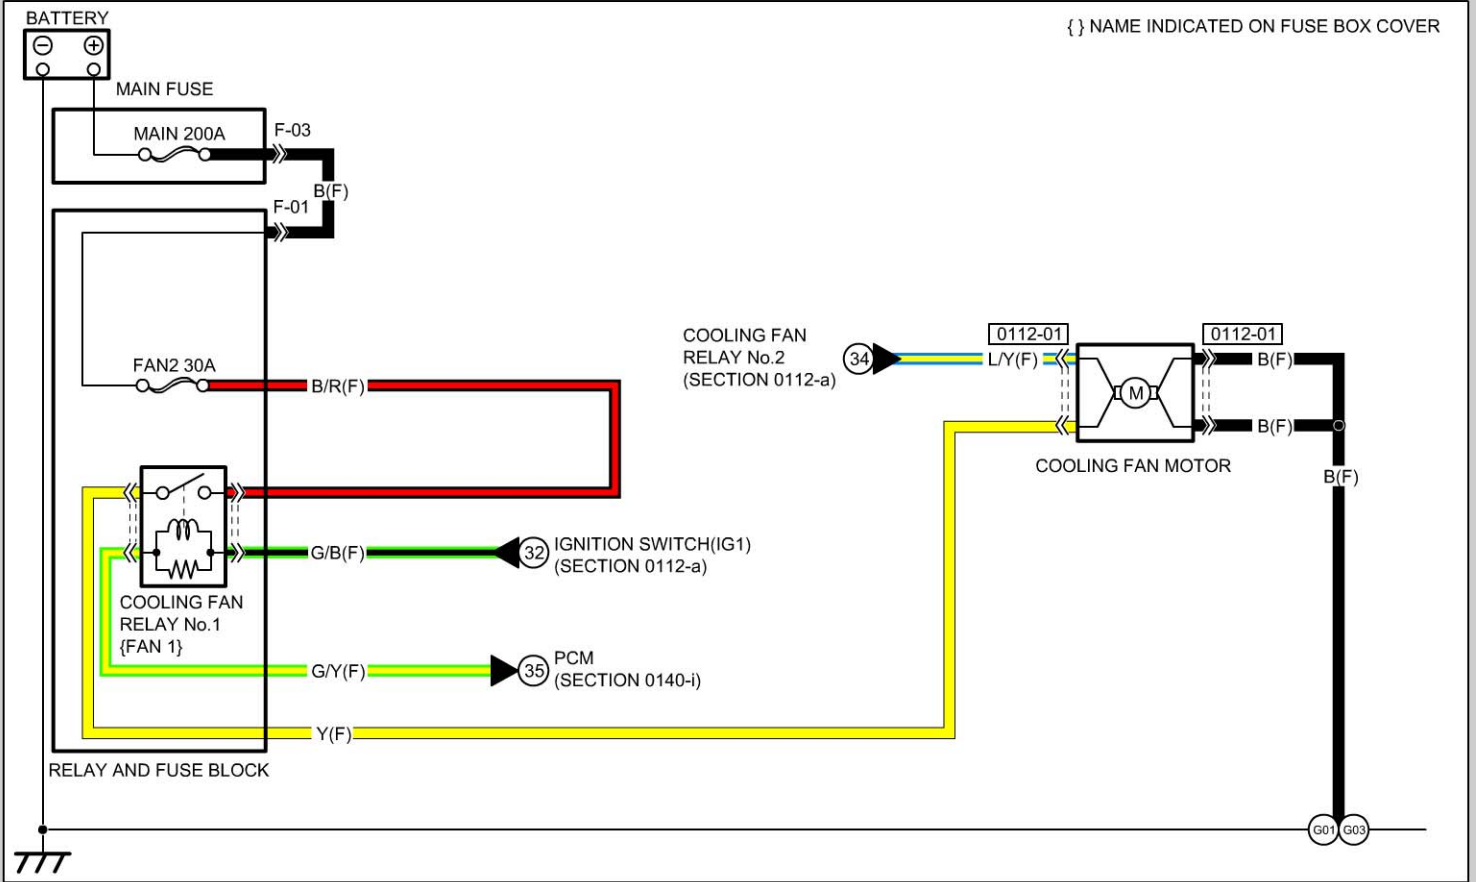

FLOW
PRINT

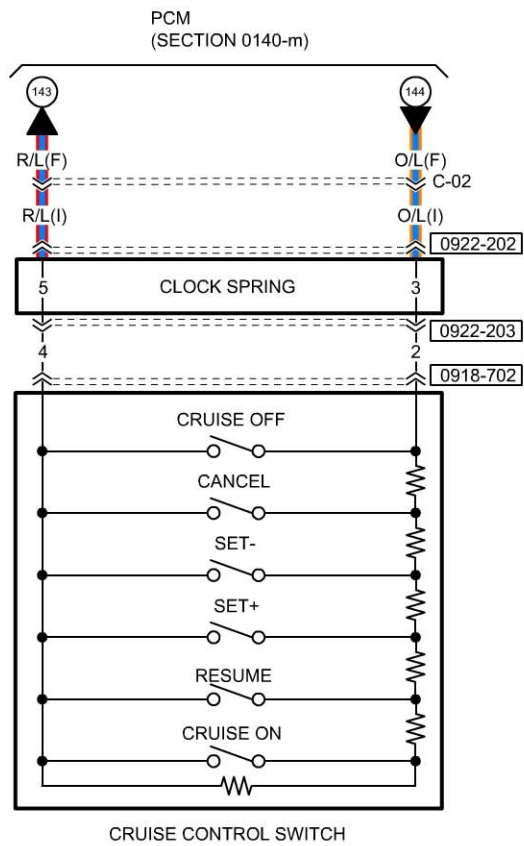



FLOW

PRINT


Upper dashboard connectors/ground points location

Connector name (place mouse pointer on connector to display name)

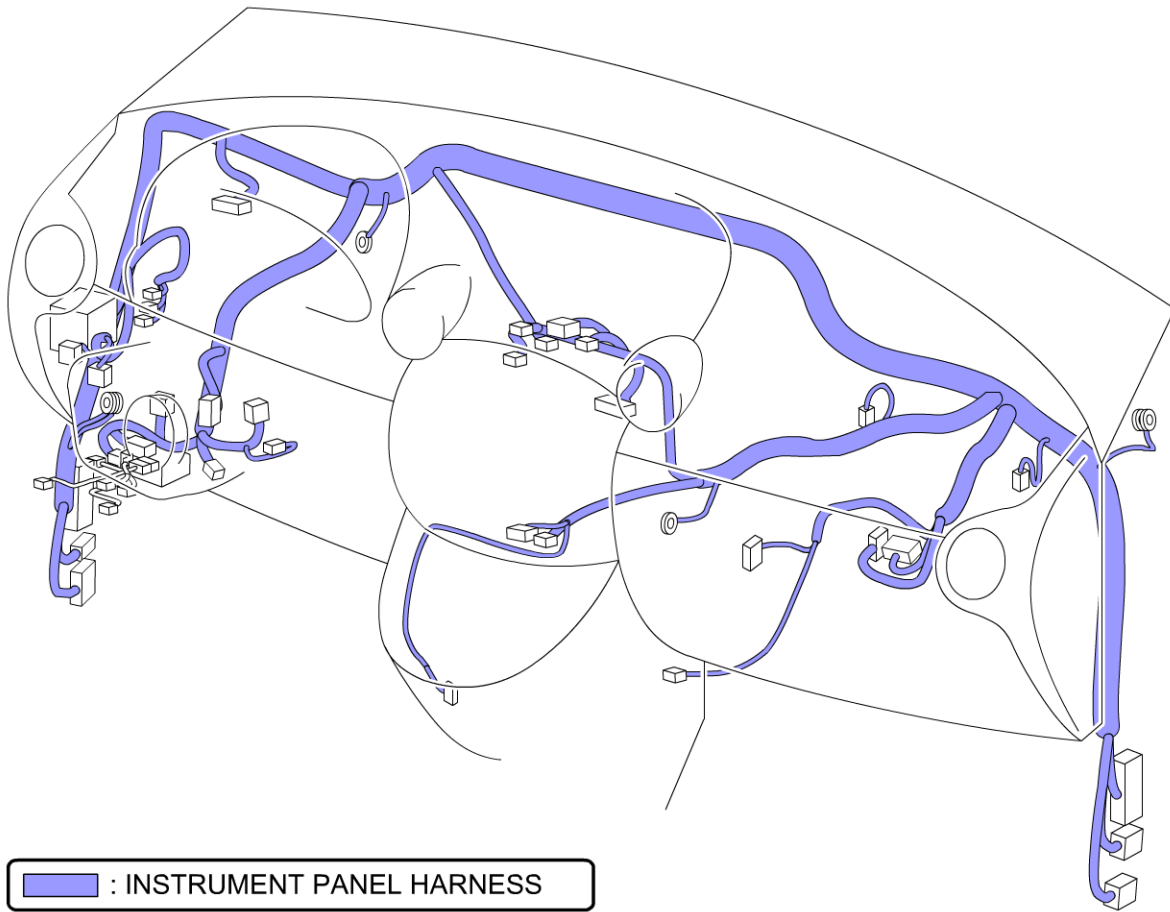


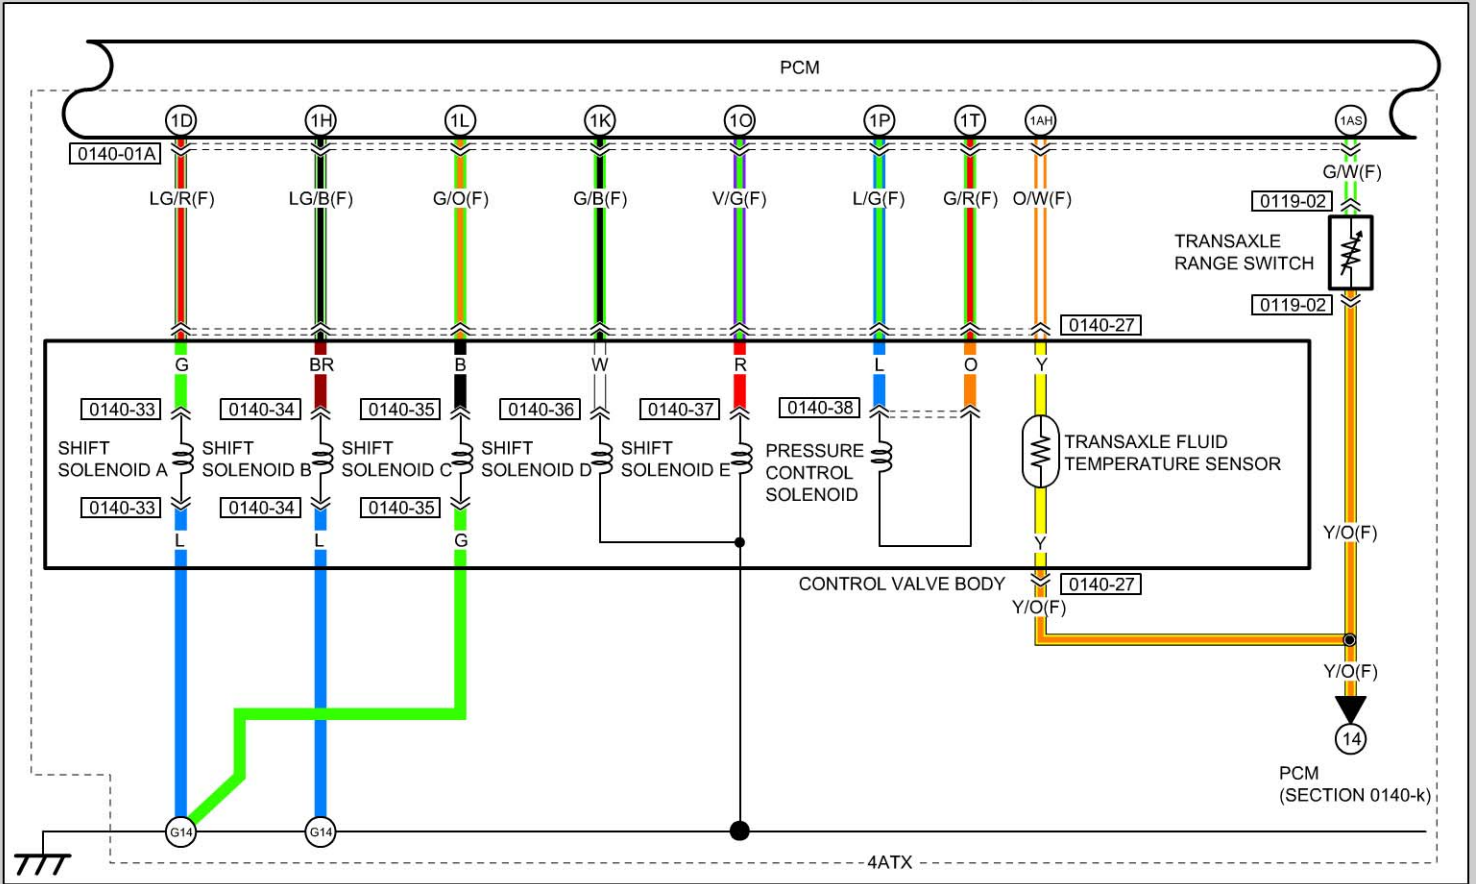



PRINT

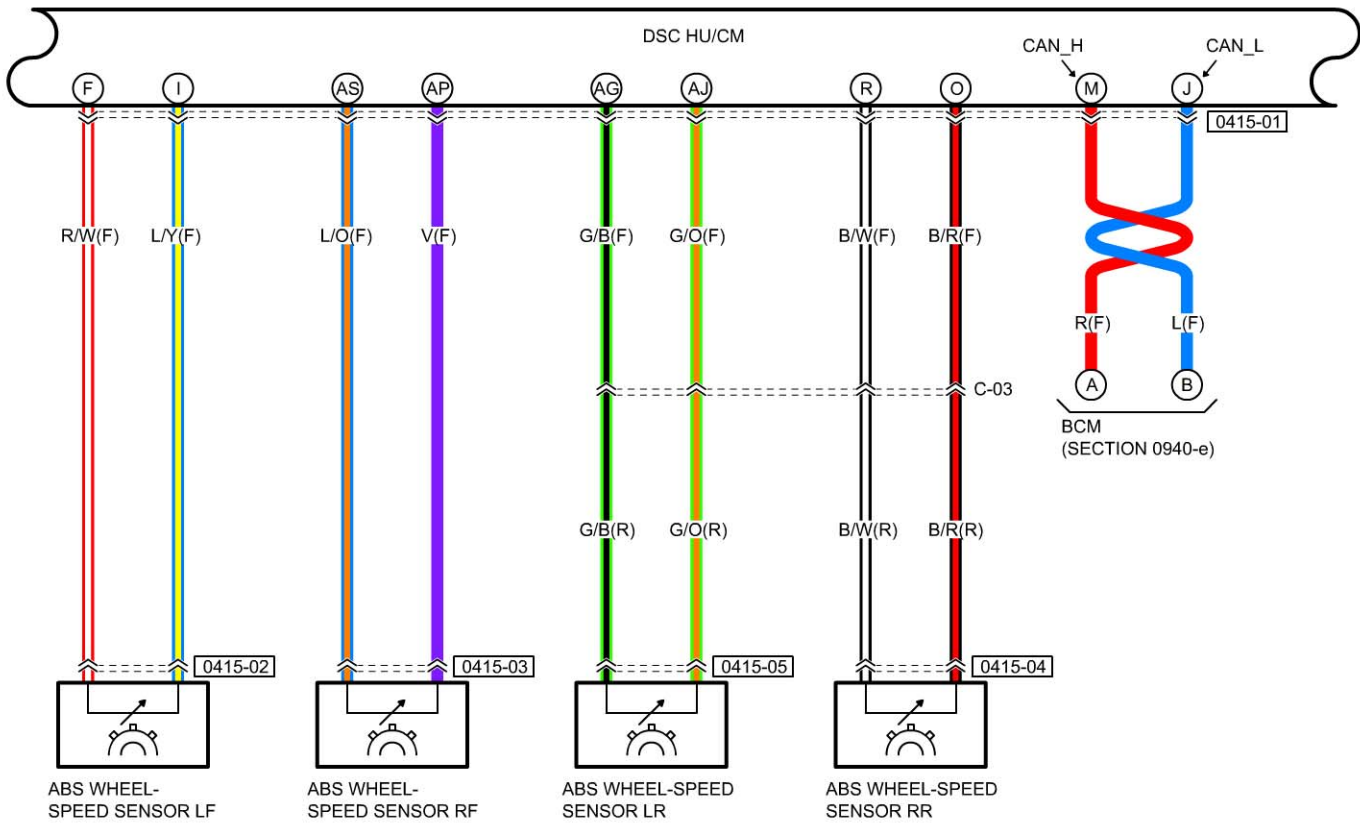


PRINT

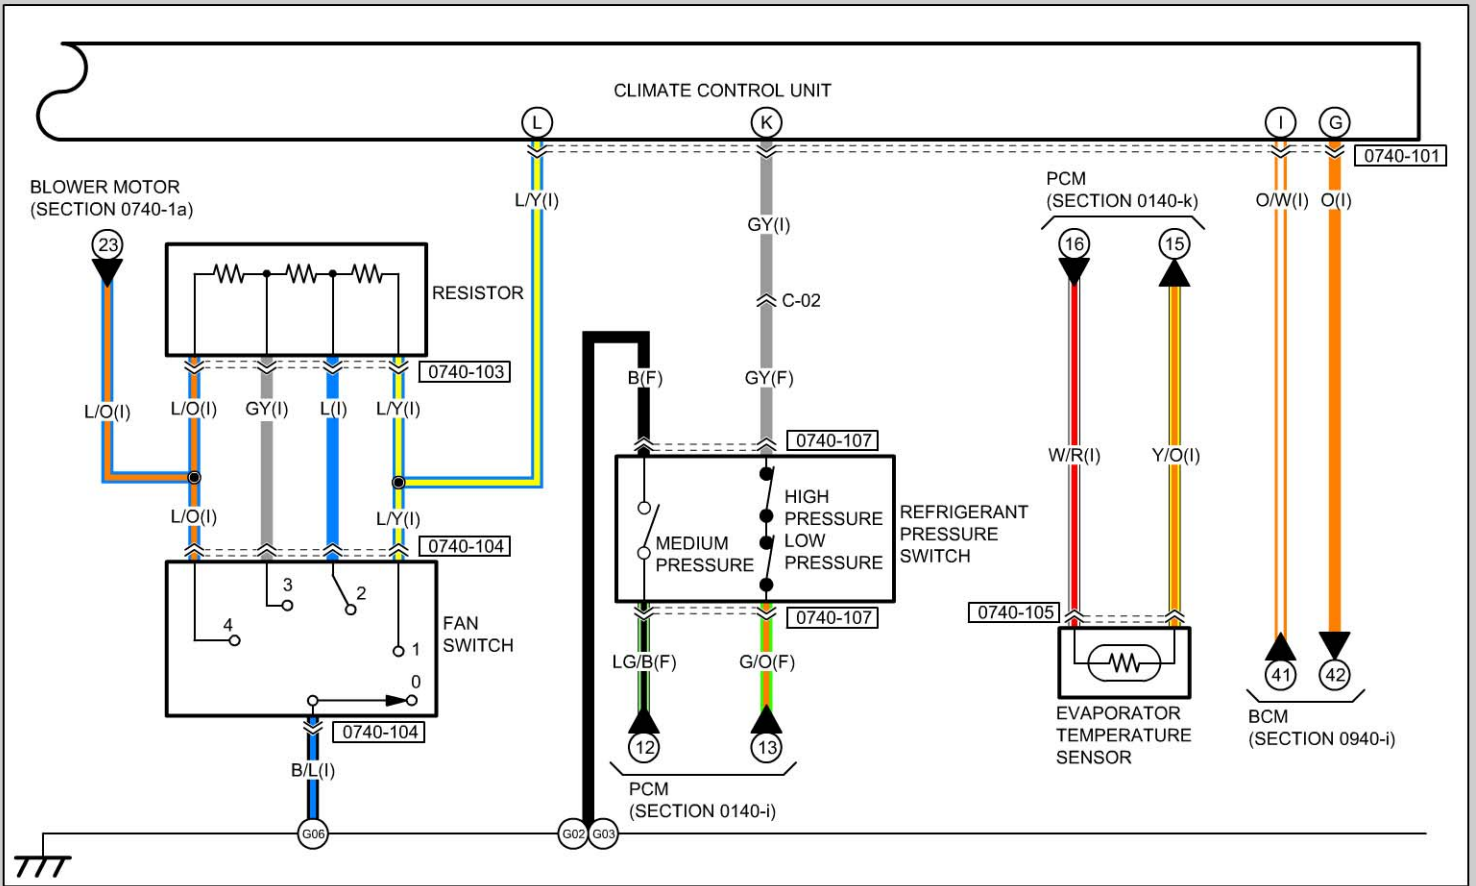

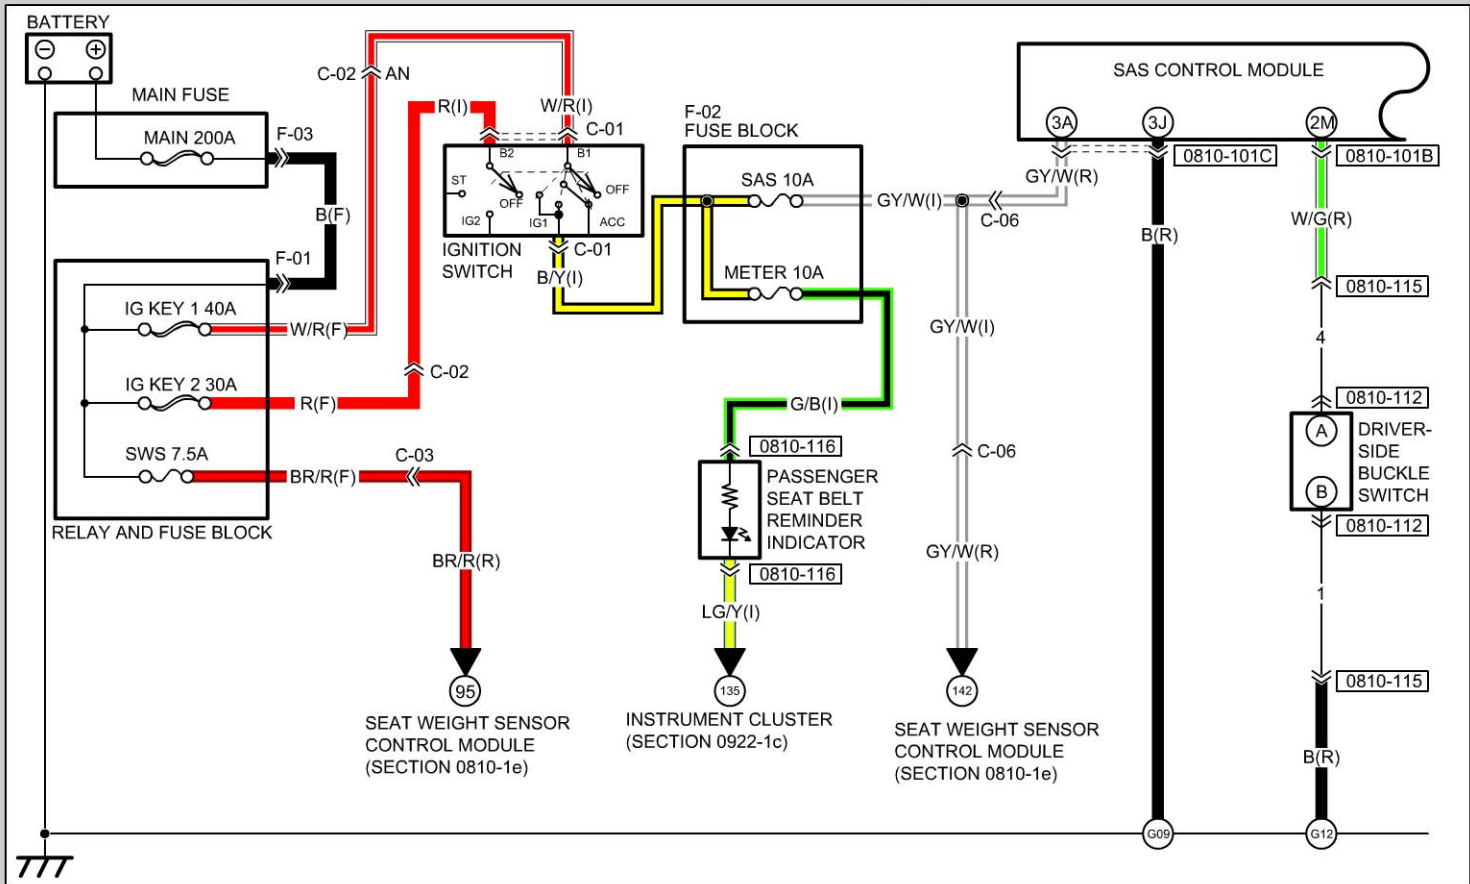


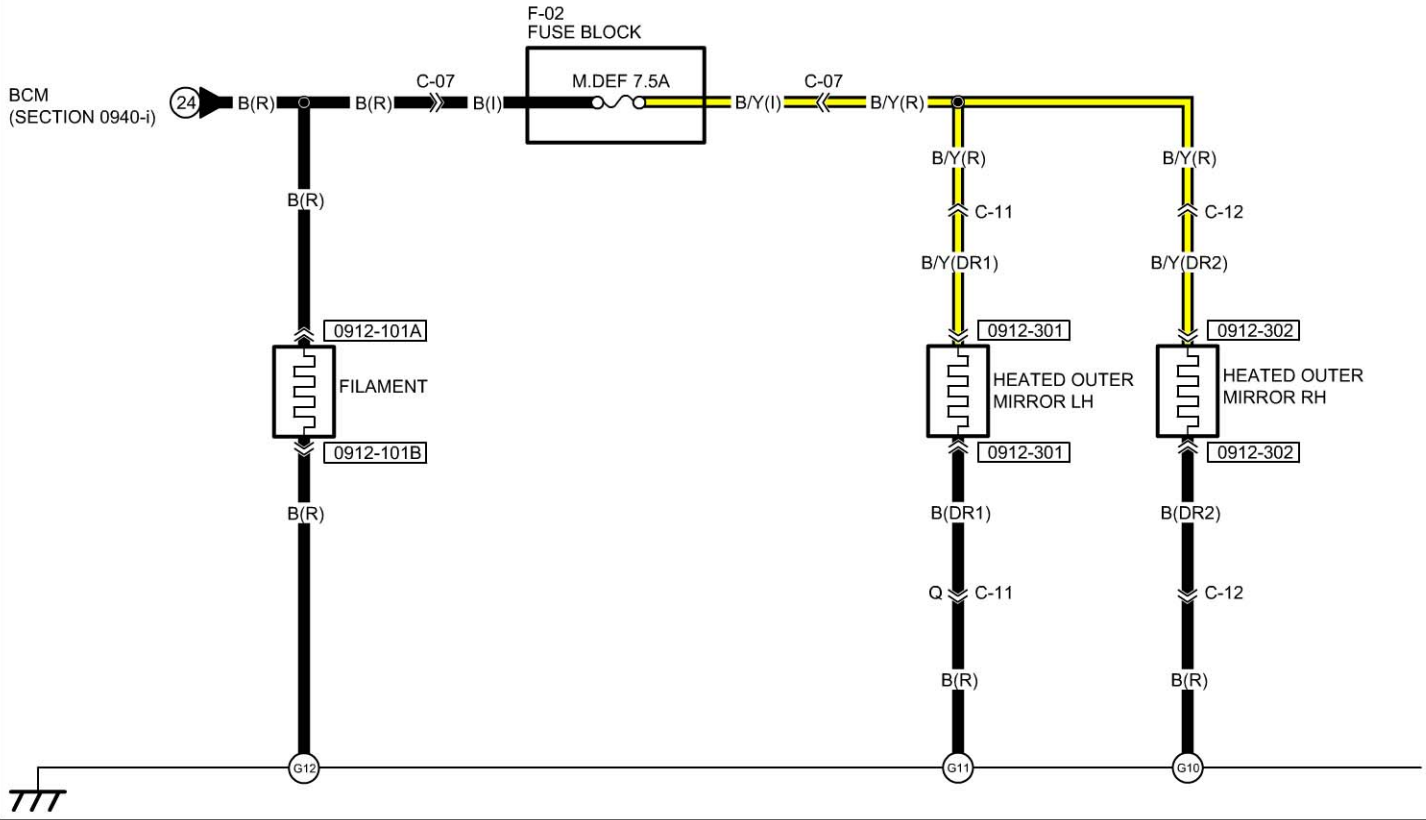


FLOW
PRINT

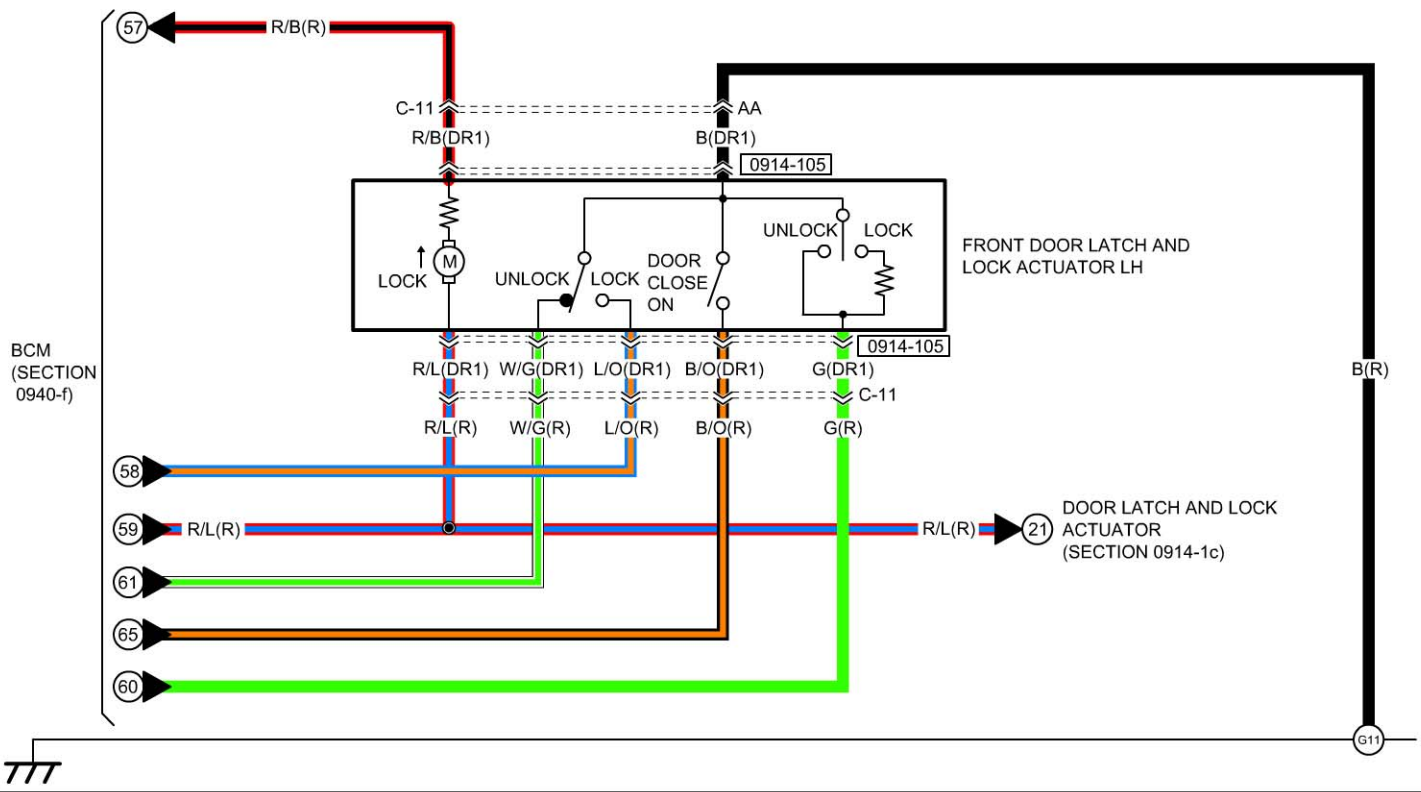

{ } NAME INDICATED ON FUSE BOX COVER

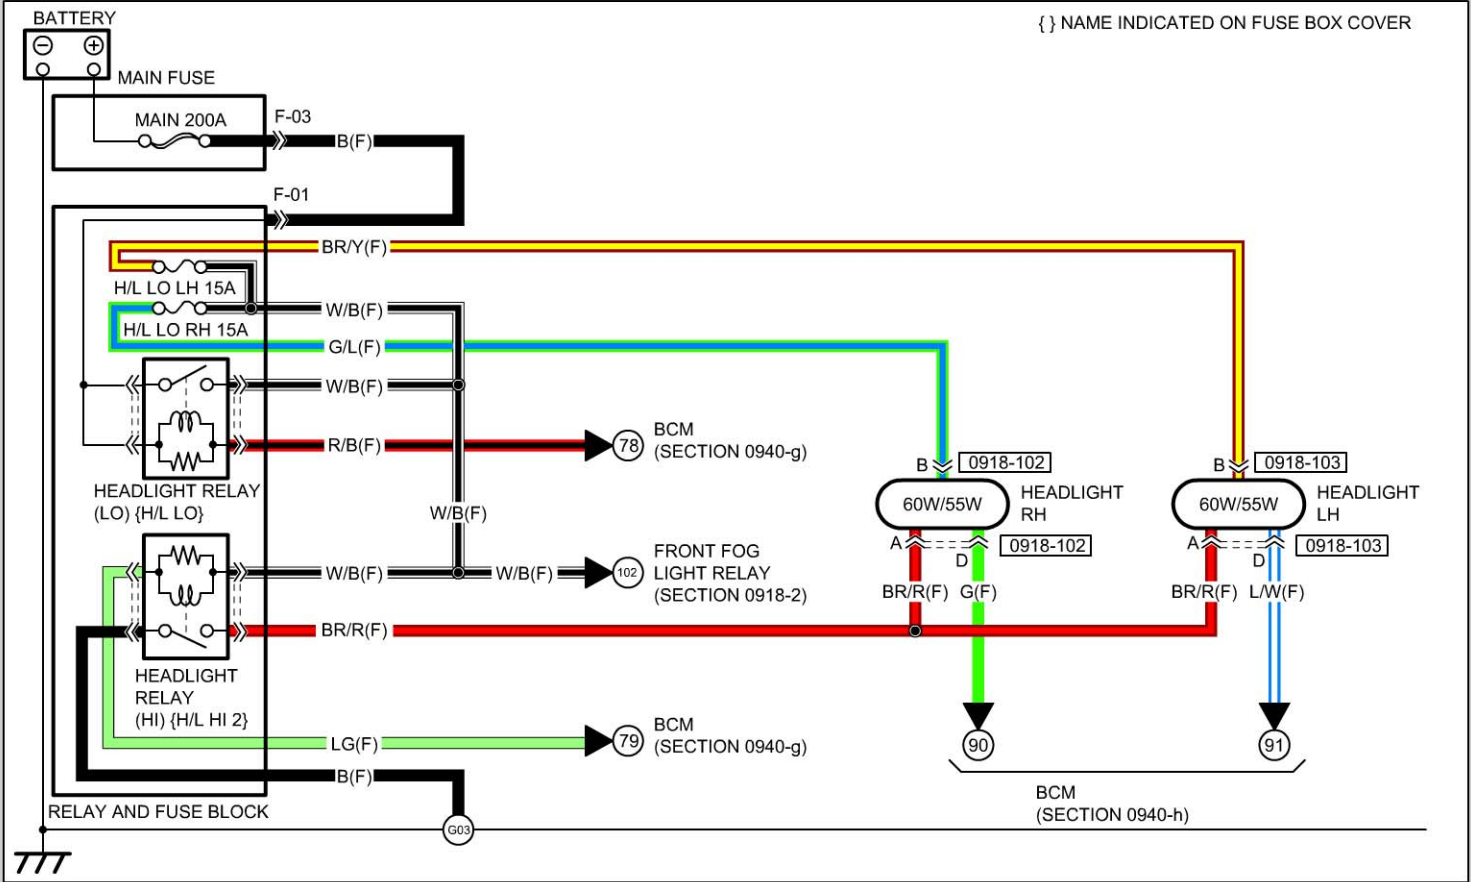

FLOW
PRINT

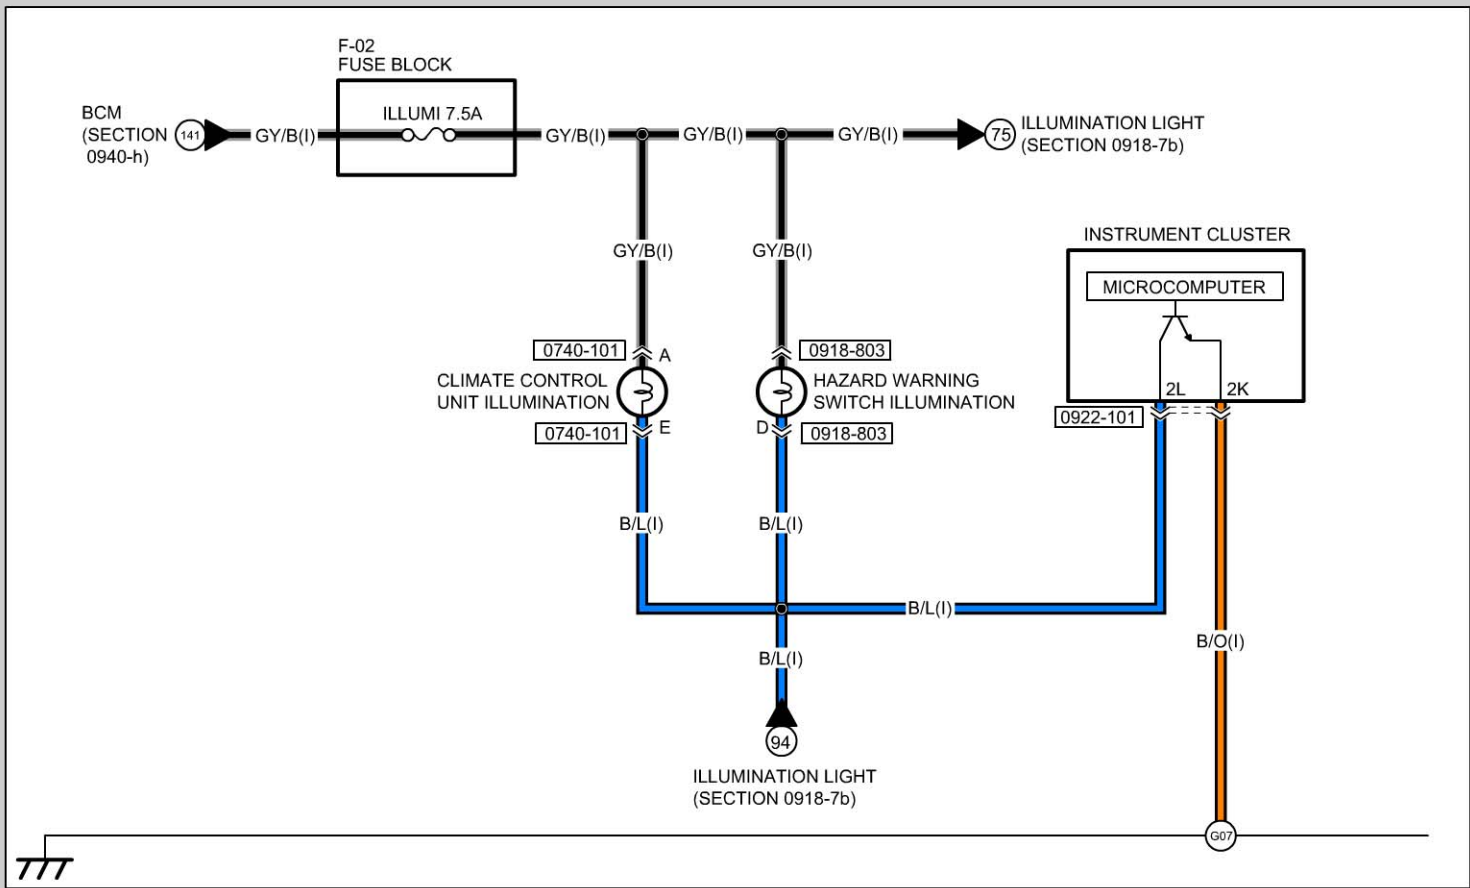

FLOW
PRINT

