



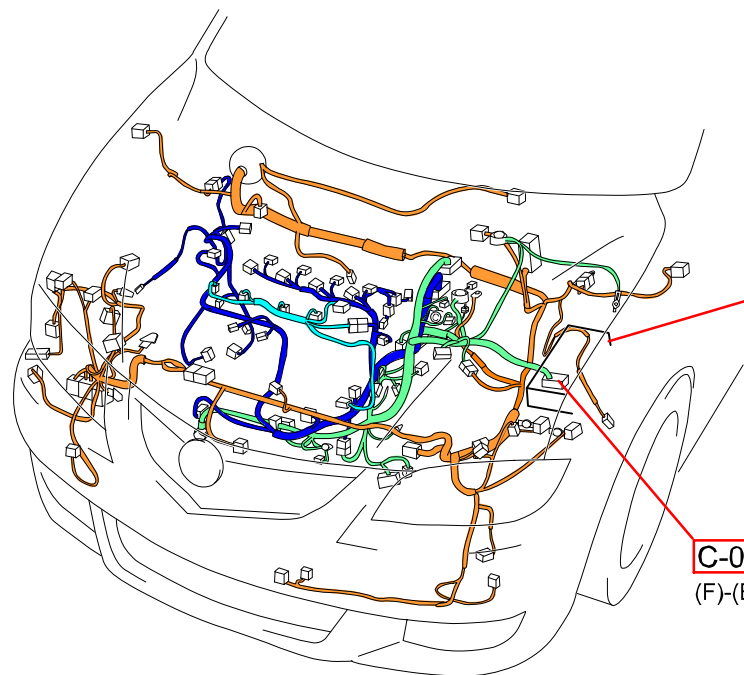

MAIN FUSE BLOCK
(REFER TO 00F SECTION)

F-01

C-02
(F)-(E)

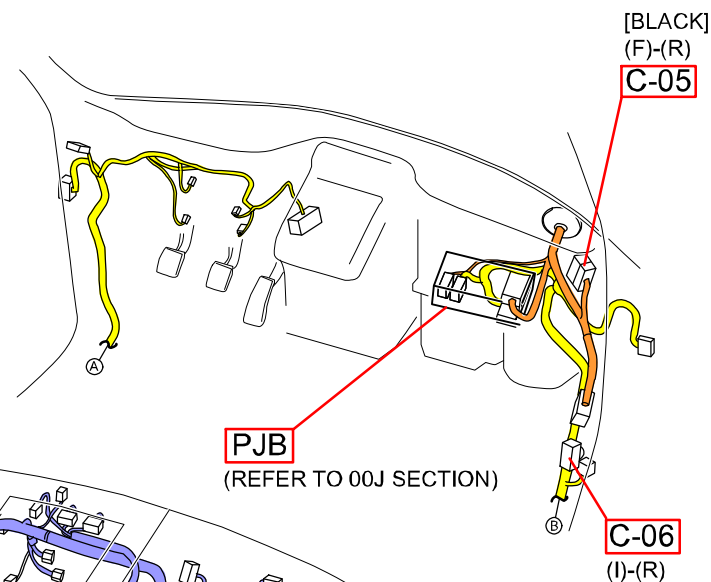

[BLACK]
(F)-(R)
C-05

PJB
(REFER TO 00J SECTION)


C-06
(I)-(R)


7

D-01
DATA LINK CONNECTOR-2
[BLACK]

8


C-06
(I)-(R)

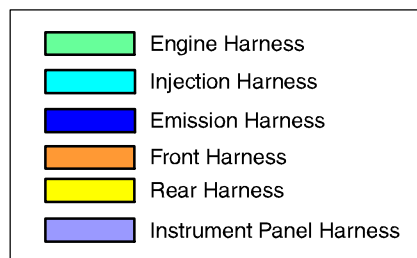

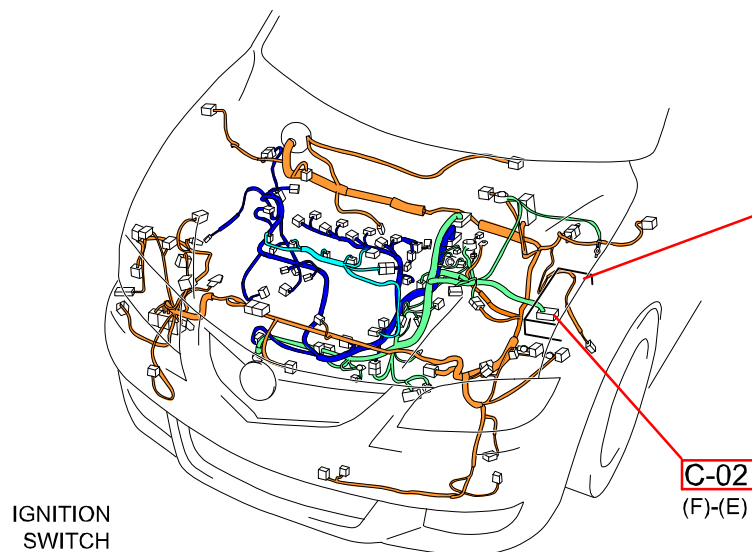


F-01
MAIN FUSE BLOCK
0114-01
FULE PUMP RELAY
(REFER TO 00F SECTION)

IGNITION
SWITCH
C-03

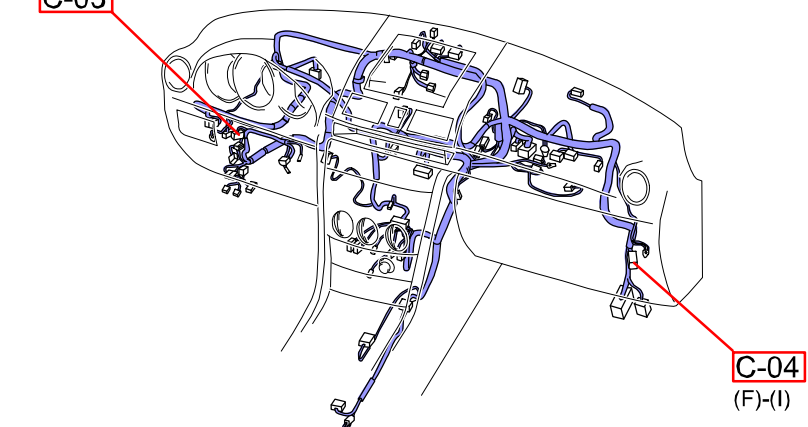


C-04
(F)-(I)

	Front Harness		Rear No. 2 - 4 Harness
	Rear Harness		Interior Light Harness
	Engine Harness		Door Harness (DR1 & DR2)
	Injection Harness		Power Sliding Doors (DR3 & DR4)
	Emission Harness		

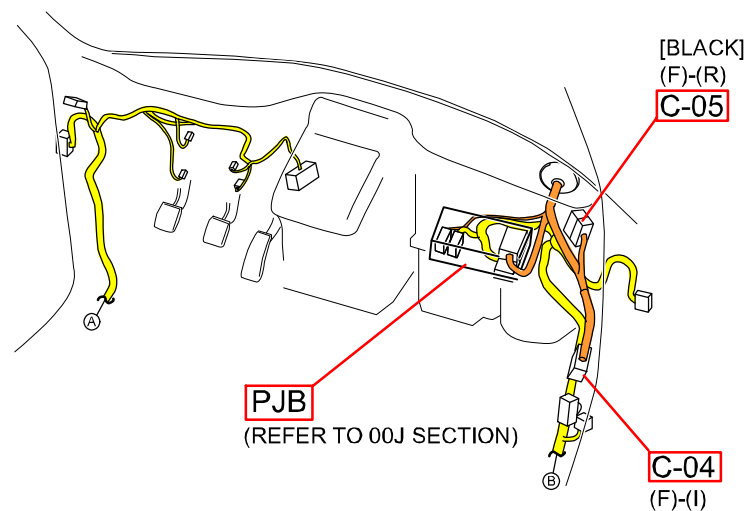

PJB
(REFER TO 00J SECTION)

C-04
(F)-(I)

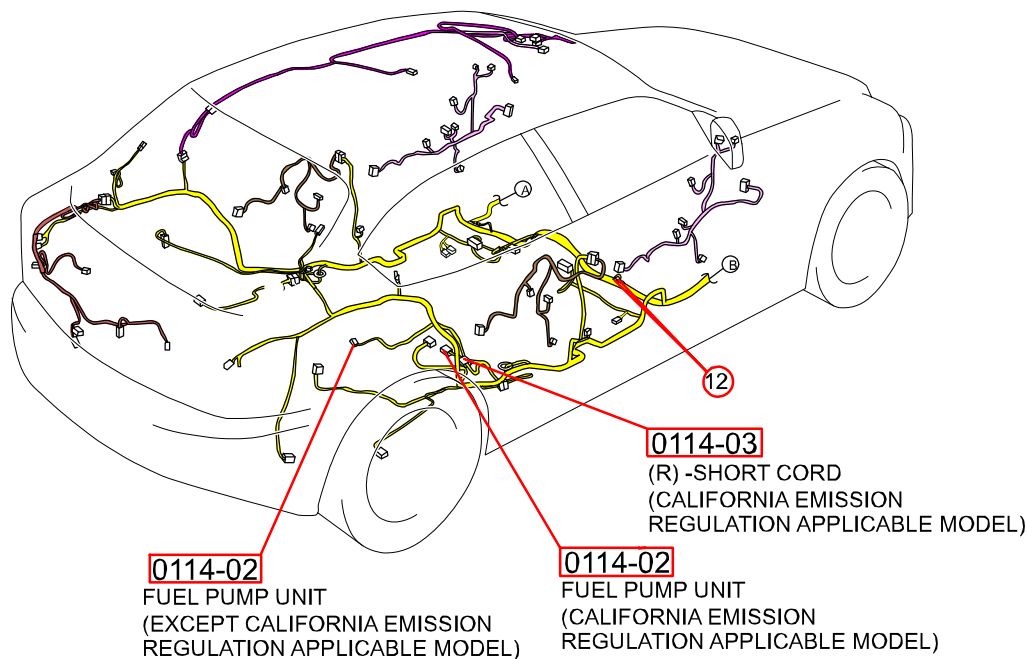


0114-02
FUEL PUMP UNIT
(EXCEPT CALIFORNIA EMISSION
REGULATION APPLICABLE MODEL)

0114-03
(R) -SHORT CORD
(CALIFORNIA EMISSION
REGULATION APPLICABLE MODEL)

0114-02
FUEL PUMP UNIT
(CALIFORNIA EMISSION
REGULATION APPLICABLE MODEL)

MAIN FUSE 150A

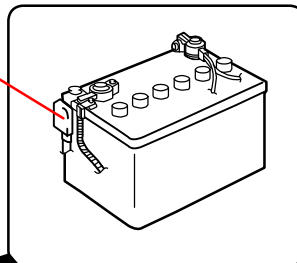

F-01
MAIN FUSE BLOCK
0119-102
STARTER RELAY
(REFER TO 00F
SECTION)

C-02
(F)-(E)

0119-101
STARTER

0119-103
TRANSAXLE RANGE SWITCH
[BLACK]

TRANSAXLE RANGE SWITCH
Detects selector lever position.

- Instrument Panel Harness
- Rear Harness
- Front Harness
- Engine Harness
- Injection Harness
- Emission Harness

(R)-SHORT CORD

C-25


[BLACK]
(F)-(R)
C-05

IGNITION SWITCH

C-03


C-04
(F)-(I)

C-04
(F)-(I)

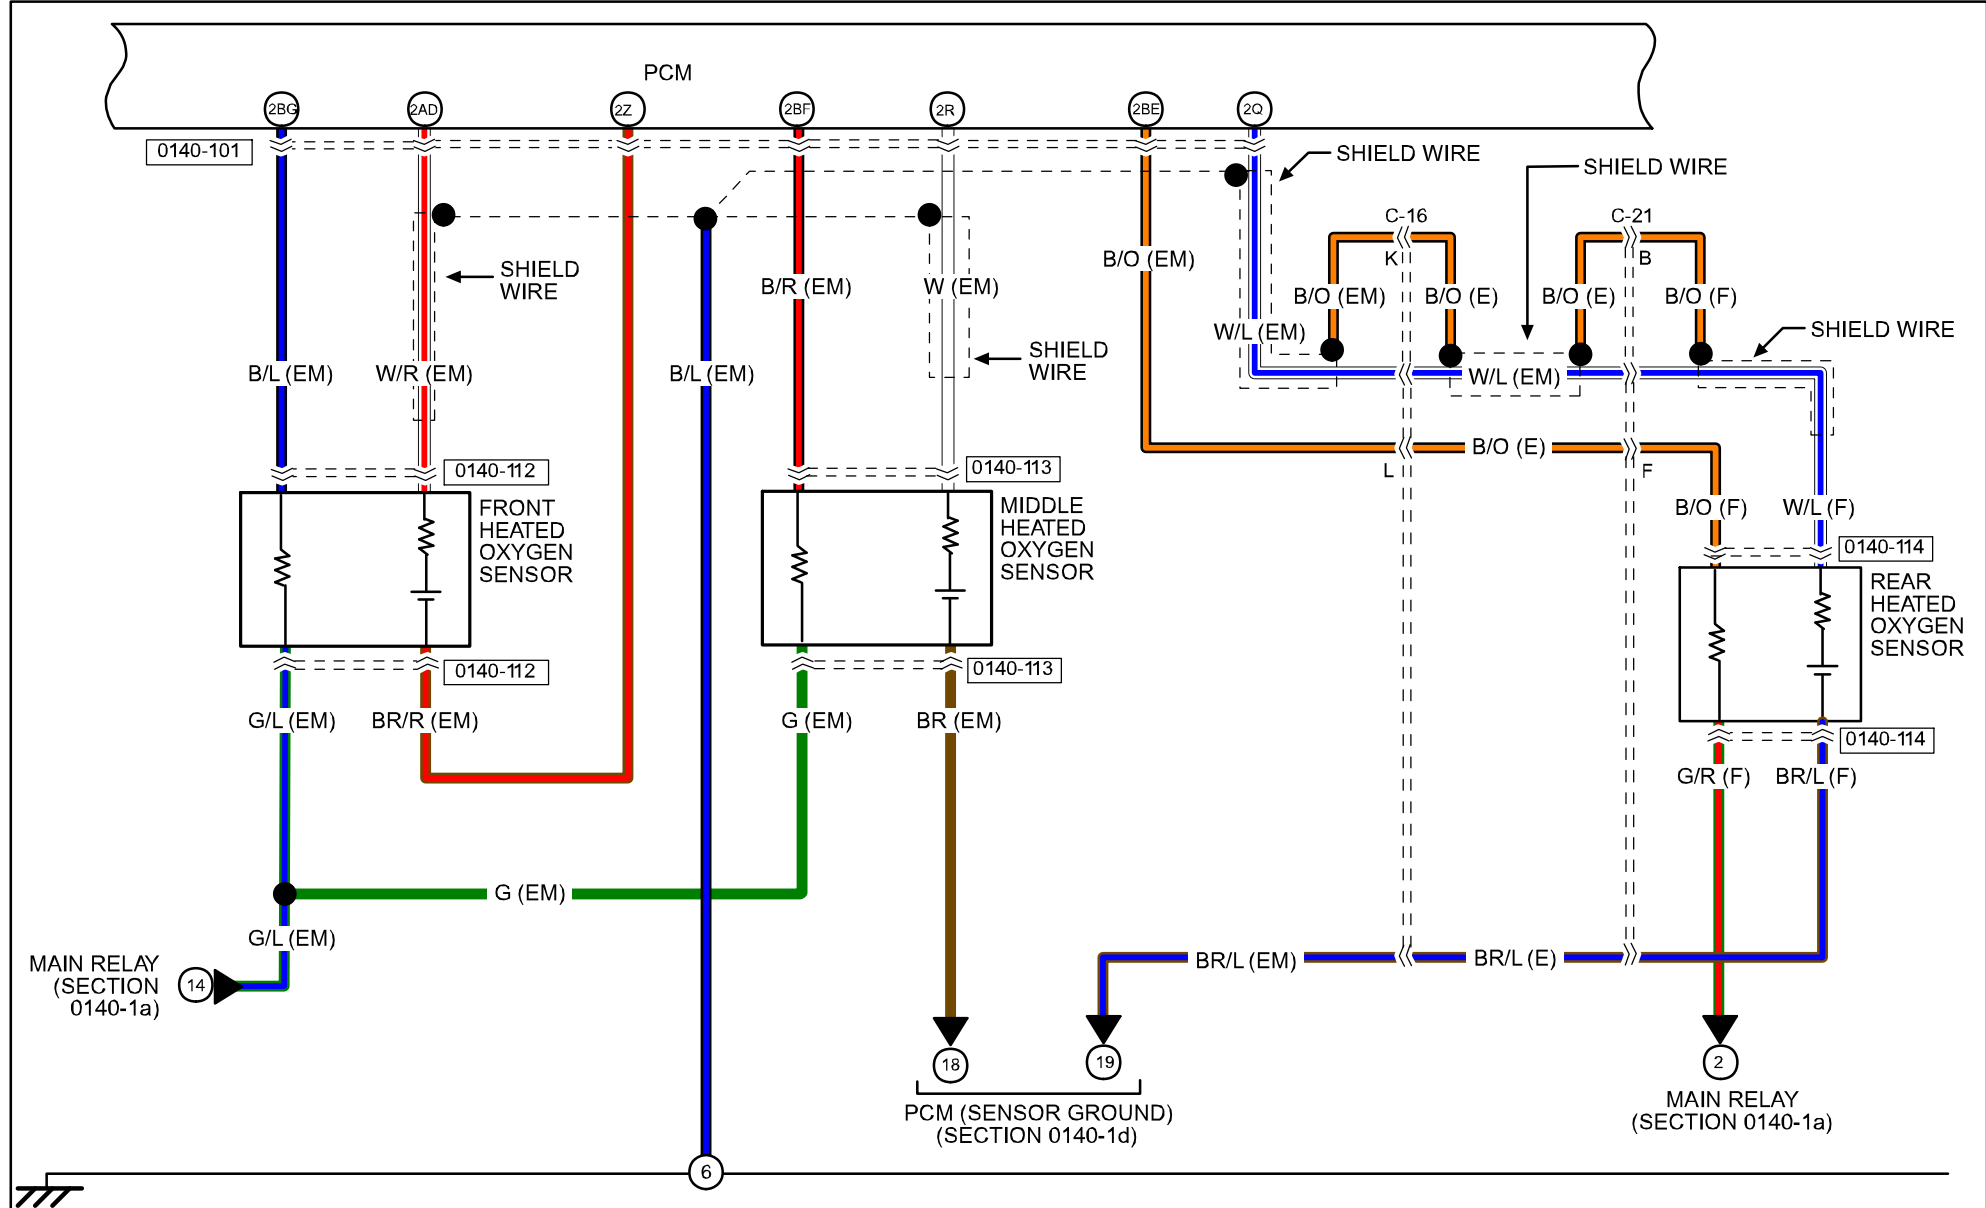


0140-101 PCM

(E)

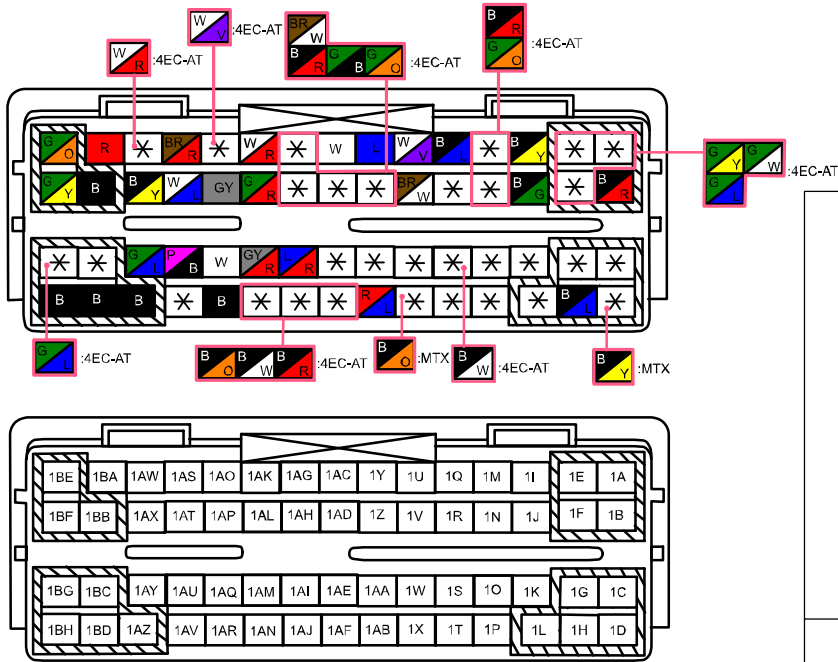

0119-103 TRANSAXLE RANGE SWITCH (E)


 


(4EC-AT)

0140-134 ENGINE (E) - TRANSAXLE SHORT CORD



(E)

(TRANSAXLE SHORT CORD)

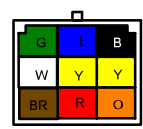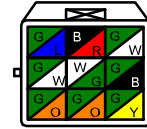


(ATX)

E H

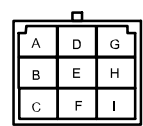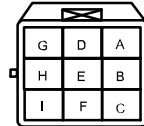

0140-135 SOLENOID VALVE (TRANSAXLE SHORT CORD)

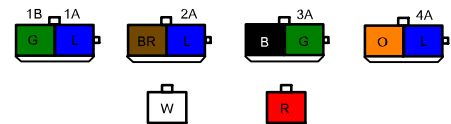

(ATX)

PCM (1AH)

AT: with IG SW ON, 4.6V at P, 3.9V at R, 3.2V at N, 2.5V at D, 2.5V at M ranges.

Transaxle Fluid Temperature Sensor

Resistance: -20°C (-4°F) 236 - 324 kΩ; 20°C (68°F) 33.5 - 42 kΩ; 60°C (140°F) 7.08 - 8.17 kΩ; 120°C (248°F) 1.13 - 1.28 kΩ

Control Valve Body

Resistance with ATF -40-150°C (-40-302°F)

Shift Solenoid A: A-GND 1-4.2Ω


Shift Solenoid B: C-GND 1-4.2Ω


Shift Solenoid C: G-GND 1-4.2Ω

Shift Solenoid D: B-GND 10.9-26.2Ω


Shift Solenoid E: F-GND 10.9-26.2Ω

Pressure Control Solenoid : D-I 2.4-7.3Ω

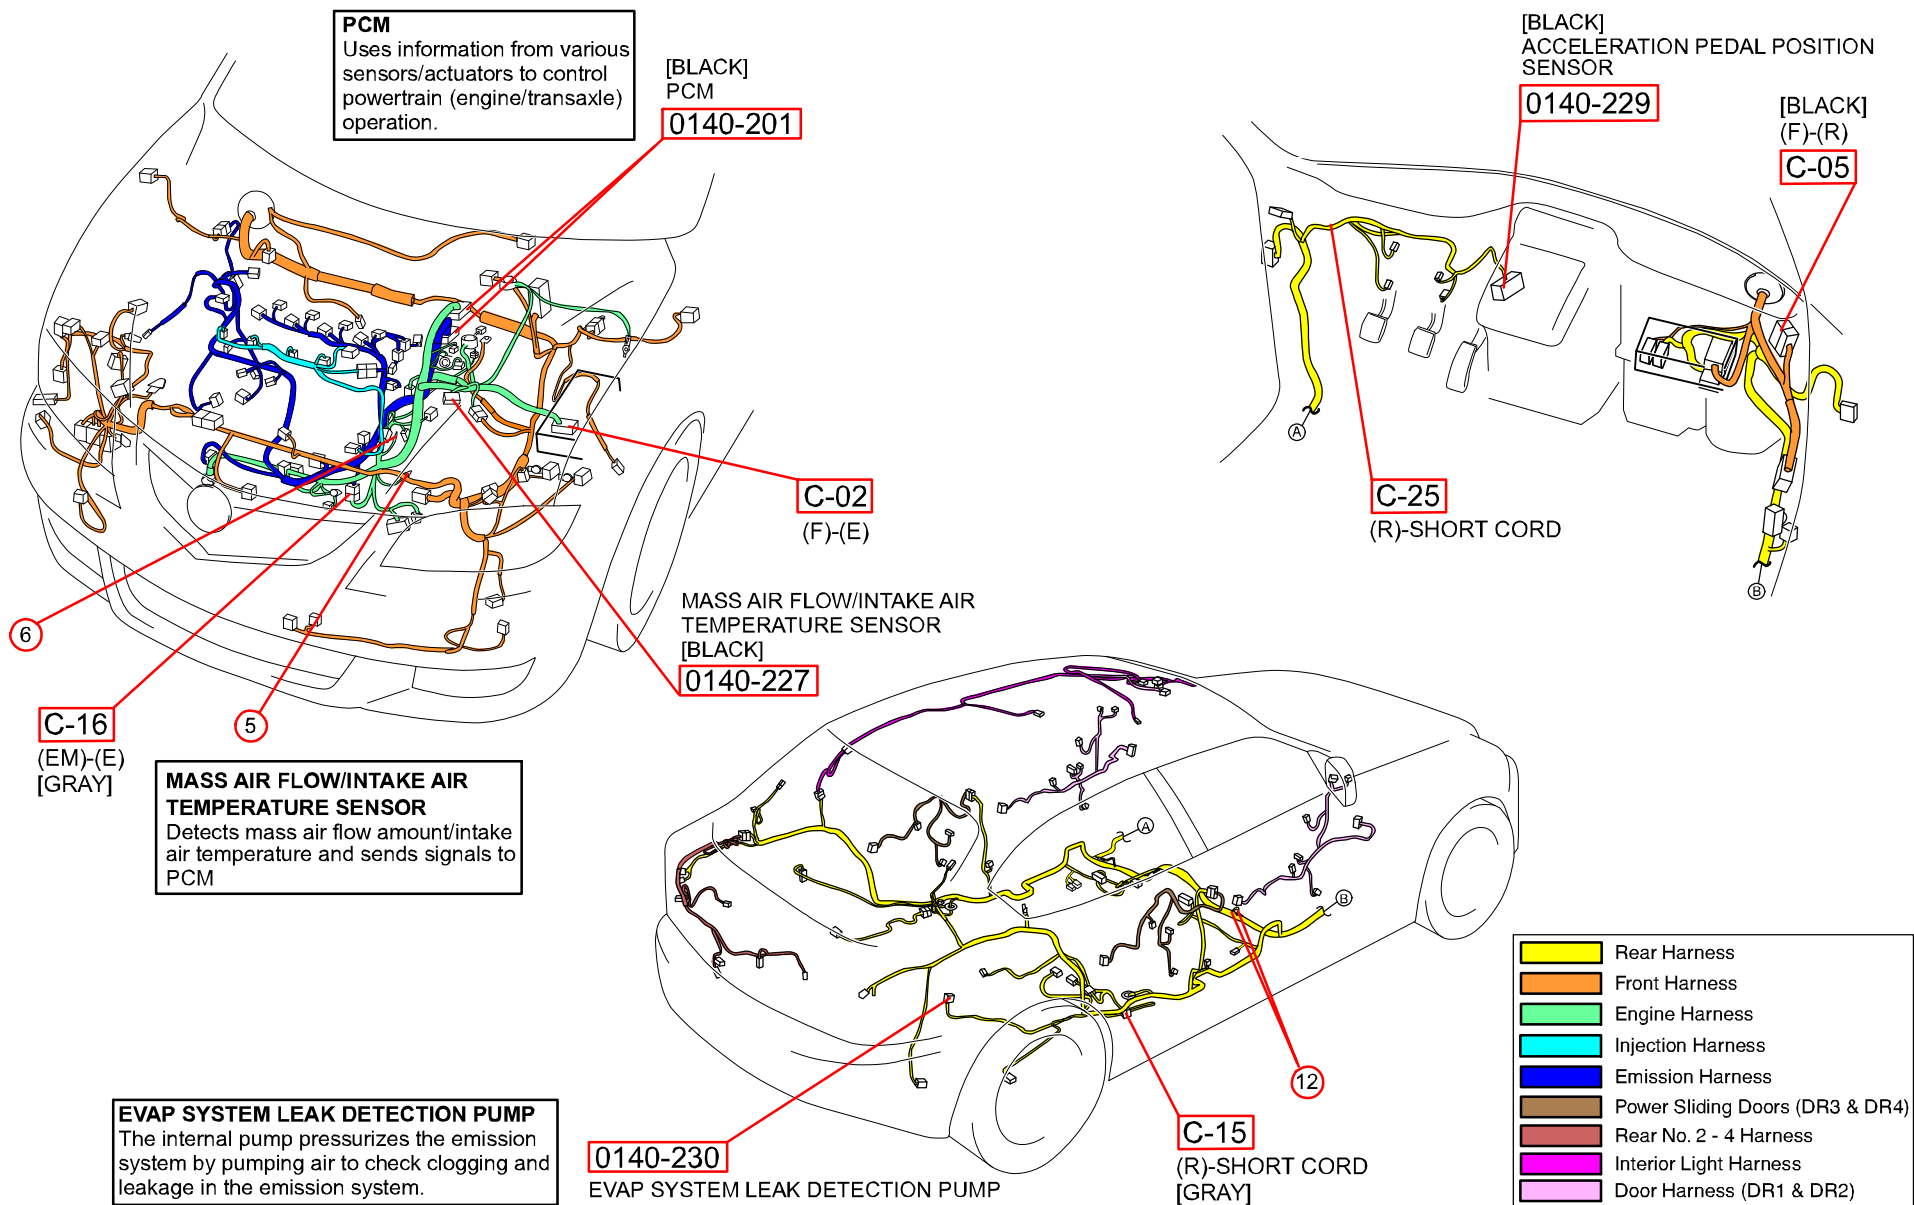

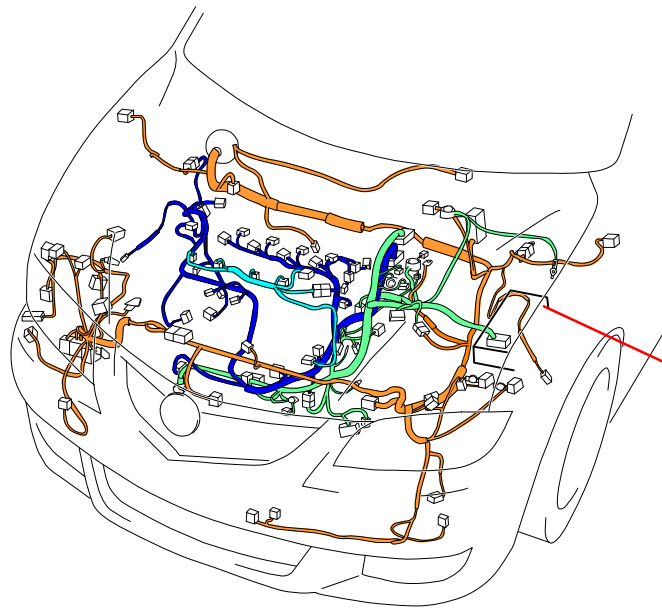


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

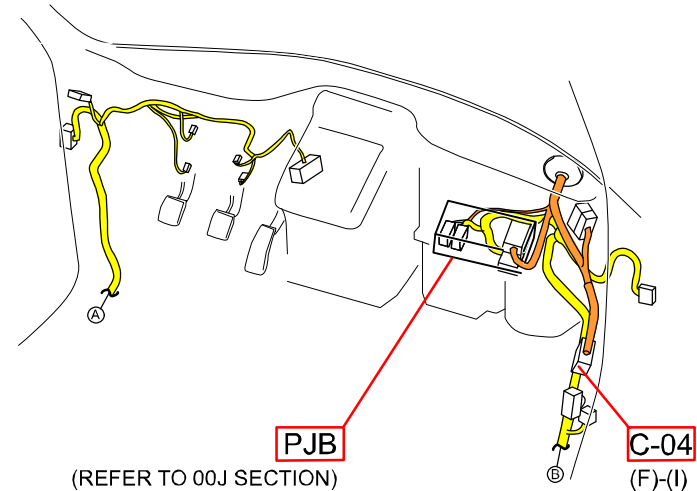

PJB

(REFER TO 00J SECTION)


C-04
(F)-(I)

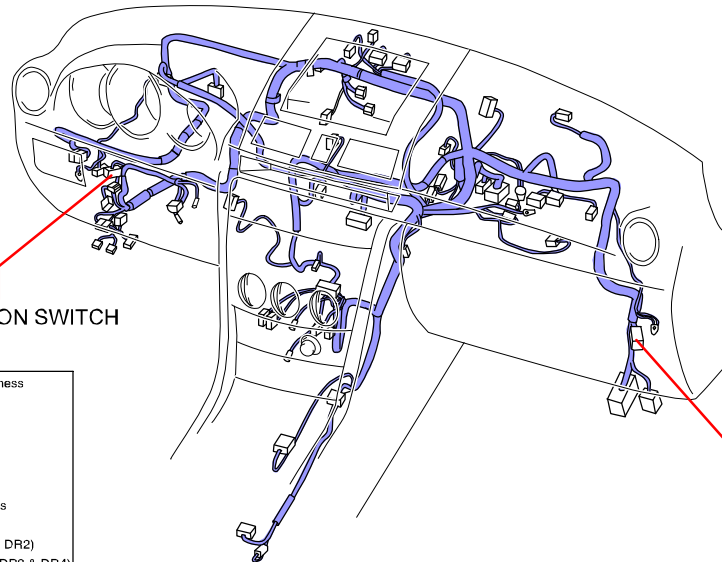

C-03
IGNITION SWITCH


Instrument Panel Harness
Front Harness
Rear Harness
Engine Harness
Injection Harness
Emission Harness
Rear No. 2 - 4 Harness
Interior Light Harness
Door Harness (DR1 & DR2)
Power Sliding Doors (DR3 & DR4)

C-04
(F)-(I)

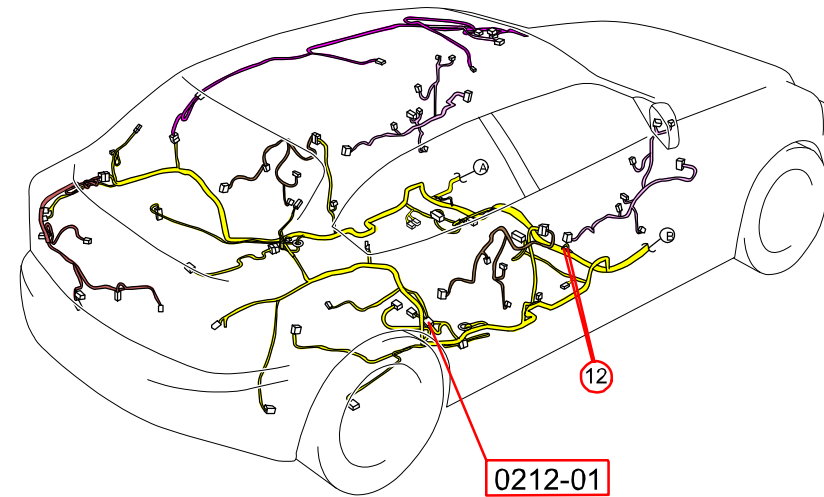


0212-01

TIRE PRESSURE MONITORING
SYSTEM CONTROL MODULE

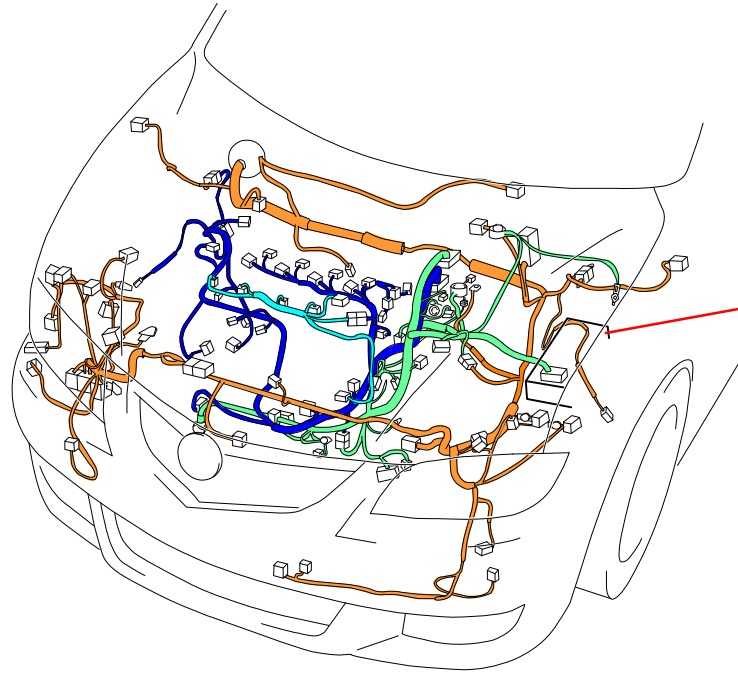

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

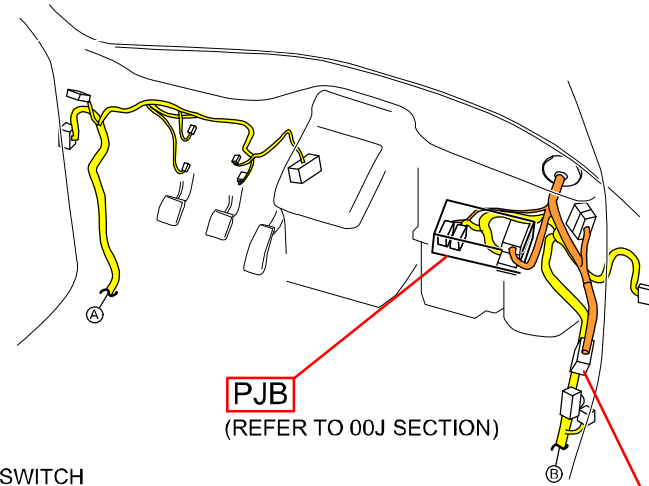

PJB
(REFER TO 00J SECTION)

C-04
(F)-(I)

IGNITION SWITCH

C-03

7

0518-02
KEY INTERLOCK SOLENOID

8


C-04
(F)-(I)

0518-01
SELECTOR LEVER COMPONENT

- | | |
|--|--------------------------|
|  | Engine Harness |
|  | Injection Harness |
|  | Emission Harness |
|  | Instrument Panel Harness |
|  | Front Harness |
|  | Rear Harness |

A/C COMPRESSOR CONTROL

0740-3

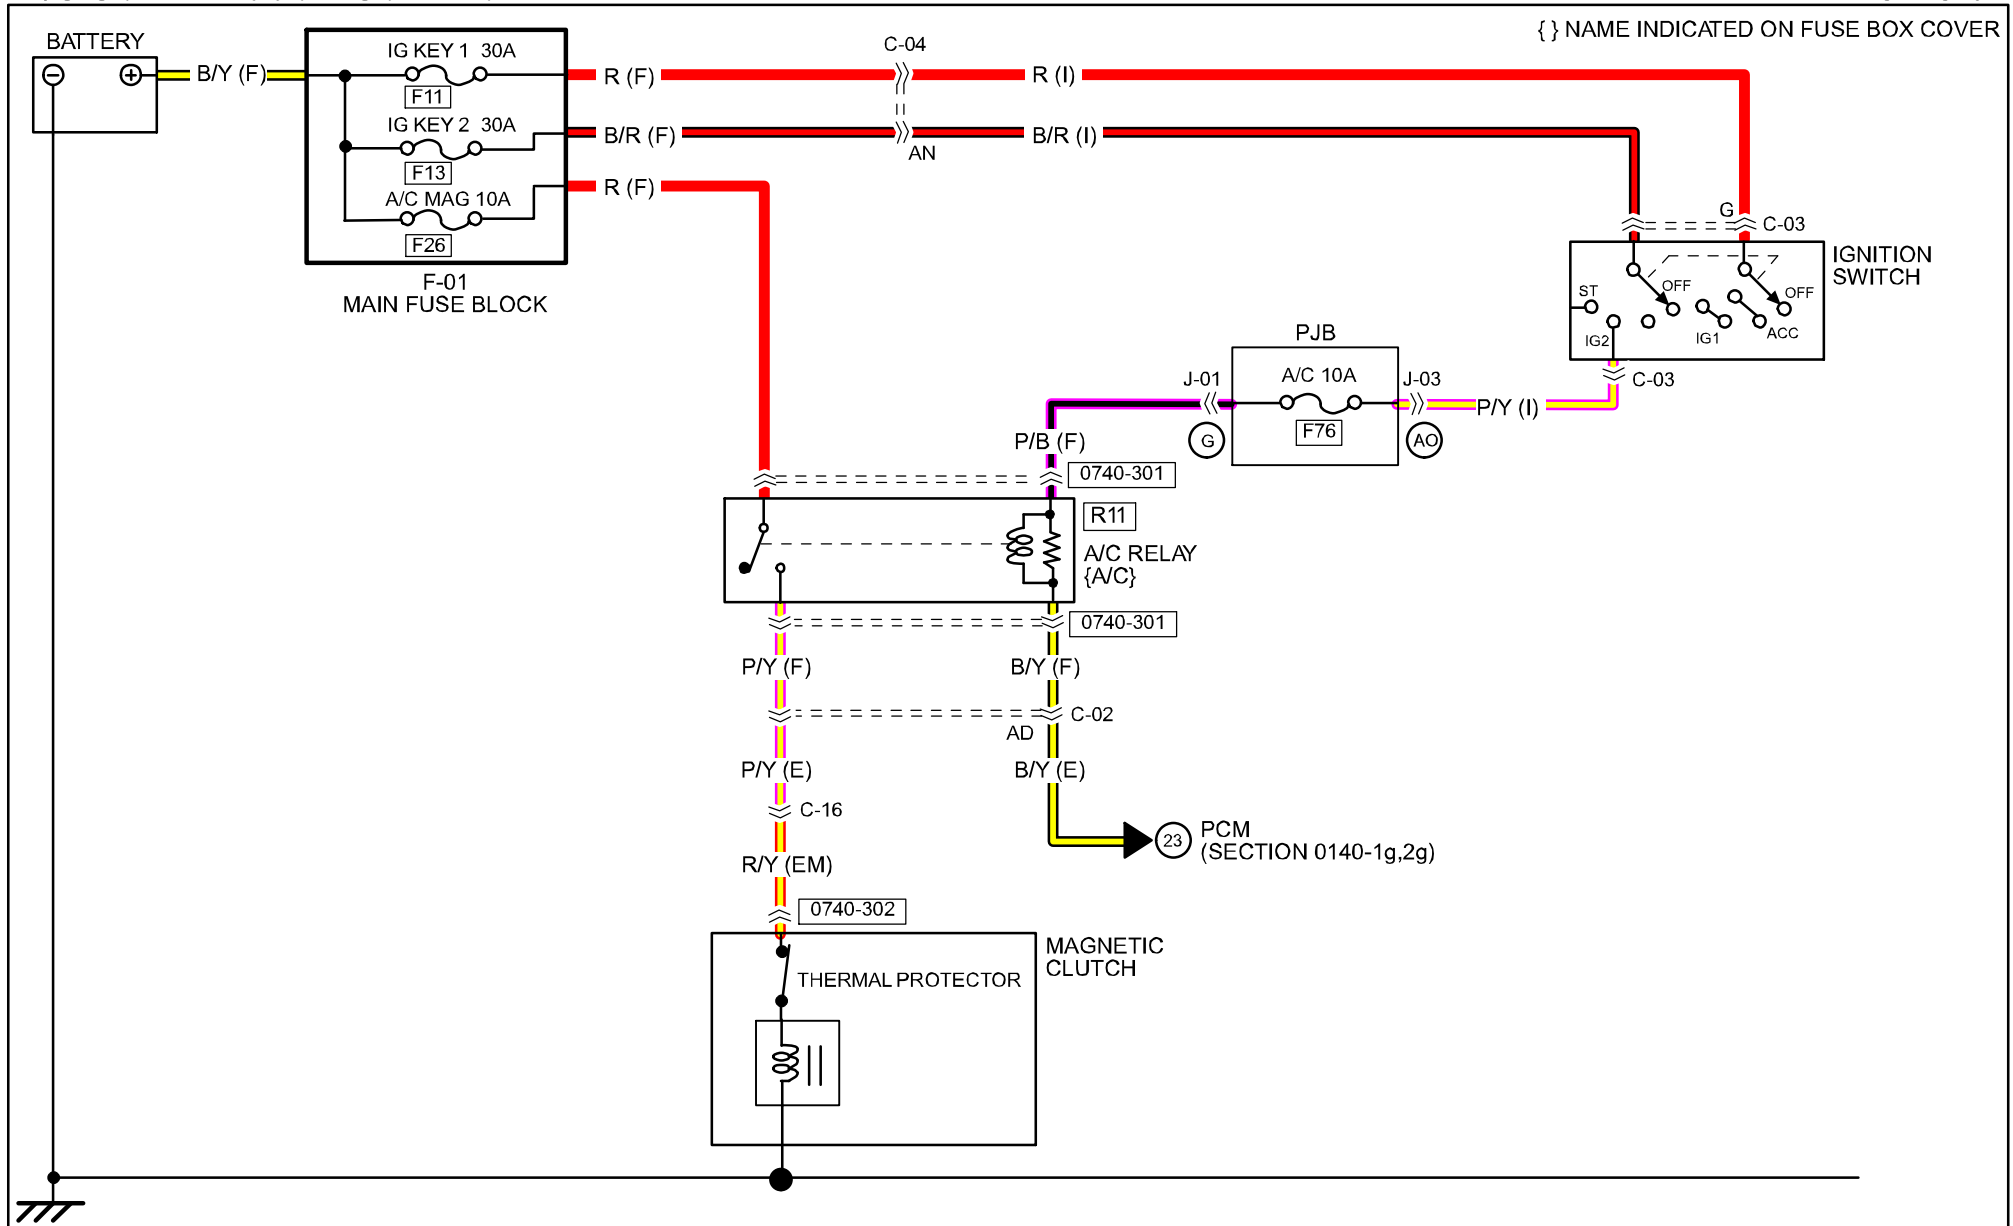

[ORANGE]
DRIVER-SIDE CURTAIN AIR BAG MODULE

0810-108


(R)-SHORT CORD
C-19

SAS CONTROL MODULE
0810-101

(R)-SHORT CORD
C-20

SAS CONTROL MODULE

Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.

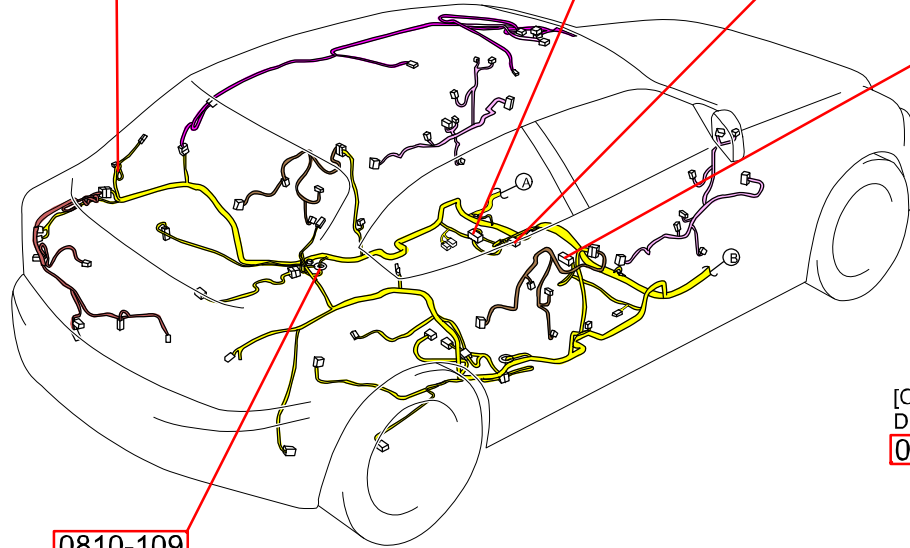

0810-109

PASSENGER-SIDE CURTAIN AIR BAG MODULE
[YELLOW]

[4 door]

SAS CONTROL MODULE

Monitors shock level when collisions occur. Also, monitors air bag electrical system components and connections to prevent mis-operation or no operation of the air bag.

[ORANGE]
DRIVER-SIDE CURTAIN AIR BAG MODULE
0810-108

(R)-SHORT CORD


C-19

SAS CONTROL MODULE

0810-101

(R)-SHORT CORD

C-20



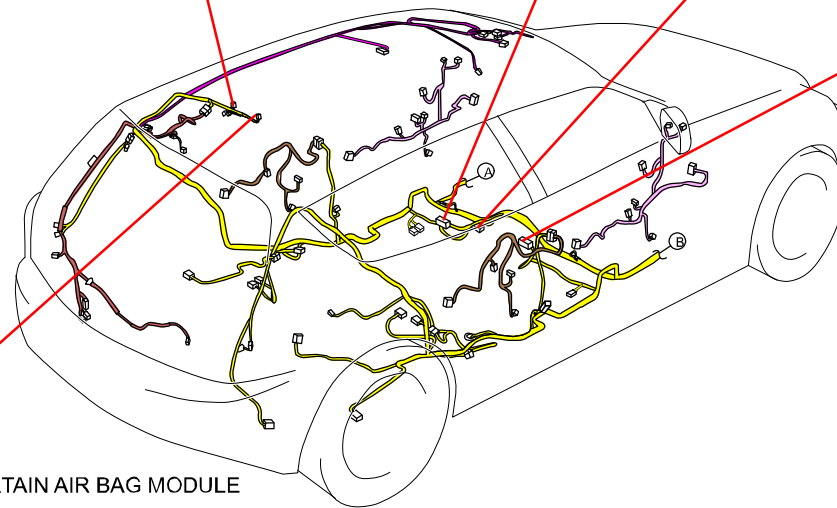


0810-109


PASSENGER-SIDE CURTAIN AIR BAG MODULE
[YELLOW]


[5 door]


	Rear Harness
	Rear No. 2 - 4 Harness
	Interior Light Harness
	Door Harness (DR1 & DR2)
	Power Sliding Doors (DR3 & DR4)

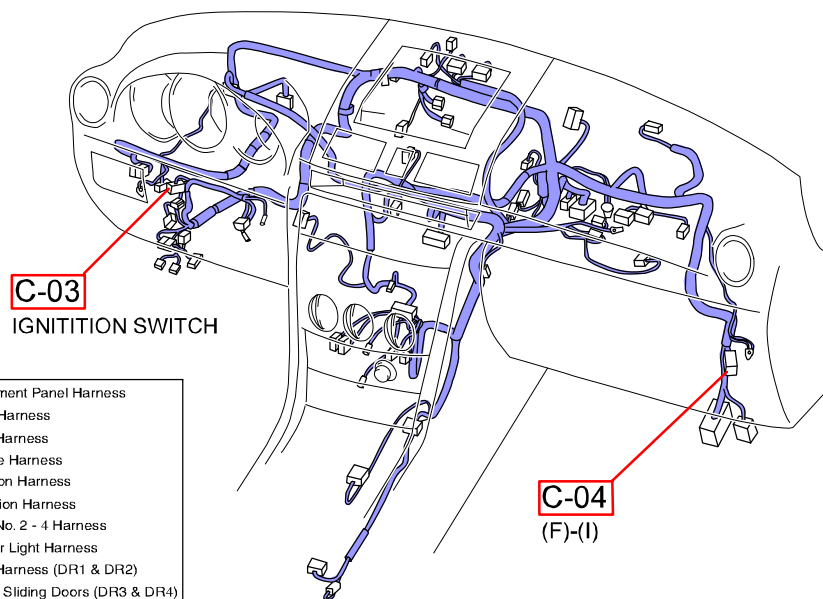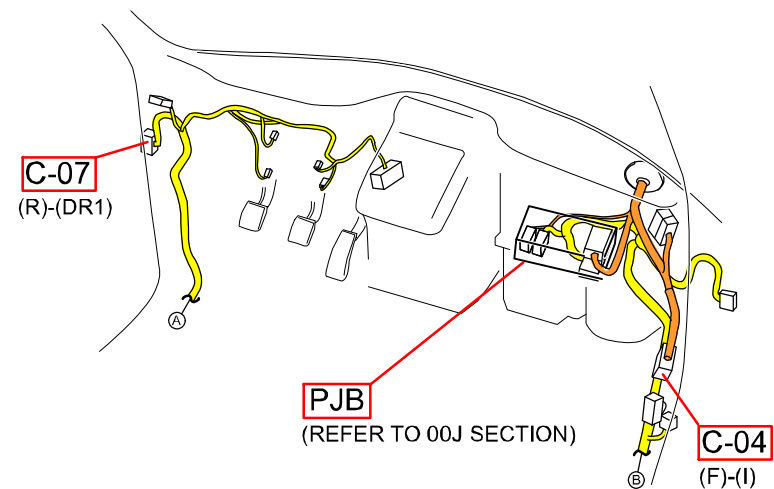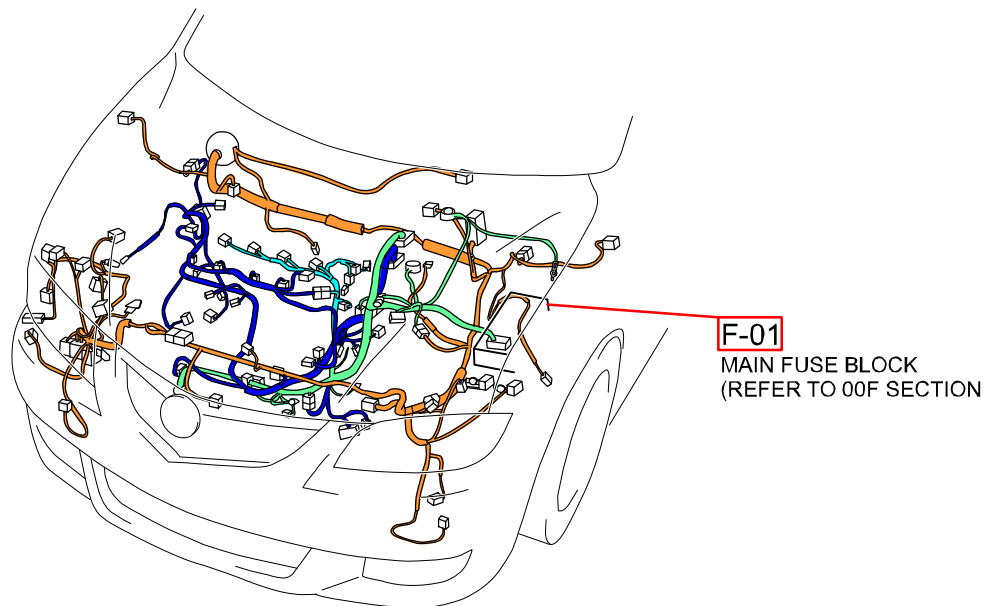


	Instrument Panel Harness
	Front Harness
	Rear Harness
	Engine Harness
	Injection Harness
	Emission Harness
	Rear No. 2 - 4 Harness
	Interior Light Harness
	Door Harness (DR1 & DR2)
	Power Sliding Doors (DR3 & DR4)

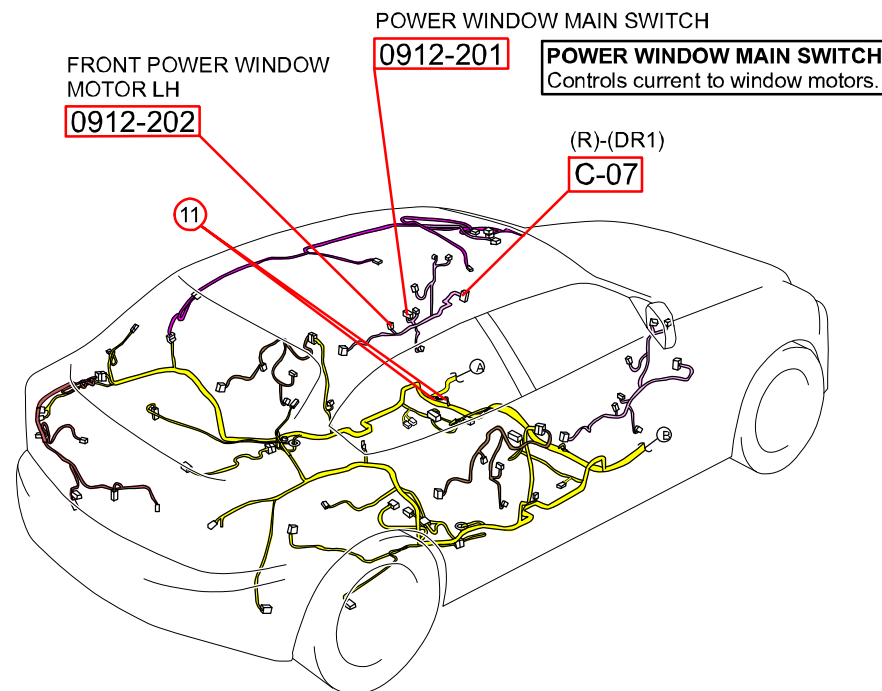

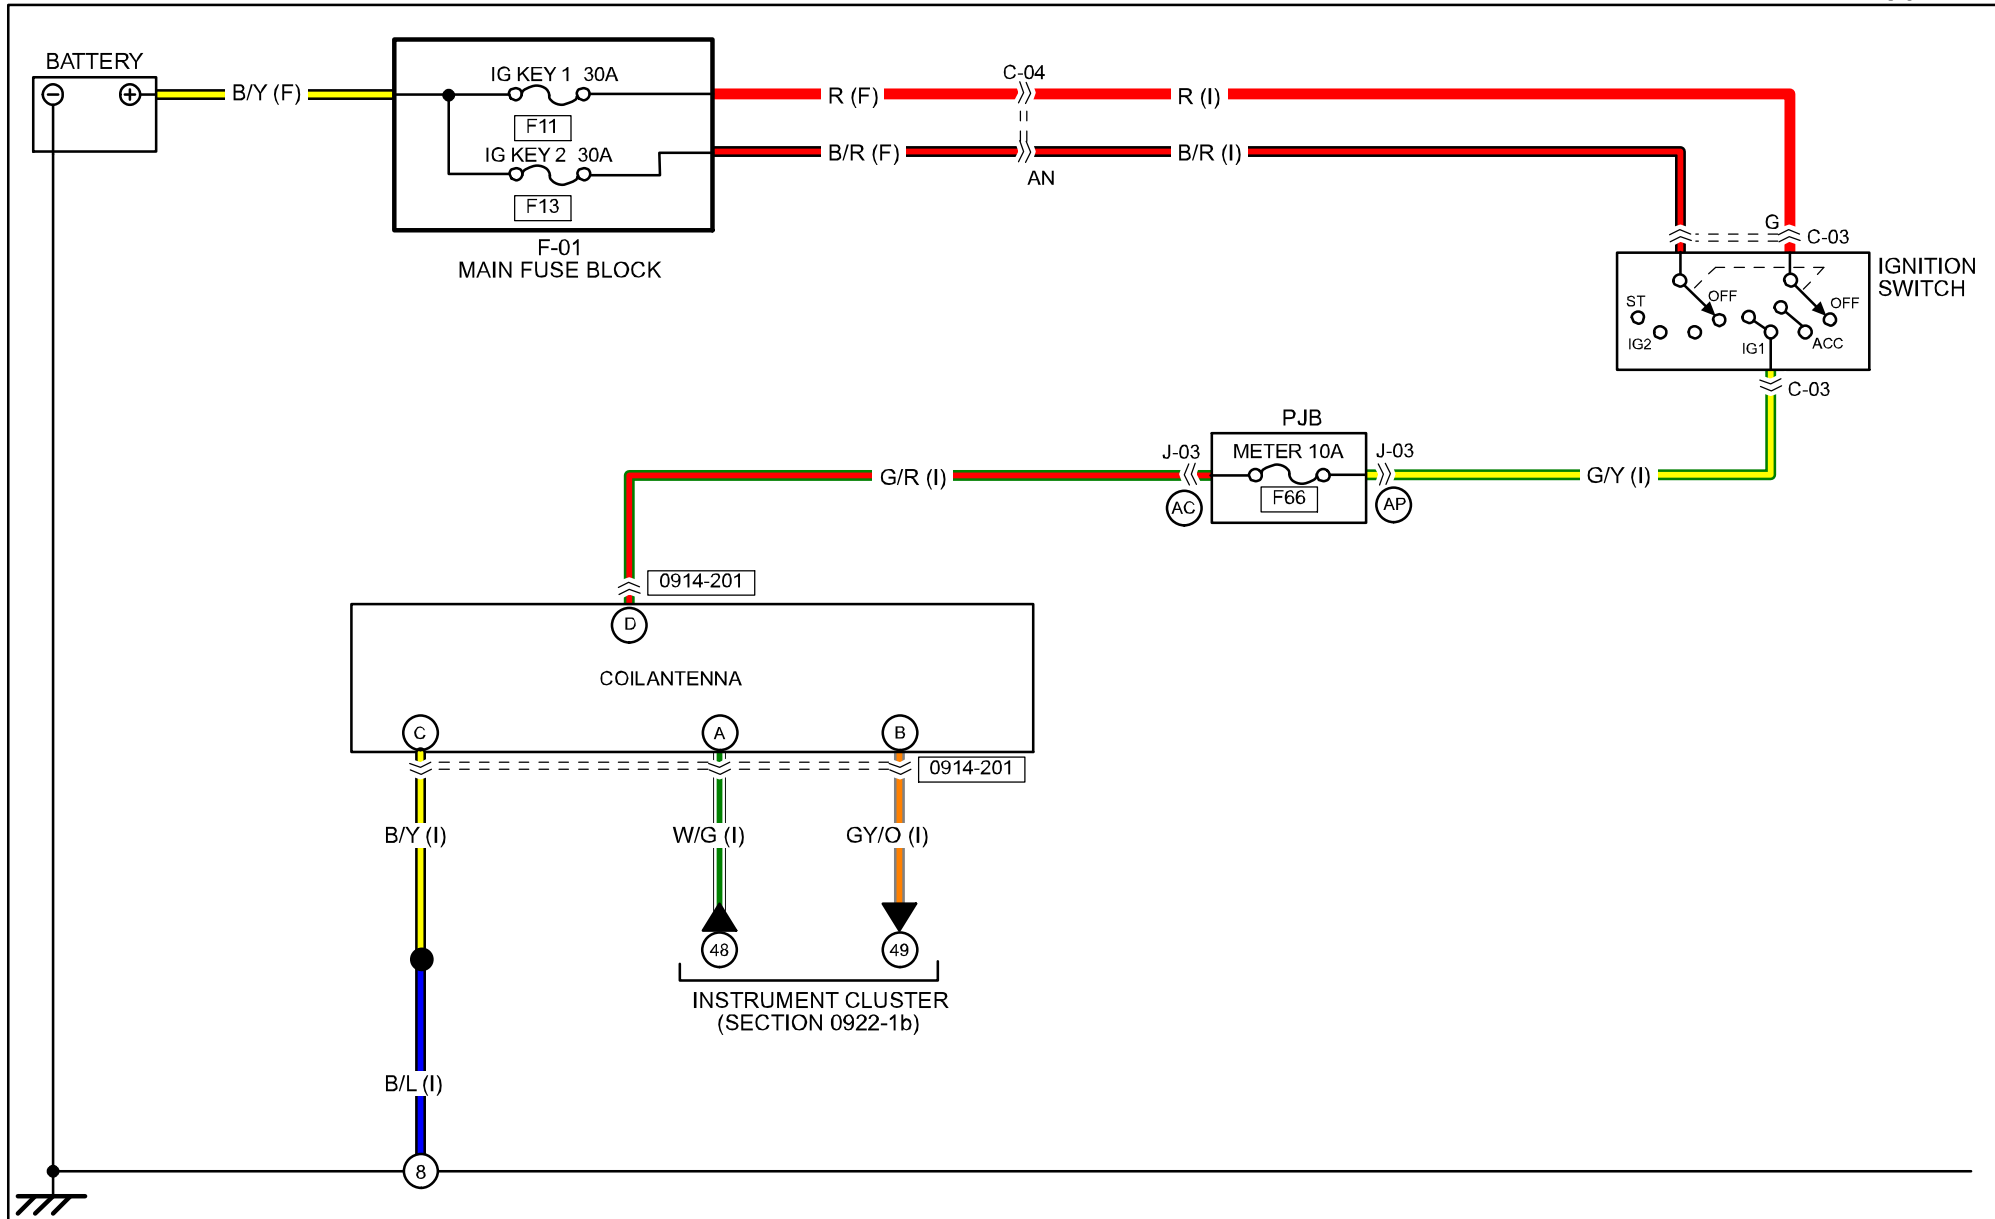

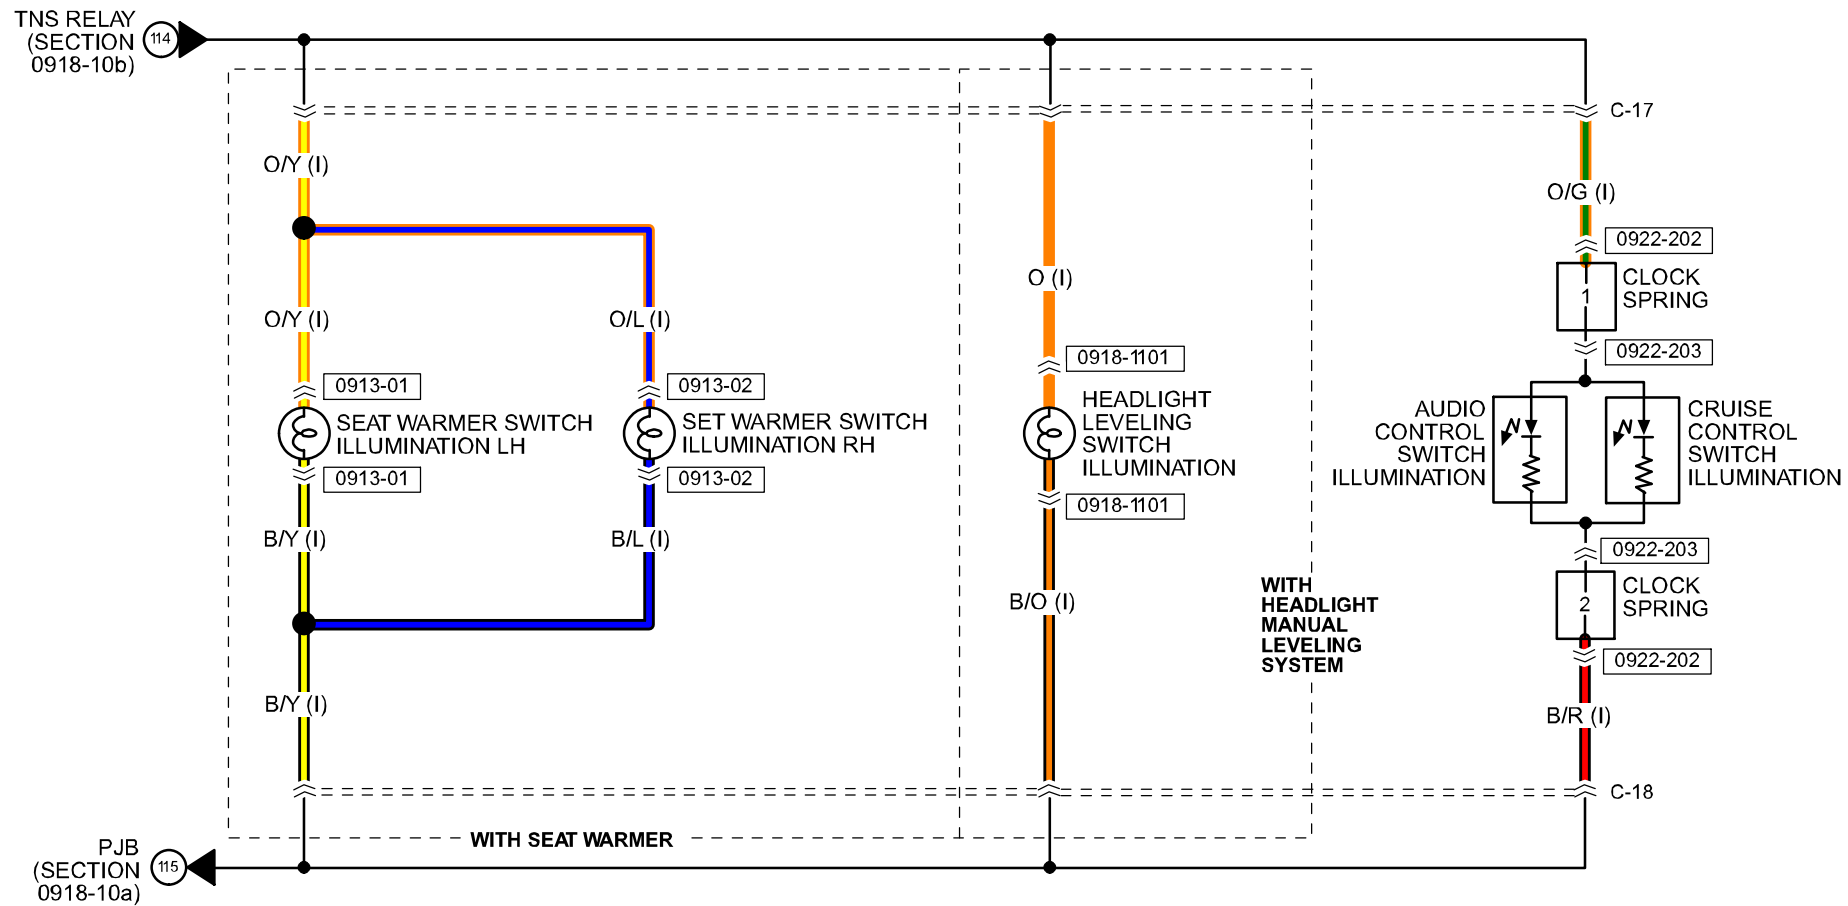

	Engine Harness
	Injection Harness
	Emission Harness
	Instrument Panel Harness
	Front Harness
	Rear Harness

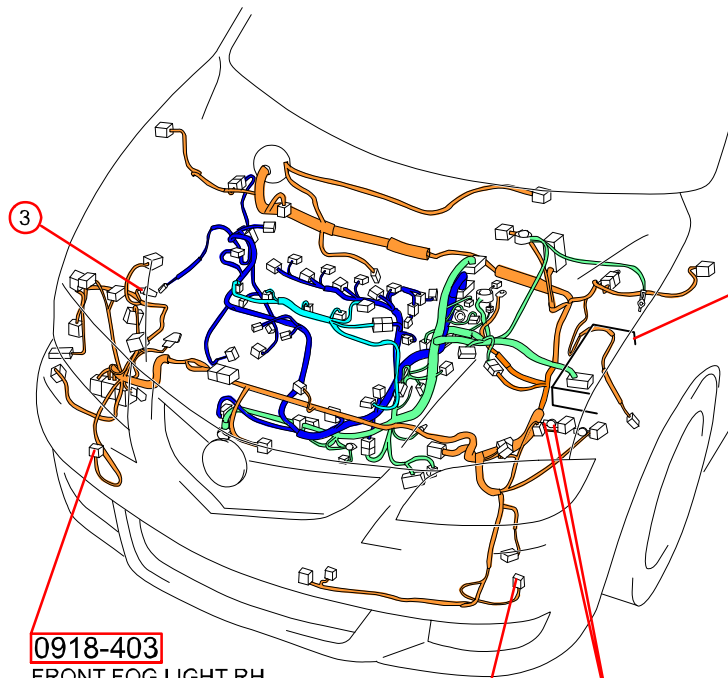


0918-403
FRONT FOG LIGHT RH
[BLACK]

0918-402
FRONT FOG LIGHT LH
[BLACK]


1

F-01
MAIN FUSE BLOCK
0918-401
FRONT FOG LIGHT RELAY
(REFER TO 00F SECTION)

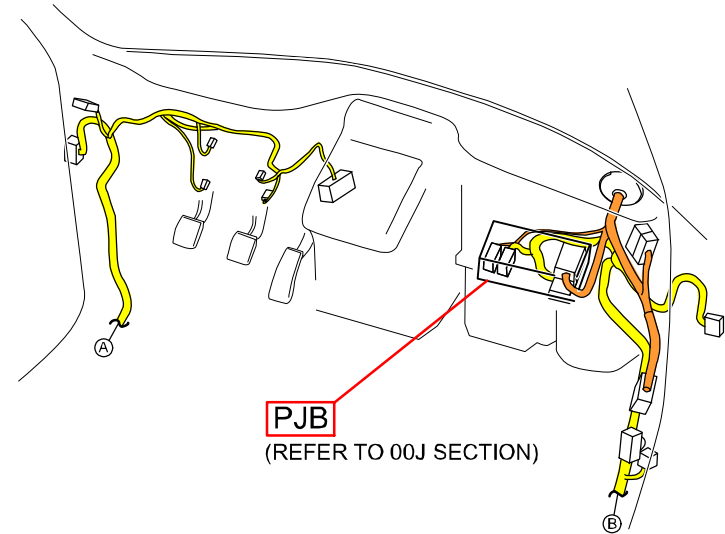

PJB
(REFER TO 00J SECTION)

WITHOUT DRL → **0918-101**
WITH DRL → **0918-201**
FRONT FOG LIGHT SWITCH

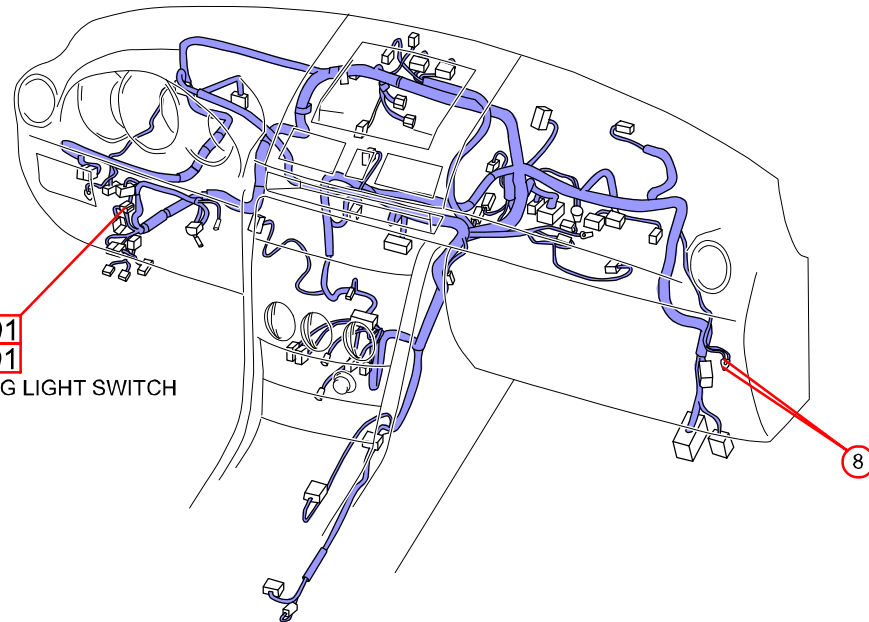

8

	Instrument Panel Harness
	Front Harness
	Rear Harness
	Engine Harness
	Injection Harness
	Emission Harness
	Rear No. 2 - 4 Harness
	Interior Light Harness
	Door Harness (DR1 & DR2)
	Power Sliding Doors (DR3 & DR4)

