

Mazda6 (GH) Wiring Diagram

FOREWORD

This wiring diagram incorporates the wiring schematics of the Mazda 6 (GH) and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.

As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers. This manual should be kept up-to-date.

CONTENTS

TITLE	SECTION	
	PREVIOUS	NEW
GENERAL INFORMATION	GI (GENERAL INFORMATION)	00
	W (ELECTRICAL WIRING SCHEMATIC)	
	FB (FUSE BLOCK)	
	JB (JOINT BOX)	
	X (COMMON CONNECTOR)	
	Y (GROUND POINT)	
ENGINE	U (DATA LINK CONNECTOR)	01
	A (CHARGING SYSTEM/ STARTING SYSTEM)	
	B (ENGINE CONTROL SYSTEM)	
SUSPENSION	Q (CRUISE CONTROL SYSTEM)	02
DRIVELINE/AXLE	—	03
BRAKES	O (ANTI-LOCK BRAKE SYSTEM)	04
TRANSMISSION/ TRANSAXLE	H (EC-AT CONTROL SYSTEM)	05
STEERING	N (ELECTRIC POWER STEERING SYSTEM)	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	G (AIR CONDITIONING SYSTEM)	07
RESTRAINTS	S (SEAT BELT/AIR BAG SYSTEM)	08
BODY & ACCESSORIES	C (GAUGE CONTROL SYSTEM)	
	D (WIPER SYSTEM)	
	E (EXTERIOR LIGHTING SYSTEM)	
	F (SIGNAL SYSTEM)	
	I (INTERIOR LIGHTING SYSTEM)	
	J (AUDIO SYSTEM)	09
	K (DOOR/WINDOW SYSTEM)	
	L (MIRROR SYSTEM)	
	M (SUNROOF SYSTEM)	
	P (POWER SEAT SYSTEM)	
	T (SECURITY AND LOCKS SYSTEM/OPTION)	
ALPHABETICAL INDEX	AI (ALPHABETICAL INDEX)	AI

Mazda Motor Corporation
HIROSHIMA, JAPAN

©

 
Mazda Motor Corporation

APPLICATION:

This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN) shown on the following page.


ELECTRICAL WIRING SCHEMATIC (WITH ADVANCED KEYLESS SYSTEM)


00E-2c



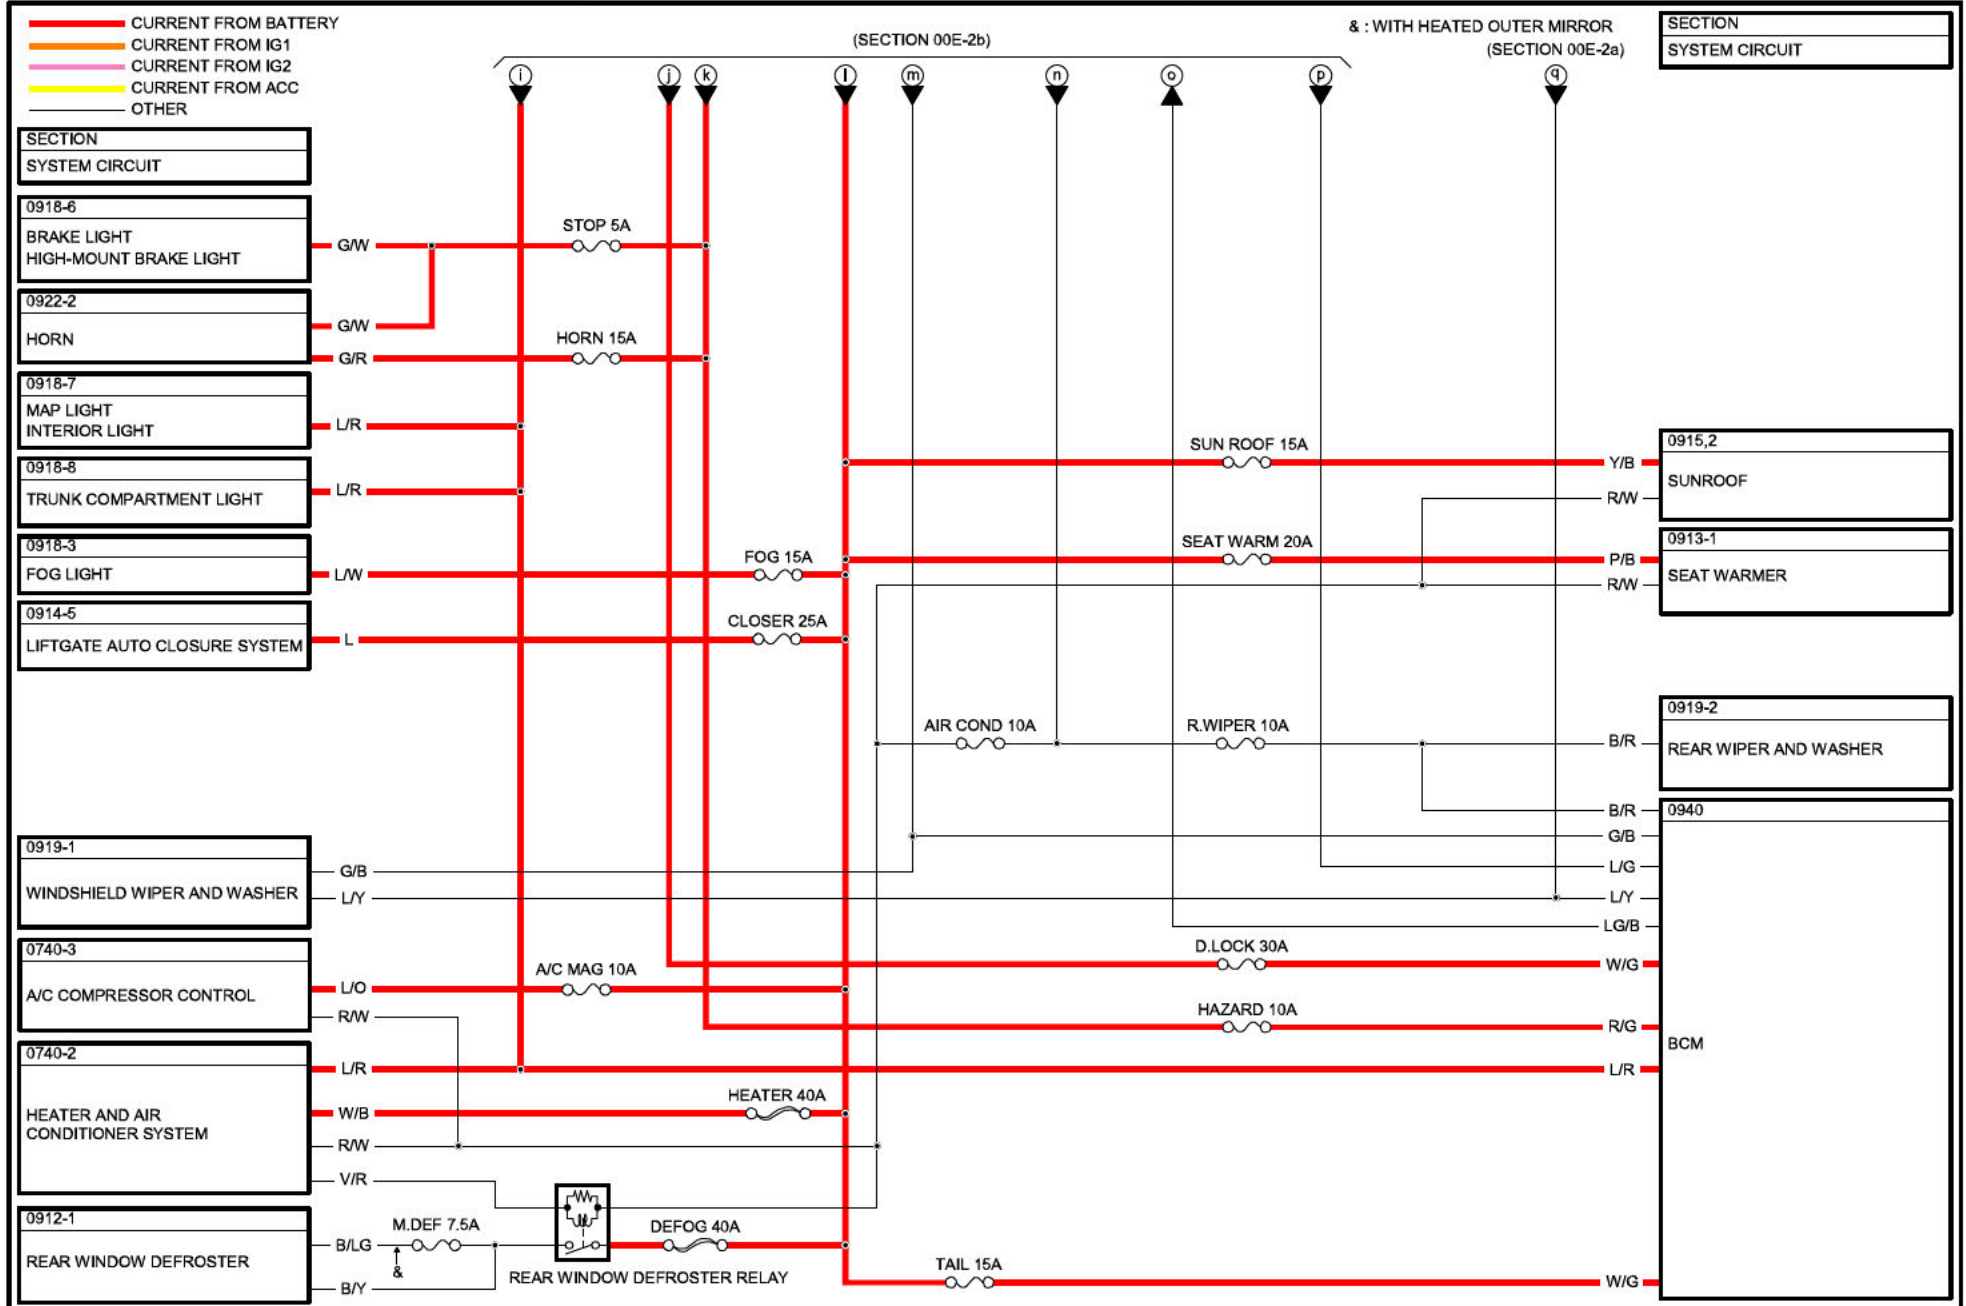







F-01
MAIN FUSE BLOCK

          - <> : NOT USED
- () : IF EQUIPPED
- @2 : WITH ADVANCED KEYLESS SYSTEM
- @3 : WITH THREE COOLING FAN RELAYS
- @4 : WITH FOUR COOLING FAN RELAYS
- &5 : MZR-CD (RF Turbo)

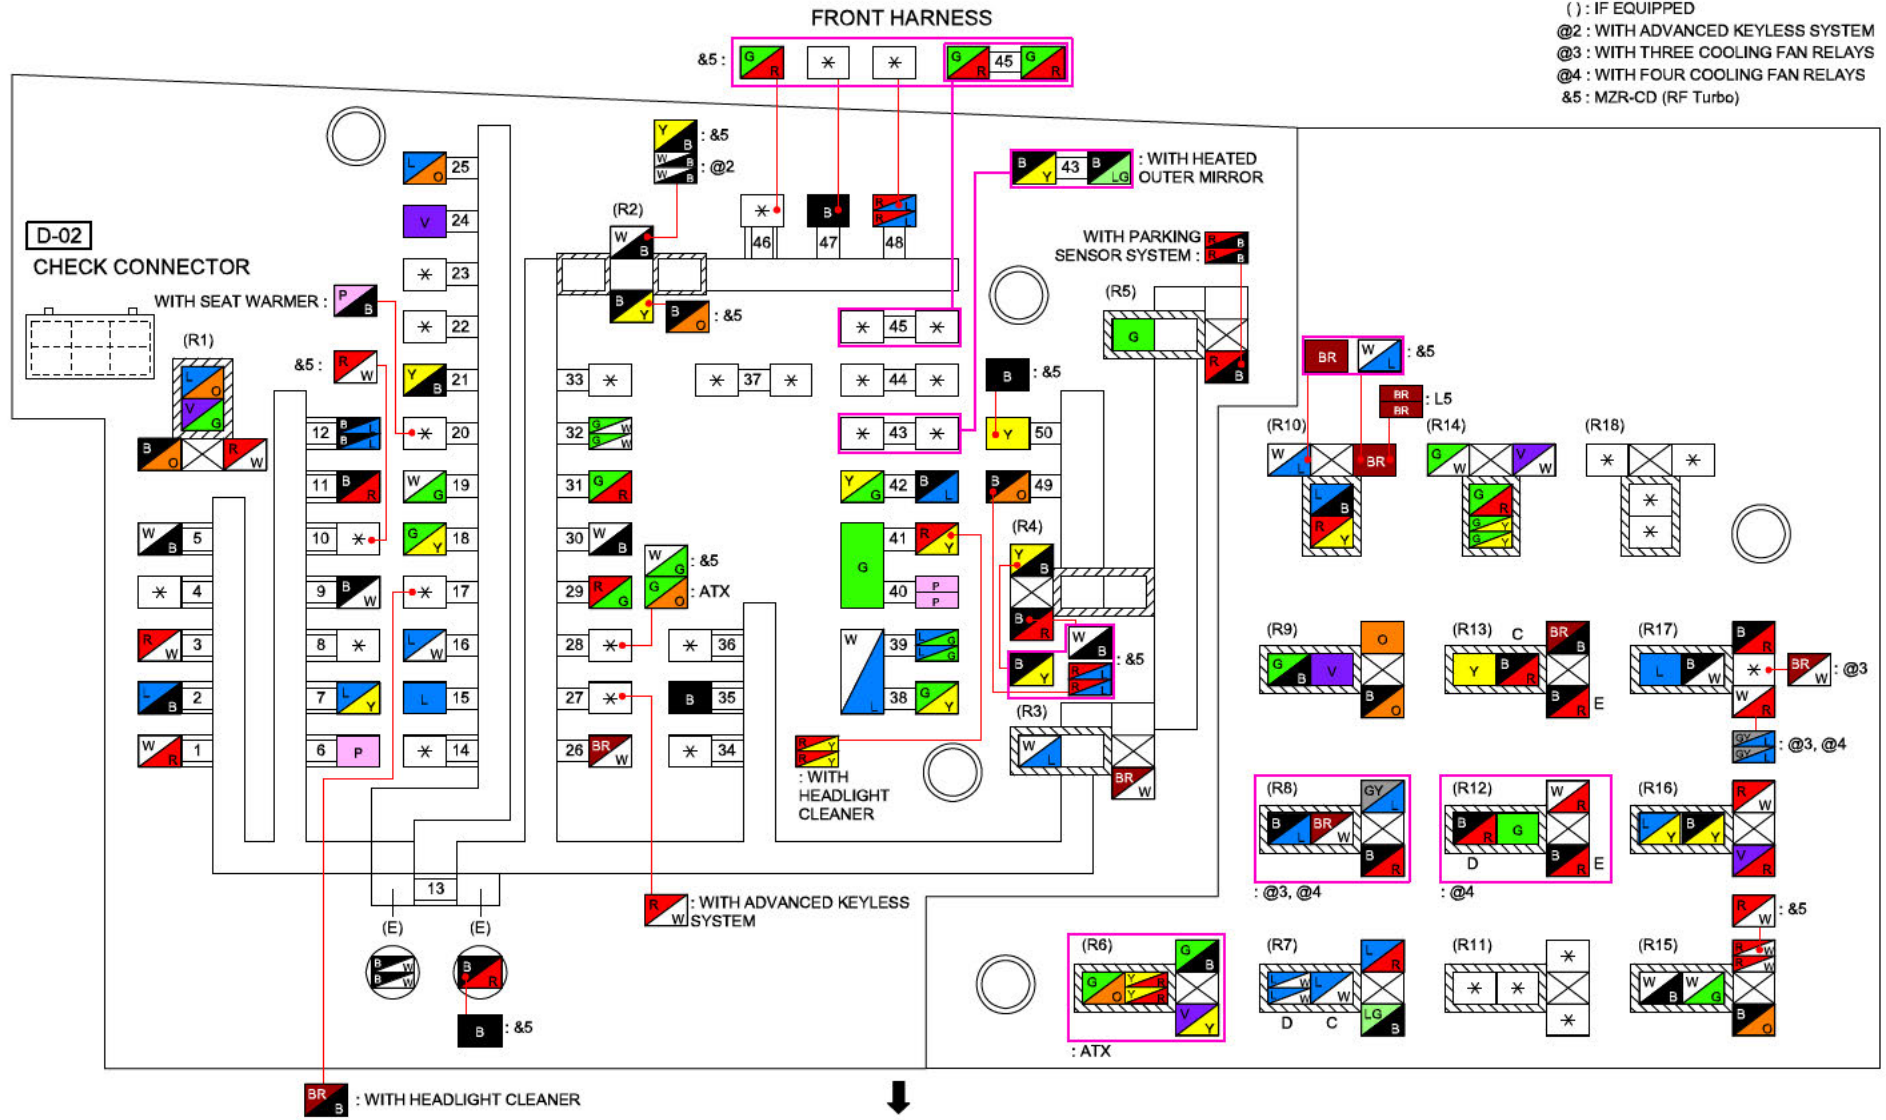

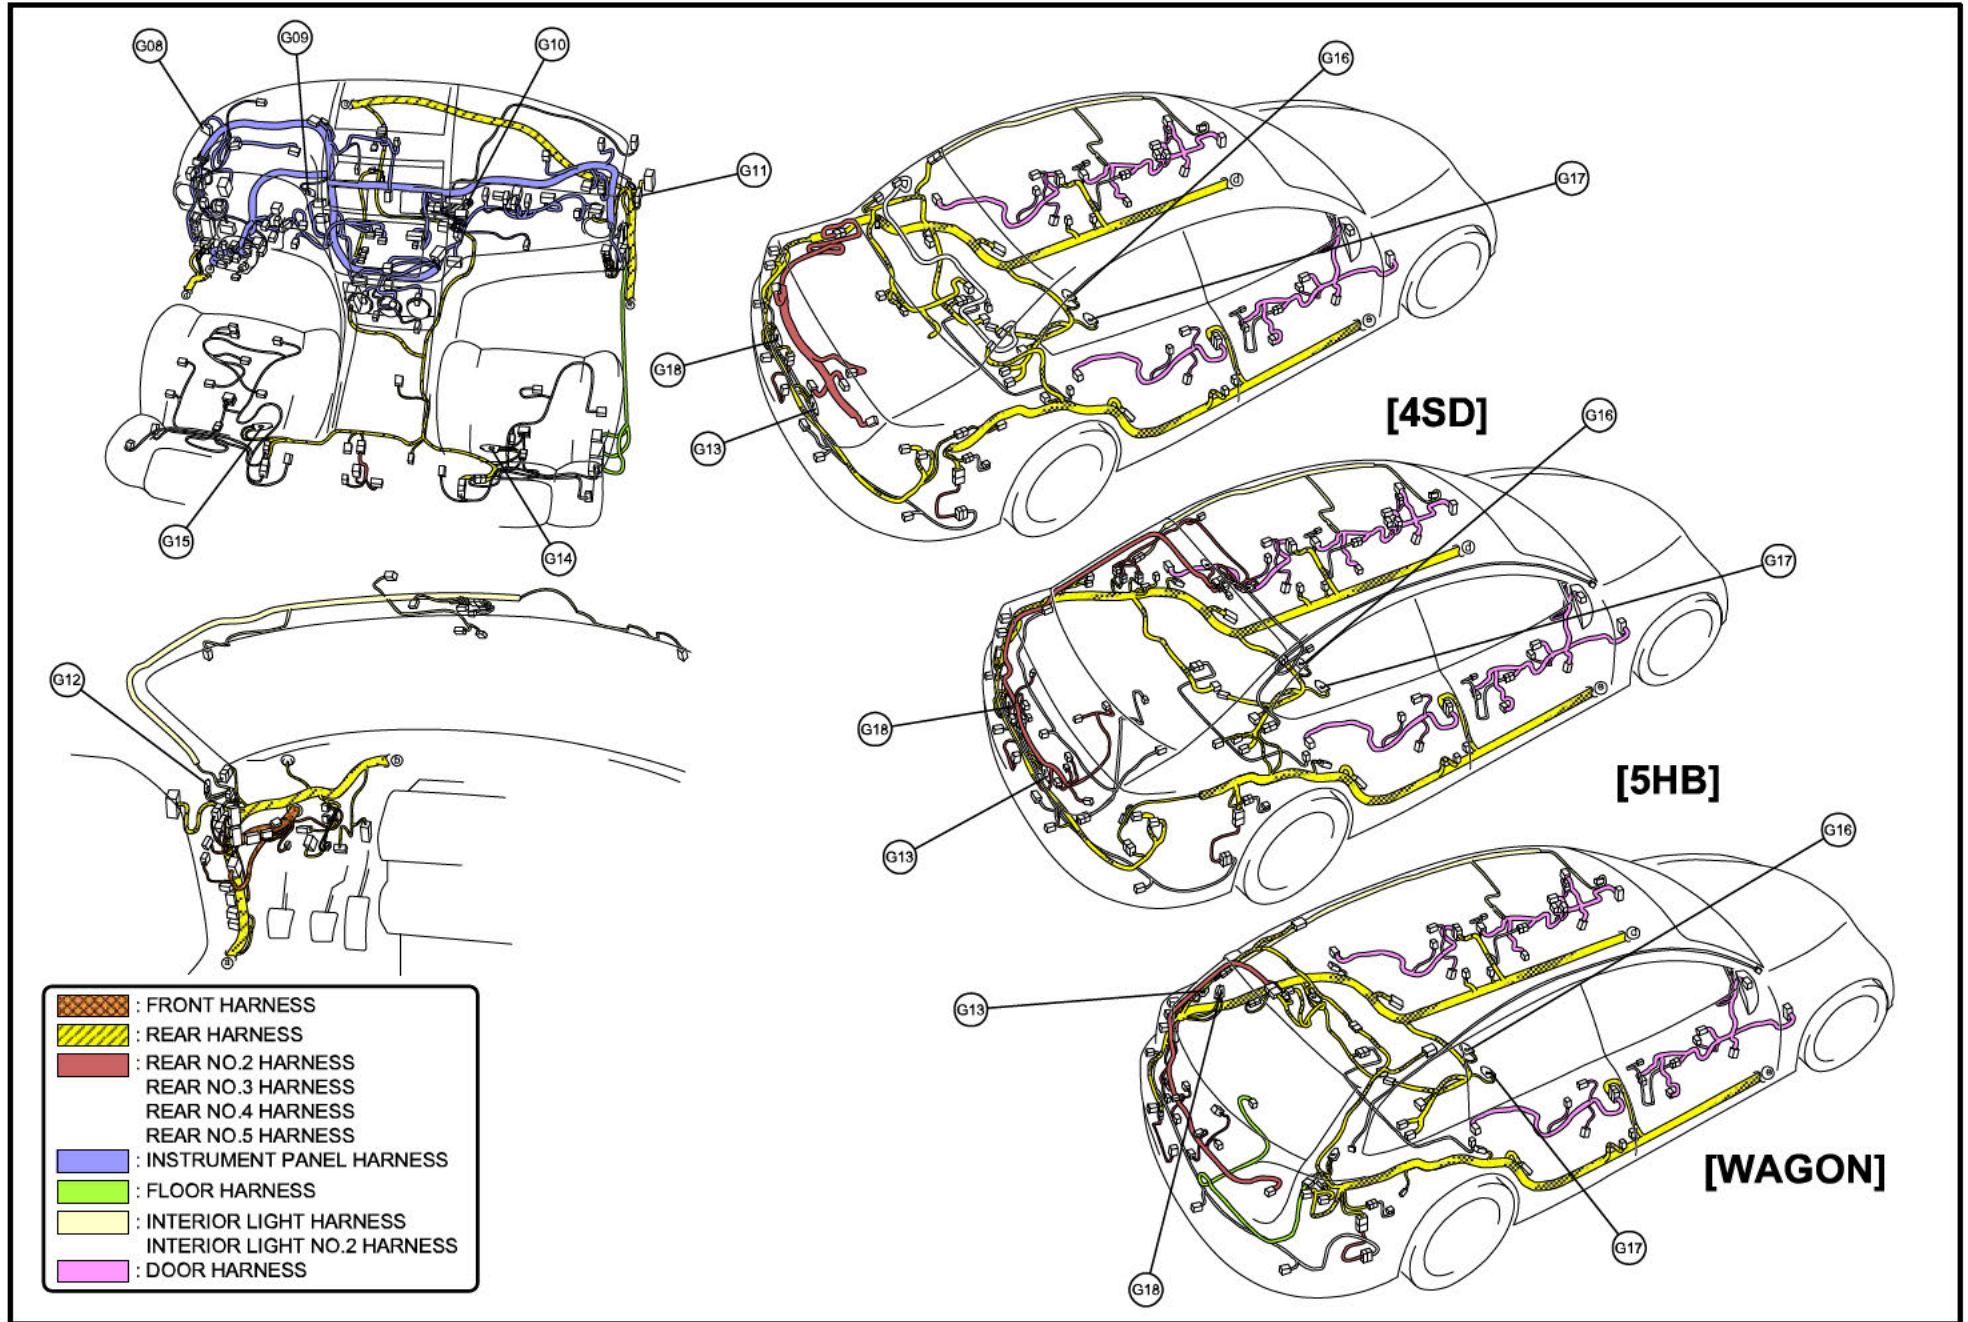


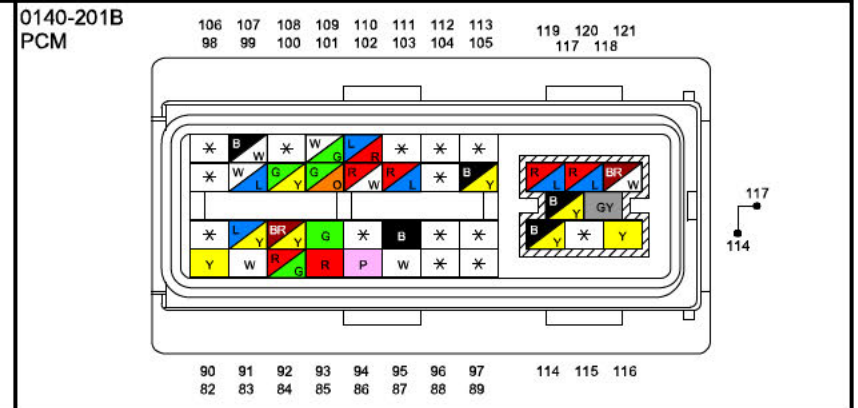
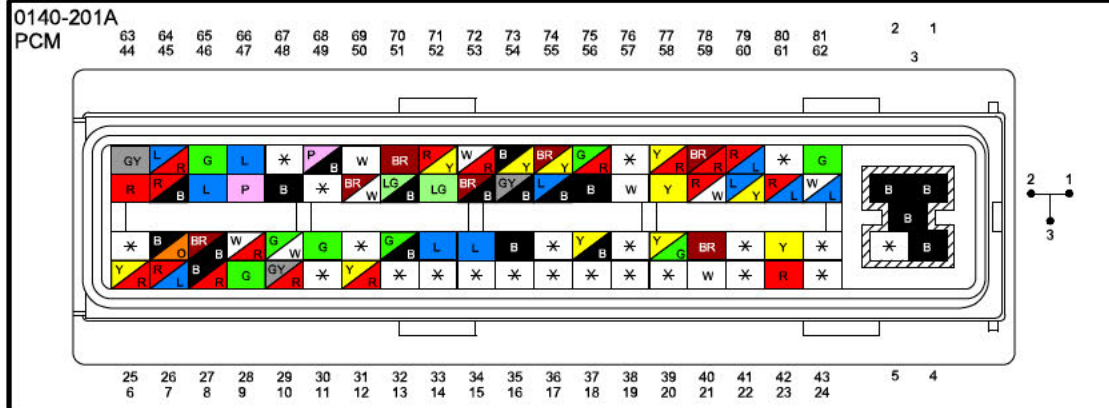
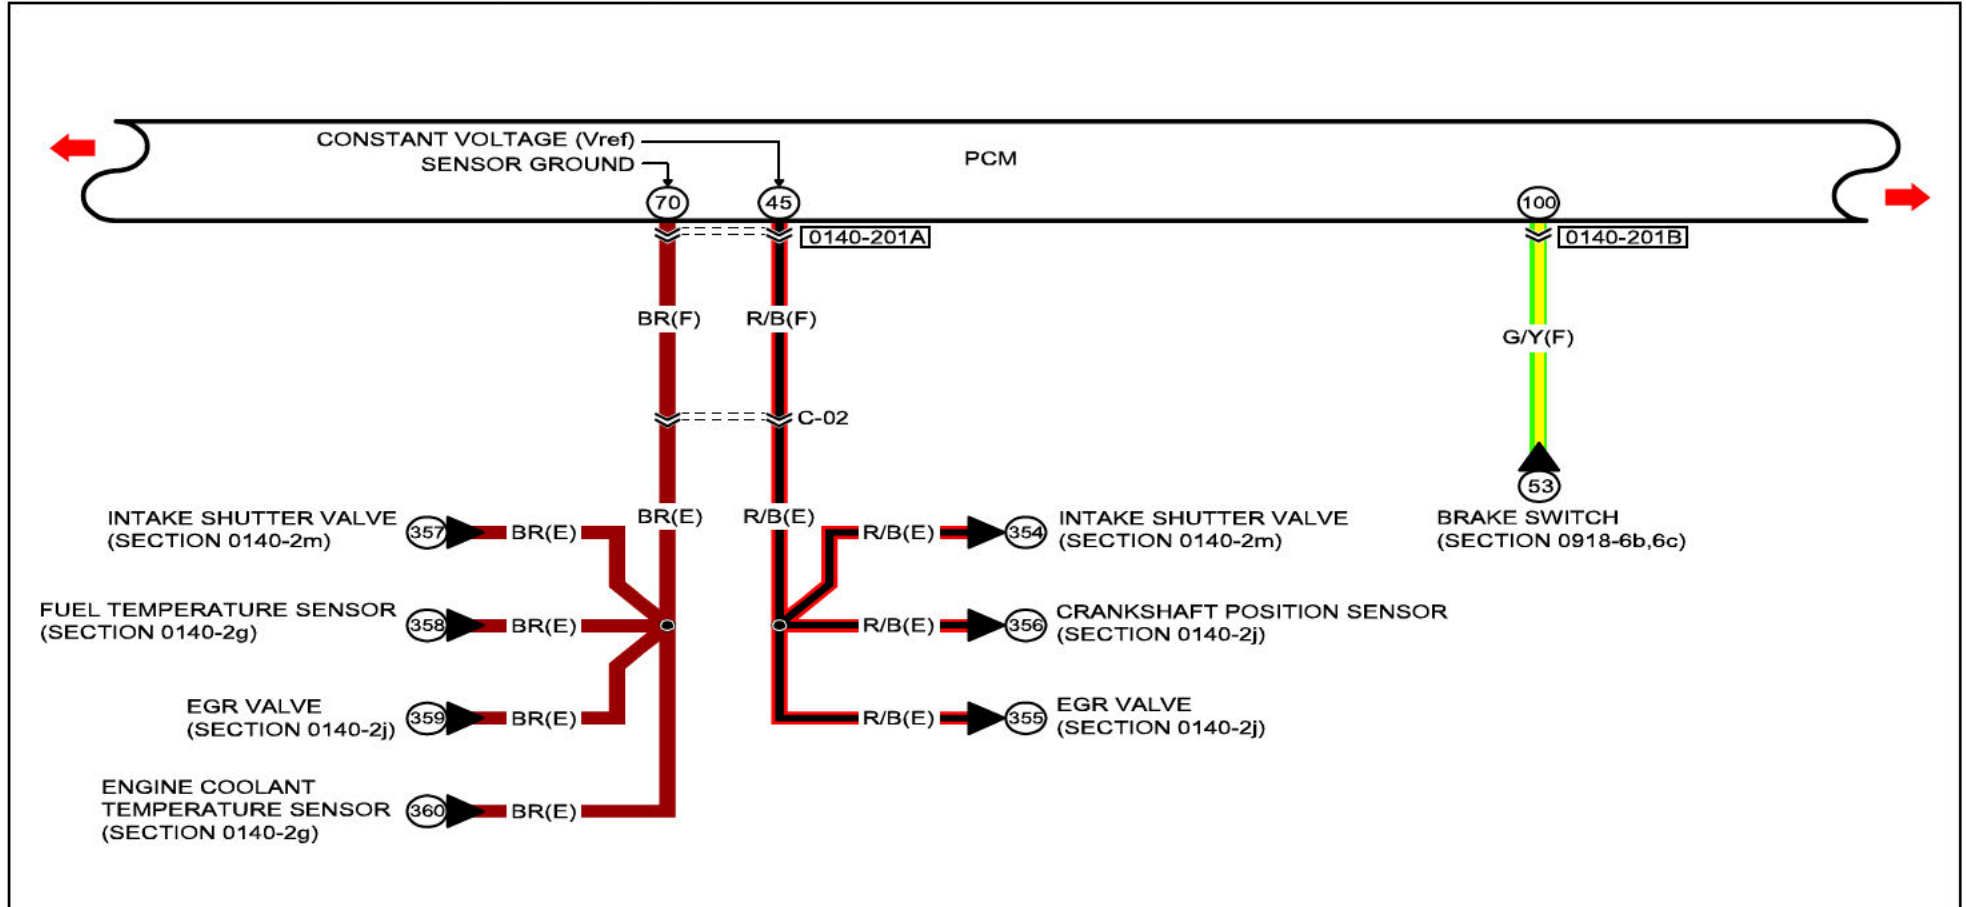


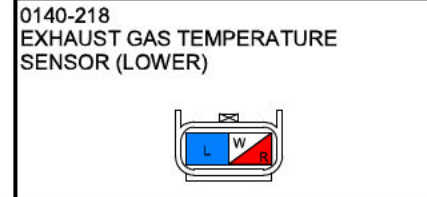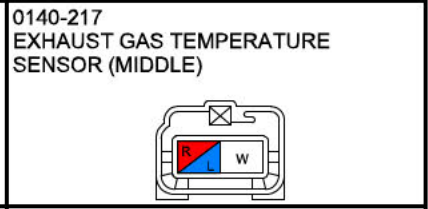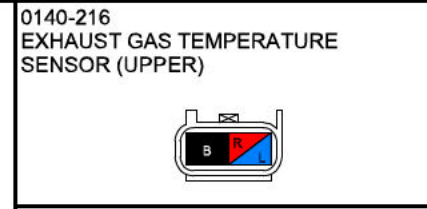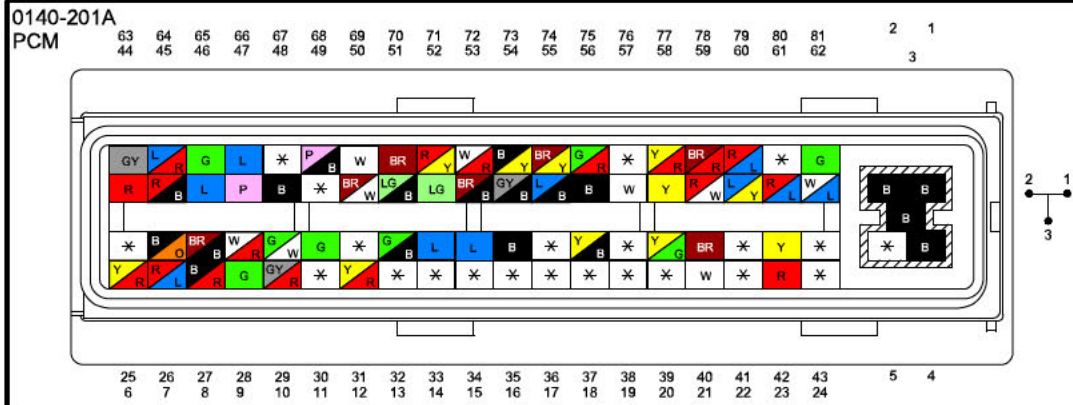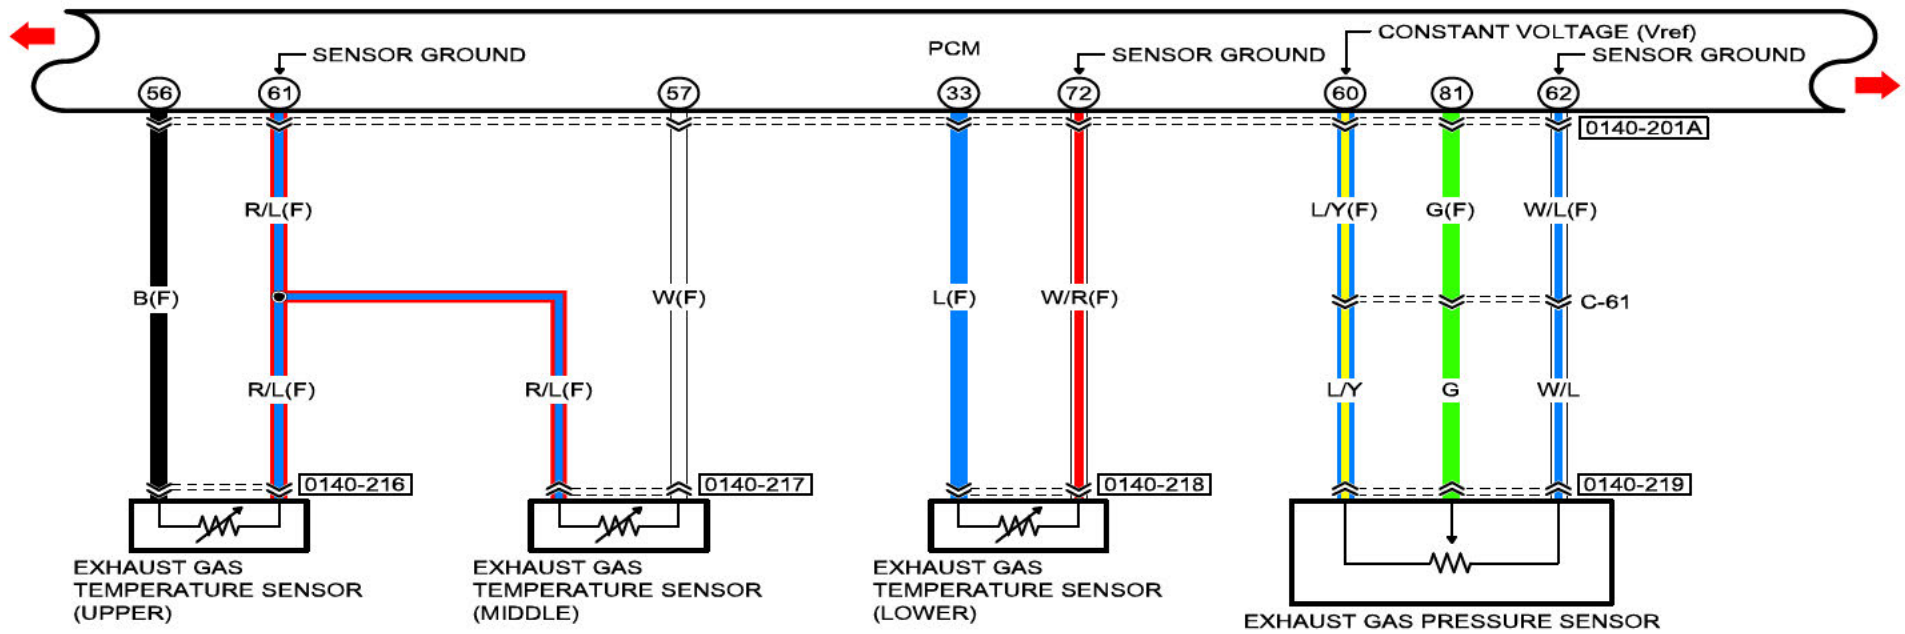

C-29

    
REAR HARNESS-DOOR NO.1 HARNESS

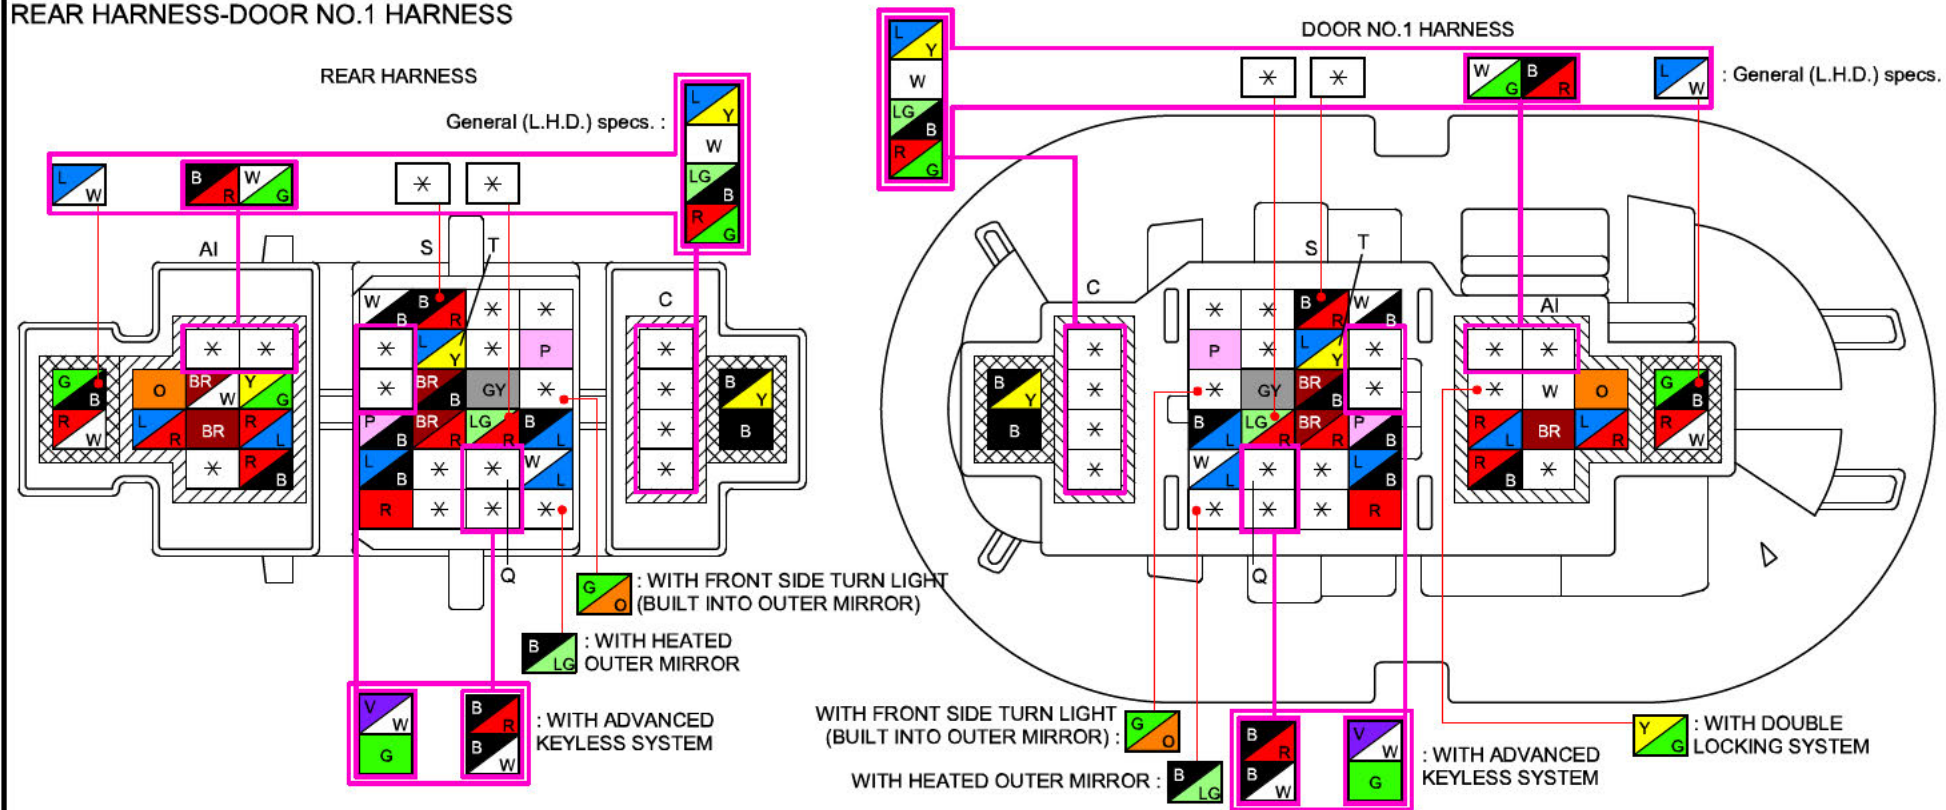

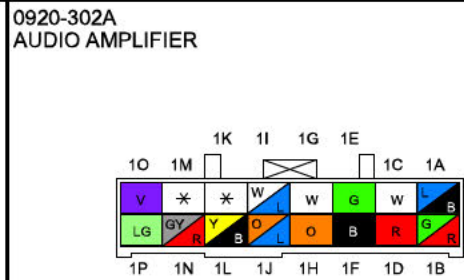
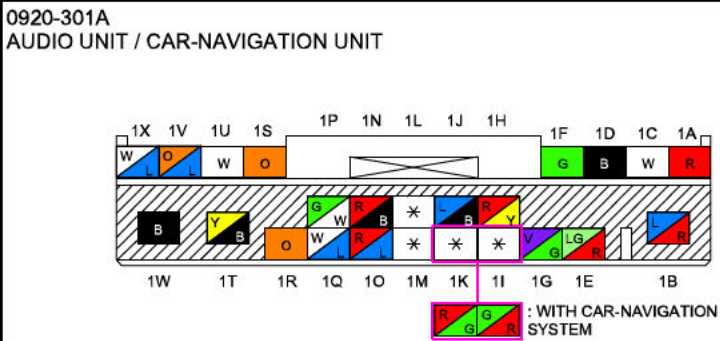
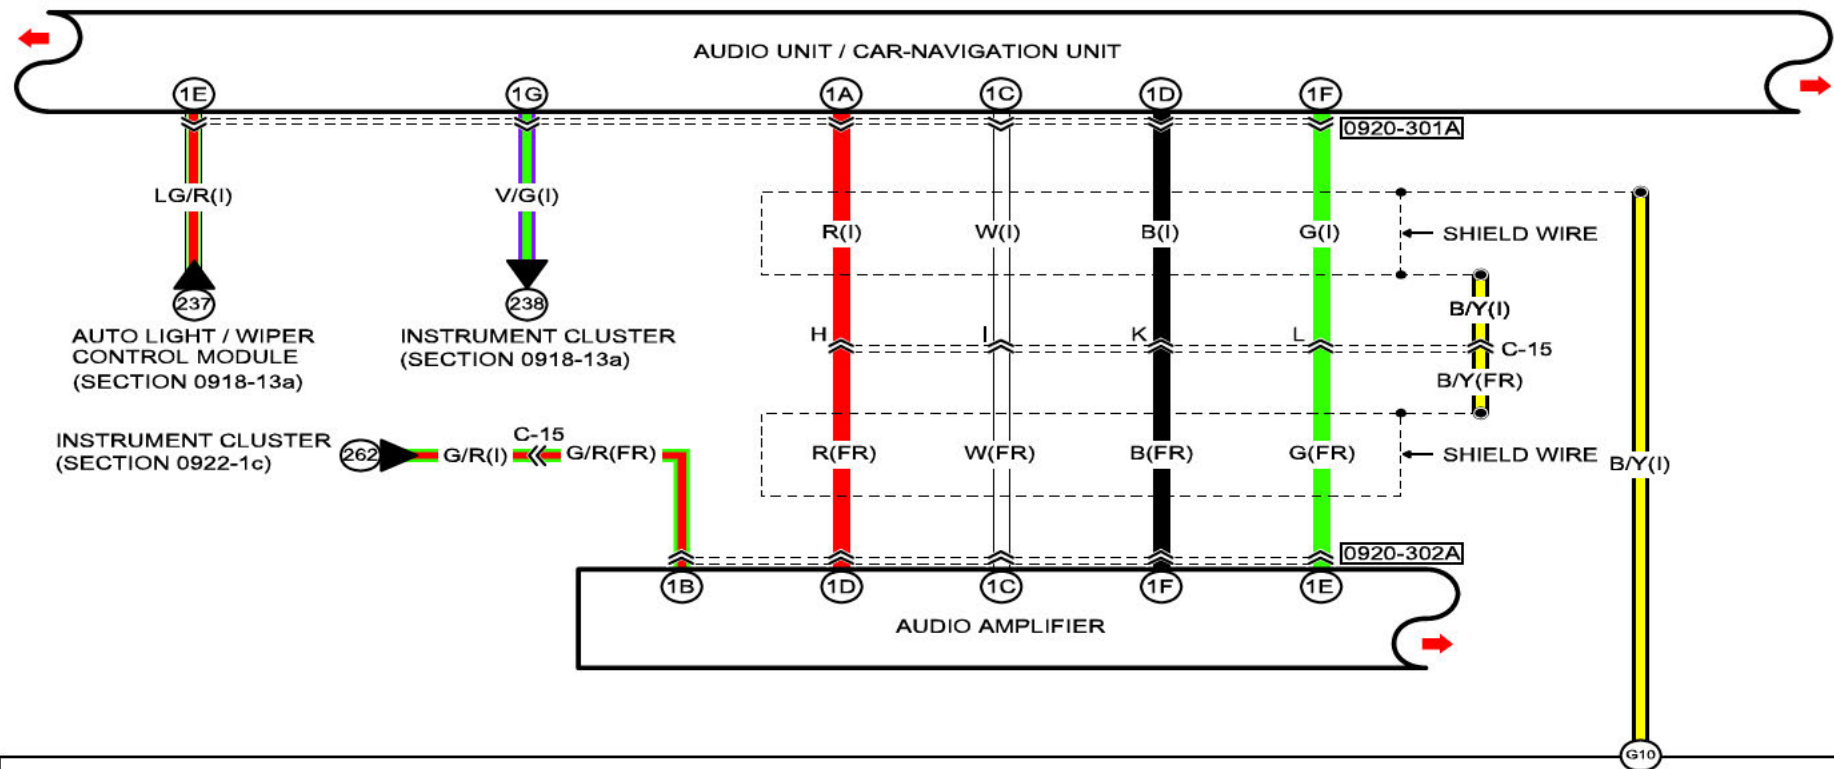







C-30

 REAR HARNESS-DOOR NO.2 HARNESS

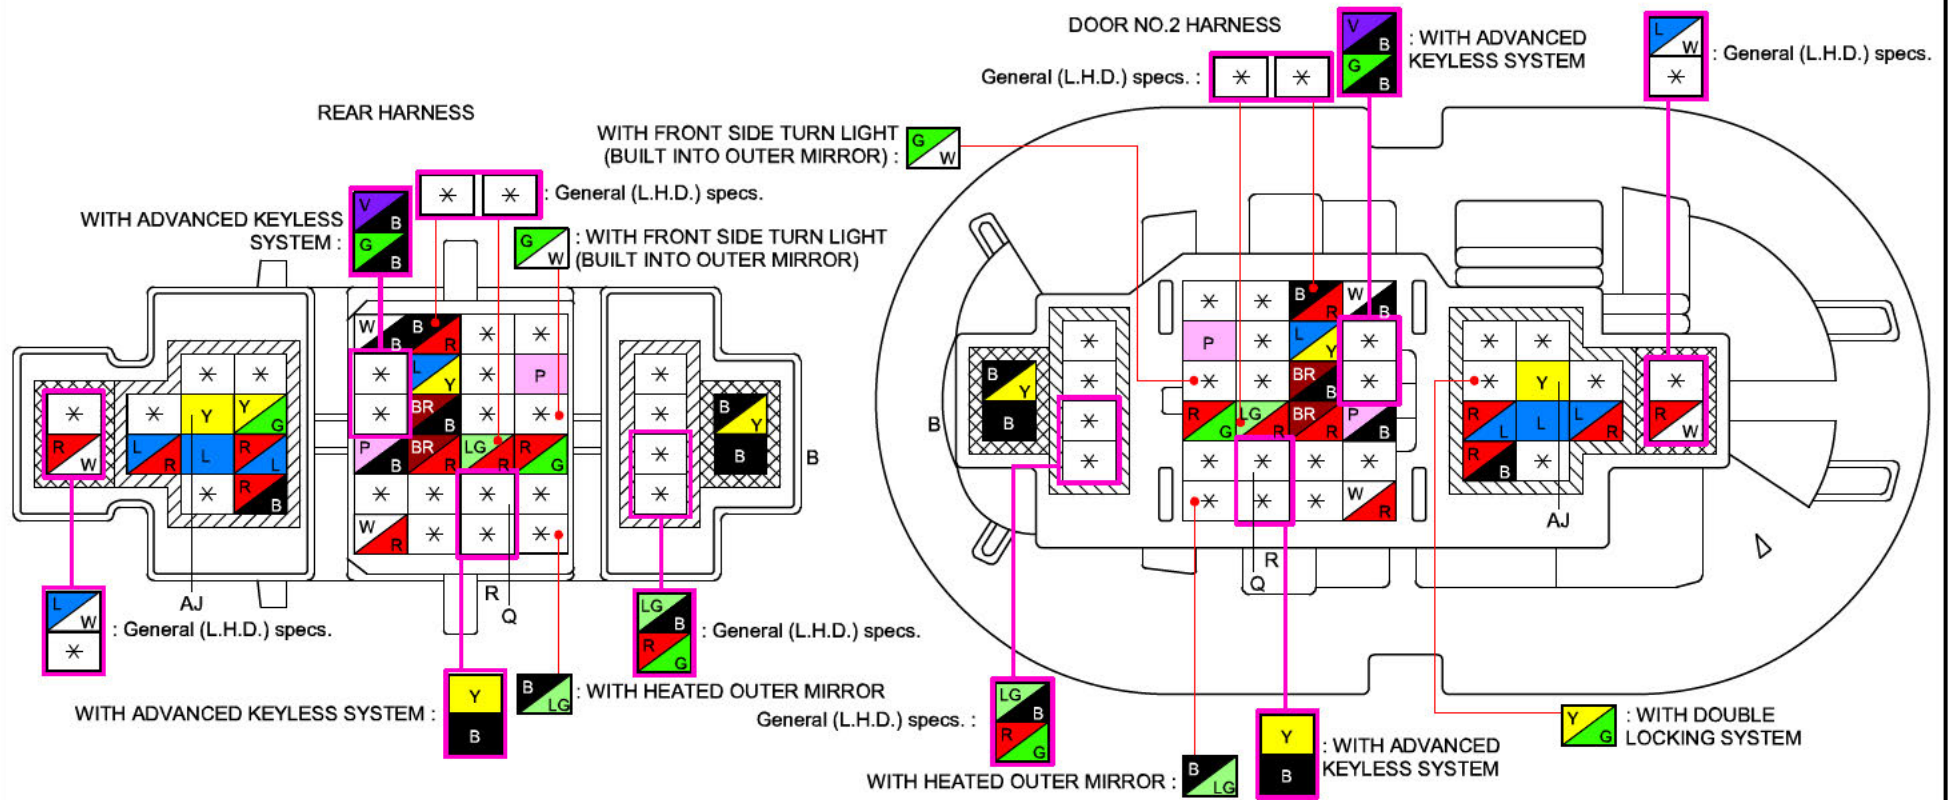

    
 
 
 
 
- : INSTRUMENT PANEL HARNESS
- : REAR HARNESS
- : REAR NO.2 HARNESS
- : REAR NO.3 HARNESS
- : REAR NO.4 HARNESS
- : REAR NO.5 HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT HARNESS
- : FLOOR HARNESS

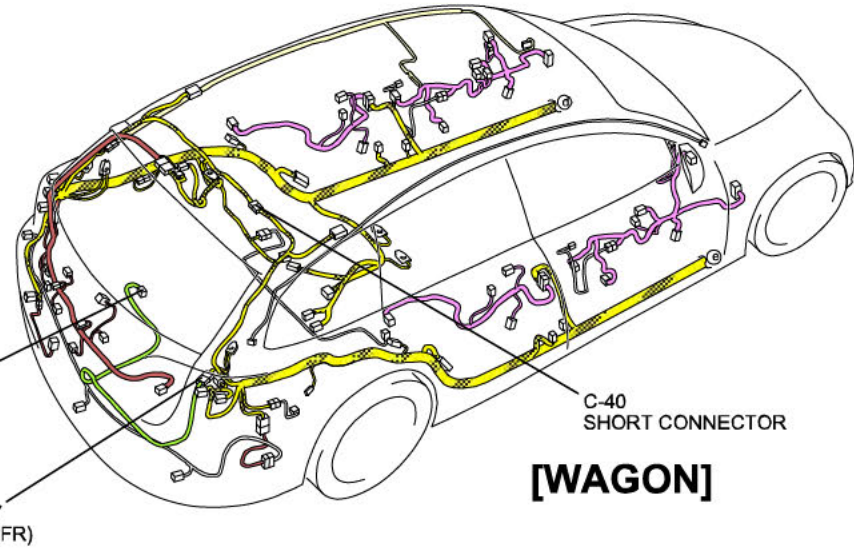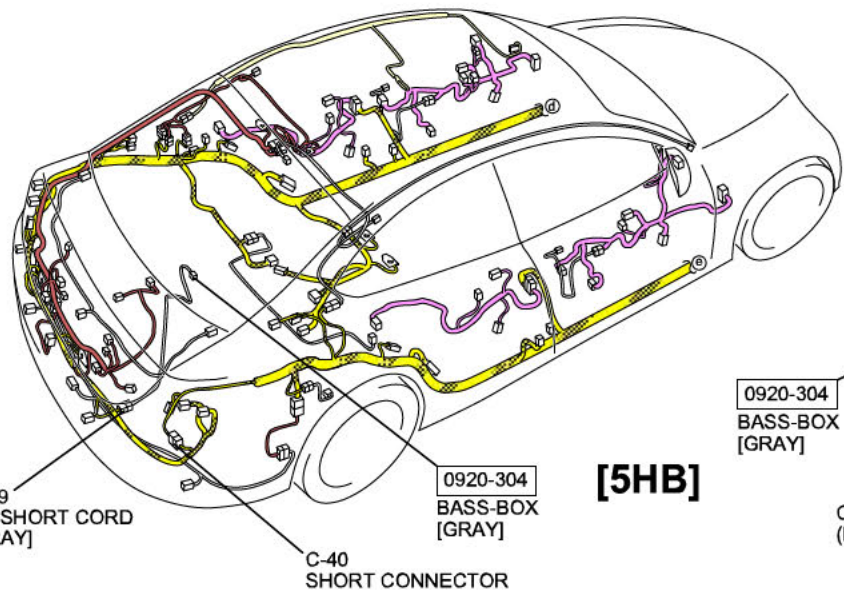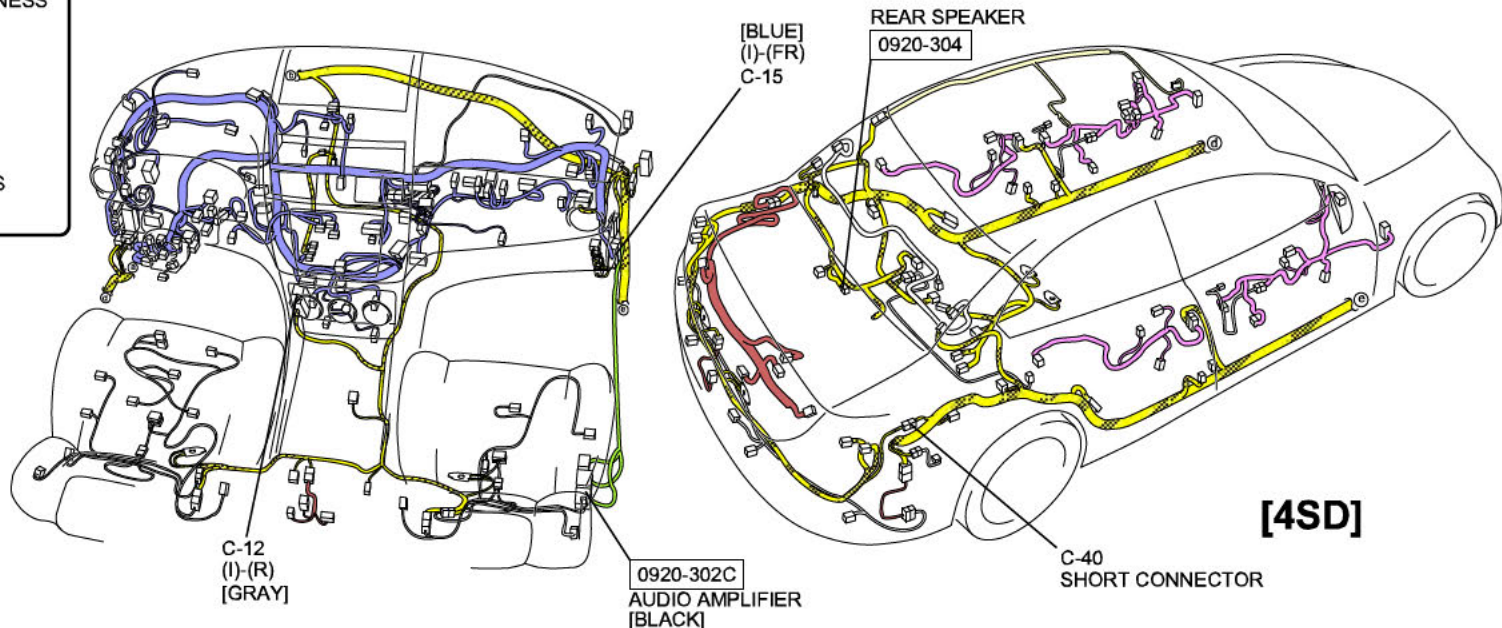

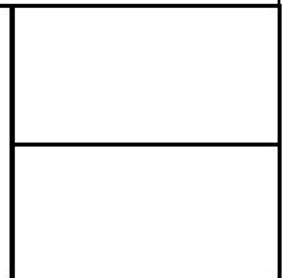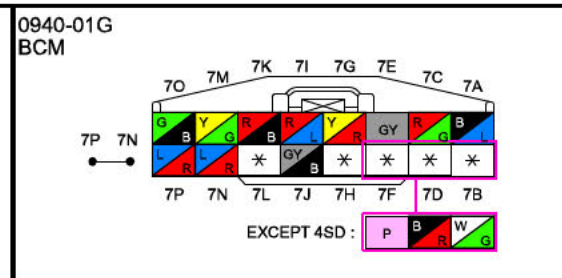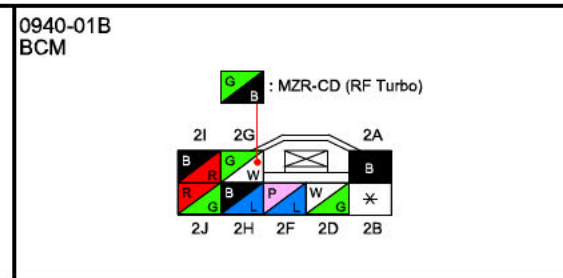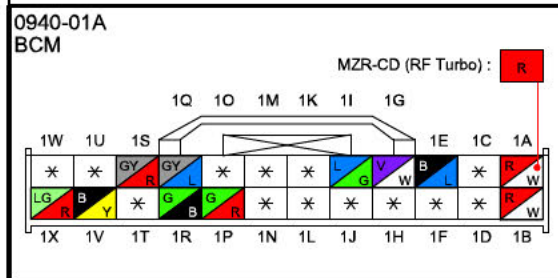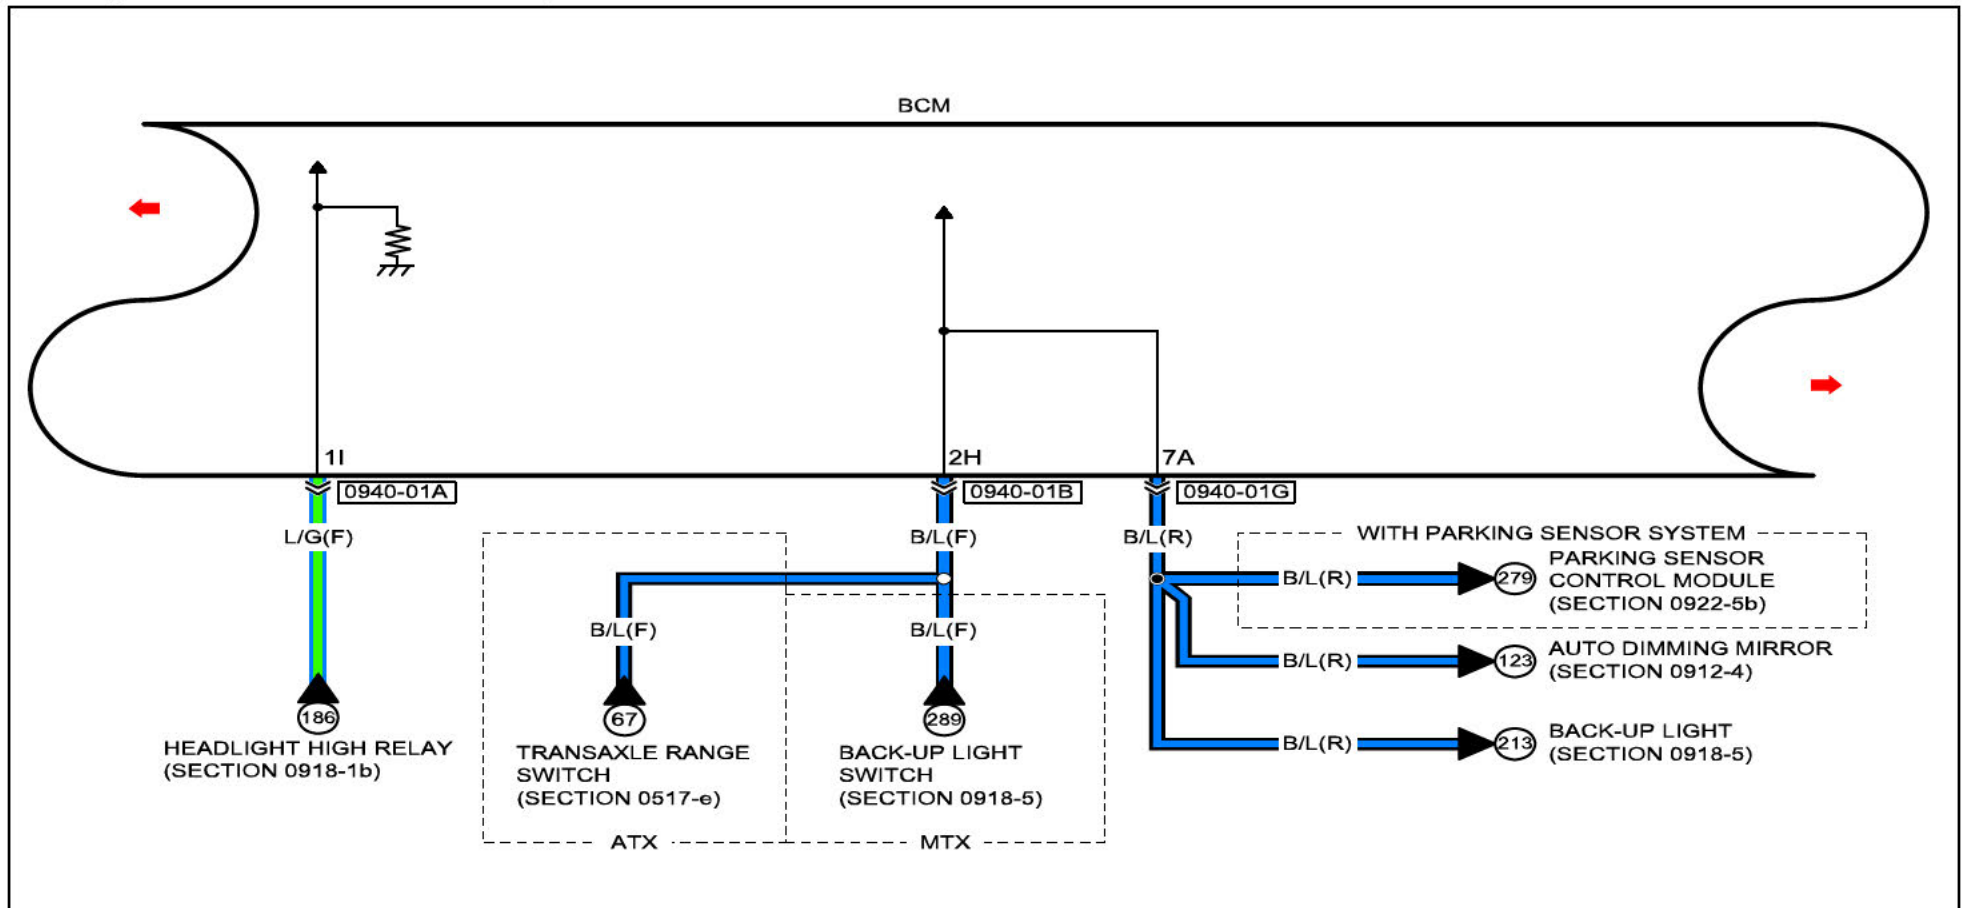

@1 : WITHOUT ADVANCED KEYLESS SYSTEM
 @2 : WITH ADVANCED KEYLESS SYSTEM

     @3 : WITHOUT DSC
 @4 : WITH DSC
 #4 : European (L.H.D.) specs.

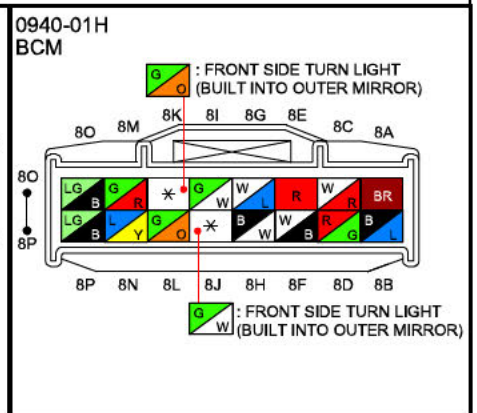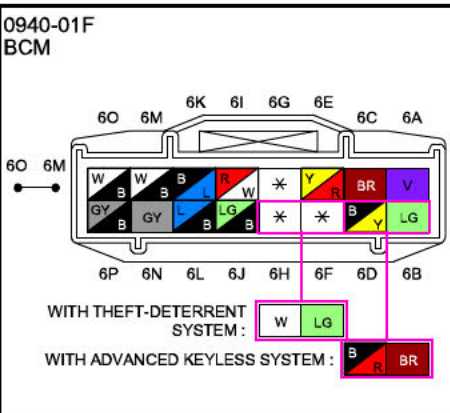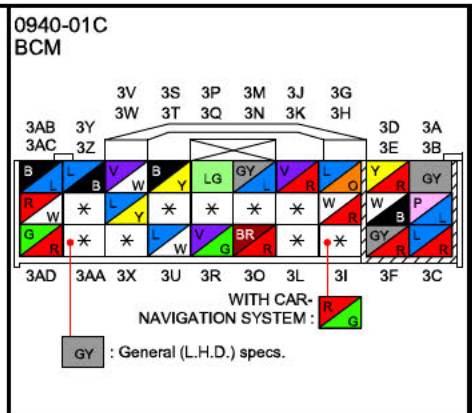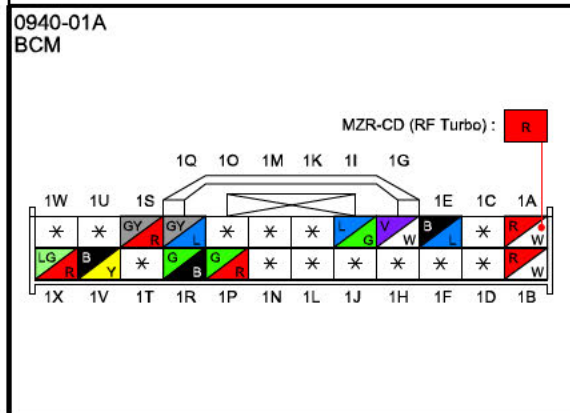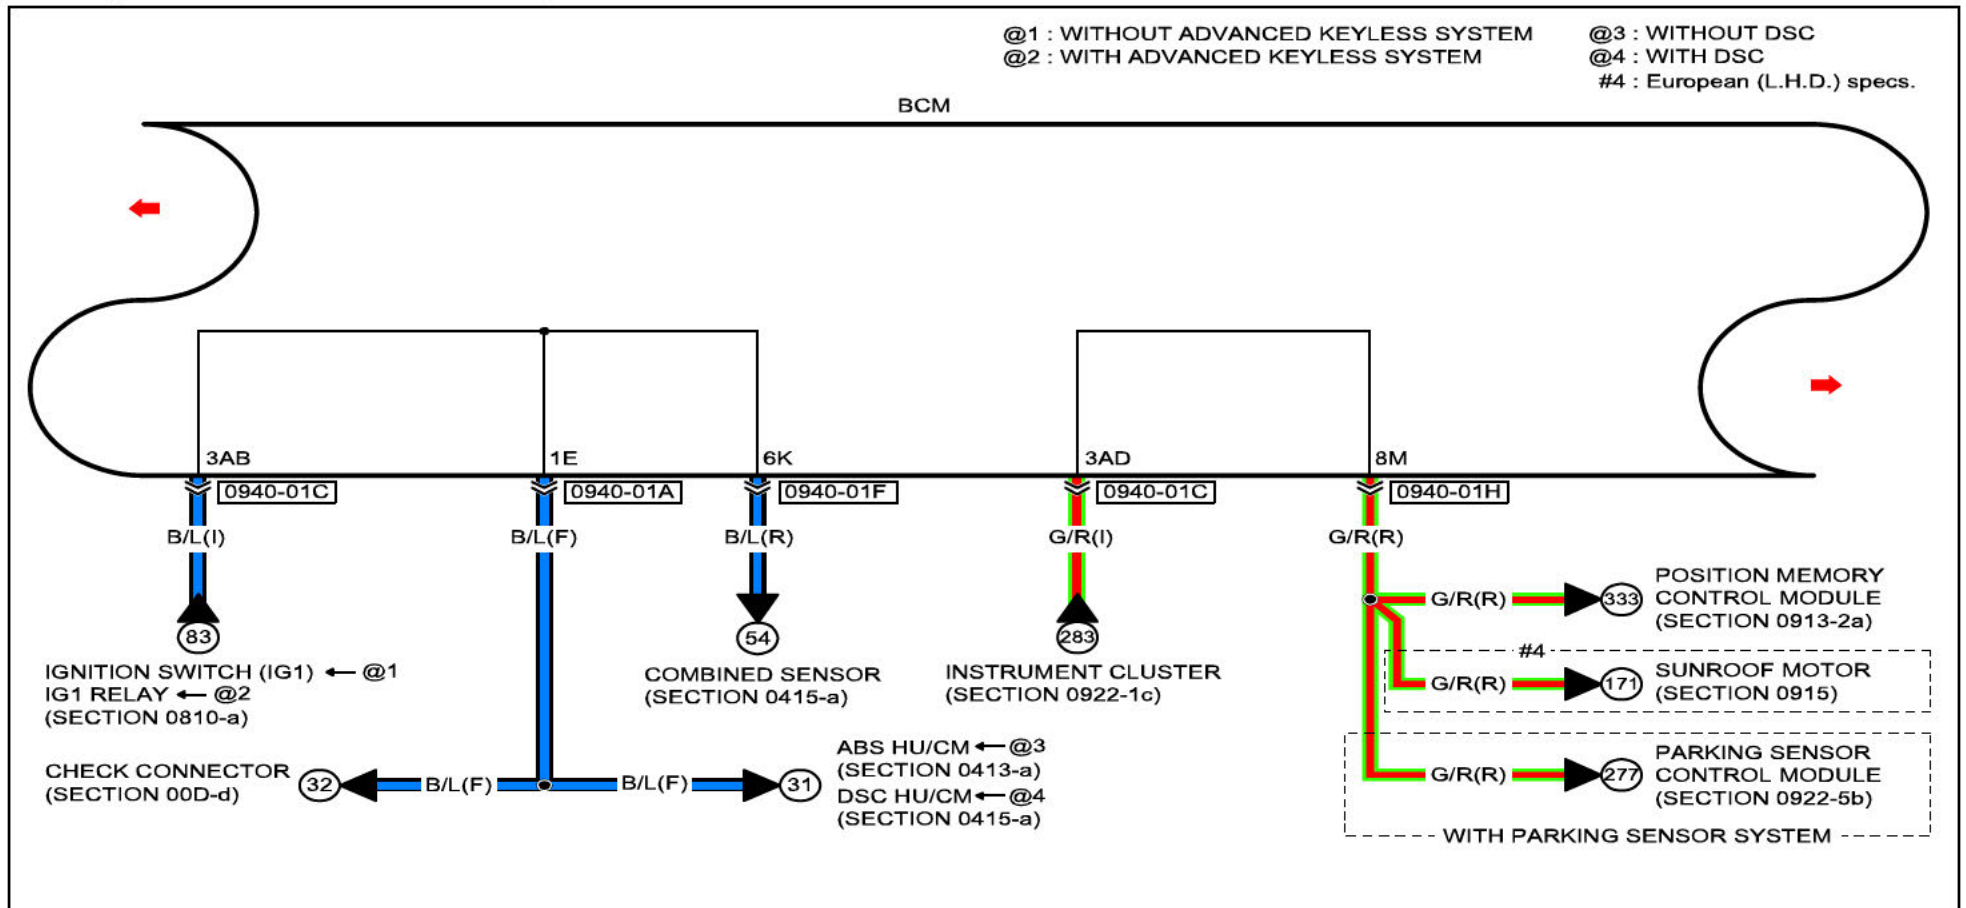

BCM (BODY CONTROL MODULE)

0940-t

- : INSTRUMENT PANEL HARNESS
- : REAR HARNESS
- : REAR NO.2 HARNESS
- : REAR NO.3 HARNESS
- : REAR NO.4 HARNESS
- : REAR NO.5 HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT HARNESS
- : FLOOR HARNESS

0940-01F
BCM
[BLACK]

(R)-(R2)
C-35

[4SD]

0940-07
TRUNK LID OPENER SWITCH

(R)-(R3)
C-37

(R2)-(R3)
C-41

(R)-(R3)
C-36

 
0940-07
LIFTGATE OPENER SWITCH

[5HB]


0940-07
LIFTGATE OPENER SWITCH

(R)-(R2)
C-51


[WAGON]

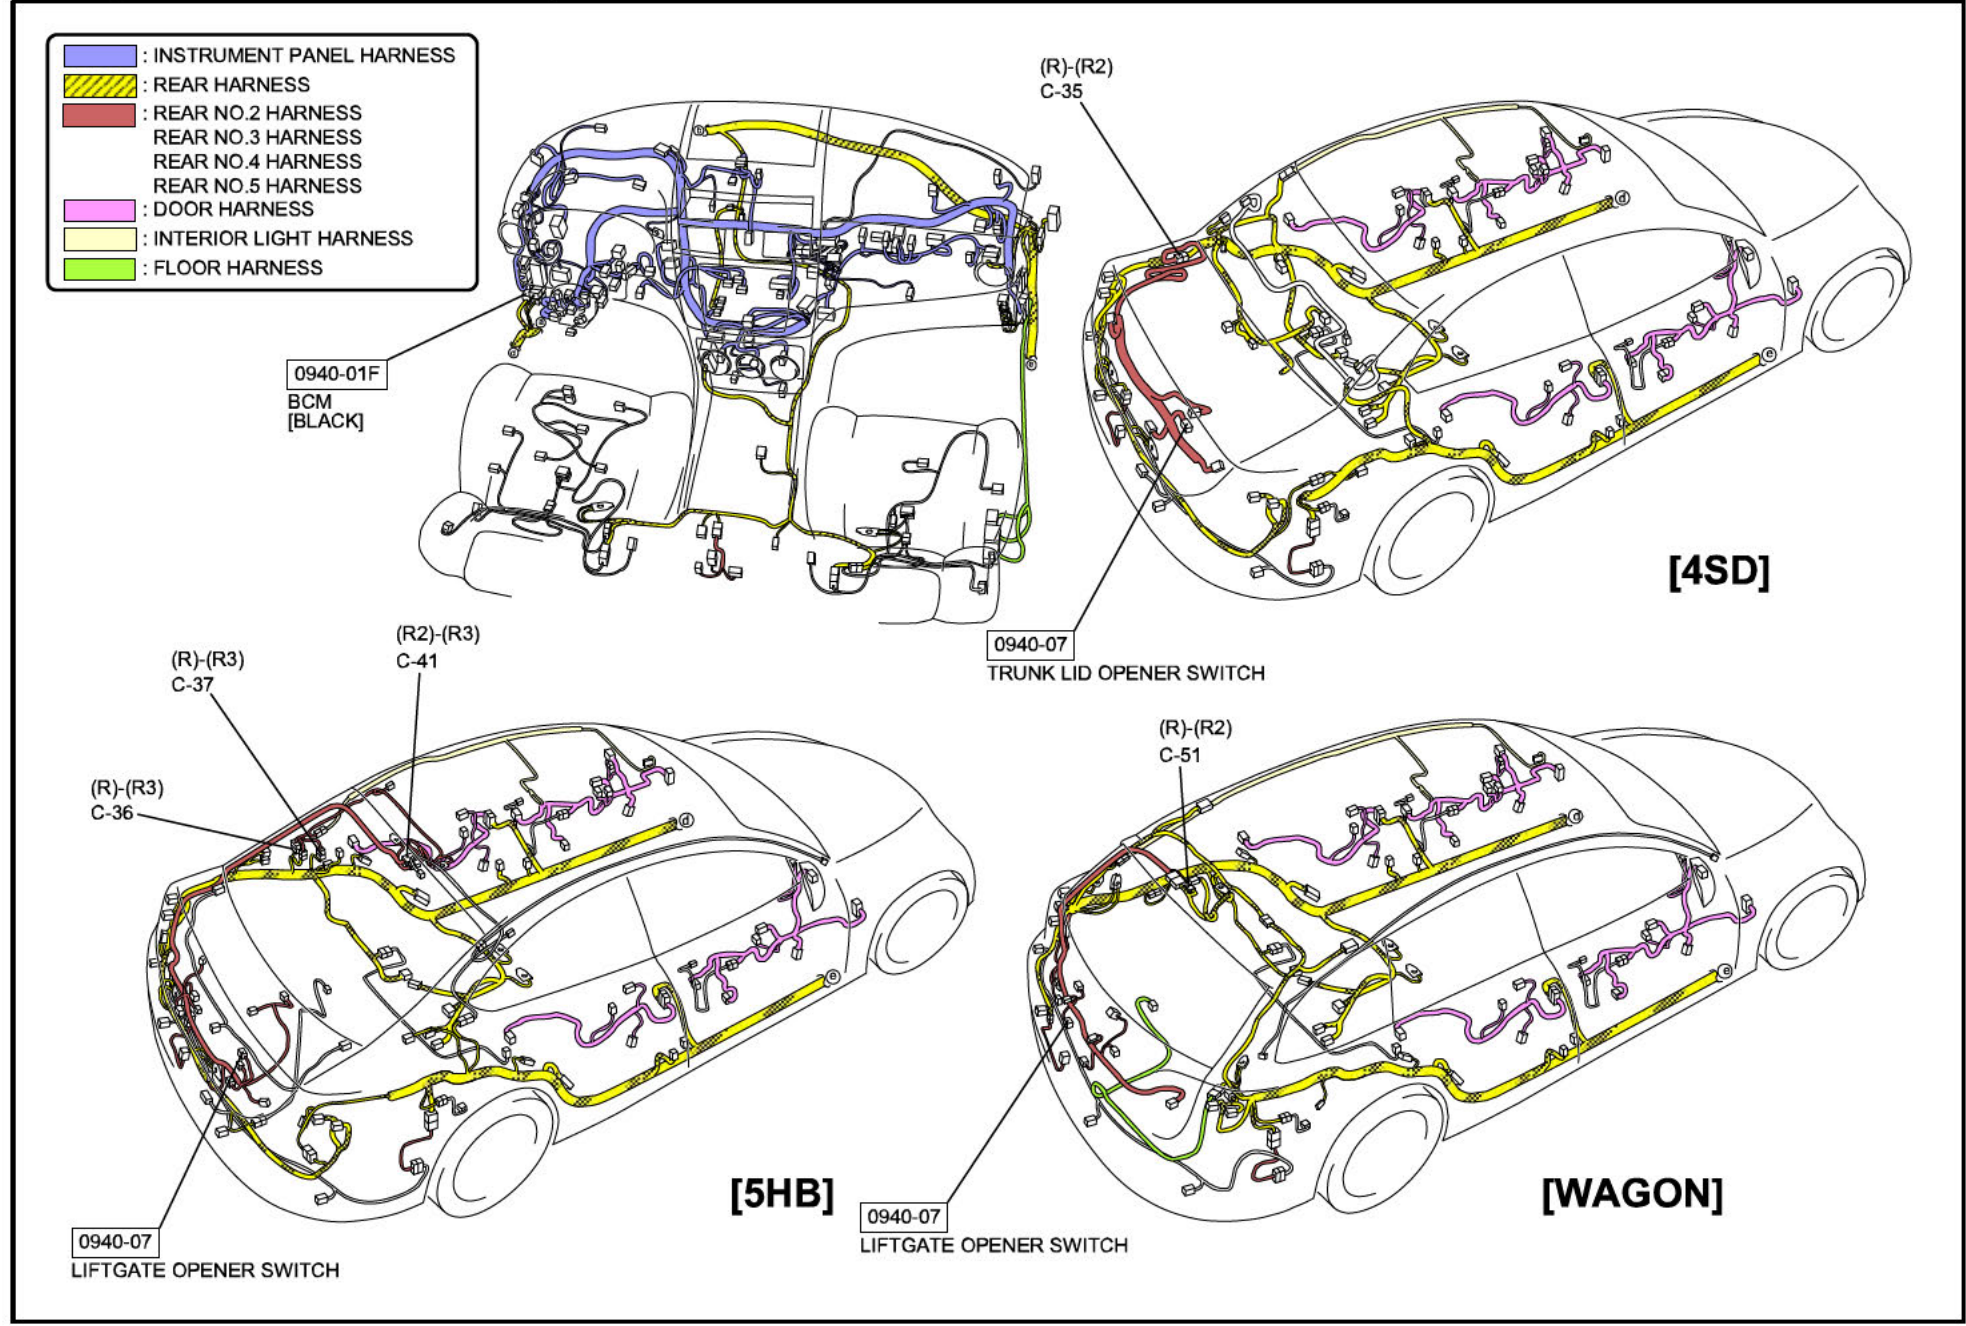


C-35
REAR HARNESS-REAR NO.2 HARNESS

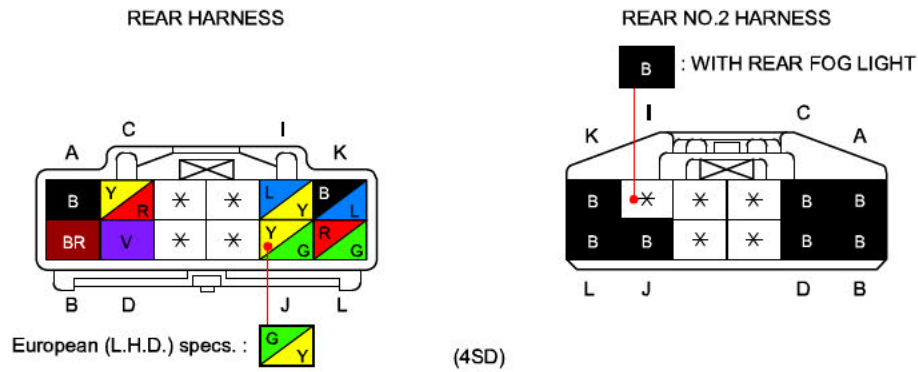 

C-36
REAR HARNESS-REAR NO.3 HARNESS

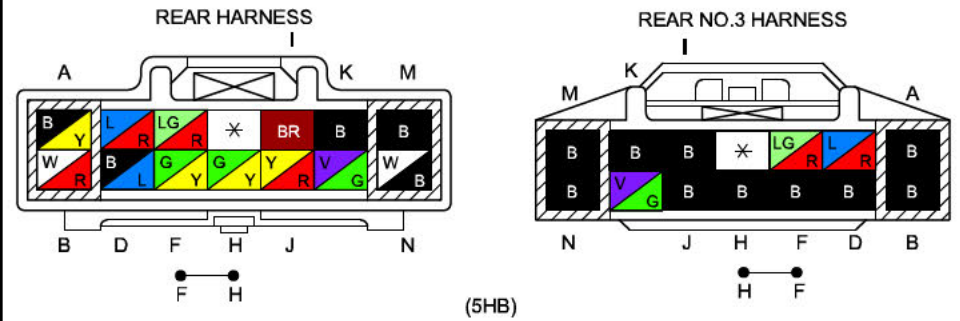 

C-37
REAR HARNESS-REAR NO.3 HARNESS

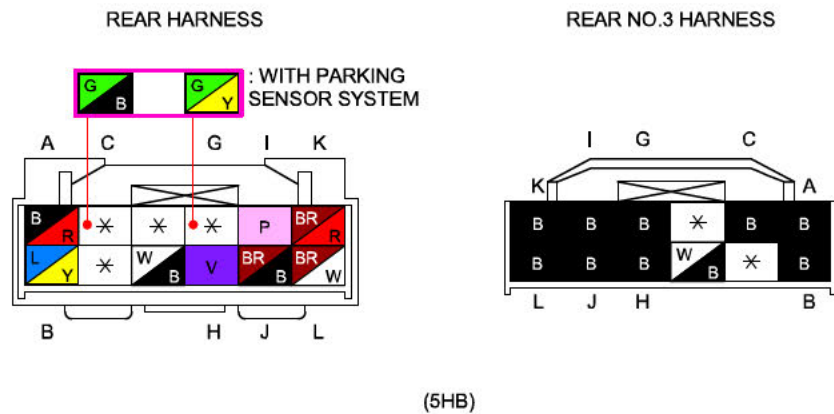 

C-41
REAR NO.2 HARNESS-REAR NO.3 HARNESS

