

WIRING HARNESS

SECTION WH

GI

EM

LC

EC

FE

CONTENTS

PRECAUTION

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4
---	---

ENGINE

ENGINE (QG1.5)

Circuit Diagram	5
Wiring Diagram	6
Power & Ground	6
POS	7
PHASE	8
WTS	9
Oxygen Sensor	10
Knock Sensor	11
A/C Refrigerant Pressure Sensor	12
TPS	13
P.S Signal	14
AT Communication	15
Ignition	16
Injector	17
Fuel Pump	18
Canister	19
ISC	20
MAP	21
AT Communication	22
Cooling Fan	23
Diagnosis	24

ENGINE (QG1.6)

Circuit Diagram	25
Wiring Diagram	26
Power & Ground	26
POS	27
PHASE	28
WTS	29
Oxygen Sensor	30
Knock Sensor	31
A/C Refrigerant Pressure Sensor	32

ETC	33
AWU	35
P.S Signal	36
AT Communication	37
Ignition	38
Injector	39
Fuel Pump	40
Canister	41
CVTC	42
AFM	43
Ignition Signal	44
ECM Power Supply	45
Neutral Position Signal	46
AT Signal	47
Cooling Fan	48
Diagnosis	49

RS

AC

AV

EL

WH

CL

CHASSIS

AUTOMATIC TRANSAXLE

Circuit Diagram	50
Wiring Diagram	51
AT	51
AT-DEVICE	56

MT

AT

FA

ABS SYSTEM

Circuit Diagram	57
Wiring Diagram	58
ABS	58

RA

ELECTRIC

SRS AIRBAG

Circuit Diagram	61
Wiring Diagram	62
SRS	62

ST

BT

MANUAL/AUTO AIR CONDITIONER

Circuit Diagram	64
Manual A/C	64

CONTENTS

Wiring Diagram	65	Headlamp	117
Manual A/C	65	Headlamp Aiming	118
Circuit Diagram	70	TAIL LAMP	
Auto A/C	70	Circuit Diagram	119
Wiring Diagram	71	Wiring Diagram	120
Auto A/C	71	Tail lamp.....	120
AUDIO		FOG LAMP	
Circuit Diagram	77	Wiring Diagram	122
Audio	77	Fog lamp (FR)	122
Wiring Diagram	78	Fog lamp (RR)	123
Audio	78	ROOM LAMP	
COMBINATION METER		Wiring Diagram	124
Circuit Diagram	80	Room lamp	124
Wiring Diagram	81	TRUNK ROOM LAMP	
Warning light	81	Wiring Diagram	125
Gage	85	Trunk room lamp	125
COMBINATION METER - CHIME		STOP LAMP	
Circuit Diagram	87	Wiring Diagram	126
Wiring Diagram	88	Stop lamp.....	126
Warning light (Buzzer)	88	REVERSE LAMP	
Meter	90	Wiring Diagram	127
Meter (Diagnosis)	91	Reverse lamp	127
LOCK • UNLOCK		ILLUMINATION	
Circuit Diagram - Single	92	Circuit Diagram	128
Wiring Diagram	93	Wiring Diagram	129
Lock-Unlock (Single)	93	Illumination	129
Circuit Diagram - Double	97	TURN SIGNAL LAMP • HAZARD LAMP	
Wiring Diagram	98	Circuit Diagram	133
Lock-Unlock (Double)	98	Wiring Diagram	134
ANTI-THEFT SYSTEM		Turn signal lamp	134
Circuit Diagram	103	DIGITAL CLOCK	
Wiring Diagram	104	Wiring Diagram	136
Anti-Theft	104	Digital clock	136
IMMOBILIZER		WIPER	
Wiring Diagram	107	Wiring Diagram	137
Immobilizer	107	Wiper	137
POWER WINDOW SYSTEM		HORN	
Circuit Diagram	108	Wiring Diagram	138
Wiring Diagram	109	Horn	138
Power Window (4DR)	109	CIGARETTE LIGHTER / POWER SOCKET	
Power Window (2DR)	112	Wiring Diagram	139
CHARGING SYSTEM		Power Socket	139
Wiring Diagram	114	HEATER SEAT	
Charge	114	Wiring Diagram	140
STARTING SYSTEM		Heater Seat.....	140
Wiring Diagram	115	TRUNK LID OPENER	
Start (M/T)	115	Wiring Diagram	141
Start (A/T)	116	Trunk Opener	141
HEADLAMP			
Wiring Diagram	117		

CONTENTS

DEFOGGER, DE-ICER

Circuit Diagram	142
Wiring Diagram	143
Defogger	143

MIRROR

Wiring Diagram	145
Mirror	145

CAN COMMUNICATION

Wiring Diagram	146
CAN Communication	146

POWER SUPPLY ROUTING

Circuit Diagram	147
Wiring Diagram	148
Power	148
Ground - Engine Room	155
Ground - Main	158
Ground - EGI (QG16)	162
Ground - EGI (QG15)	163
Ground - Body	164
Ground - Tail	165

ELECTRICAL UNIT LOCATION

Engine Room	166
Interior	167
Trunk Room	168

HARNESS DIAGRAM

Overall	169
How to Read Harness Layout	170

HARNESS LAYOUT

Engine Room Harness	171
Main Harness	173
Engine Control Harness (QG15)	175
Engine Control Harness (QG16)	177
Body, Body No. 2, Tail and Room lamp harness	179
Door Harness	181

FUSE BLOCK-JUNCTION BLOCK (J/B)

Fuse Block	183
------------------	-----

FUSE & FUSIBLE LINK BOX

Fuse & Fusible Link Box	184
-------------------------------	-----

CONTROL UNIT, JOINT CONNECTOR

Terminal Arrangement	185
----------------------------	-----

GI

EM

LC

EC

FE

RS

AC

AV

EL

WH

CL

MT

AT

FA

RA

BR



ST

BT

ENGINE (QG1.5)

Wiring Diagram



EC/Power & Ground

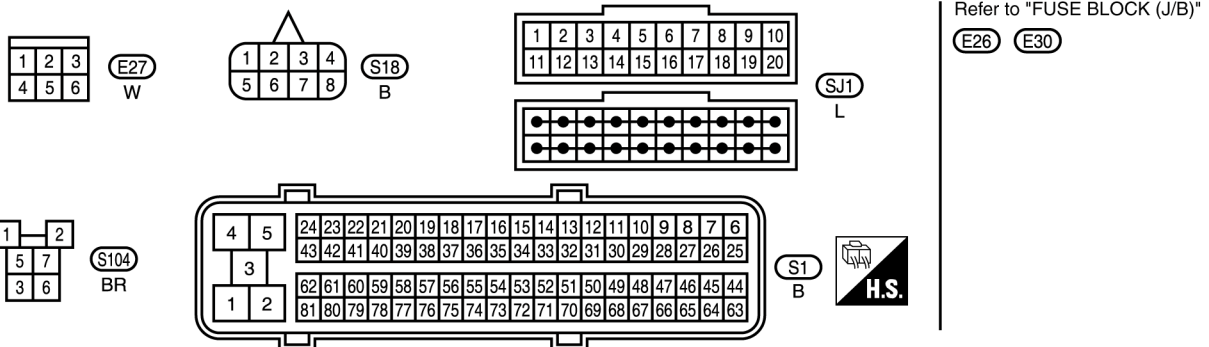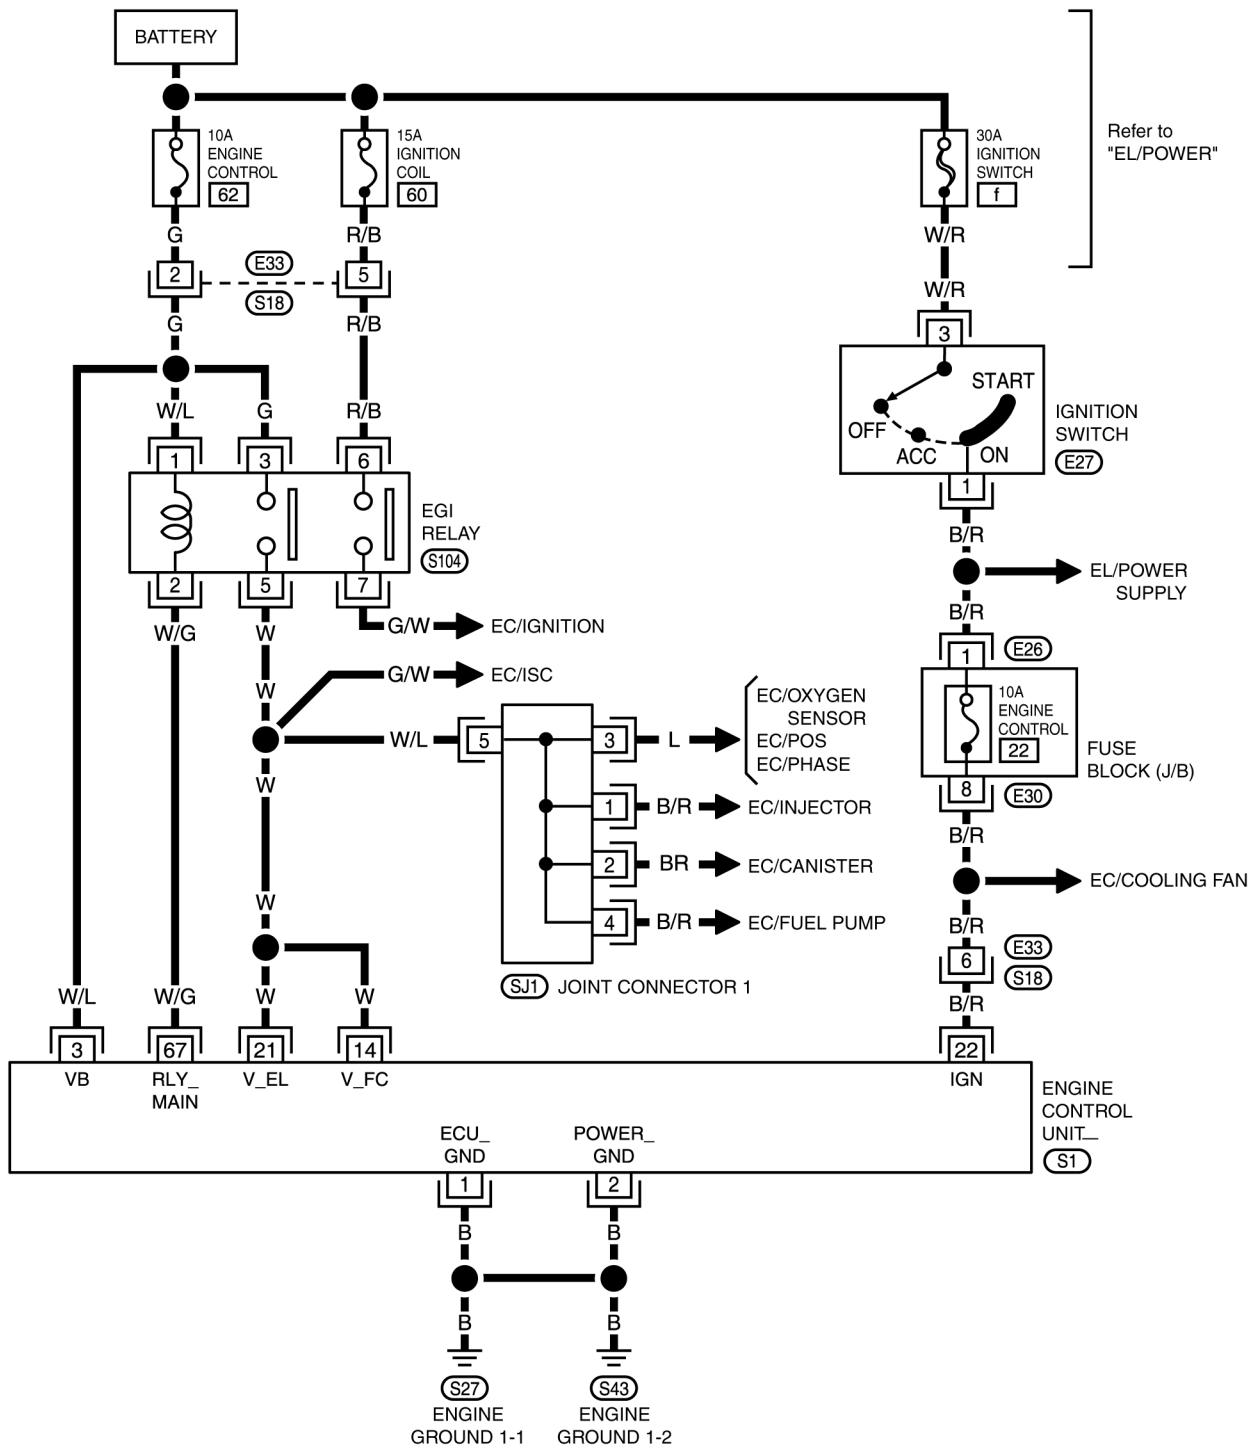

ENGINE (QG1.5)

Wiring Diagram

EC/MAP

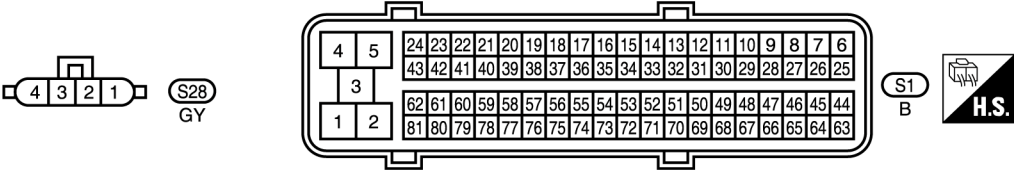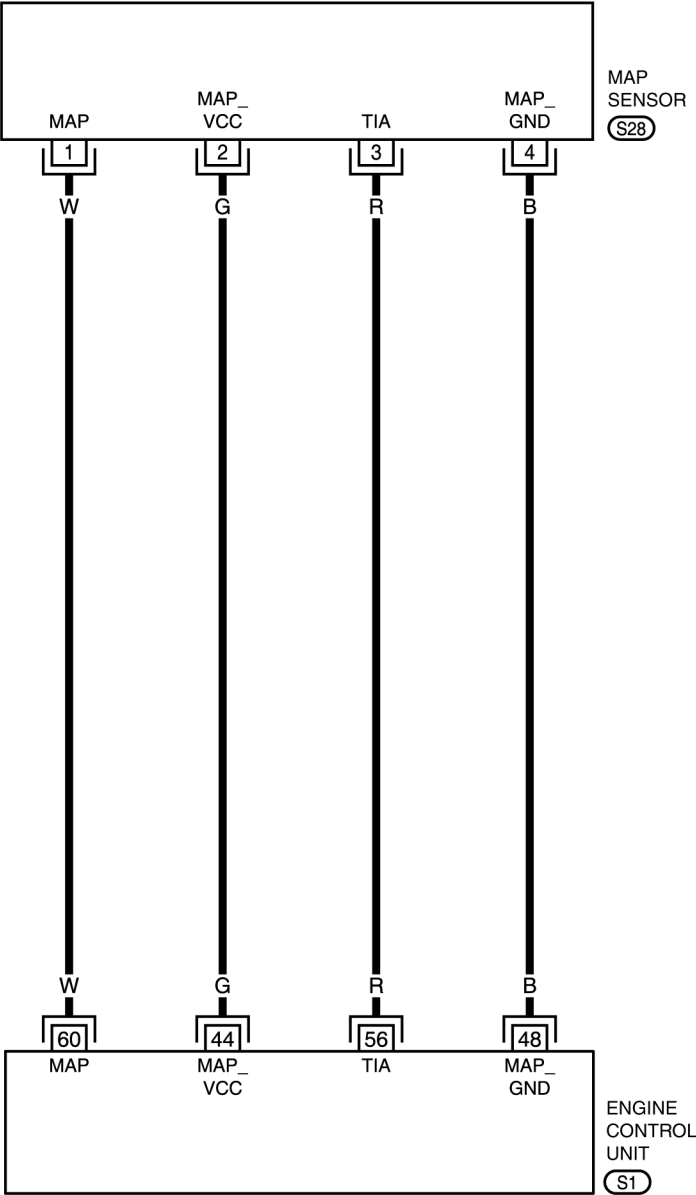

GI

EM

LC

EC

FE

RS

AC

AV

EL

WH

CL

MT

AT

FA

RA

BR



ST

BT

ENGINE (QG1.6)

Wiring Diagram




EC/A/C Refrigerant Pressure Sensor

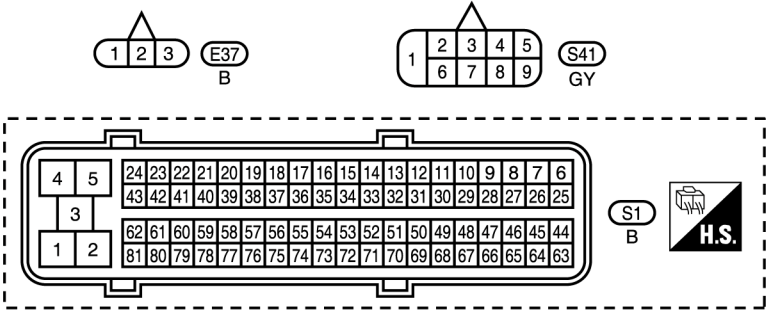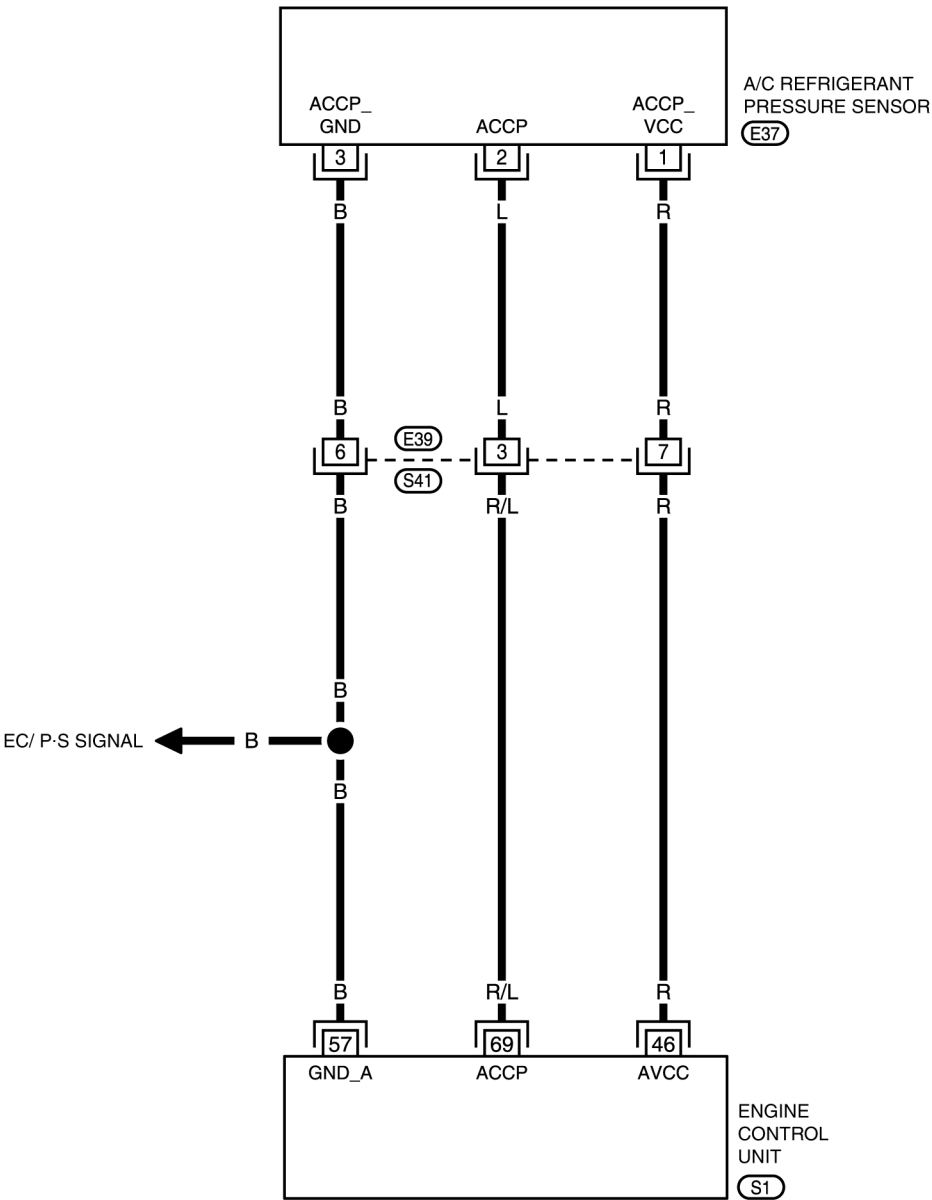

ENGINE (QG1.6)

Wiring Diagram

 

EC/P-S Signal

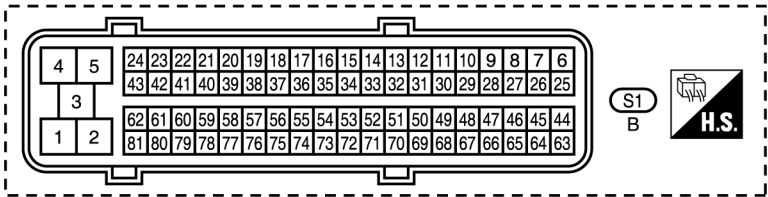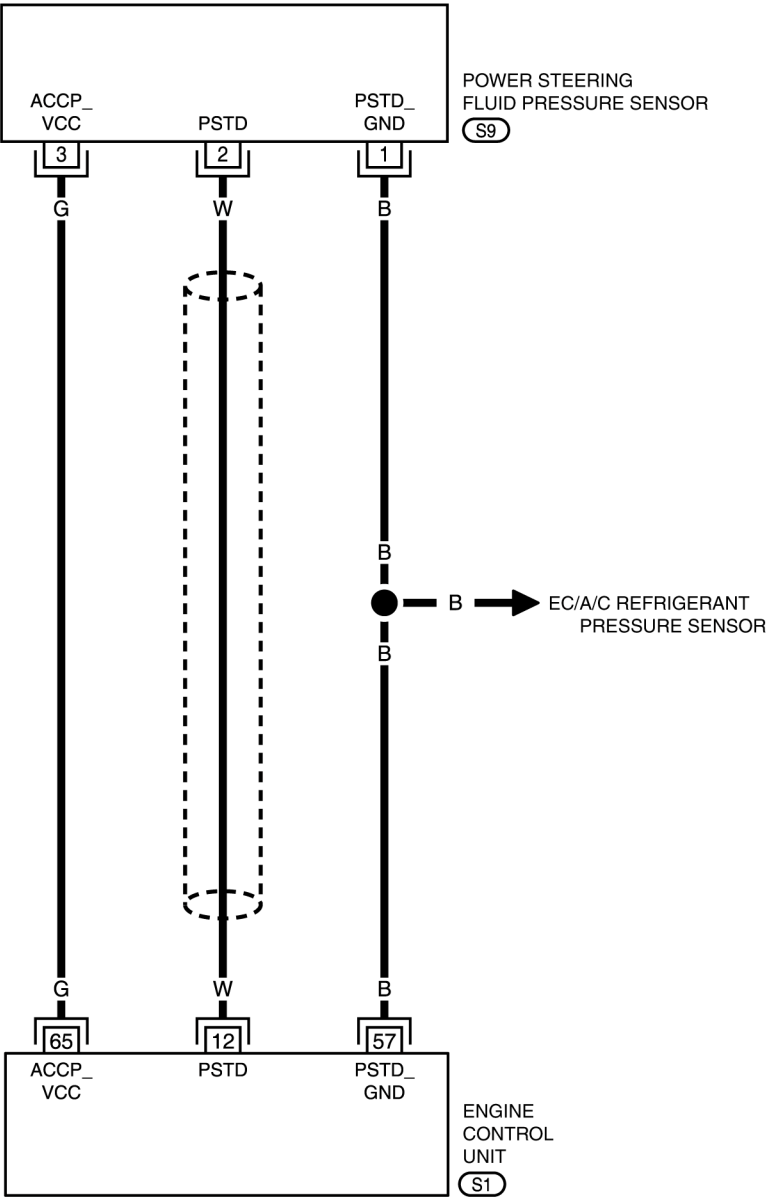

MANUAL/AUTO AIR CONDITIONER

Wiring Diagram



AC/AUTO A/C- 05

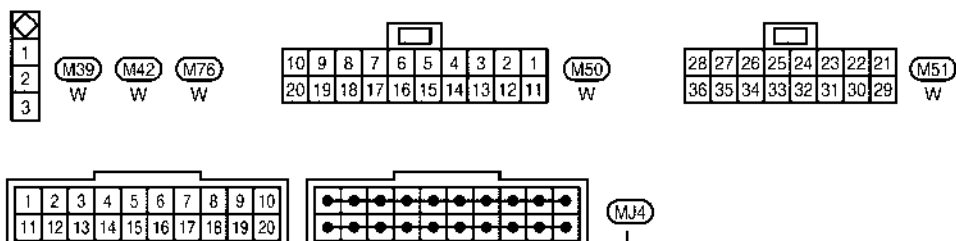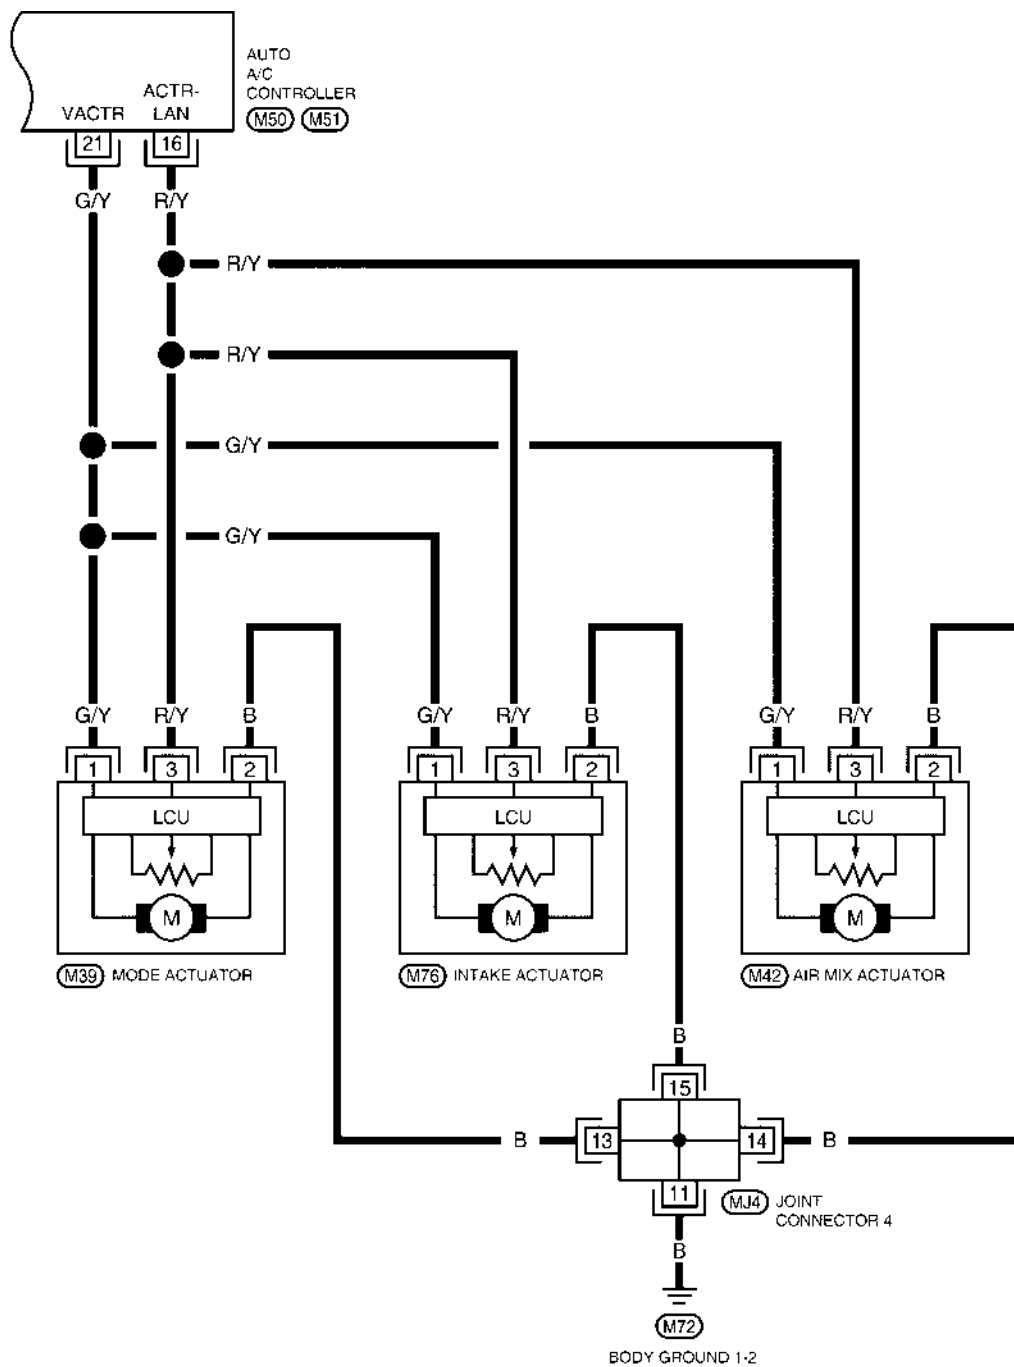

LOCK • UNLOCK

Wiring Diagram







EL/Lock-Unlock (Single)- 02

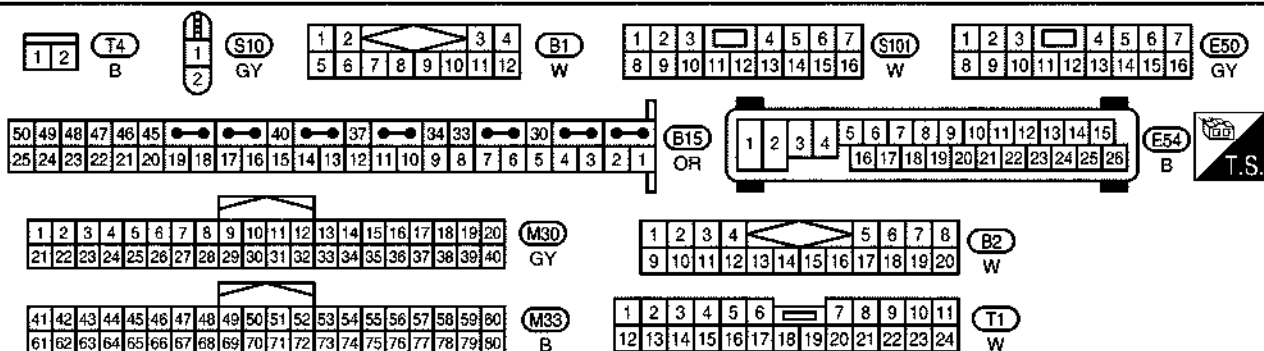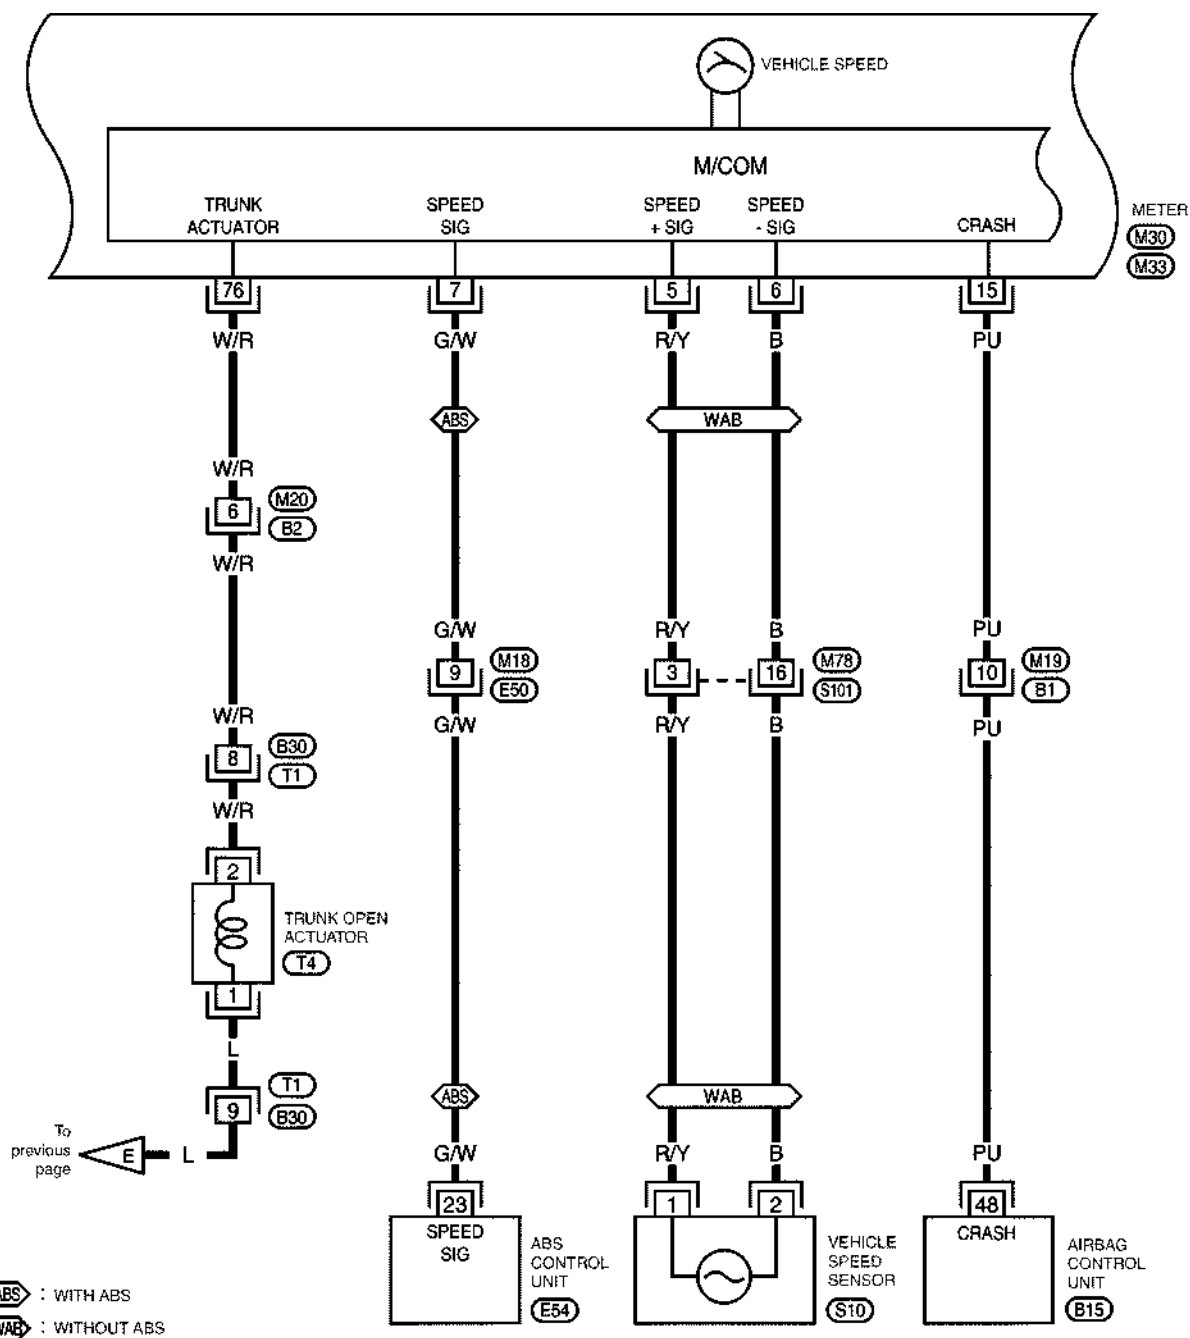

HEADLAMP LEVELLING DEVICE (EUROPE)

Wiring Diagram

     

EL-Headlamp Aiming

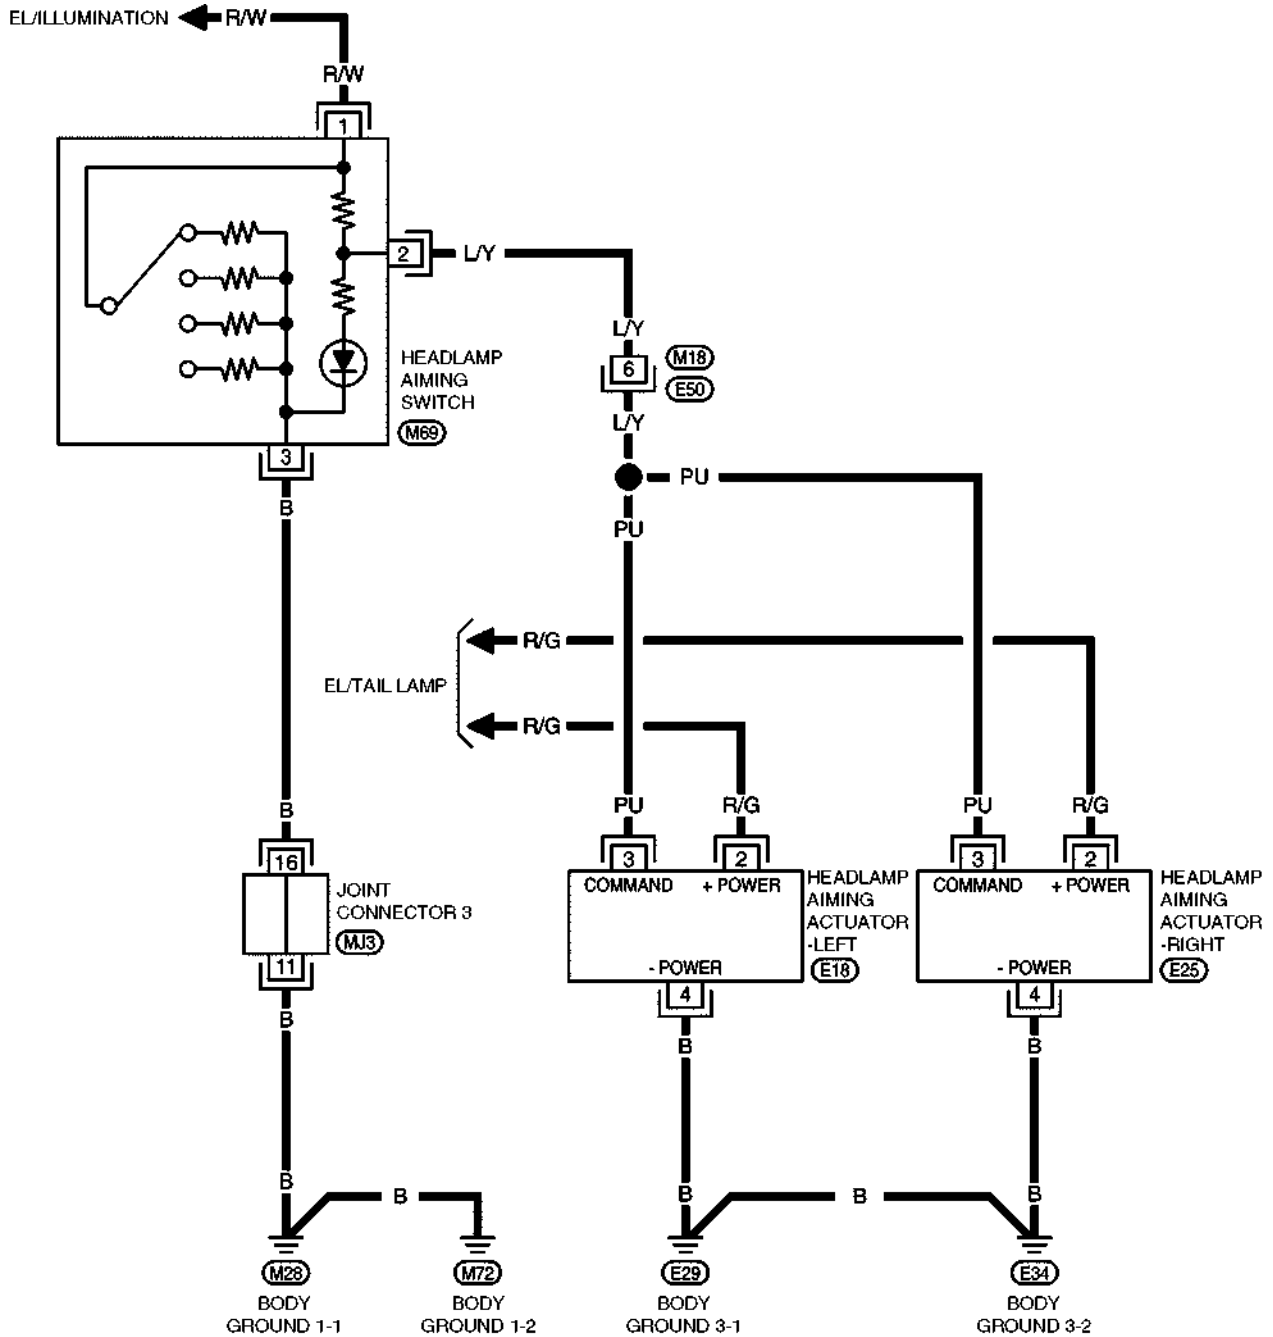

REVERSE LAMP

Wiring Diagram


EL/Reverse Lamp

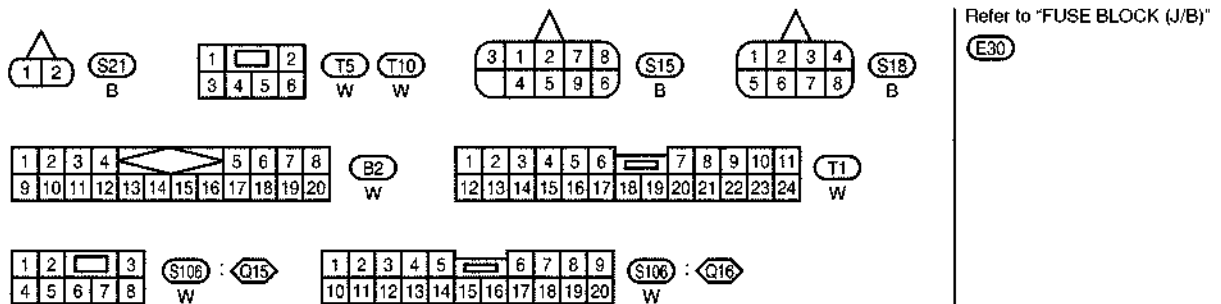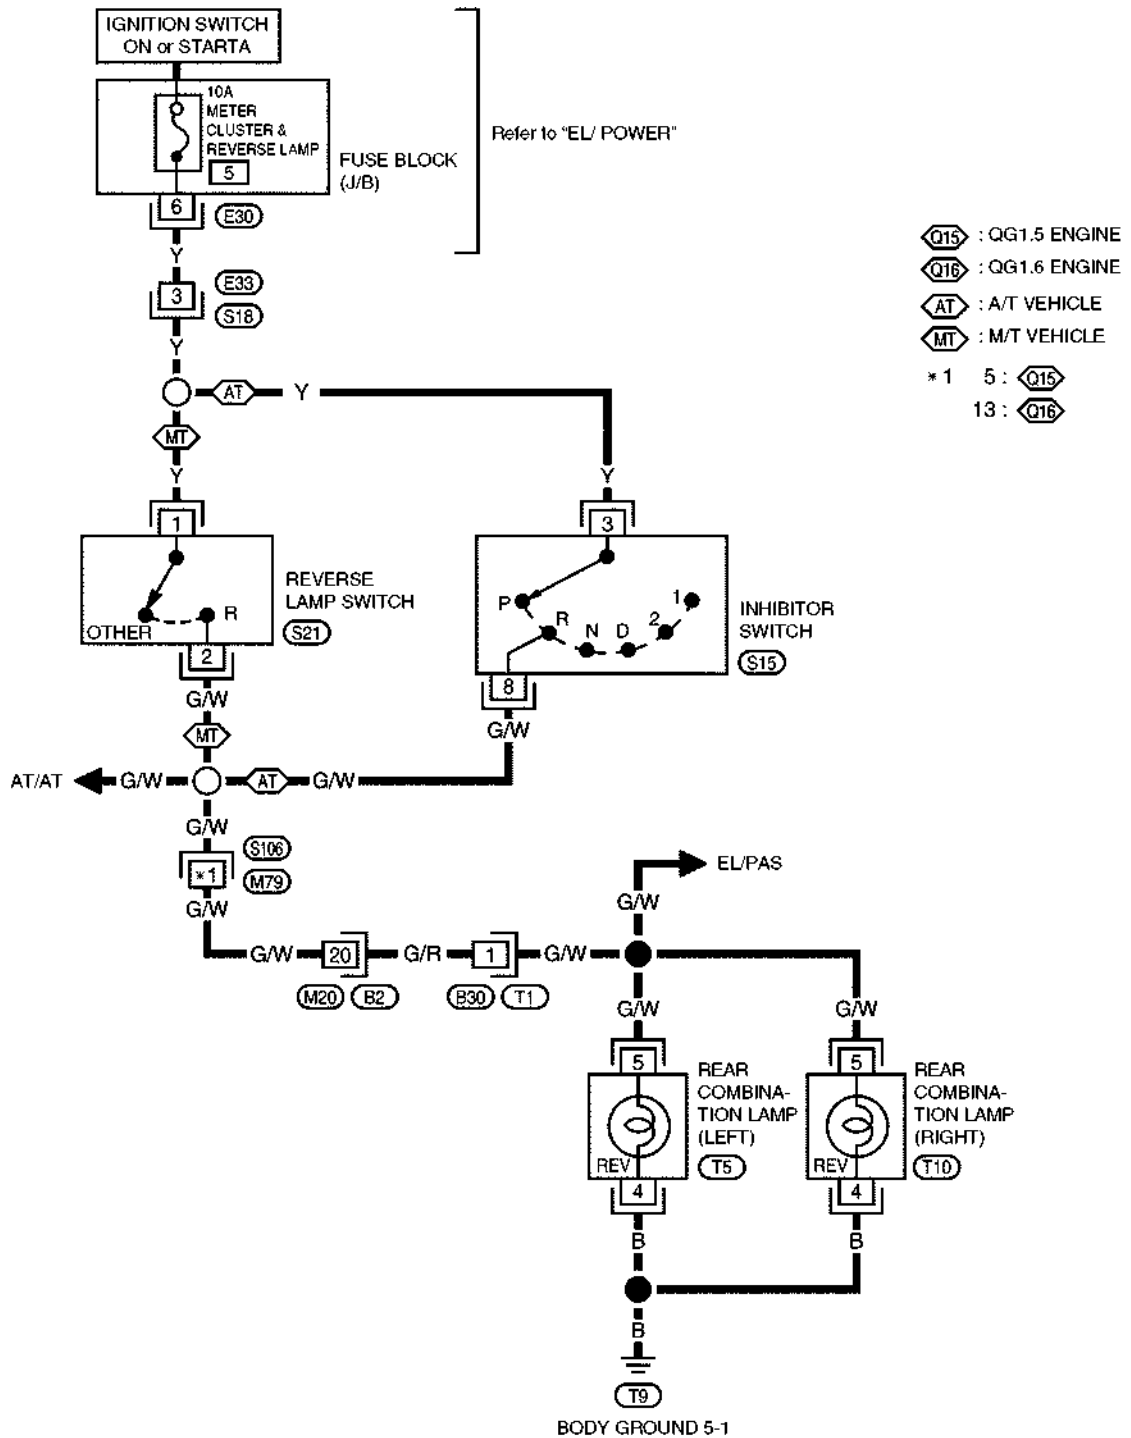

WIPER


Wiring Diagram

EL/Wiper

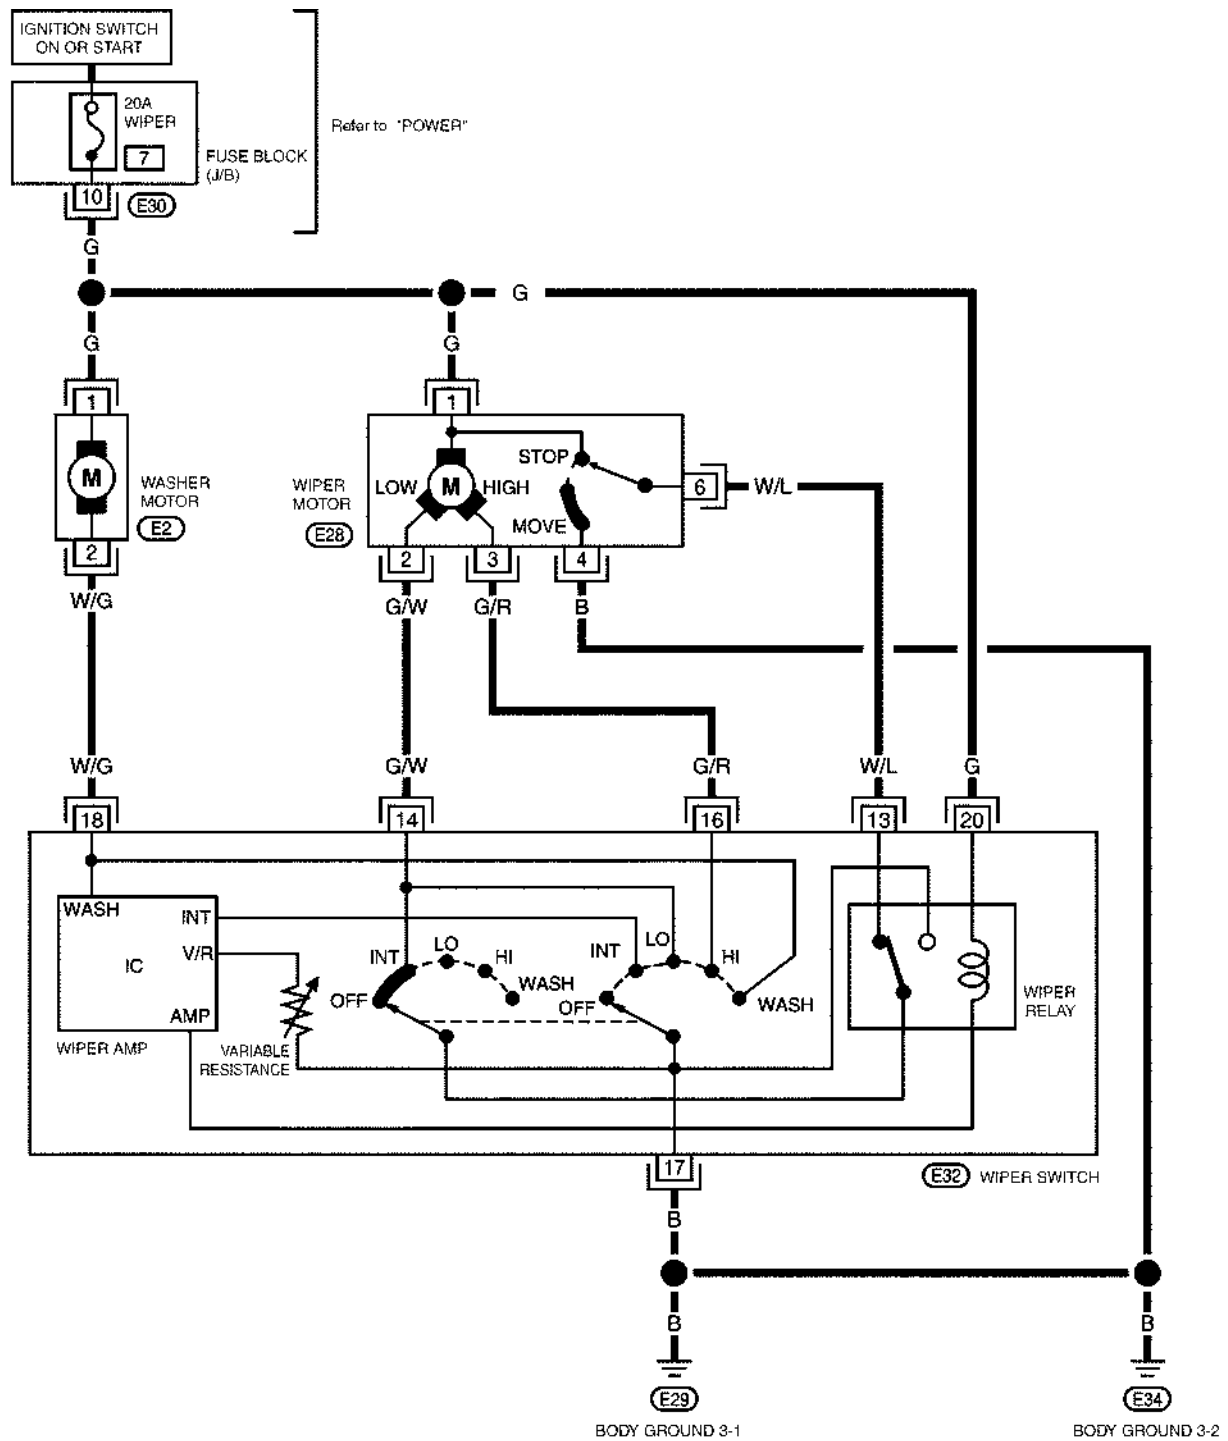

REFER TO FUSE BLOCK (J/B)

 
E30



SAWZ037_Q1

POWER SUPPLY ROUTING

Circuit Diagram

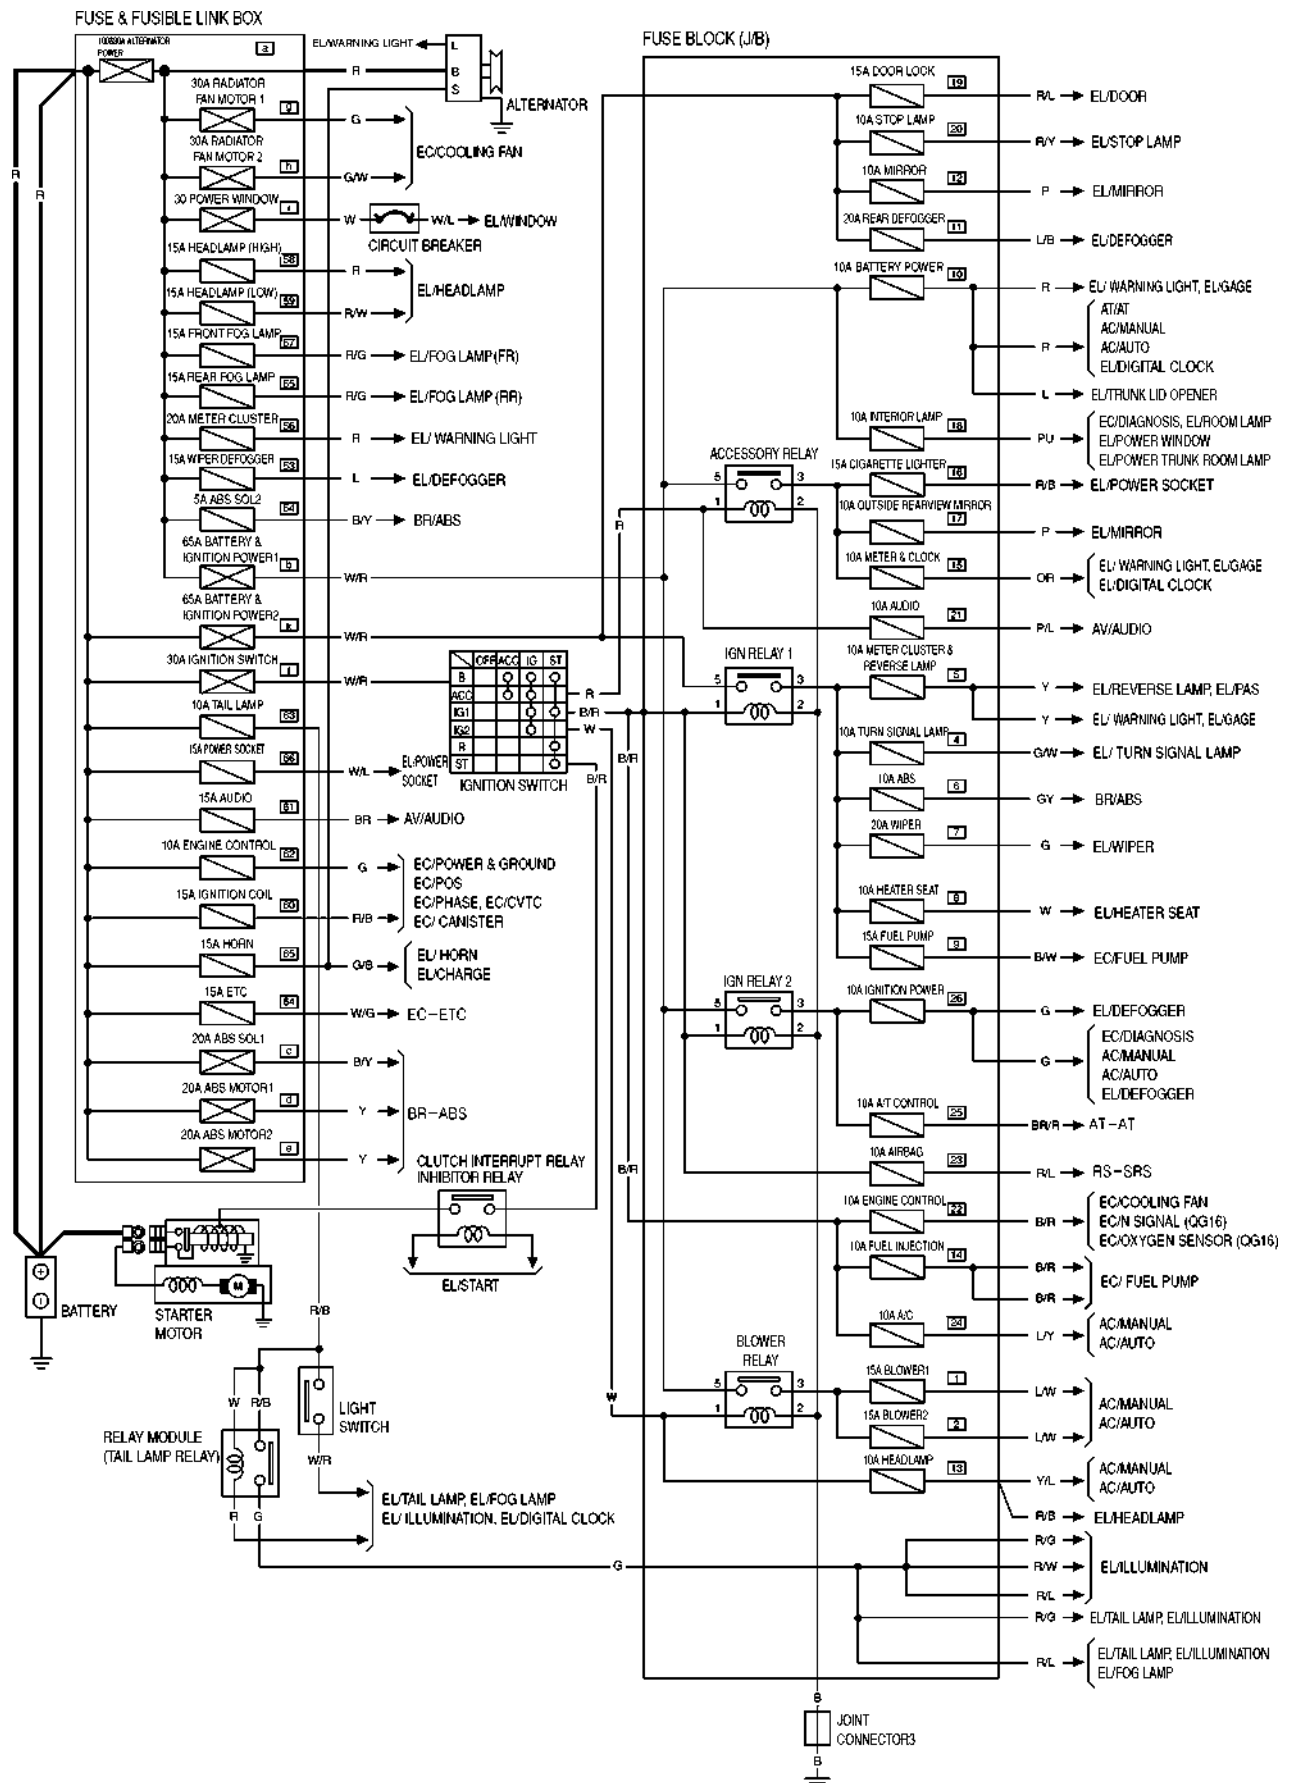

SRZ011_01

HARNESS LAYOUT

Engine Room Harness (Continued)

A3	(E1)	B/3	: AQS SENSOR	G5	(E32)	GY/8	: WIPER SWITCH
A1	(E2)	GY/2	: WASHER MOTOR	D2	(E33)	GY/8	: CONNECTED WITH (S18) (QG 15)
C2	(E3)	W/2	: HOOD SWITCH			GY/8	: CONNECTED WITH (S43) (QG 16)
C1	(E4)	GY/2	: TURN SIGNAL LAMP (SIDE/LEFT)	D2	(E34)	TERMINAL	: BODY GROUND 3-2
B2	(E6)	-	: RELAY BOX	D2	(E35)	TERMINAL	: BODY GROUND 3-5
B2	(E7)	B/2	: AMB SENSOR	G5	(E36)	W/3	: FRONT FOG LAMP SWITCH
C1	(E8)	W/4	: CONNECTED WITH (B101)	A3	(E37)	B/3	: A/C REFRIGERANT PRESSURE SENSOR
A2	(E9)	B/2	: TURN SIGNAL LAMP (FRONT/RIGHT)	D1	(E38)	GY/2	: DE-ICER
B1	(E11)	GY/2	: WHEEL SENSOR (FRONT/RIGHT)	D2	(E39)	GY/8	: CONNECTED WITH (S41)
F2	(E12)	W/2	: CONNECTED WITH (M17)	F4	(E40)	W/16	: CONNECTED WITH (M15)
B1	(E13)	TERMINAL	: ALTERNATOR GROUND	B1	(E41)	TERMINAL	: BODY GROUND 3-4
D1	(E14)	GY/2	: BRAKE FLUID SWITCH	B2	(E42)	B/1	: COMPRESSOR
D3	(E15)	GY/2	: TURN SIGNAL LAMP (FRONT/LEFT)	C2	(E43)	B/1	: BATTERY 2
D2	(E16)	L/2	: WHEEL SENSOR (FRONT/LEFT)	B2	(E44)	B/2	: RADIATOR FAN MOTOR 1
B2	(E17)	TERMINAL	: ALTERNATOR 1	F4	(E45)	W/16	: CONNECTED WITH (M16)
C3	(E18)	B/8	: HEADLAMP-LEFT	C4	(E46)	B/2	: FRONT FOG LAMP-LEFT
F5	(E19)	W/2	: FUSE BLOCK (J/B)	B3	(E47)	B/2	: HORN (LOW)
D2	(E20)	GY/2	: DROPPING RESISTOR	C2	(E48)	B/1	: BATTERY 1
C2	(E22)	-	: FUSE & FUSIBLE LINK BOX	A2	(E49)	B/2	: RADIATOR FAN MOTOR 2
B2	(E24)	W/2	: ALTERNATOR 2	F4	(E50)	GY/16	: CONNECTED WITH (M18)
A2	(E25)	B/8	: HEADLAMP-RIGHT	B2	(E51)	TERMINAL	: BODY GROUND 3-3
F5	(E26)	W/6	: FUSE BLOCK (J/B)	A3	(E52)	B/2	: FRONT FOG LAMP-RIGHT
G5	(E27)	W/6	: IGNITION SWITCH	B2	(E53)	B/2	: HORN (HIGH)
D1	(E28)	B/6	: WIPER MOTOR	C1	(E54)	B/26	: ABS CONTROL UNIT
A1	(E29)	TERMINAL	: BODY GROUND 3-1	G5	(E55)	W/8	: COMBINATION SWITCH
F5	(E30)	W/10	: FUSE BLOCK (J/B)	G5	(E56)	BR/4	: COMBINATION SWITCH
G5	(E31)	BR/2	: KEY SWITCH				