

Table of Contents

POWER

BATTERY POWER SUPPLY

<u>BATTERY POWER SUPPLY</u>	2
<u>BATTERY POWER SUPPLY FUSE No. 11</u>	7
<u>BATTERY POWER SUPPLY FUSE No. 34</u>	8
<u>BATTERY POWER SUPPLY FUSE No. 38</u>	9
<u>BATTERY POWER SUPPLY FUSE No. 46 (TAIL LAMP RELAY)</u>	10
<u>BATTERY POWER SUPPLY FUSE No. 47 (TAIL LAMP RELAY)</u>	12
<u>BATTERY POWER SUPPLY FUSE No. 77</u>	13

ACCESSORY POWER SUPPLY

<u>ACCESSORY POWER SUPPLY</u>	14
<u>ACCESSORY POWER SUPPLY FUSE No. 19</u>	15

ON POWER SUPPLY

<u>ON POWER SUPPLY</u>	16
<u>ON POWER SUPPLY FUSE No. 3</u>	19
<u>ON POWER SUPPLY FUSE No. 4</u>	20
<u>ON POWER SUPPLY FUSE No. 55</u>	21

FUSE AND RELAY BOX

<u>FUSE AND RELAY BOX</u>	22
<u>Fuse, Relay box and Terminal Arrangement</u>	22

FUSE BLOCK (J/B)

<u>FUSE BLOCK (J/B)</u>	23
<u>Fuse, Connector and Terminal Arrangement</u>	23

FUSE, FUSIBLE LINK BOX AND RELAY BOX 1

<u>FUSE, FUSIBLE LINK BOX AND RELAY BOX 1</u>	24
<u>Fuse, Fusible link, Relay box and Terminal Arrangement</u>	24

FUSE, FUSIBLE LINK BOX AND RELAY BOX 2

<u>FUSE, FUSIBLE LINK BOX AND RELAY BOX 2</u>	25
<u>Fuse, Fusible link, Relay box and Terminal Arrangement</u>	25

FUSIBLE LINK BOX (BATTERY)

<u>FUSIBLE LINK BOX (BATTERY)</u>	26
<u>Fuse, Fusible link, Relay box and Terminal Arrangement</u>	26

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<u>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</u>	27
<u>Fuse, Relay, Connector and Terminal Arrangement</u>	27

RELAY BOX

<u>RELAY BOX</u>	28
----------------------------------	----

<u>Fuse, Fusible link, Relay box and Terminal Arrangement</u>	28
---	----

GROUND

GROUND

<u>GROUND - BATTERY CABLE</u>	30
<u>GROUND - BODY HARNESS</u>	31
<u>GROUND - HIGH VOLTAGE HARNESS</u>	34
<u>GROUND - MAIN HARNESS</u>	35
<u>GROUND - MOTOR ROOM HARNESS</u>	39

WIRING DIAGRAMS

A GENERAL INFORMATION

GI GENERAL INFORMATION

<u>CONSULT CHECKING SYSTEM</u>	42
--	----

C ELECTRIC POWER TRAIN

EVB EV BATTERY SYSTEM

<u>EV BATTERY SYSTEM</u>	46
--	----

EVC EV CONTROL SYSTEM

<u>EV CONTROL SYSTEM</u>	47
<u>HIGH VOLTAGE CIRCUIT</u>	52

TMS TRACTION MOTOR SYSTEM

<u>TRACTION MOTOR SYSTEM</u>	53
--	----

VC VEHICLE CHARGING SYSTEM

<u>VEHICLE CHARGING SYSTEM</u>	54
--	----

D TRANSMISSION & DRIVELINE

TM TRANSAXLE & TRANSMISSION

<u>ELECTRIC SHIFT SYSTEM</u>	56
--	----

E SUSPENSION

WT ROAD WHEELS & TIRES

<u>TIRE PRESSURE MONITORING SYSTEM</u>	58
--	----

F BRAKES

BR BRAKE SYSTEM

<u>BRAKE SYSTEM</u>	59
-------------------------------------	----

BRC BRAKE CONTROL SYSTEM

<u>AUTOMATIC EMERGENCY BRAKING AND REAR AUTOMATIC BRAKING SYSTEM</u>	60
<u>BRAKE CONTROL SYSTEM</u>	62

PB PARKING BRAKE SYSTEM

<u>ELECTRIC PARKING BRAKE SYSTEM</u>	64
--	----

Table of Contents

G STEERING		<u>DAYTIME RUNNING LIGHT SYSTEM</u>	92
ST STEERING SYSTEM		<u>EXTERIOR LAMP BATTERY SAVER SYSTEM</u>	94
	<u>HEATED STEERING WHEEL</u>	<u>FOG LAMPS</u>	95
	65	<u>HEADLAMP</u>	96
STC STEERING CONTROL SYSTEM		<u>PARKING, LICENSE PLATE AND TAIL LAMPS</u>	98
	<u>ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM</u>	<u>STOP LAMP</u>	99
	66	<u>TURN SIGNAL AND HAZARD WARNING LAMPS</u>	100
H RESTRAINTS			
SRC SRS AIRBAG CONTROL SYSTEM		HRN HORN	
	<u>SRS AIR BAG CONTROL SYSTEM</u>	<u>HORN</u>	101
	67		
I VENTILATION, HEATER & AIR CONDITIONER		INL INTERIOR LIGHTING SYSTEM	
HAC HEATER & AIR CONDITIONING CONTROL		<u>ILLUMINATION</u>	102
SYSTEM		<u>INTERIOR ROOM LAMP</u>	106
	<u>AUTOMATIC AIR CONDITIONING SYSTEM - WITH HEAT PUMP</u>	MIR MIRRORS	
	70	<u>DOOR MIRROR</u>	108
	<u>AUTOMATIC AIR CONDITIONING SYSTEM - WITHOUT HEAT PUMP</u>	<u>INSIDE MIRROR</u>	109
	72		
J BODY INTERIOR		VSP APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP)	
SE SEAT		<u>APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM</u>	110
	<u>HEATED SEAT</u>		
	74	WW WIPER & WASHER	
	<u>LUMBAR SUPPORT SYSTEM</u>	<u>WIPER AND WASHER SYSTEM</u>	111
	75		
	<u>POWER SEAT FOR DRIVER SIDE</u>		
	76		
K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY		M ELECTRICAL & POWER CONTROL	
DLK DOOR & LOCK		BCS BODY CONTROL SYSTEM	
	<u>DOOR LOCK SYSTEM</u>	<u>BCM (BODY CONTROL MODULE)</u>	112
	77		
	<u>HOMELINK® UNIVERSAL TRANSCEIVER</u>	LAN LAN SYSTEM	
	81	<u>CAN GATEWAY SYSTEM</u>	116
PWC POWER WINDOW CONTROL SYSTEM		<u>CAN SYSTEM</u>	117
	<u>POWER WINDOW SYSTEM</u>		
	82	PCS POWER CONTROL SYSTEM	
SEC SECURITY CONTROL SYSTEM		<u>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</u>	121
	<u>INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION</u>	<u>POWER DISTRIBUTION SYSTEM</u>	123
	83		
	<u>NVIS</u>	PG POWER SUPPLY, GROUND & CIRCUIT ELEMENTS	
	85	<u>ACCESSORY PRE-WIRE</u>	125
	<u>VEHICLE SECURITY SYSTEM</u>		
	87	PWO POWER OUTLET	
L DRIVER CONTROLS		<u>POWER SOCKET</u>	126
DEF DEFOGGER		<u>USB SOCKET</u>	127
	<u>DEFOGGER</u>		
	89		
EXL EXTERIOR LIGHTING SYSTEM		N DRIVER INFORMATION & MULTIMEDIA	
	<u>AUTO LIGHT SYSTEM</u>	AV AUDIO, VISUAL & NAVIGATION SYSTEM	
	90	<u>DISPLAY AUDIO SYSTEM - WITH 8" COLOR DISPLAY</u>	128
	<u>BACK-UP LAMP</u>		
	91		

Table of Contents

<u>INTELLIGENT AROUND VIEW MONITOR SYSTEM - WITH 8" COLOR DISPLAY</u>	131	<u>MOTOR ROOM HARNESS - LH VIEW</u>	234
<u>NAVIGATION SYSTEM - WITH BOSE AUDIO SYSTEM AND 8" COLOR DISPLAY</u>	133	<u>MOTOR ROOM HARNESS - RH VIEW (WITHOUT HEAT PUMP)</u>	236
<u>NAVIGATION SYSTEM - WITHOUT BOSE AUDIO SYSTEM WITH 8" COLOR DISPLAY</u>	137	<u>MOTOR ROOM SUB-HARNESS</u>	238
<u>REAR VIEW MONITOR SYSTEM - WITH 8" COLOR DISPLAY AND NAVIGATION SYSTEM</u>	140	<u>MOTOR CONTROL HARNESS - REAR VIEW (WITHOUT HEAT PUMP)</u>	240
<u>REAR VIEW MONITOR SYSTEM - WITH 8" COLOR DISPLAY WITHOUT NAVIGATION SYSTEM</u>	141	<u>MOTOR CONTROL HARNESS - REAR VIEW (WITH HEAT PUMP)</u>	242
<u>TELEMATICS SYSTEM</u>	142	<u>BATTERY CABLE</u>	244
MWI METER, WARNING LAMP & INDICATOR		<u>MOTOR CONTROL HARNESS - FRONT VIEW</u>	246
<u>METER</u>	143	<u>CHASSIS HARNESS</u>	248
SN SONAR SYSTEM		<u>BODY HARNESS - LH VIEW</u>	250
<u>SONAR SYSTEM</u>	146	<u>BODY HARNESS - REAR VIEW</u>	252
WCS WARNING CHIME SYSTEM		<u>BODY HARNESS - RH VIEW</u>	254
<u>WARNING CHIME SYSTEM</u>	147	<u>FRONT SEAT RH HARNESS</u>	256
O CRUISE CONTROL & DRIVER ASSISTANCE		<u>FRONT SEAT LH HARNESS</u>	258
CCS CRUISE CONTROL SYSTEM		<u>ROOM LAMP HARNESS</u>	260
<u>INTELLIGENT CRUISE CONTROL SYSTEM</u>	148	<u>FRONT DOOR LH HARNESS</u>	262
<u>ProPILOT ASSIST SYSTEM</u>	149	<u>FRONT DOOR RH HARNESS</u>	264
DAS DRIVER ASSISTANCE SYSTEM		<u>REAR DOOR LH HARNESS</u>	266
<u>CHASSIS CONTROL SYSTEM</u>	150	<u>REAR DOOR RH HARNESS</u>	268
<u>DRIVER ASSISTANCE SYSTEM</u>	151	<u>BACK DOOR HARNESS</u>	270
CONNECTOR VIEWS			
<u>CONNECTOR VIEWS</u>	154		
HARNESS LAYOUT			
<u>HIGH VOLTAGE HARNESS</u>	211		
<u>Outline</u>	213		
<u>MAIN HARNESS - RADIO VIEW</u>	214		
<u>MAIN HARNESS - RH VIEW</u>	216		
<u>MAIN HARNESS - LH VIEW</u>	218		
<u>MAIN HARNESS - CONSOLE VIEW</u>	220		
<u>HVAC SUB-HARNESS</u>	222		
<u>MAIN HARNESS - COLUMN VIEW</u>	224		
<u>MOTOR ROOM HARNESS - RH VIEW (WITH HEAT PUMP)</u>	226		
<u>MOTOR ROOM HARNESS - FRONT VIEW (WITHOUT HEAT PUMP)</u>	228		
<u>MOTOR ROOM HARNESS - FRONT VIEW (WITH HEAT PUMP)</u>	230		
<u>MOTOR ROOM HARNESS - CABIN VIEW</u>	232		

— : CAN COMMUNICATION LINE FOR DIAGNOSIS

FL : WITH FRONT FOG LAMPS

HK : WITH HALOGEN HEADLAMPS

HR : WITH REAR HEATED SEATS

LV : WITH LED HEADLAMPS


QC : WITH QUICK CHARGE PORT

RL : WITH DAYTIME RUNNING LIGHT SYSTEM


SW : WITH HEATED STEERING WHEEL

WB8 : WITH ELECTRIC PARKING BRAKE


WB : WITH BOSE AUDIO SYSTEM

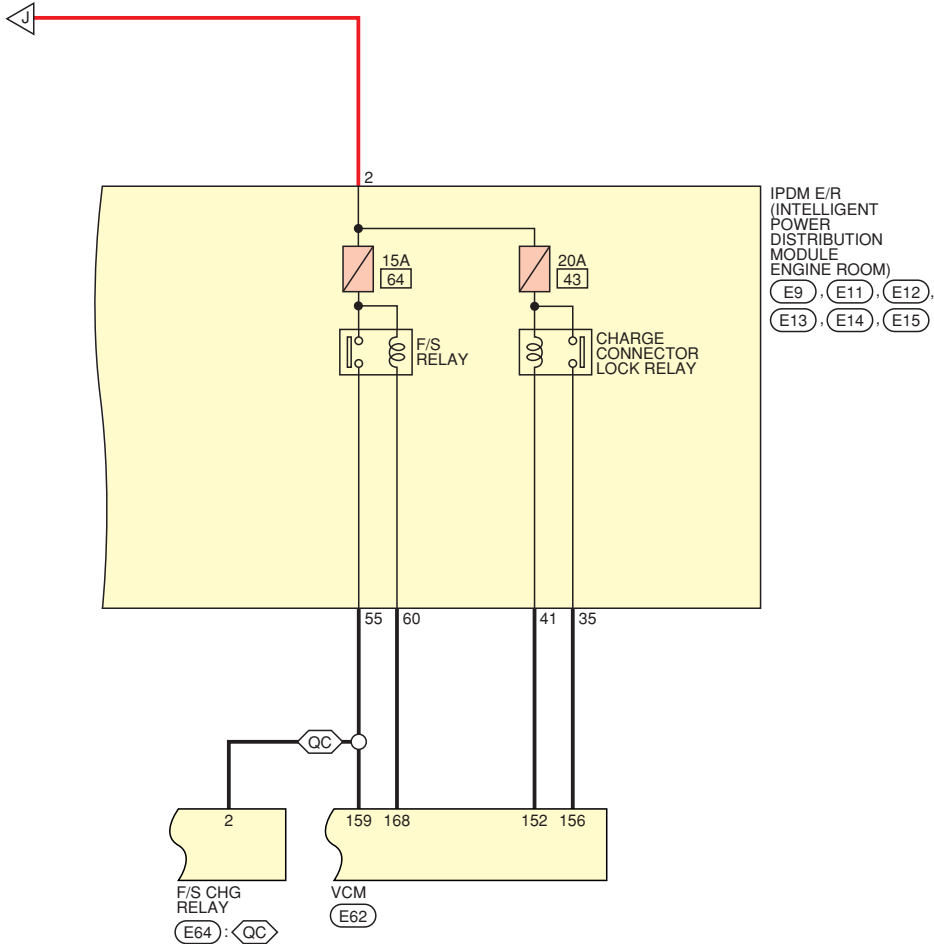

BATTERY POWER SUPPLY FUSE No. 46 (TAIL LAMP RELAY)

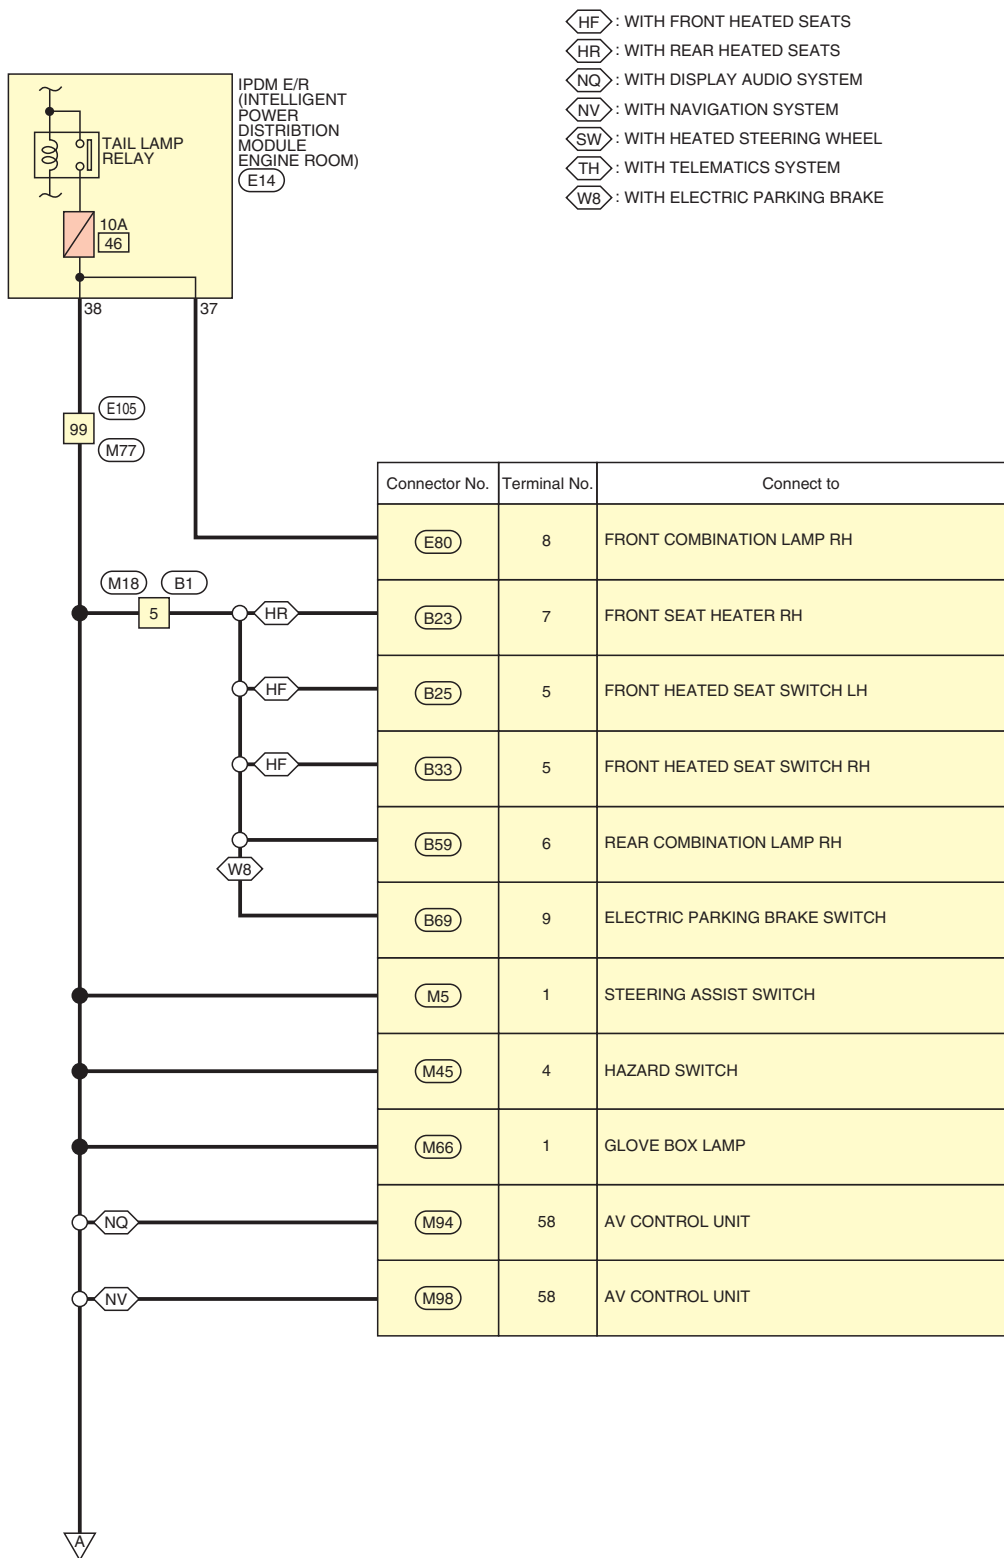



FUSE BLOCK - JUNCTION BOX (J/B)
Fuse, Connector and Terminal Arrangement

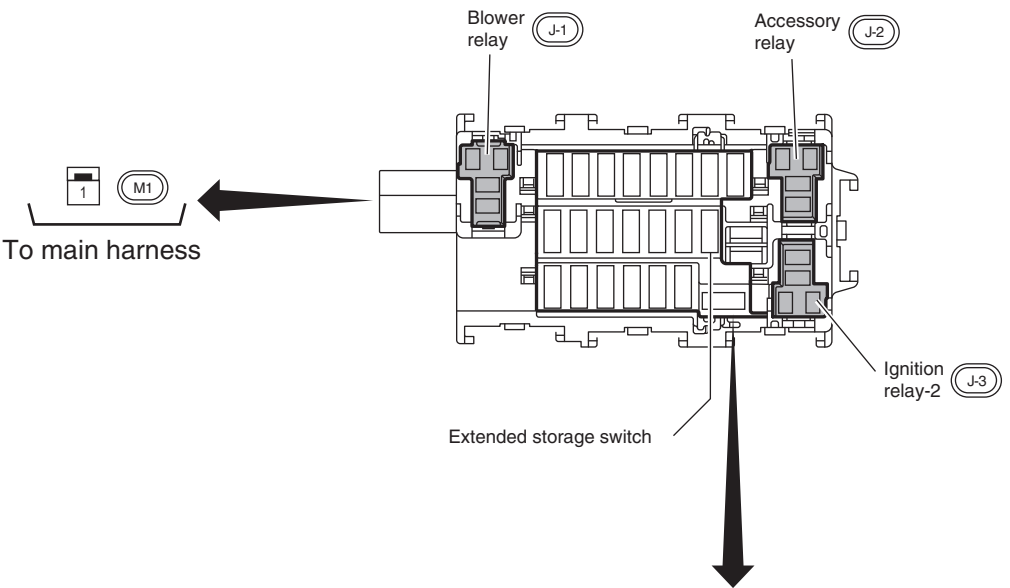


14	15	16	17	18	19	20	21
15A	X	15A	15A	X	10A	10A	20A
7	8	9	10	11	12	13	*
10A	15A	10A	15A	10A	10A	10A	
1	2	3	4	5	6		
10A	10A	10A	10A	10A	10A	10A	22

* Fuse 13 = Extended storage switch

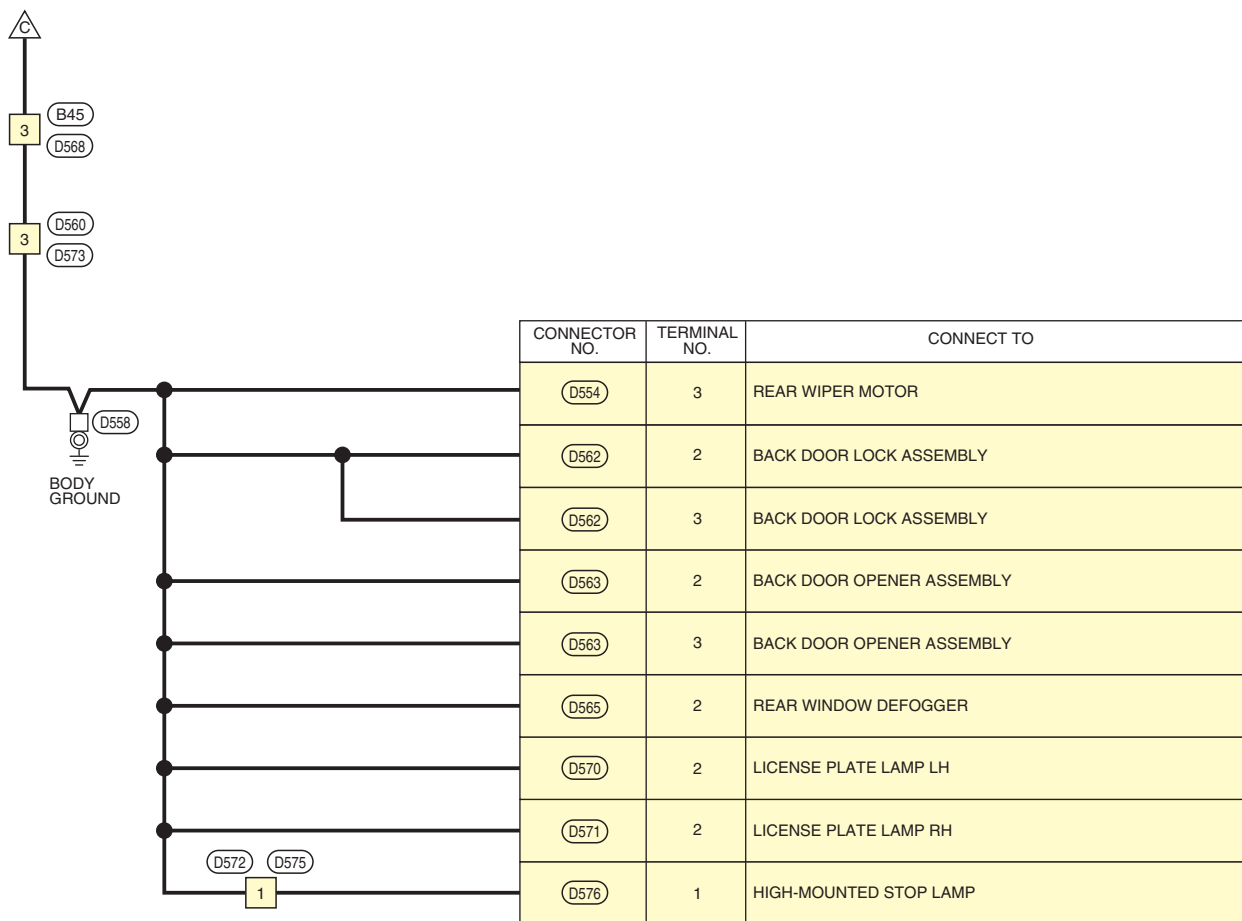

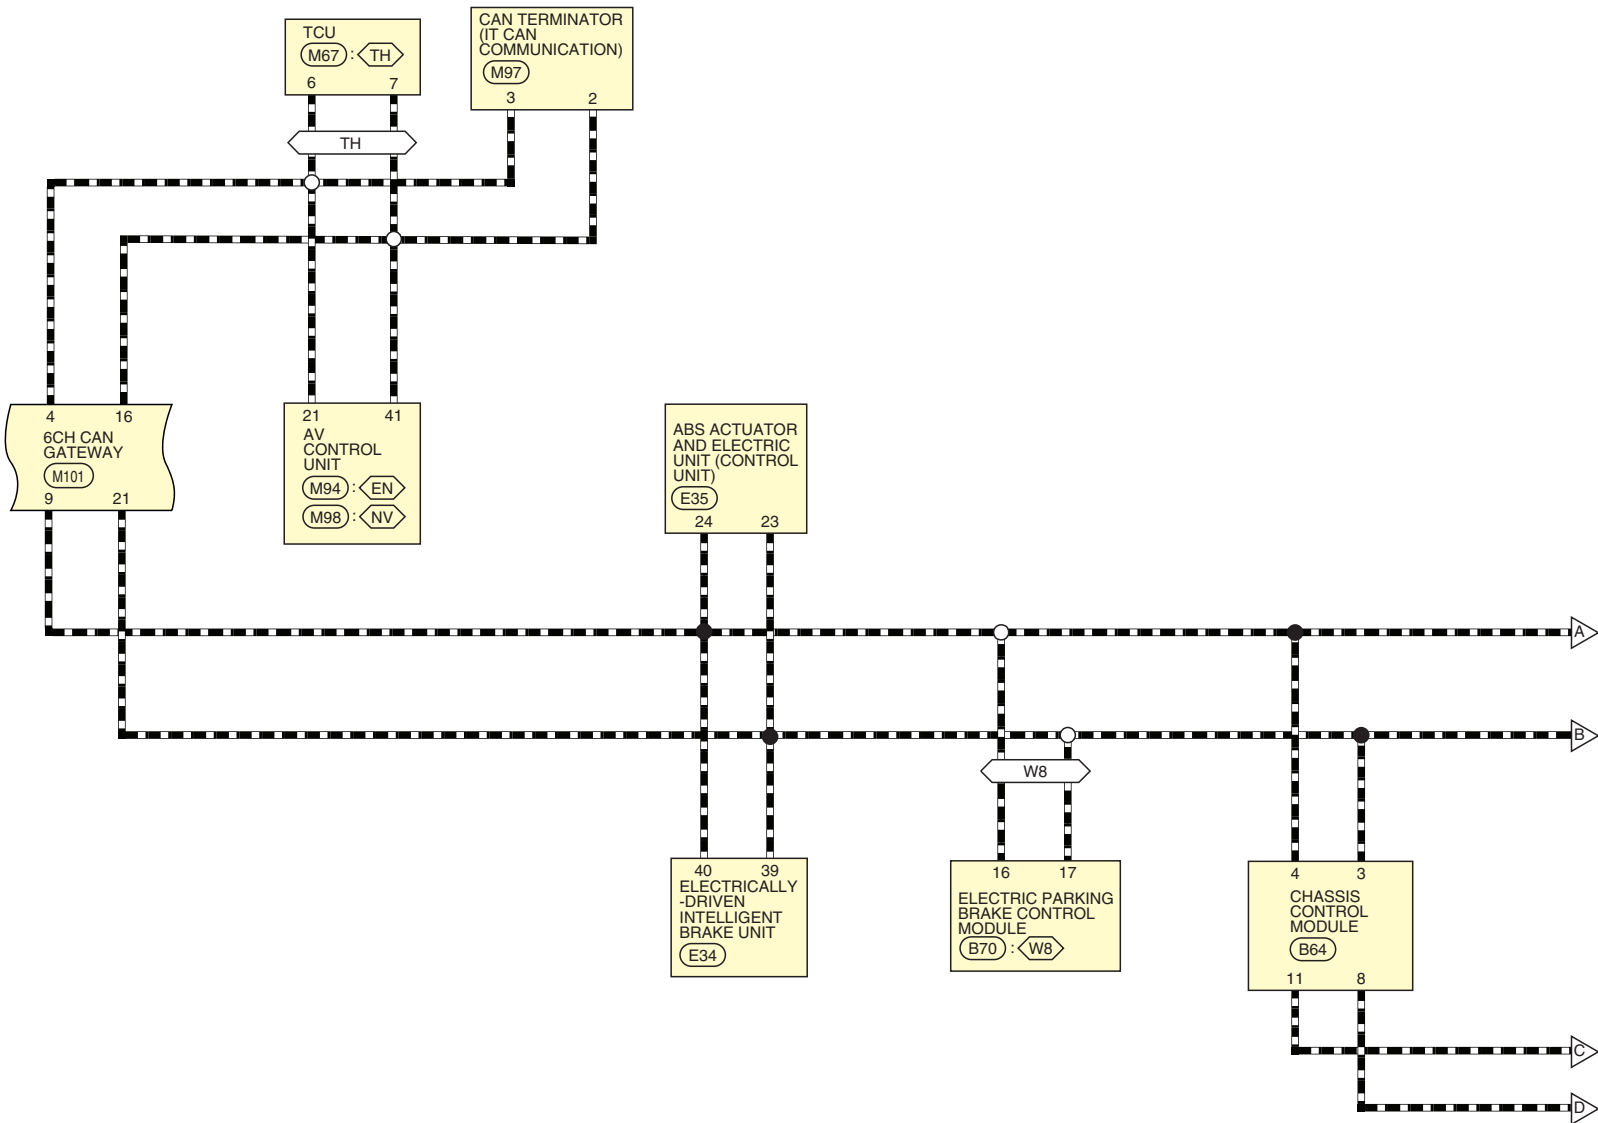


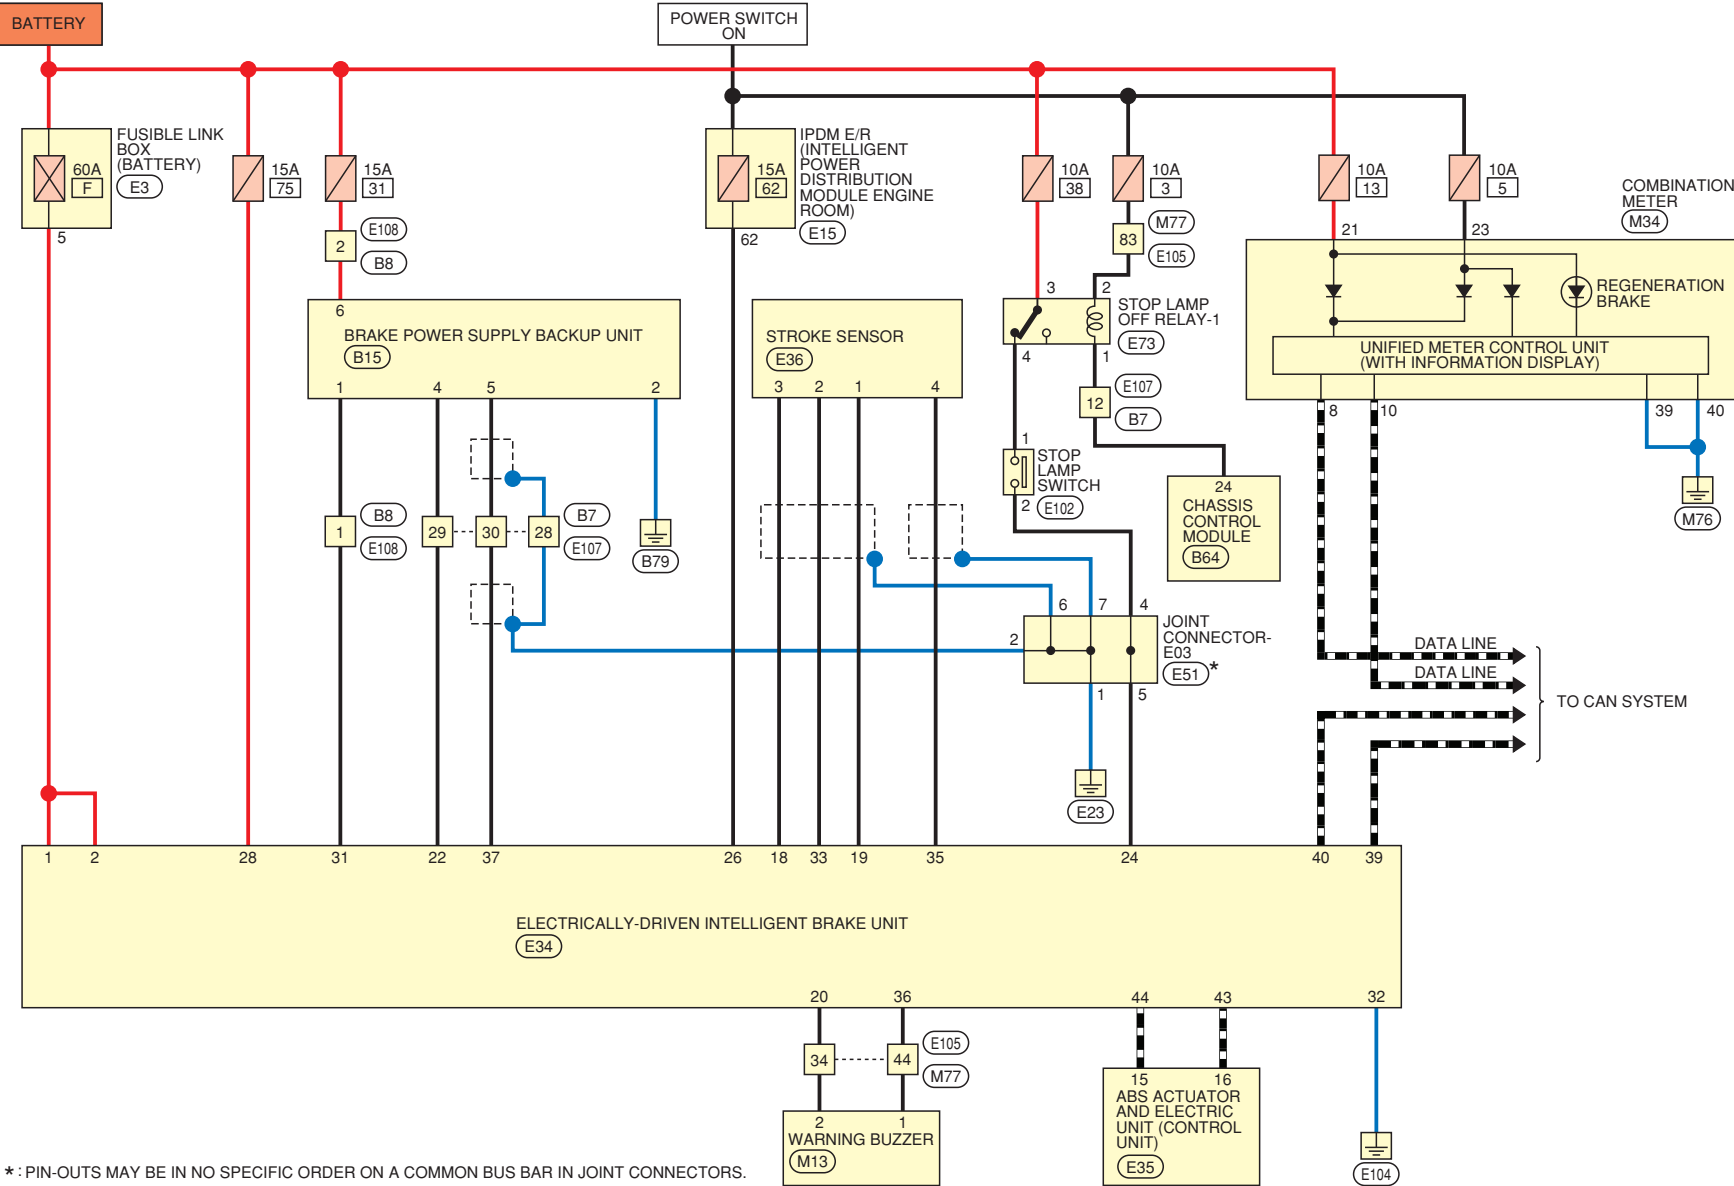


*: PIN-OUTS MAY BE IN NO SPECIFIC ORDER ON A COMMON BUS BAR IN JOINT CONNECTORS.

HEATED STEERING WHEEL

REFER TO POWER SUPPLY, GROUND & CIRCUIT ELEMENTS SECTION FOR COMPLETE POWER SUPPLY DETAIL.

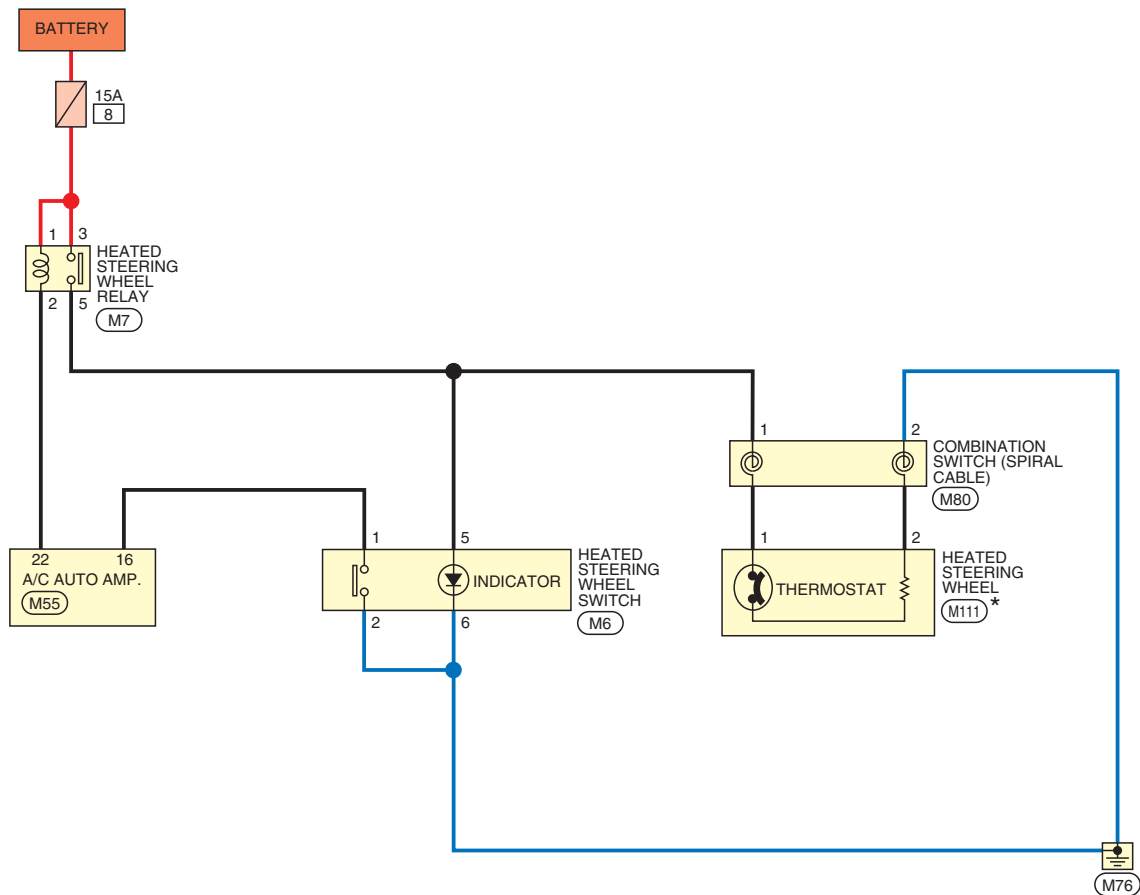


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION

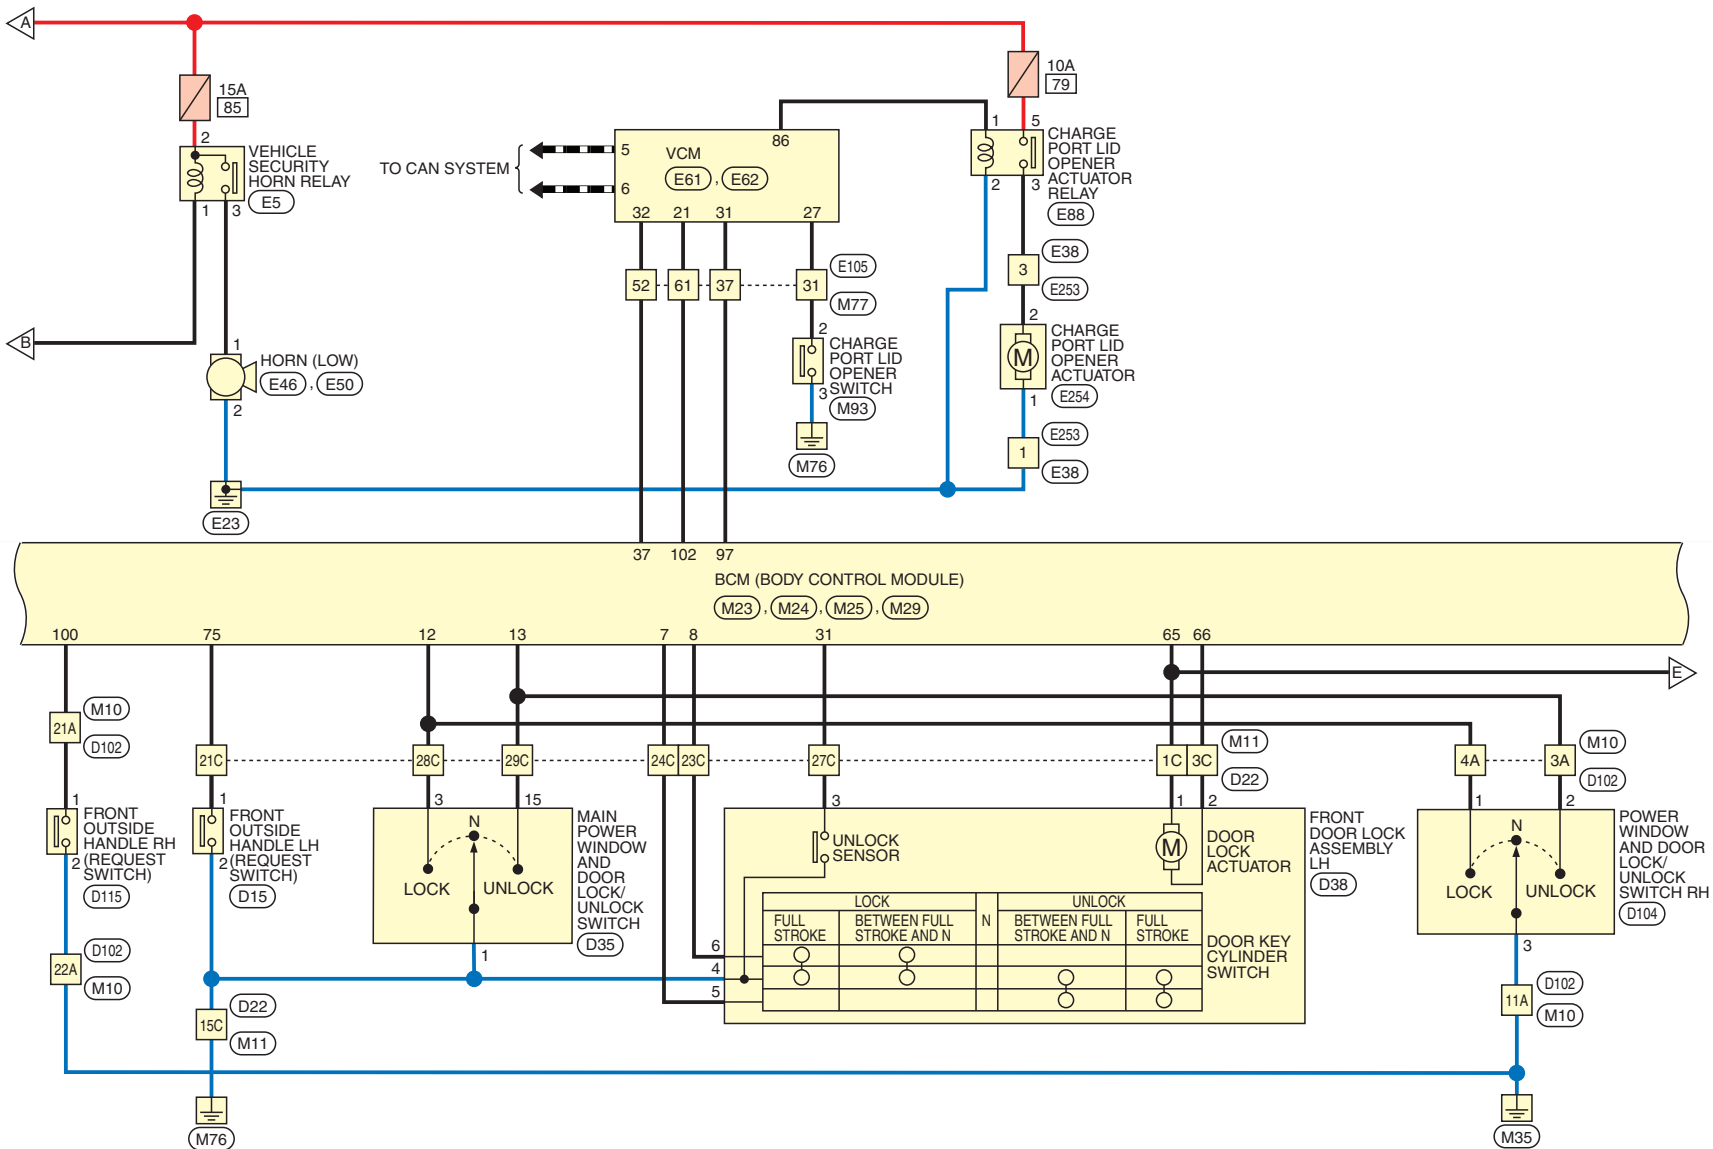


FOG LAMPS

--- : CAN COMMUNICATION LINE FOR DIAGNOSIS


REFER TO POWER SUPPLY, GROUND & CIRCUIT ELEMENTS SECTION FOR COMPLETE POWER SUPPLY DETAIL.

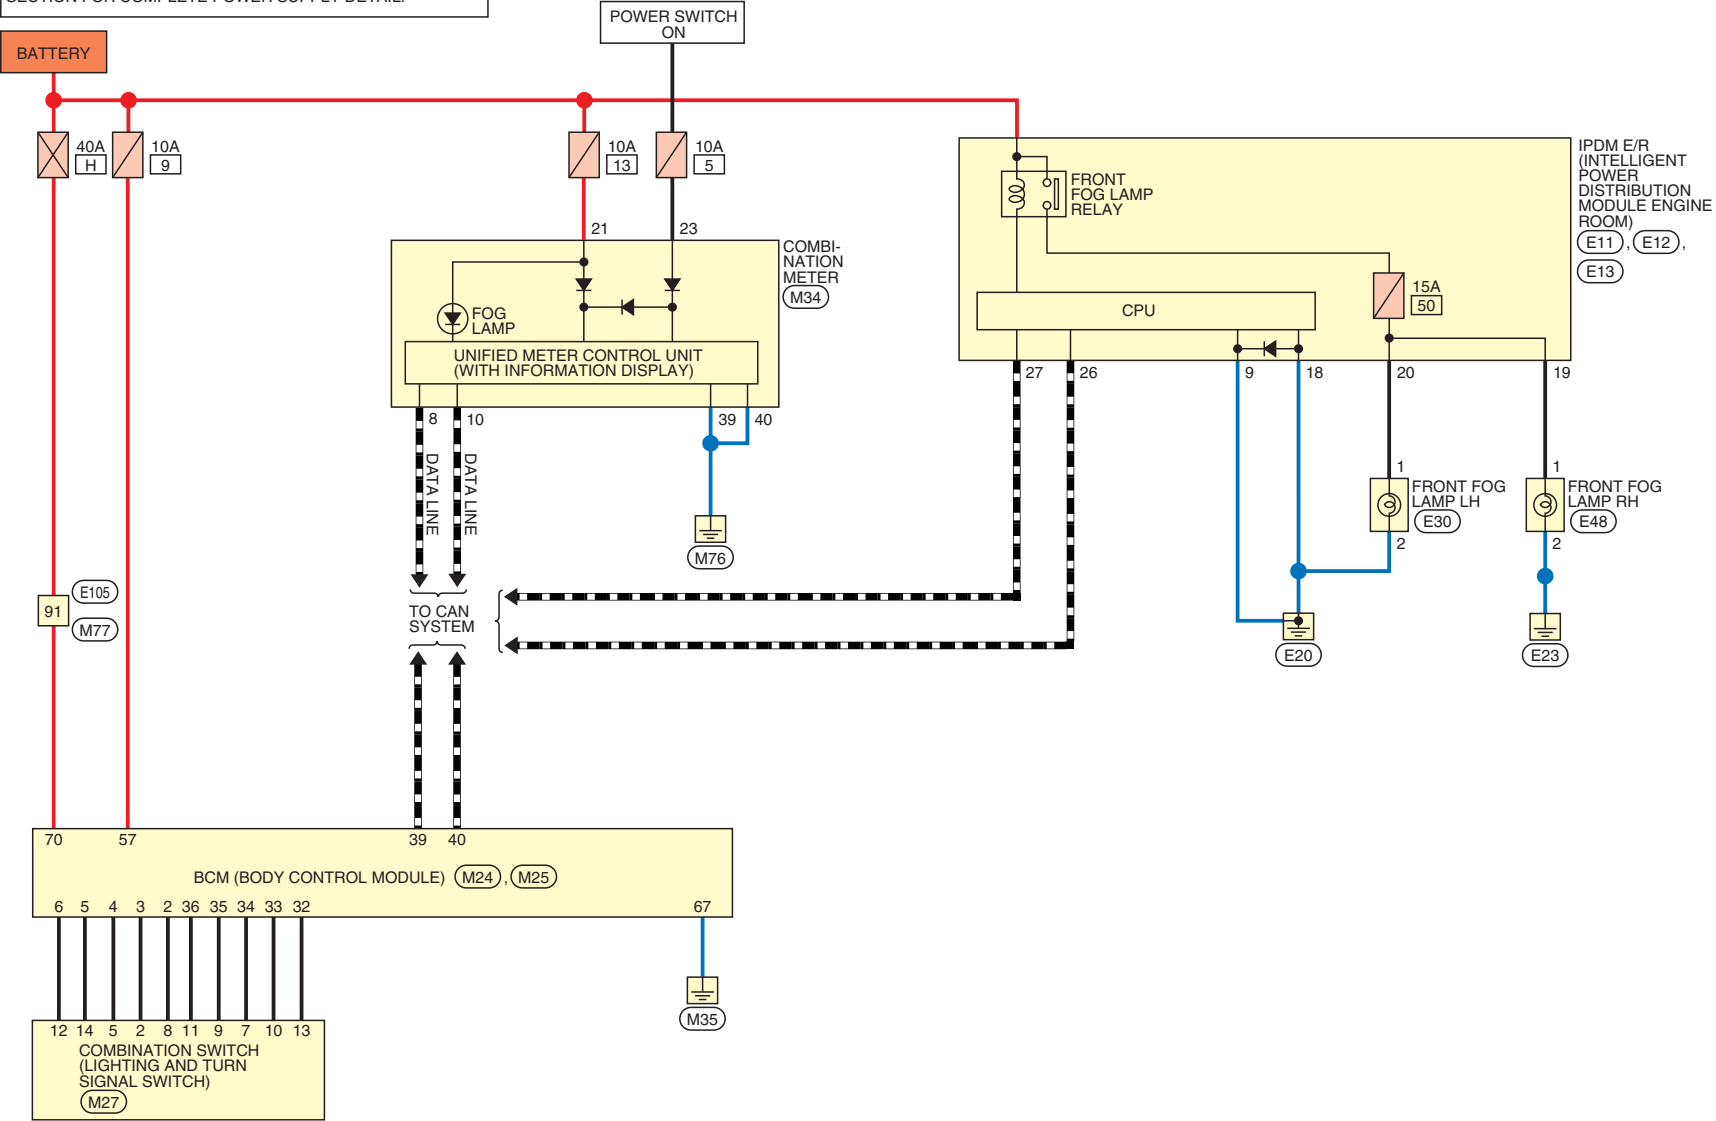

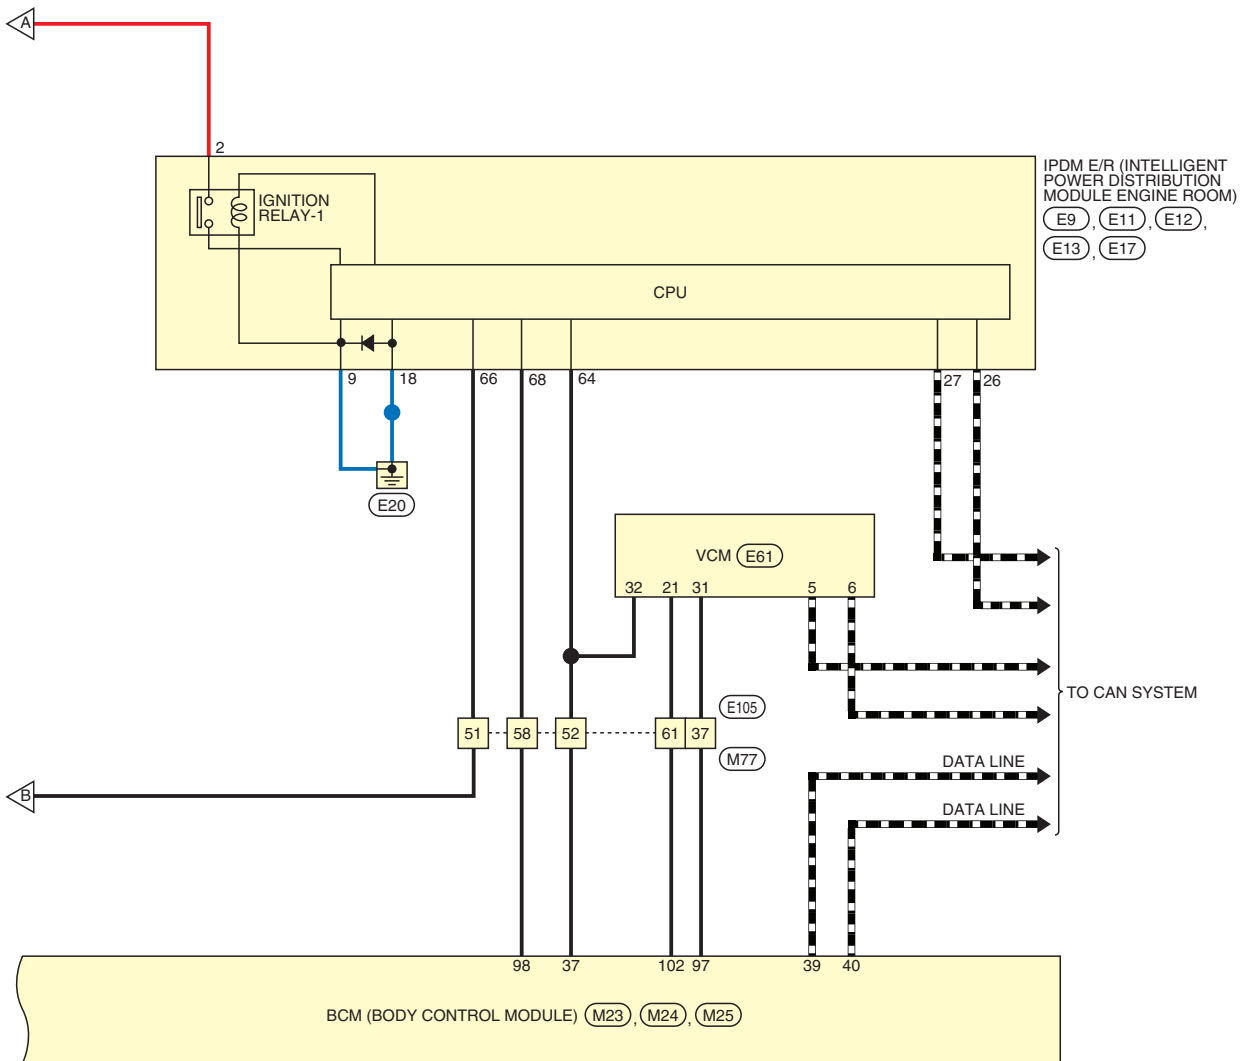


DRIVER ASSISTANCE SYSTEM

REFER TO POWER SUPPLY, GROUND & CIRCUIT ELEMENTS SECTION FOR COMPLETE POWER SUPPLY DETAIL.

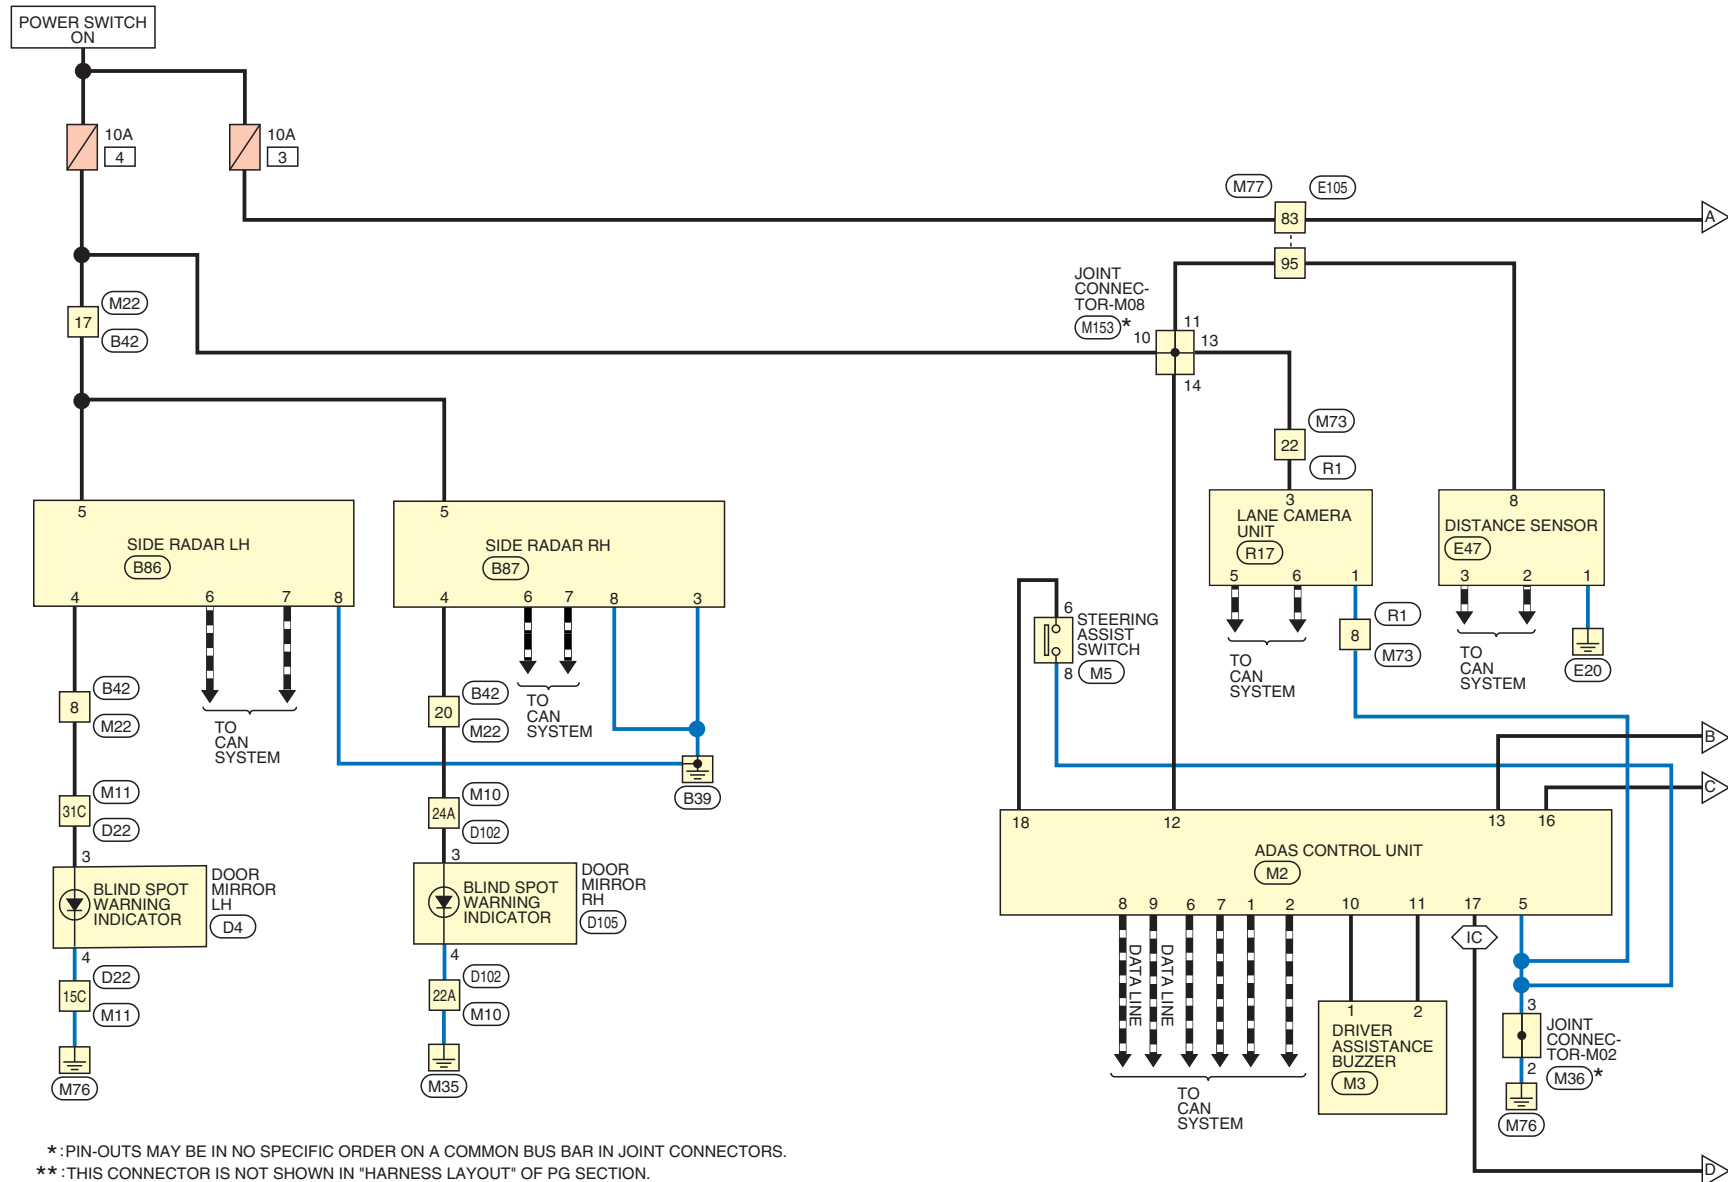


Connector No.	D103
Connector Name	FRONT DOOR SATELLITE SENSOR RH
Connector Type	HK02FY-1V-EX
Connector Color	YELLOW

 


Terminal No.	Color of Wire	Signal Name
1	Y	SIDE SENS RH2+
2	BR	SIDE SENS RH2-

Connector No.	D104
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Type	NS12FW-CS
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	Y	LOCK
2	BR	UNLOCK
3	B	GROUND
4	-	-
5	-	-
6	Y	ASST DN (MOTOR)
7	R	ASST UP (MOTOR)
8	R	IGNITION
9	-	-
10	-	-
11	SB	MAIN DN
12	W	MAIN UP

Connector No.	D105
Connector Name	DOOR MIRROR RH
Connector Type	TH08MW-NH
Connector Color	WHITE

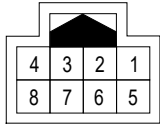


Terminal No.	Color of Wire	Signal Name
1	R	STL+
2	B	GROUND
3	SB	BSW+
4	B	BSW-
5	W	MB
6	BG	MC
7	V	MA
8	V	RR DEF

Connector No.	D106
Connector Name	FRONT POWER WINDOW MOTOR RH
Connector Type	RS06FG-2P-LGY
Connector Color	GREEN

 

Terminal No.	Color of Wire	Signal Name
1	Y	DOWN
2	-	-
3	R	UP
4	-	-
5	-	-
6	-	-

Connector No.	D107
Connector Name	FRONT DOOR LOCK ACTUATOR RH
Connector Type	E06FGY-RS
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	V	DOOR LOCK OUTPUT
6	Y	DOOR UNLOCK OUTPUT (AS)

Connector No.	D108
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02ML
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	DOOR ANTENNA (AS) +
2	Y	DOOR ANTENNA (AS) -

Connector No.	D109
Connector Name	DOOR MIRROR RH
Connector Type	TH04MW-NH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	G	SV1 POWER
10	L	SV1 GROUND
11	SHIELD	SV1 VIDEO GROUND
12	Y	SV1 VIDEO+

Connector No.	D115
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RH02FB
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	REQUEST SWITCH (AS)
2	B	GROUND