

Electrical Wiring  
BULLETIN

CM

00	OUTLINE OF CHANGES
2	HARNESS CONFIGURATION DIAGRAMS
3	SINGLE PART INSTALLATION POSITION
4	JUNCTION BLOCK
5	CENTRALIZED JUNCTION
6	POWER UNIT
7	ENGINE & TRANSMISSION MANAGEMENT SYSTEM
8	EXTERIOR LIGHTING & SIGNALING
9	INTERIOR LIGHTING
10	DRIVER INFORMATION
11	WIPER & WASHER
12	ASSITANT MECHANISM
13	DRIVER AIDS
14	DRIVER COMFORT

## OUT LINE OF CHANGES

WEW000FWORD037

### DESCRIPTION

This bulletin is a supplement to the **Electrical Wiring Manual Pub. No. RUWE-04DB030 (Basic)** and contains only additions and changes to the original issue due to the introduction of sedan model and RW BEC in engine fuse box.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual

#### WORKSHOP MANUAL

##### CHASSIS

Basic (Module 1.1 to 1.12) RUWE – 04DB010

Supplement (Module 1.1 to 1.12) RUWE – 04DB011

##### ENGINE OVERHAUL

Basic RUWE – 04DB020

##### TRANSMISSION AND CLUTCH OVERHAUL

Basic (Module 3.1,3.2 & 3.3) RUWE – 04DB080

### APPLICABLE MODEL

This bulletin is applicable for CM MODEL <HATCHBACK> and <SEDAN> UK base model.

### OUTLINE OF CHANGES ITEMS

#### 1. GENERAL

Group	Name	Ref. Page	Description of Changes
00	MODELS	00/7	<ul style="list-style-type: none"> <li>Add new models code for SEDAN.</li> </ul>
00	MARKING OF CONNECTOR EARTHING	00/9	<ul style="list-style-type: none"> <li>Update information for connector connection marking.</li> </ul>
00	HOW TO READ CIRCUIT DIAGRAMS	00/12	<ul style="list-style-type: none"> <li>New engine room fuse box (RW BEC box)</li> </ul>
00	ABBREVIATION SYMBOLS	00/14	<ul style="list-style-type: none"> <li>Add new abbreviation symbols used.</li> </ul>

#### 2. WIRING HARNESS CONFIGURATION DIAGRAMS



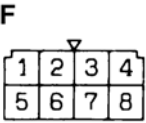

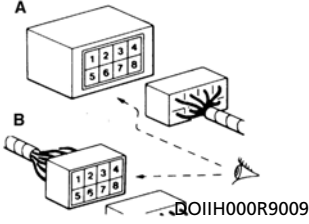
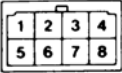
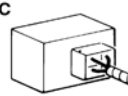
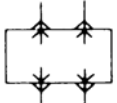
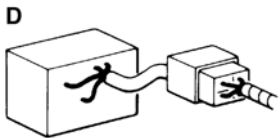
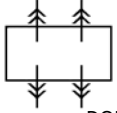
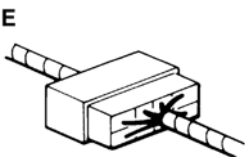

Connector Symbol	Name	Ref. Page	Description of Changes
—	OVERALL WIRING DIAGRAM	2/1	<ul style="list-style-type: none"> <li>New harness layout for SEDAN.</li> </ul>
A	ENGINE COMPARTMENT	2/3	<ul style="list-style-type: none"> <li>New engine room fuse box. (RW BEC box)</li> </ul>
B	DASH PANEL	2/7	<ul style="list-style-type: none"> <li>Add new harness connector due to new Clock spring (B-03, B-04), Auto door lock (B-18) and Fuel cut off relay (B-51x).</li> </ul>

## OUTLINE OF CHANGES

00

## MARKINGS FOR CONNECTOR EARTHING


/ 10

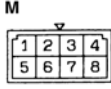Connector	No.	Item	Symbol	Contents
Connector marking	1	 DOIIH000R9005	 DOIIH000R9006	Double connector contour lines indicate male connector terminal M and single contour line indicates female terminal F as illustrated.
		 DOIIH000R9007	 DOIIH000R9008	
Connector symbol marking	2	 DOIIH000R9009	 DOIIH000R9010	<p>The symbol indicates the connector as viewed from illustrated direction.</p> <p>At the connection with a device, the connector symbol on the device side is shown, and for an intermediate connector, male connector symbol is shown.</p>
Connector connection marking	3	 DOIIH000R9011	 DOIIH000R9012	<p>A connection between a device and connector on the harness side is either by direct insertion in the device (direct connection type, C) or by connection with a harness connector on the device side furnished (harness connection type, D).</p> <p>Meanwhile, intermediate connector type, E is a connector which connecting between the harnesses. The three types are indicated as illustrated.</p>
	4	 DOIIH000R9013	 DOIIH000R9102	
	5	 DOIIH000R9014	 DOIIH000R9015	

WEW002CONFG193

## INSTRUMENT PANEL

&lt;Connector symbol C-01 thru C-07&gt;

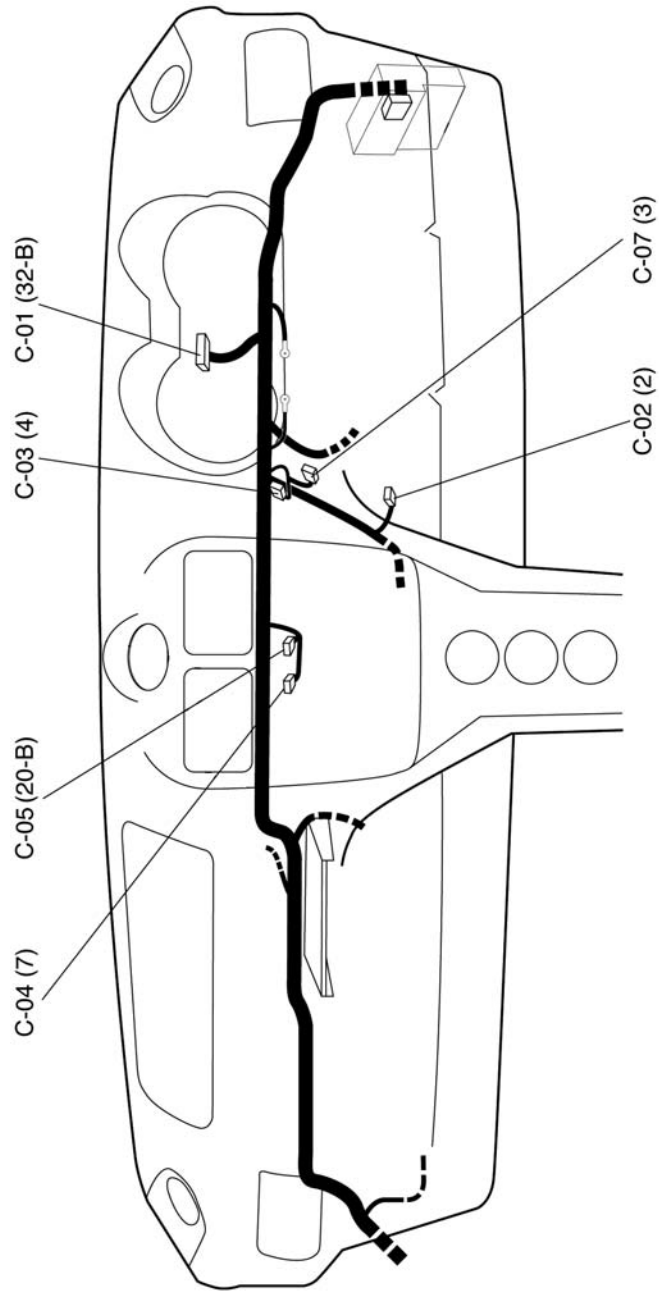


DOIKH002R08005 @91%


WEW002CONF0200

## LUGGAGE COMPARTMENT &lt;Hatchback&gt;

&lt;Connector symbol F-01 thru F-22&gt;

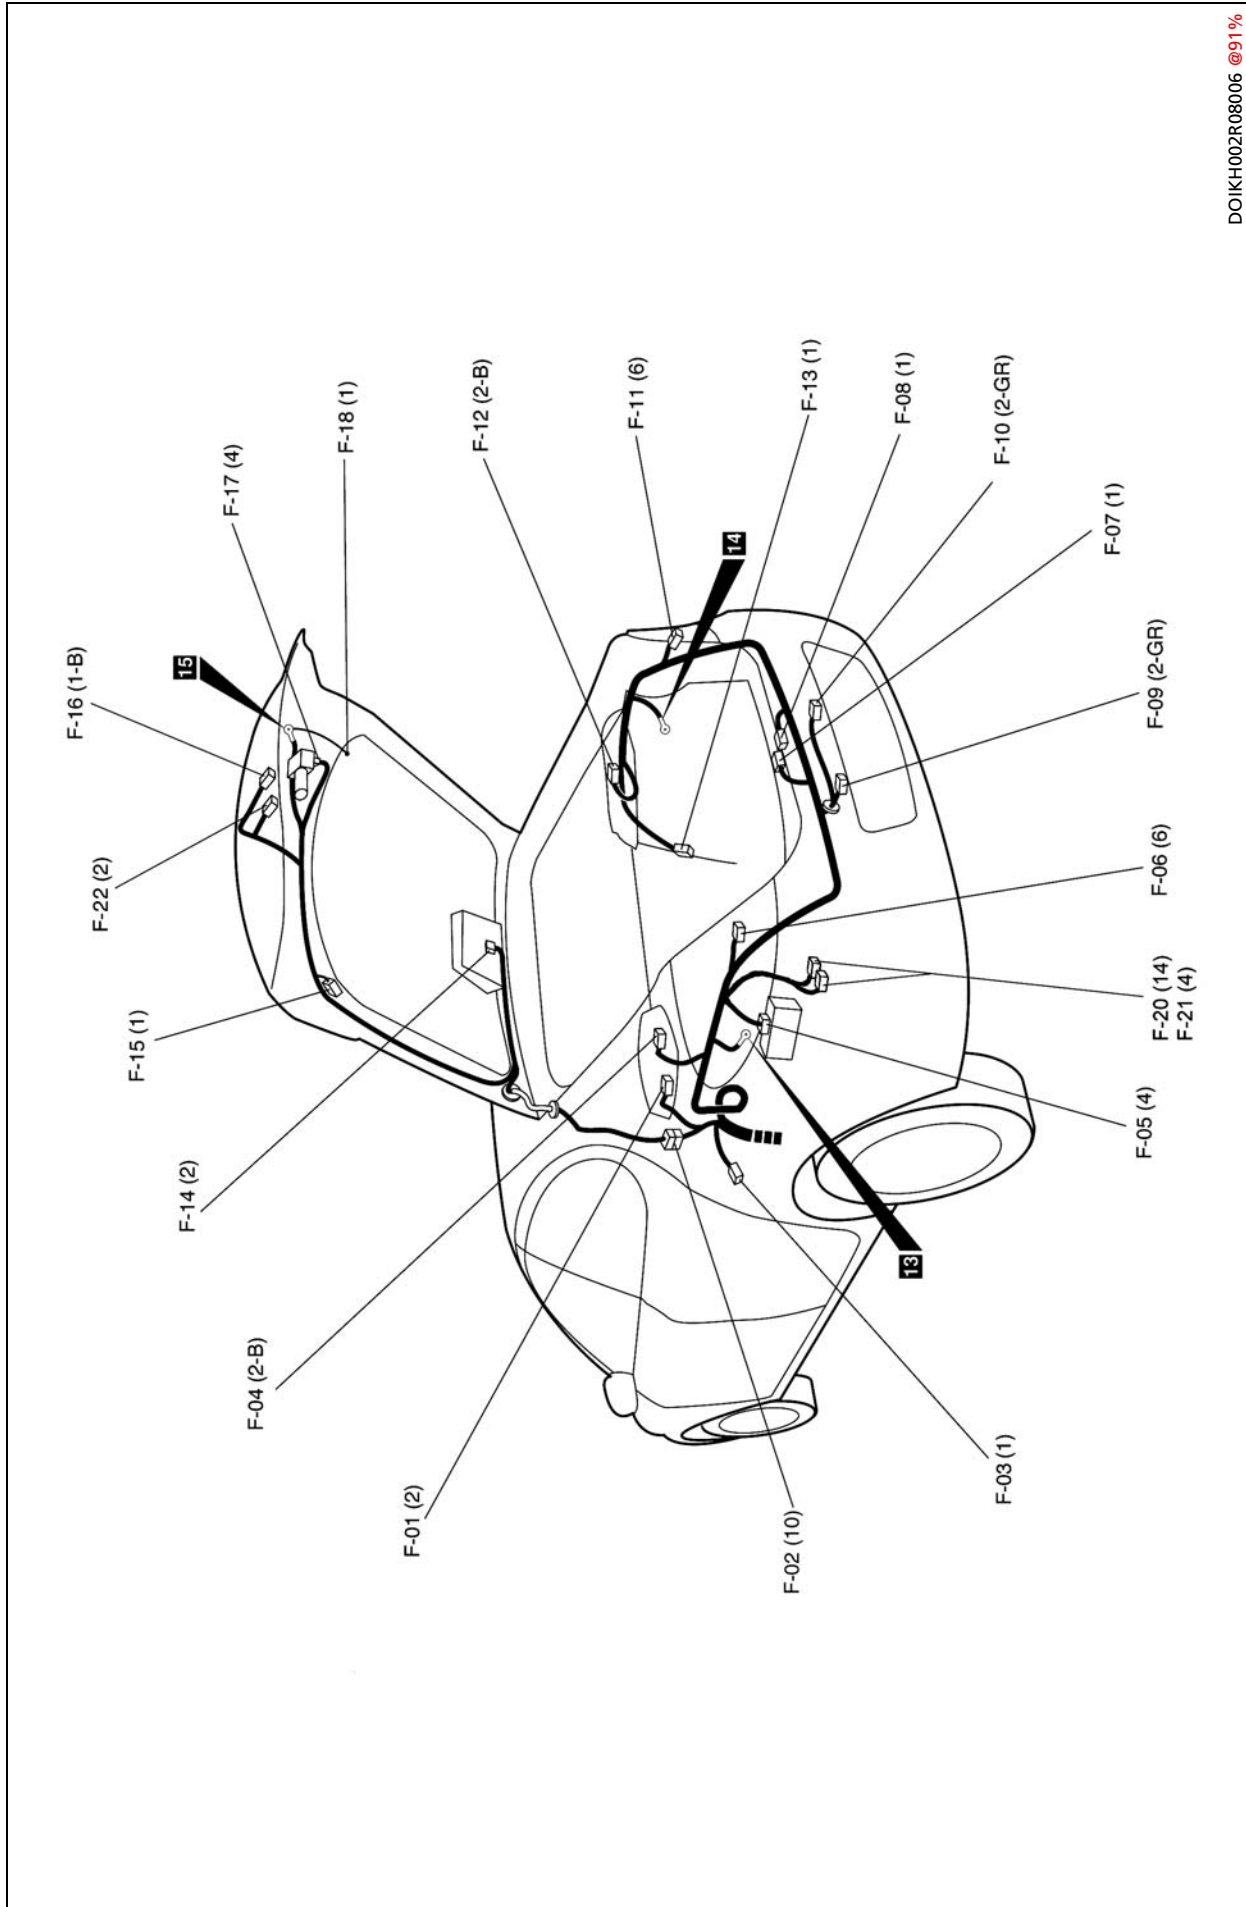


DOIKH002R08006 @91%

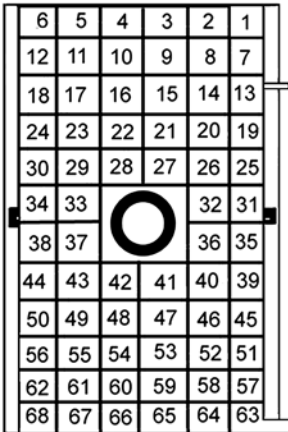J/B Symbol	Pin Symbol	Pin No.	Pin Attribute	Connector Diagram (as in circuit diagram)
E <A-34>	E1	1	—	
	E2	2	—	
	E3	3	Starter motor	
	E4	4	—	
	E5	5	—	
	E6	6	Horn relay	
	E7	7	—	
	E8	8	ECU	
	E9	9	—	
	E10	10	Stop lamp switch	
	E11	11	—	
	E12	12	Horn switch	
	E13	13	—	
	E14	14	—	
	E15	15	Ground	
	E16	16	—	
	E17	17	Column switch	
	E18	18	Meter cluster	
	E19	19	A/T control unit	
	E20	20	Satellite fuse	
	E21	21	Back-up switch / Inhibitor switch	
	E22	22	Column switch	
	E23	23	ICM relay	
	E24	24	Ignition switch	
	E25	25	A/T control unit	
	E26	26	Column switch	
	E27	27	—	
	E28	28	—	
	E29	29	—	
	E30	30	A/C ECU / Clock	
	E31	31	Air conditioner	
	E32	32	ECU	
	E33	33	Back up lamp switch / TCU	
	E34	34	Headlamp switch	

DOI KH004R03019

### IMMOBILIZER SYSTEM

WEW006POWER083

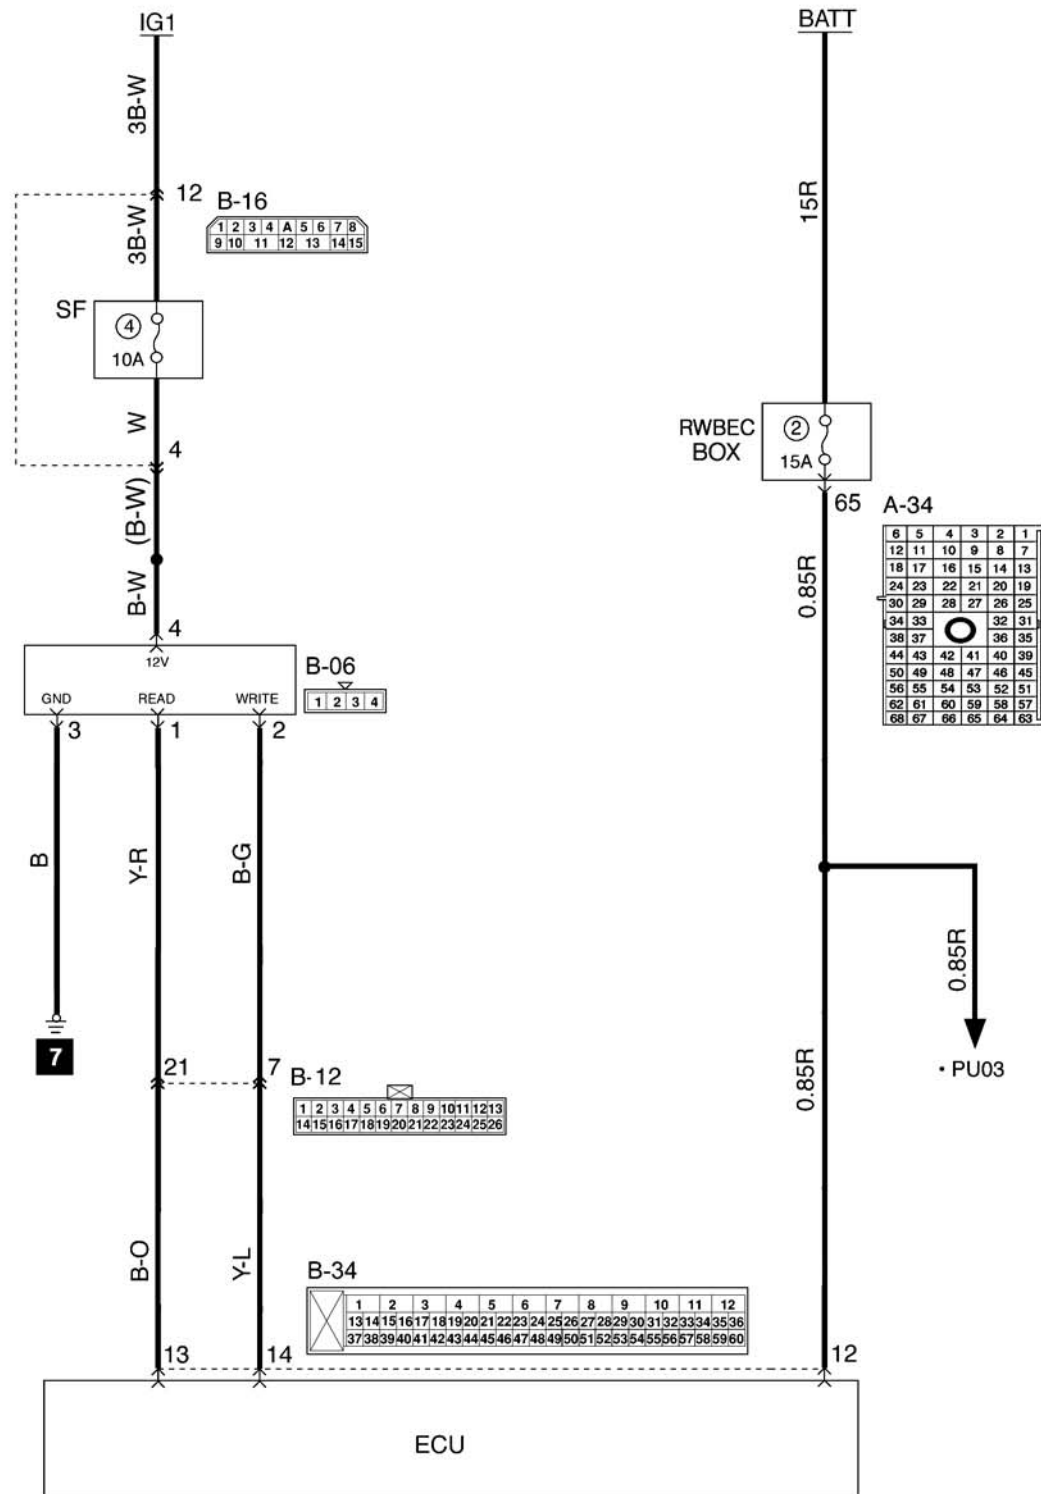

DOIKH006R07011


## ENGINE &amp; TRANSMISSION MANAGEMENT SYSTEM

7

MPI SYSTEM &lt;A/T&gt;


/ 8

## MPI SYSTEM &lt;A/T&gt; (Continued)

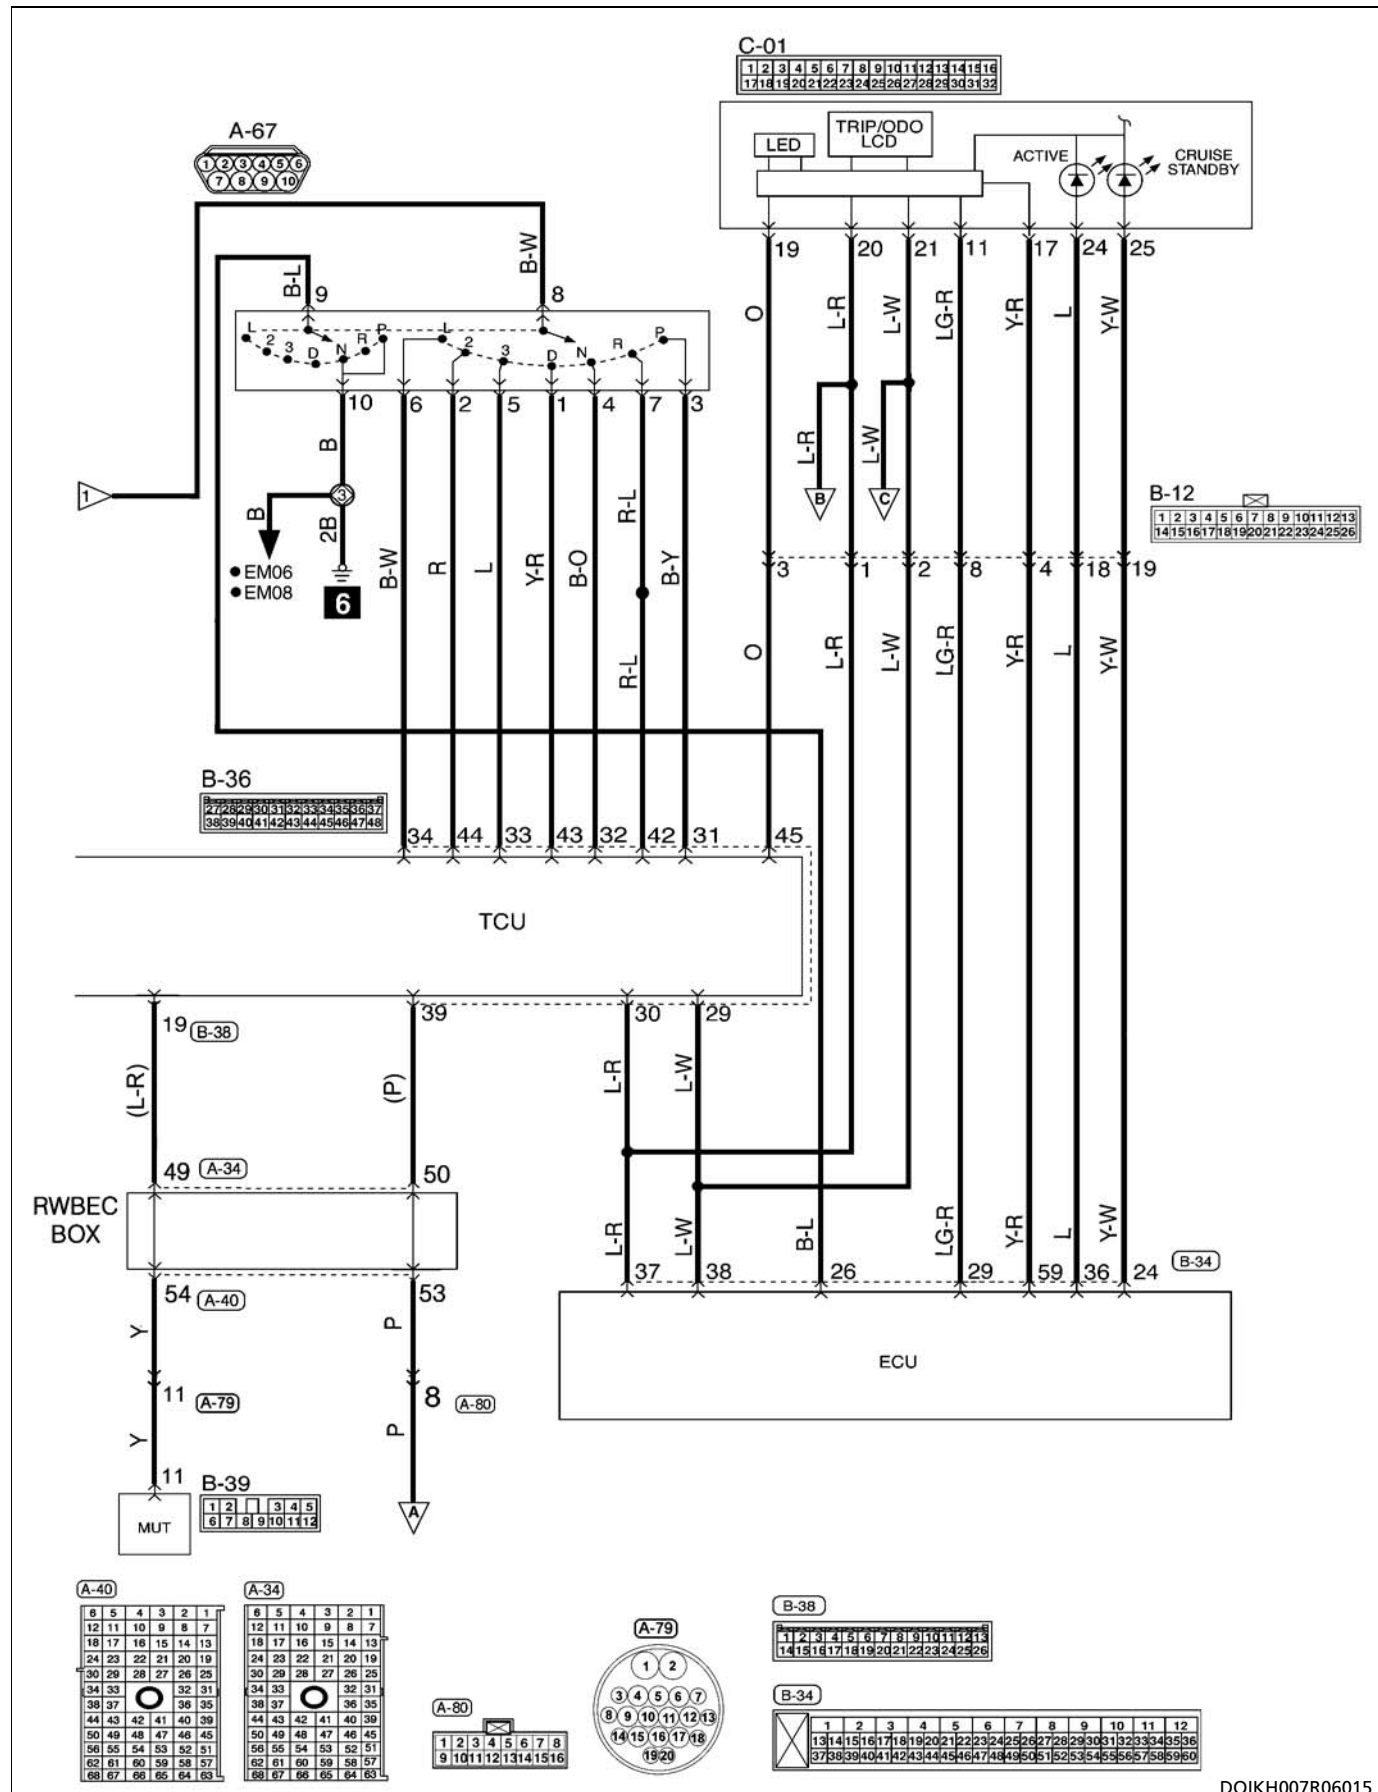



## WEW007EMSYS063

 

## EXTERIOR LIGHTING &amp; SIGNALING


8

## TAIL LAMP &amp; LICENCE PLATE LAMP

/ 8

## TAIL LAMP &amp; LICENCE PLAMP LAMP

WEW008XR10R143

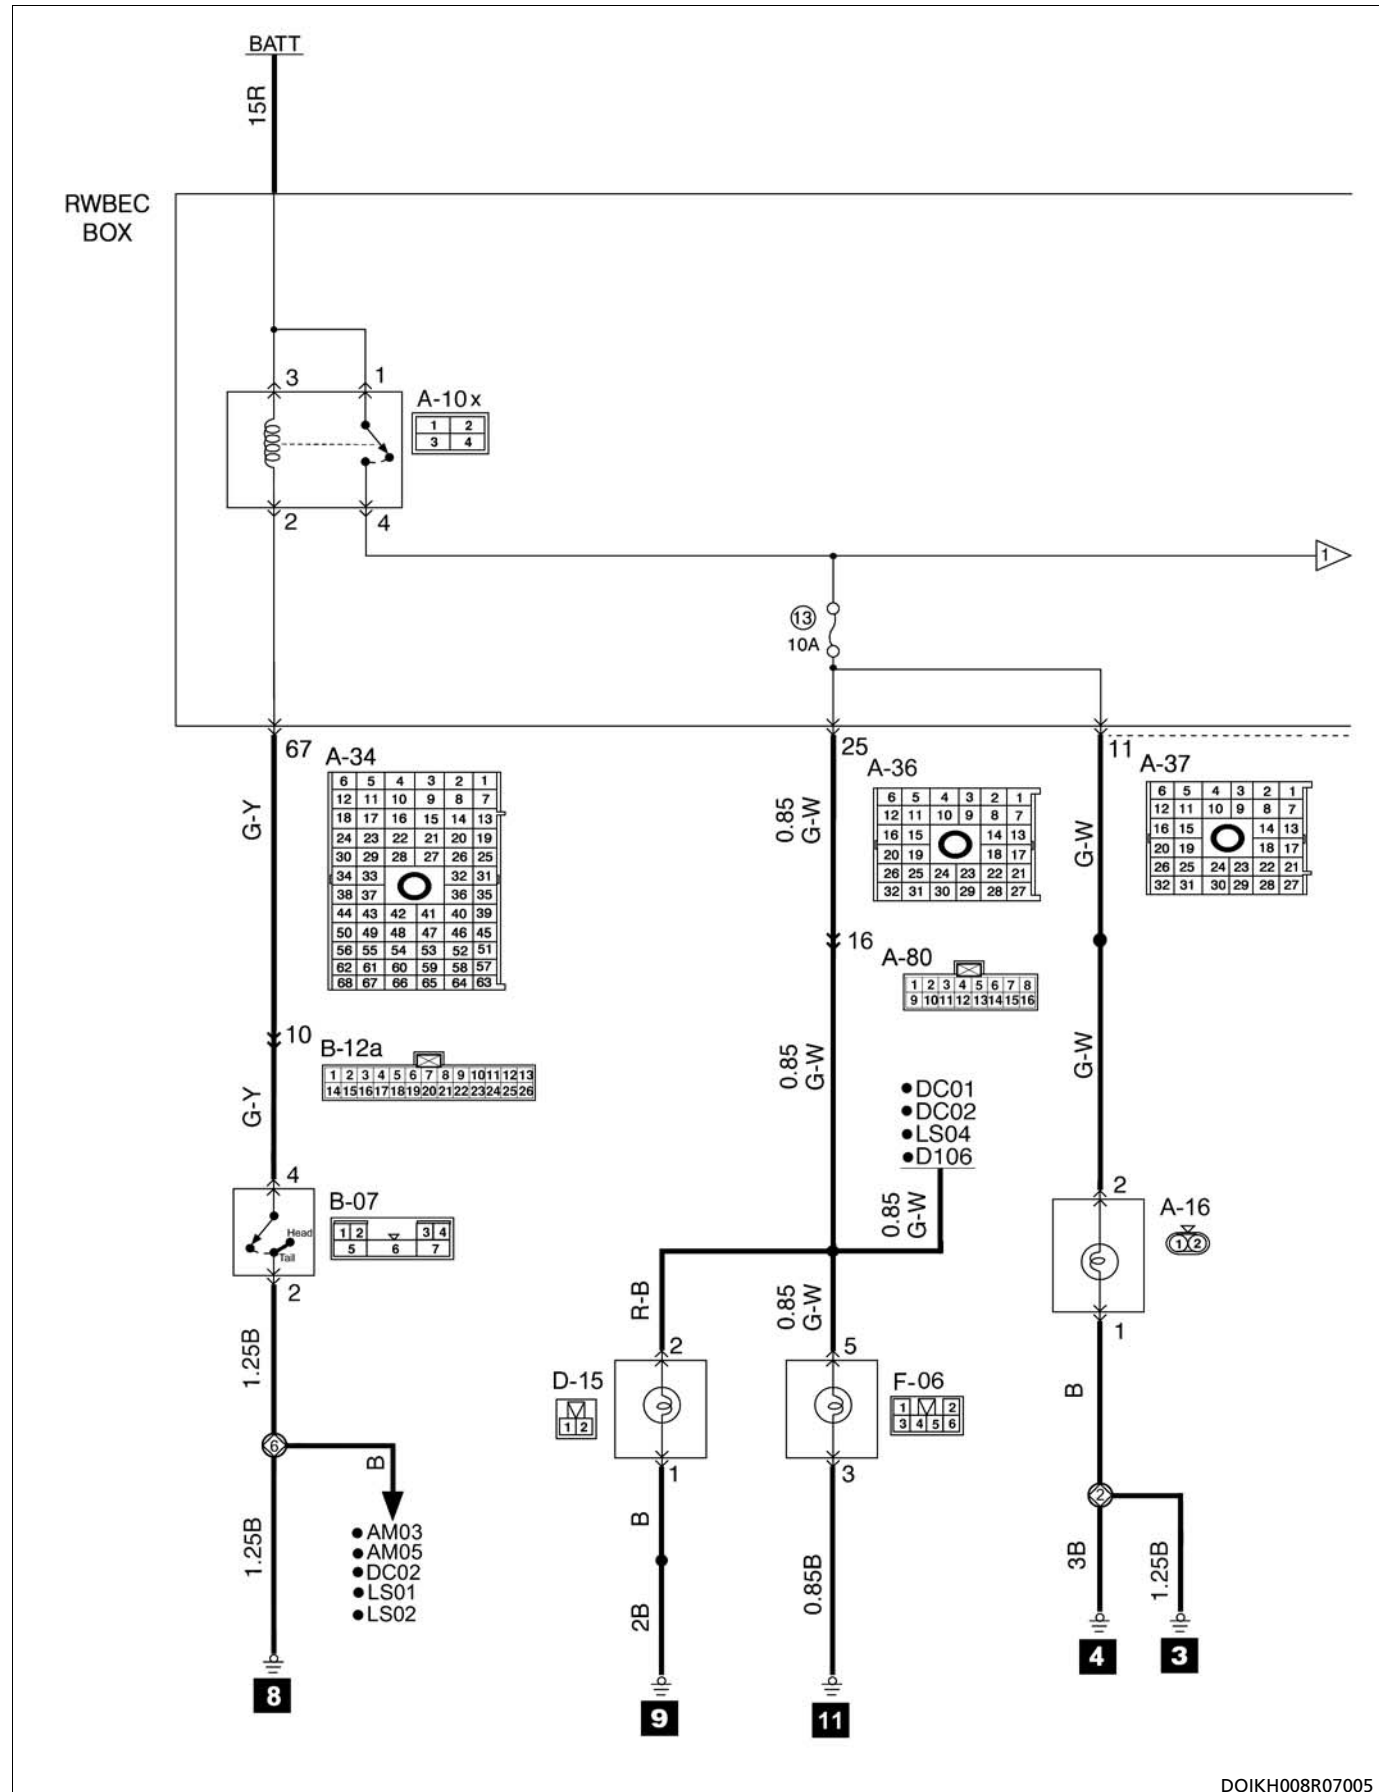

DOIKH008R07005


8

EXTERIOR LIGHTING & SIGNALING

/ 15

REAR FOG LAMP

REAR FOG LAMP (Continued)

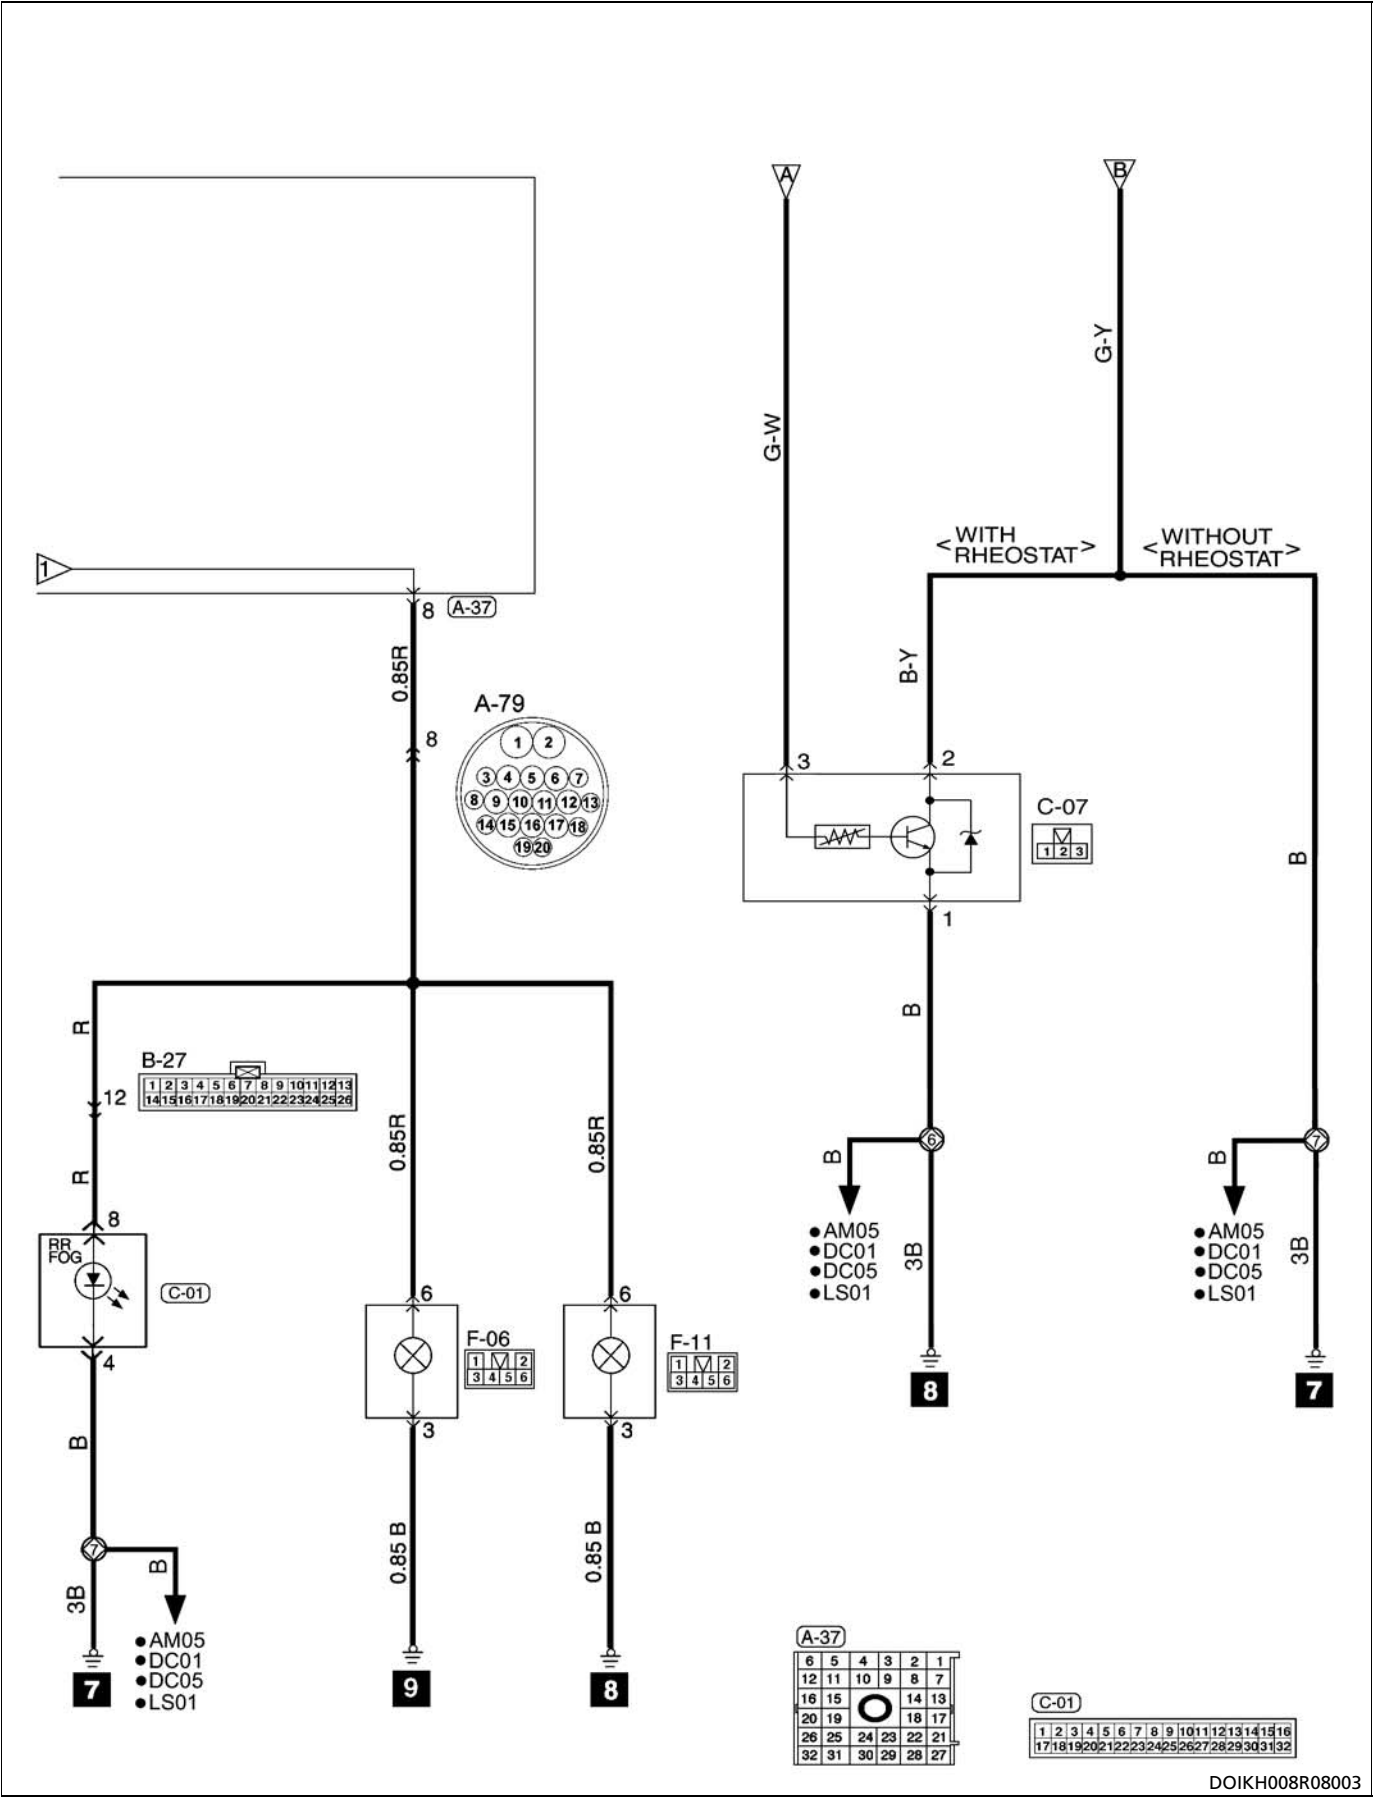

DOI KH008R08003

8


EXTERIOR LIGHTING & SIGNALING

/ 23


HORN

HORN

WEW008XR10R147

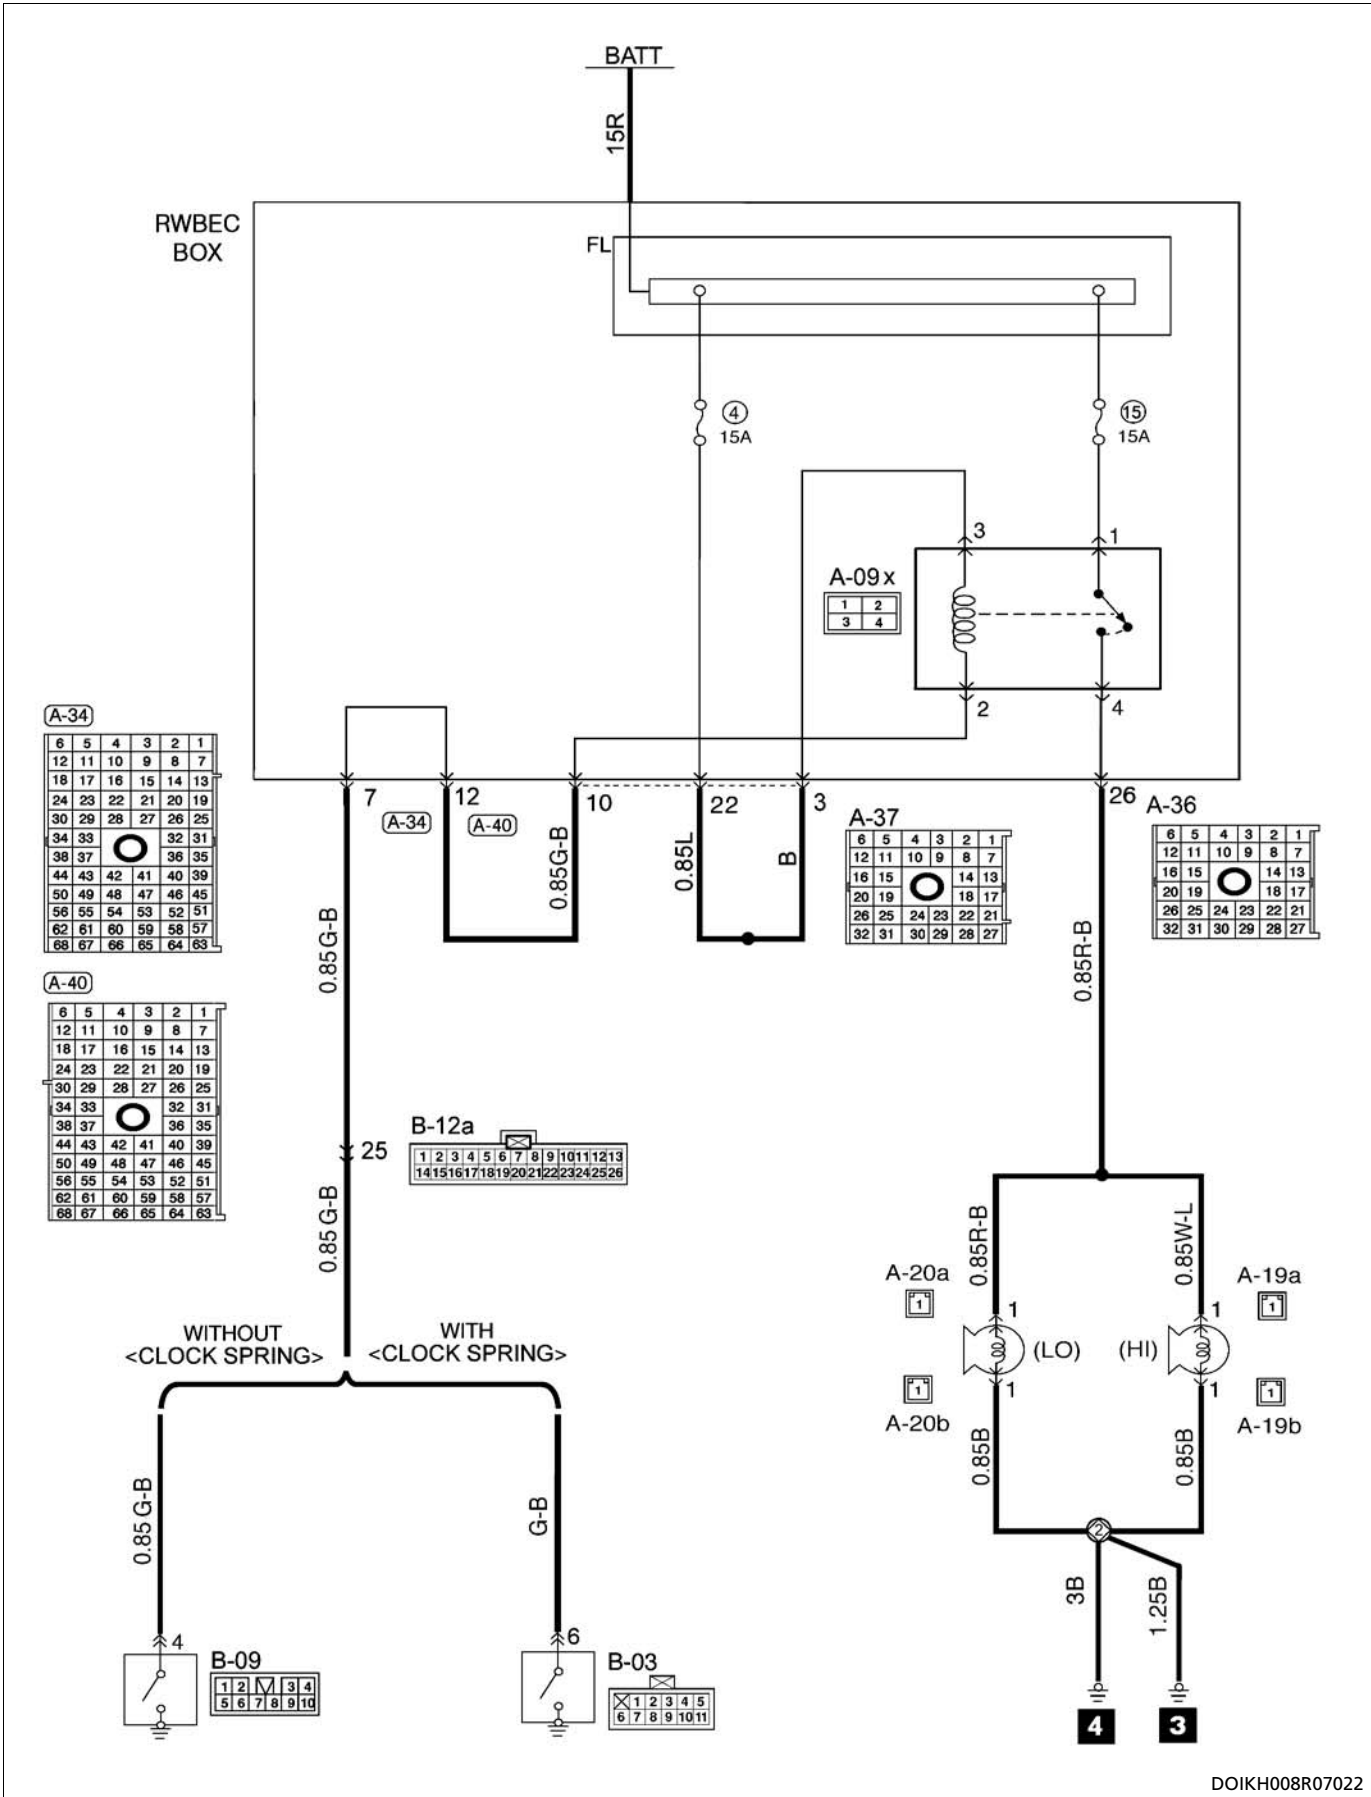

### METER & GAUGE (Continued)

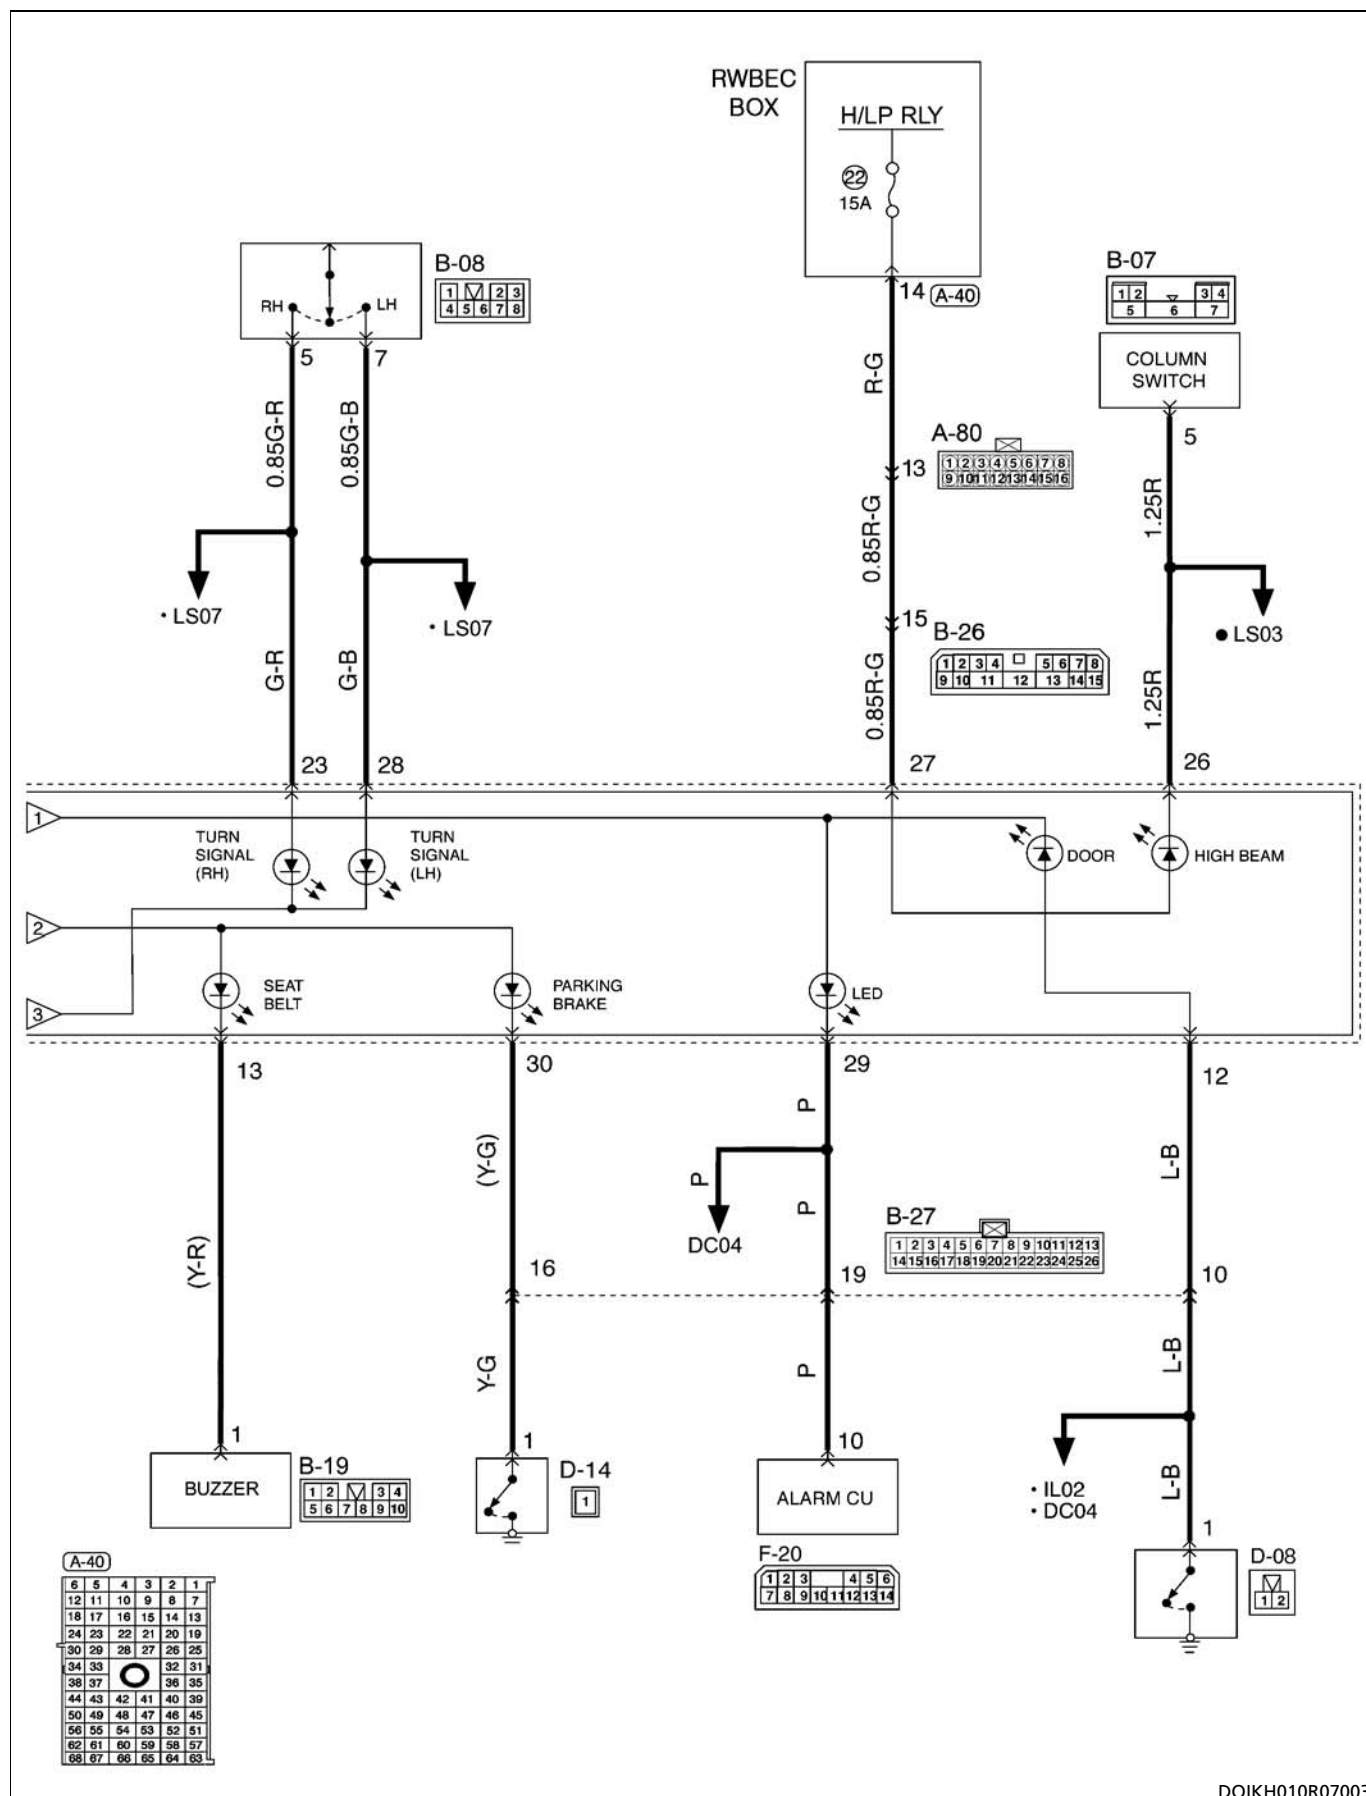

12


ASSITANT MECHANISM

/ 1

SUPPLEMENT RESTRAINTS SYSTEM <SRS>


SUPPLEMENT RESTRAINTS SYSTEM <SRS>

WEW012AMECH108

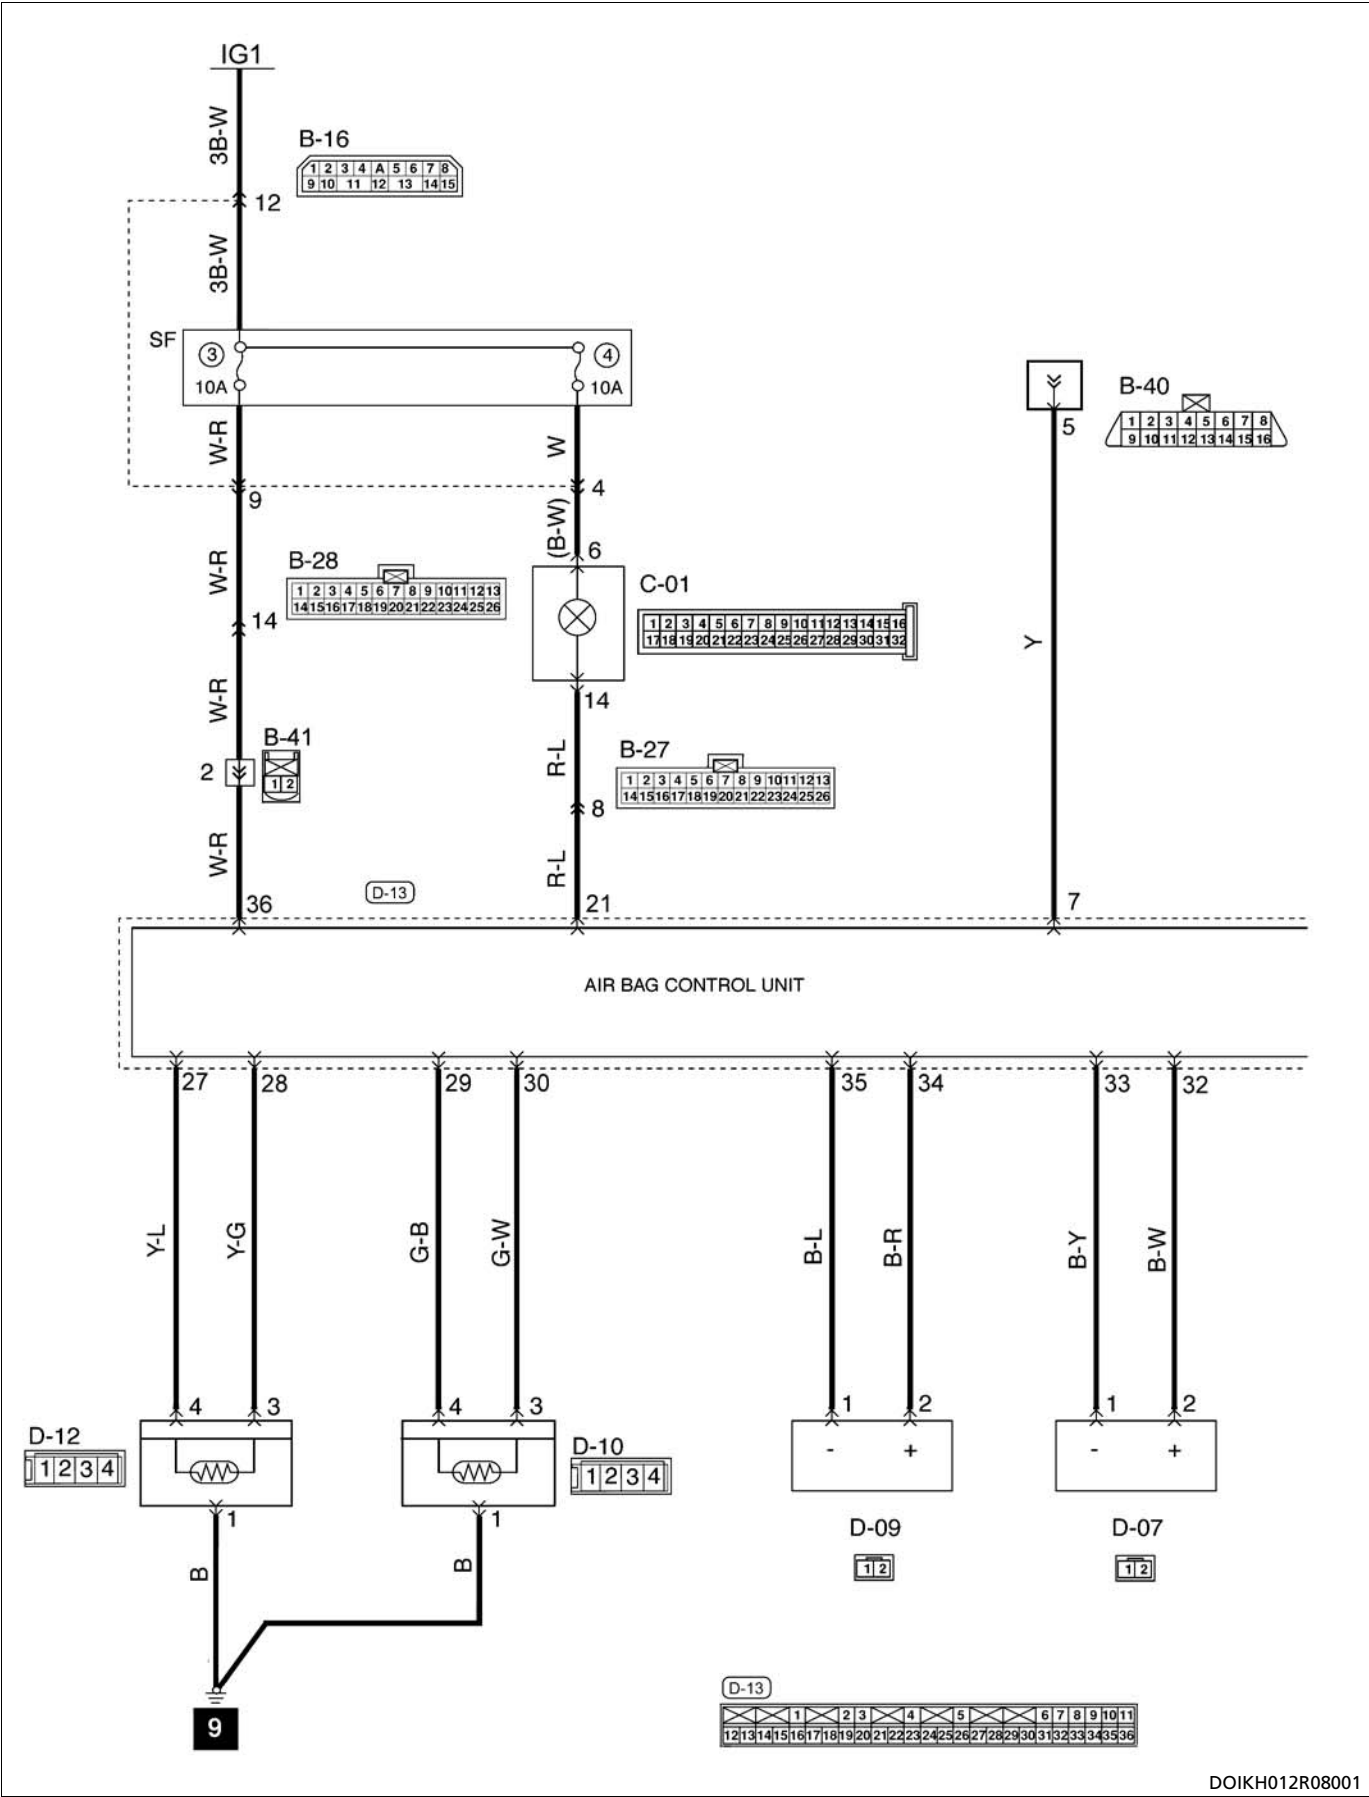

DOIKH012R08001

WEW014DCOMF157

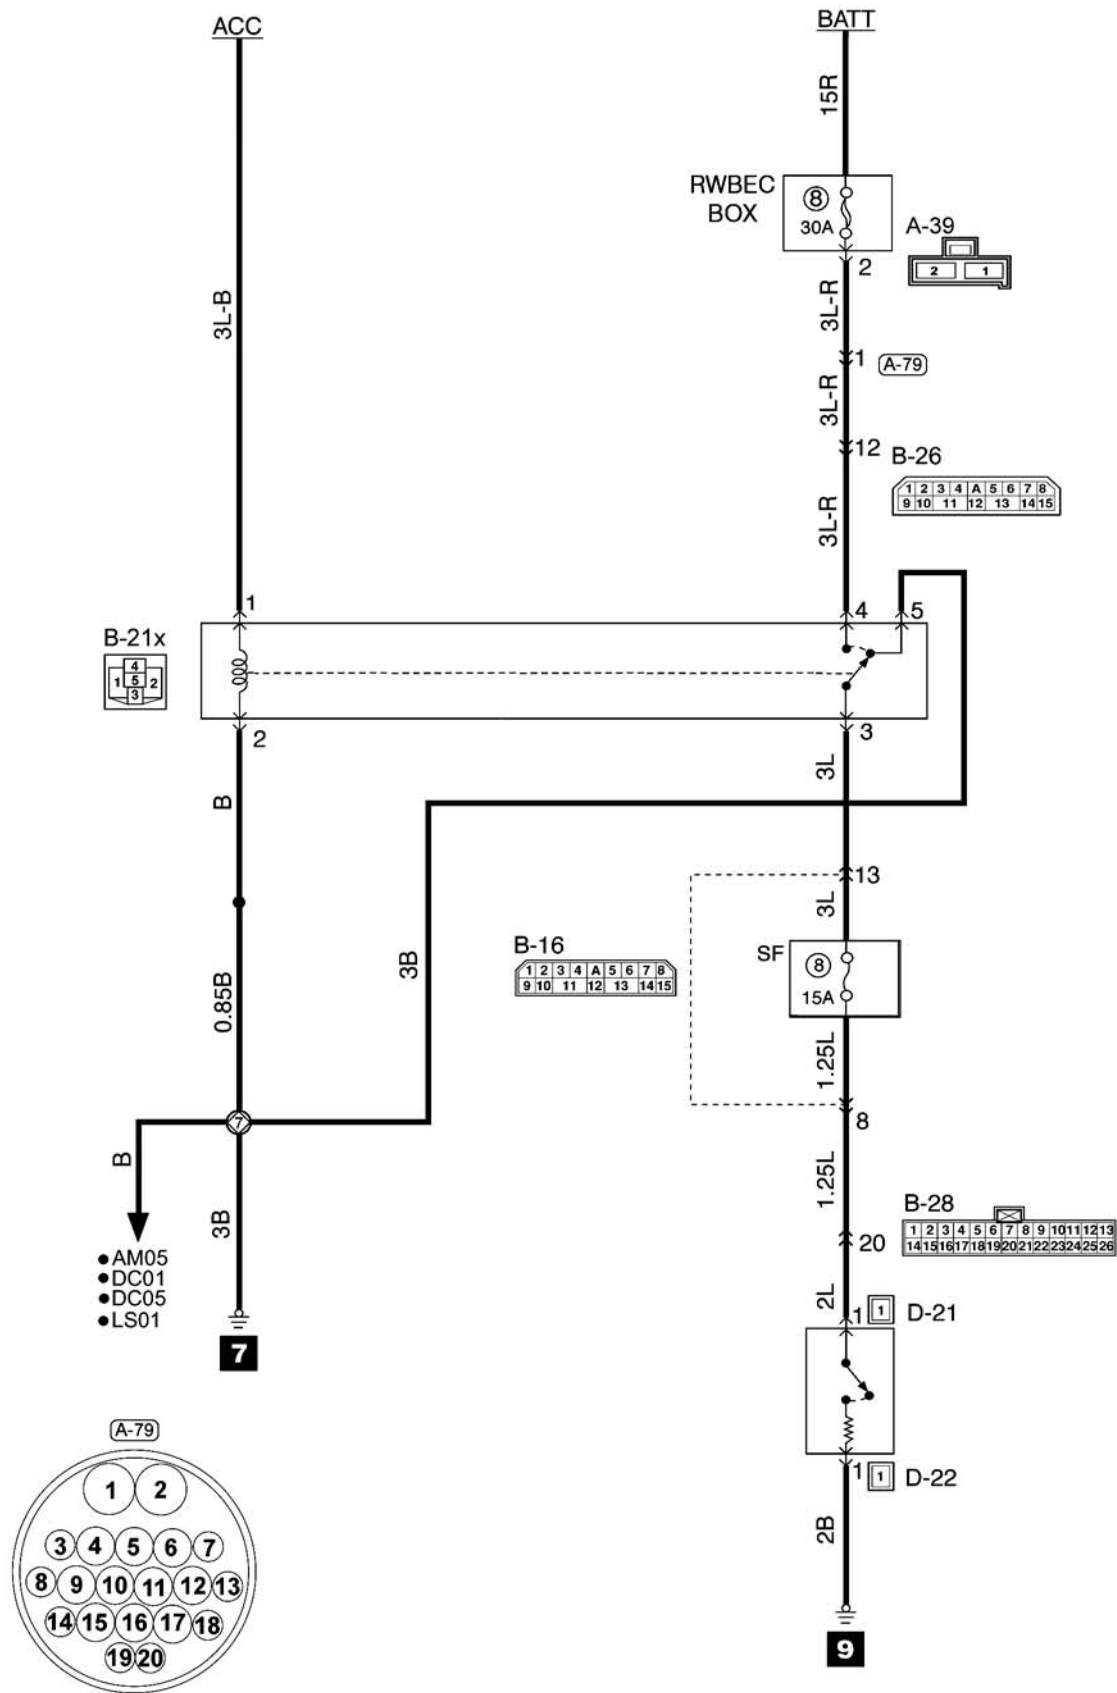

DOIKH014R07004