



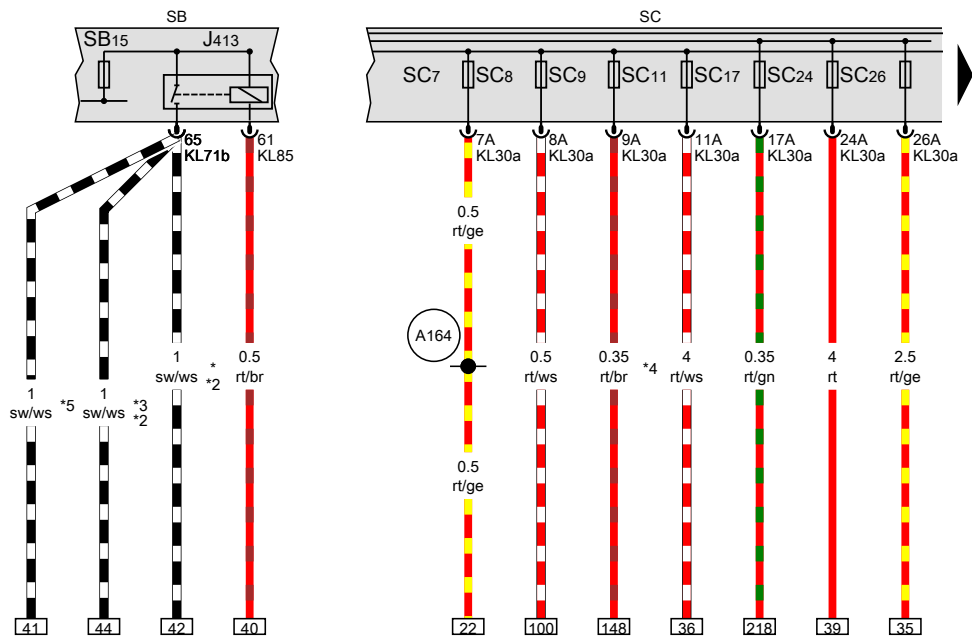

Horn relay, Fuse holder B, Fuse holder C

- J413 Horn relay
- SB Fuse holder B
- SB15 Fuse 15 on fuse holder B
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC9 Fuse 9 on fuse holder C
- SC11 Fuse 11 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- A164 Positive connection 2 (30a) in dash panel wiring harness
- * For models with dual tone horn
- *2 Up to March 2018
- *3 For models with alarm horn
- *4 For models with no heated steering wheel
- *5 From March 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

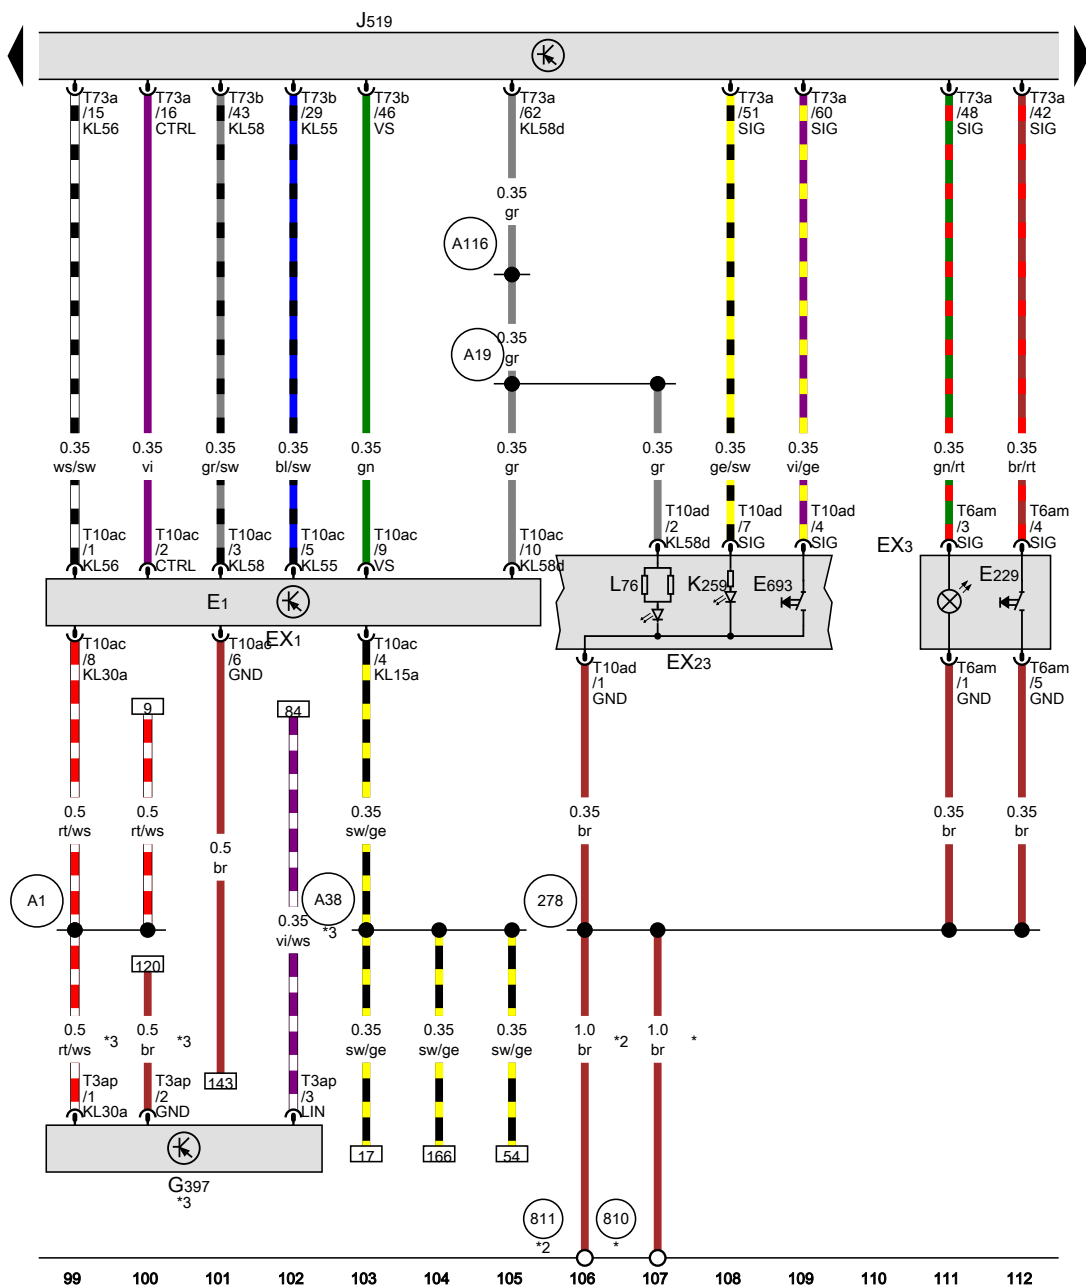


Rotary light switch, Hazard warning light switch, Switch module 1 in centre console, Onboard supply control unit

- EX1 Rotary light switch
- E1 Light switch
- EX3 Hazard warning light switch
- EX23 Switch module 1 in centre console
- E229 Hazard warning lights button
- E693 Start/Stop operation button
- G397 Rain and light sensor
- J519 Onboard supply control unit
- K259 Start/Stop operation warning lamp
- L76 Button illumination bulb
- T3ap 3-pin connector, black
- T6am 6-pin connector, blue
- T10ac 10-pin connector, red
- T10ad 10-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A1 Positive connection (30a), in dash panel wiring harness
- A19 Connection (58d), in dash panel wiring harness
- A38 Positive connection 2 (15a) in dash panel wiring harness
- A116 Connection 2 (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

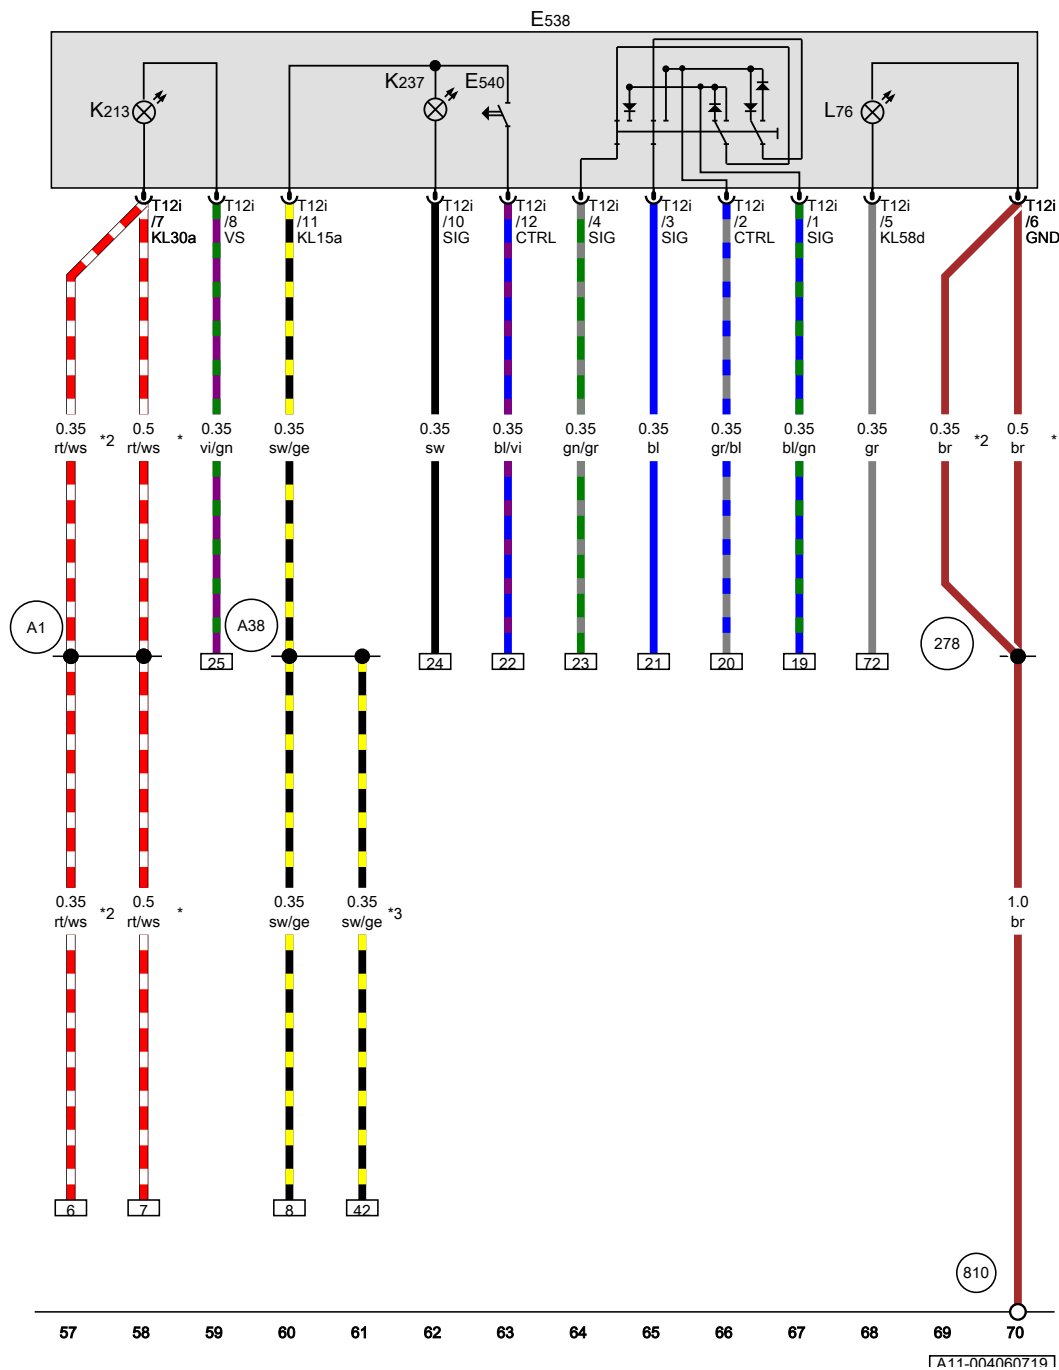


Electromechanical parking brake button

- E538 Electromechanical parking brake button
- E540 Auto-hold button
- K213 Electromechanical parking brake warning lamp
- K237 Auto-hold warning lamp
- L76 Button illumination bulb
- T12i 12-pin connector, black

- (278) Earth connection 4, in interior wiring harness
- (810) Earth point on central tube for dash panel, centre left
- (A1) Positive connection (30a), in dash panel wiring harness
- (A38) Positive connection 2 (15a) in dash panel wiring harness


- * Up to July 2018
- *2 From July 2018
- *3 For models with Top Sport equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

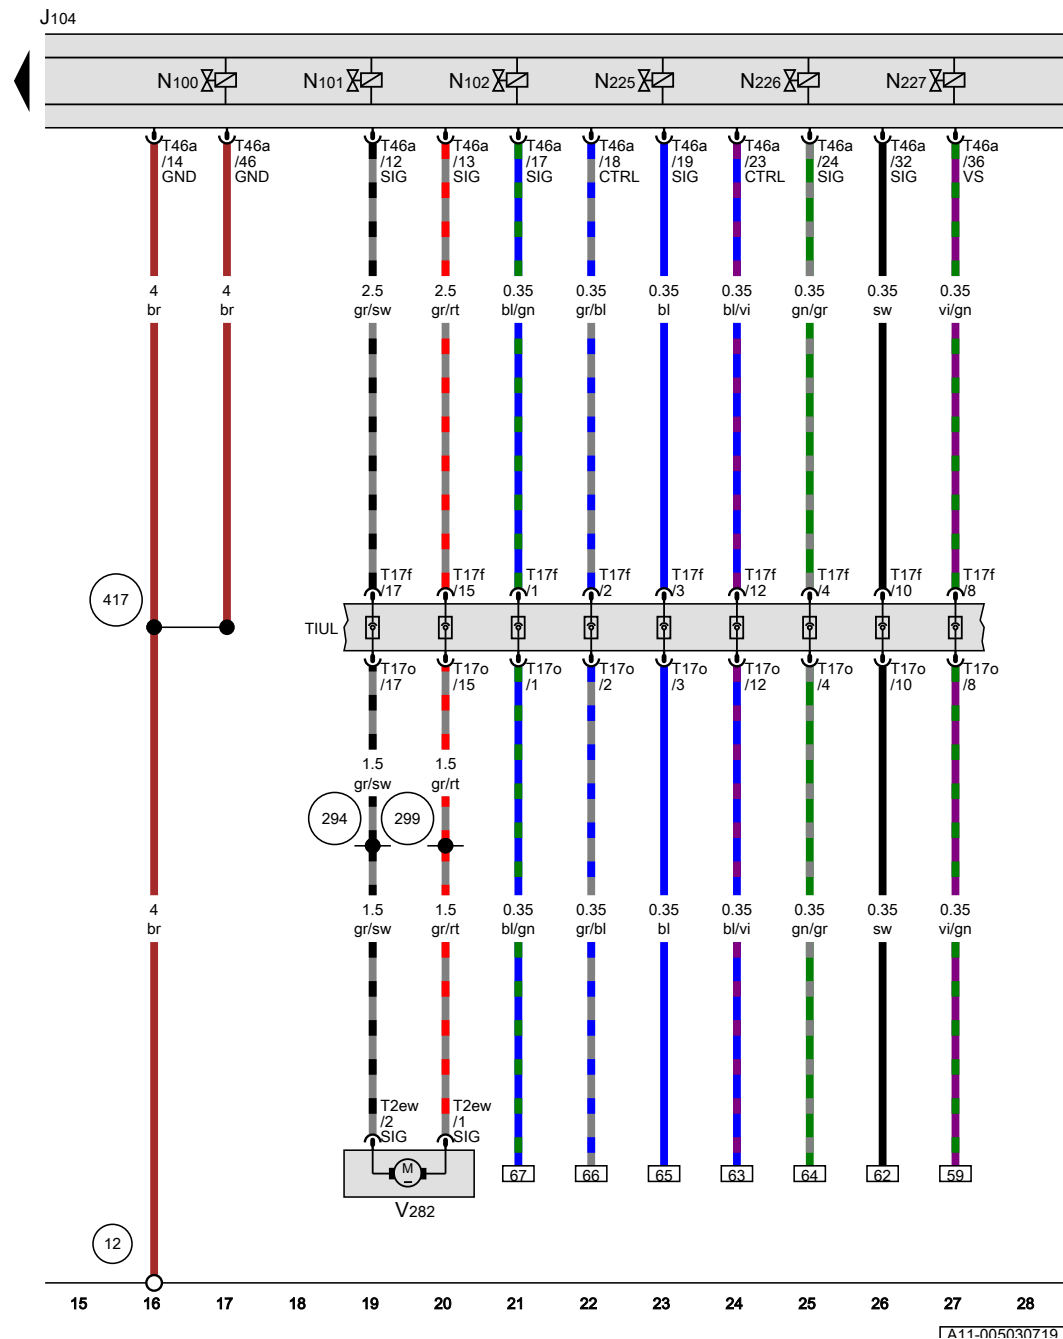

ABS control unit, Left parking brake motor, Earth point, on left in engine compartment


- J104 ABS control unit
- N100 Front right ABS outlet valve
- N101 Front left ABS inlet valve
- N102 Front left ABS outlet valve
- N225 Vehicle stabilization program switch valve 1
- N226 Vehicle stabilization program switch valve 2
- N227 Vehicle stabilization program high-pressure valve 1
- T2ew 2-pin connector, black
- T17f 17-pin connector, green
- T17o 17-pin connector, green
- T46a 46-pin connector, black
- TIUL Coupling point in interior, below left
- V282 Left parking brake motor
- 12 Earth point, on left in engine compartment
- 294 Earth connection 9, in interior wiring harness
- 299 Earth connection 14, in interior wiring harness
- 417 Earth connection 9, in engine compartment wiring harness

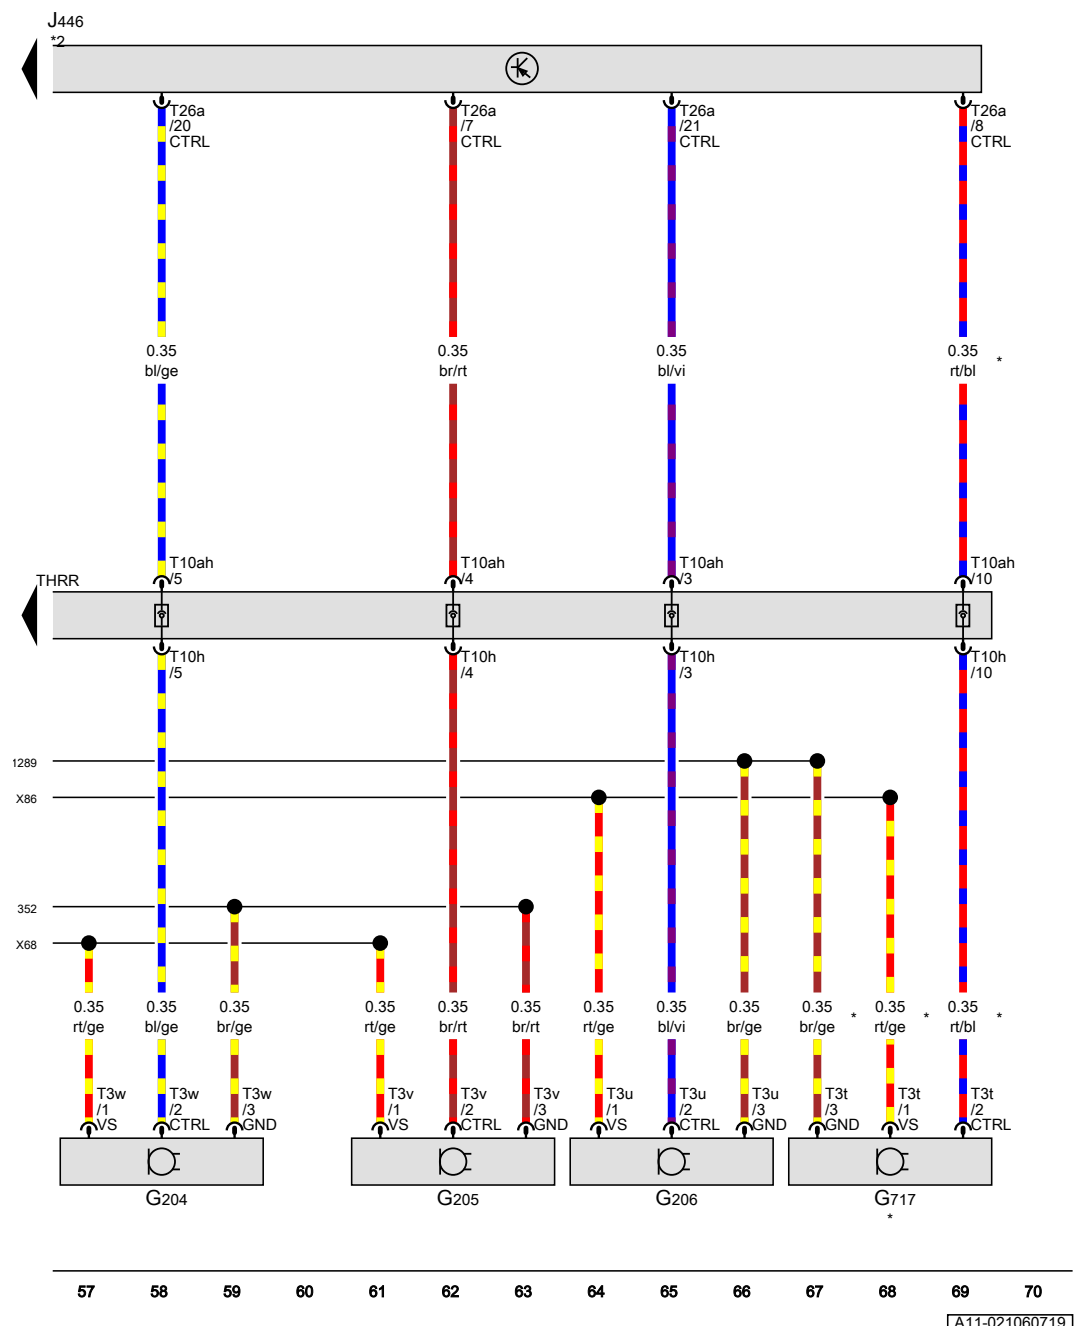

Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit

- G204 Rear centre left parking aid sender
- G205 Rear centre right parking aid sender
- G206 Rear right parking aid sender
- G717 Rear right park assist steering sender
- J446 Parking aid control unit
- T3t 3-pin connector, black
- T3u 3-pin connector, black
- T3v 3-pin connector, black
- T3w 3-pin connector, black
- T10ah 10-pin connector, black
- T10h 10-pin connector, black
- T26a 26-pin connector, black
- THRR Coupling point in luggage compartment, right


- 352 Earth connection (parking aid), in rear bumper wiring harness
- 1289 Earth connection 2, in rear bumper wiring harness
- X68 Positive connection (parking aid), in rear bumper wiring harness
- X86 Connection (fire extinguisher system), in optional equipment wiring harness
- * For models with park assist steering
- *2 According to equipment

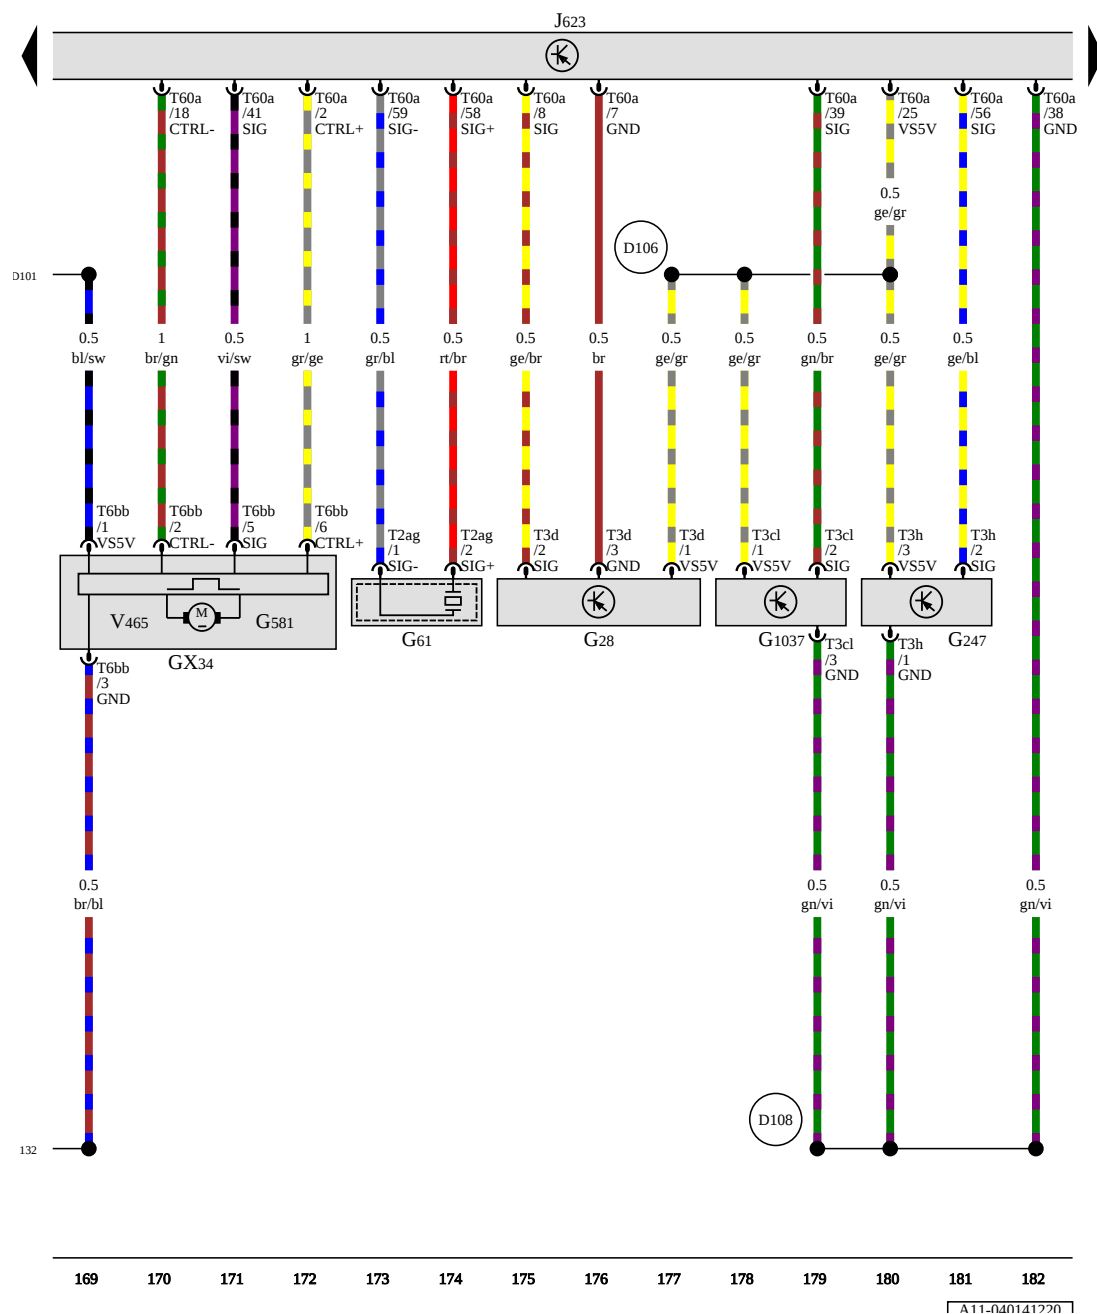

Engine speed sender, Charge pressure control module, Knock sensor 1, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit

- G28 Engine speed sender
- GX34 Charge pressure control module
- G61 Knock sensor 1
- G247 Fuel pressure sender
- G581 Position sender for charge pressure positioner
- G1037 Pressure differential sender for particulate filter
- J623 Engine/motor control unit
- T2ag 2-pin connector, black
- T3cl 3-pin connector, black
- T3d 3-pin connector, black
- T3h 3-pin connector, black
- T6bb 6-pin connector, grey
- T60a 60-pin connector, black
- V465 Charge pressure positioner
- 132 Earth connection 3, in engine compartment wiring harness
- D101 Connection 1 in engine compartment wiring harness
- D106 Connection 4 in engine compartment wiring harness
- D108 Connection 6 in engine compartment wiring harness


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

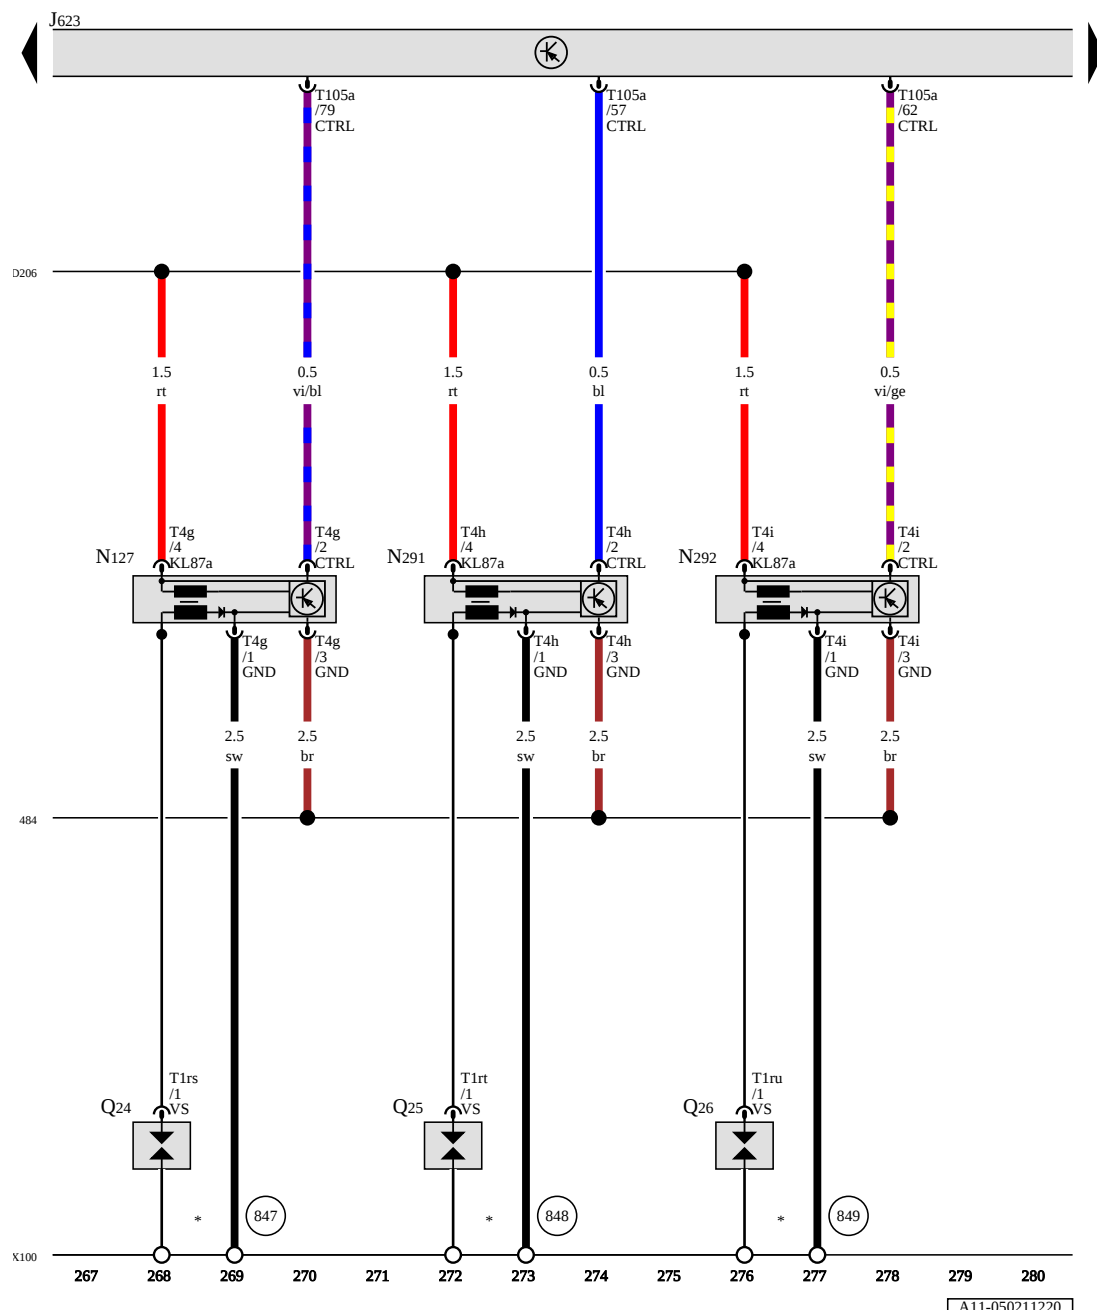

Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4

- J623 Engine/motor control unit
- N127 Ignition coil 2 with output stage
- N291 Ignition coil 3 with output stage
- N292 Ignition coil 4 with output stage
- Q24 Spark plug 2
- Q25 Spark plug 3
- Q26 Spark plug 4
- T1rs 1-pin connector, black
- T1rt 1-pin connector, black
- T1ru 1-pin connector, black
- T4g 4-pin connector, black
- T4h 4-pin connector, black
- T4i 4-pin connector, black
- T105a 105-pin connector, black

- 484 Earth connection 2 (ignition coils), in engine prewiring harness
- 847 Earth point on ignition coil 2, on ignition coil
- 848 Earth point on ignition coil 3, on ignition coil
- 849 Earth point on ignition coil 4, on ignition coil
- D206 Connection 4 (87a) in engine prewiring harness
- * Earth supply via housing

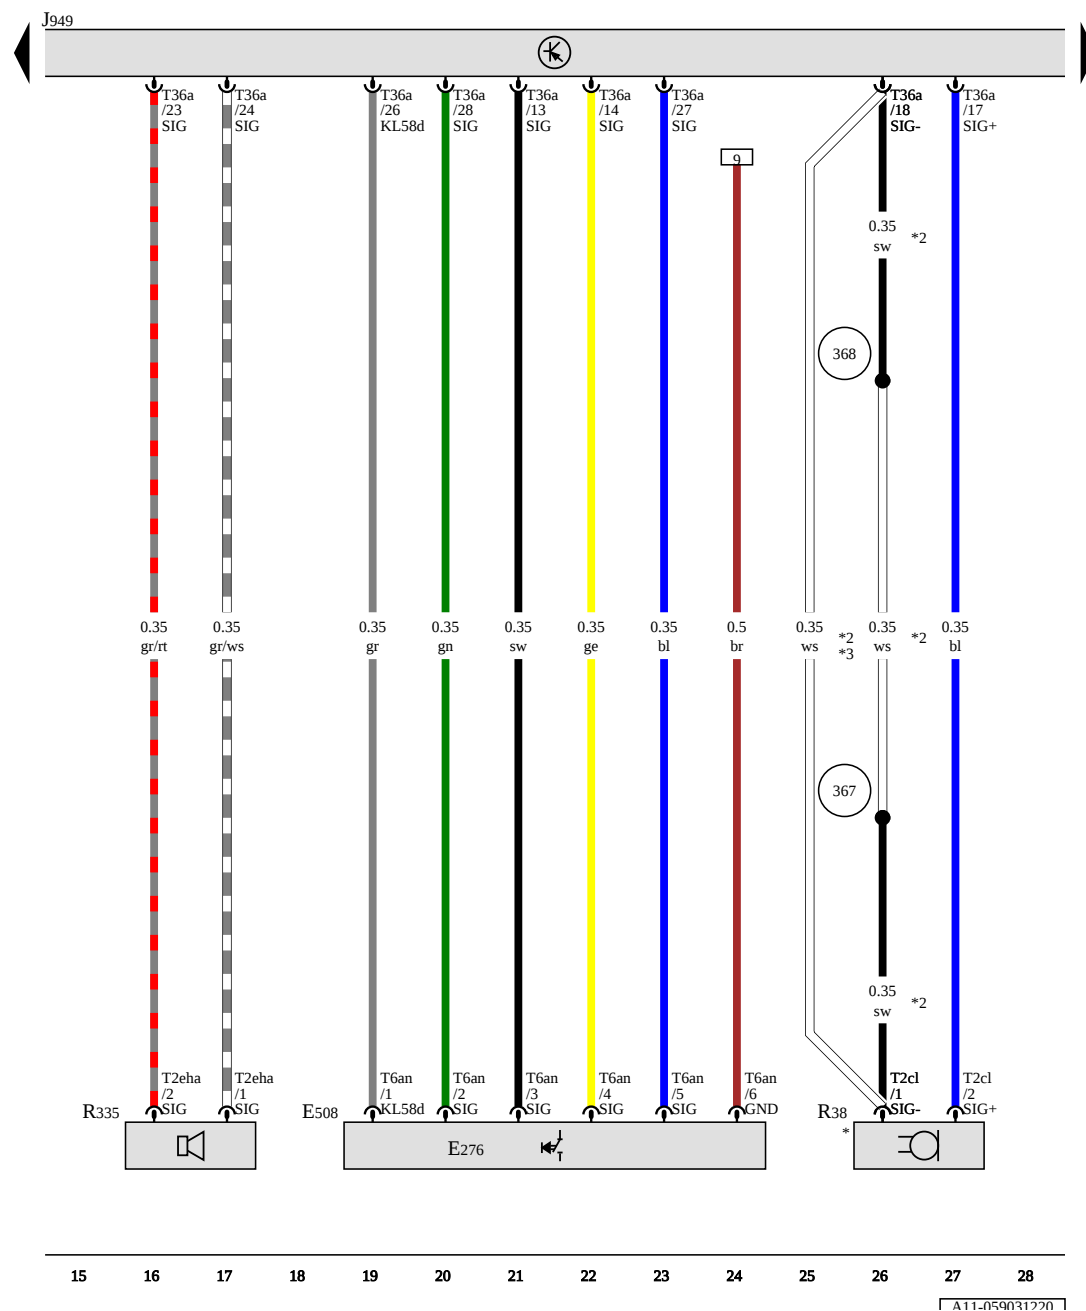

Operating unit for preparation for mobile telephone,
Emergency call module control unit and communication
unit, Telephone microphone, Loudspeaker for emergency
call module

- E276 Emergency assistance call button
- E508 Operating unit for preparation for mobile telephone
- J949 Emergency call module control unit and communication unit
- R38 Telephone microphone
- R335 Loudspeaker for emergency call module
- T2cl 2-pin connector, black
- T2eha 2-pin connector, black
- T6an 6-pin connector, brown
- T36a 36-pin connector, black

367 Earth connection 2, in main wiring harness

368 Earth connection 3, in main wiring harness


- * Pre-wired component
- *2 According to equipment
- *3 From November 2020

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

♦ [⇒ T1.22.2 4bx", page 24](#)


1.22.1 Connector -T4bd-

Connector -T4bd-

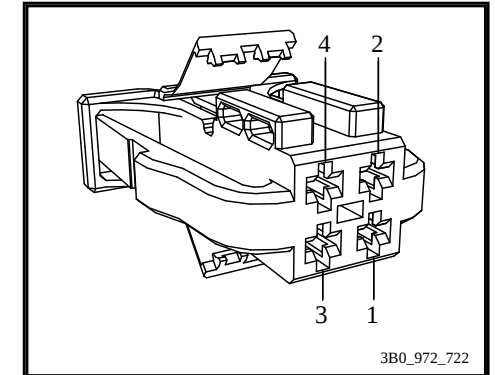

1.22.2 Connector -T4bx-

Connector -T4bx-

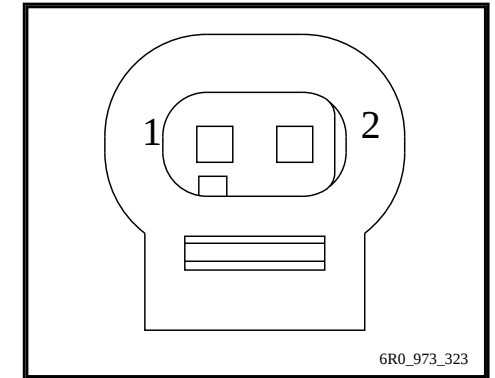

1.43 Oil level and oil temperature sender -G266-

- ◆ [⇒ T1.43.1 3aa", page 52](#)
- ◆ [⇒ T1.43.2 3ai", page 53](#)
- ◆ [⇒ T1.43.3 3ac", page 54](#)
- ◆ [⇒ T1.43.4 3az", page 54](#)


1.43.1 Connector -T3aa-

Connector -T3aa-

- ◆ ⇒ [T1.81.2 6da", page 98](#)
- ◆ ⇒ [T1.81.3 5as", page 99](#)
- ◆ ⇒ [T1.81.4 5bk", page 100](#)


1.81.1 Connector -T6d-

Connector -T6d-

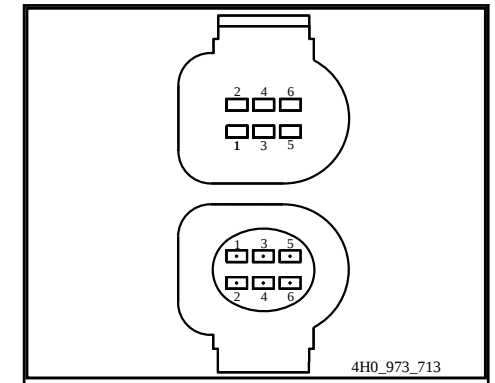

1.81.2 Connector -T6da-

Connector -T6da-

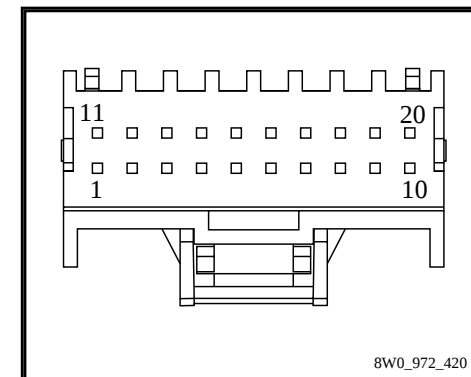


1.23 Fuel pump control unit -J538-

◆ ⇒ [T1.23.1 5af", page 37](#)

◆ ⇒ [T1.23.2 6ag", page 38](#)


1.23.1 Connector -T5af-

Connector -T5af-

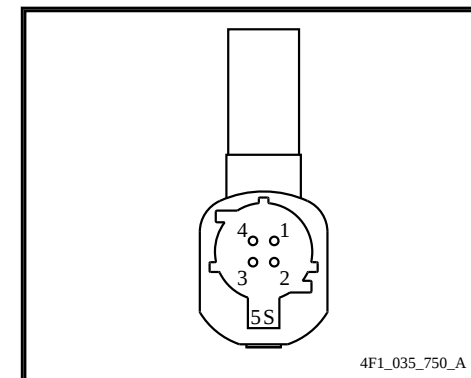

1.33.12 Connector -T2el-

Connector -T2el-

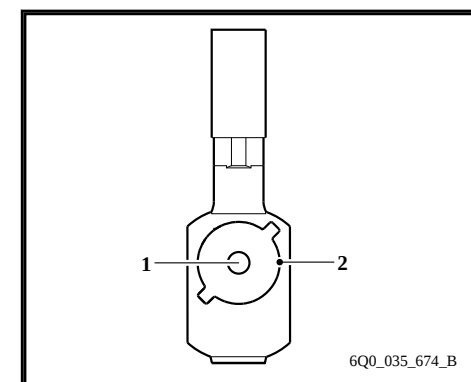


1.15 CD ROM drive -R92-

◆ [⇒ T1.15.1 5ak", page 18](#)

◆ [⇒ T1.15.2 9a", page 18](#)

1.15.1 Connector -T5ak-

Connector -T5ak-

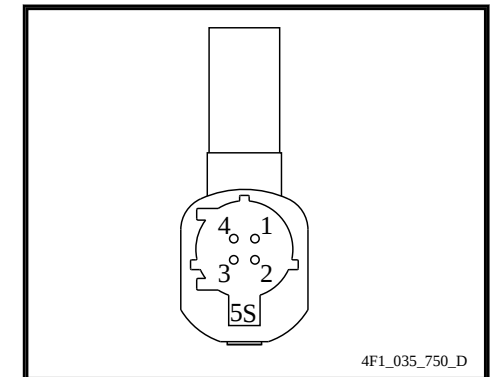


4F1_035_750_D

1.15.2 Connector -T9a-

1.21.1 Connector -T4ak-

Connector -T4ak-

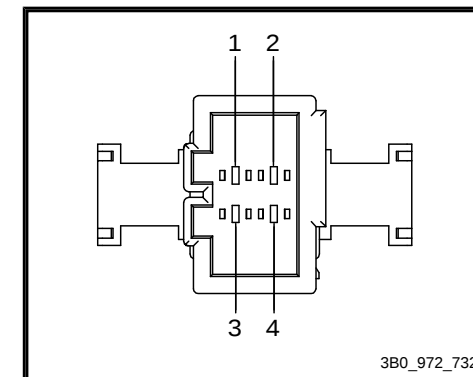

1.22 Seat heating (front passenger side) -ZX16-

♦ ⇒ ["1.22.1 Connector T4an ", page 12](#)

1.22.1 Connector -T4an-

Connector -T4an-

