

How to use Parts Catalog

1. This parts catalog contains the service parts information for the vehicle models listed on the "Vehicle Models and M.D."
2. This parts catalog contains the service parts information as of March, 2008. The part numbers are subject to change without notice.
3. In order to maintain the high quality of Isuzu vehicles, use of Genuine Isuzu Parts is recommended wherever and whenever service, maintenance or repairs are required.

Contents

1. How To Search For The Part Number	P- 3
2. Vehicle Models and Characteristic Table	P- 4
3. V.I.N.	P- 5
4. Option Code List	P- 6
5. How to Refer to Parts Catalog	P- 12
6. Abbreviation List	P- 15
Alphabetical Index	P- 1 - P- 19
Figure Number Index	P- 1 - P- 3
Illustration Index	P- 1 - P- 33
Illustration and Text	P- 1 - P- 374
Numerical Index	P- 1 - P- 18

4-1. Option Code List [Option Code Order]

The option code is arranged in alphabetical sequence. The option code with is listed on the ID Plate.


OPTION CODE	OPTION DESCRIPTION	OPTION CODE	OPTION DESCRIPTION	OPTION CODE	OPTION DESCRIPTION
(L4Z)	4JA1-TC ENG	(RBD)	GRADE LT/LS	<ULA>	RADIO AM/FM W/CD, W/MP3
(MA5)	M/T AISIN 5 SPEED	(RDM)	4JH1-TC ENG	(UL5)	RADIO DELETE
(MK2)	A/T 4 SPEED-HMD, ELEC, PTU	(RMD)	A/T AISIN	(UM6)	AM/FM W/CASSETTE 4 SPEAKERS
(MWQ)	M/T MUA 5 SPEED 5H	(RMK)	A/T 4 SPEED-JATCO	(UN6)	AM/FM W/CASSETTE 2 SPEAKERS
(MZJ)	M/T MUX 5 SPEED 5S	(RSP)	M/T MUA 5 SPEED 5G	<UQ4>	4-SPEAKER SYSTEM BASE
(M30)	A/T 4 SPEED-HMD, ELEC	(RSQ)	M/T MUA 5 SPEED 5S	(UU1)	AM/FM W/CASSETTE AUTO LOUDNESS 4 SPEAKERS
(M75)	M/T MSG 5 SPEED	<RT9>	DOOR MIRROR	<UW5>	6-SPEAKER SYSTEM BASE
<NF2>	EMISSION SYSTEM FEDERAL, TIER 1	<RWE>	CHEVROLET BRAND	(UX5)	AM/FM ASIA/OCEANIA BAND W/CASSETTE FULL LOGIC
<NP5>	STEERING WHEEL LEATHER	<S8C>	REAR HEATER DUCT	<U05>	DUAL TONE HORN
<NR4>	SHIFT ON THE FLY	<S9R>	AIR CLEANER DRY ELEMENT	(U1C)	RADIO AM/FM STEREO SEEK/SCAN, CD, CLOCK
<NT2>	EUR02 SPECIFICATION	<TL1>	BODY COLOR KEYED RAD GRILLE	<U1S>	MULTI CD PLAYER
<NT3>	EUR03 SPECIFICATION	(TM1)	BATTERY 80D26L	<U16>	TACHOMETER
<NT4>	EUR04 SPECIFICATION	(TQ6)	BATTERY 46B24L	<U19>	SPEEDOMETER KILO&MILES
<NY1>	FUEL TANK SHIELD	(TQ7)	BATTERY 55D23L	<U27>	LAMP GLOVE COMPARTMENT
<N05>	FUEL TANK CAP W/LOCK	(TQ8)	BATTERY 95D31L	<U95>	2-SPEAKER SYSTEM BASE
<N08>	FUEL LID OPENER	<TS6>	HIGH MOUNT STOP LAMP	<VA8>	LANGUAGE LABEL SPANISH
<N30>	DELUXE STEERING WHEEL URETHANE	<TX7>	FACE LIFT MODEL	(VFI)	REAR BUMPER CHROME
<N33>	TILT STEERING	<T48>	KEY REMINDER BUZZER	(VF6)	REAR STEP BUMPER
<N40>	POWER STEERING	<T63>	HEAD LAMP REMINDER	<VH4>	MUD FLAP
<OAJ>	LOCAL GM OF EUROPE	<T79>	RR FOG LAMP	<VK5>	SHIPPING EQUIPMENT SPECIAL VARI
<PF3>	DISC WHEEL 15X6.5-41 ALUMI	<T92>	HEAD LAMP LEVELING MANUAL	(VNR)	VIN MODEL YEAR 2007
<PF4>	DISC WHEEL 16X7 - 38 ALUMI	<T96>	FOG LAMP	(VNS)	VIN MODEL YEAR 2008
(QBQ)	FRT&RR 215/70 R15C	<UCA>	ELECTRO LUMINESCENT INSTRUMENTATION CLUSTER	(VNT)	VIN MODEL YEAR 2009
(QCQ)	FRT&RR 245/70 R16	<UC1>	SPEEDOMETER MILE	<VP1>	FRONT SPOILER
<QFT>	FRT&RR 215/70 R15C GOODYEAR TIRE	<UE8>	DIGITAL CLOCK	(VT4)	COLOR KEYED BUMPER
(RBA)	GRADE DX	<UJH>	OUTSIDE TEMPERATURE GAGE		
(RBB)	GRADE LX				

ALPHABETICAL INDEX


PART NAME	FIG	KEY	PAGE	PART NAME	FIG	KEY	PAGE	PART NAME	FIG	KEY	PAGE
BOLT; GEN BRKT	0-60	26	67	BOLT; LSPV	3-45	63	144	BOLT; RR GUIDE RAIL	6-51	17	242
BOLT; GEN TO ADJ PLATE	0-33	73	39	BOLT; LWR LINK	4-50	96	197	BOLT; RR PLATE TO C/BL	0-20	15	22
BOLT; GLASS	6-51	11	242	BOLT; MIRROR	7-20	184	269	BOLT; RR WHEEL CYL	3-05	31	133
BOLT; GLASS FIX	6-31	27	228	BOLT; MUD GUARD	6-47	76	240	BOLT; RUBBER	5-10	54	207
BOLT; GRAND	8-15	239	313	BOLT; NOISE SHIELD COVER	0-10	35	5	BOLT; RUBBER, SUPPORT	1-50	337	104
BOLT; GUARD FRAME	9-32	37	368	BOLT; OIL CONN, VAC PUMP	0-66	106	74	BOLT; S/ABS TO LWR LINK	4-50	60	197
BOLT; GUARD FRAME STOPPER, RR BOD	9-32	7	368	BOLT; OIL FILTER	0-50	329	52	BOLT; SEAT BELT ANCHOR	7-60	9	292
BOLT; GUIDE RAIL TO DOOR	6-31	91	228	BOLT; OIL FILTER	0-50	76	52	BOLT; SENSOR	0-12	401	10
BOLT; GUIDE TO FRAME	5-30	40	210	BOLT; OIL PAN	0-13	23	12	BOLT; SENSOR	0-40	411	48
BOLT; GUIDE TUBE	0-13	10	12	BOLT; OIL PIPE	0-52	40	58	BOLT; SENSOR	0-60	782	68
BOLT; HAND BRK LEVER	3-11	28	138	BOLT; OIL PIPE	0-52	414	59	BOLT; SENSOR, OIL LEVEL	0-13	345	13
BOLT; HANDLE TO GUARD FRAME	9-33	215	373	BOLT; OIL PIPE FIX	0-52	27	58	BOLT; SET, RR GATE HOOK	9-33	175	373
BOLT; HANGER	0-11	13	7	BOLT; OIL PIPE, OIL JET	0-52	29	58	BOLT; SHAFT IDLE	0-14	104	16
BOLT; HARNESS EARTH	8-10	130	307	BOLT; OIL PUMP	0-51	29	54	BOLT; SHROUD	8-75	65	354
BOLT; HEADLAMP	8-01	28	295	BOLT; OIL PUMP, TRANSFER	2-61	114	126	BOLT; SILL	9-31	117	366
BOLT; HEAT PROTECTOR	0-27	21	29	BOLT; OIL TANK BRKT	4-35	25	187	BOLT; SLAVE CYL TO TRANS CASE	2-01	146	105
BOLT; HEAT PROTECTOR	0-36	101	42	BOLT; OUTLET PIPE	0-31	50	35	BOLT; SPROCKET TO LAYSHAFT	0-14	166	17
BOLT; HELPER RUBBER	4-60	165	199	BOLT; PIPE, BREATHER	4-12	185	172	BOLT; STARTER	0-60	4	67
BOLT; HINGE	6-10	18	220	BOLT; PIPE BRKT	0-52	313	59	BOLT; STAY, HOOD	6-10	44	220
BOLT; HINGE	6-30	5	226	BOLT; PIPE CLIP, P/S	4-35	233	188	BOLT; STOPPER	9-33	250	373
BOLT; HINGE	6-50	4	241	BOLT; PIPE FIX	0-52	311	59	BOLT; STOPPER, BRK M/CYL	3-30	12	141
BOLT; HINGE, FRT SEAT	7-50	229	285	BOLT; PIPE FIX	8-52	158	341	BOLT; STRAINER, OIL PUMP	0-51	49	54
BOLT; HINGE, RR GATE	9-33	189	373	BOLT; PIVOT, GOV LEVER	0-81	97	77	BOLT; STRG COLUMN	4-31	66	184
BOLT; HINGE, RR SEAT	7-55	55	288	BOLT; PLATE TO PLATE	2-20	43	114	BOLT; STRG SHAFT TO UNIT	4-31	33	184
BOLT; HOOD LK	6-10	32	220	BOLT; POWER WINDOW	8-25	11	322	BOLT; STRG UNIT	4-31	95	184
BOLT; HOOK	6-90	134	264	BOLT; PULLEY	4-36	66	191	BOLT; STUD	2-08	61	111
BOLT; HORN	8-28	189	330	BOLT; PULLEY BRKT	8-50	37	338	BOLT; SUCTION PIPE	0-32	17	37
BOLT; HORN, ANTI THEFT	8-28	142	330	BOLT; QUAD BOX	2-30	142	121	BOLT; SUPPORT BRKT TO DISC BRK	3-02	33	131
BOLT; HOSE FIX	8-52	216	342	BOLT; RAD SKID PLATE	6-03	13	216	BOLT; SUPPORT BRKT TO DISC BRK	3-02	55	131
BOLT; HSG	0-20	211	23	BOLT; REAMER	0-12	53	9	BOLT; SUPPORT BRKT TO KNUCKLE	3-02	61	131
BOLT; HSG TO HD	0-31	44	35	BOLT; REAR SEAT LATCH	7-55	363	288	BOLT; SUPPORT ROD, HOOD	6-10	130	221
BOLT; HUB CAP, FRT WHEEL	4-11	3	166	BOLT; RECLINING	7-50	17	284	BOLT; SW	8-25	370	323
BOLT; IDLE GEAR	0-14	114	17	BOLT; RECLINING DEVICE	7-50	257	286	BOLT; TAIL GATE LOCK	9-33	170	373
BOLT; INL MANIF	0-25	13	26	BOLT; RELAY	8-25	312	323	BOLT; TAIL GATE TO RR BODY	9-33	45	372
BOLT; INL PIPE	0-25	53	26	BOLT; RELAY BRKT	8-25	182	322	BOLT; THROTTLE ASM	0-25	731	27
BOLT; INL PIPE	0-30	63	33	BOLT; RESERVE TANK	1-11	34	84	BOLT; THROUGH, GEN	0-66	21	74
BOLT; INL PIPE	0-32	16	37	BOLT; RET, DRIVEN GEAR	2-25	4	116	BOLT; THROUGH, STARTER	0-65	27	72
BOLT; INST PNL	7-40	11	274	BOLT; RET TO C/BL	0-20	185	23	BOLT; THRUST COLLAR	0-14	101	16
BOLT; JOINT, CLU M/CYL	2-08	31	111	BOLT; REV INHIBITOR	2-30	146	121	BOLT; THRUST PLATE TO C/BL	0-14	11	16
BOLT; JOINT, OIL FEED PIPE, VAC PU	0-52	46	58	BOLT; ROCKER SHAFT	0-14	87	16	BOLT; TIMING COVER	0-20	124	23
BOLT; JOINT, OIL PIPE	0-52	338	59	BOLT; ROTOR	0-15	204	20	BOLT; TIRE HANGER	5-30	10	210
BOLT; JUNCTION BLOCK	8-10	47	307	BOLT; RR BODY	9-33	291	374	BOLT; TOOL BOX	9-01	284	361
BOLT; KEY CYL, DOOR	7-30	26	272	BOLT; RR BODY MTG	9-30	13	363	BOLT; TORQUE, STEERING	4-31	188	184
BOLT; KNOB	6-86	104	261	BOLT; RR COVER	2-20	86	114	BOLT; TORSION BAR, HEIGHT CONT	4-10	86	165
BOLT; LICENSE PLATE, FRT	6-01	296	213	BOLT; RR DOOR LOCK	6-52	19	244	BOLT; TRANS CASE TO ENG	2-25	22	116

0-13 OIL PAN AND LEVEL GAUGE

4JH1 (NO 1)

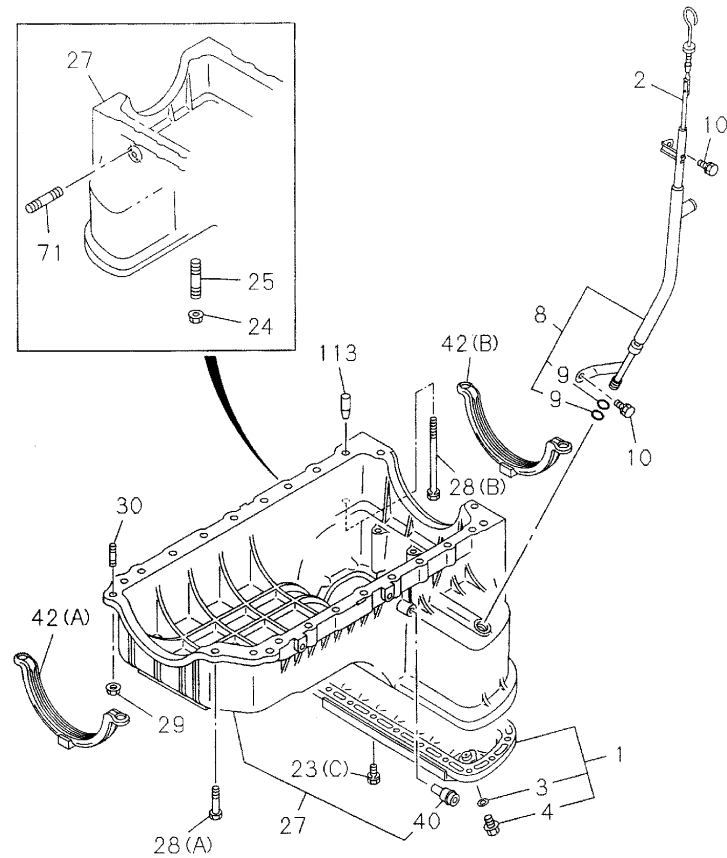

4JH1 (NO 2)

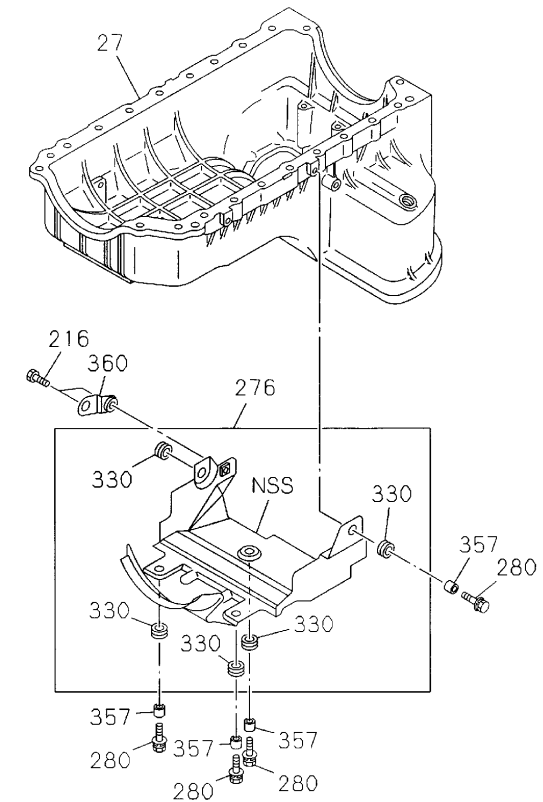


0-27 EXHAUST MANIFOLD


KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS C = 4JH1-TC ENG (RDM) E = 4JJ1-TCS ENG (LFB)	KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS C = 4JH1-TC ENG (RDM) E = 4JJ1-TCS ENG (LFB)
1	8-97313 257-0		MANIFOLD; EXHAUST	0307-0609	1	C	EMISSION SYSTEM R15 04<K75>	33	5-09500 013-0		WASHER; EXH MANIF	0610-	8	E	03.613 ID=10.5
	8-97372 786-1		MANIFOLD; EXHAUST	0610-	1	E									
2	8-97350 317-0		GASKET; EXH MANIF TO HD	0307-0609	1	C	ALSO INCLUDED IN GASKET SET(ENG. & HEAD)								
	8-97356 028-2		GASKET; EXH MANIF TO HD	0610-	1	E									
3	8-97920 417-1		PROTECTOR; HEAT, EXH MANIF	0307-0609	1	C	EMISSION SYSTEM R15 04<K75>,EUR02 SPECIFICATION<NT2> (A)								
	8-97920 418-1		PROTECTOR; HEAT, EXH MANIF	0307-0609	1	C	(B)								
	8-97360 036-2		PROTECTOR; HEAT, EXH MANIF	0610-	1	E	(E)								
14	8-97257 914-0		WASHER; PL, EXH MANIF	0307-0609	2	C	ID=8.5 OD=15 T=4								
15	8-97131 597-1		BOLT; EXH MANIF	0307-0609	6	C	M8X35 W/PL WASHER & FLANGE								
18	0-91150 208-0	A	NUT; EXH MANIF	0307-0602	2	C	01.540 M8 FLANGE								
	0-91180 208-0		NUT; EXH MANIF	0603-0609	2	C	01.540 M8 FLANGE								
	8-97381 617-0		NUT; EXH MANIF	0610-	8	E	M10 FLANGE								
19	8-94391 665-0		STUD; MANIF TO CYL HD	0610-	2	E	(C) M10X70 L=83								
	8-97379 383-0		STUD; MANIF TO CYL HD	0610-	6	E	(B) M10X33 L=48								
	8-97048 055-1	A	STUD; MANIF TO CYL HD	0307-0408	2	C	(A) M8X35 L=46								
	8-97378 065-0		STUD; MANIF TO CYL HD	0409-0609	2	C	(A) M8X35 L=46								
20	0-91610 606-0		WASHER; PL, HEAT PROTECTOR	0610-	3	E	ID=6.4								
21	0-28080 612-0	A	BOLT; HEAT PROTECTOR	0307-0512	1	C	01.428 M6X12 FLANGE								
	0-28050 612-0		BOLT; HEAT PROTECTOR	0601-0609	1	C	03.162 M6X12 FLANGE								
	0-28080 812-0	A	BOLT; HEAT PROTECTOR	0307-0512	3	C	08.900 M8X12 FLANGE								
	0-28050 812-0		BOLT; HEAT PROTECTOR	0601-0609	3	C	02.343 M8X12 FLANGE								
	0-28050 610-0		BOLT; HEAT PROTECTOR	0610-	3	E	03.671 M6X10 FLANGE								
23	9-09164 608-0	A	WASHER; PL EXH MANIF BRKT	0408-0605	1	C	01.276 ID=8.4 OD=18								
	0-91614 608-0		WASHER; PL EXH MANIF BRKT	0606-0609	1	C	02.559 ID=8.4 OD=18								
25	8-97161 202-1		BRACKET; EXH MANIF	0307-0609	1	C	EMISSION SYSTEM R15 04<K75>								
26	0-28050 830-0		BOLT; BRKT TO EXH MANIF	0601-0609	1	C	00.206 (A) M8X30 FLANGE								
	8-94312 699-1	A	BOLT; BRKT TO EXH MANIF	0307-0408	1	C	03.604 (B) M8X14 FLANGE								
	8-97378 075-0		BOLT; BRKT TO EXH MANIF	0409-0609	1	C	03.613 (B) M8X14 FLANGE								

0-60 ENGINE ELECTRICAL CONTROL PARTS

4JH1 (NO 3)

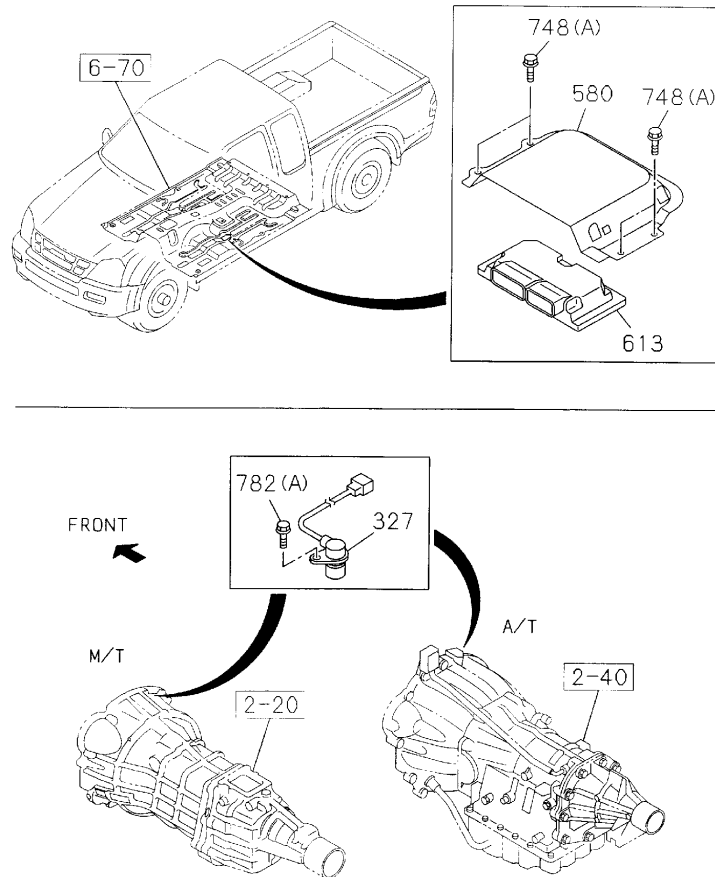


4JH1 (NO 4)

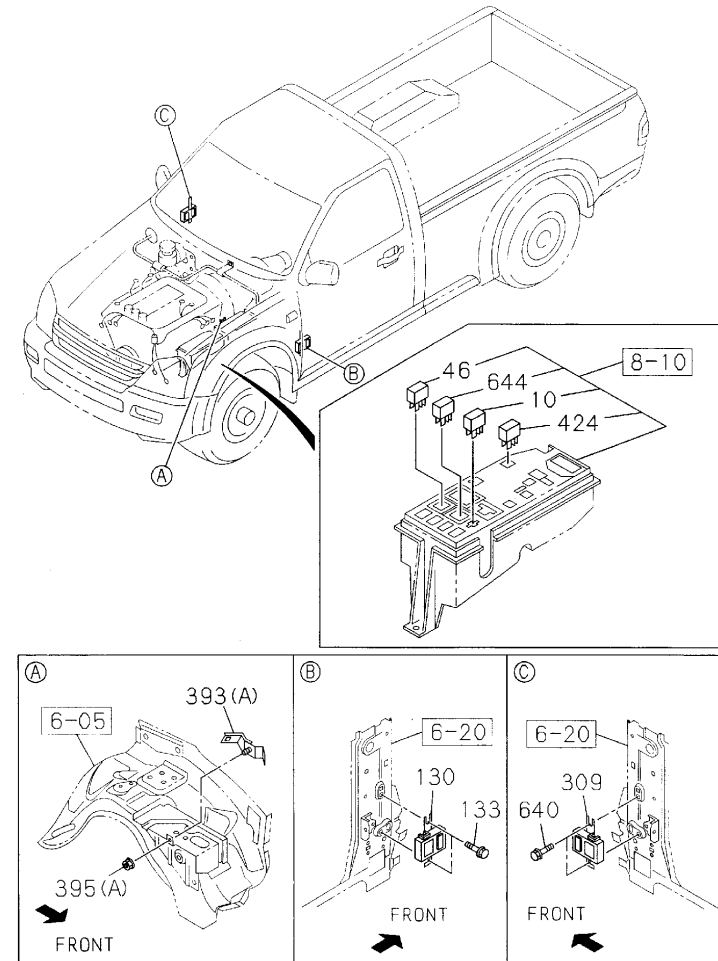

1-40 FUEL TANK


FUEL FILTER BRKT AND HOSE_ 4JH1

4JH1-TC
EXC. EURO3 SPECIFICATION

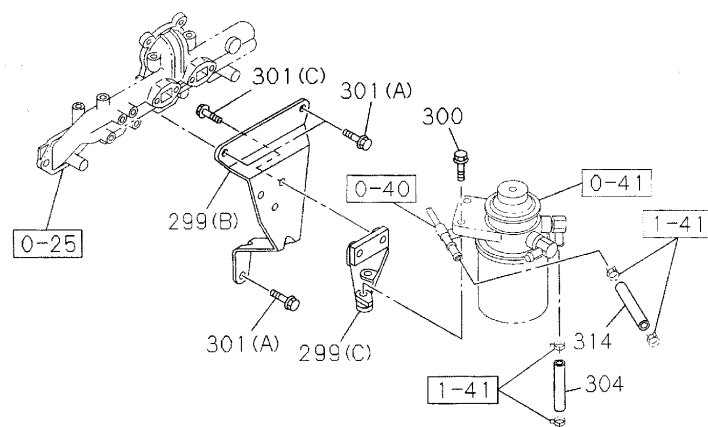

SEDIMENTER BRKT AND HOSE_ 4JH1

4JH1-TC
EXC. EURO3 SPECIFICATION

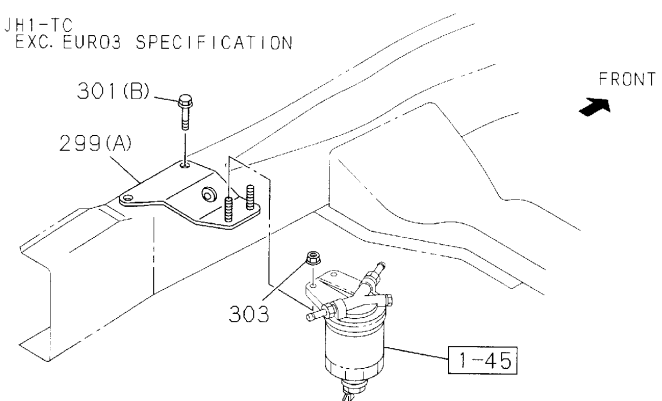


2-25 SPEEDOMETER DRIVEN GEAR


KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS B = M/T MUA 5 SPEED 5G (RSP) E = M/T MUA 5 SPEED 5H (MWQ)	KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS B = M/T MUA 5 SPEED 5G (RSP) E = M/T MUA 5 SPEED 5H (MWQ)
1	8-97012 085-2		GEAR; DRIVEN, SPD	0307-0508		1 B	FINAL GEAR RATIO 43/10 GY2) FRT&RR 245/70R16 BSW),FRT&RR 245/70R16 BZD) EXC. AUSTRALIA EQUIPMENT(B13)								
	8-97238 583-0		GEAR; DRIVEN, SPD	0307-		1 BE	FINAL GEAR RATIO 41/10 GT5) FRT&RR 225/75R15C BZC) (B13) Z=17 ; 43/10 245 70R16								
	8-97238 588-0		GEAR; DRIVEN, SPD	0307-		1 BE	4X4(TFS**) FINAL GEAR RATIO 41/9(GT3) Z=16 ; 43/9								
	8-97238 584-2		GEAR; DRIVEN, SPD	0307-		1 BE	4X4(TFS**) FINAL GEAR RATIO 43/10(GY2) FRT&RR 245/70R16(BSW),FRT&RR 245 70R16(BZD) (B13) Z=18;41/9								
	8-97238 587-2		GEAR; DRIVEN, SPD	0610-		1 BE	4X4(TFS**) FINAL GEAR RATIO 43/9(GT2) FRT&RR 225 75R15C(BZC) ; 41/8								
2	8-97305 454-1		BUSHING; DRIVEN GEAR, SPEEDOMETER	0307-		1 BE	4X4(TFS**)								
3	9-09921 100-0		GASKET; BUSHING	0307-		1 BE									
4	0-28050 820-0		BOLT; RET, DRIVEN GEAR	0307-		1 BE	M8X20 FLANGE								
10	8-97131 328-1		SEAL; OIL, DRIVE GEAR	0610-		1 BE	NOK								
11	8-94446 571-1		FILTER; BUSHING, SPEEDOMETER DRIV	0307-		1 BE									
22	0-28051 240-0		BOLT; TRANS CASE TO ENG	0307-		1 BE	(K)								
	0-28051 060-0		BOLT; TRANS CASE TO ENG	0307-		2 BE	(L)								
	0-28051 040-0		BOLT; TRANS CASE TO ENG	0501-		4 BE	(G) M10X40 FLANGE								
27	0-91180 110-0		NUT; CLU HSG TO TRANS	0307-		2 BE	03.162 M10 FLANGE								
	0-91180 112-0		NUT; CLU HSG TO TRANS	0307-0404		2 B	4JH1-TC ENG(RDM) 02.042 M12 FLANGE								
53	8-97021 019-0		PLATE; LOCK, DRIVEN GEAR	0307-		1 BE									
100	8-97318 961-0		PLUG; HOLE	0610-		1 E	4JJ1-TCS ENG(LFB)								

3-11 PARKING BRAKE CONTROL

PARKING BRAKE FLOOR

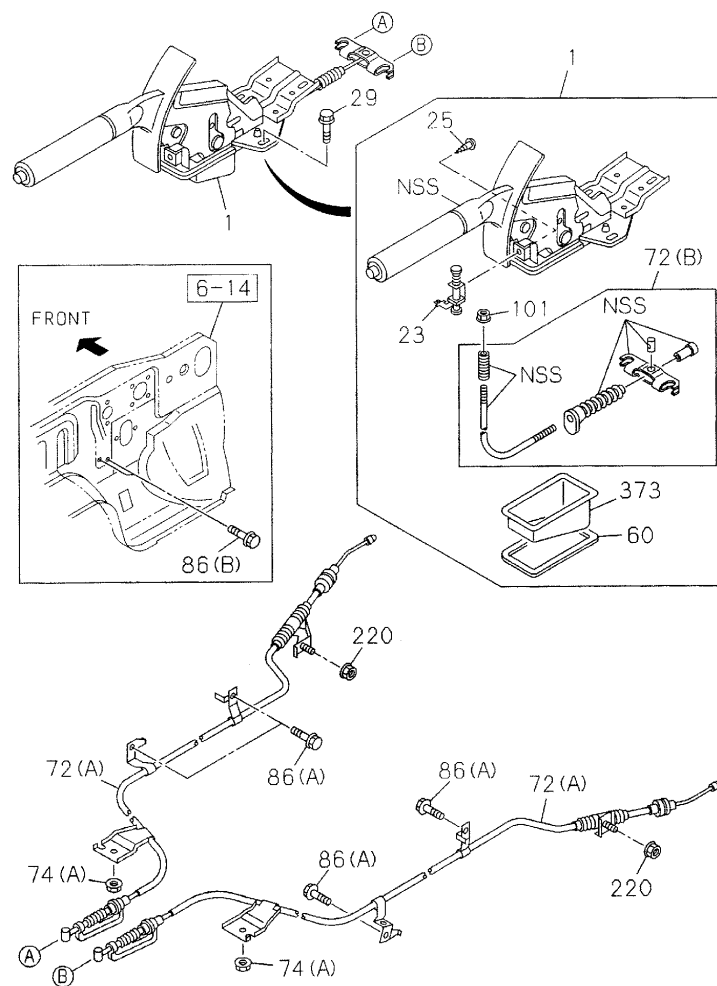

EXC PARKING BRAKE FLOOR

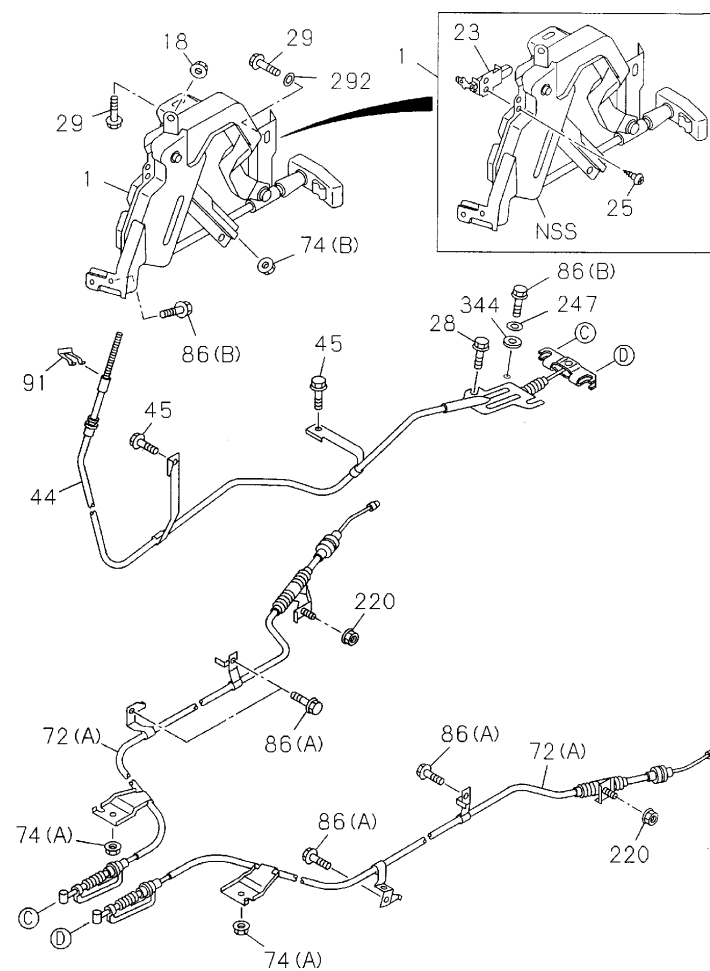



4-12 FRONT DRIVE SHAFT

KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)	KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)
	9-09180 162-0		RING; SNAP, AXLE SHAFT	0307-		1	GH SHIFT ON THE FLY<NR4> 01 105 (B) ID=57.9								
69	8-97188 174-1		SHAFT; AXLE, FRT INNER	0307-		1	G SHIFT ON THE FLY<NR4>								
84	8-94462 734-0		GASKET; PLUG, OIL FILLER	0307-		1	GH SHIFT ON THE FLY<NR4> 05 400 ID=20 OD=30								
95	8-97103 392-0		BEARING; AXLE SHAFT, FRT	0307-		1	G SHIFT ON THE FLY<NR4>								
132	8-97130 567-1		SLEEVE; RUBBER, HOSE	0307-		1	GH SHIFT ON THE FLY<NR4>								
137	8-97367 959-0		ACTUATOR; AXLE	0307-		1	GH SHIFT ON THE FLY<NR4>								
138	8-97134 857-1		GEAR; CLUTCH	0307-		1	GH SHIFT ON THE FLY<NR4>								
166	8-97236 435-0		BRACKET; CLIP	0307-0609		1	GH 4JH1-TC ENG(RDM) M/T MUA 5 SPEED 5G(RSP) (A)								
	8-98043 613-0		BRACKET; CLIP	0610-		1	GH 4JJ1-TCS ENG(LFB), M/T MUA 5 SPEED 5H(MWQ). (B)								
183	8-97250 343-1		PIPE; BREATHER	0307-0402		1	GH 4JH1-TC ENG(RDM) SHIFT ON THE FLY<NR4> I (B)								
	8-98007 998-0		PIPE; BREATHER	0610-		1	GH 4JJ1-TCS ENG(LFB) SHIFT ON THE FLY<NR4> (A)								
	8-97333 080-0		PIPE; BREATHER	0307-0609		1	GH 4JH1-TC ENG(RDM) SHIFT ON THE FLY<NR4> (A)								
	8-98007 999-0		PIPE; BREATHER	0610-		1	GH 4JJ1-TCS ENG(LFB) SHIFT ON THE FLY<NR4> (B)								
	8-97236 855-0		PIPE; BREATHER	0307-0609		1	GH 4JH1-TC ENG(RDM) EXC. SHIFT ON THE FLY<NR4> (C)								
	8-98008 000-0		PIPE; BREATHER	0610-		1	GH 4JJ1-TCS ENG(LFB) EXC. SHIFT ON THE FLY<NR4> (C)								
184	8-97250 344-1		HOSE; BREATHER	0307-		1	GH								
185	0-28650 616-0		BOLT; PIPE, BREATHER	0307-		1	GH								
	0-28650 620-0		BOLT; PIPE, BREATHER	0307-		1	GH								
186	8-97249 905-0		CLIP; HOSE, BREATHER	0307-		1	GH SHIFT ON THE FLY<NR4> ID 4.76X2								
214	8-97261 746-0		COVER; BREATHER	0307-		1	GH SHIFT ON THE FLY<NR4>								

4-36 POWER STEERING CONTROL; ENGINE SIDE

KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)	KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)
49	8-94175 036-0		RING; SNAP, I DLER	0307-0609		1	GH 4JH1-TC ENG(RDM) FORGED AIR VENTILATION C39),HEATER & DEFROSTER C42) POWER STEERING<N40>								
50	8-94251 052-0		BEARING; iDLER	0307-0609		1	GH 4JH1-TC ENG(RDM) FORGED AIR VENTILATION C39).HEATER & DEFROSTER C42) POWER STEERING<N40>								
51	8-97092 813-0		NUT; I DLER	0307-0609		1	GH 4JH1-TC ENG(RDM) FORGED AIR VENTILATION C39).HEATER & DEFROSTER C42) POWER STEERING<N40>								
58	8-97941 329-0		SLIDER; BELT ADJ, P/S OIL PUMP	0307-0609		1	GH 4JH1-TC ENG(RDM) POWER STEERING<N40>								
66	0-28050 812-0		BOLT; PULLEY	0307-0609		3	GH 4JH1-TC ENG(RDM) POWER STEERING<N40> 02.343 M8X12 FLANGE								

6-14 DASH PANEL AND FENDER SKIRT

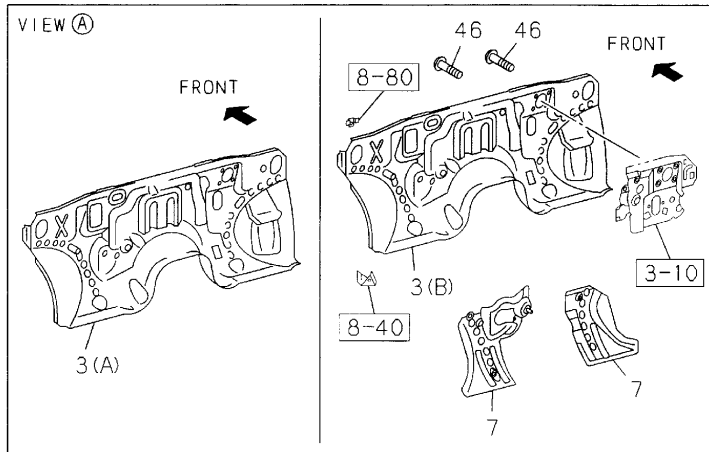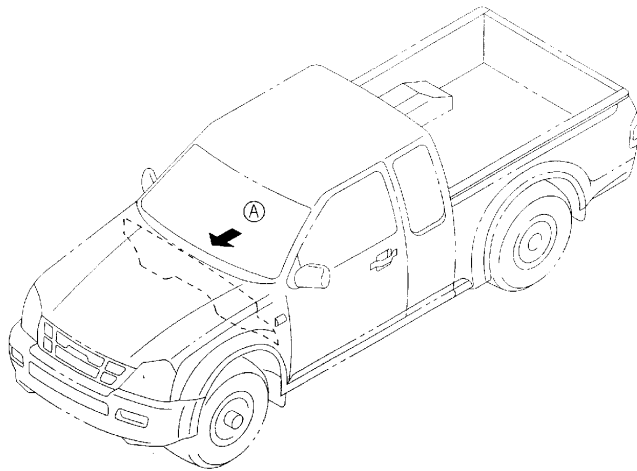


KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS
							G = 4x4 REGULAR CAB (TFSS5S*) H = 4x4 CREW CAB (TFSS5W*)
3	8-97365 196-1		PANEL; SUB, DASH LWR	0307-0403		1	GH (A)
	8-98029 269-0	C	PANEL; SUB, DASH LWR	0510-0609		1	GH 4JH1-TC ENG(RDM) DRIVER SIDE FOOT REST<7NU> (A)
	8-98061 148-0		PANEL; SUB, DASH LWR	0610-		1	GH 4JJ1-TCS ENG(LFB). DRIVER SIDE FOOT REST<7NU> (A)

6-70 FLOOR PANEL

KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)	KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFS5S*) H = 4x4 CREW CAB (TFS5W*)
1	8-97357 507-0 8-97357 509-0		PANEL; FLOOR PANEL; FLOOR	0307-0307-		1 1	G H								
25	8-97235 751-4	C	REINFORCEMENT; FRAME FLOOR, FRT	0307-0404		1	GH	FRONT CONSOLE<D55>							
	8-97380 608-0		REINFORCEMENT; FRAME FLOOR, FRT	0405-		1	GH	FRONT CONSOLE<D55>							
	8-97235 752-5	C	REINFORCEMENT; FRAME FLOOR, FRT	0307-0404		1	GH	EXC. FRONT CONSOLE<D55>							
	8-97380 609-0		REINFORCEMENT; FRAME FLOOR, FRT	0405-		1	GH	EXC. FRONT CONSOLE<D55>							
29	8-97349 433-0		GUSSET	0307-		2	GH								
45	8-97235 811-1		REINFORCEMENT; TUNNEL FRT	0307-	L	1	GH								
	8-97235 810-1		REINFORCEMENT; TUNNEL FRT	0307-	R	1	GH								
56	8-97236 363-2		BRACKET; JACK	0307-		1	G								
70	8-97235 546-4 8-97235 542-4 8-93333 636-3 8-93333 637-3		PANEL; ROCKER INNER PANEL; ROCKER INNER PANEL; ROCKER INNER PANEL; ROCKER INNER	0307-0307-0307-0307-	L R L R	1 1 1 1	G G H H								
71	8-97235 861-3 8-97235 857-4		BRACKET; CAB MTG, CENTER BRACKET; CAB MTG, CENTER	0307-0307-	L R	1 1	GH GH								
72	8-97235 871-4 8-97235 858-4		BRACKET; CAB MTG, RR BRACKET; CAB MTG, RR	0307-0307-	L R	1 1	GH H								
206	8-97324 176-5		PANEL; FLOOR BOARD RR	0307-		1	H								
366	8-93333 631-3		BAR ASM; FRT SEAT MTG	0307-		1	H								
385	8-97326 676-2		BRACKET	0307-		1	GH (A)								
518	8-98048 087-0		SILL; FLOOR	0610-		1	GH	FRONT SEAT BUCKET TYPE<A50> EXC. SHIPPING EQUIPMENT SPECIAL VAR1<VK5> (A)							
	8-97235 819-5		SILL; FLOOR	0307-		1	GH (B)								
519	8-97326 395-2		BRACKET; CONTROLLER 4WD	0307-0609		1	GH								
520	8-97236 152-2		BRACKET; FUEL LID OPENER	0307-		1	GH								

7-42 ASH TRAY

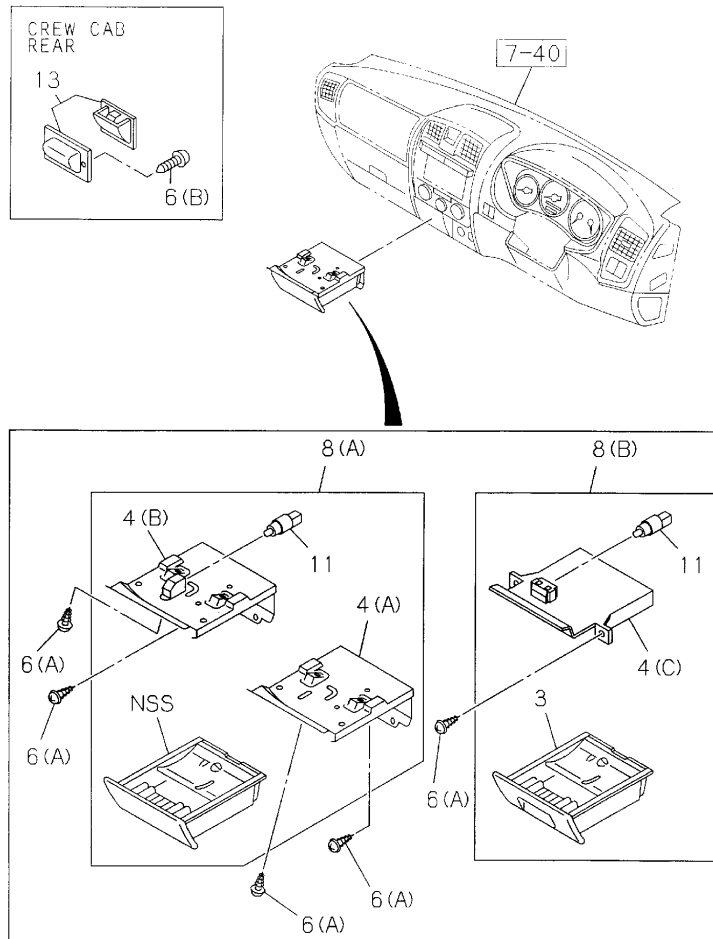

KEY NO	PART NUMBER	I T C	DESCRIPTION	APPLIED DATE	L R	Q T Y	MODEL / REMARKS G = 4x4 REGULAR CAB (TFSS5S*) H = 4x4 CREW CAB (TFSS5W*)
3	8-97407 836-0		CASE ASM; ASH TRAY INNER	0610-		1	GH GRADE LT/LS(RBD) EXC. INTERIOR SILVER BEZEL<BY9>. AUSTRALIA EQUIPMENT(B13) DARK GRAY
4	8-98044 027-0		CASE ASM; ASH TRAY OUTER	0610-		1	GH GRADE DX(RBA), GRADE LX RBB) EXC. INTERIOR SILVER BEZEL<BY9>
6	9-09829 323-1 9-07037 416-0		SCREW; ASH TRAY SCREW; ASH TRAY	0307- 0307-		3 4	GH 16.085 (A) M5X16 TAPPING H 16.850 (B) M4X16 TAPPING OVAL-HEAD
8	8-97403 296-0		TRAY ASM; ASH	0610-		1	GH GRADE DX(RBA) EXC. INTERIOR SILVER BEZEL<BY9>
11	8-97308 651-0		BULB; ASH TRAY	0307-		1	GH GRADE LX(RBB). GRADE LT LS(RBD) EXC. AUSTRALIA EQUIPMENT(B13)
13	8-97393 945-1 8-97403 923-1		TRAY ASM; ASH, RR TRAY ASM; ASH, RR	0307-0609 0610-		2 2	H DARK GRAY H DARK GRAY

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
8-97321 158-1	332	8-97321 370-0	344	8-97327 613-0	166	8-97330 923-0	213	8-97332 642-0	202	8-97333 303-0	243
8-97321 158-1	351	8-97321 371-0	344	8-97327 614-0	166	8-97330 935-0	74	8-97332 646-0	268	8-97333 304-0	230
8-97321 159-0	332	8-97321 478-0	347	8-97327 713-0	308	8-97330 936-0	74	8-97332 649-0	286	8-97333 304-0	243
8-97321 159-0	351	8-97321 479-0	347	8-97327 881-0	322	8-97330 937-0	74	8-97332 650-0	286	8-97333 317-0	354
8-97321 160-0	332	8-97321 480-0	347	8-97327 938-2	341	8-97330 948-0	74	8-97332 652-0	285	8-97333 319-0	354
8-97321 160-0	351	8-97321 645-1	261	8-97328 060-0	208	8-97331 429-1	372	8-97332 653-0	285	8-97333 320-0	354
8-97321 161-0	352	8-97321 870-0	322	8-97328 113-0	359	8-97331 457-0	216	8-97332 656-0	285	8-97333 321-0	354
8-97321 163-0	352	8-97322 592-0	39	8-97328 187-0	58	8-97331 458-0	216	8-97332 657-0	285	8-97333 322-0	348
8-97321 165-0	332	8-97323 177-0	130	8-97328 229-0	132	8-97331 459-0	266	8-97332 658-0	286	8-97333 324-0	348
8-97321 165-0	344	8-97323 283-1	203	8-97328 453-0	285	8-97331 501-1	286	8-97332 662-0	286	8-97333 325-0	352
8-97321 165-0	345	8-97323 297-0	176	8-97328 455-1	37	8-97331 592-0	218	8-97332 665-0	292	8-97333 326-0	344
8-97321 165-0	349	8-97323 417-2	307	8-97328 493-0	131	8-97331 593-1	218	8-97332 666-0	286	8-97333 327-0	344
8-97321 165-0	352	8-97324 158-3	13	8-97328 606-0	131	8-97331 594-1	218	8-97332 751-0	286	8-97333 328-0	344
8-97321 166-0	333	8-97324 174-1	292	8-97328 613-0	325	8-97331 594-D	218	8-97332 752-0	286	8-97333 329-0	345
8-97321 166-0	344	8-97324 176-5	252	8-97328 614-0	81	8-97331 609-0	258	8-97332 753-0	286	8-97333 330-0	344
8-97321 166-0	351	8-97324 189-1	225	8-97328 642-6	16	8-97331 610-0	258	8-97332 755-0	285	8-97333 331-0	344
8-97321 263-0	349	8-97324 190-1	225	8-97328 644-6	16	8-97331 613-0	216	8-97332 766-0	285	8-97333 332-0	344
8-97321 264-0	349	8-97324 374-1	96	8-97328 647-0	16	8-97331 631-1	23	8-97332 767-0	285	8-97333 348-1	82
8-97321 265-0	349	8-97324 375-2	96	8-97328 648-0	180	8-97331 632-1	23	8-97332 768-0	285	8-97333 352-2	82
8-97321 266-1	349	8-97324 402-1	68	8-97328 828-1	23	8-97331 770-0	77	8-97332 769-0	286	8-97333 353-2	82
8-97321 267-0	349	8-97324 511-0	230	8-97328 838-0	286	8-97331 830-1	237	8-97332 770-0	286	8-97333 354-0	84
8-97321 268-0	349	8-97324 511-0	244	8-97328 866-1	7	8-97331 832-1	237	8-97332 771-0	286	8-97333 394-0	296
8-97321 269-0	349	8-97324 512-3	374	8-97328 867-1	7	8-97331 833-0	238	8-97332 772-0	285	8-97333 414-0	295
8-97321 270-0	349	8-97324 563-0	256	8-97328 868-1	7	8-97331 847-0	238	8-97332 773-0	285	8-97333 415-0	295
8-97321 273-0	349	8-97324 653-1	59	8-97329 009-0	22	8-97331 848-1	216	8-97332 773-0	287	8-97333 416-0	295
8-97321 274-0	344	8-97326 045-2	7	8-97329 011-0	22	8-97331 850-0	213	8-97332 774-0	286	8-97333 417-0	296
8-97321 274-0	349	8-97326 218-0	124	8-97329 014-0	48	8-97331 851-1	213	8-97332 784-0	288	8-97333 420-0	296
8-97321 275-0	349	8-97326 371-0	368	8-97329 016-0	48	8-97331 852-1	213	8-97332 811-0	288	8-97333 421-0	300
8-97321 276-0	344	8-97326 395-2	252	8-97329 092-0	322	8-97331 862-1	213	8-97332 815-0	288	8-97333 424-0	301
8-97321 276-0	349	8-97326 490-0	139	8-97329 129-1	7	8-97331 863-1	213	8-97332 828-0	288	8-97333 425-0	301
8-97321 336-0	344	8-97326 537-1	217	8-97329 245-0	97	8-97331 945-0	131	8-97332 834-1	288	8-97333 426-0	300
8-97321 337-0	344	8-97326 676-2	252	8-97329 333-0	131	8-97332 276-0	347	8-97332 856-0	288	8-97333 427-0	300
8-97321 338-0	344	8-97326 739-3	47	8-97329 621-0	12	8-97332 438-0	295	8-97332 862-0	288	8-97333 428-0	300
8-97321 340-0	344	8-97326 994-0	90	8-97329 628-0	126	8-97332 439-0	295	8-97332 874-0	288	8-97333 429-0	303
8-97321 341-0	344	8-97327 156-0	135	8-97329 641-0	325	8-97332 446-0	296	8-97332 877-0	288	8-97333 440-0	303
8-97321 342-0	344	8-97327 157-1	135	8-97329 645-0	104	8-97332 447-0	296	8-97332 881-0	288	8-97333 441-0	303
8-97321 343-0	344	8-97327 158-1	135	8-97329 648-1	58	8-97332 448-0	295	8-97332 982-0	96	8-97333 973-0	133
8-97321 344-0	344	8-97327 266-0	205	8-97329 650-1	13	8-97332 468-0	164	8-97333 079-0	148	8-97333 983-0	296
8-97321 345-0	344	8-97327 317-0	323	8-97329 760-0	217	8-97332 598-0	286	8-97333 080-0	172	8-97334 385-0	213
8-97321 351-0	341	8-97327 326-0	308	8-97329 761-0	217	8-97332 599-0	286	8-97333 094-0	100	8-97334 393-0	307
8-97321 352-0	341	8-97327 407-0	368	8-97330 408-0	96	8-97332 605-0	285	8-97333 108-0	203	8-97334 438-1	52
8-97321 353-0	341	8-97327 526-0	322	8-97330 454-0	152	8-97332 605-0	286	8-97333 142-0	220	8-97349 413-0	300
8-97321 366-0	345	8-97327 532-0	308	8-97330 455-0	152	8-97332 607-0	285	8-97333 143-2	220	8-97349 416-1	5
8-97321 368-0	344	8-97327 611-0	166	8-97330 511-0	134	8-97332 630-0	284	8-97333 282-2	217	8-97349 432-0	255
8-97321 369-0	344	8-97327 612-0	166	8-97330 876-0	58	8-97332 630-0	286	8-97333 303-0	230	8-97349 433-0	252