

ELECTRICAL EQUIPMENT AND WIRING DIAGRAMS

VOLVO **FM9/FM12/FH12/ FH16/NH12**




- Control modules
- Alternator and voltage regulator
- Additional electrical equipment
- Wiring and fuses

**MOTO
RIST**


Contents

Example of wiring diagram	2
Component wiring diagram index	5
Component wiring diagrams	8
Illustrations index	90
Illustrations	91
Fuses	171
Relays	173
Wiring harness illustration index	175
Earth connections	178
List of earth connections	180
List of connectors	181
List of components	189
Abbreviations	195
Cable colour code	197
Feedback	


Example of wiring diagram

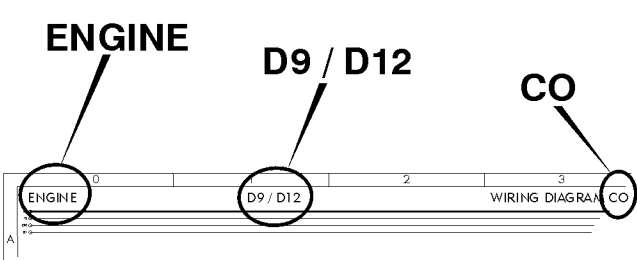


Component wiring diagram title, variant/subtitle and symbol.

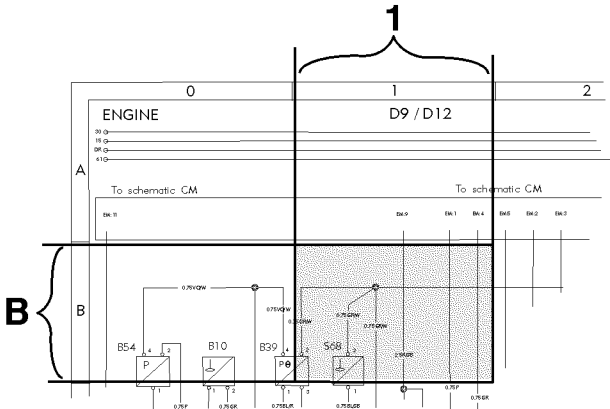


Coordinates (B 1).

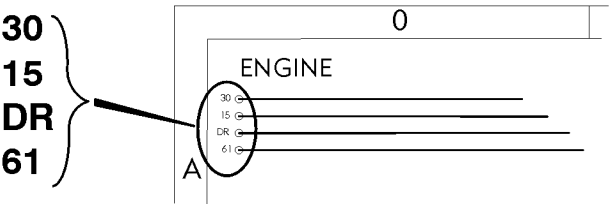


30 Voltage battery, kl.30.
15 Voltage with starter key in drive position, kl.15.
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.
61 Voltage when alternator charges, kl.61.

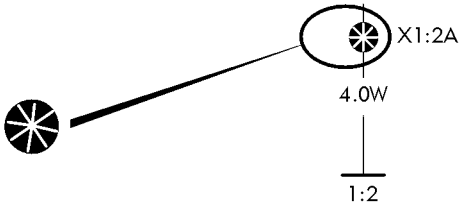

Splice.

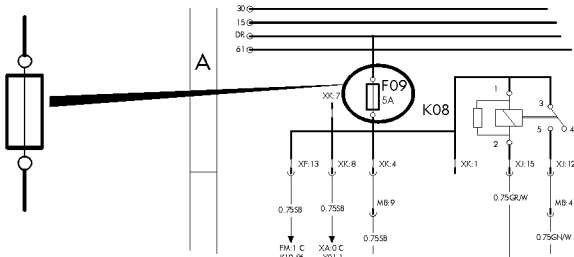


Fuse.


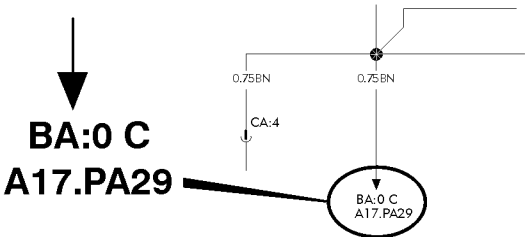



Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.






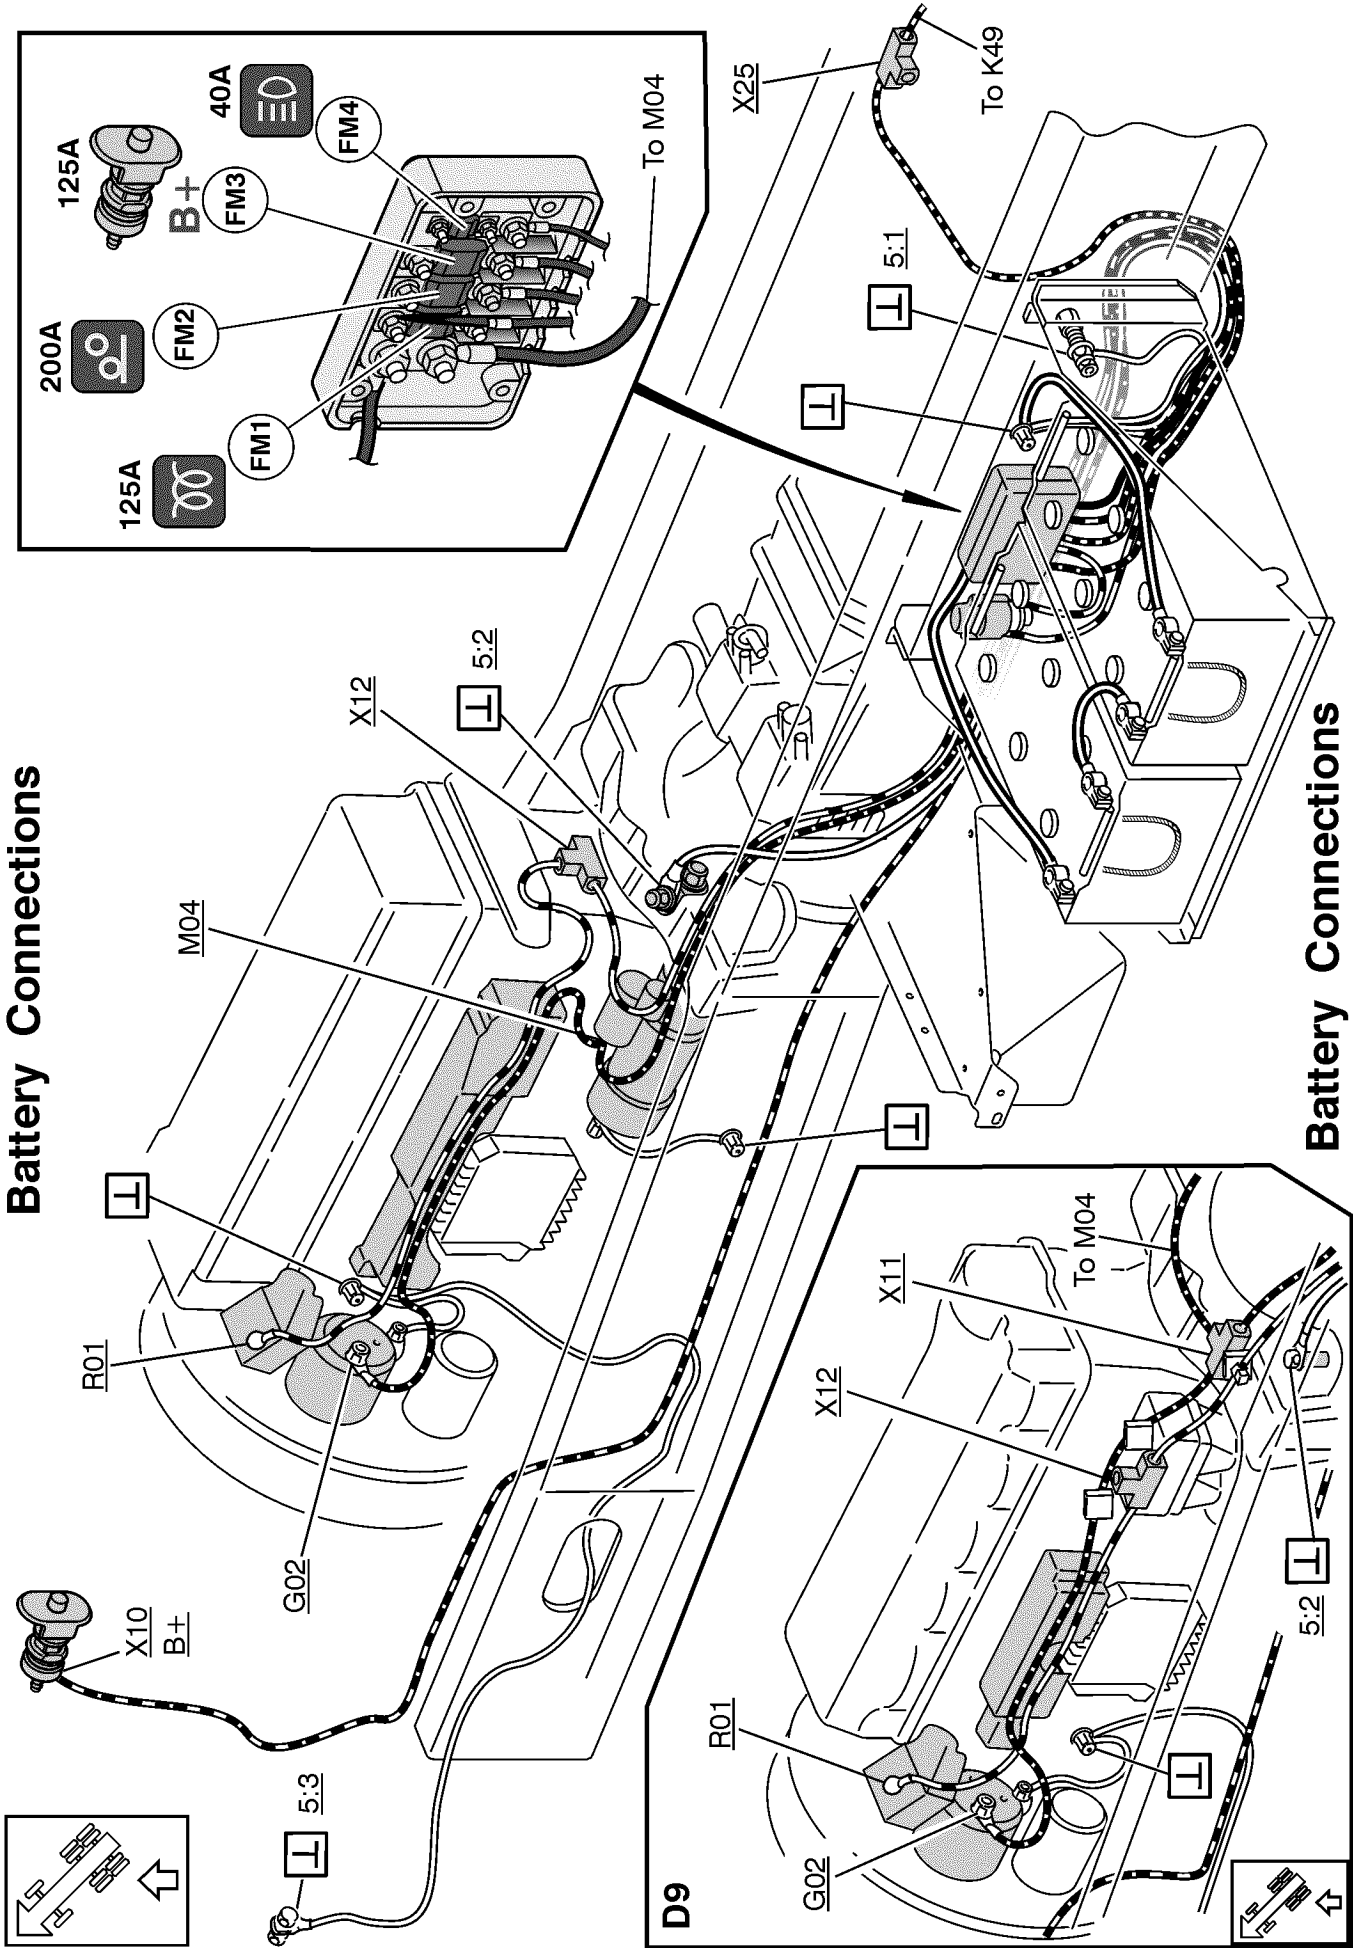


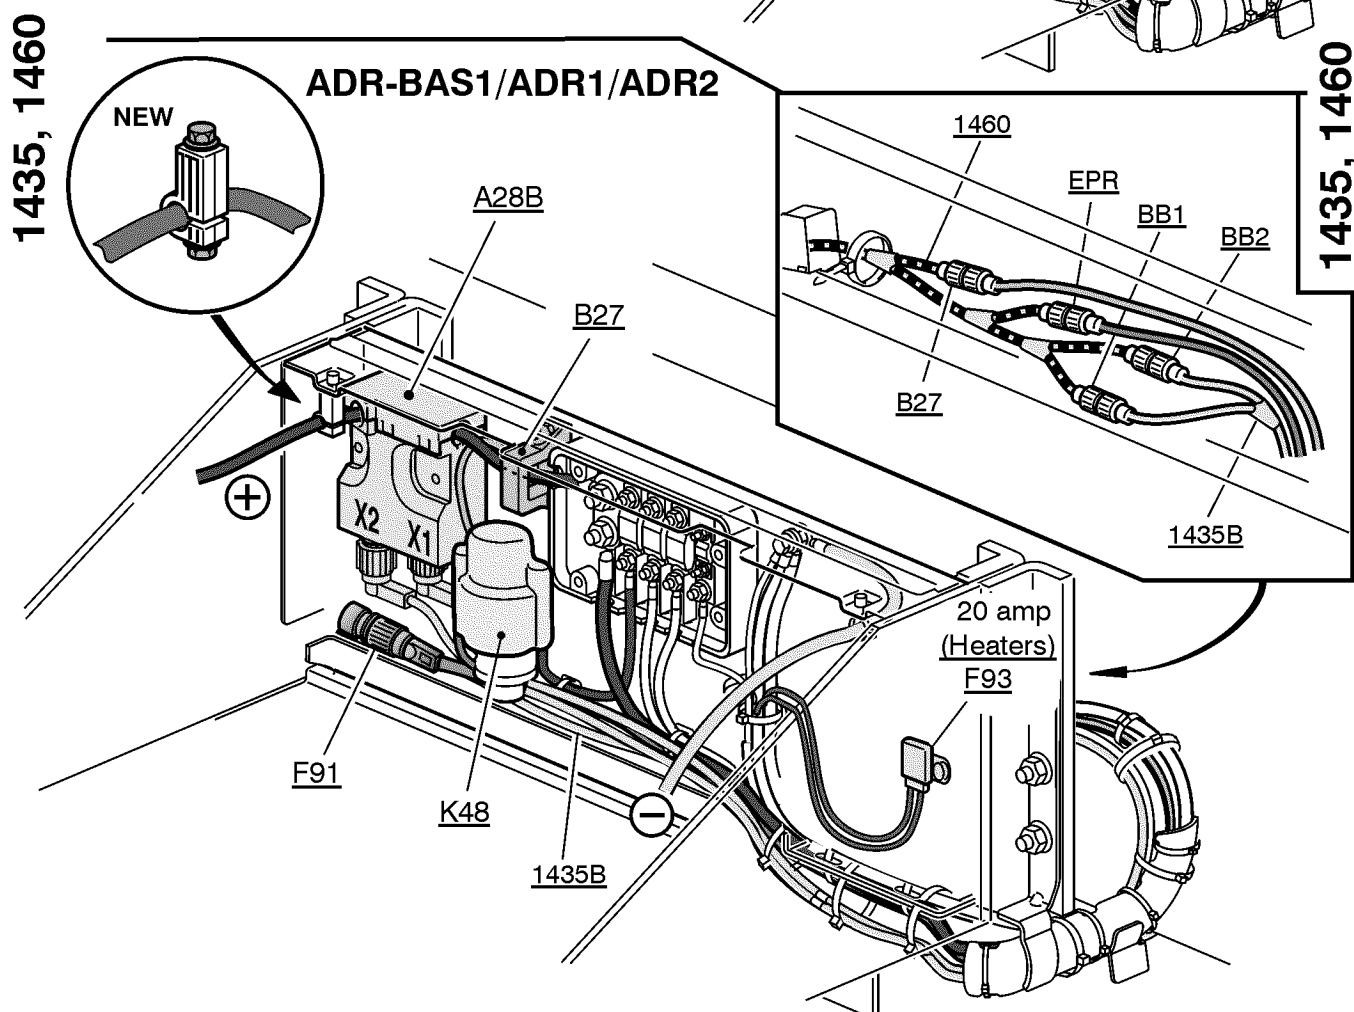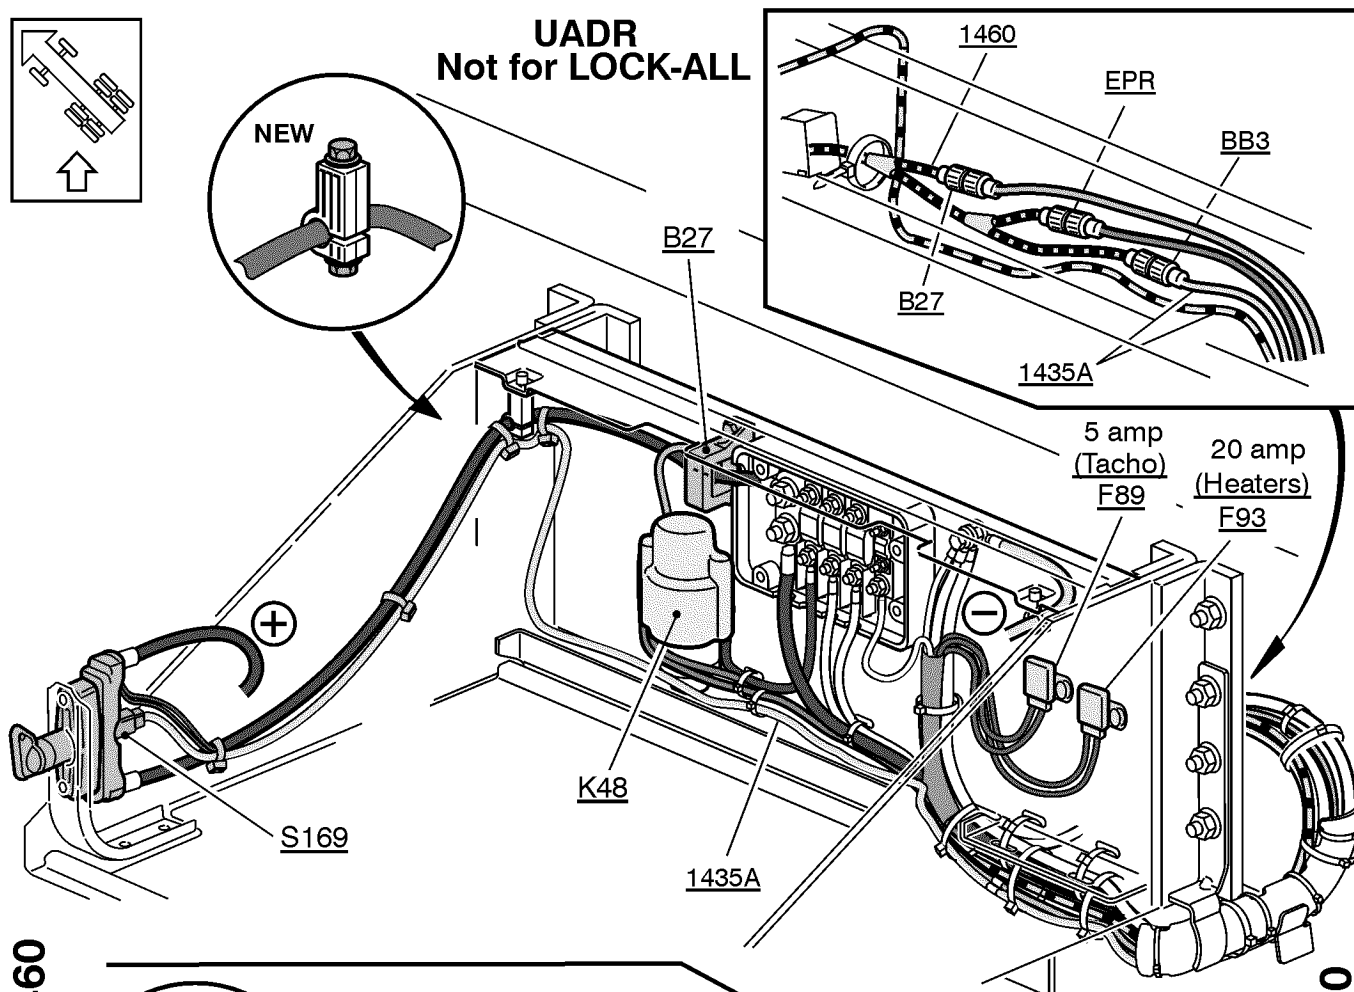

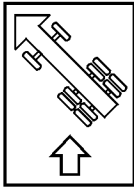



MAINSWI, LOCK-ALL

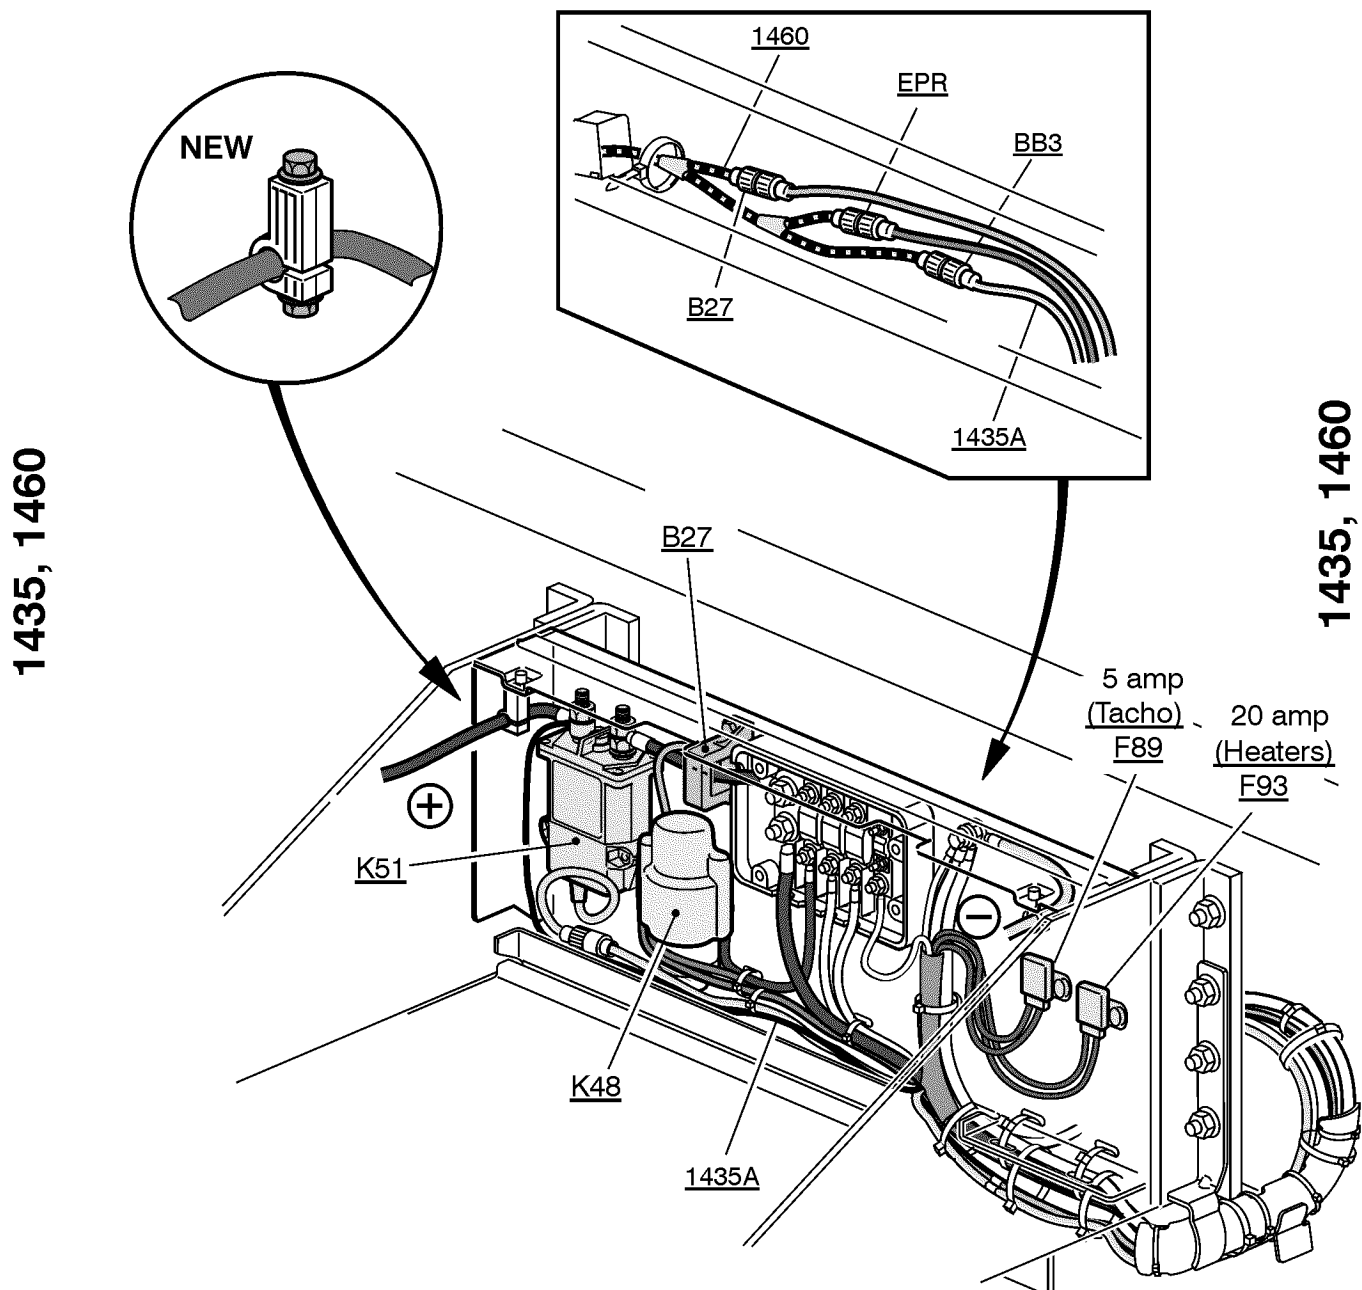

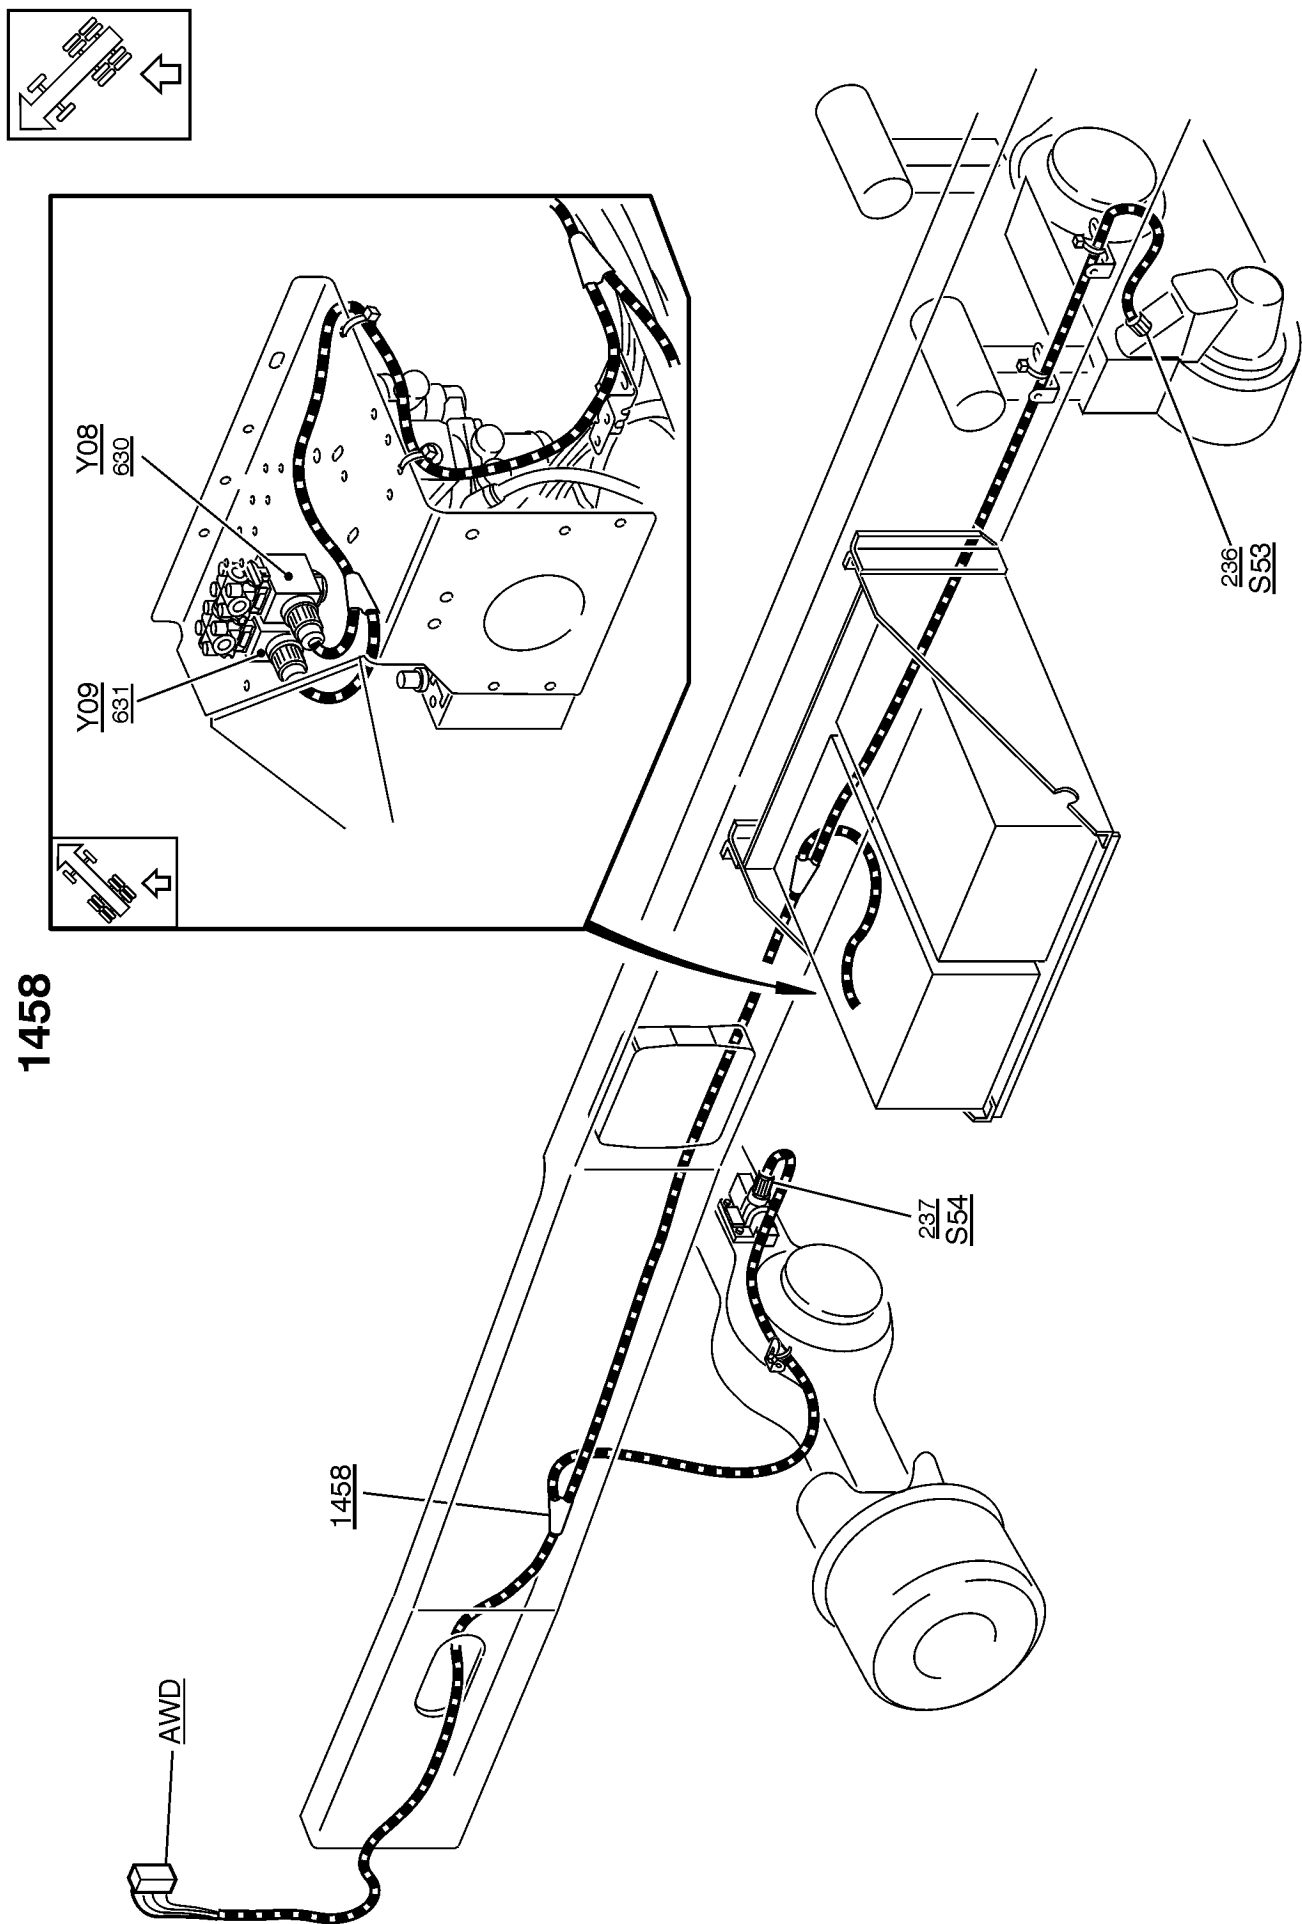


1458

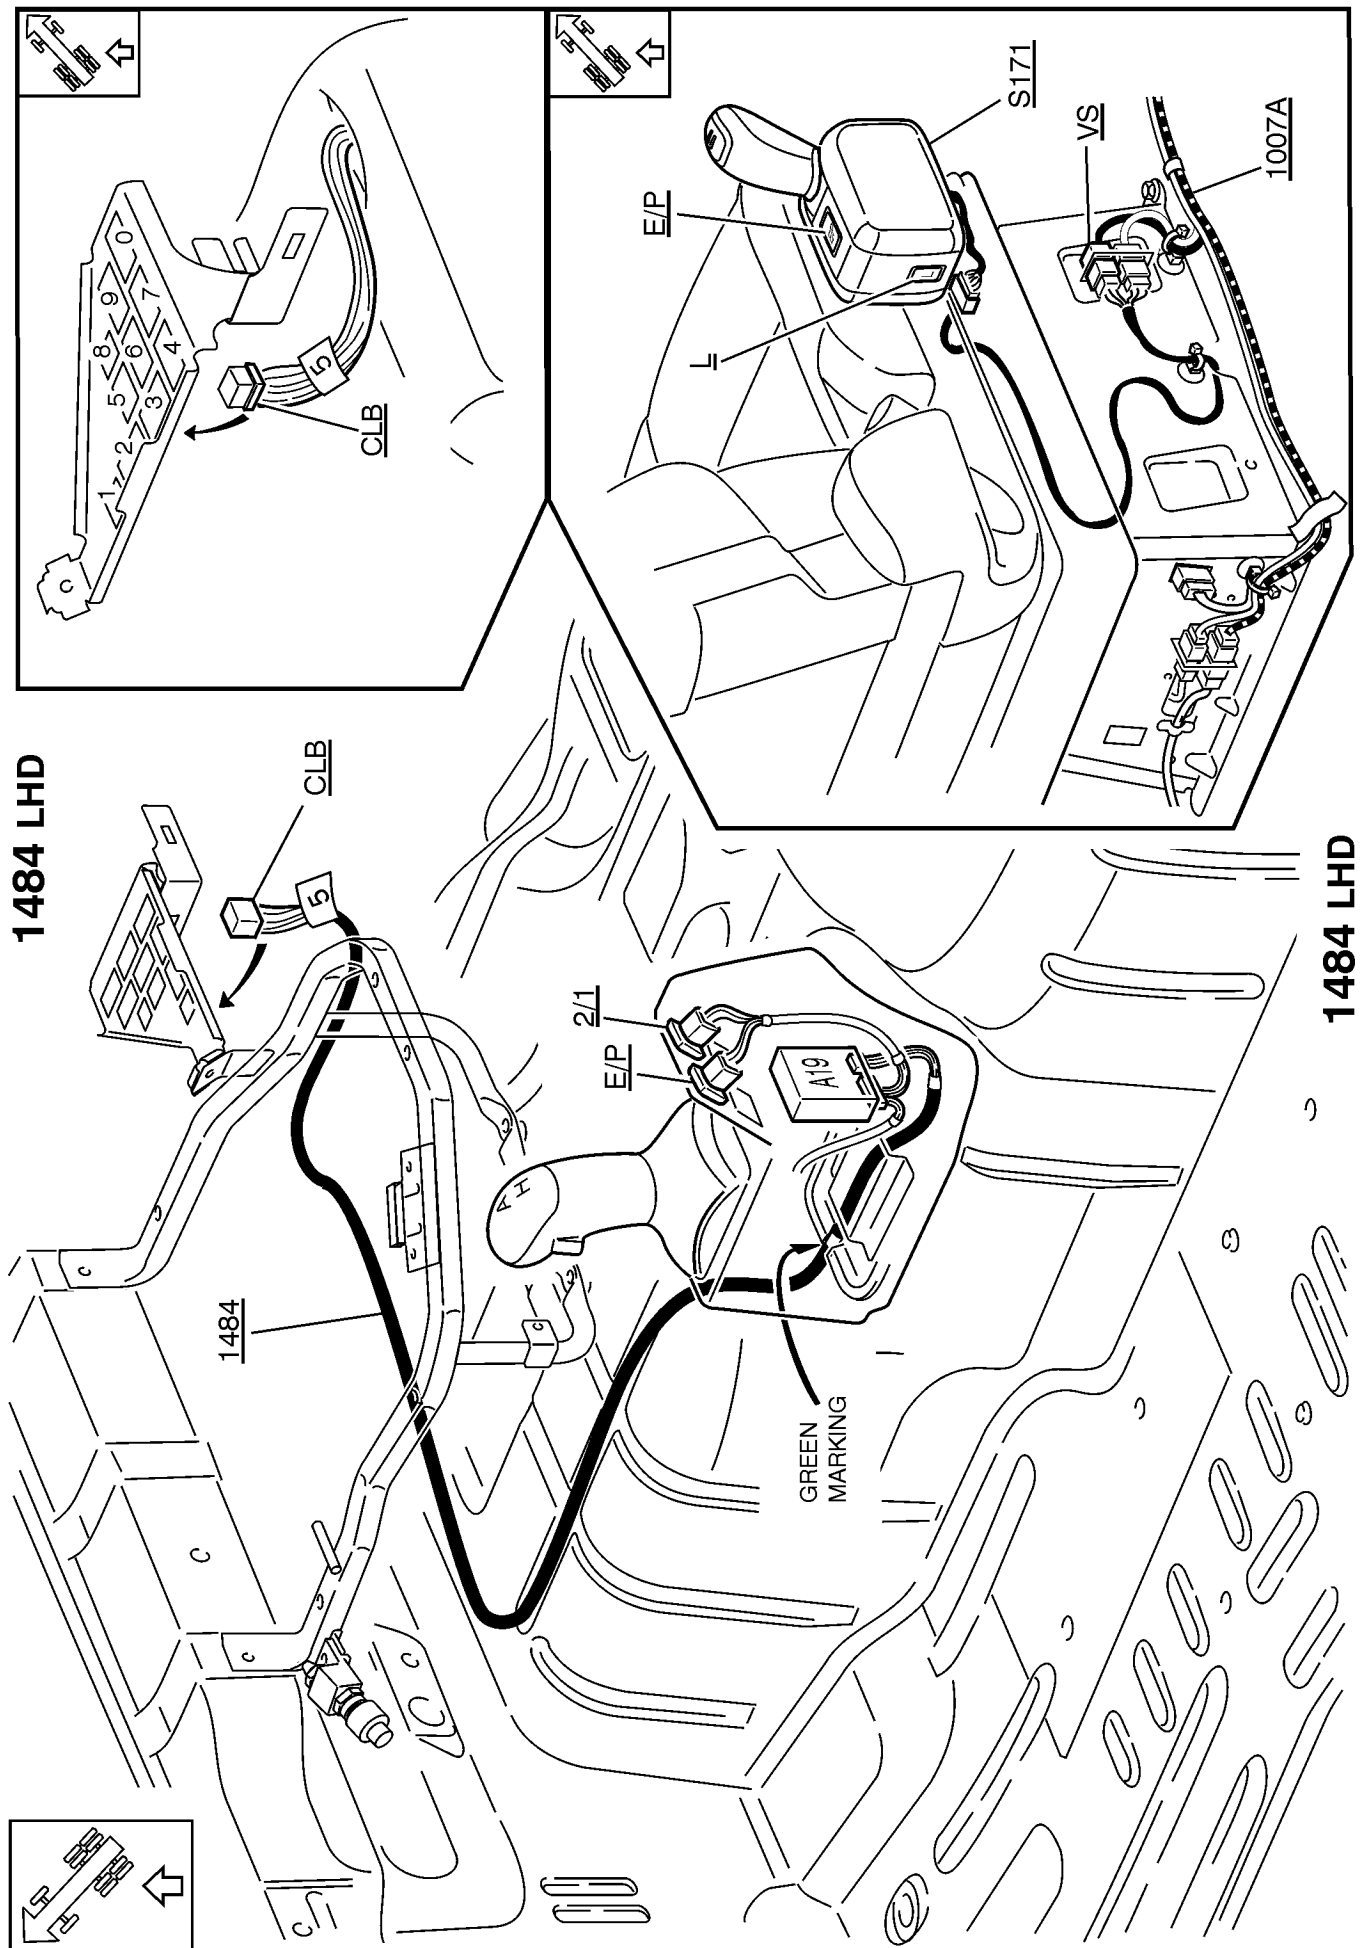


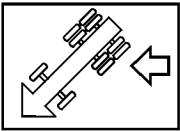

1493 LHD, RSTS-HY

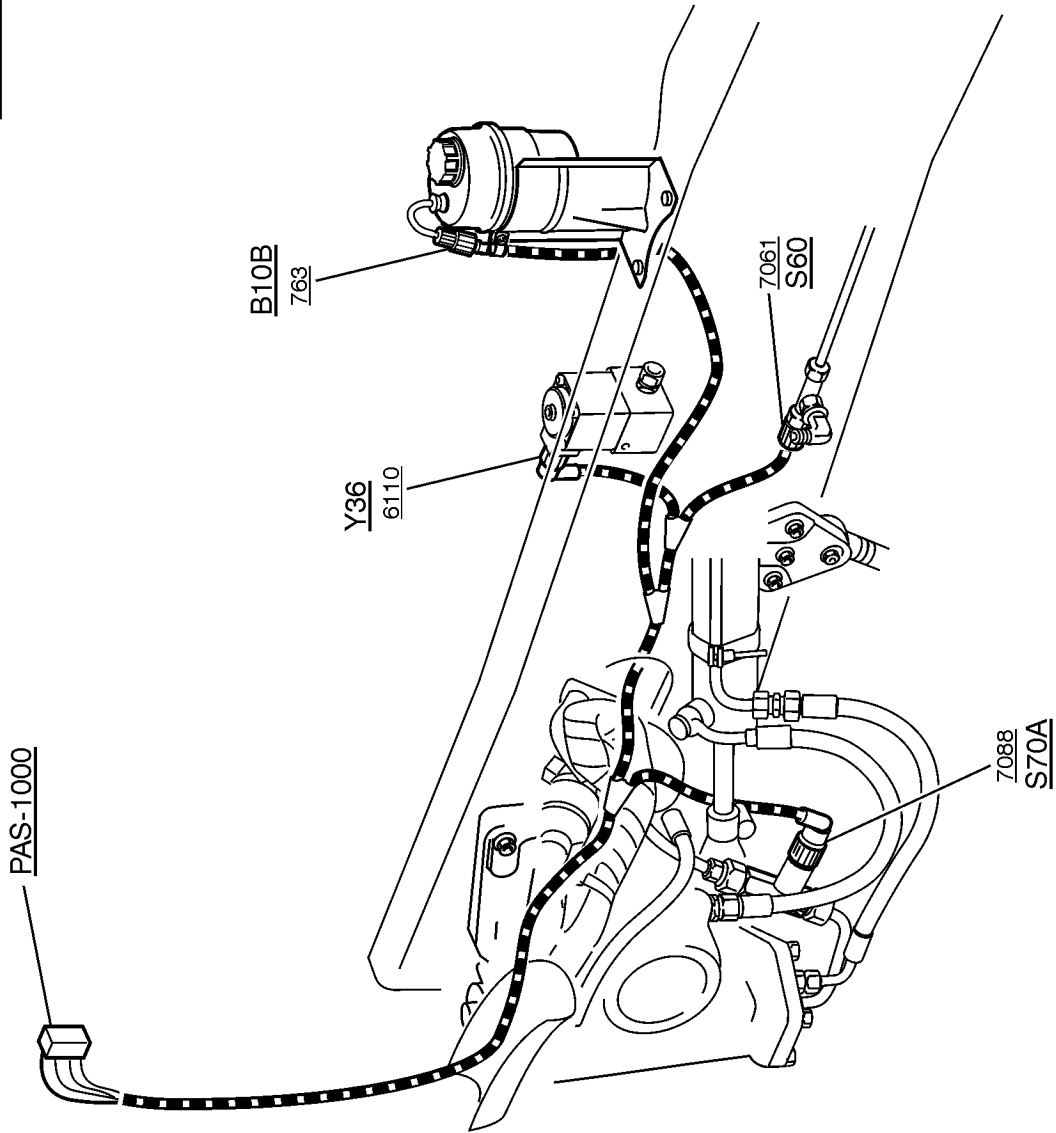


1493 LHD, RSTS-HY

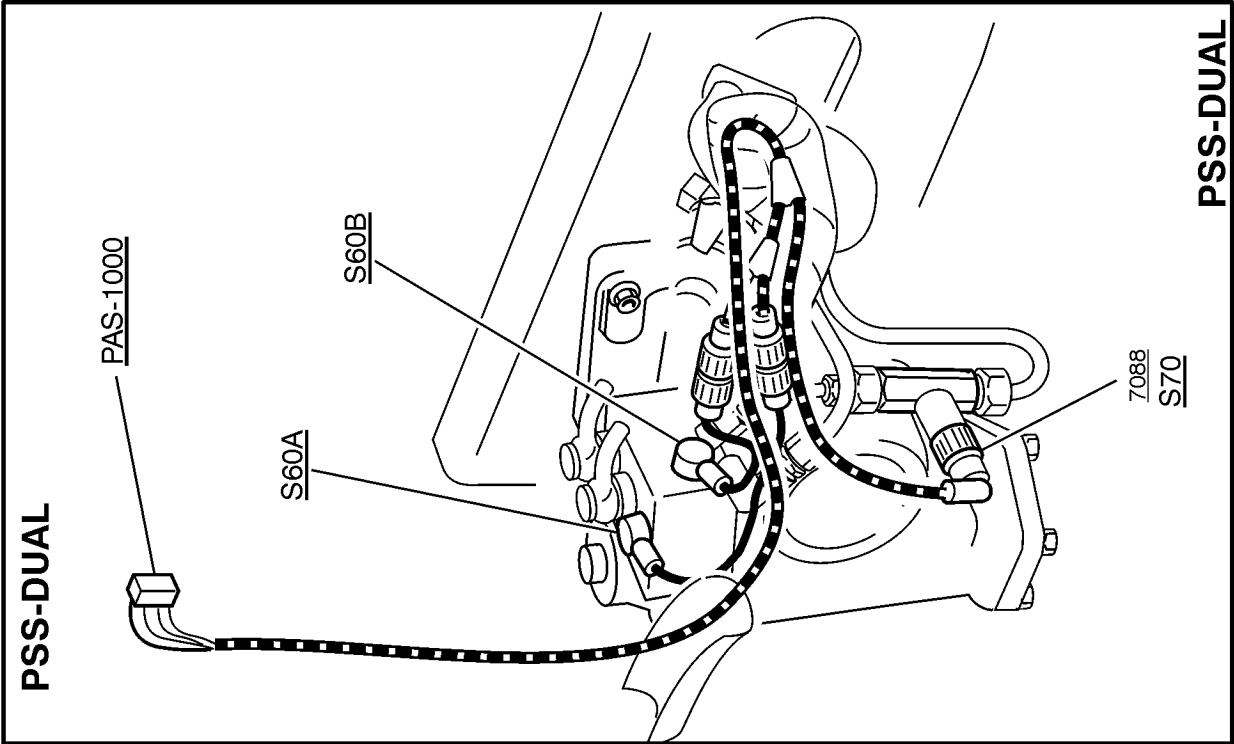


PSS-DUAL

1493 A/B, RSTS-EHY

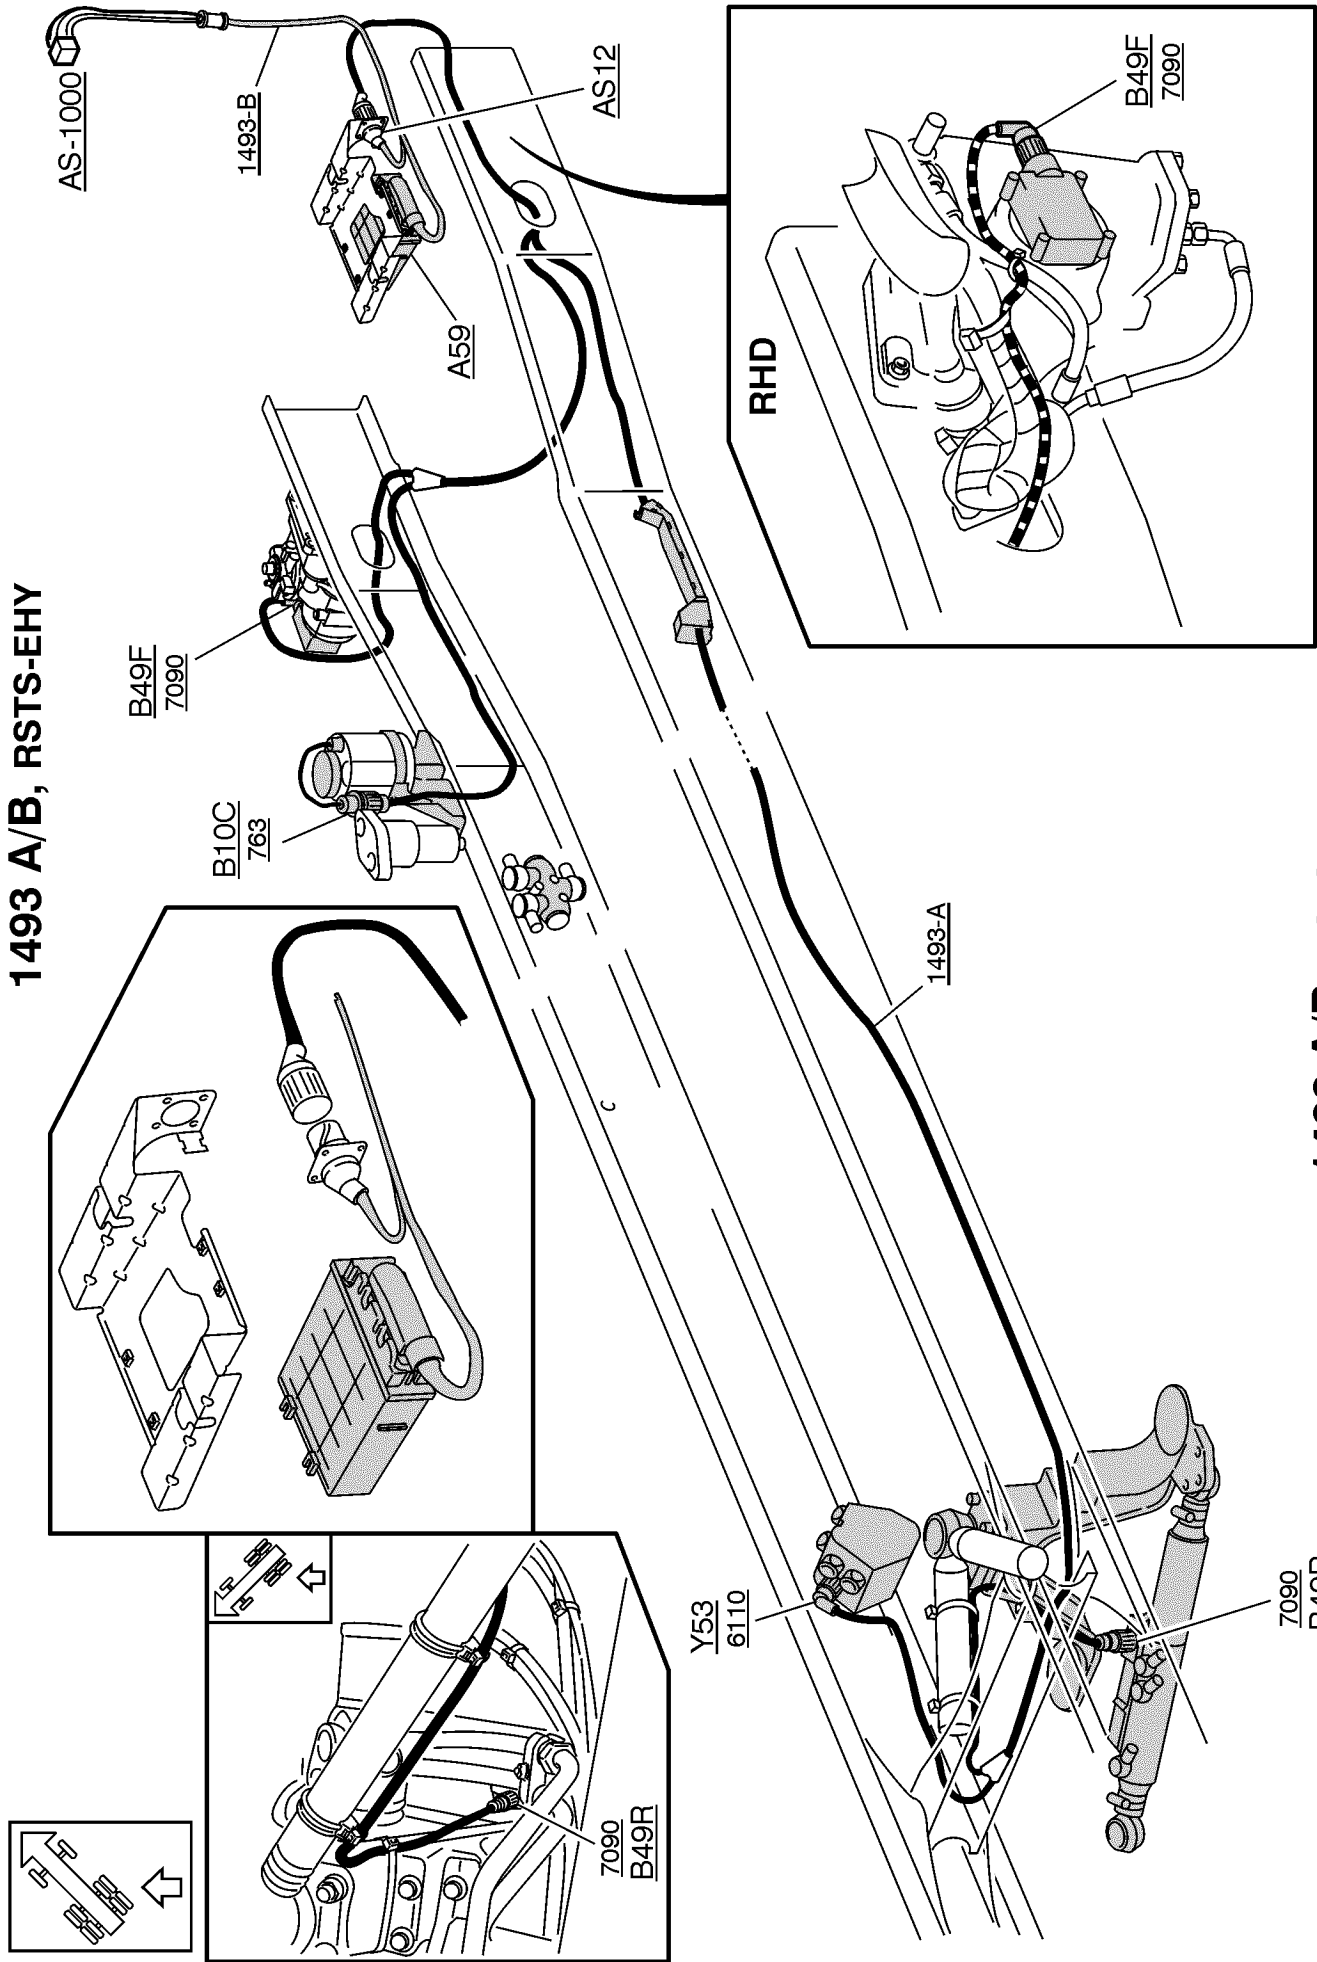

1493 A/B, RSTS-EHY

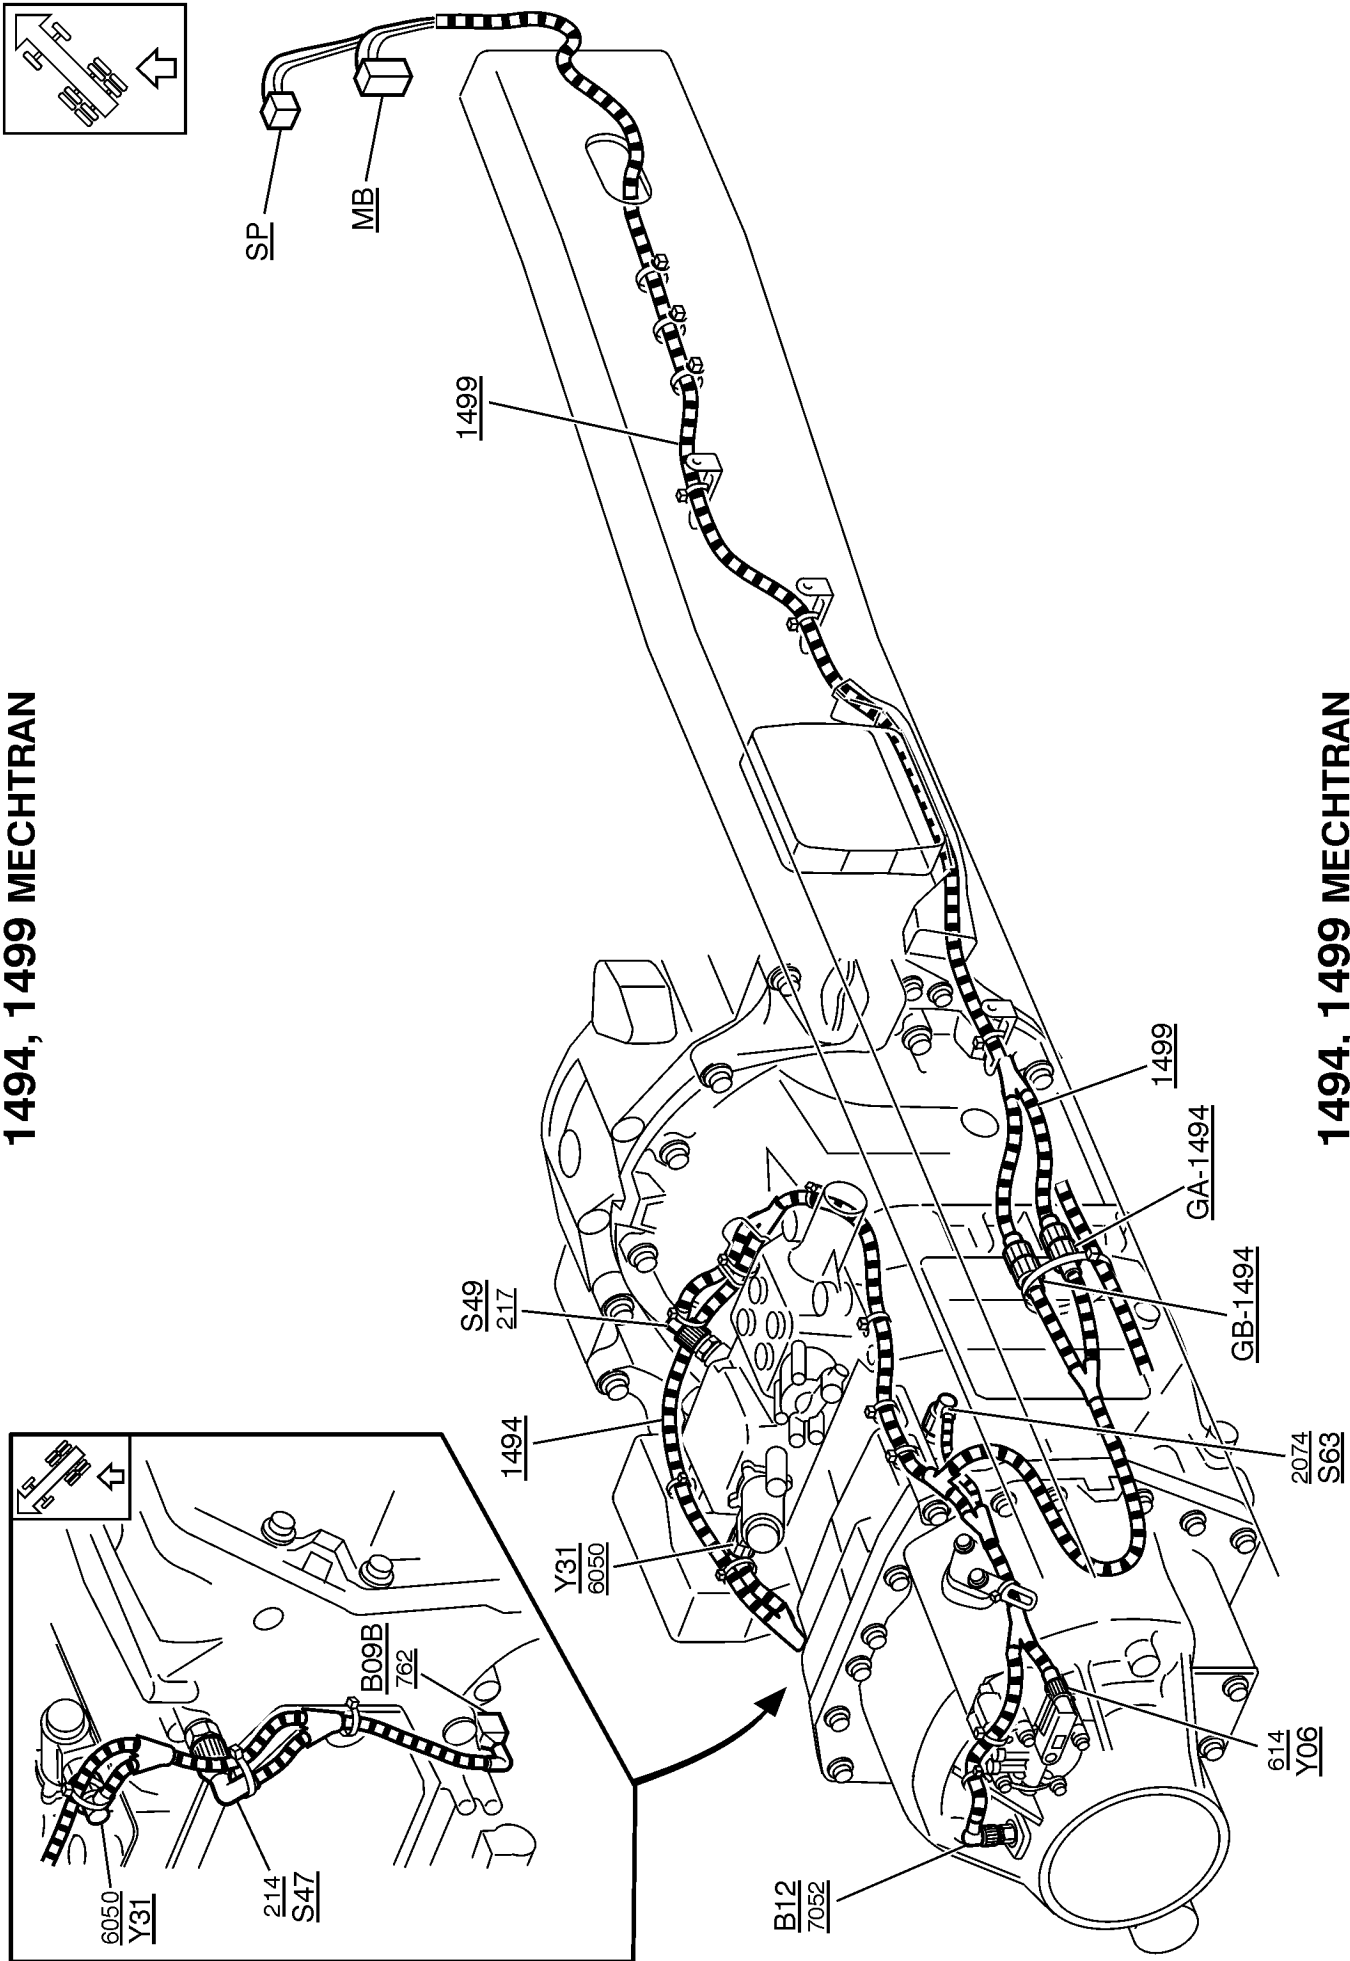

1494, 1499 MECHTRAN

1494, 1499 MECHTRAN

