



Contents

Example of wiring diagram	1
Component wiring diagram index	5
Component wiring diagrams	8
Illustrations index	107
Illustrations	108
Fuses	142
Relays	145
Wiring harness Layout	147
Ground connections	149
List of connectors	152
List of wiring numbers	206
List of components	221
Abbreviations	227
Cable colour code	228
Feedback	229


Component wiring diagram index

AB	Power supply distribution	“ ”, page 8
ABE	Fuse box and power supply	“ ”, page 9
AB1E	400V MP box	“ ”, page 10
AB2E	600V MP box	“ ”, page 11
AB3E	Traction voltage junction box	“ ”, page 12
AB4E	Traction voltage junction box 3.	“ ”, page 13
AF	Power supply distribution direct battery	“ ”, page 14
AG	Accessories power supply	“ ”, page 15
AH	Ignition power	“ ”, page 16
AI	Ignition power	“ ”, page 17
AJ	Ignition power	“ ”, page 18
AK	Main power distribution.	“ ”, page 19
AL	Power distribution main	“ ”, page 20
AN	Motor running	“ ”, page 21
AOE	Energy storage system.	“ ”, page 22
APE	Energy storage system.	“ ”, page 23
AQE	Energy storage control module	“ ”, page 24
AR1E	Hazardous voltage interlock loop.	“ ”, page 25
AR2E	HVIL loop on MPB box	“ ”, page 26
ASE	Combined charging system control module	“ ”, page 27
ATE	Voltage converter 600VDC/24VDC/12VDC	“ ”, page 28
BA	Control unit VECU.	“ ”, page 29
BA1	Control unit VECU.	“ ”, page 30
BK	Instrument cluster	“ ”, page 31
BL	DPF switch split & cab acquisition	“ ”, page 32
BM	Tachograph	“ ”, page 33
BT	Fleet management connector & gateway	“ ”, page 34
BV2	Telematics gateway 2 (TGW2).	“ ”, page 35
BW	DACU-LPOS-FLS.	“ ”, page 36
BXE	Cbox.	“ ”, page 37
BYE	Hybrid powertrain control unit	“ ”, page 38
BZ1E	Electromobility vehicle control module	“ ”, page 39
BZ2E	Electromobility vehicle control module	“ ”, page 40
DEE	Powertrain control module	“ ”, page 41
DFE	Gearbox.	“ ”, page 42
DRE	Power take off	“ ”, page 43
DU	Differential lock	“ ”, page 44
EM1	Electronic brake system ecu	“ ”, page 45

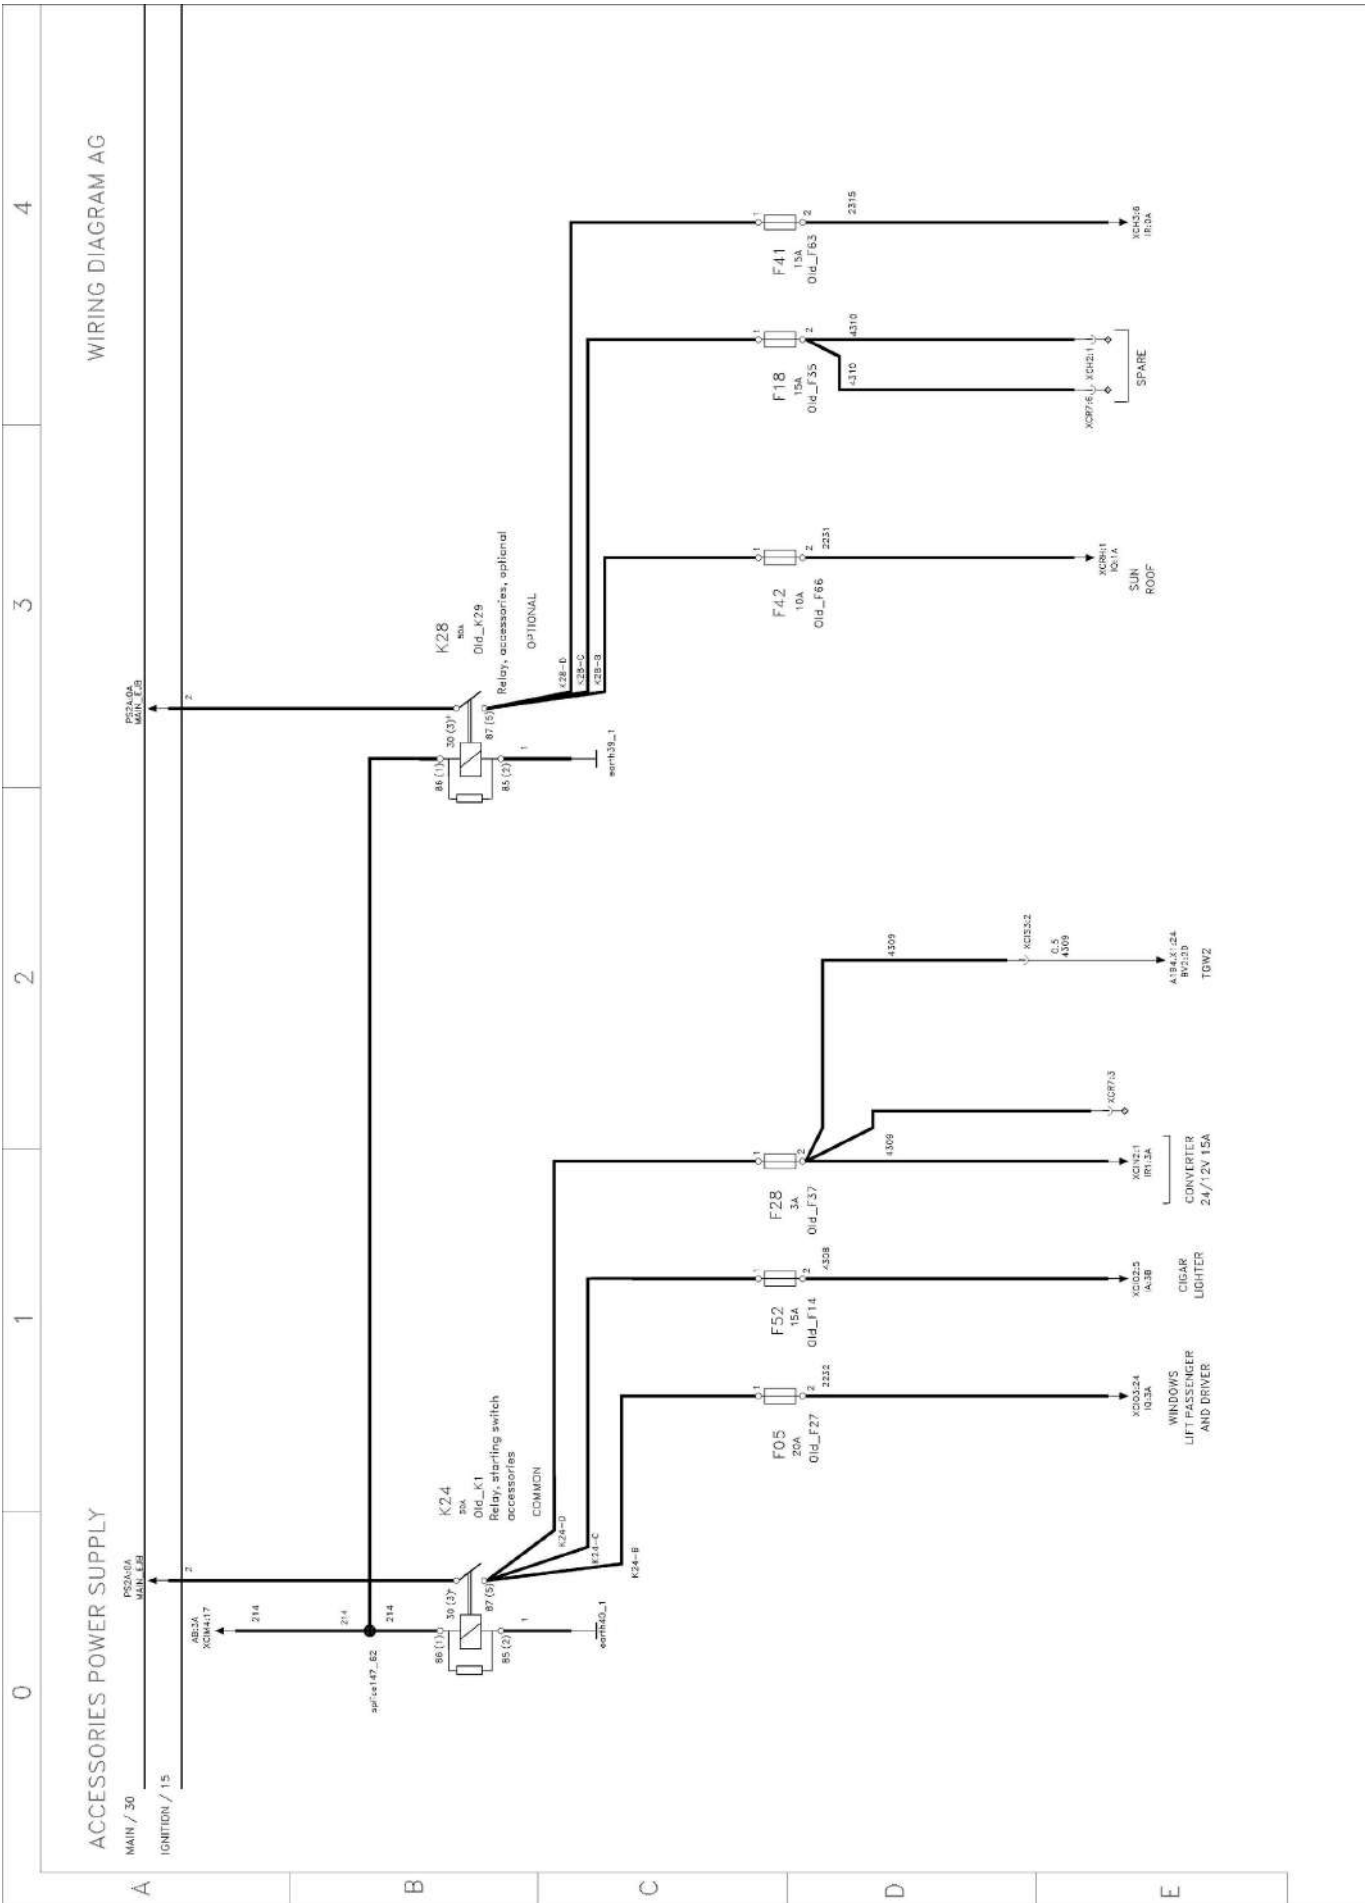

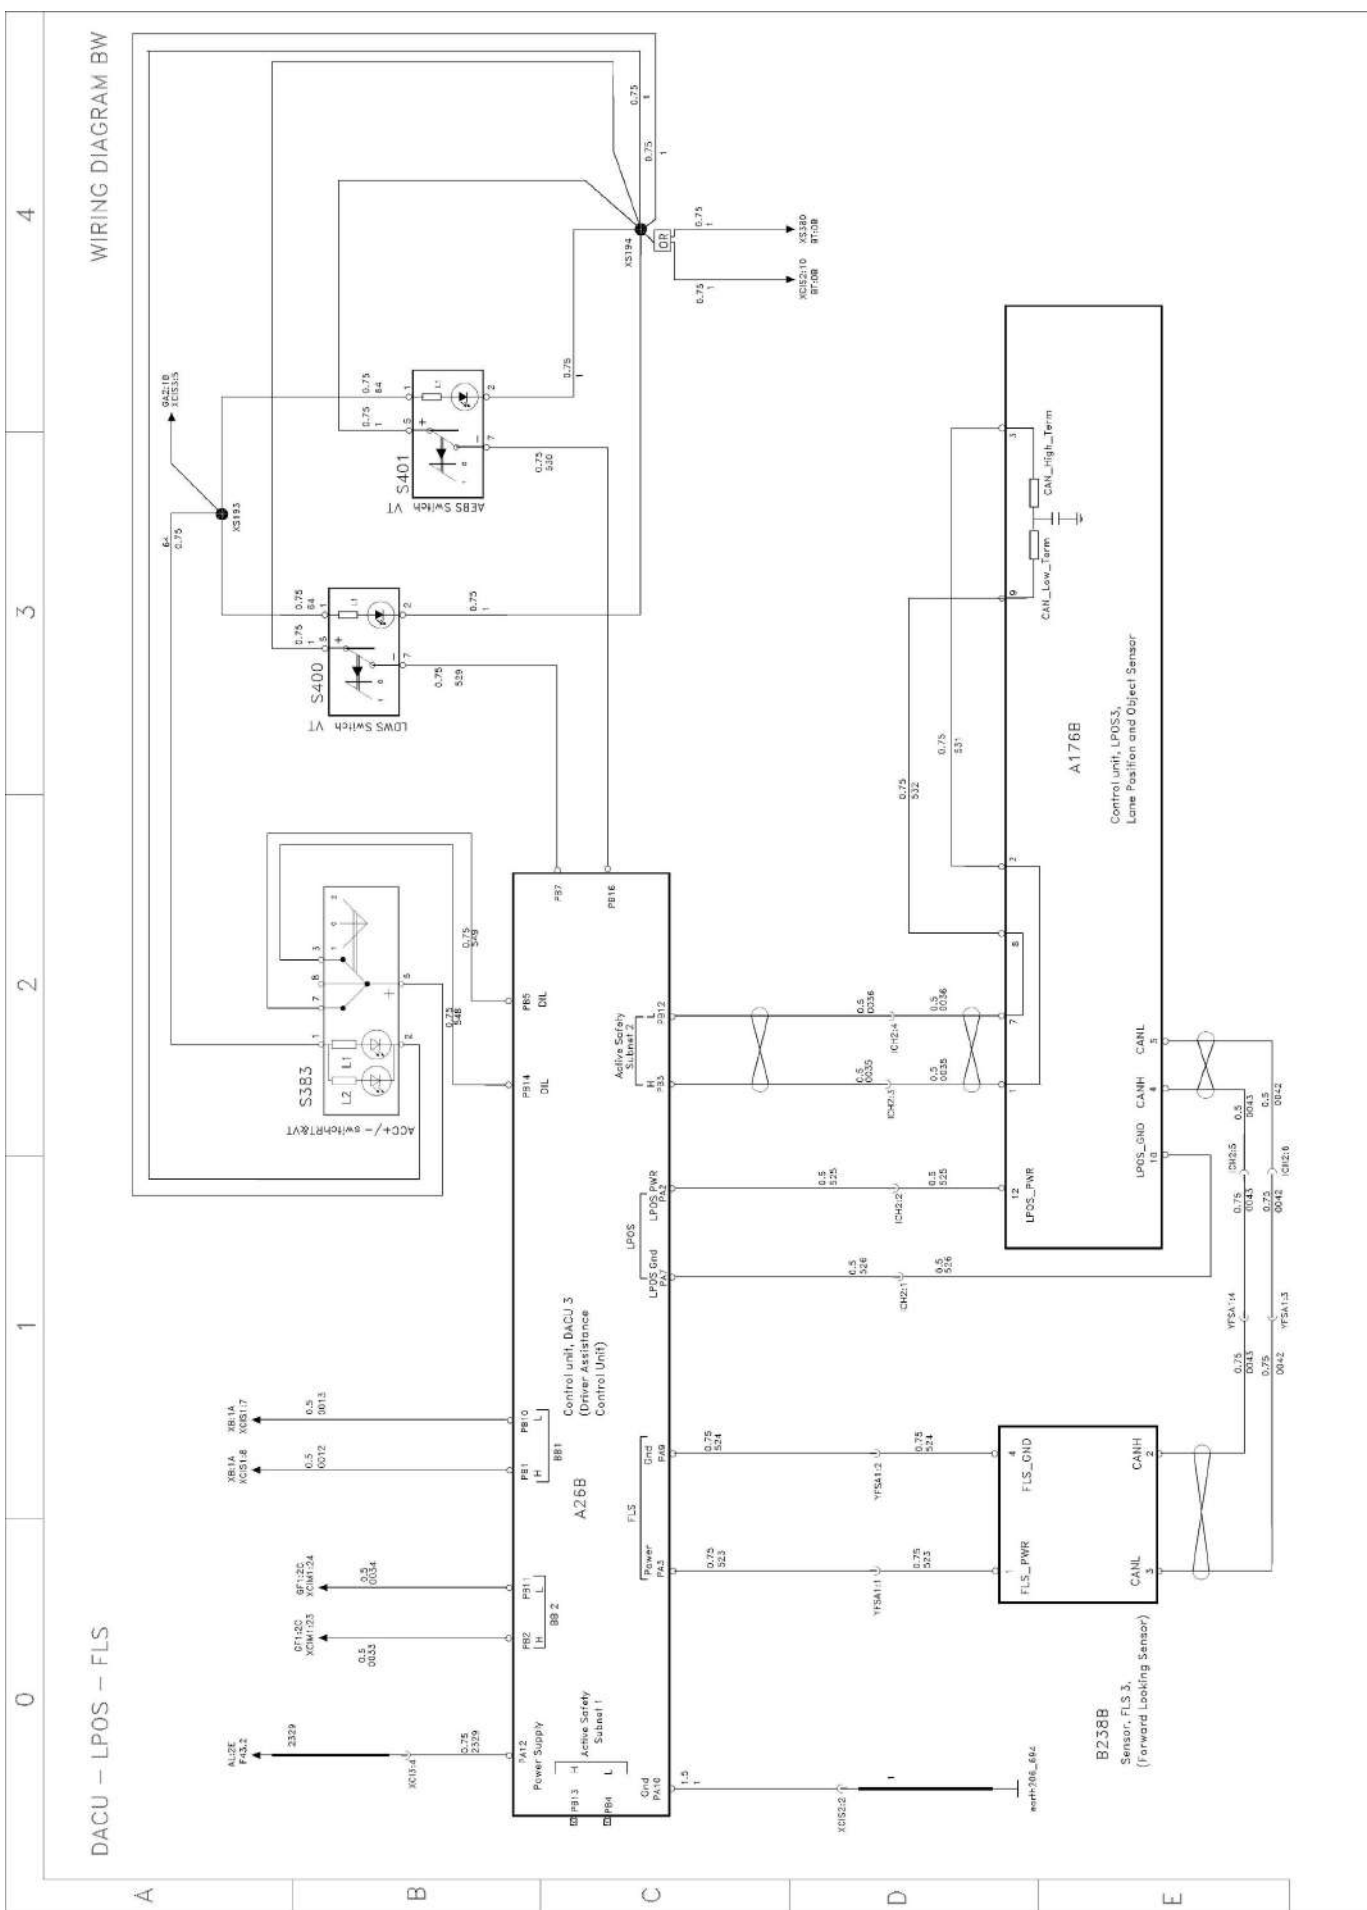


T3151949

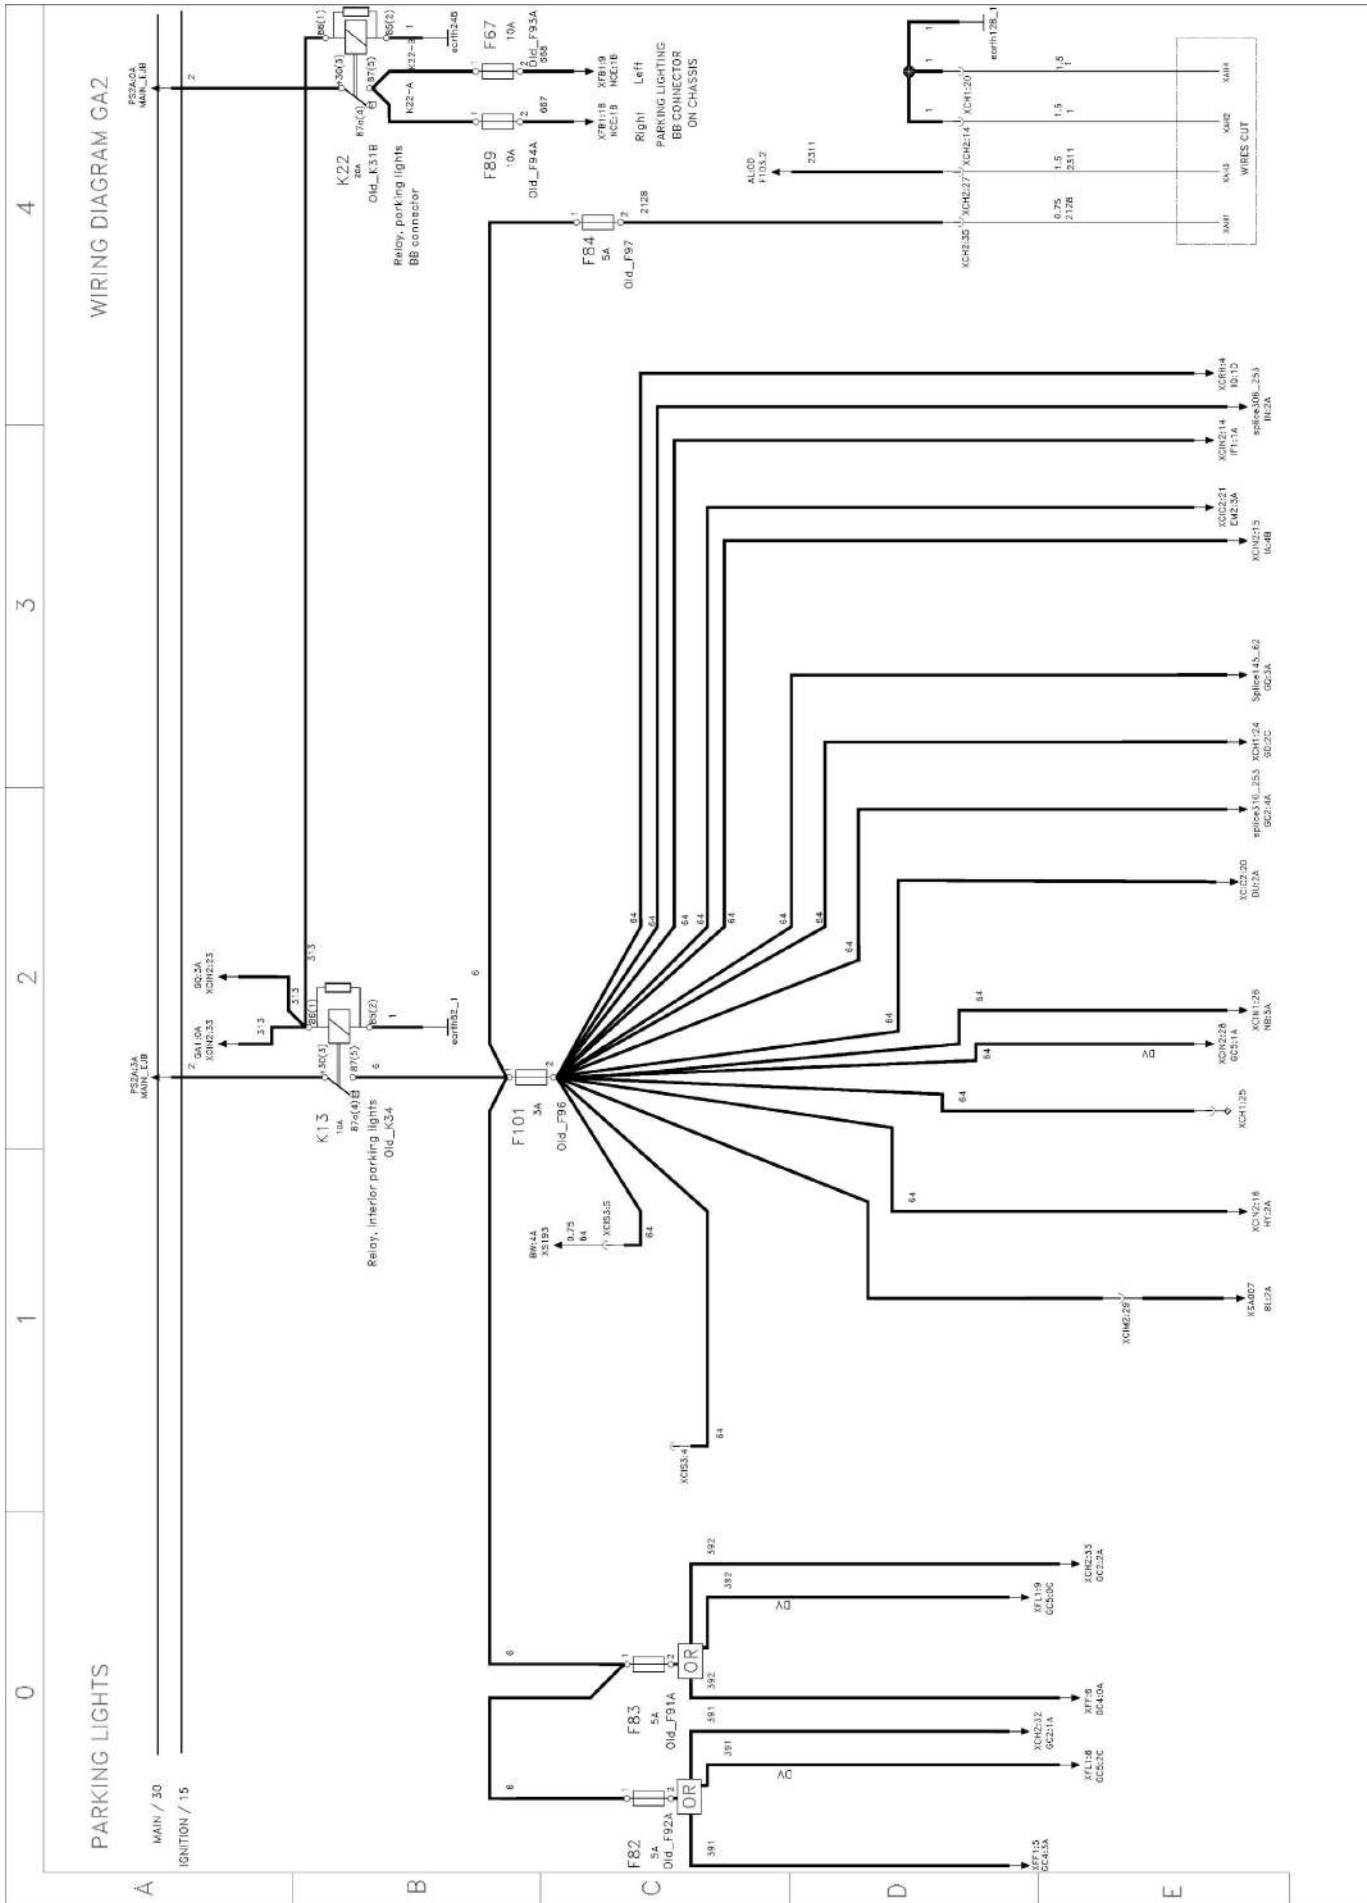


T3151968


WIRING DIAGRAM XA

BUS J1587-1

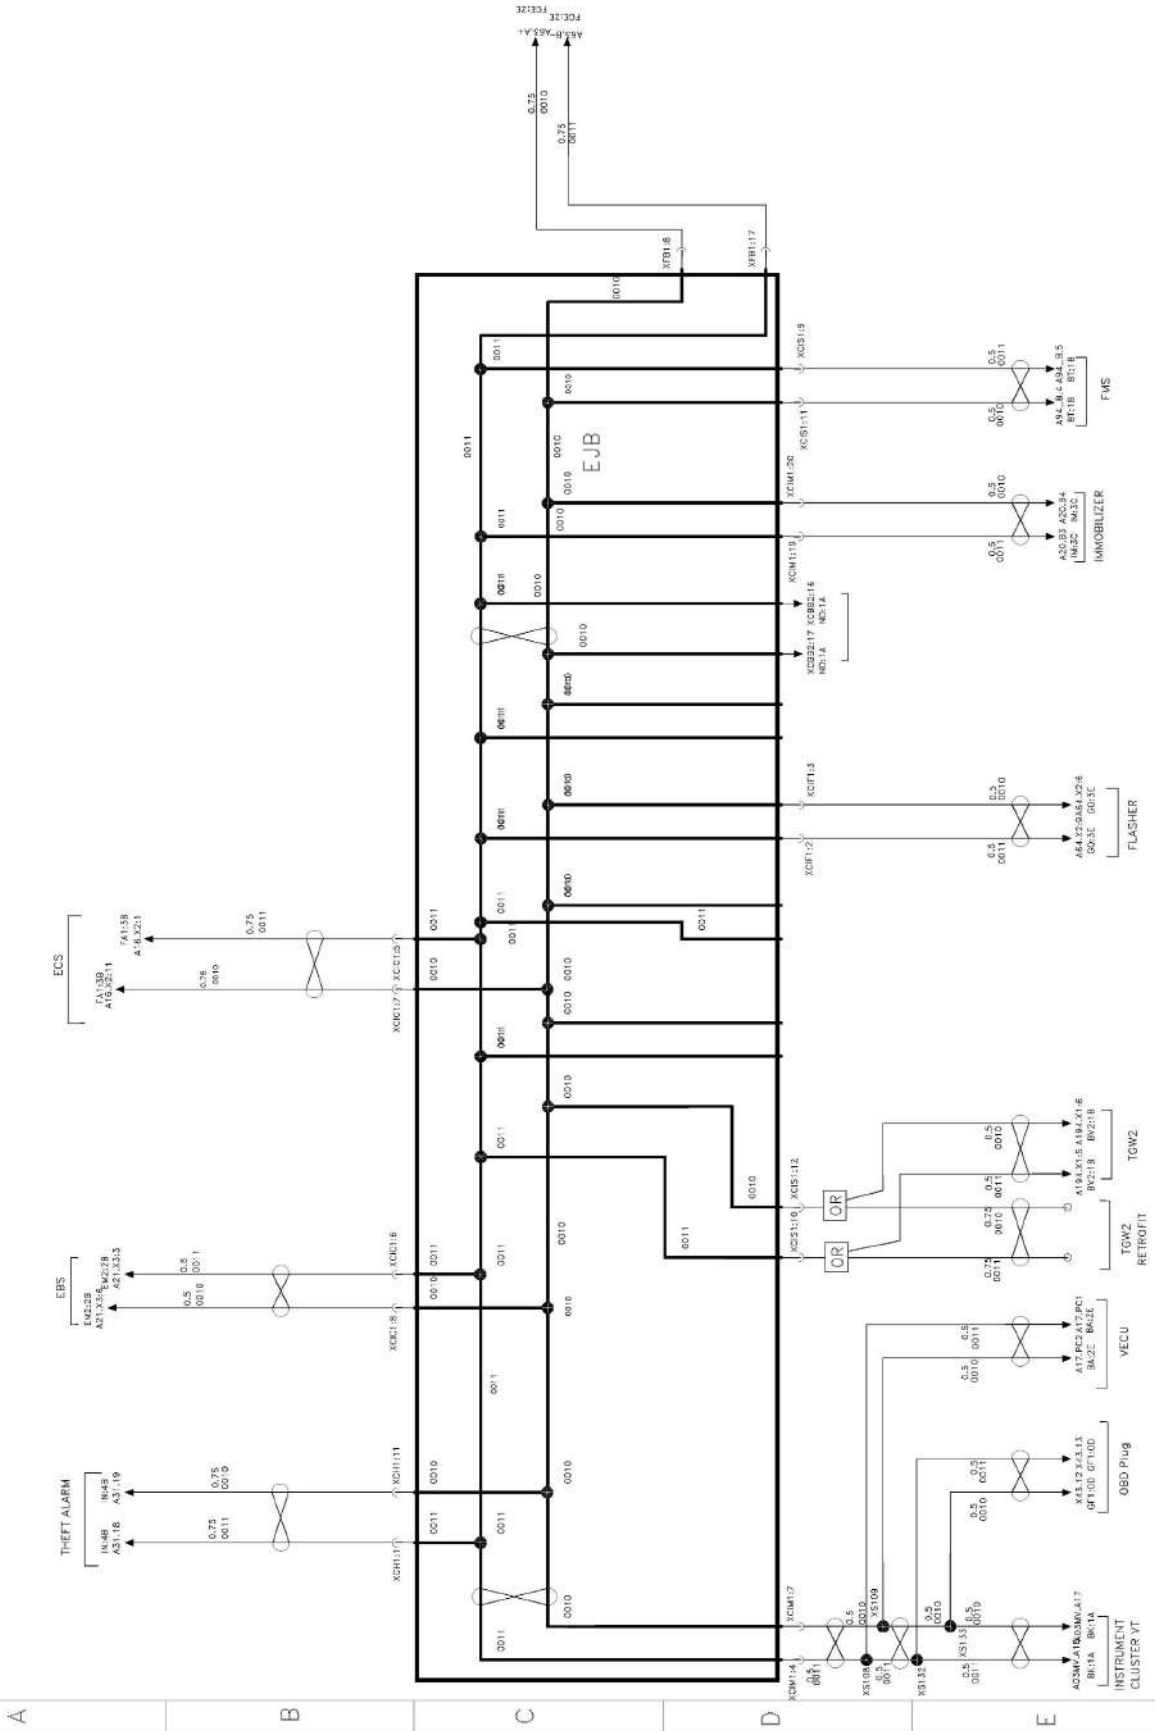


Illustrations

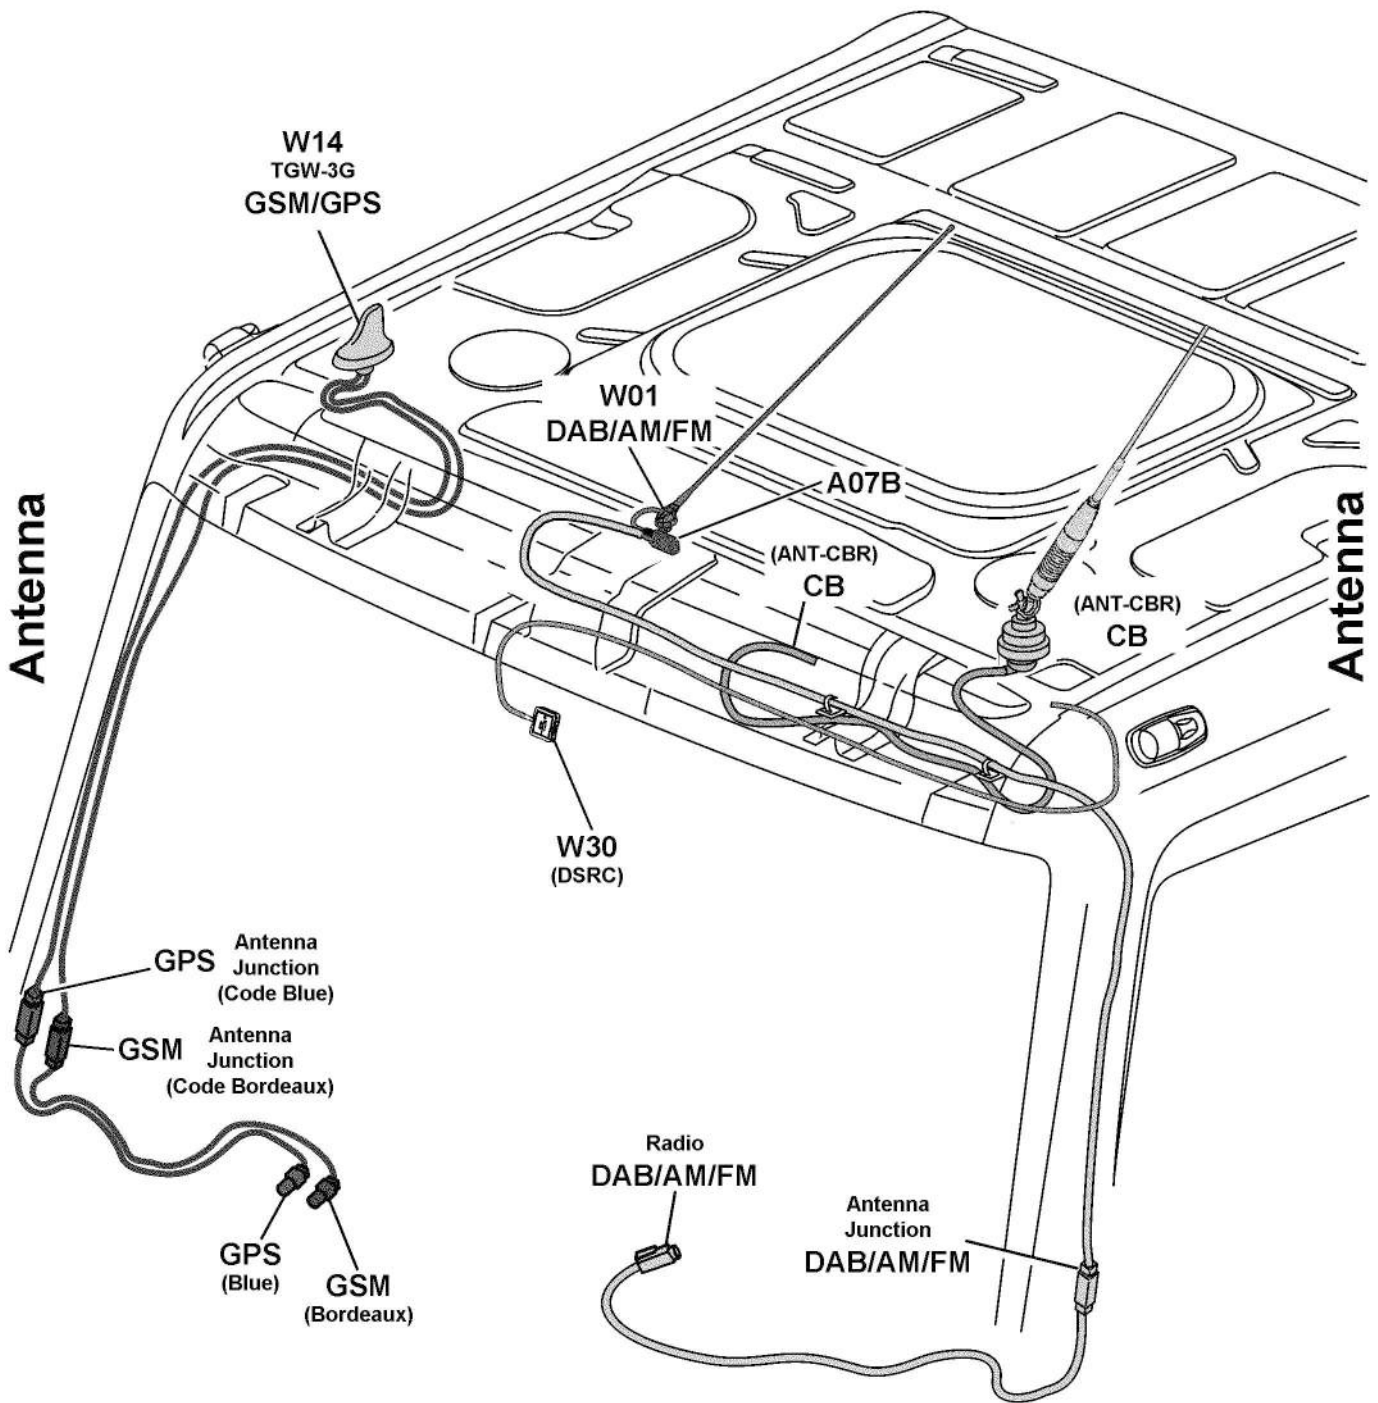

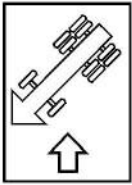


S96 White	S75 Black	S73 Brown	S115 Orange	S23 Violet		S95 White
--------------	--------------	--------------	----------------	---------------	--	--------------

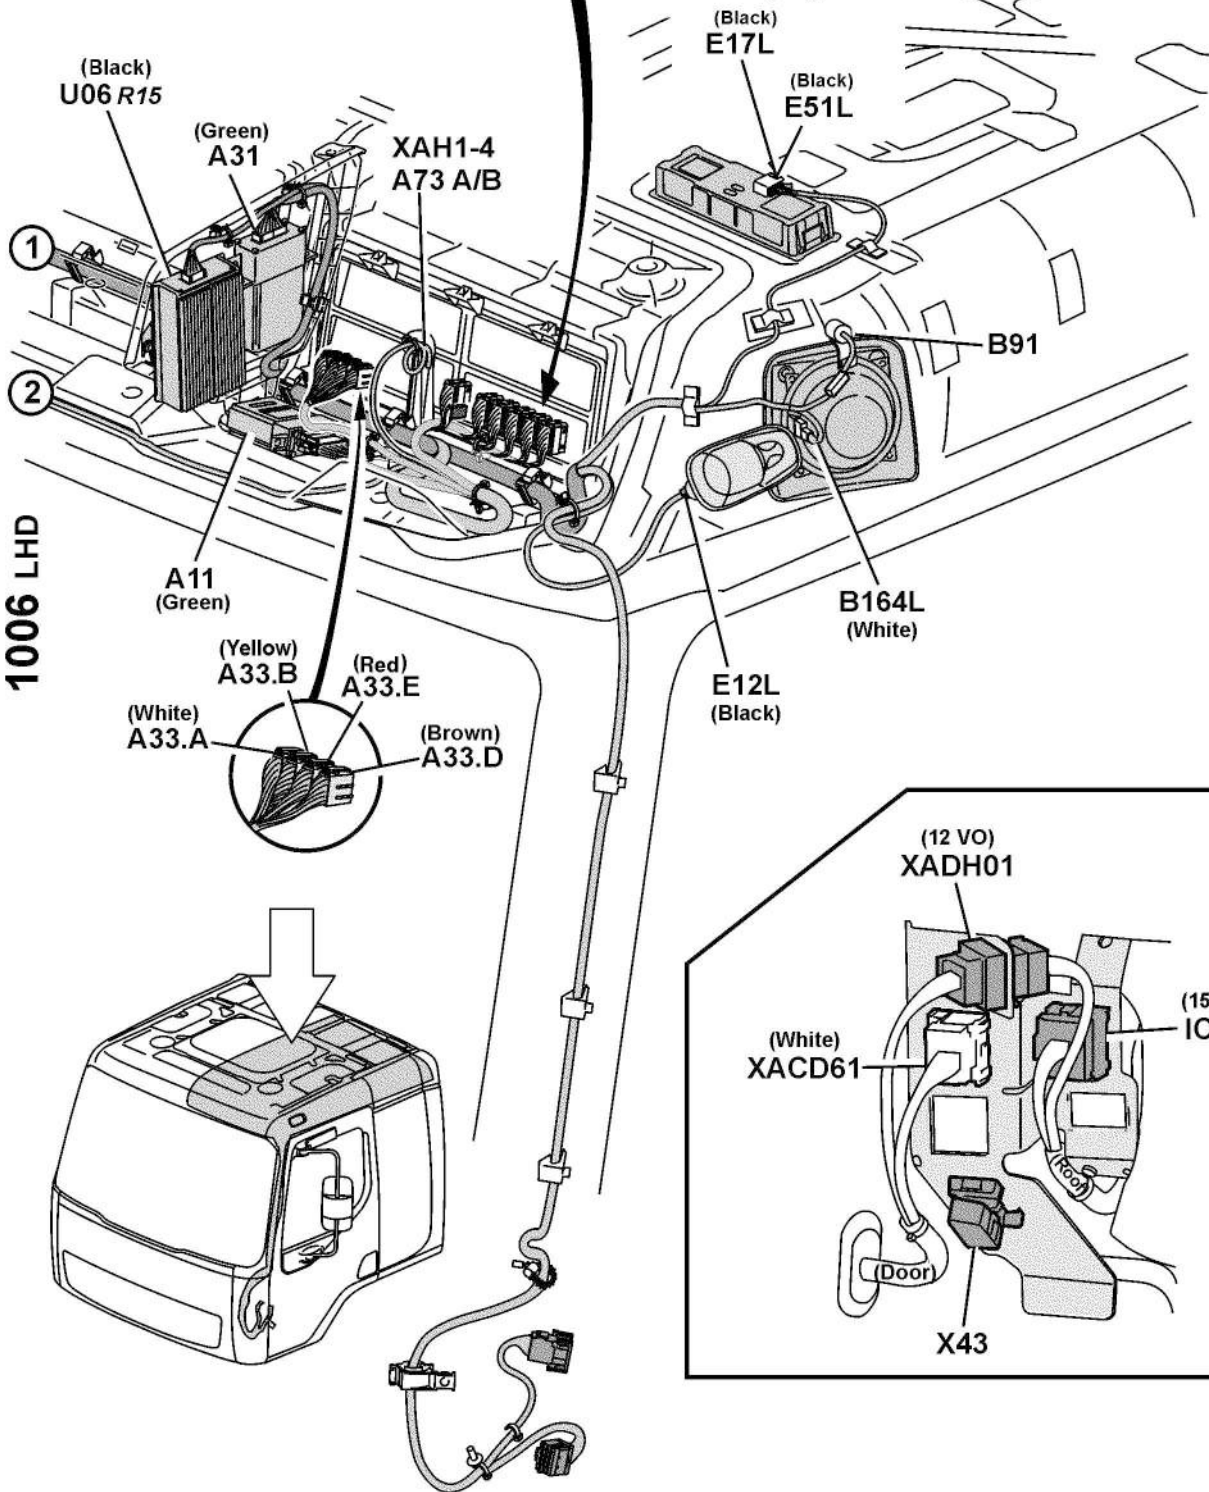


1006 LHD

 1006 LHD




1057, EWT 5300

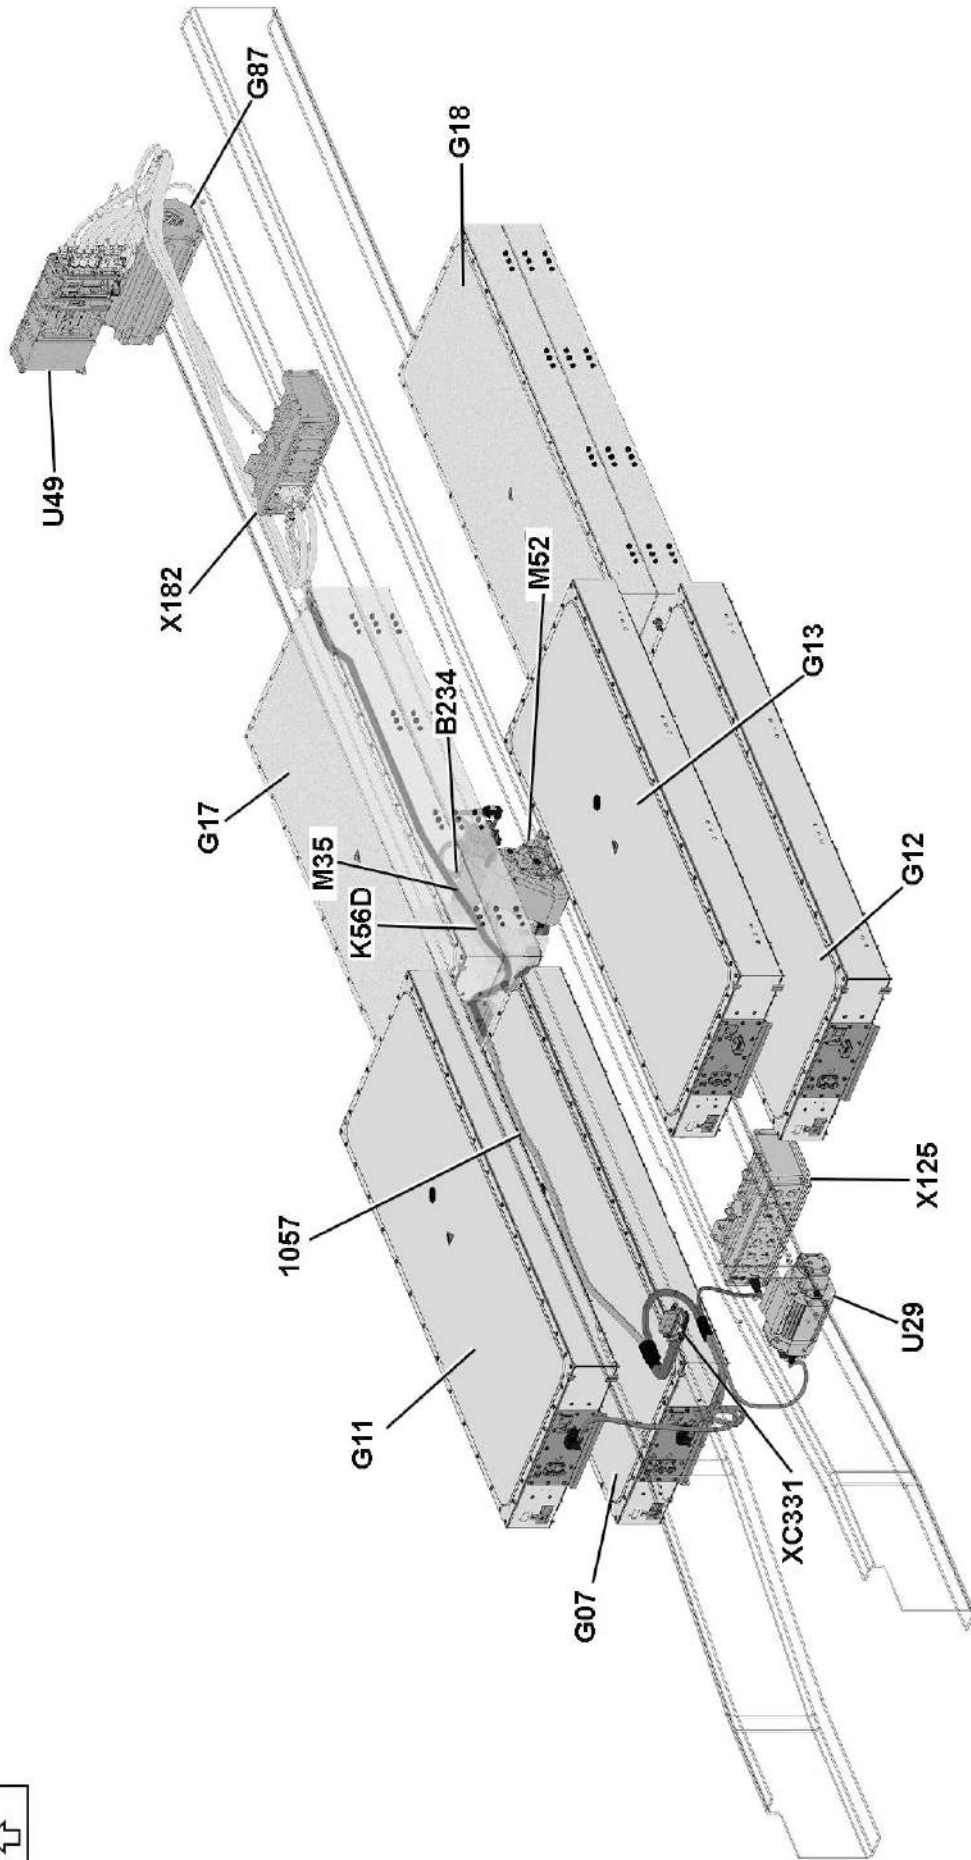


1057, EWT 5300

Wiring harness Layout

Cuttelfish, CAB

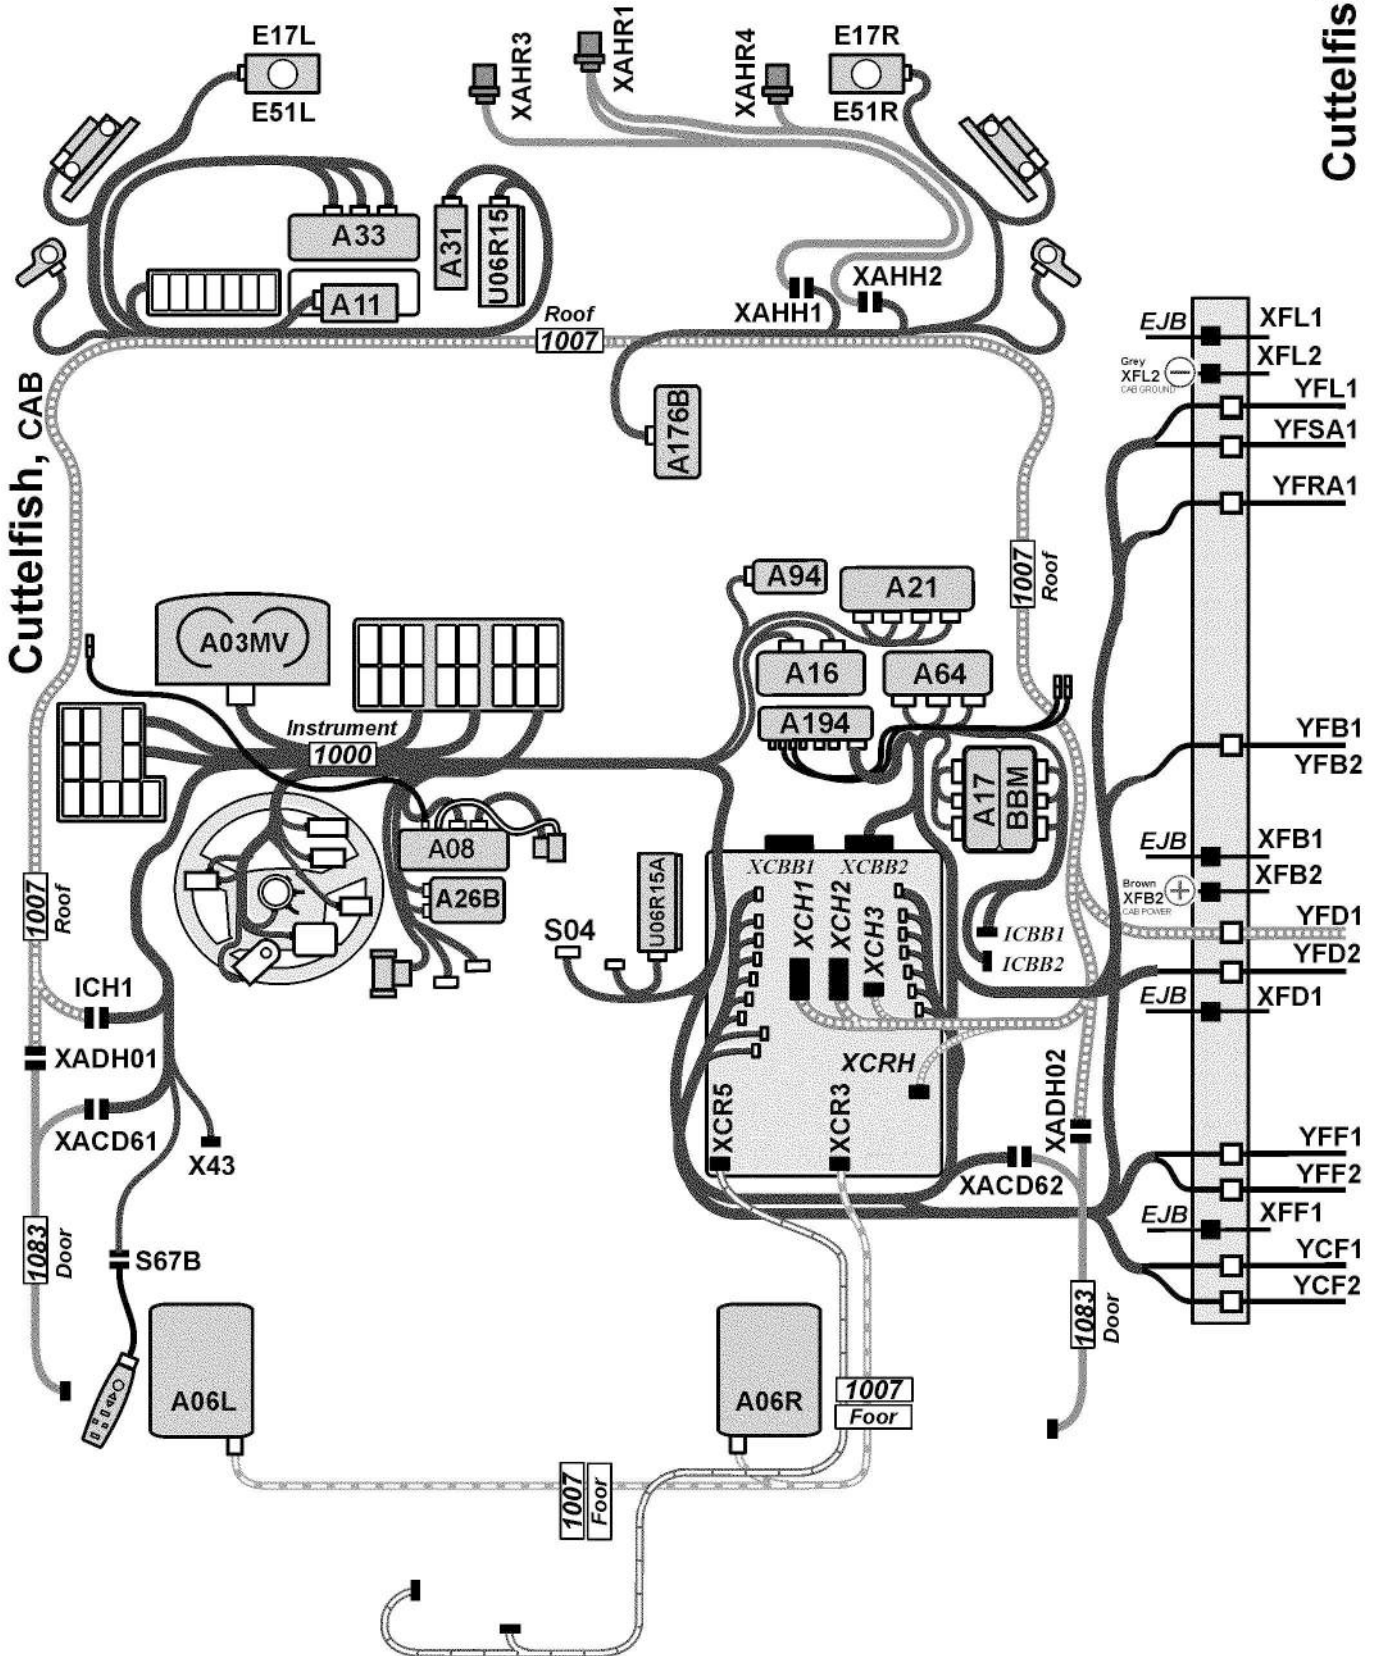


X62

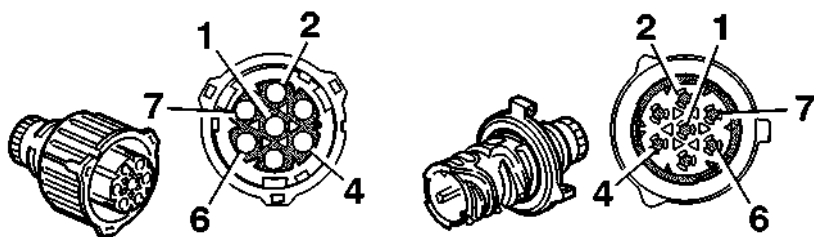

T3020295

Pin no:	Circuit function	Wiring no:	Diagram
1	Bodybuilder predisposition switch	0461	NCE:3 C
3	Chassis/equipment	8116	NCE:3 C
7	Bodybuilder predisposition switch	0460	NCE:3 C


XACD61

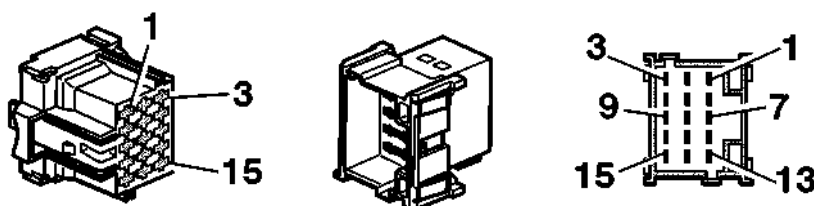

T3019800

Pin no:	Circuit function	Wiring no:	Diagram
1	Power supply kl. 30	45	GH1:2 B
2	Ground	1	IF1:3 D
3	Adjustable mirror motors control	432	IF1:1 E/ IF2:2 C
4	Passenger window lift control	470	IQ:2 C
5	Heated mirror power supply. Windscreen heater relay control	4	IF1:2 C/ /IF2:2 B
6	Heated mirror request	386	IF1:0 D
8	Power supply kl. 15	215	IF1:0 B
9	Front door switch control / instep lights control	119 / 4322	GH1:2 D
11	Adjustable mirror motor control	428	IF1:3 D/ IF2:3 C
12	Dashboard illumination power supply	64	IF1:1 B
13	Power supply kl. 15	2232	IQ:3 B
14	Adjustable mirror motor control	430	IF1:1 E/ IF2:2 C
15	Passenger window lift control	469	IQ:2 C


XC041

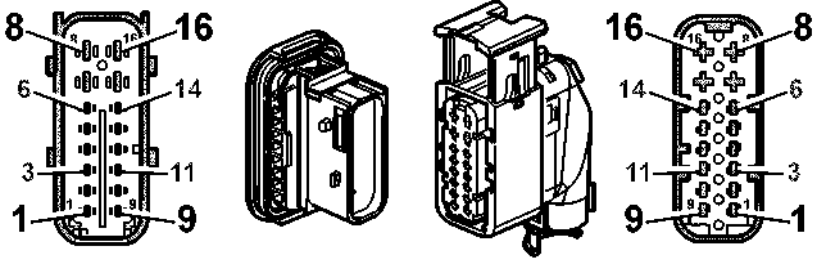

T3071129

Pin no:	Circuit function	Wiring no:	Diagram
1	PP	9201	ASE:0 D
2	CP	9202	ASE:1 D
3	DC + sensor	735	ASE:1 D
4	AC sensor	734	ASE:2 D
5	DC — sensor	752	ASE:3 D
6	Inlet lock 2	2709	ASE:3 D
9	Inlet lock 1	2708	ASE:2 D
10	Lock status	736	ASE:3 D
11	Analog ground	1409	ASE:2 D
12	Led red	740	ASE:3 D
13	Led green	738	ASE:3 D
14	Led yellow	739	ASE:3 D
15	Led GND	1411	ASE:3 D


XCH1

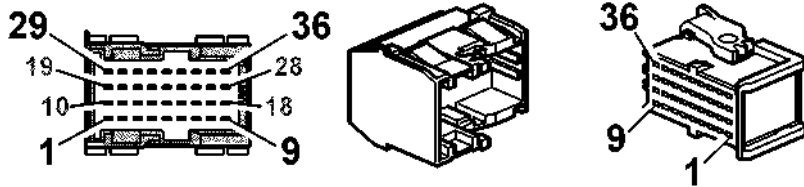

T3071134

Pin no:	Circuit function	Wiring no:	Diagram
1	Bus J1587-1 diagnostic line (B-)	0011	XA:0 B
2	Unlock door request	484	IM:1 C
3	Lock door request	436	IM:1 C
4	Ground	1	IM:3 E
6	Power supply kl. 15	24	IM:1 B
7	Power supply kl. 15	24	IN:1 B
11	Bus J1587-1 diagnostic Line (B-)	0010	XA:0 B
13	Ground	1	IN:1 D
14	Ground	1	IN:3 C
16	Trailer turn left indicator	39	IN:3 D
17	Dashboard illumination power supply	64	IN:2 A
18	Beacon warning lamps control	322	GC2:4 C
19	Door sensor signal	1159	GH1:1 C
20	Ground	1	GA2:4 D
21	Ground	1	GD:2 E
24	Dashboard illumination power supply	64	GD:2 C
25	Dashboard illumination power supply	64	GA2:2 E
27	Alarm PW supply	262	IN:1 B
28	Coded line alarm trailer connection freight	0403	IN:2 D
29	Indicator signal to LCM	0375	IM:2 B
30	Ground	1	GC2:3 E
31	Dashboard illumination power supply	64	GC2:4 B
34	Direct battery	2328	AF:3 E
35	Alarm siren power supply	2303	IN:3 D
36	GC2:3 C	323	GC2:3 C


XCH2

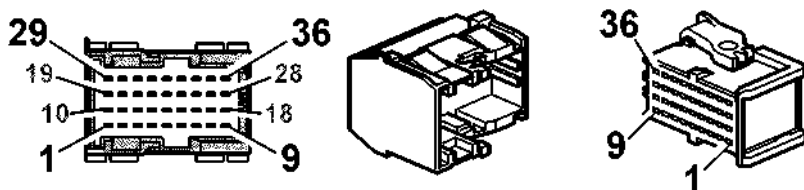

T3071134

Pin no:	Circuit function	Wiring no:	Diagram
1	Power supply kl. 15	4310	AG:4 E


XCIF2

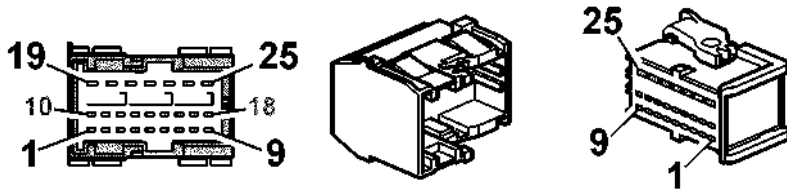

T3071131

Pin no:	Circuit function	Wiring no:	Diagram
3	Wiper parking status	509	GQ:4 B
6	Power supply kl. 30	310	GQ1E:2 A
7	Power supply kl. 30	310	GQ1E:0 D
8	Horn control	311	GQ1E:0 D
13	Washer pump head ligh ctrl	510	GQ:4 B
14	Intermittent wiper timer relay control	503	GQ:4 B
15	Horn relay control	312	GQ1E:1 C
16	Ground	1	GQ1E:1 D
19	Front door switch control / instep lights control	119 / 4321	GH1:0 D
21	Ground	1	GQ1E:1 D
22	Power supply kl. 30	663	GB1:3 B
23	Power supply kl. 30	663	GB1:3 B
24	Front door switch control / instep lights control	119 / 4322	GH1:2 D
25	Power supply kl. 30	310	GQ1E:2 C




XFB2

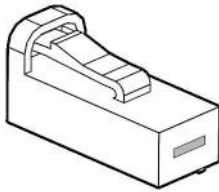

T3105191

Pin no:	Circuit function	Wiring no:	Diagram
1	Main power supply. After main switch	2	ABE:3 D

XFD1

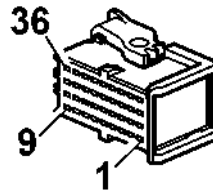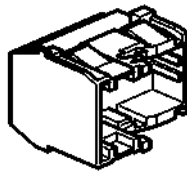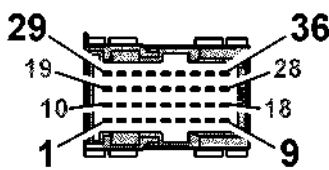

T3071134

Pin no:	Circuit function	Wiring no:	Diagram
1	Brake lights power supply tractor	324	GD:3 D
7	Power supply kl. 15	2121	AJ:2 D
8	Climate compressor power supply	462	BXE:3 E
15	Alternator engine running: generating current	25	AN:1 B
17	Idle validation switch	5072	DEE:4 E
23	Backbone 2 bus low	0034	XAE:0 C
24	Backbone 2 bus high	0033	XAE:0 C
25	J1939 CAN-1 bus high	0012	XB:3 C
26	J1939 CAN-1 bus low	0013	XB:3 C