



Contents


Component wiring diagram index	1
Component wiring diagrams.....	5
Illustrations index	126
Illustrations.....	127
Fuses.....	221
Relays.....	224
FRC (A01) connectors.....	226
Wiring harness layout	230
Ground connections	232
List of connectors.....	233
List of components.....	279
Abbreviations.....	291
Cable colour code.....	293
Feedback	295

Component wiring diagrams

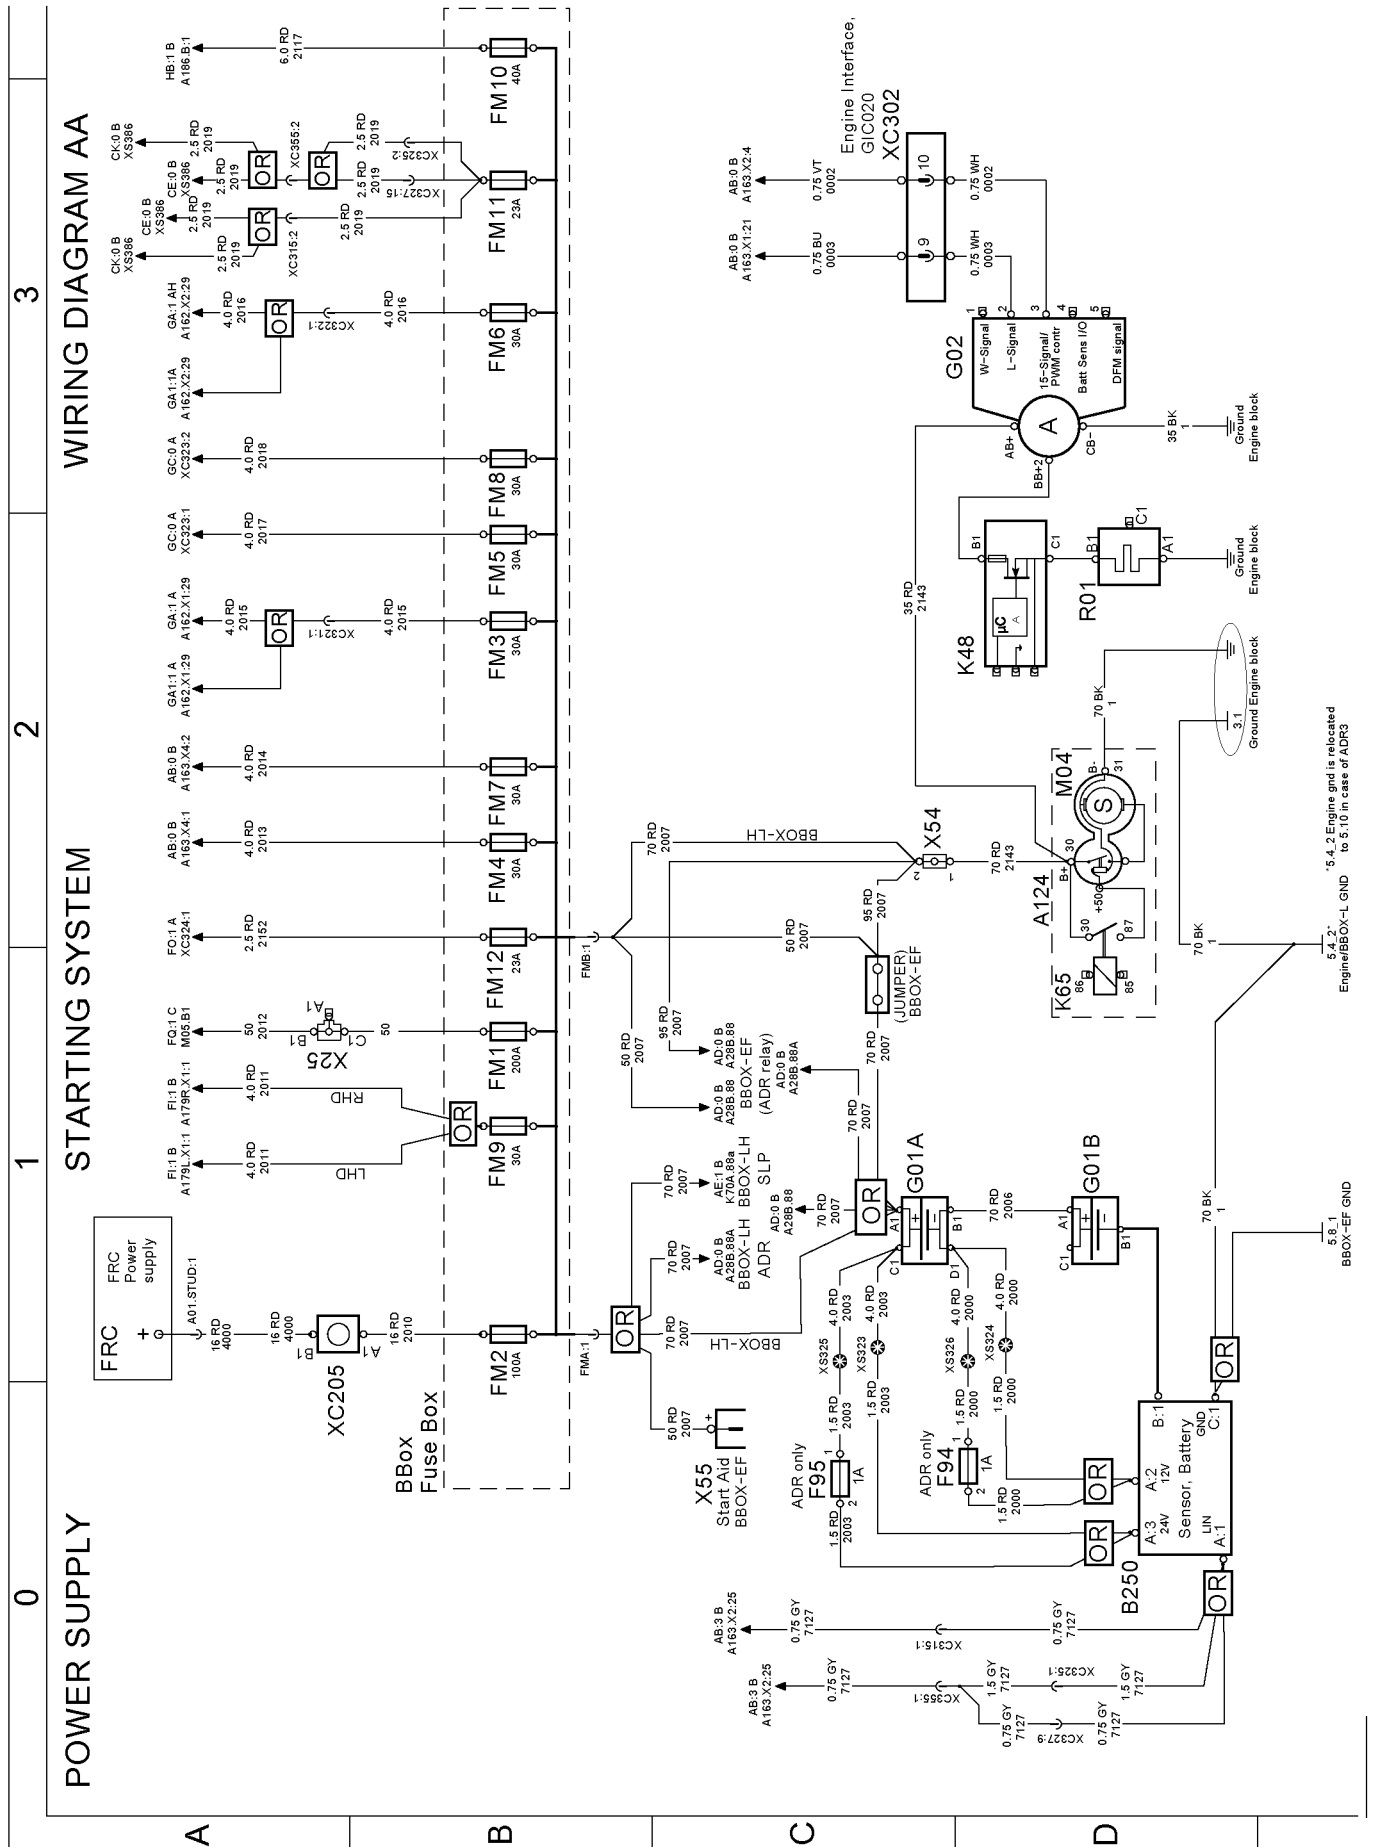

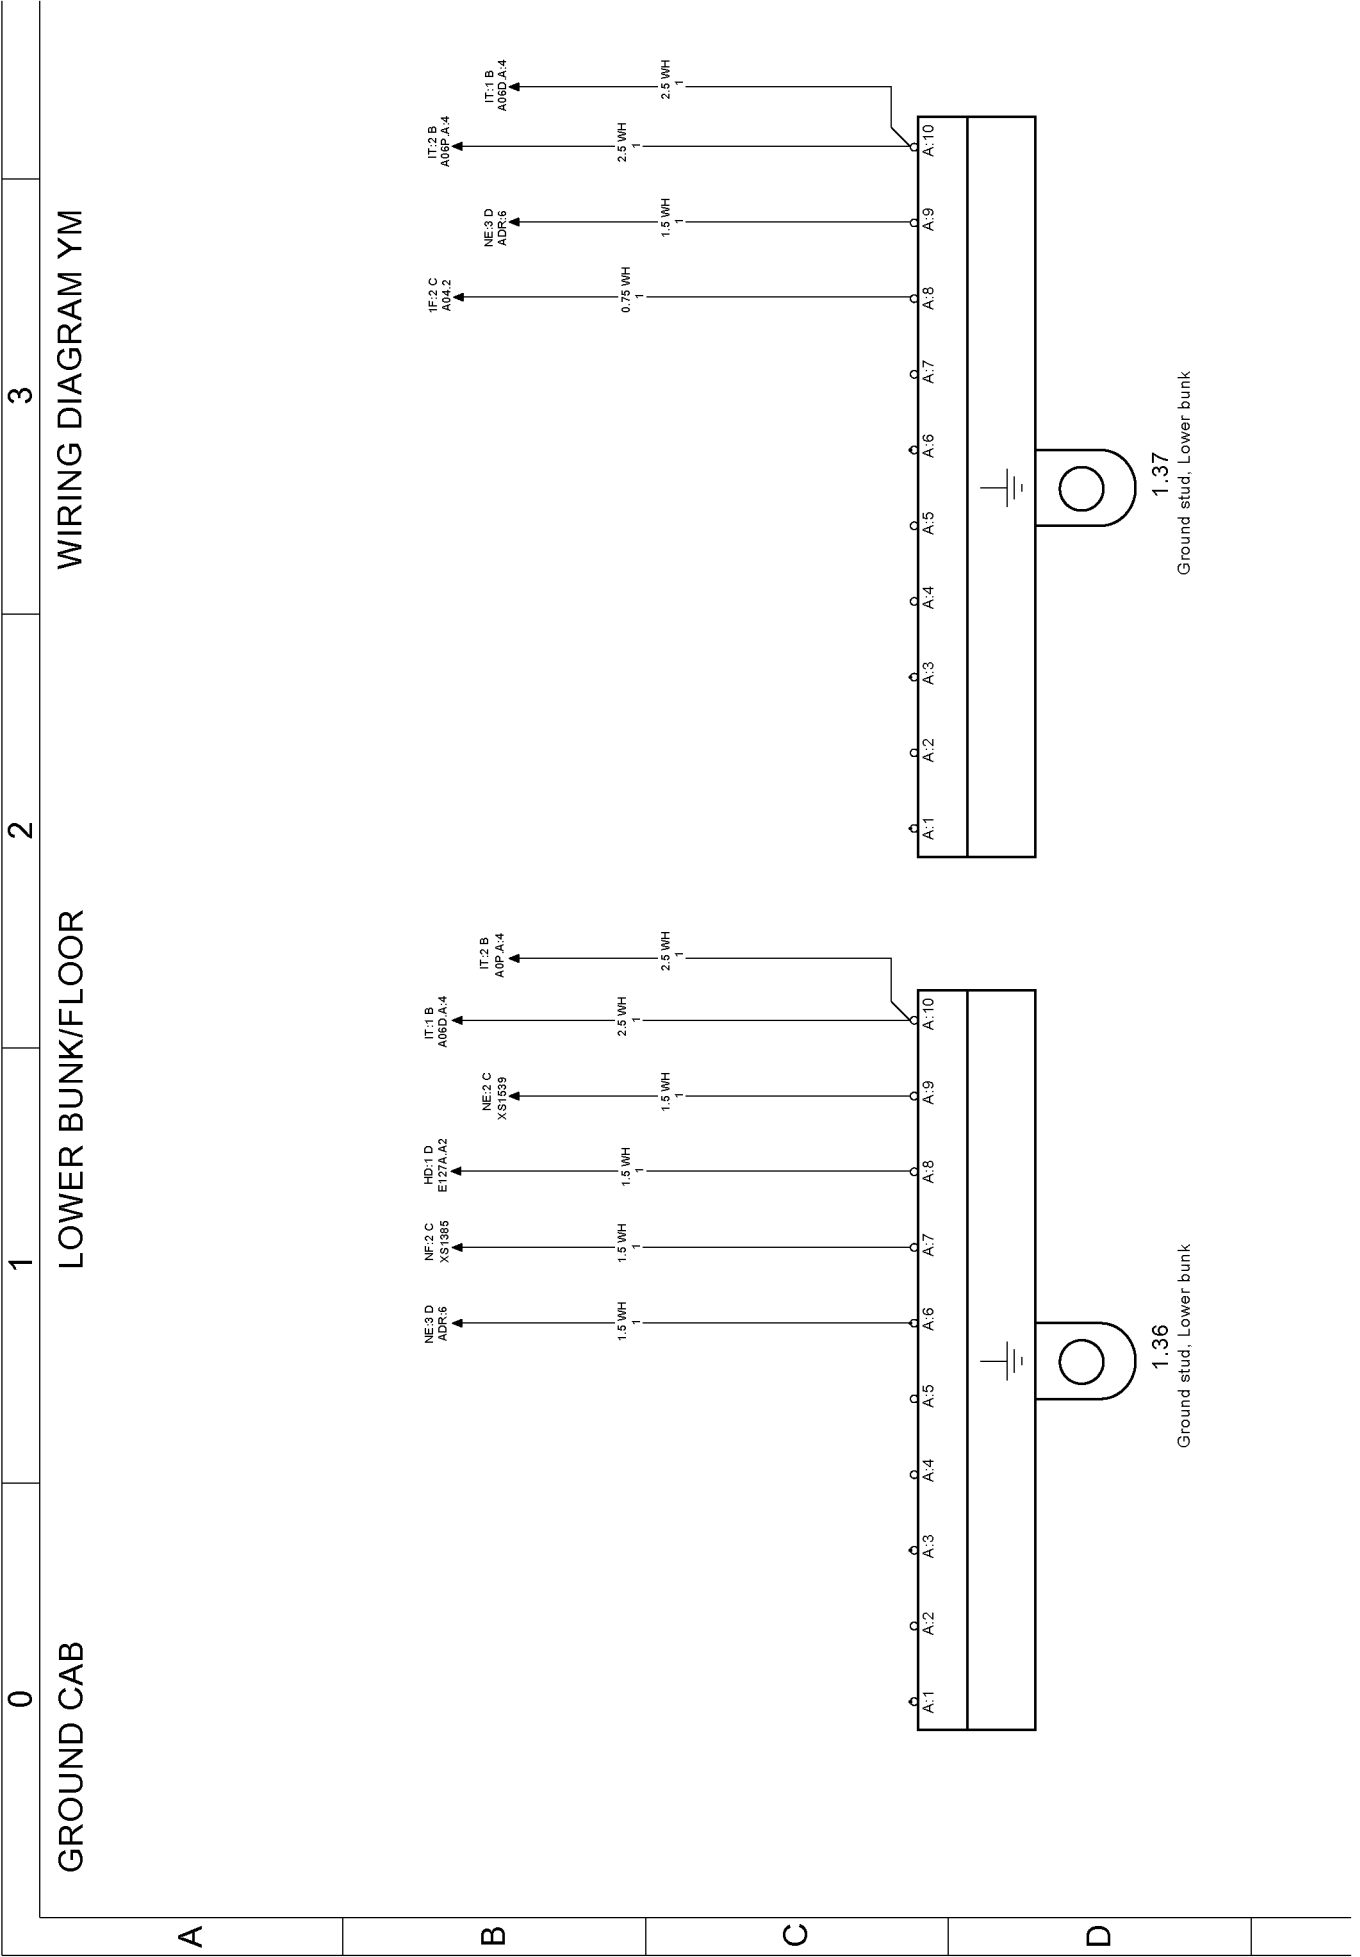


XC303 (GIC021)

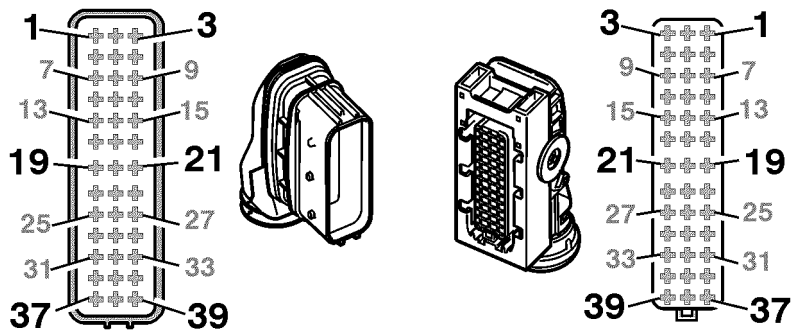


T3019924

Pin no:	Circuit function	Wiring no:	Diagram
1	Backbone 1 high	7004	DC:1 C
2	Backbone 2 high	7006	DC:2 C
3	PWT subnet high	7036	DC:2 C
4	Backbone 1 low	7005	DC:1 C
5	Backbone 2 low	7007	DC:2 C
6	PWT subnet low	7037	DC:3 C
7	Electronic ground	1070	BC:2 D
8	Backbone 2 high	7006	DC:2 C
9	Area inhibit valve on/off	0053	DA:1 C
10	Backbone 2 low	7007	DC:2 C
11	Gearbox oil temp sensor	0047	DA:0 C
12	Retarder air pressure	0044	DK:1 D/DM:2 D
13	TECU power supply	2024	DC:1 C
15	V5EXT 1 supply	2050	DK:1 D
15	V5EXT 2 supply	2051	DM:1 D
16	Digital signal IO	2032	BC:2 D
17	Range inhibit valve on/off	0052	DA:1 C
19	Revers feedback sensor	0050	DA:2 C
20	Gearbox low split sensor	0049	DA:2 C
21	V5EXT 1 ground	1009	DK:3 D/DM:2 D
22	Low range manual gearbox switch	0051	DA:2 C
23	Retarder PWM control	0043	DK:1 D/DM:1 D
24	Speed signal real time	0012	BC:2 D
26	Tachograph speedometer supply	2031	BC:1 D
27	V5EXT 2 ground	1010	DK:2 D/DM:2 D
28	Retarder oil temperature	0045	DK:2 D/DM:2 D
29	Retarder water temperature	0046	DK:2 D/DM:2 D
30	PWT subnet terminal resistor strap	7040	DC:2 C
31	Ground	1	DA:1 C
31	Manual Gearbox sensors & valves ground	1073	DA:1 C
33	Gearbox oil temperature sensor ground	1011	DA:0 C

 Component wiring diagrams

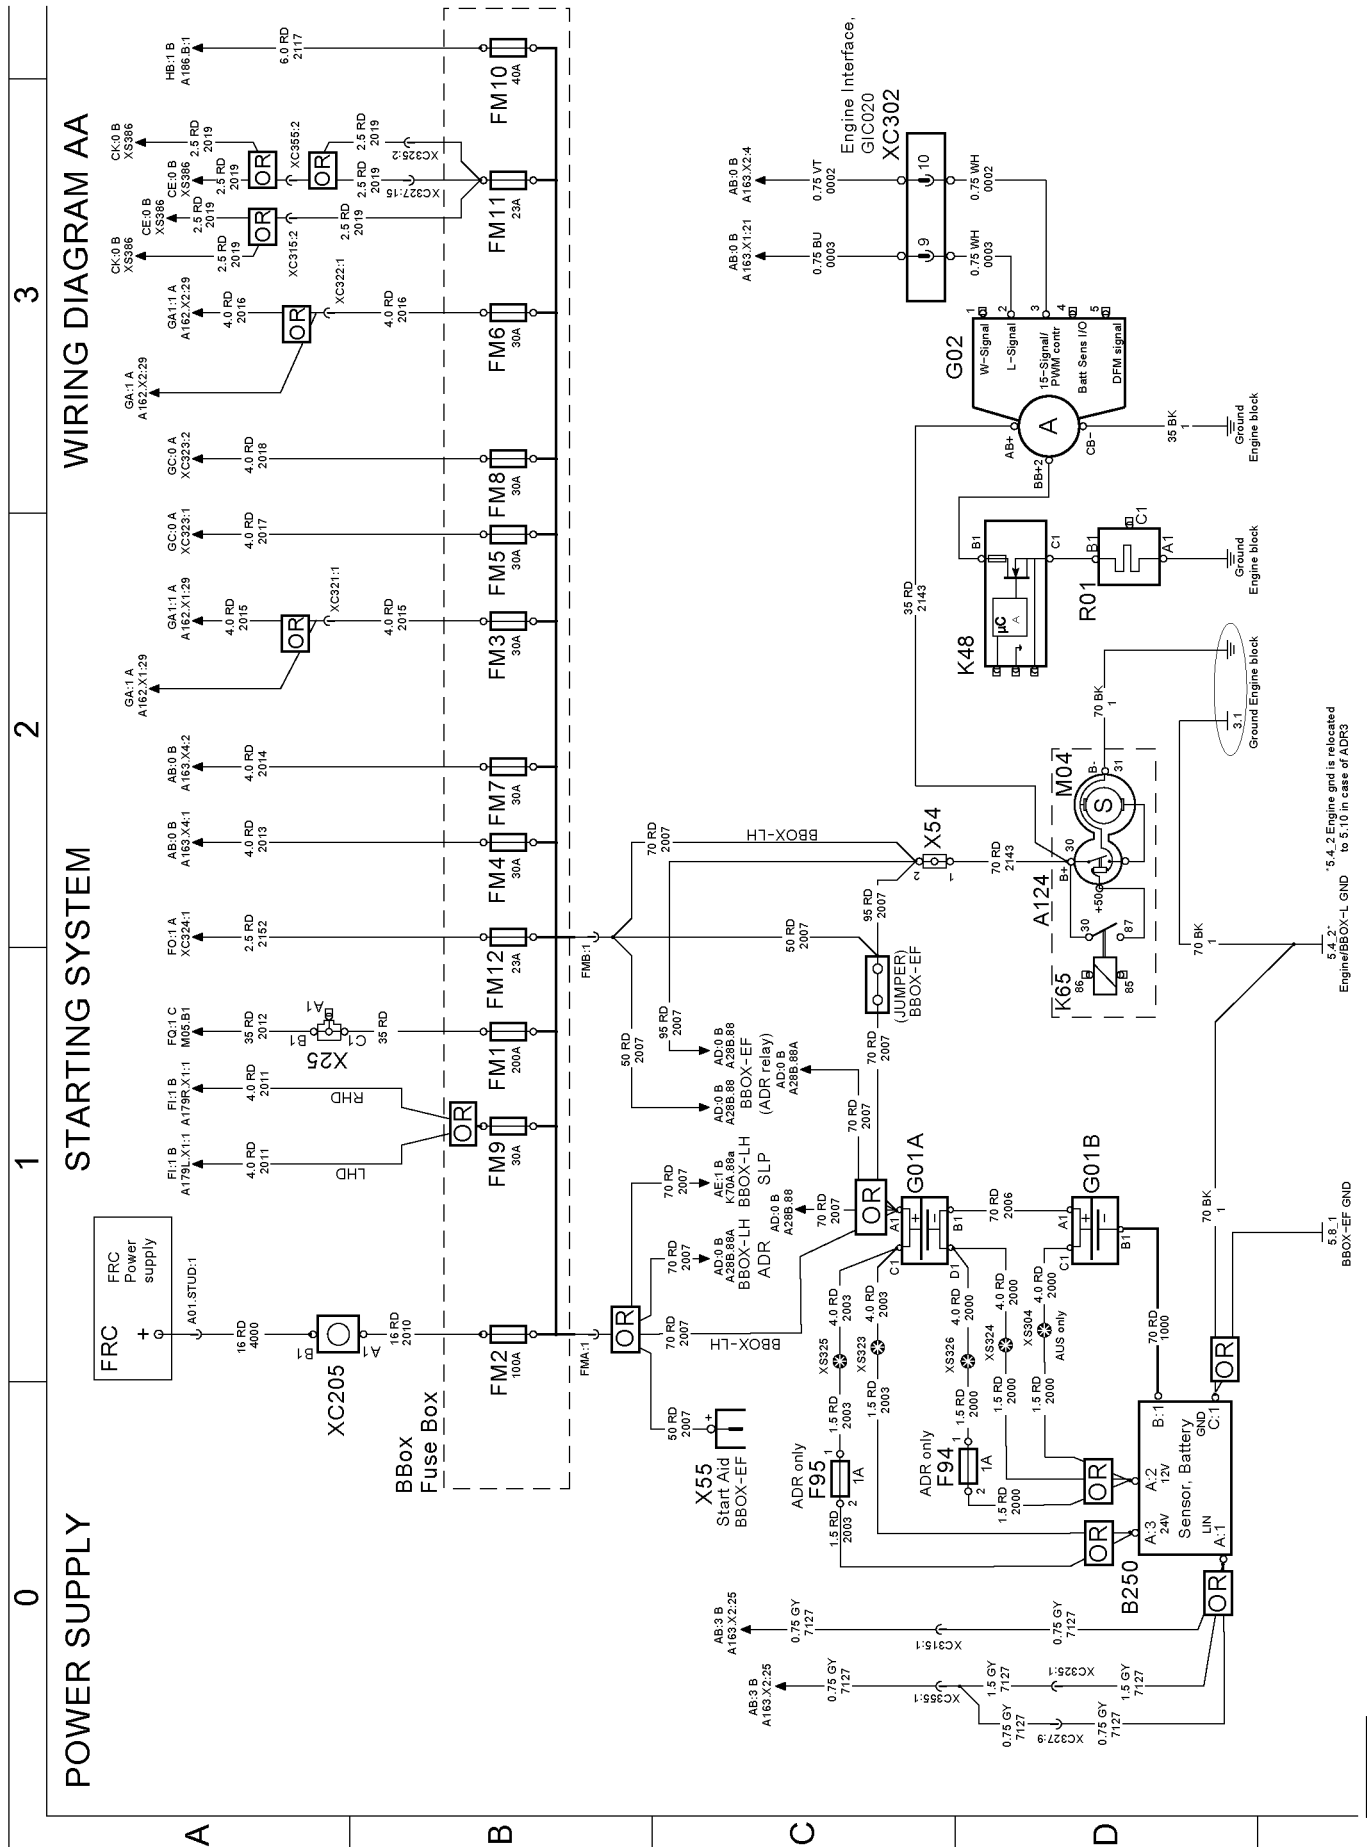



A01.CB6

Pin no:	Circuit function	Wiring no:	Diagram
1	BBEC ignition power supply	8027	ND:3 B
2	BBEC main power supply 1	8026	ND:3 B

A01.CB7

Pin no:	Circuit function	Wiring no:	Diagram
8	Cab tilt enable switch	2139	KA:2 B

A01.CB8

Pin no:	Circuit function	Wiring no:	Diagram
6	Parking air, water heater supply	2110	HC:1 A
8	TECU power supply	2024	DC:1 B

A01.CB9

Pin no:	Circuit function	Wiring no:	Diagram
1	Ground	1	YF:1 D

A01.CB10


Pin no:	Circuit function	Wiring no:	Diagram
3	12V dashboard output	4162	IG:1 B
4	24V power outlet supply 2	4006	IF:1 B
8	BBM power supply	2130	NA:1 B

A01.CB11

Pin no:	Circuit function	Wiring no:	Diagram
1	Coffe maker supply	4002	IF:3 B

26	Trailer body light EL8 relay supply	8020	GK:2 B
26	5th wheel feedback common ground	1056	NC:1 C


XC318A

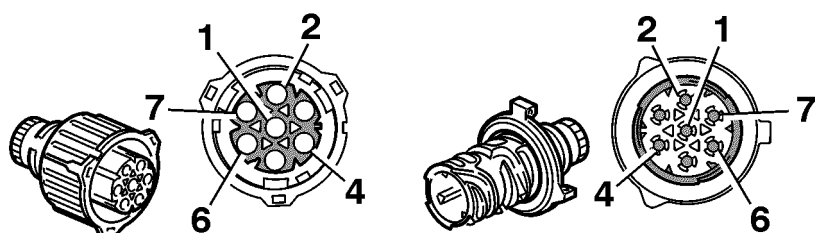

T3020295

Pin no:	Circuit function	Wiring no:	Diagram
2	Side reverse working lamp power supply	8060	NE:1 B
3	Cab body working lamp power supply	8061	NE:3 B
4	5th wheel load light	8068	NC:3 C
5	Ground	1	NE:1 D
6	Ground	1	NE:4 B
7	Ground	1	NC:3 D

XC318B

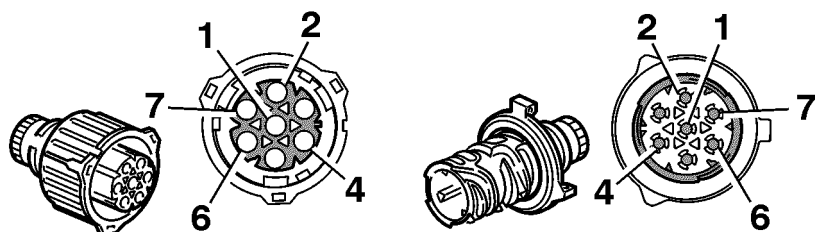

T3020295

Pin no:	Circuit function	Wiring no:	Diagram
2	Side reverse working lamp power supply	8060	NE:1 B
3	Cab body working lamp power supply	8061	NE:3 B
4	5th wheel load light	8068	NC:3 C
5	Ground	1	NE:1 D
6	Ground	1	NE:4 B
7	Ground	1	NC:3 C

KEY SWITCH


WIRING DIAGRAM AF

A


B


C

D

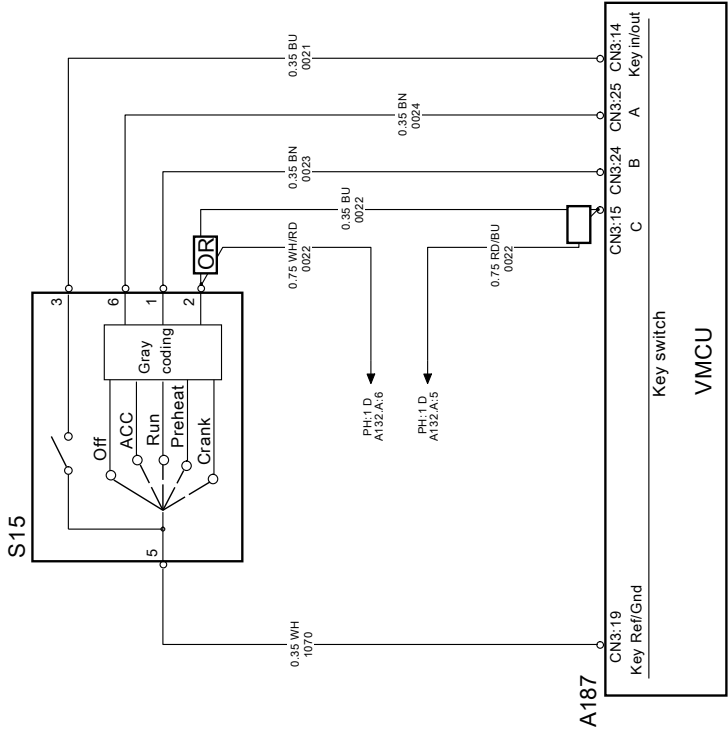



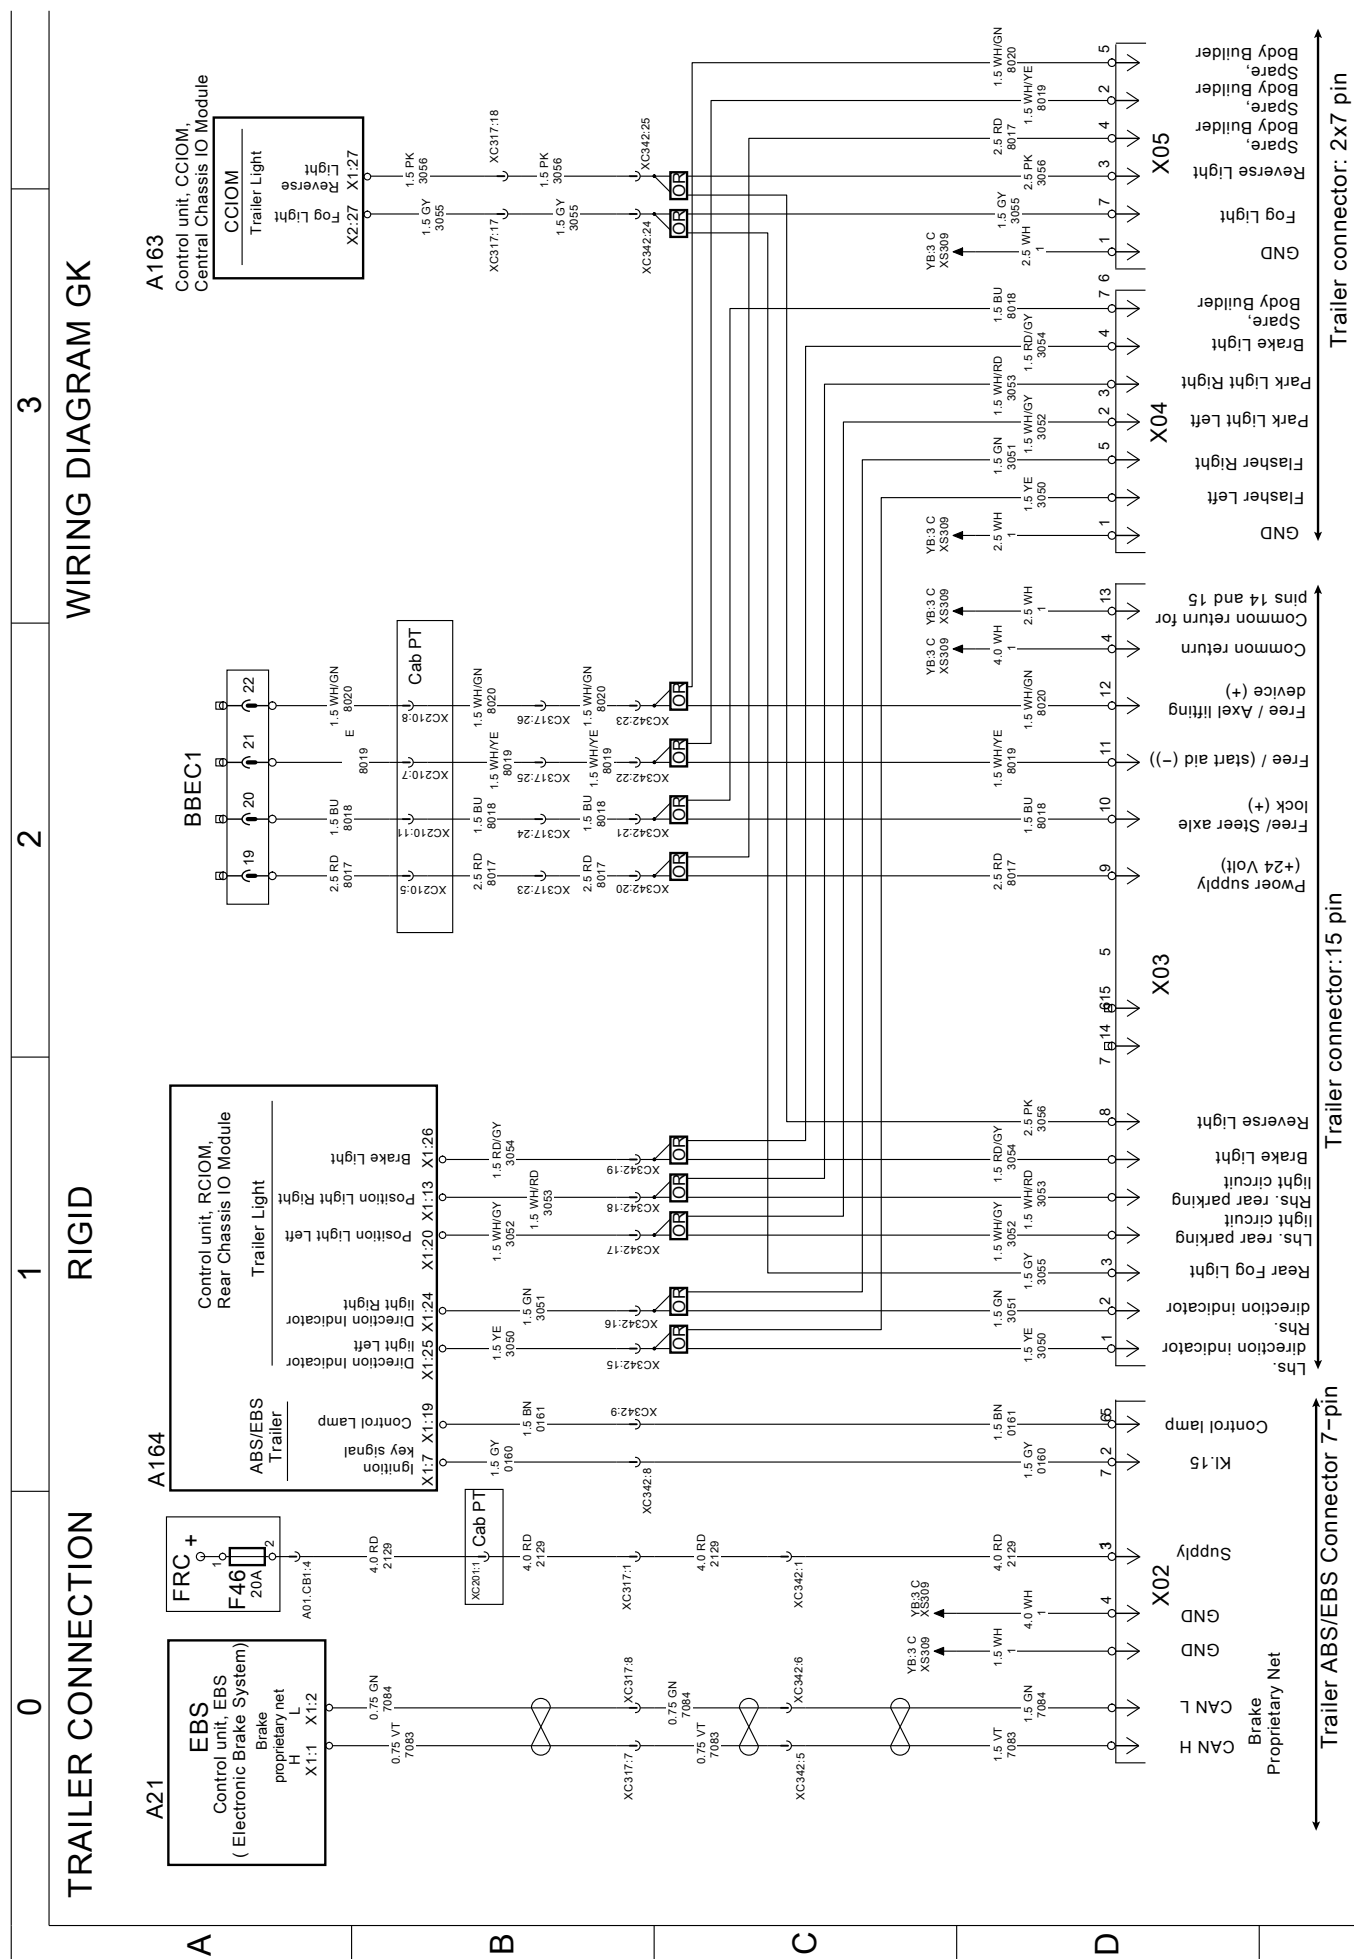


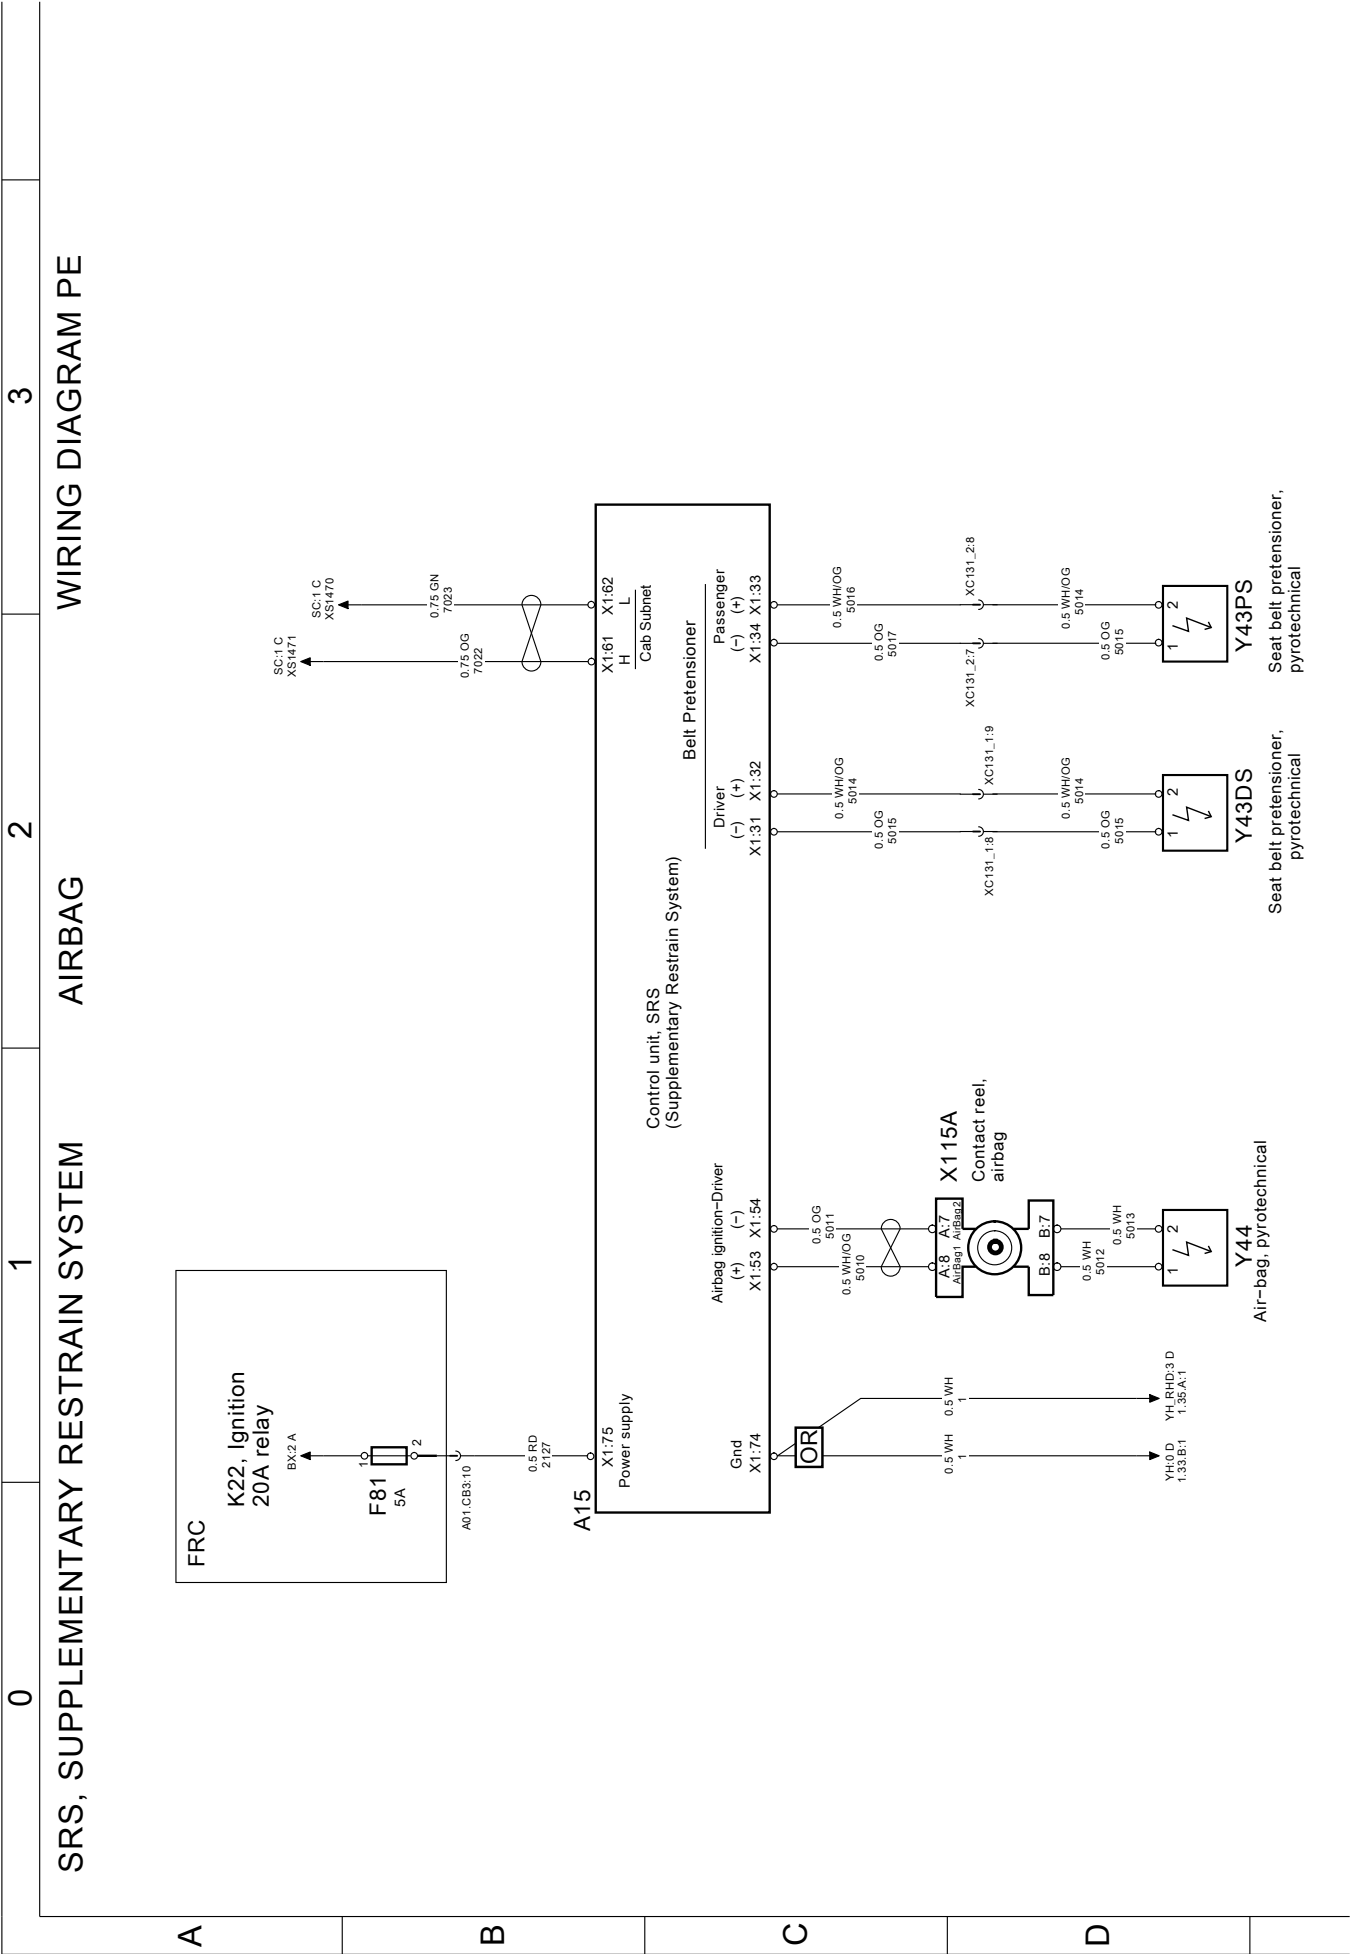

Power supply, BBOX-EF


The diagram illustrates the electrical wiring for the power supply system. Key components and labels include:

- (CAB) 1.0**: Main power source connection.
- (Instrument)**: XC205 (B+), XC207 (9 YE).
- (2 GY)**: XC322 (Horn, Lamps).
- (Alt.2) (Engine)**: X54.
- (CAB)**: 5.2.
- (ECU, IOM-s)**: 3.1.
- (ADR3) (5.3, 5.6)**: 5.11.
- (Frame)**: 5.4.
- (Lower front) (ACTST-TO)**: 5.1.
- (FCIOM)**: A162.
- (X1, X2)**: Connections at the bottom left.
- (Main front)**: XC301 (2000), XC322 (2 GY).
- (Alt.2) (Engine)**: X54.
- (CAB)**: 5.2.
- (ECU, IOM-s)**: 3.1.
- (ADR3) (5.3, 5.6)**: 5.11.
- (Frame)**: 5.4.
- (Lower front) (ACTST-TO)**: 5.1.
- (FCIOM)**: A162.
- (X1, X2)**: Connections at the bottom right.
- (Main front)**: XC301 (2000), XC322 (2 GY).
- (Alt.2) (Engine)**: X54.
- (CAB)**: 5.2.
- (ECU, IOM-s)**: 3.1.
- (ADR3) (5.3, 5.6)**: 5.11.
- (Frame)**: 5.4.
- (Lower front) (ACTST-TO)**: 5.1.
- (FCIOM)**: A162.
- (X1, X2)**: Connections at the bottom right.
- (Main front)**: XC301 (2000), XC322 (2 GY).
- (Alt.2) (Engine)**: X54.
- (CAB)**: 5.2.
- (ECU, IOM-s)**: 3.1.
- (ADR3) (5.3, 5.6)**: 5.11.
- (Frame)**: 5.4.
- (Lower front) (ACTST-TO)**: 5.1.
- (FCIOM)**: A162.
- (X1, X2)**: Connections at the bottom right.

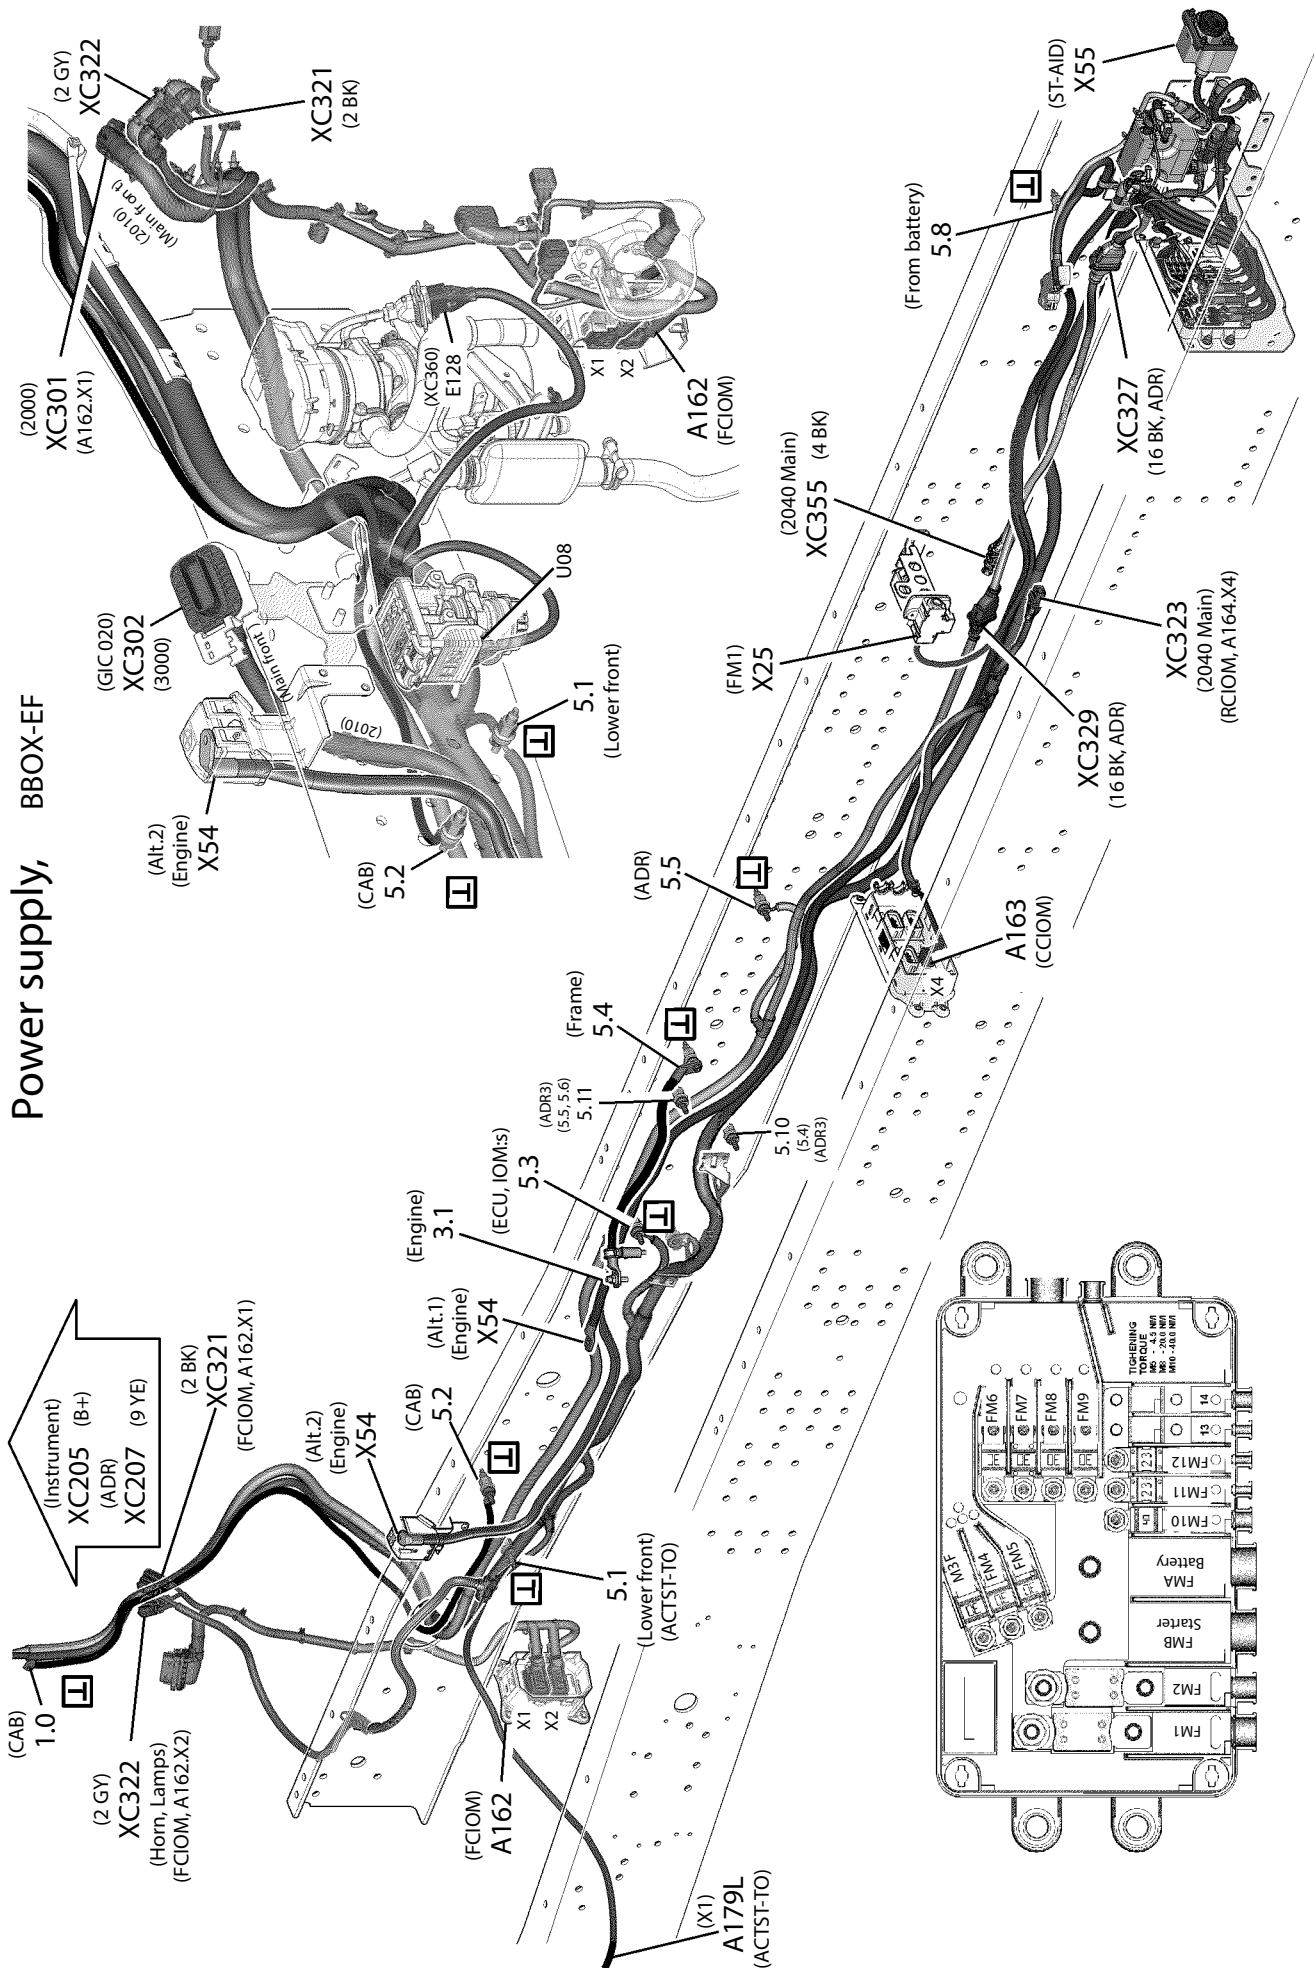


35	Actuator supply-1	2052	DK:1 D
35	Supply to Adblue loads	2155	DM:1 D
36	PWT subnet terminal resistor strap	7040	DC:3 C
38	Neutral feedback sensor	0048	DC:1 C
39	Ground	1	DC:0 C

XC310

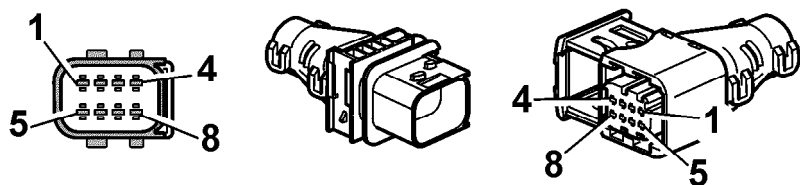

T3071145


Alternative connector

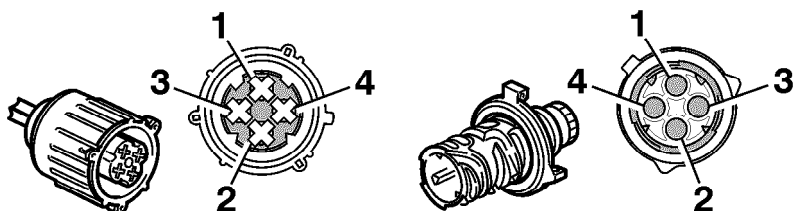

T3019922

Pin no:	Circuit function	Wiring no:	Diagram
1	ECS level sensor supply 2	2081	FA:2 C
2	ECS level sensor ground 2	0121	FA:2 C
3	ECS Front Level sensor signal 2	0235	FA:2 C
4	ECS level sensor signal 1	0181	FA:2 C
5	ECS pressure sensor supply 1	2080	FA:1 C
6	ECS pressure sensor ground 1	1036	FA:1 C
8	ECS Front Pressure sensor signal 2	0234	FA:1 C

XC311

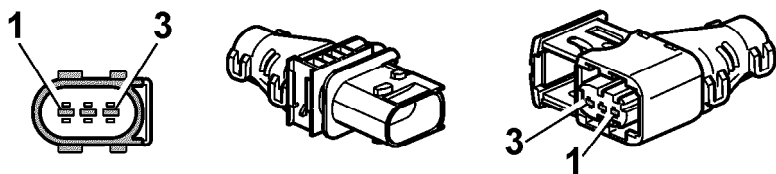

T3071121

Pin no:	Circuit function	Wiring no:	Diagram
1	Front wheel diff lock switch	0058	DG:2 B
3	Manual Gearbox sensors & valves gnd	1073	DG:2 D