

# Contents

<b>Example of wiring diagram .....</b>	<b>2</b>
<b>Examples of symbols on wiring diagram .....</b>	<b>3</b>
<b>Component wiring diagram index .....</b>	<b>5</b>
<b>Component wiring diagrams .....</b>	<b>7</b>
<b>Illustrations index .....</b>	<b>56</b>
<b>Illustrations .....</b>	<b>58</b>
<b>Circuit card electrical centre .....</b>	<b>125</b>
<b>Fuses on circuit card electrical centre .....</b>	<b>126</b>
<b>Relays on circuit card electrical centre .....</b>	<b>127</b>
<b>Cable harness illustration index .....</b>	<b>128</b>
<b>List of connectors .....</b>	<b>132</b>
<b>List of components .....</b>	<b>140</b>
<b>Abbreviations .....</b>	<b>146</b>
<b>Cable colour code .....</b>	<b>147</b>
<b>Feedback</b>	


	Bulb
	Bulb, full beams and dipped beams
	Bulb, tail light
	Alternator
	Starter motor
	Washer motor
	Windscreen wiper motor
	Solenoid valve with diode
	Pressure sensor
	Temperature sensor
	Level sensor
	Starting heater
	Cigarette lighter
	Horn
	Rheostat
	Buzzer
	Loudspeaker


# Component wiring diagram index

<b>AA</b>	Power supply, starting system, immobiliser .....	page 7
<b>AC</b>	Vehicle ECU .....	page 8
<b>BJ</b>	Engine ECU, fuel injection system, preheating, FM7 .....	page 9
<b>BL</b>	Engine ECU, fuel injection system, preheating, FM12 .....	page 10
<b>BM</b>	Engine ECU, fuel injection system, preheating, FM10 .....	page 11
<b>CE</b>	Head light, parking light, marker light, DRL .....	page 12
<b>CG</b>	Fog light, rear fog light .....	page 13
<b>CH</b>	Spot light (STD) DRIVL2 .....	page 14
<b>CI</b>	Spot light (EU) DRIVL2EC .....	page 14
<b>CK</b>	Brake light .....	page 15
<b>CL</b>	Trailer controlled exhaust brake .....	page 15
<b>CN</b>	Direction indicator, hazard warning light .....	page 16
<b>EA</b>	Reversing light, reversing warning alarm .....	page 16
<b>ED</b>	Loading light, fifth wheel light .....	page 17
<b>EJ</b>	Roof sign light, L1H1/L2H1 .....	page 17
<b>EK</b>	Roof sign light, L2H2 .....	page 17
<b>ER</b>	Interior light, L1H1/ L2H1, alarm clock/timer .....	page 18
<b>ES</b>	Interior light, L2H2, alarm clock/timer .....	page 19
<b>EV</b>	Cigarette lighter .....	page 20
<b>EX</b>	12 V power supply .....	page 20
<b>FA</b>	Horn .....	page 20
<b>GA</b>	Wiper, washer .....	page 21
<b>HA</b>	Climate unit .....	page 22
<b>HB</b>	Cab heater, EBERSPÄCHER D1LCC, PH-CAB .....	page 23
<b>HC</b>	Cab and engine heater, WEBASTO THERMO 90, PH-ENGCA .....	page 24
<b>HD</b>	Short stop cabheater .....	page 24
<b>HE</b>	Electrically heated and adjusted seat .....	page 25
<b>HG</b>	Electrically heated mirrors .....	page 25
<b>HH</b>	Electrically operated mirrors .....	page 26
<b>HK</b>	Air dryer .....	page 26
<b>HM</b>	Fuel filter heater .....	page 26
<b>HP</b>	Electrically cab tilt .....	page 27
<b>JA</b>	Radio .....	page 27
<b>KA</b>	Electrically operated window winders .....	page 28

<b>KE</b>	SRS, air-bag .....	page 28
<b>KH</b>	Central door lock .....	page 29
<b>LD</b>	Power take-off .....	page 29
<b>LE</b>	Double power take-off .....	page 30
<b>LG</b>	Differential lock .....	page 30
<b>LJ</b>	Bogie lift, tag axle lock, RADT-LA .....	page 31
<b>LL</b>	Tag axle lock, RADT-A6S .....	page 31
<b>LO</b>	Geartronic, automatic gearshift .....	page 32
<b>LP</b>	Powertronic .....	page 33
<b>LS</b>	GLU, gear selector, Geartronic .....	page 34
<b>MA</b>	Bogie lift hydraulic, RADT-AR .....	page 35
<b>MD</b>	Bogie lift hydraulic, with axle load limiter, RADT-AR .....	page 36
<b>ME</b>	Air suspension, 6x2/6x4/8x2/8x4, SUSPL-EC .....	page 37
<b>MF</b>	Air suspension, 4x2, SUSPL-EC .....	page 38
<b>MG</b>	Rear air suspension, 4x2, TRACTOR, SUSPL-EC .....	page 39
<b>NA</b>	Instrument LHS module .....	page 40
<b>NB</b>	Instrument central module with tachograph .....	page 41
<b>NC</b>	Instrument RHS module .....	page 42
<b>NX</b>	Dynafleet .....	page 43
<b>NZ</b>	Instrument central module without tachograph .....	page 44
<b>OA</b>	Basic ABS, D-version .....	page 45
<b>OB</b>	ABS/ASR, D-version .....	page 46
<b>OG</b>	Retarder, manual gearshift .....	page 47
<b>PA</b>	Headlight level control .....	page 48
<b>PD</b>	Dual speed limiter .....	page 48
<b>TA</b>	Refrigerator .....	page 49
<b>TB</b>	Central lubrication system .....	page 49
<b>XA</b>	Extra fuses, key switch relay .....	page 50
<b>ZA</b>	Earth connections .....	page 51
<b>ZB</b>	Earth connections .....	page 52
<b>ZD</b>	ADR battery main switch, current limiter .....	page 53
<b>ZE</b>	Air heater EBERSPÄCHER D1LCC, TRS .....	page 54
<b>ZG</b>	Water heater, WEBASTO THERMO 90, TRS .....	page 55

# Component wiring diagrams

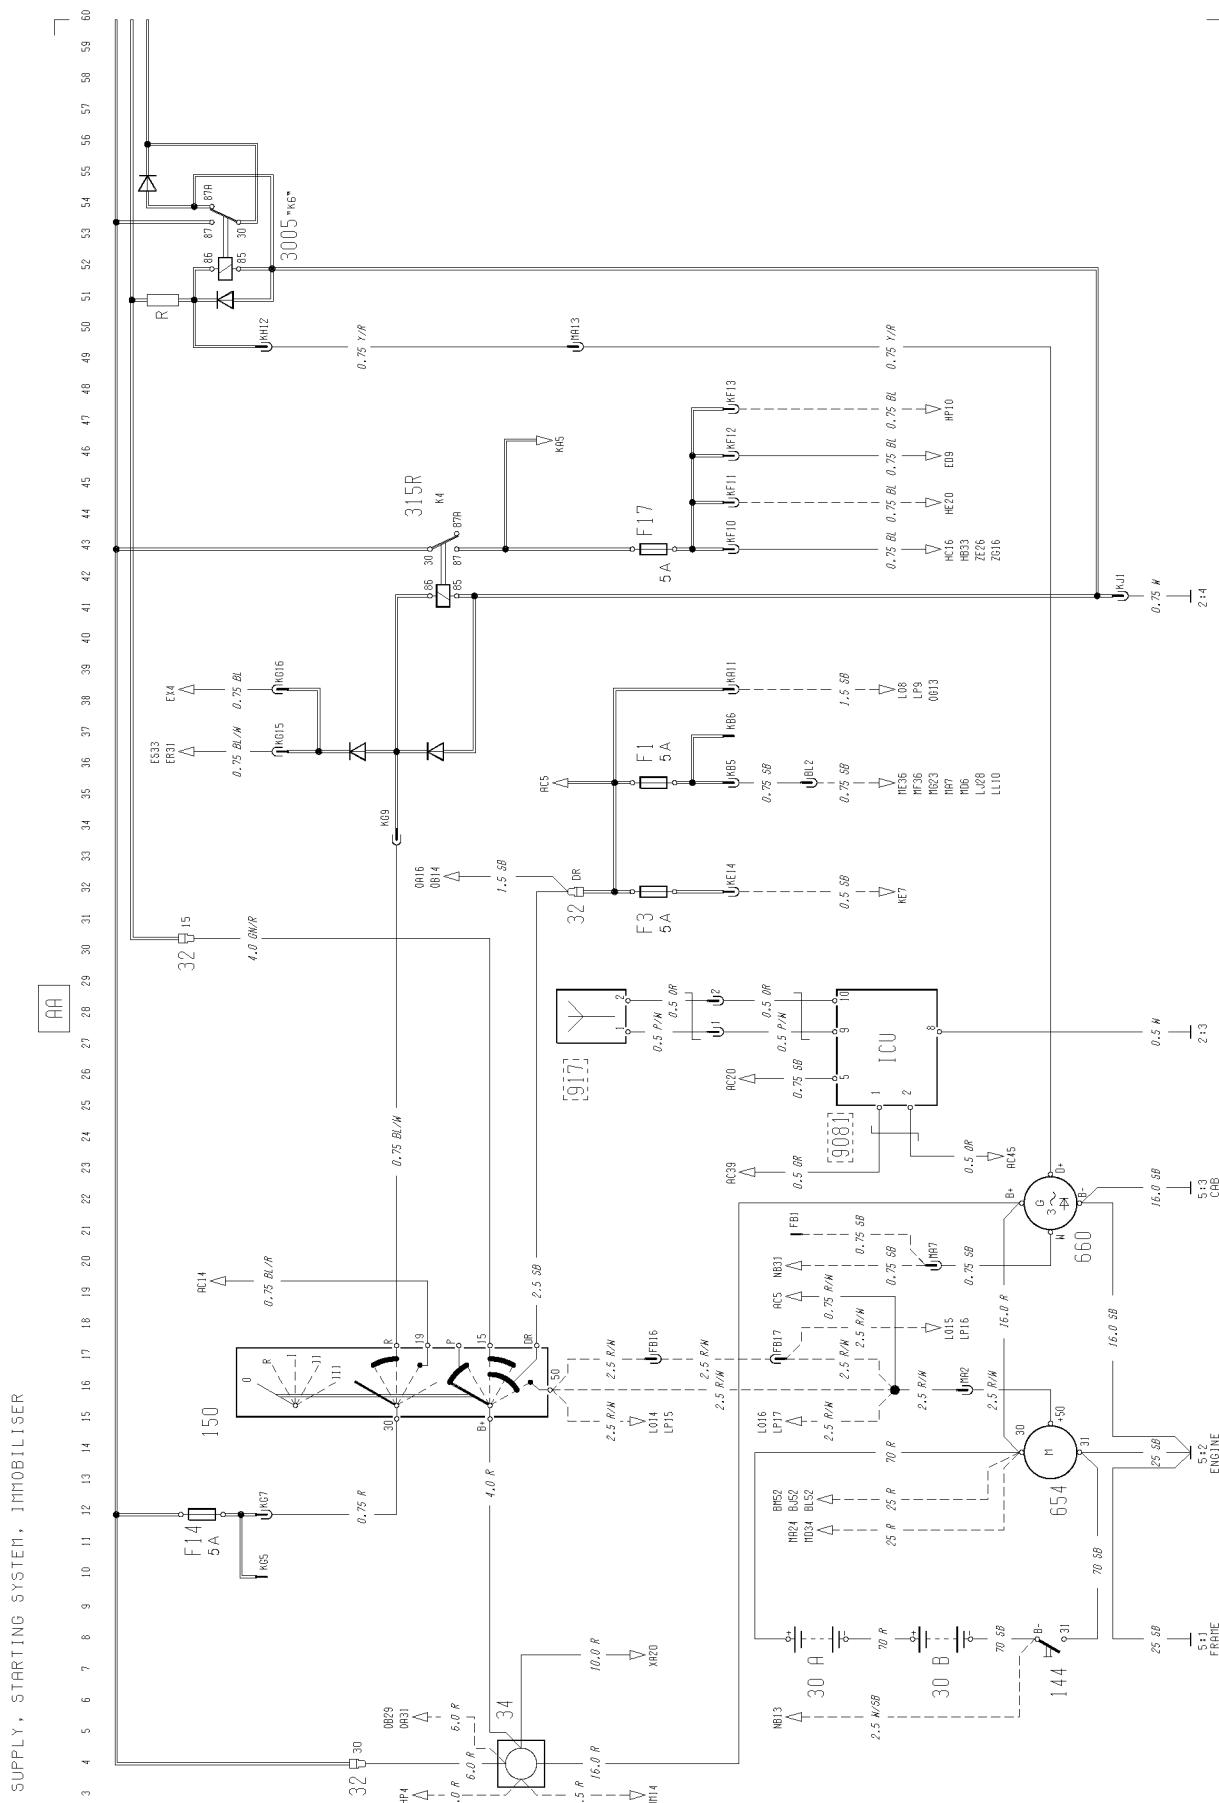


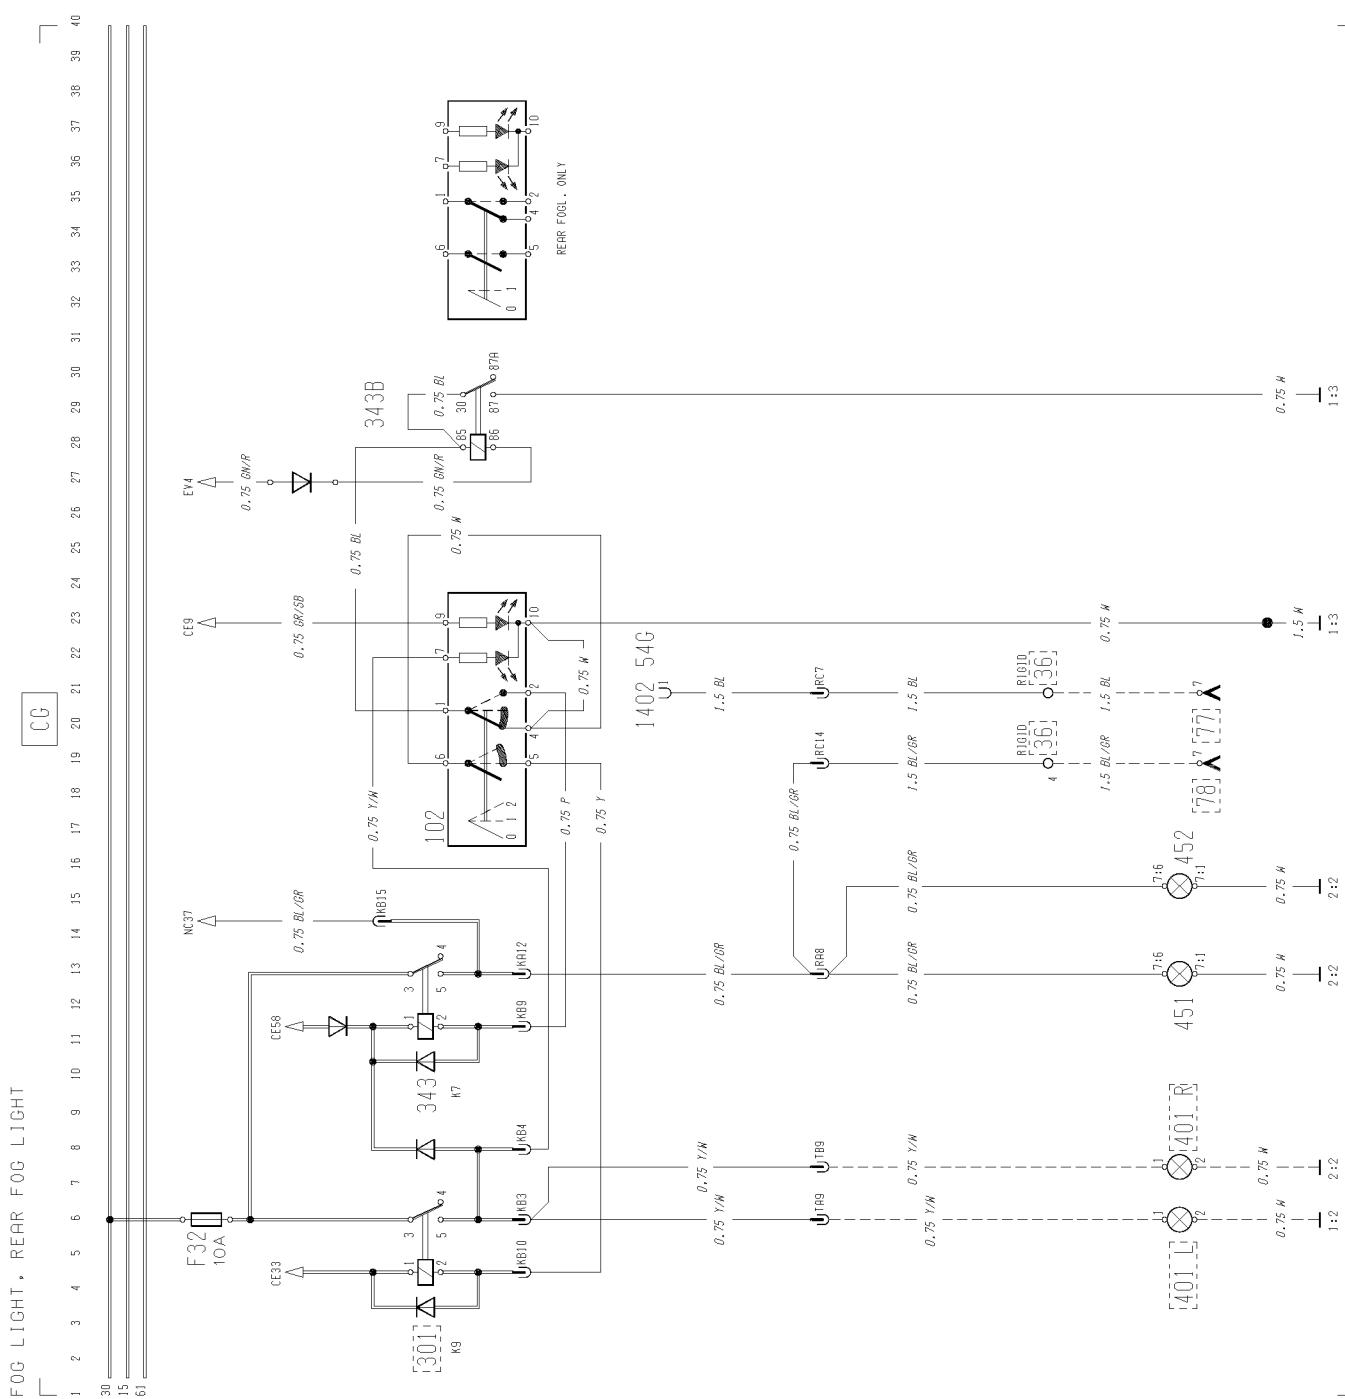

T3011498


## EL. WINDOW WINDERS

28

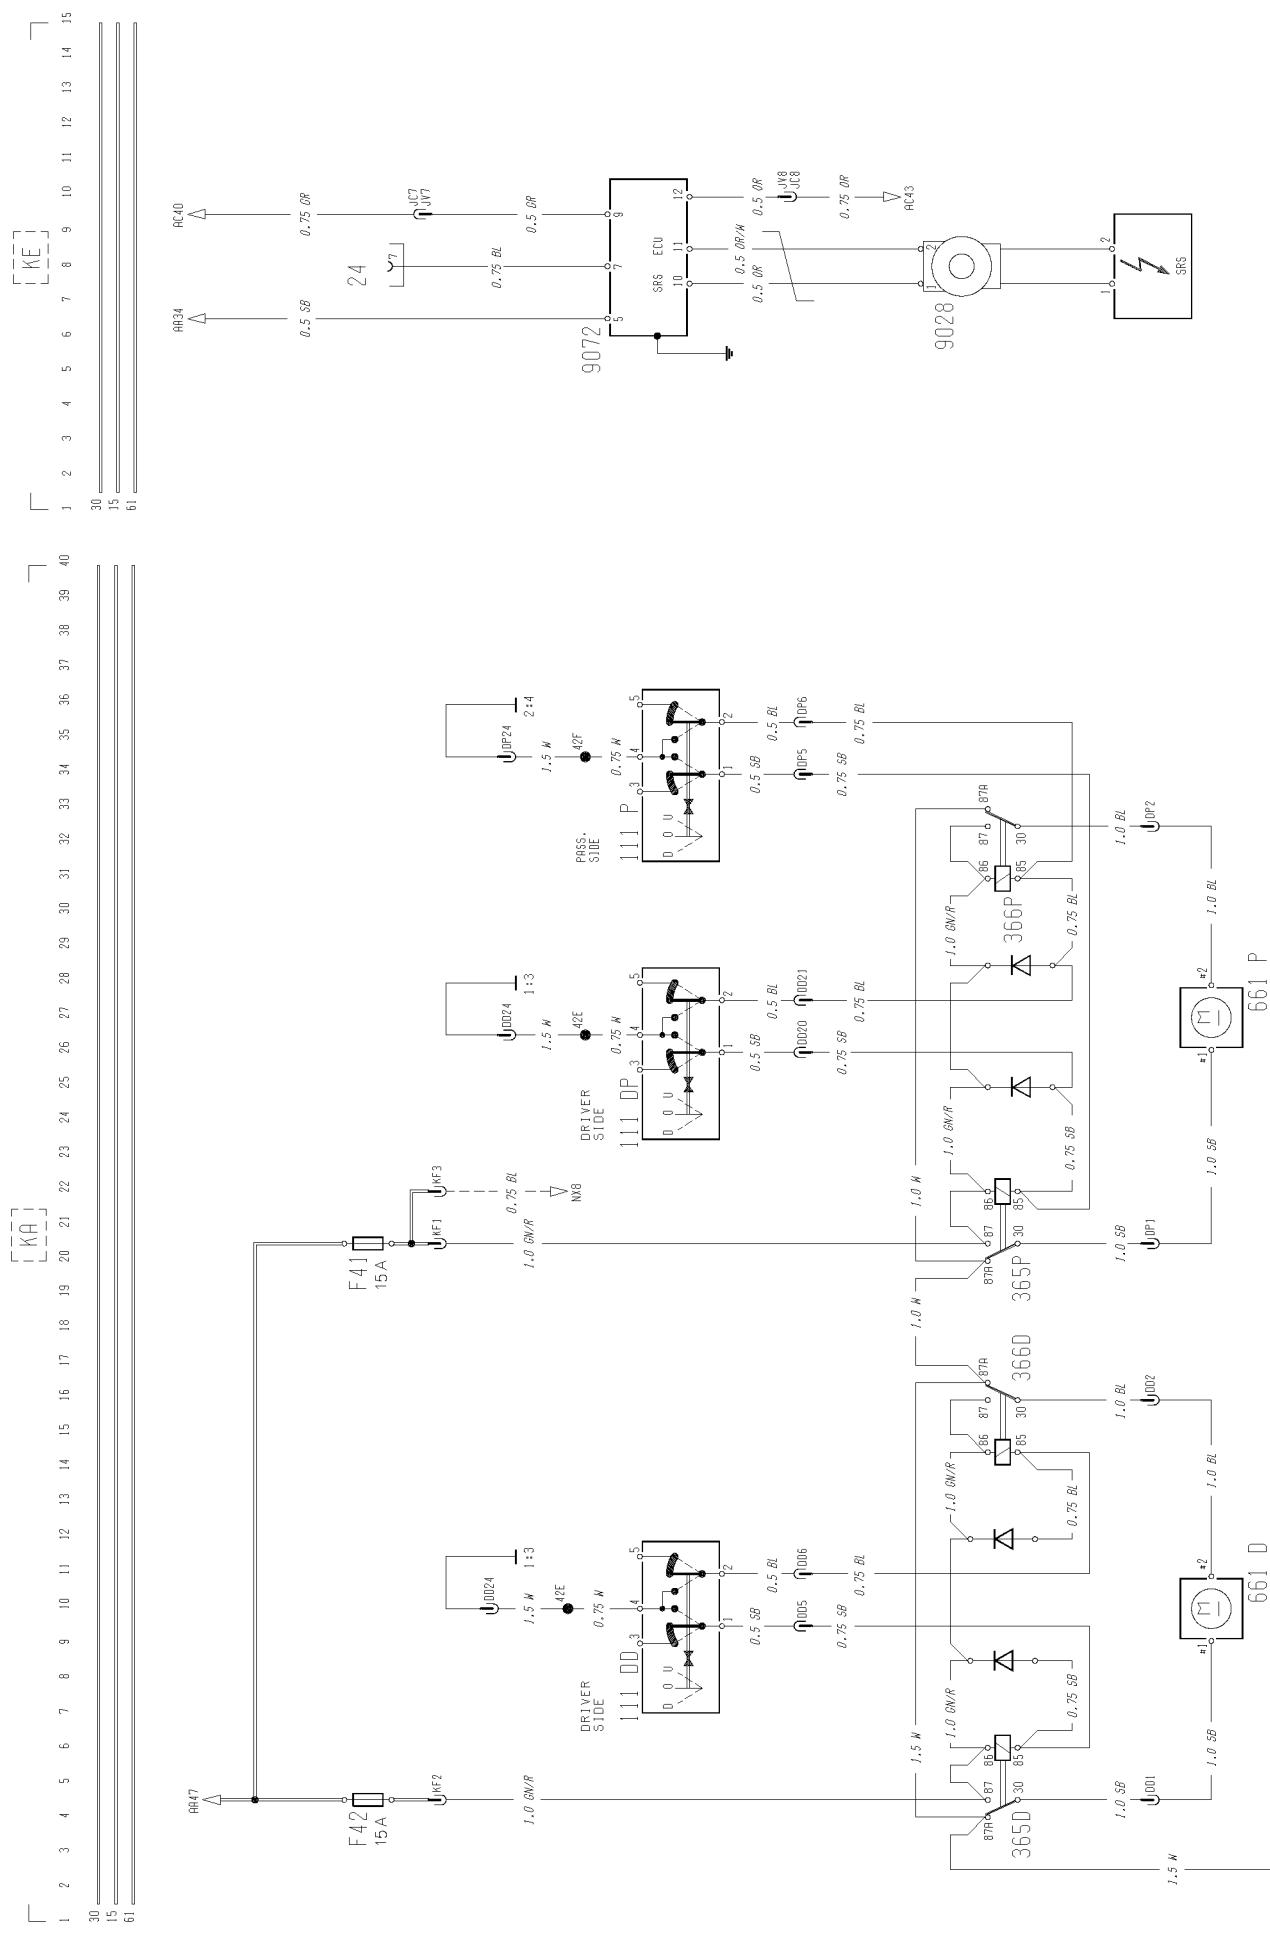



T3011407


## SRS, AIR-BAG

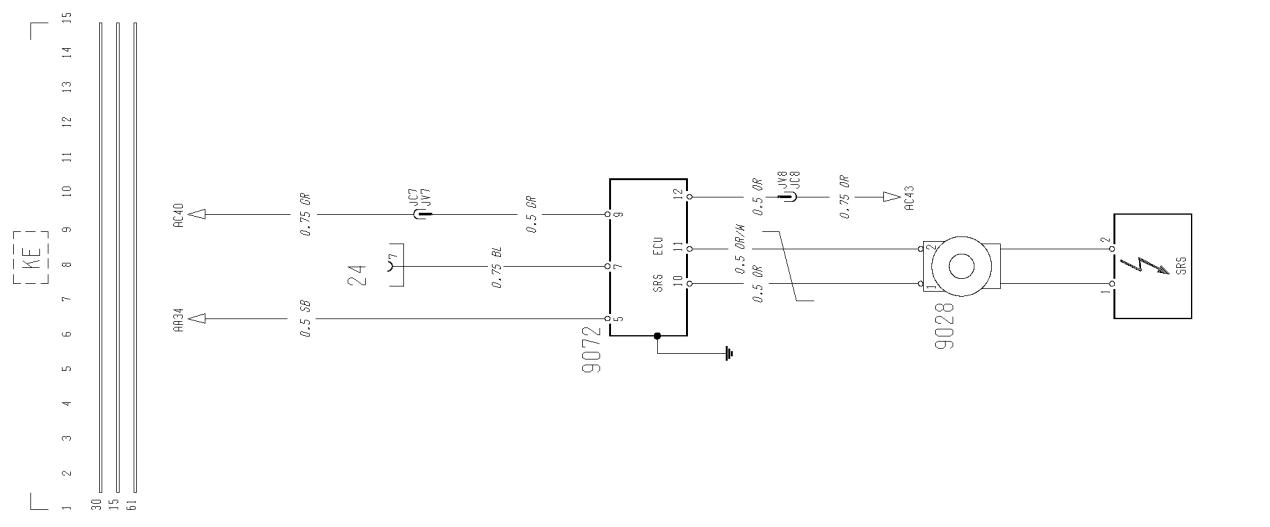



## INSTRUMENT - CENTRE MODULE WITHOUT TACHOGRAPH

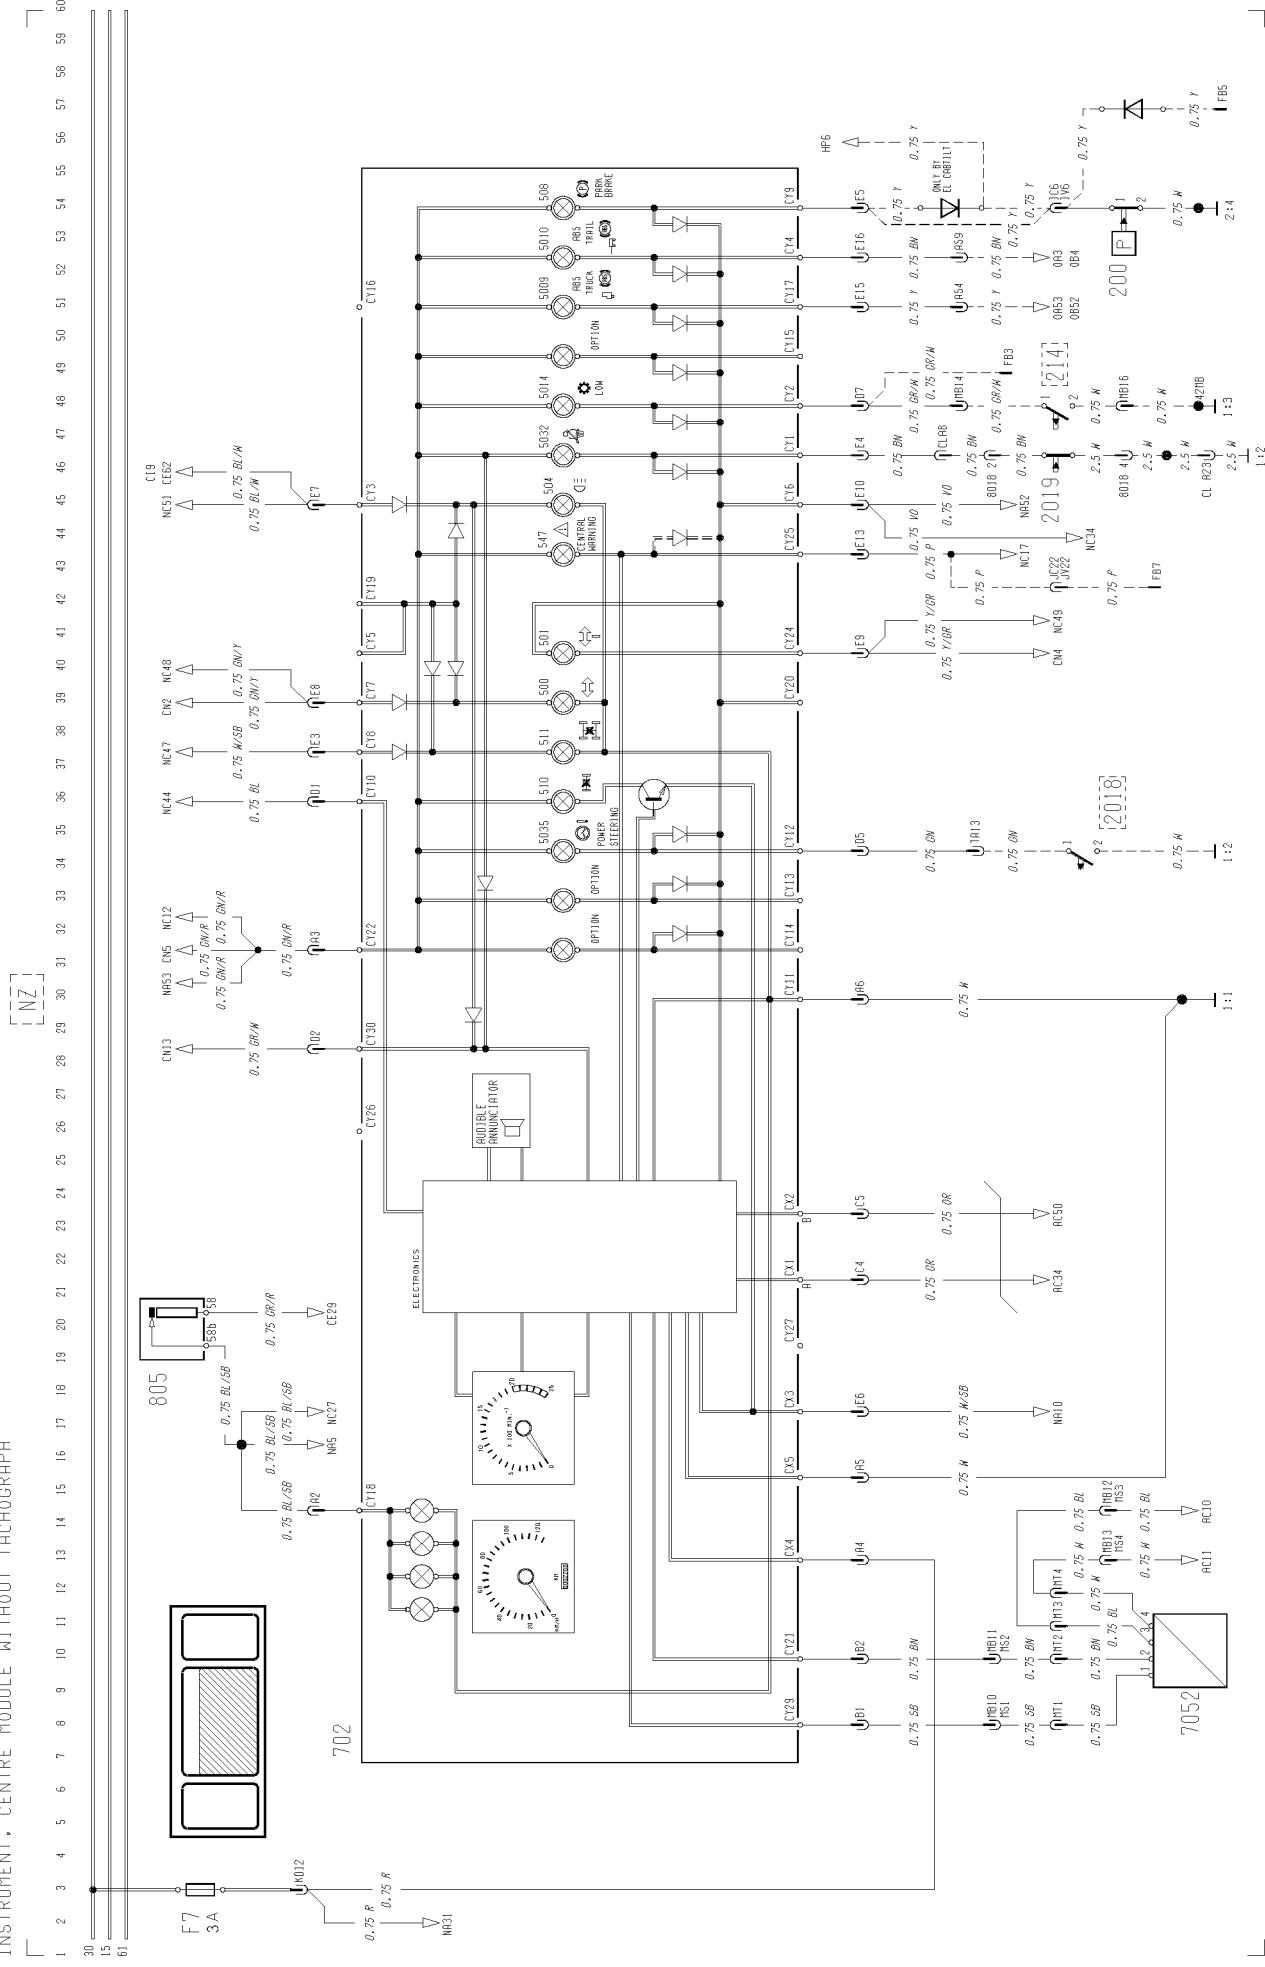

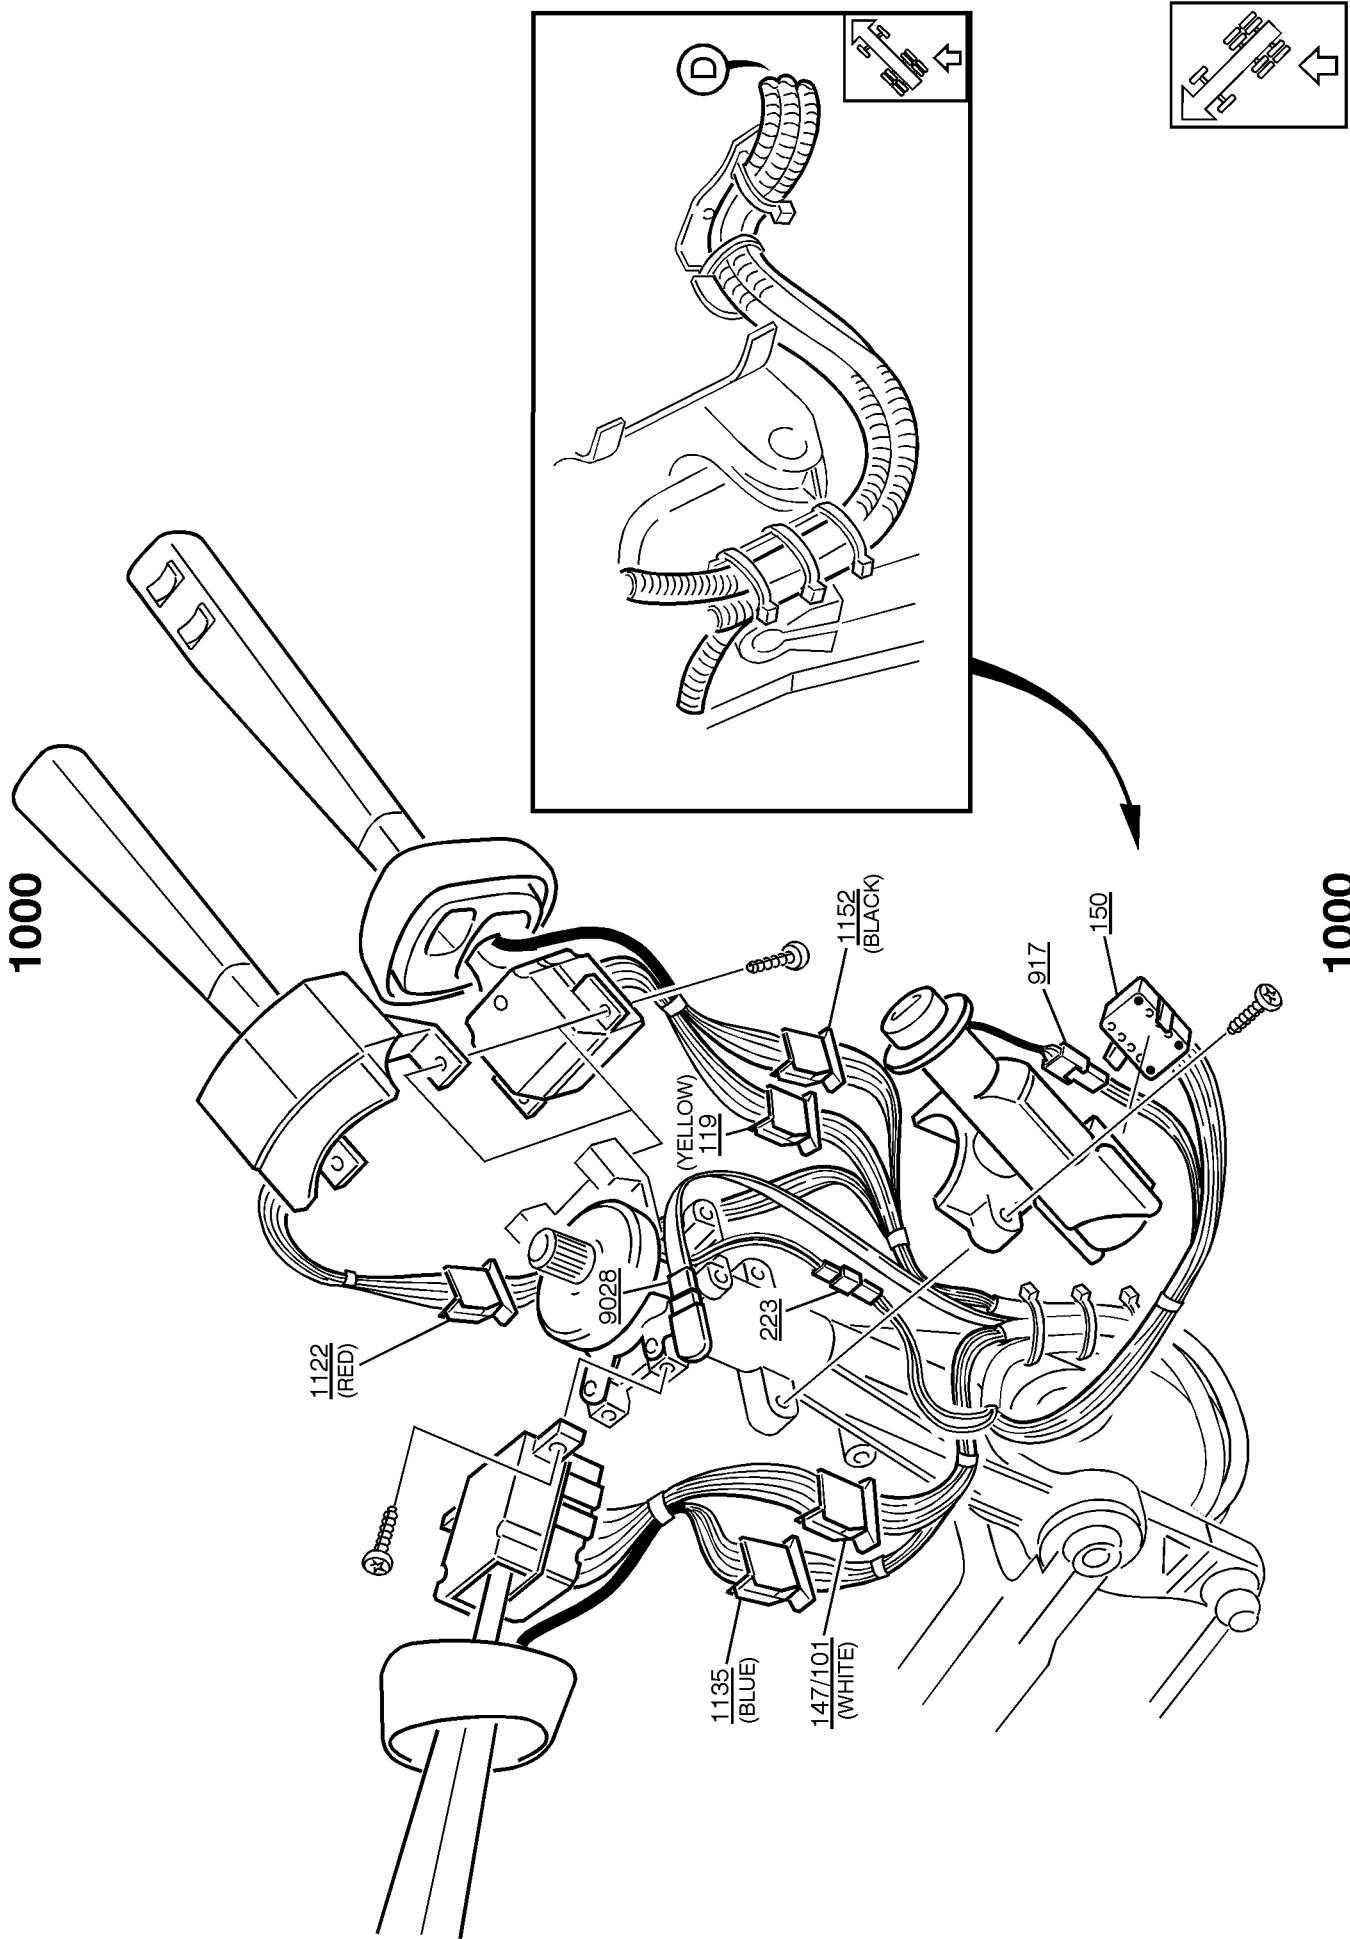


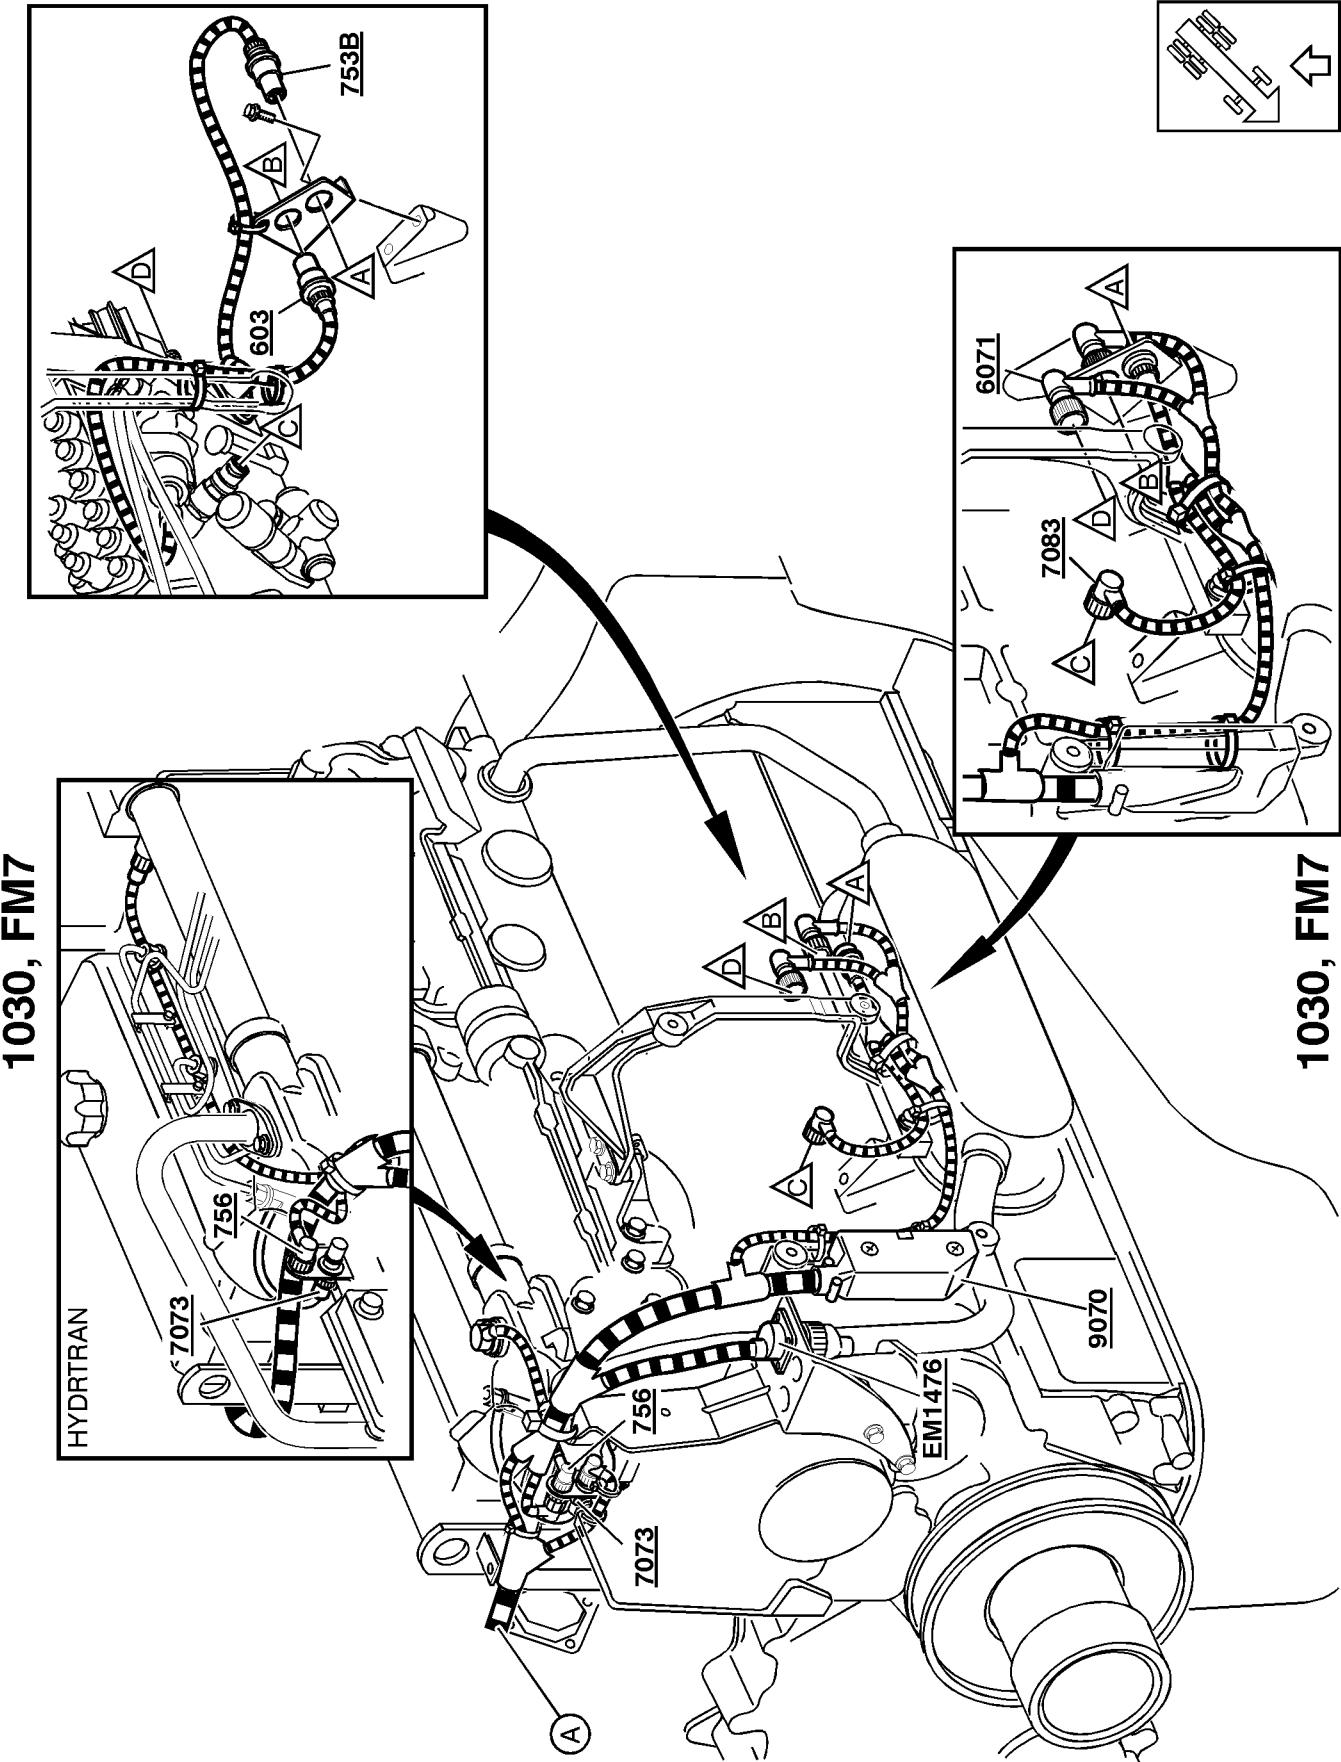

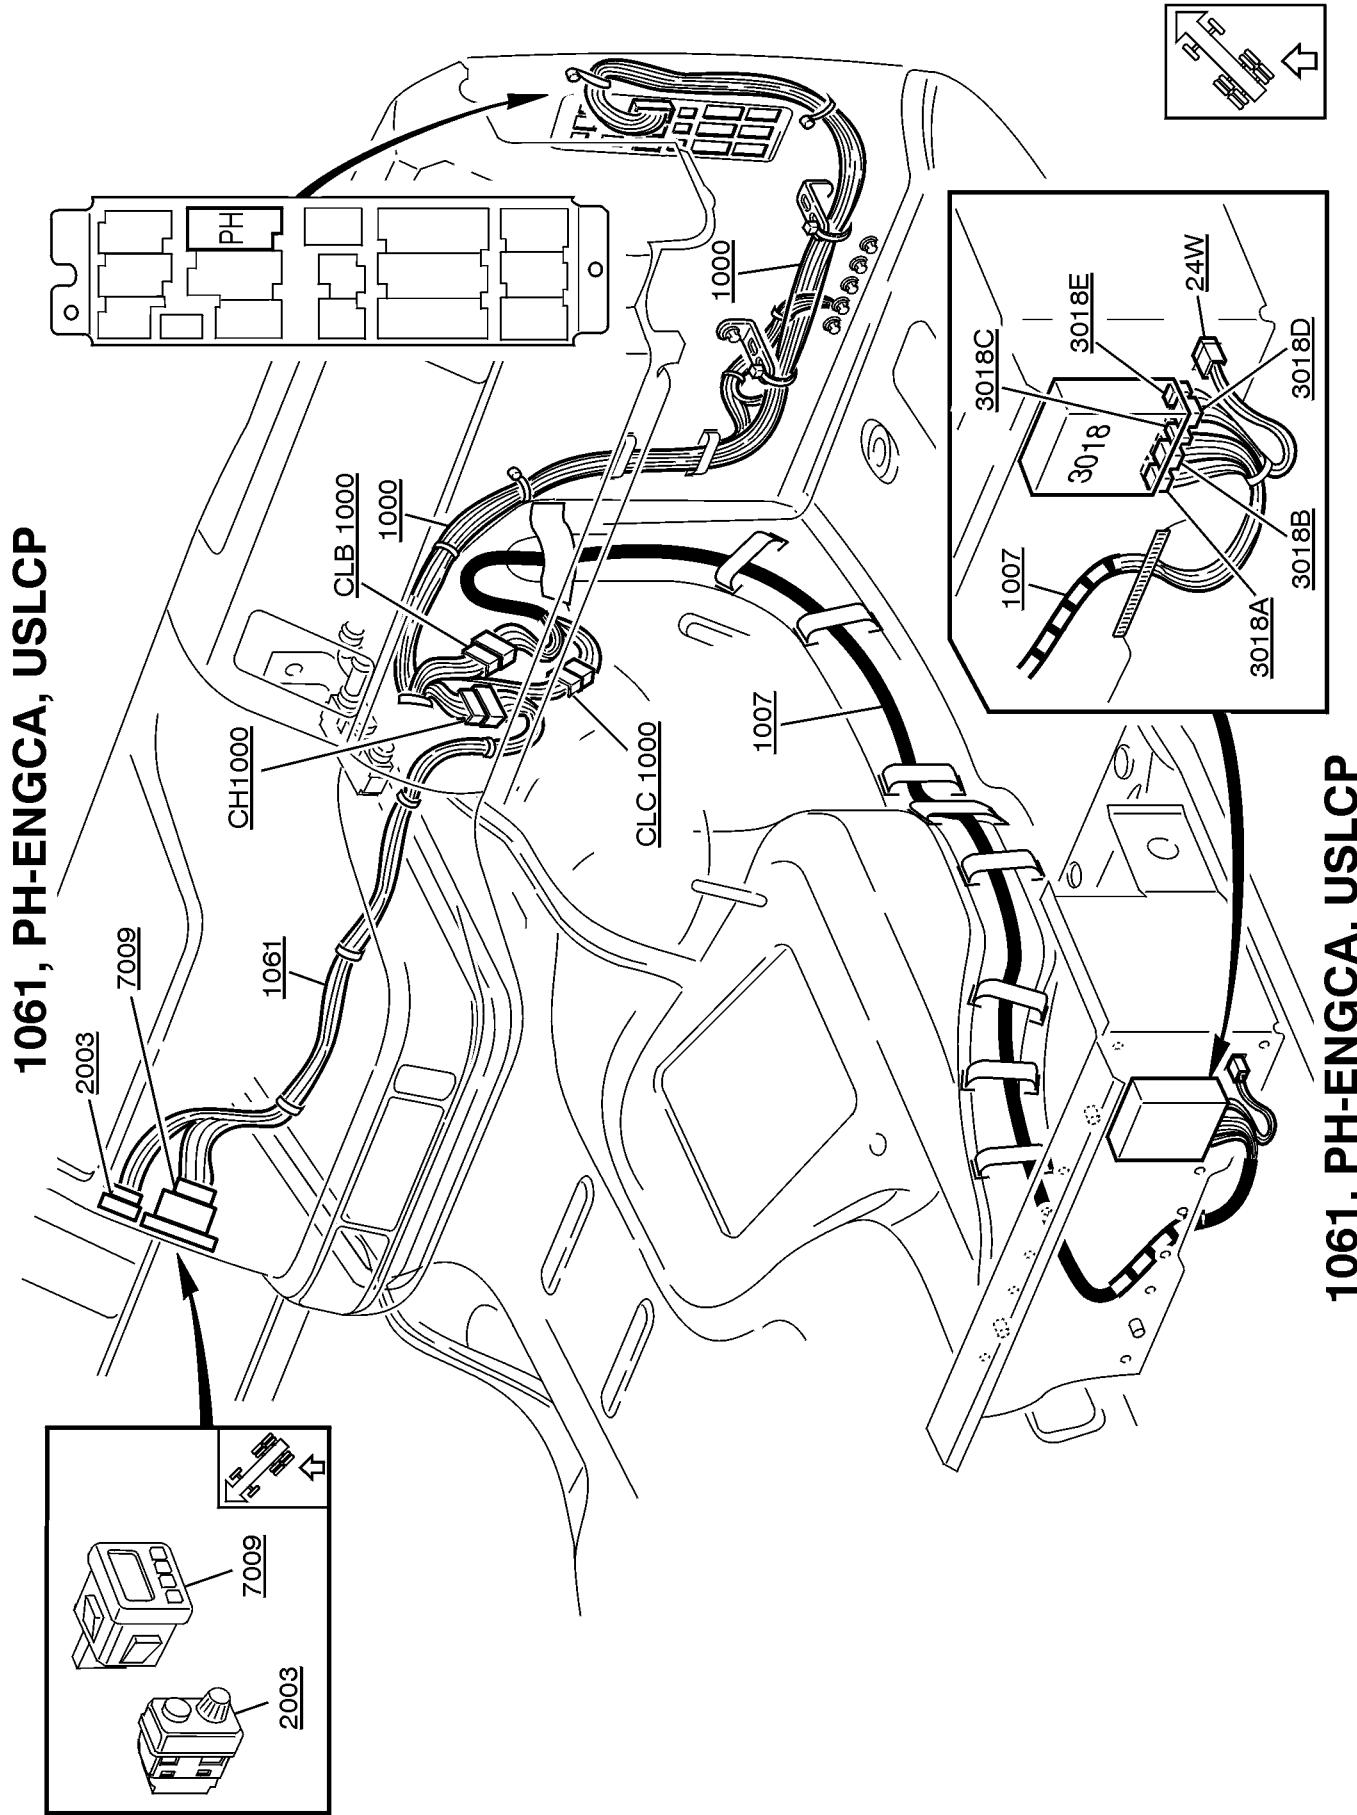
**1061, PH-ENGCA, USLCP****1061, PH-ENGCA, USLCP**

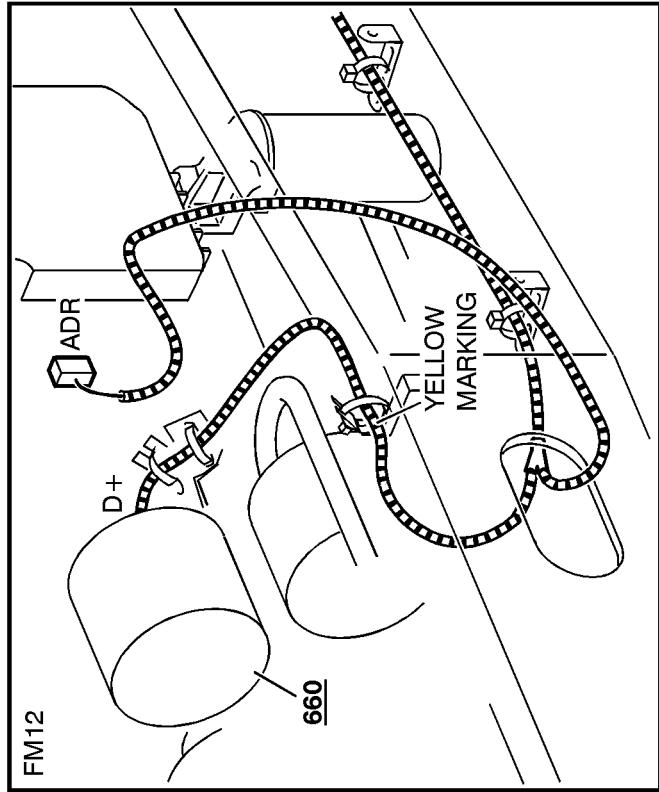


1404

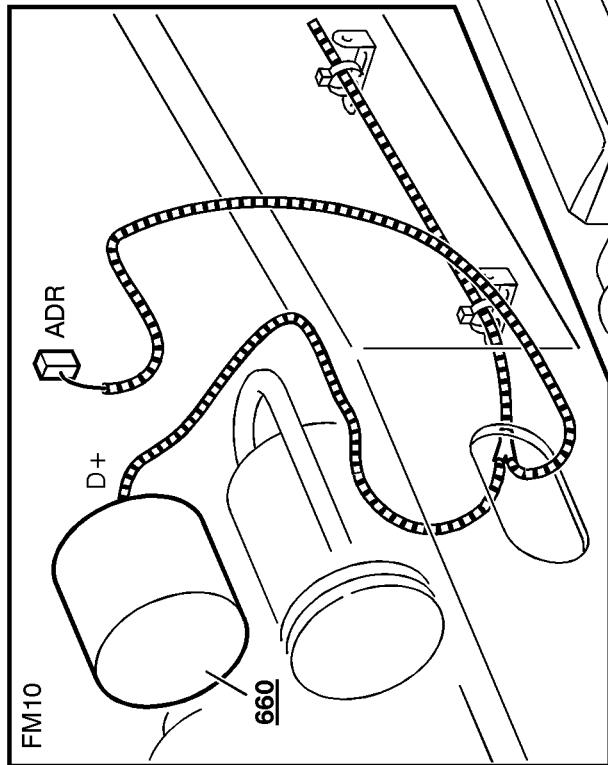



106

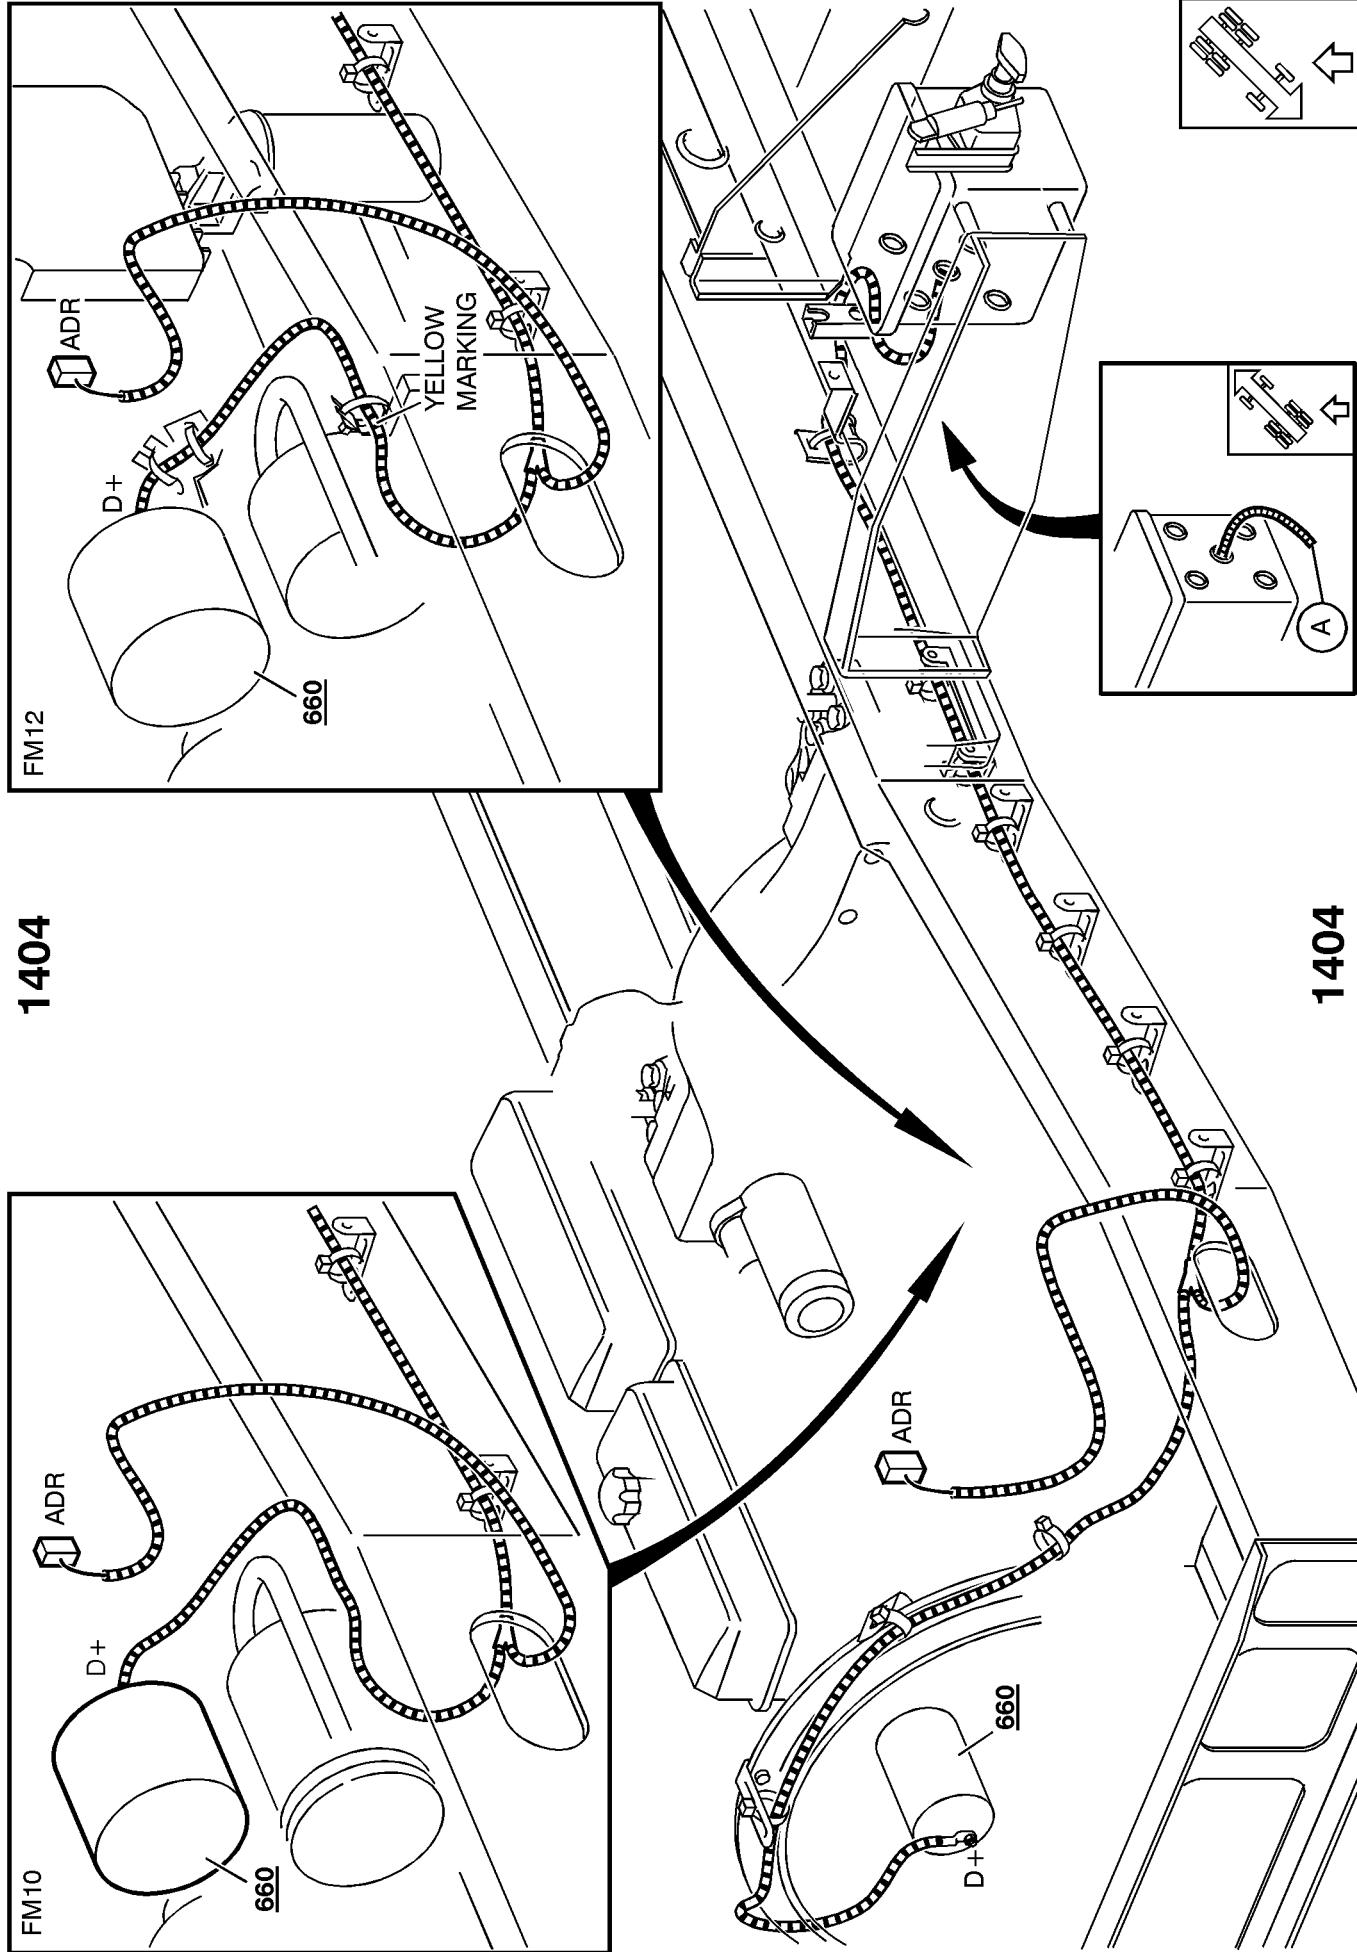


T3011486



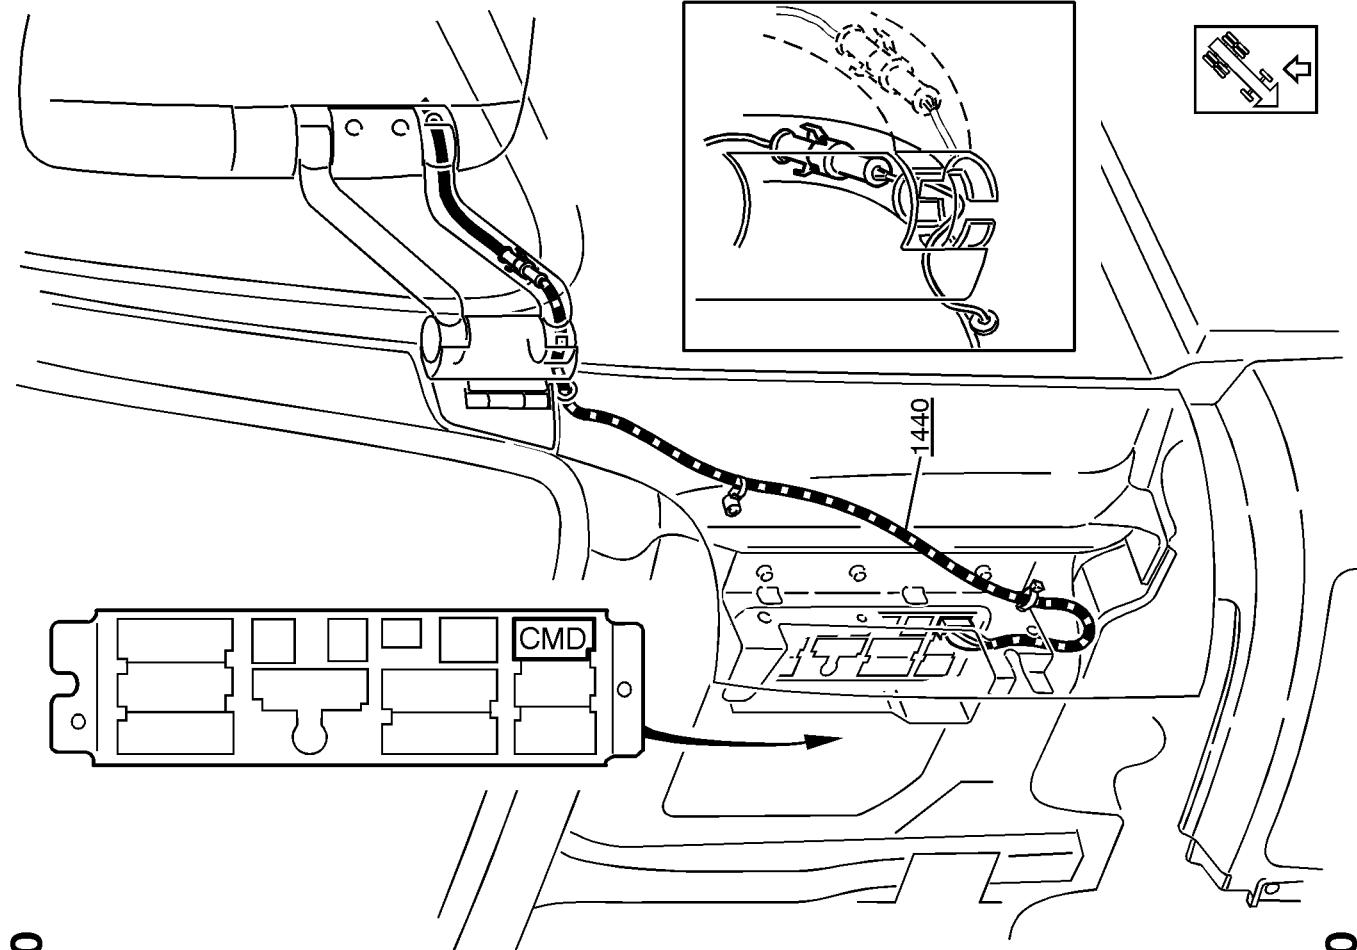


1440

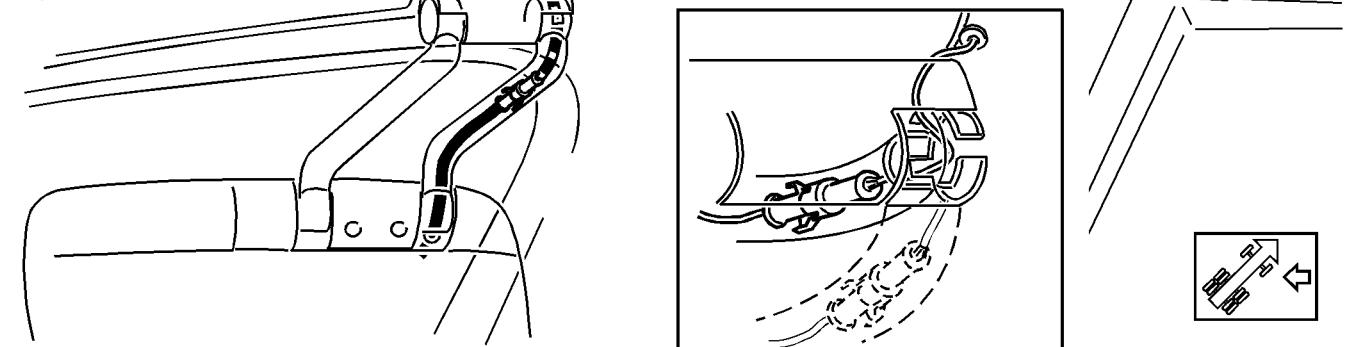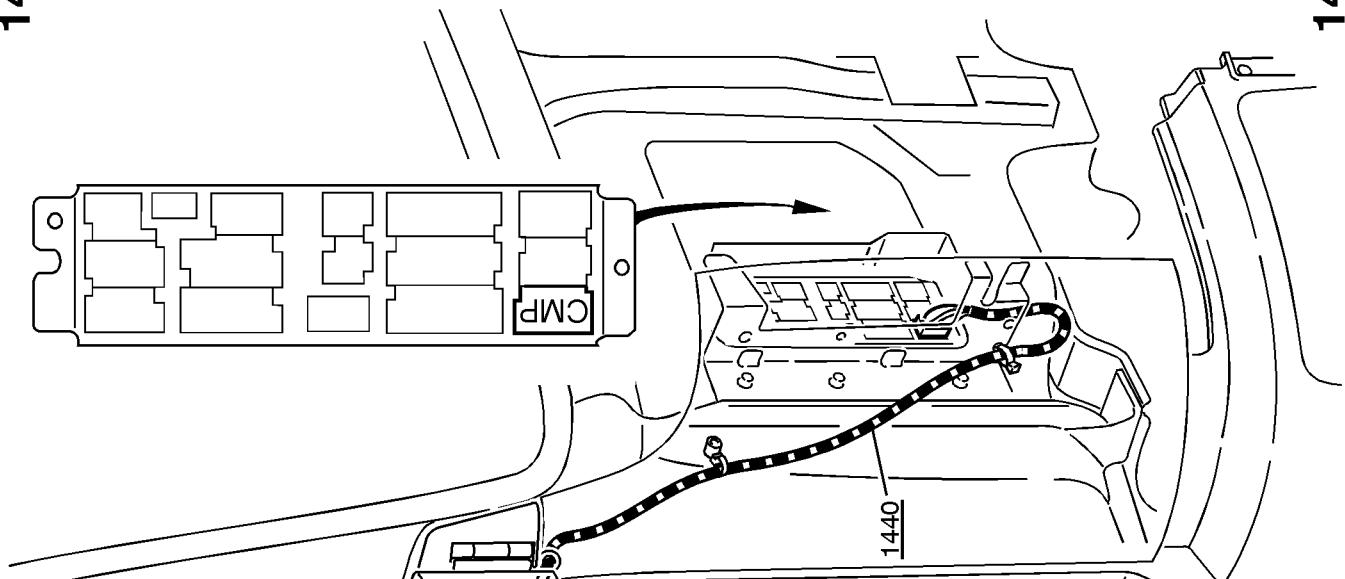

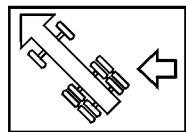

1413, 1487

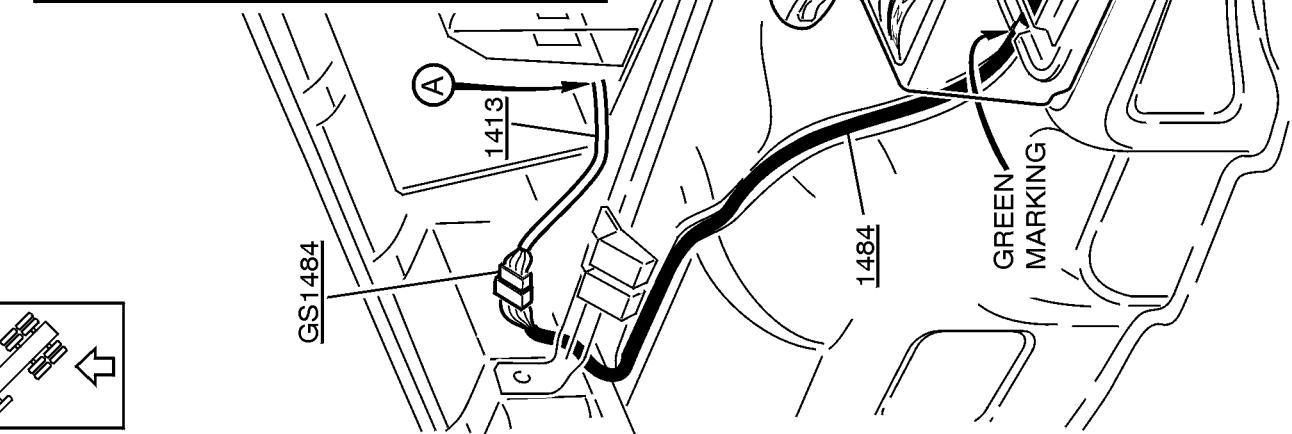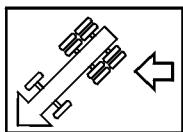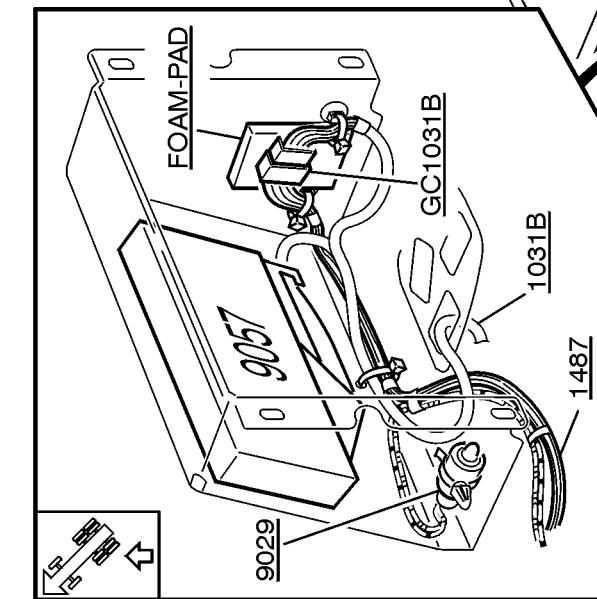

1413, 1487

CY19	(NZ42)	DP24	(ER21)	EA18	(BL10)
CY20	(NZ39)	DP24	(ES20)	EA18	(BM54)
CY21	(NZ10)	DP24	(KA16)	EA21	(BJ54)
CY22	(NZ32)	DP24	(KH9)	EA22	(BL30)
CY24	(NZ41)	DP24	(ZB36)	EA23	(BL32)
CY25	(NZ44)	E1	(NB23)	EA24	(BL39)
CY26	(NZ26)	E2	(NB26)	EA25	(BJ26)
CY27	(NZ20)	E3	(NB39)	EA25	(BL21)
CY29	(NZ8)	E3	(NZ38)	EA25	(BM26)
CY30	(NZ29)	E4	(NB47)	EA27	(BJ4)
D1	(NB27)	E4	(NZ47)	EA27	(BL4)
D1	(NZ36)	E5	(NB56)	EA27	(BM4)
D2	(NB31)	E5	(NZ54)	EA28	(BJ14)
D2	(NZ29)	E6	(NB25)	EA29	(BJ45)
D3	(NB33)	E6	(NZ18)	EA29	(BM45)
D4	(NB34)	E7	(NB45)	EA30	(BJ6)
D5	(NB36)	E7	(NZ45)	EA30	(BL6)
D5	(NZ35)	E8	(NB40)	EA30	(BM6)
D6	(NB31)	E8	(NZ39)	EA31	(BJ7)
D7	(NB50)	E9	(NB42)	EA31	(BL7)
D7	(NZ48)	E9	(NZ41)	EA31	(BM7)
D8	(NB30)	E10	(NB47)	EA33	(BL44)
DD1	(KA21)	E10	(NZ45)	EA34	(BL35)
DD2	(KA33)	E12	(NB40)	EA35	(BL36)
DD3	(KH16)	E13	(NB43)	EA36	(BL38)
DD4	(KH17)	E13	(NZ44)	EB1	(BJ34)
DD5	(KA26)	E14	(NB51)	EB1	(BL34)
DD6	(KA28)	E15	(NB52)	EB1	(BM34)
DD7	(KH17)	E15	(NZ51)	EB2	(BJ36)
DD8	(KH20)	E16	(NB54)	EB2	(BL36)
DD9	(KH21)	E16	(NZ53)	EB2	(BM36)
DD10	(JA12)	EA1	(BJ29)	EB3	(BJ9)
DD11	(JA13)	EA1	(BL23)	EB3	(BL9)
DD12	(ER4)	EA1	(BM29)	EB3	(BM9)
DD12	(ES4)	EA2	(BJ17)	EB4	(BJ28)
DD13	(HH10)	EA2	(BL12)	EB4	(BL27)
DD14	(HH11)	EA2	(BM17)	EB4	(BM28)
DD15	(HH14)	EA3	(BJ19)	EB5	(BJ52)
DD16	(HH4)	EA3	(BL13)	EB5	(BL52)
DD17	(HH5)	EA3	(BM18)	EB5	(BM52)
DD18	(HH8)	EA4	(BJ18)	EB7	(BJ17)
DD19	(HH12)	EA4	(BL13)	EB7	(BL17)
DD20	(KA8)	EA4	(BM18)	EB7	(BM17)
DD21	(KA9)	EA5	(BJ24)	EB8	(BJ18)
DD22	(ER9)	EA5	(BL18)	EB8	(BL19)
DD22	(ES8)	EA5	(BM24)	EB8	(BM18)
DD24	(ER5)	EA7	(BJ9)	EB9	(BJ54)
DD24	(ES3)	EA7	(BL9)	EB9	(BL53)
DD24	(HH3)	EA7	(BM53)	EB9	(BM53)
DD24	(HH9)	EA8	(BJ51)	EB10	(B55)
DD24	(KA8)	EA8	(BM50)	EB10	(BL55)
DD24	(KA17)	EA9	(BJ53)	EB10	(BM55)
DD24	(KA20)	EA10	(BJ52)	EB11	(BJ23)
DD24	(ZA50)	EA10	(BM52)	EB11	(BL23)
DP1	(KA3)	EA11	(BL29)	EB11	(BM23)
DP2	(KA14)	EA12	(BL33)	EB12	(BJ24)
DP5	(KA16)	EA13	(BJ3)	EB12	(BL25)
DP6	(KA17)	EA13	(BL3)	EB12	(BM24)
DP7	(KH8)	EA13	(BM3)	EB13	(BJ11)
DP8	(KH12)	EA14	(BJ30)	EB13	(BL11)
DP9	(KH13)	EA14	(BL24)	EB13	(BM11)
DP10	(JA15)	EA14	(BM29)	EB15	(BJ5)
DP11	(JA16)	EA16	(BJ49)	EB15	(BL5)
DP12	(ER19)	EA16	(BM49)	EB15	(BM5)
DP12	(ES19)	EA17	(BJ47)	EB17	(BJ20)
DP22	(ER16)	EA17	(BM47)	EB17	(BL21)
DP22	(ES17)	EA18	(BJ10)	EB17	(BM20)