

Abbreviations	3
How to use the wiring diagram	4

Electrical distribution

Overview	6
----------------	---

Fuses

Engine compartment 11A/1-7	8
Engine compartment 11B/1-10	9
Engine compartment 11B/11-23	10
Passenger compartment 11C/1-17	11
Passenger compartment 11C/18-25	12
Passenger compartment 11C/26-31	13
Passenger compartment 11C/32-38	14
Cargo compartment 11D/1-7	15
Cargo compartment 11D/8-18	16
Cargo compartment 11E/1-7	17

Relays/Shunts

Ignition switch with relays	18
Engine compartment FMA2 - FST3	19
Passenger compartment CMA2 - CSH4	20
Cargo compartment RMA1 - RSH6	21
Other relays	22

Ground connection

31/1 - 31/67	23
31/70 - 31/91	24
31/93 - 31/98	25

Control modules

Overview	26
Central Electronic Module CEM	28
Rear Electronic Module REM	30
Data communication	32

Group 23

Engine management system Denso	34
Engine management system ME7	36
Engine management system, Bifuel	38
Engine management system, Diesel	40
Emission control Denso	42
Emission control ME7	43

Group 26

Electric cooling fan	44
----------------------------	----

Group 27

Cruise control	45
----------------------	----

Group 32

Power supply	46
--------------------	----

Group 33

Starting system	47
-----------------------	----

Group 35

High beam, low beam and auxiliary light wiring	48
High beam, low beam and auxiliary light wiring Bi-Xenon	49
Fog lights	50
Parking lights, tail lights and license plate lighting	51
Brake lights	52
Reversing lights	53
Interior lighting	54
Beam length adjustment	55
Safety lighting	56
Instrument and control lighting	57

Group 36

Indicators and warning lights	58
Horn	59
Wiper/Washer, Windshield	60
Wiper/Washer, Headlights	61
Wipers/washers, Rear window	62
Control module, electronic accessories	63
Rain sensor	64
Anti-theft alarm	65
Electronic immobilizer	66

Group 37

Towing bracket wiring	67
Diagnostics system	68
12V outlet	69
12V outlet, cargo compartment	70

Group 38

Combined instrument panel	71
Combined instrument panel, Bifuel	72
Seat belt reminder	73

Group 39

Audio with auxiliary amplifier	74
Audio without auxiliary amplifier	76
Road Traffic Information RTI	77
Mobile telephone	78

Group 43

Electronically controlled automatic transmission, AW 55-50	79
Geartronic	80
Shift lock	81

Group 59

Brake Control Module BCM	82
--------------------------------	----

Group 64

Electronic power steering	83
---------------------------------	----

Group 83

Power windows	84
Central lock	85

Group 83

Power sunroof	86
---------------------	----

Order number TP 3961202
Replaces previous manual TP 3961201

Group 84

Heated rear window	87
Heated door mirrors	88
Power door mirrors	89

Group 85

Heated seats	90
Power driver's seat	91
Power passenger seat	92

Group 87

Standard heater	93
Manual climate control (MCC)	94
Electronic climate control (ECC)	95
Parking heater, auxiliary heater	96

Group 88

Supplemental Restraint System (SRS)	97
Remote controlled garage door opener	98
Electrically adjustable head restraint	99

Connectors

54/1B - 54/3LB	100
54/3LC - 54/3LE	101
54/3LF - 54/3LG	102
54/3LH - 54/8	103
54/9 - 54/10	104
54/11 - 54/12	105
54/13 - 54/14	106
54/16 - 54/20	107
54/21 - 54/22B	108
54/23A - 54/24	109
54/25 - 54/34	110
54/35 - 54/39	111
54/40	112
54/43 - 54/45	113
54/50 - 54/51	114
54/53 - 54/65	115
54/79 - 54/106	116

Junction points

53/301 - 53/328	117
53/329 - 53/370	118
53/371 - 53/384	119
53/389 - 53/419	120
53/421 - 53/436	121
53/437 - 53/505	122
53/510 - 53/524	123
53/525 - 53/601	124
53/602 - 53/654	125
53/655 - 53/664	126

Cable harness routing in vehicle

Engine harness ME7/Denso	127
Engine harness Diesel	128
Front engine compartment harness LHD	129
Front engine compartment harness RHD	130
Front passenger compartment harness LHD	131
Front passenger compartment harness RHD	132
Rear passenger compartment harness & Cargo compartment harness	133
Inflatable curtain harness & Trunk lid/tailgate harness	134
Door harness	135
Bifuel harness	136


Component illustrations

1/1 - 2/33	137
2/34 - 2/80	138
2/82 - 2/116	139
2/117 - 3/1	140
3/4 - 3/56	141
3/59 - 3/92	142
3/93 - 3/125	143
3/126 - 3/184	144
4/7 - 4/68	145
4/70 - 6/15	146
6/16 - 6/33	147
6/35 - 6/67	148
6/69 - 7/4	149
7/5 - 7/32	150
7/41 - 7/91	151
7/100 - 7/135	152
7/136 - 7/173	153
8/3 - 8/36	154
8/37 - 8/75	155
8/76 - 9/13	156
9/16 - 10/14	157
10/15 - 10/66	158
10/68 - 11B	159
11C - 15/30	160
16/1 - 16/46	161
16/47 - 16/74	162
16/77 - 20/16	163
20/22 - 31/2	164
31/3 - 31/73	165
31/83 - 54/1B	166
54/3LA - 54/16	167
54/20 - 54/43A	168
54/44 - 54/106	169

List of components

Electrical distribution


Overview

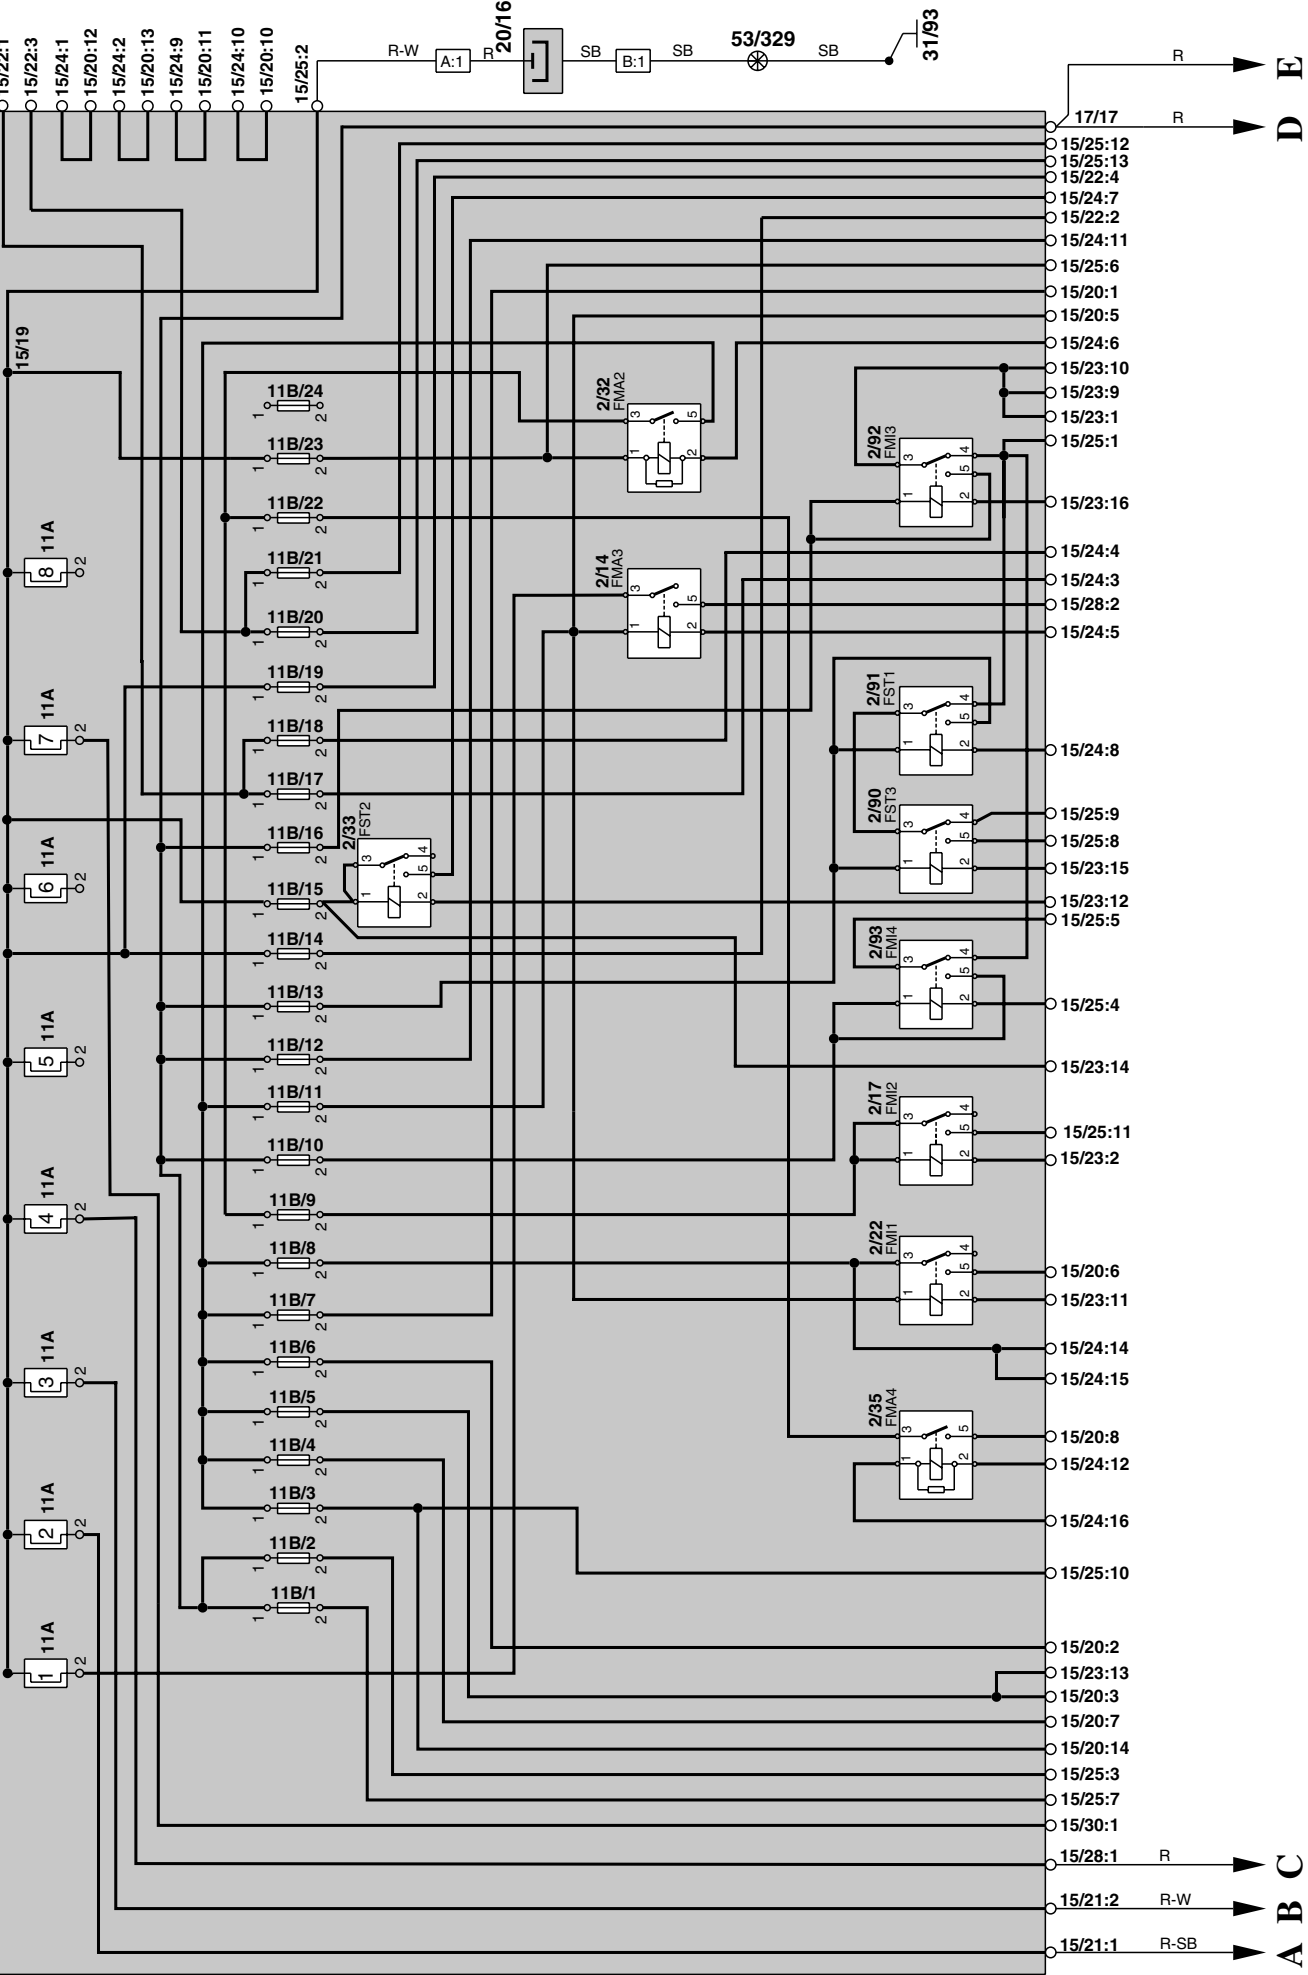

Relays/Shunts


Ignition switch with relays

3/1

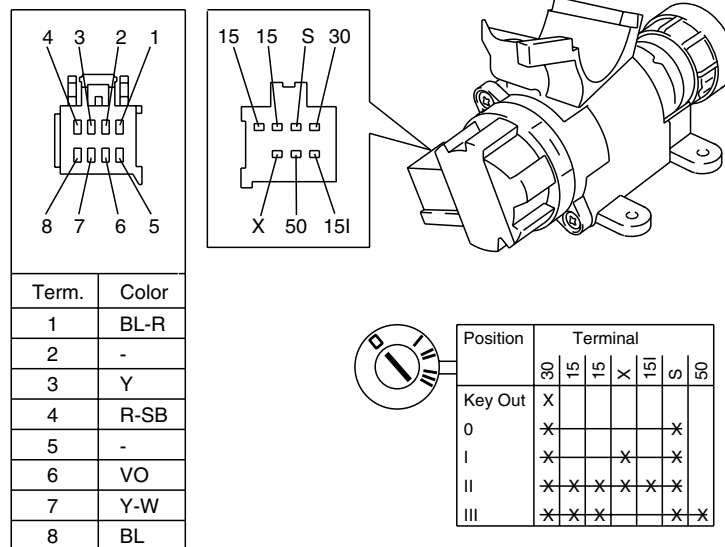

Relays, general

The diagram indicates two or three different designations for the relay's position. This is described below.

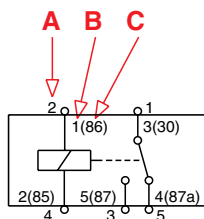


A = Corresponds to the position on the rear of the relay box (wiring side).


B = Corresponds to the position on the relay.

C = Is an old designation that can be on the relay.


Control modules Central Electronic Module CEM

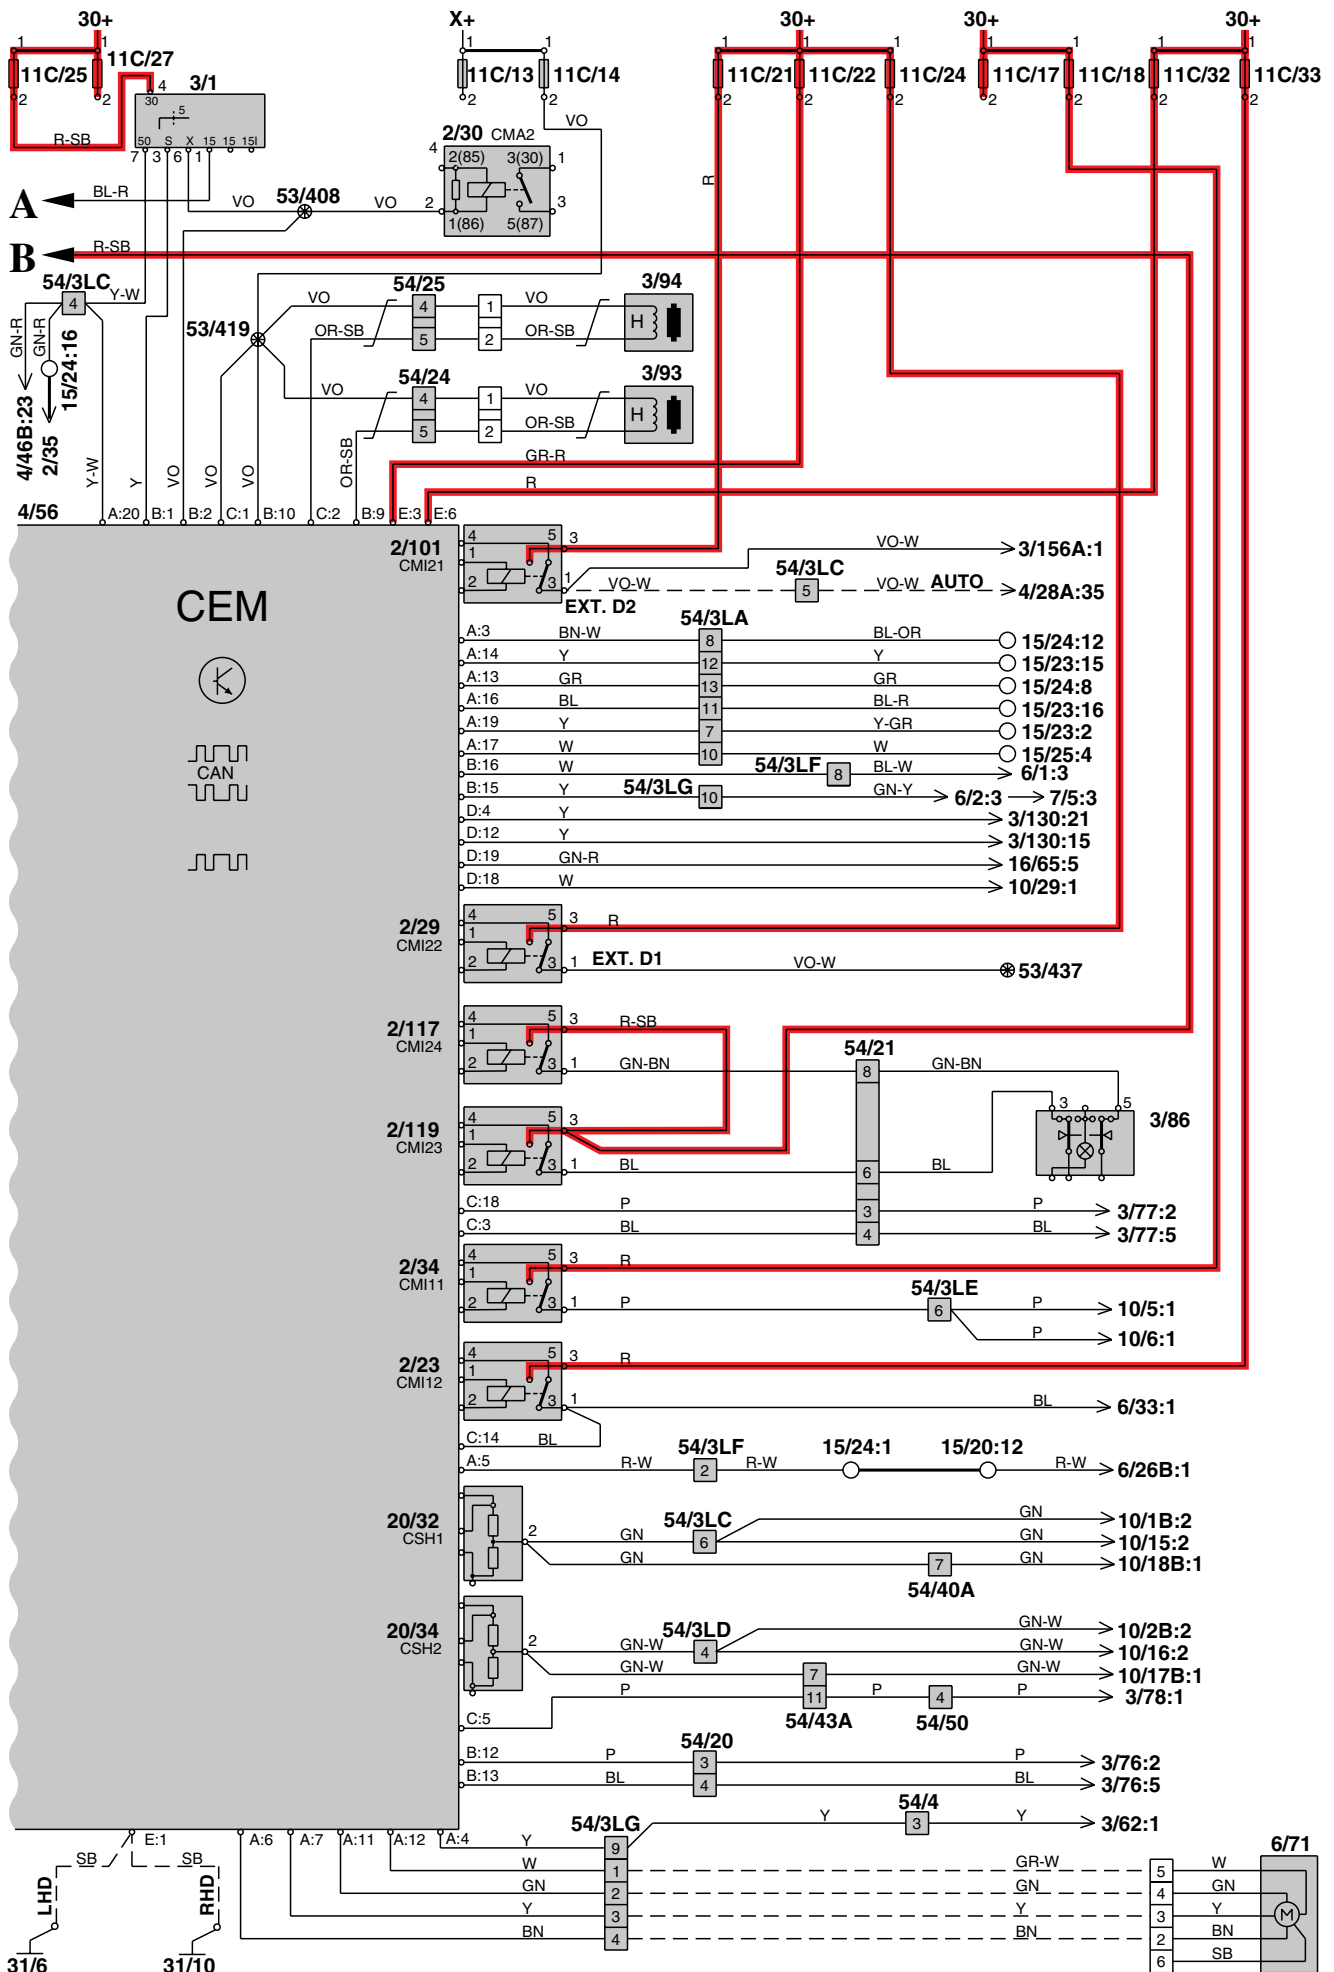


Emission control ME7

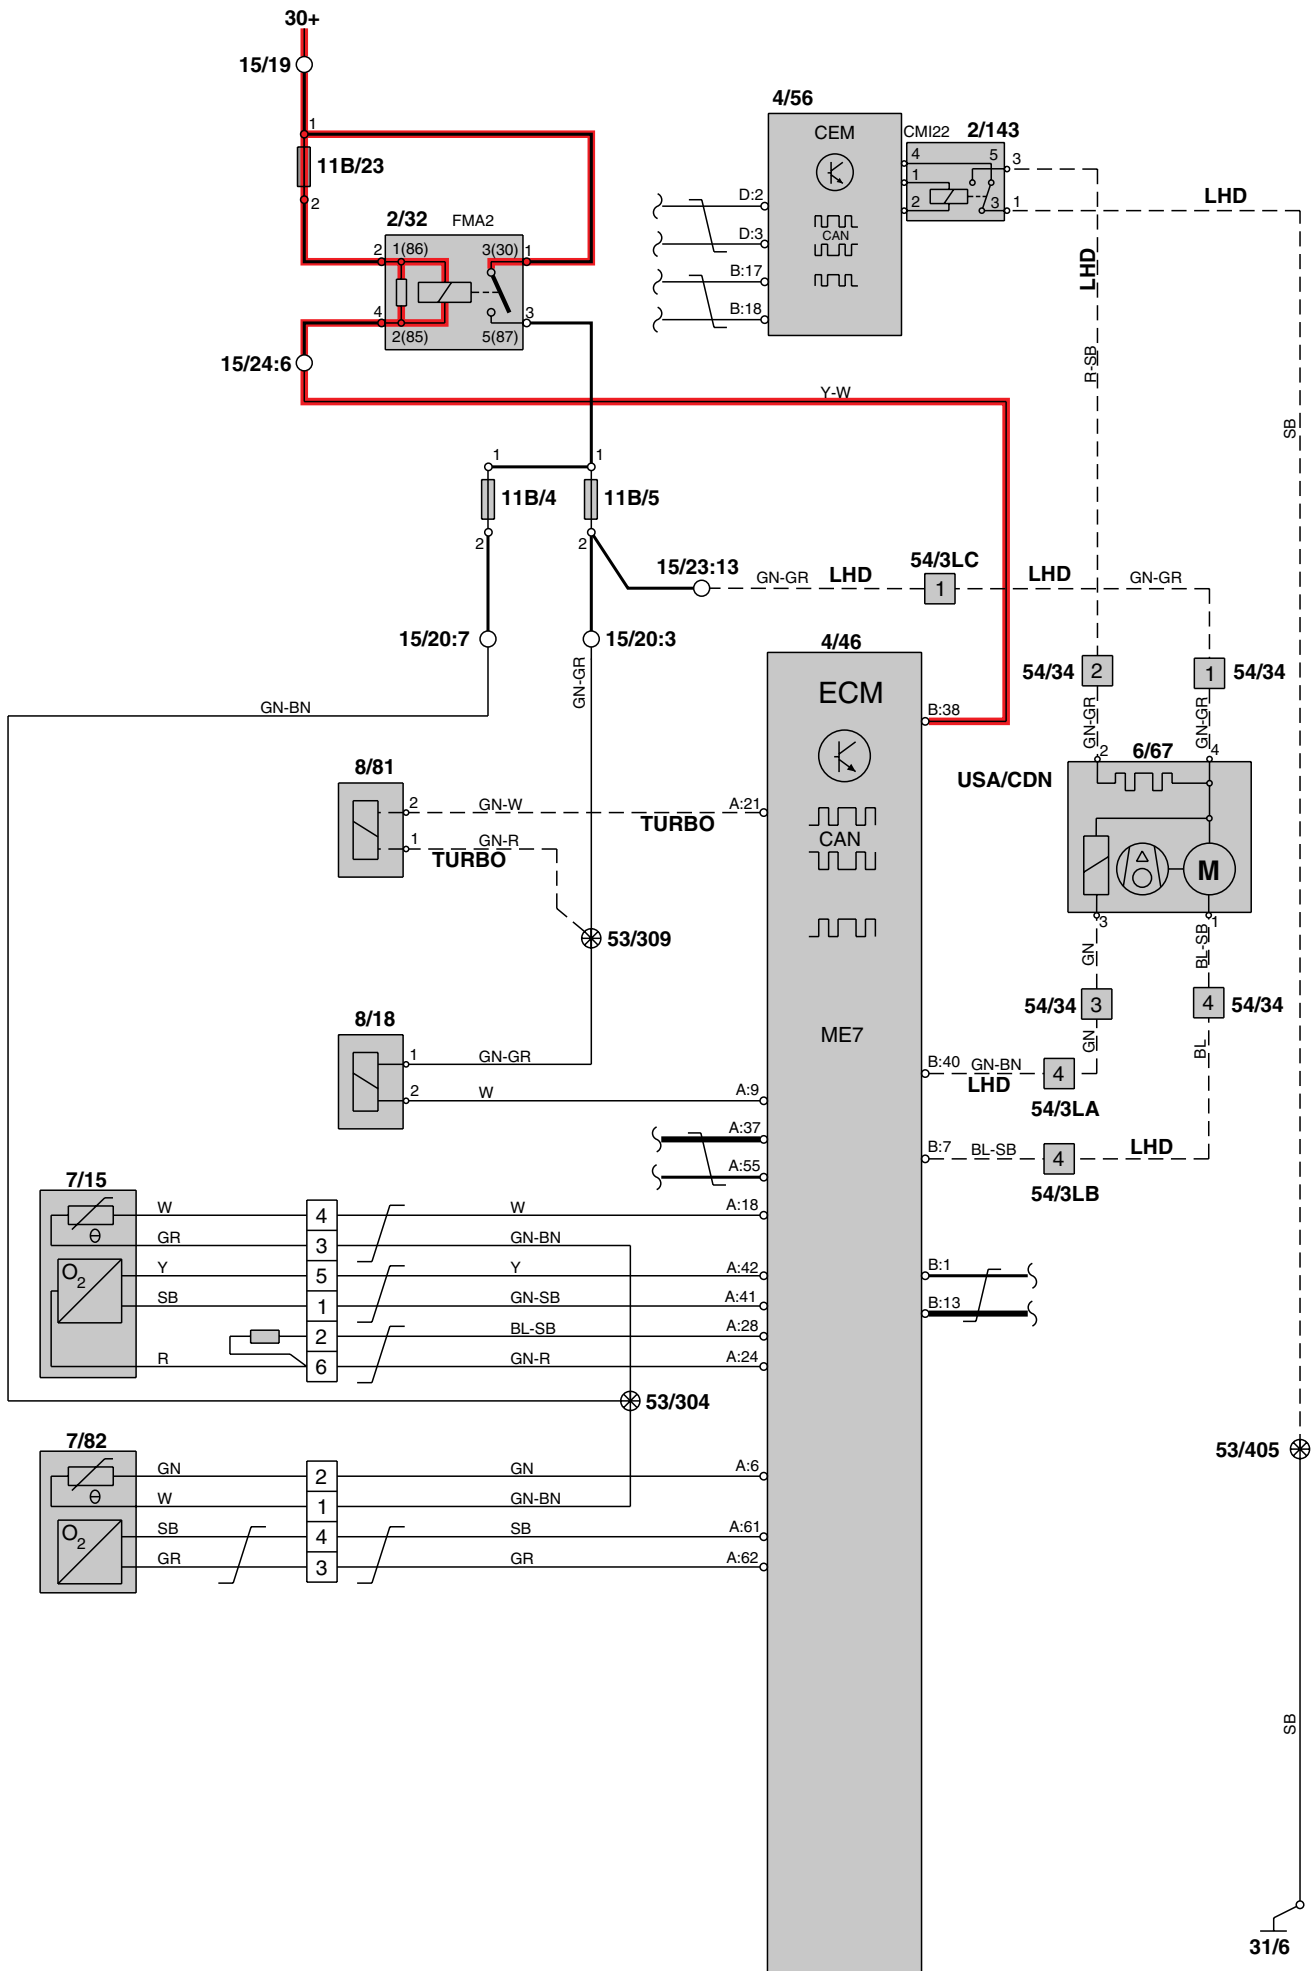

Instrument and control lighting

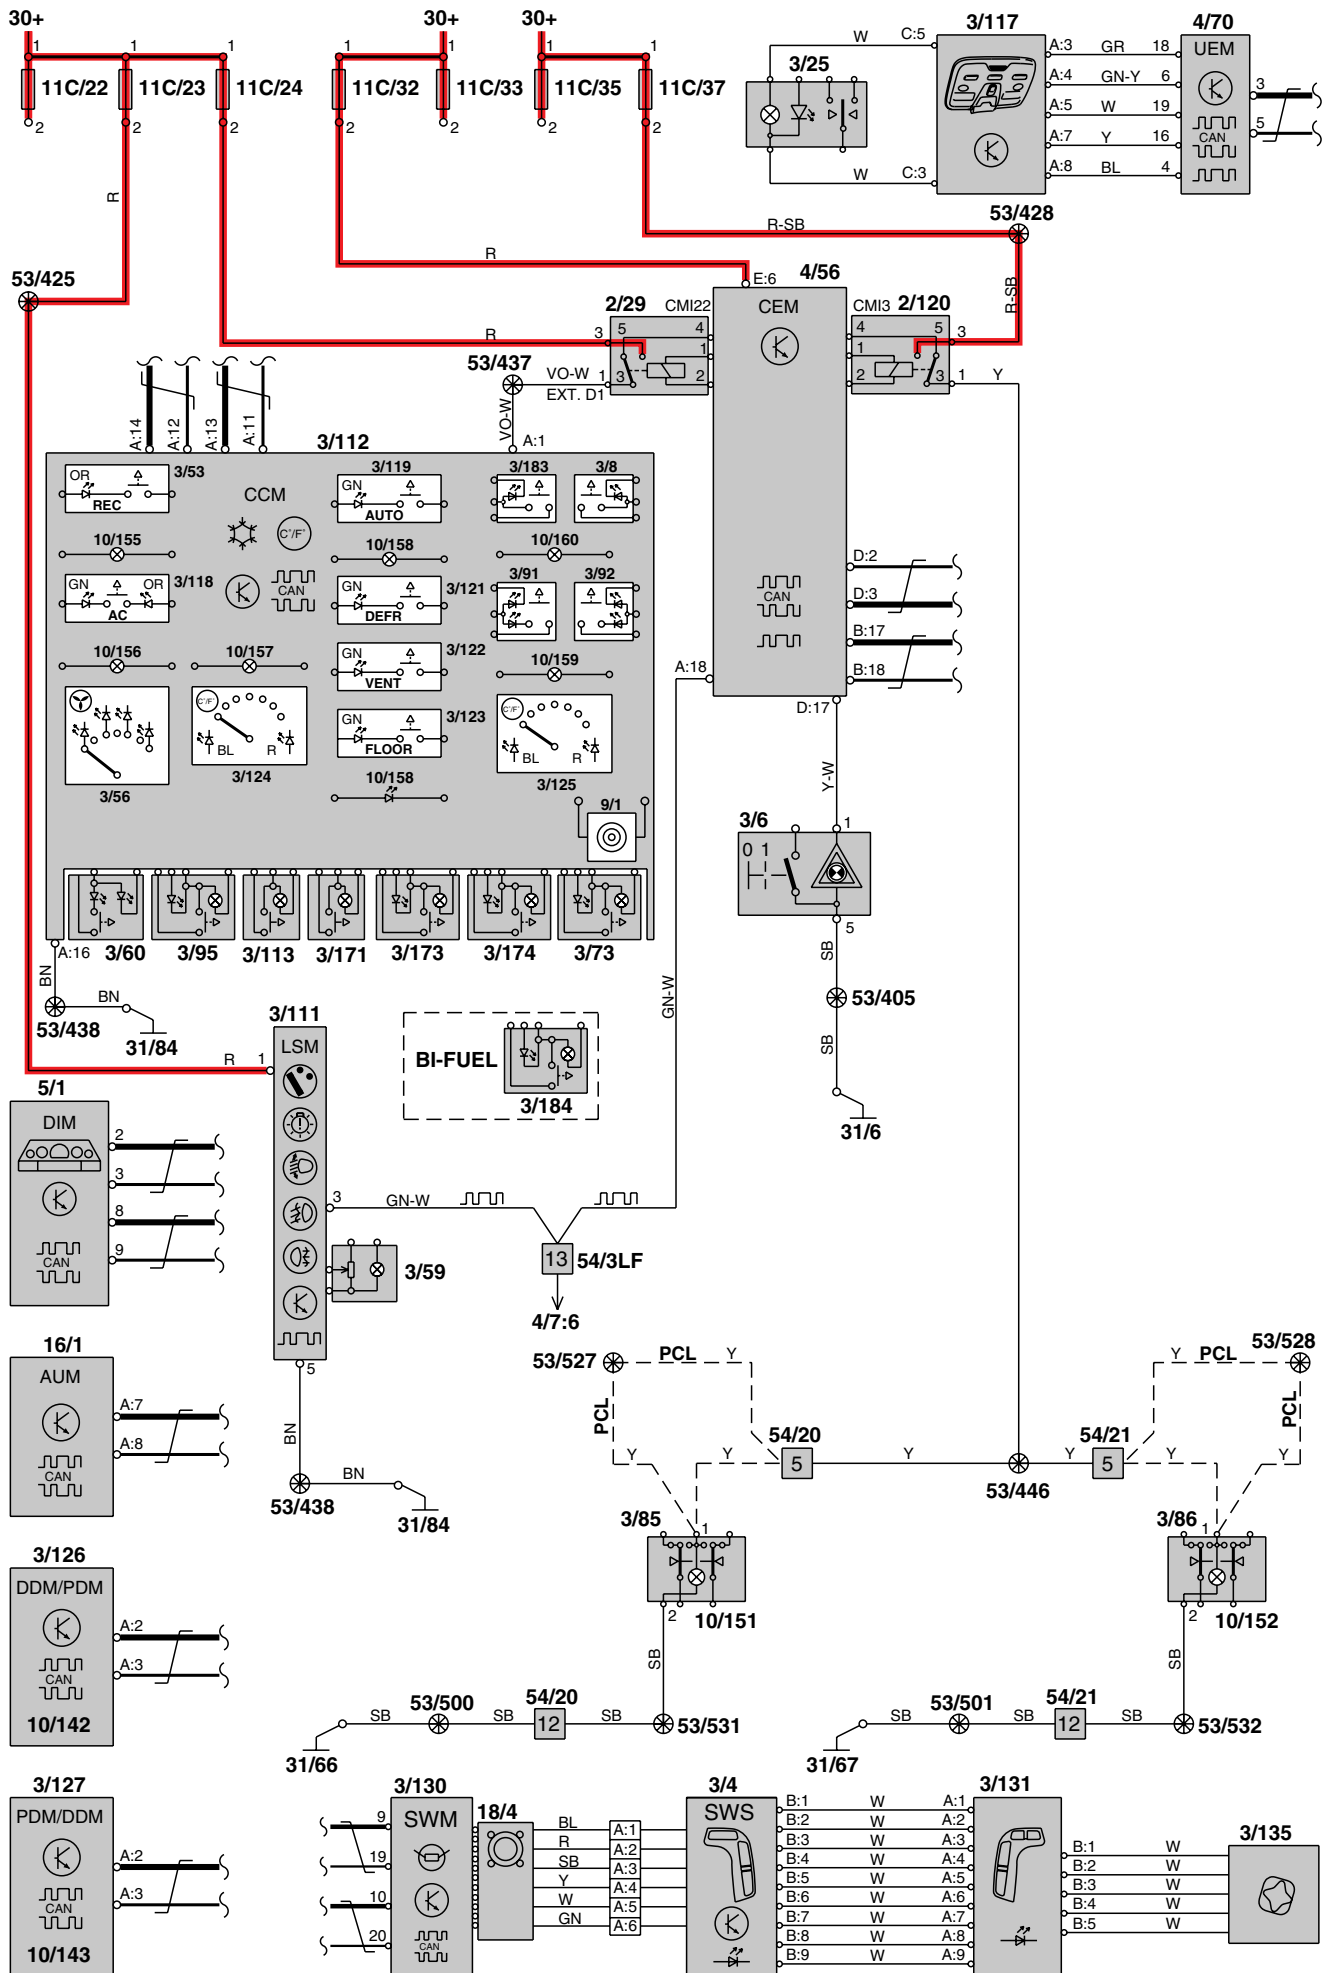


Seat belt reminder

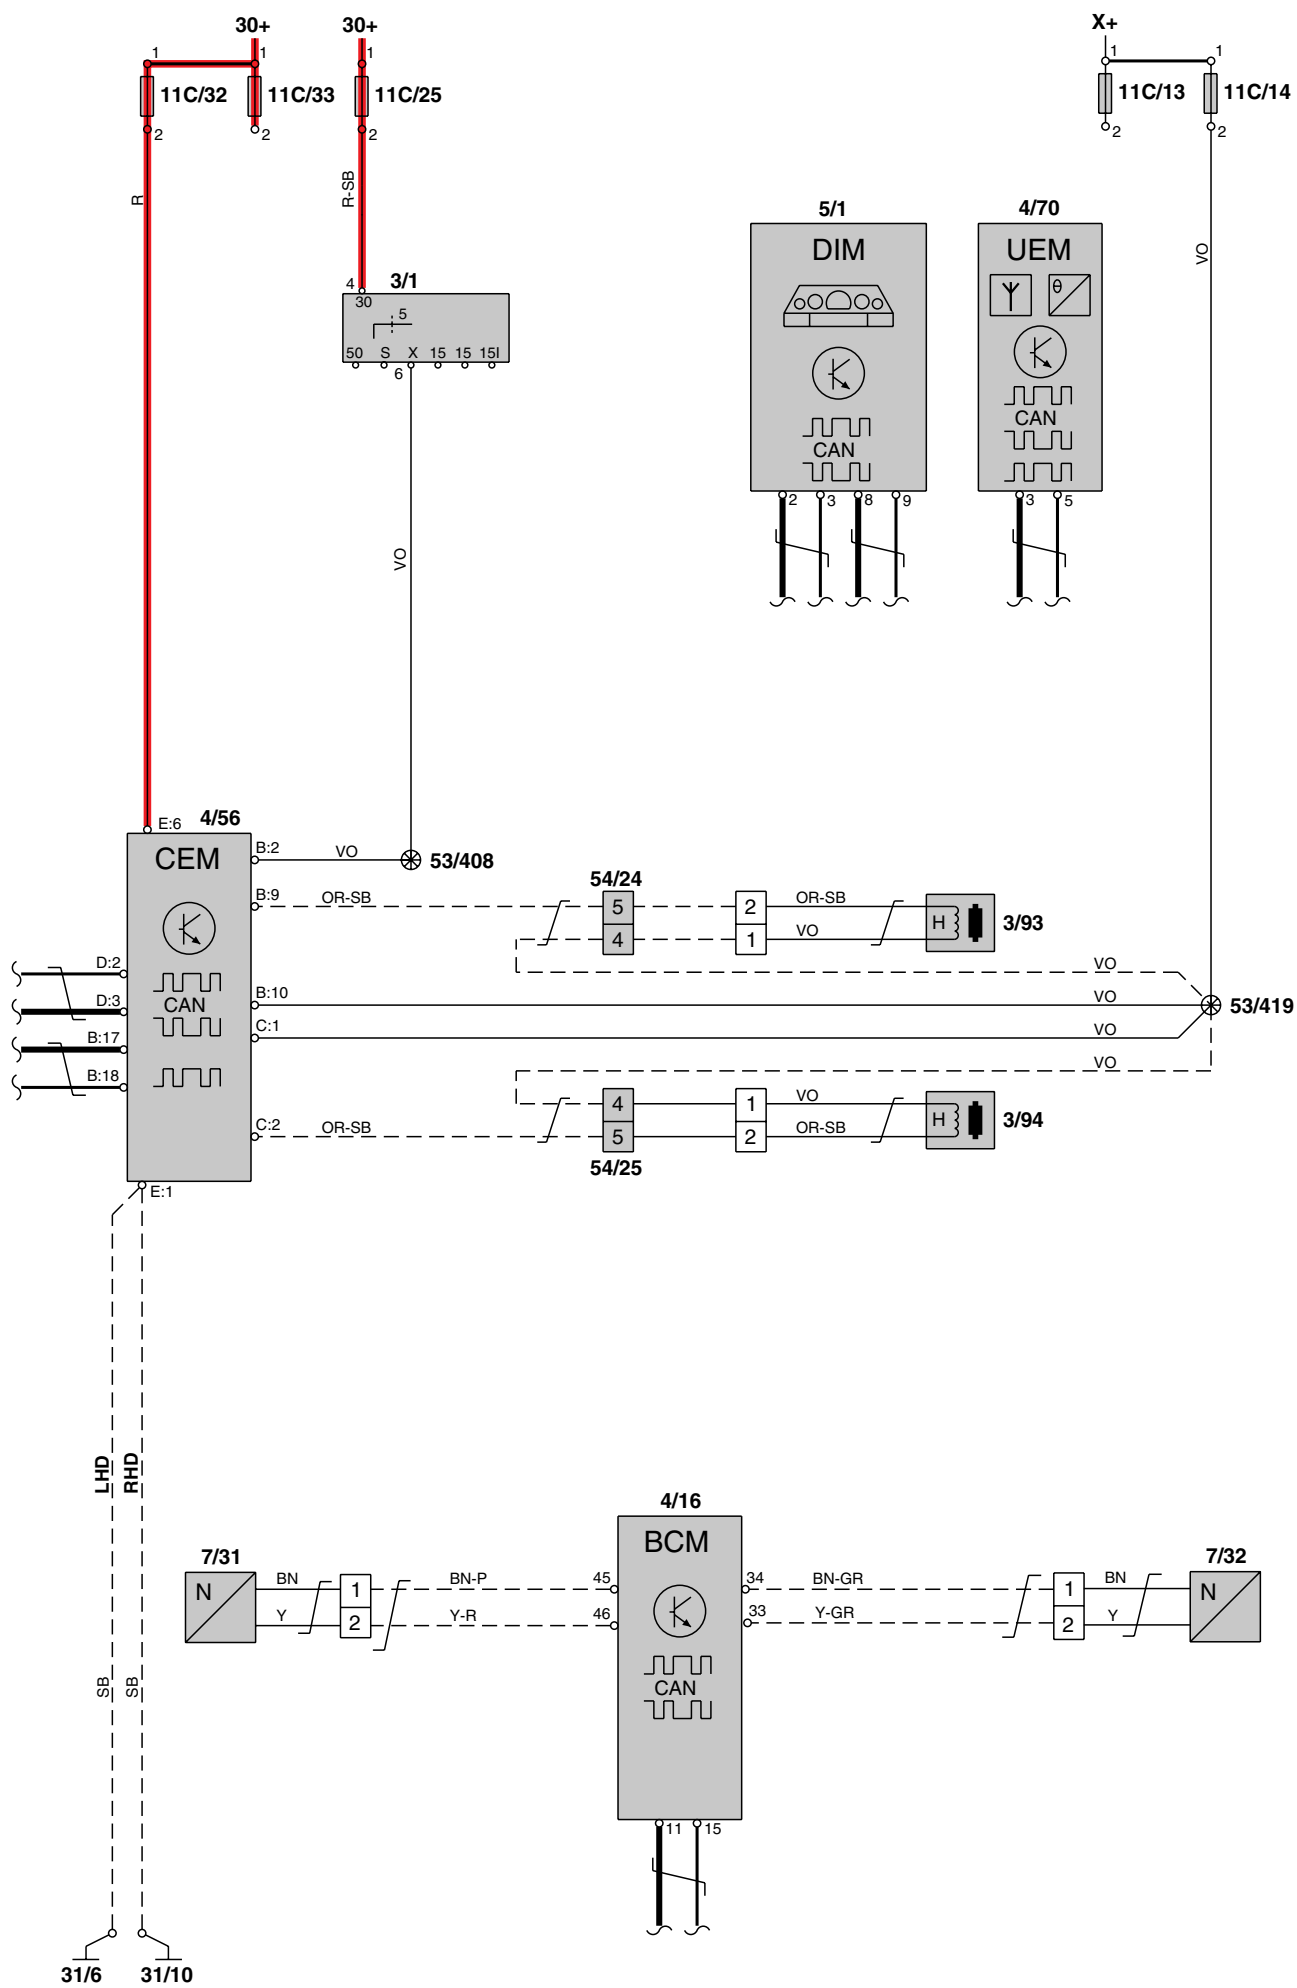


Group 83

Power sunroof

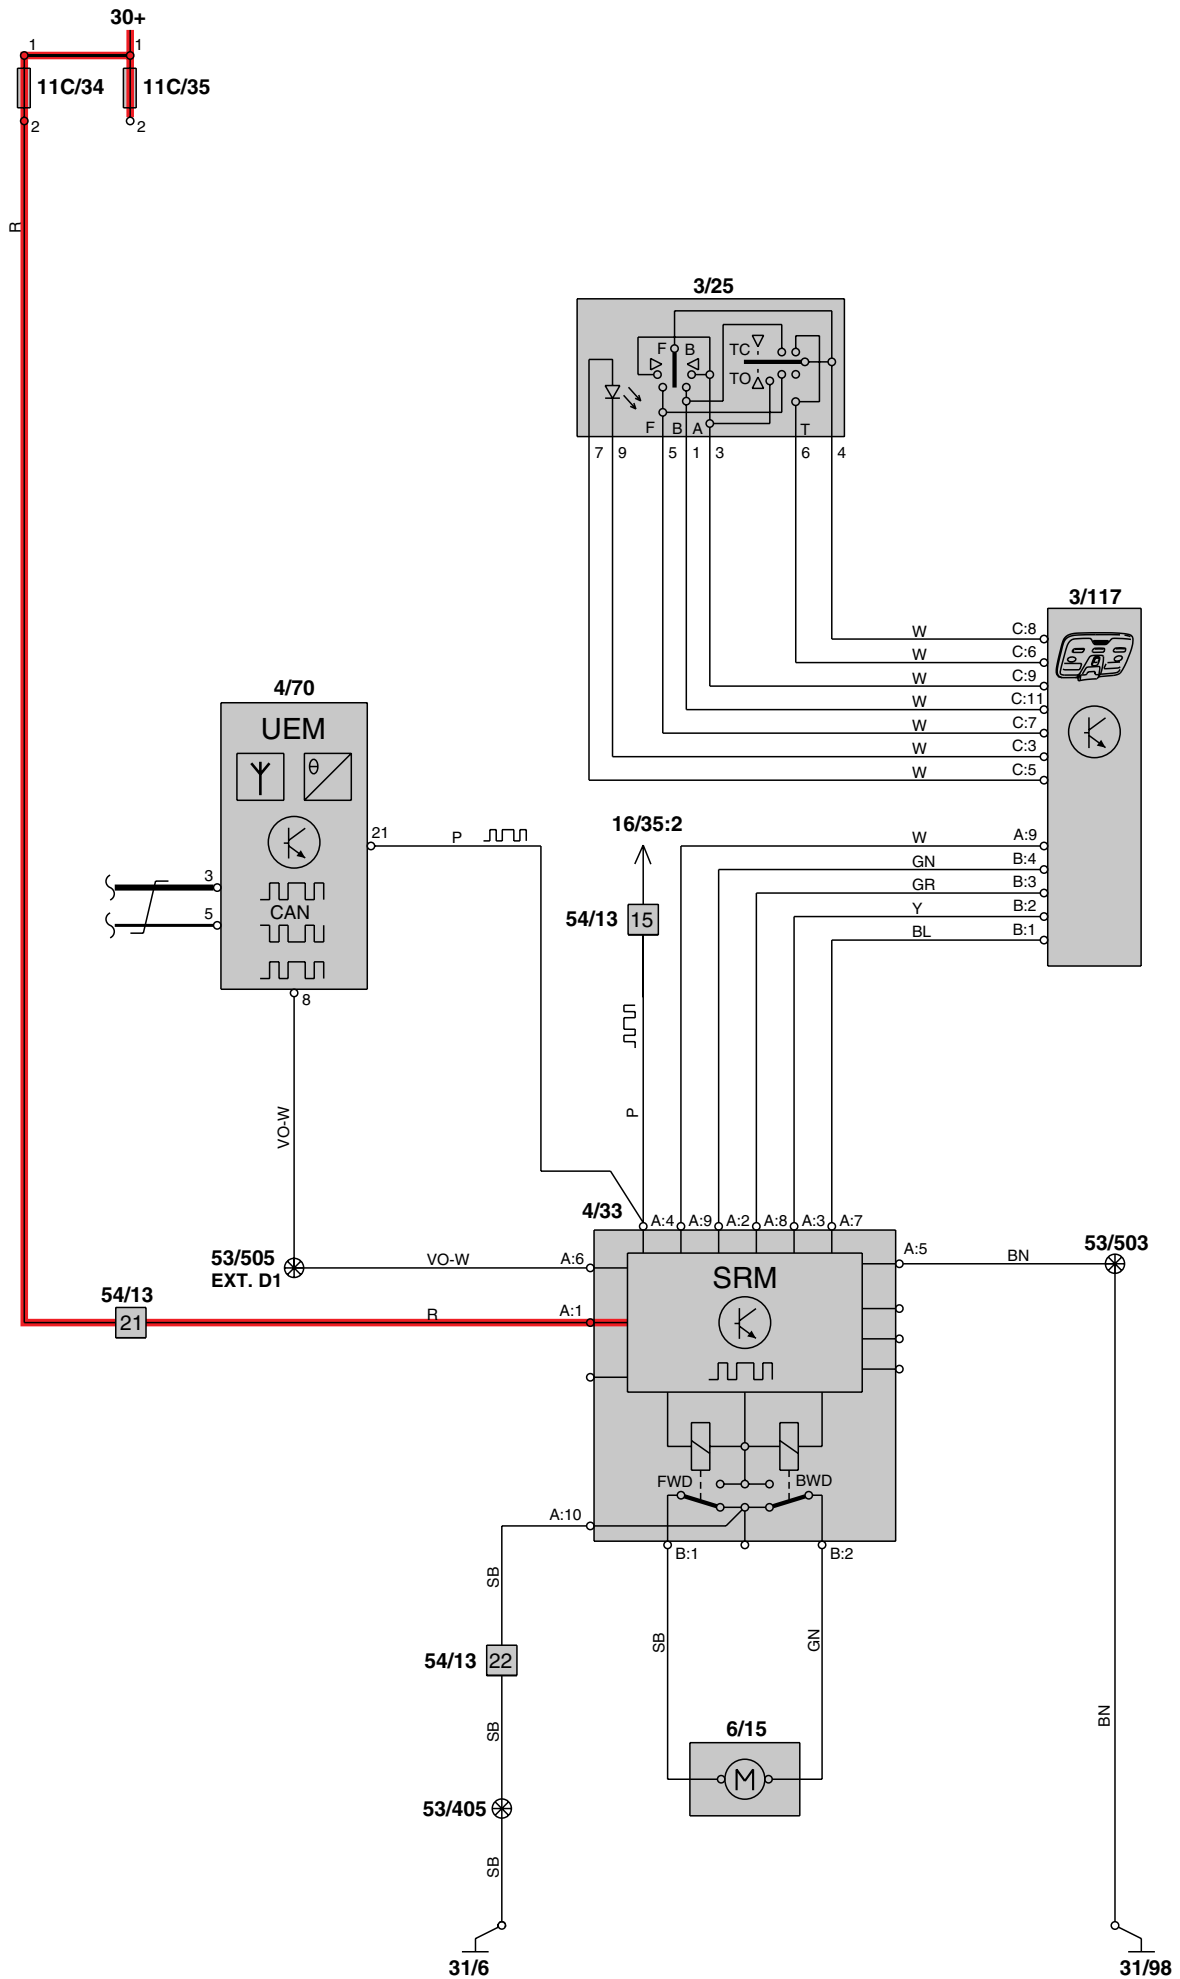

Group 88 SRS Supplemental Restraint System

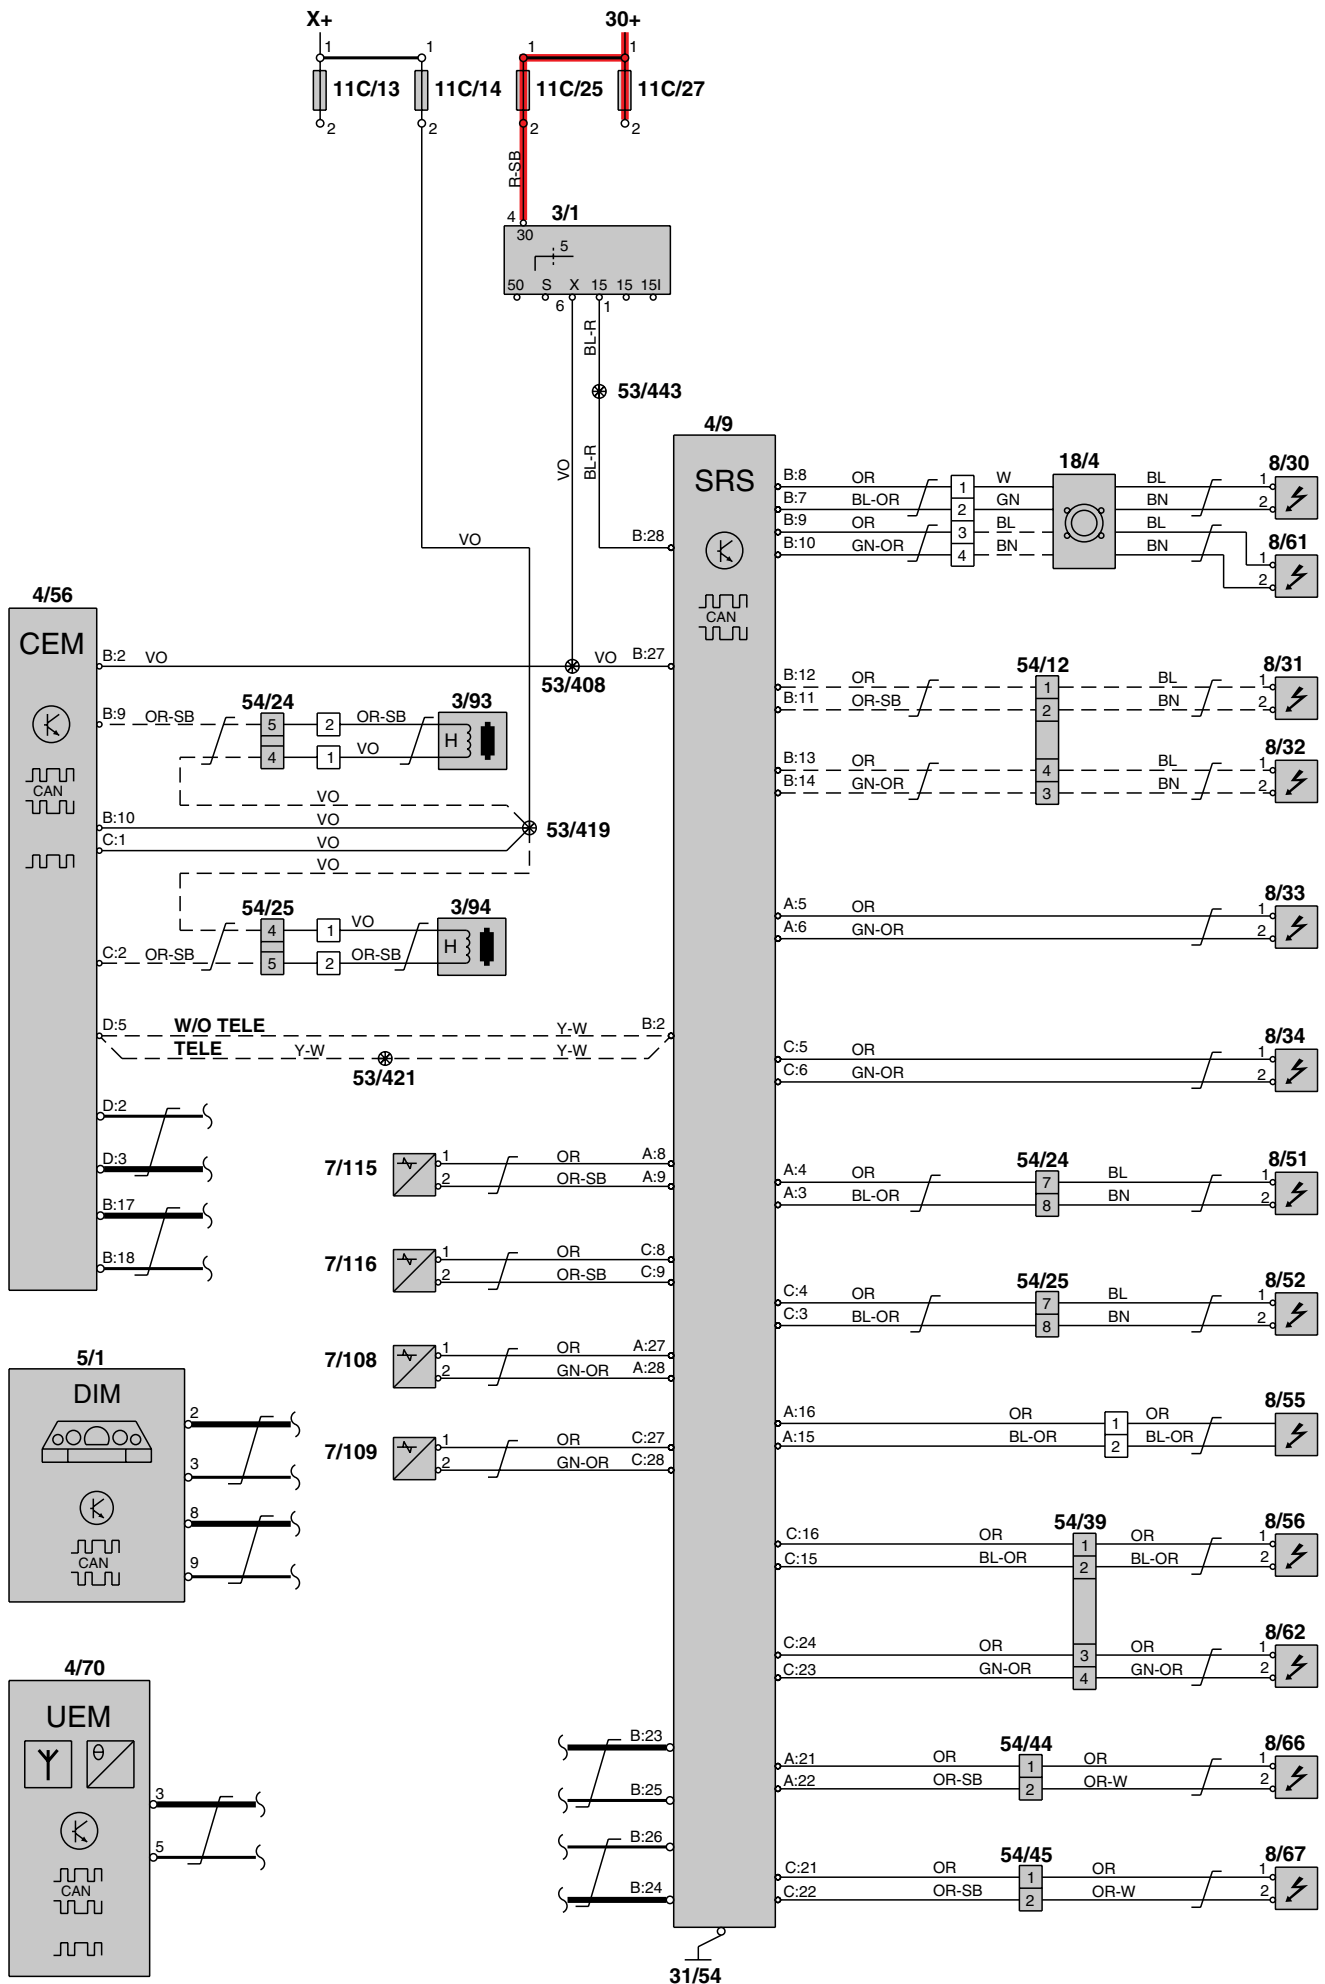

54/35

4-pin light gray

No.	Cargo compartment harness		Heated fuel filter harness	
1	Relay, preheated fuel filter 2/142:4	Y	Thermostatic switch, fuel filter 8/85:1	Y
2	REM 4/58D:16	SB	Thermostatic switch, fuel filter 8/85:2	SB
3	Relay, preheated fuel filter 2/142:1	BL	Electrically heated fuel filter 9/38:1	BL
4	Junction point 53/604	SB	Electrically heated fuel filter 9/38:2	SB

54/37

14-pin light gray

No.	Passenger compartment harness		Adapter cable harness AEM	
1	Fuse 11C/30:2	W	Connector 54/40:1	W
2	Connector 54/20:11	Y	Connector 54/40:2	Y
3	Connector 54/20:10	GR	Connector 54/40:3	GR
4	Connector 54/20:9	VO	Connector 54/40:4	VO
5	Junction point 53/435	GN	Junction point 53/538	GN
6	Junction point 53/436	W	Junction point 53/537	W
7	Shunt, indicator CEM, left 20/32:2	GN	Connector 54/40:7	GN
8	Fuse 11C/31:2	GR	Connector 54/40:8	GR
9	Junction point 53/523	GR-W	Connector 54/40:9	GR-W
10	Junction point 53/524	GR	Connector 54/40:10	GR
11	Fuel pump 6/33:5 Connector 54/79:5 CNG/LPG	GN	Connector 54/40:11	GN
12	Fuel pump 6/33:6 Connector 54/79:6 CNG/LPG	BN	Connector 54/40:12	BN
13	Fuel pump 6/33:7 Connector 54/79:7 CNG/LPG	BL	Connector 54/40:13	BL
14	-	-	Connector 54/40:14	GN-Y


54/39

4-pin orange


No.	Passenger compartment harness		Seatbelt tensioner harness	
1	Control module, Supplemental Restraint System (SRS) 4/9C:16	OR	RR belt tensioner igniter 8/56:1	OR
2	Control module, Supplemental Restraint System (SRS) 4/9C:15	BL-OR	RR belt tensioner igniter 8/56:2	BL-OR
3	Control module, Supplemental Restraint System (SRS) 4/9C:24	OR	Belt tensioner igniter, center rear seat 8/62:1	OR
4	Control module, Supplemental Restraint System (SRS) 4/9C:23	GN-OR	Belt tensioner igniter, center rear seat 8/62:2	GN-OR

Junction points 53/525 - 53/601


53/525

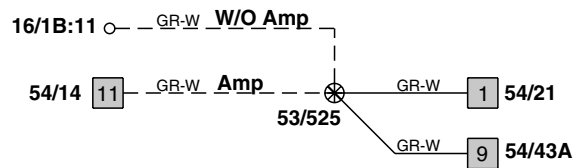


53/532

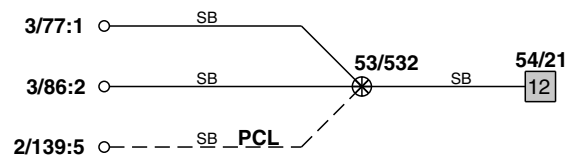


53/526

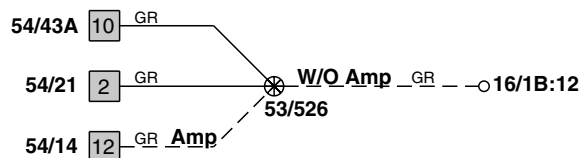


53/534

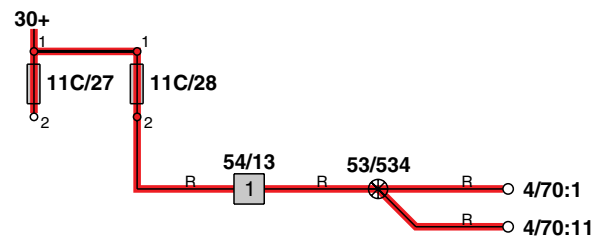


53/527

 


53/537
AEM

 


53/528

 


53/538
AEM

 

53/531

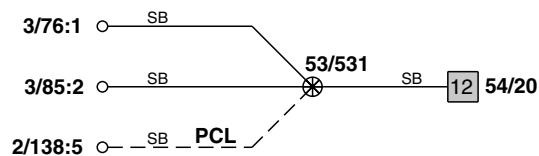

53/601

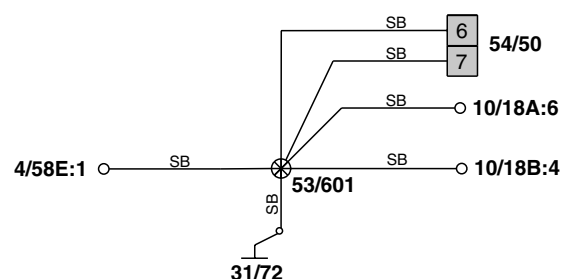

Cable harness routing in vehicle

Rear passenger compartment harness & Cargo compartment harness

