



Ground point

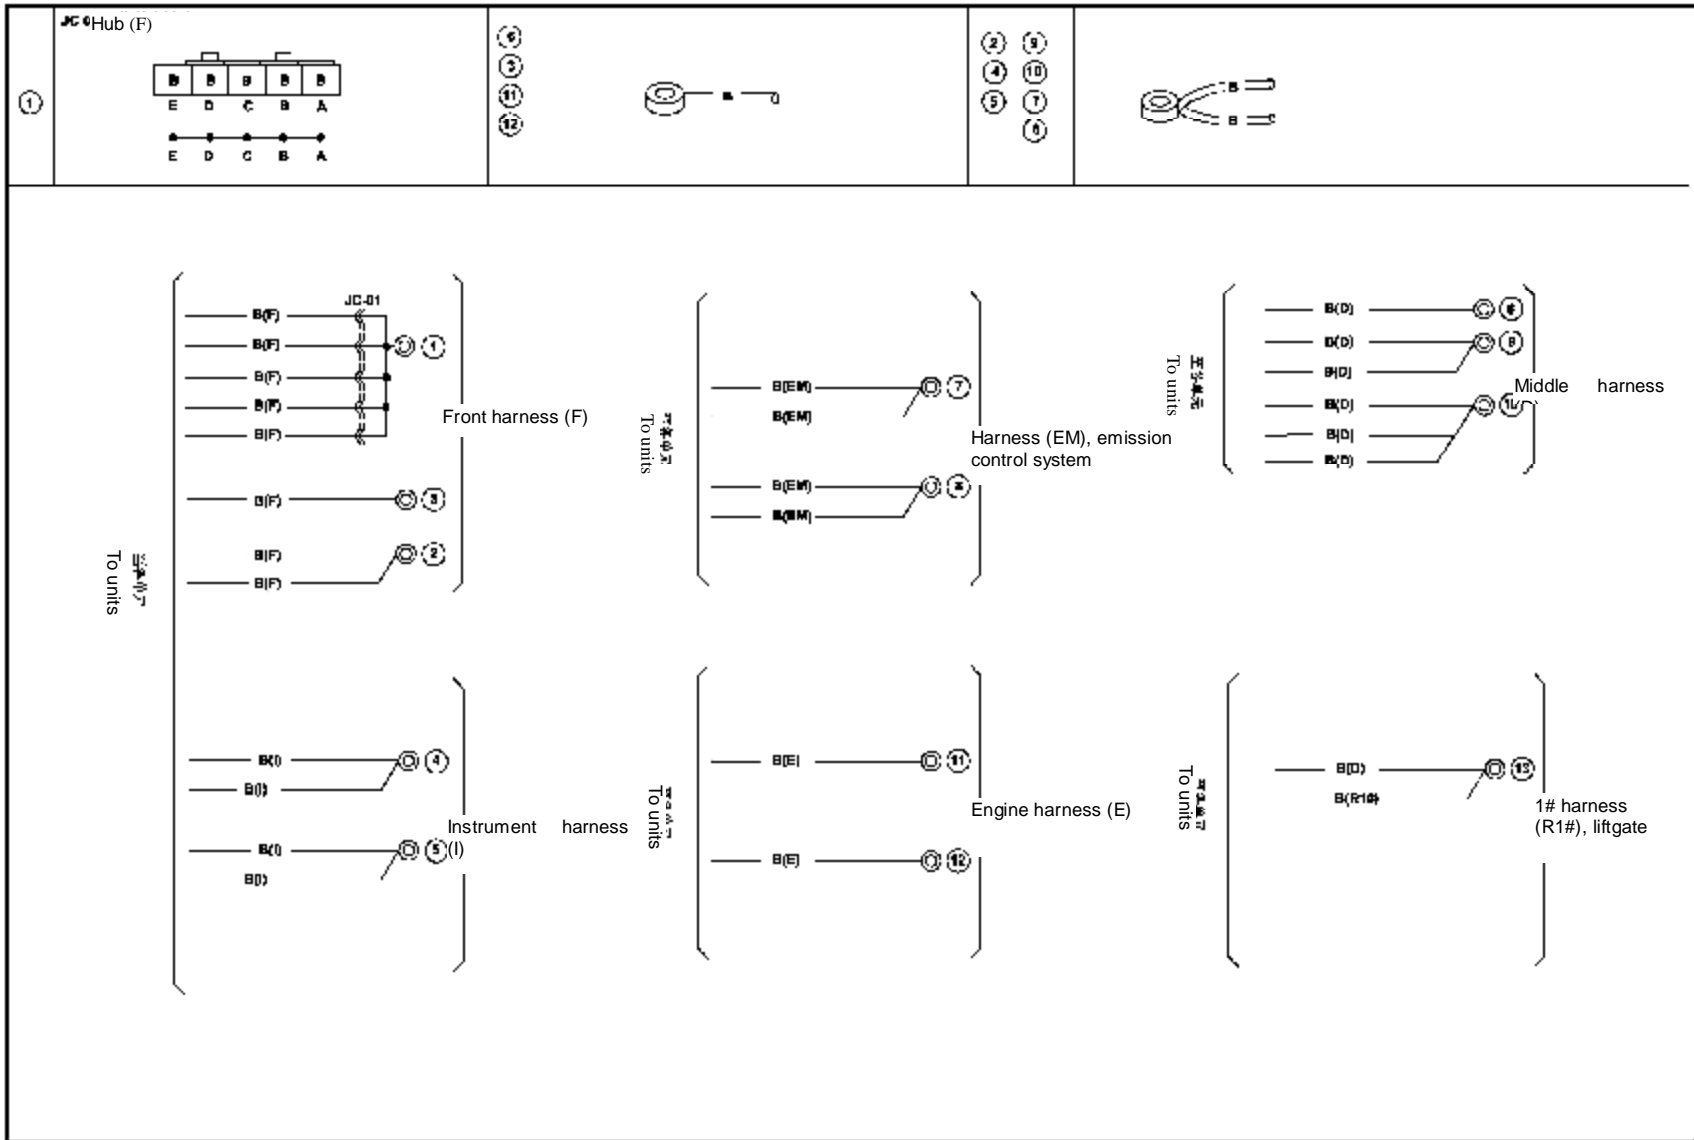

 
Y




 
 
 
Charging system/starting system

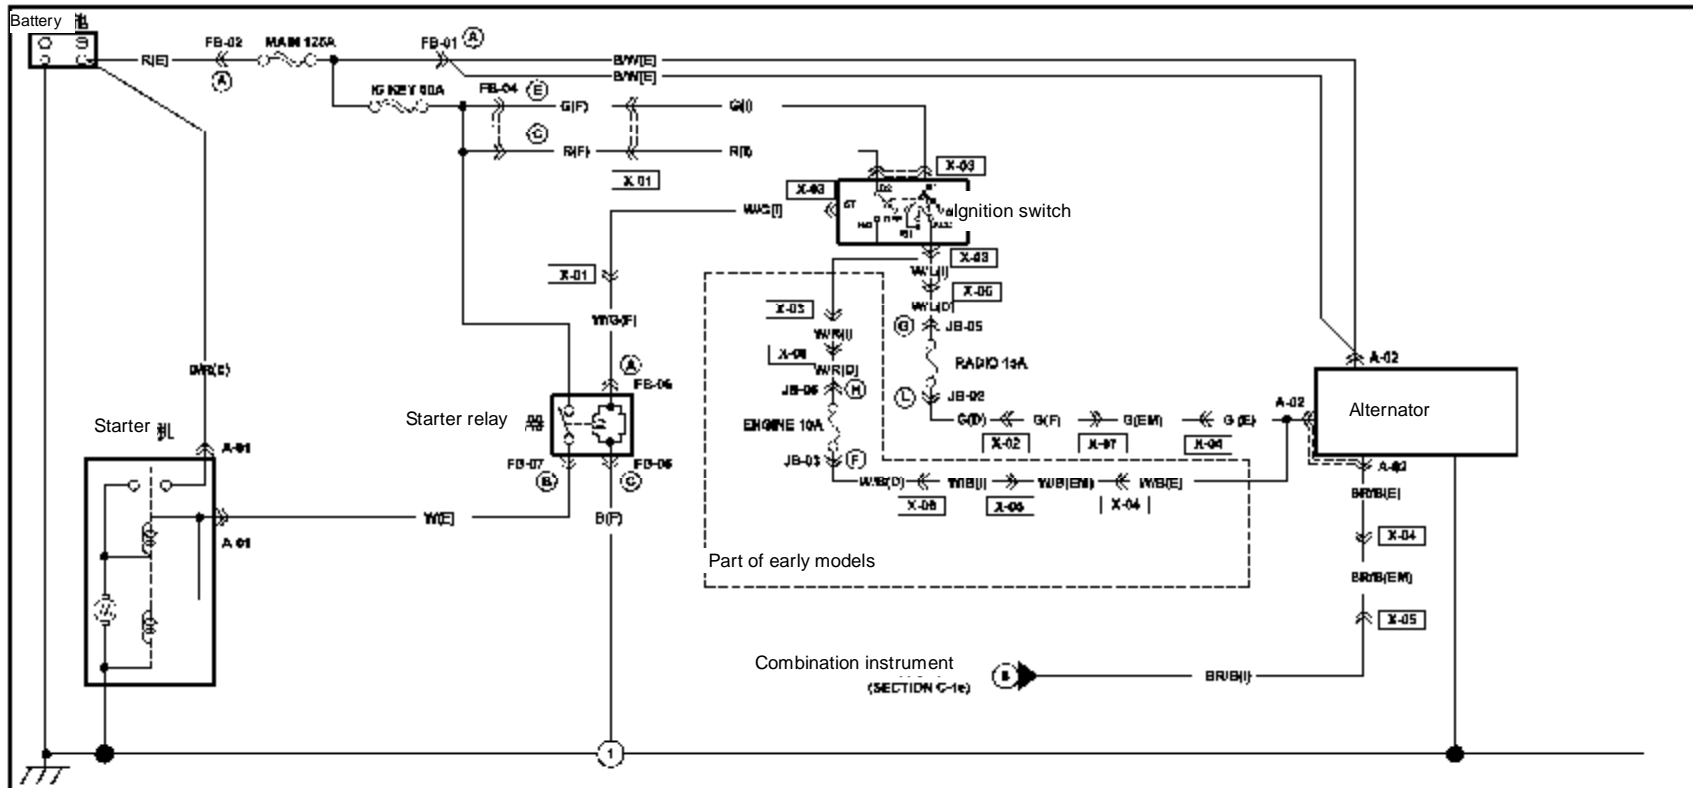
A



<p>A Starter (E)</p> 	<p>A Starter (E)</p> 	<p>A Starter (E)</p>  <p>Part of early models</p>			


Mark on harness:

 (F)  (E)  (D)  (R)

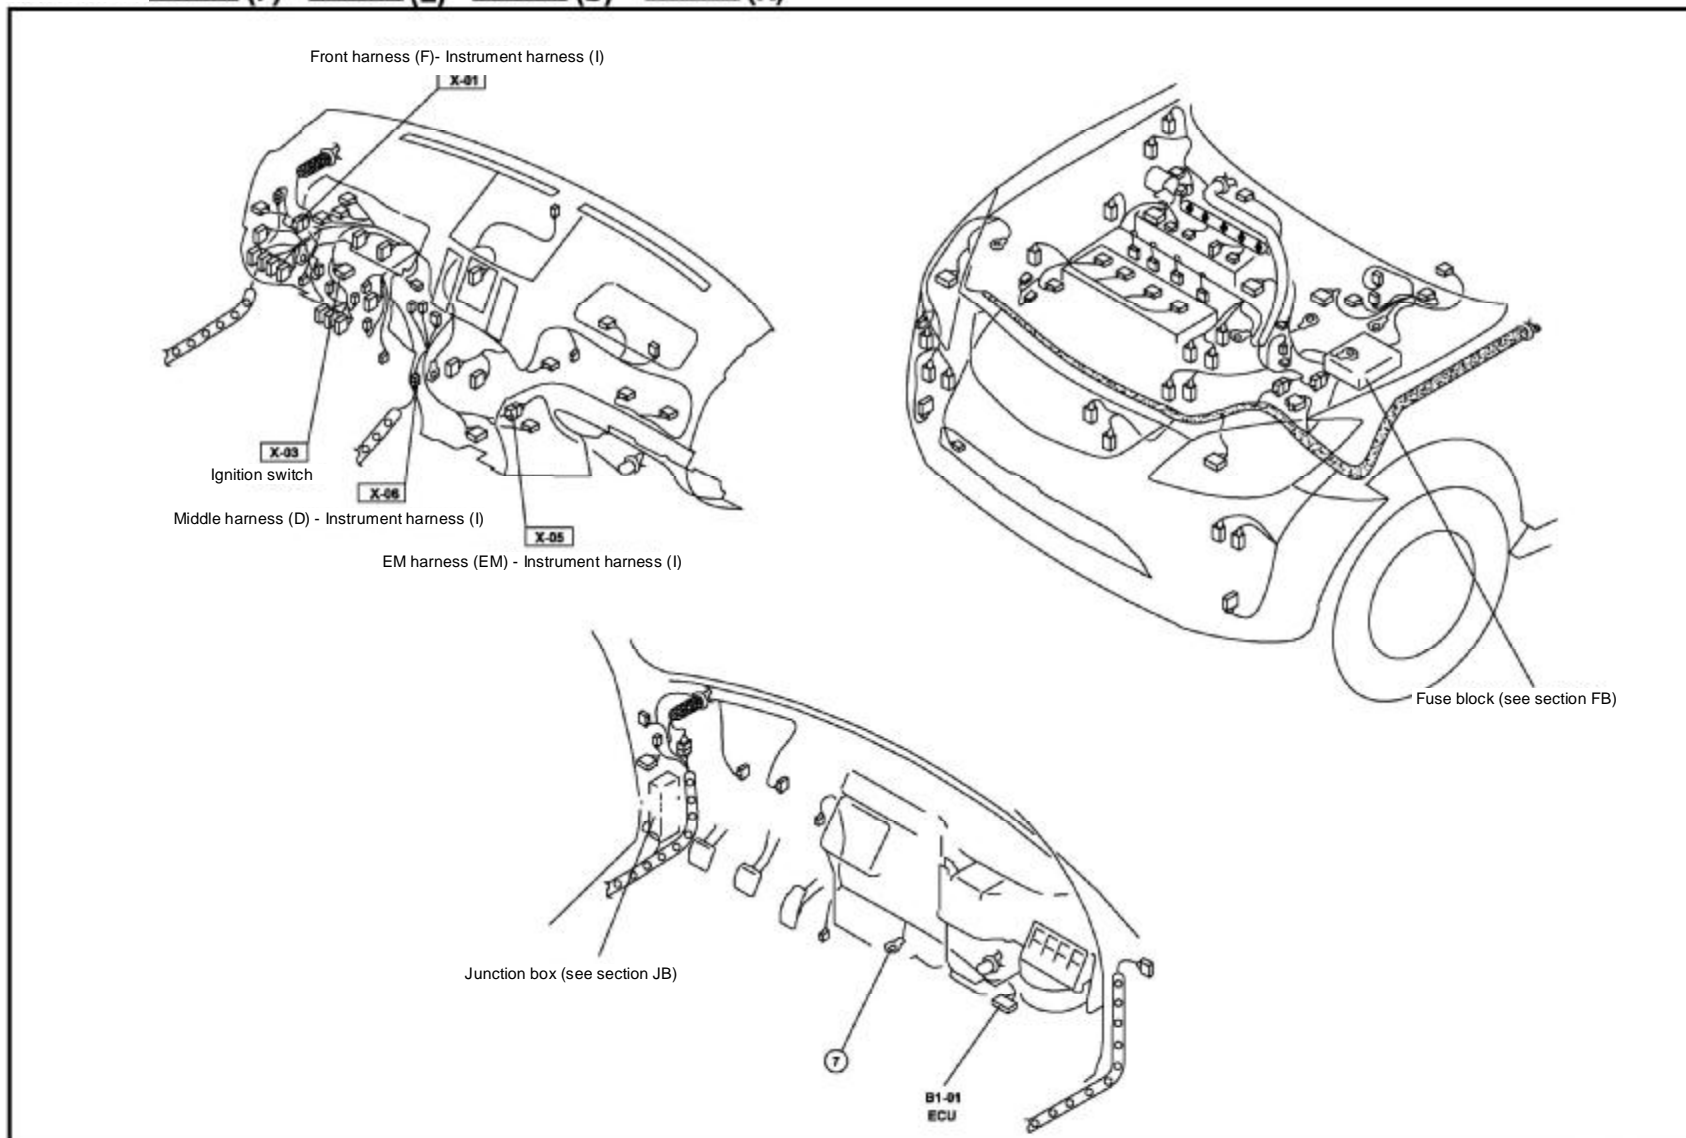


Fan control system

B-8

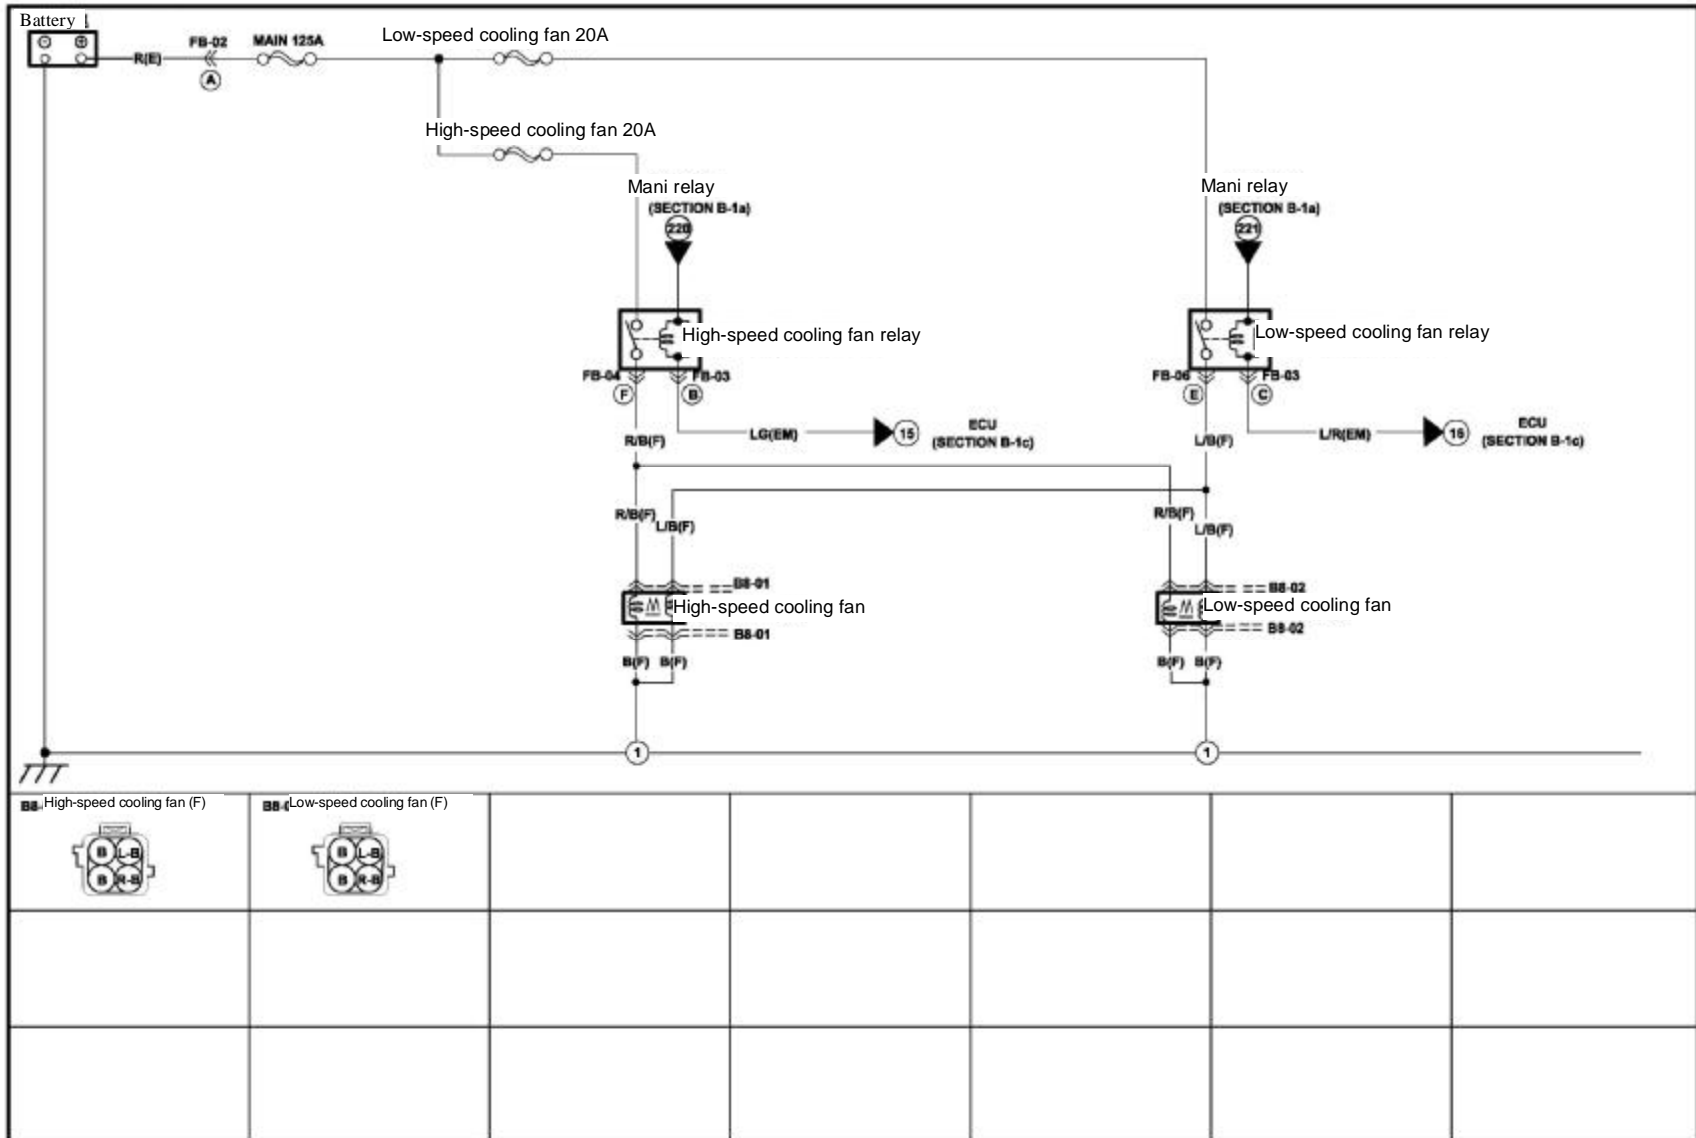



Mark on harness:  (F) (E) (D) (R)

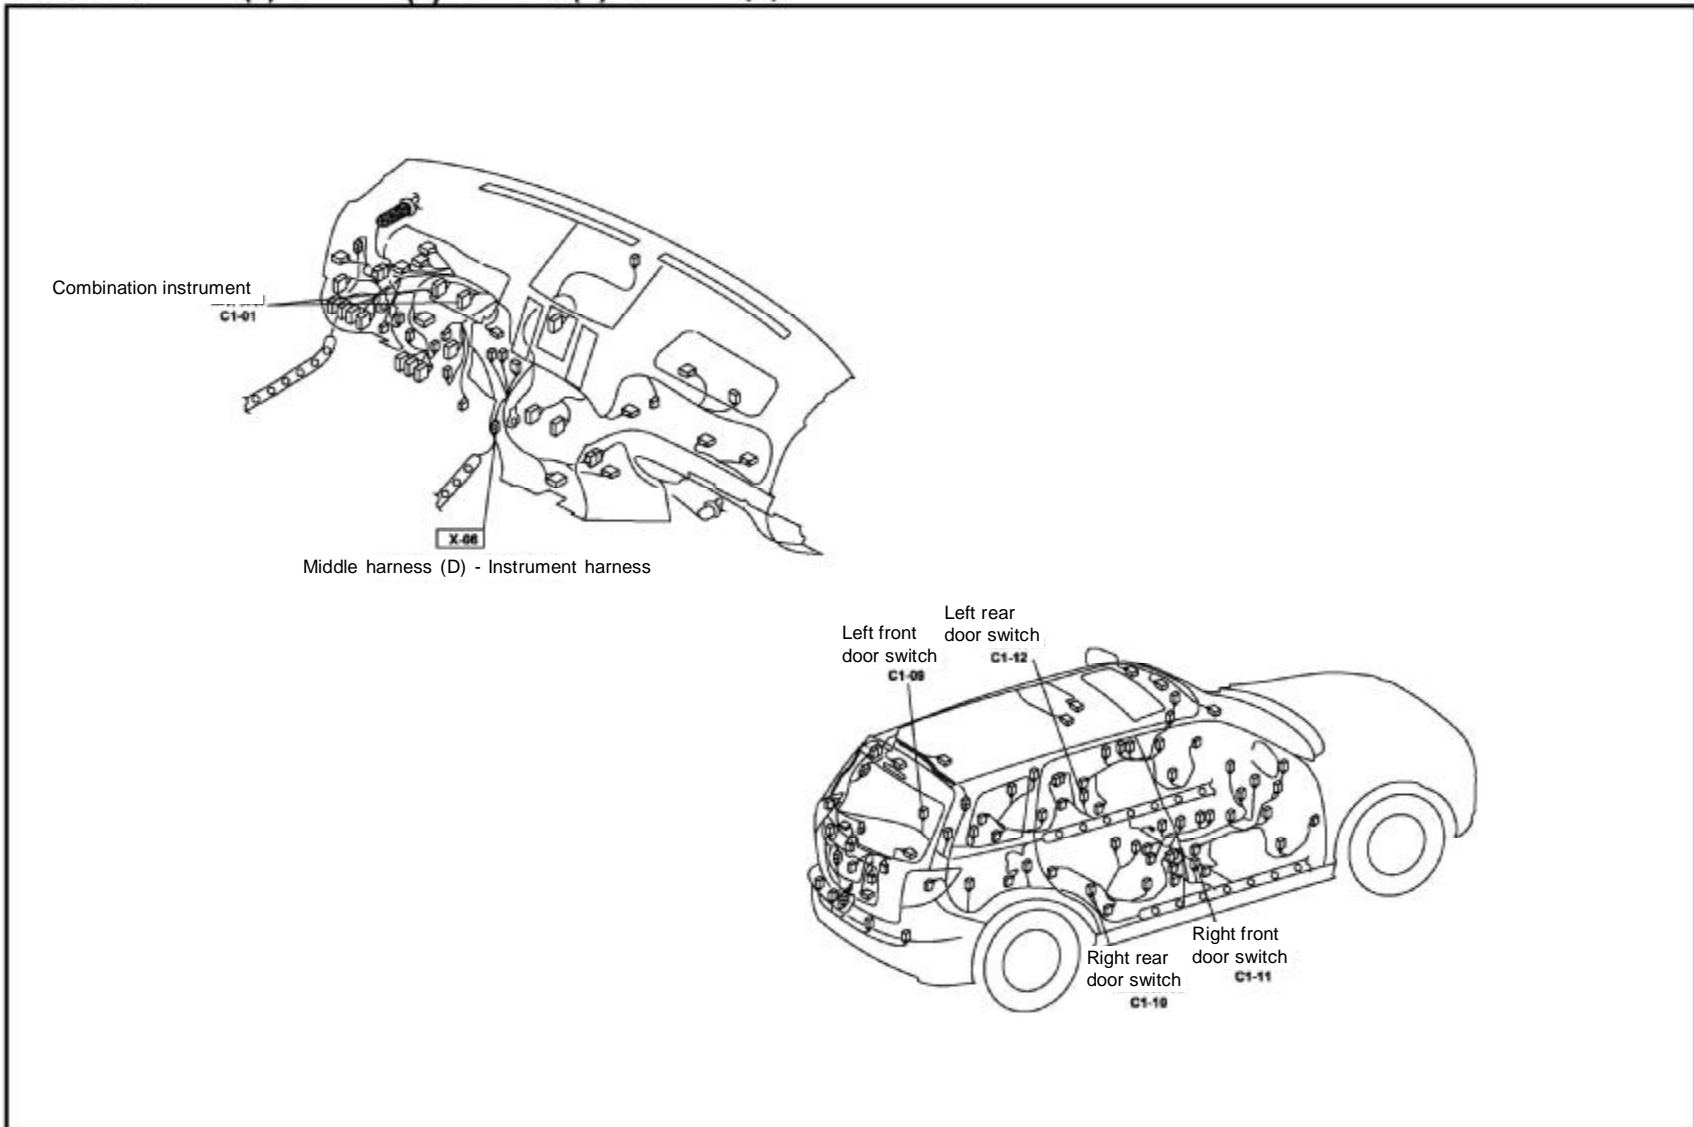


C-1f

 Mark on harness:

 (F) (E) (D) (R)

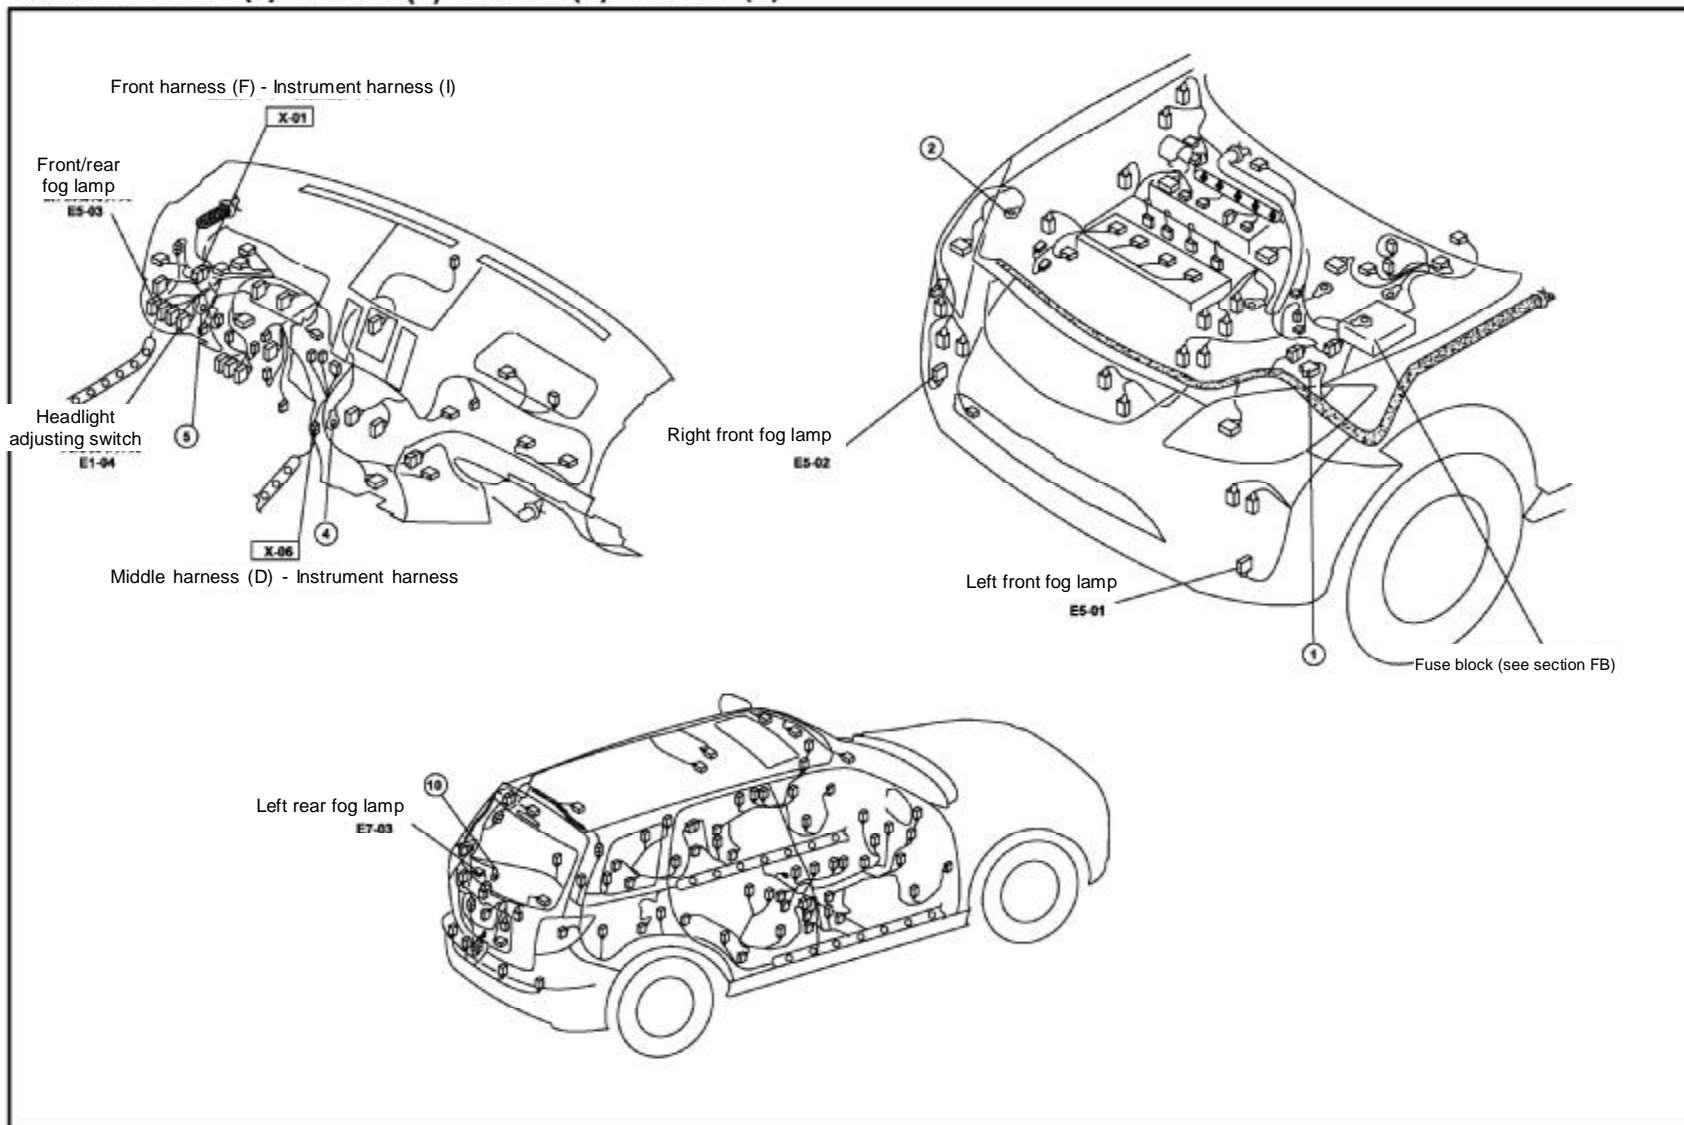

Mark on harness:  (F)  (E)  (D)  (R)

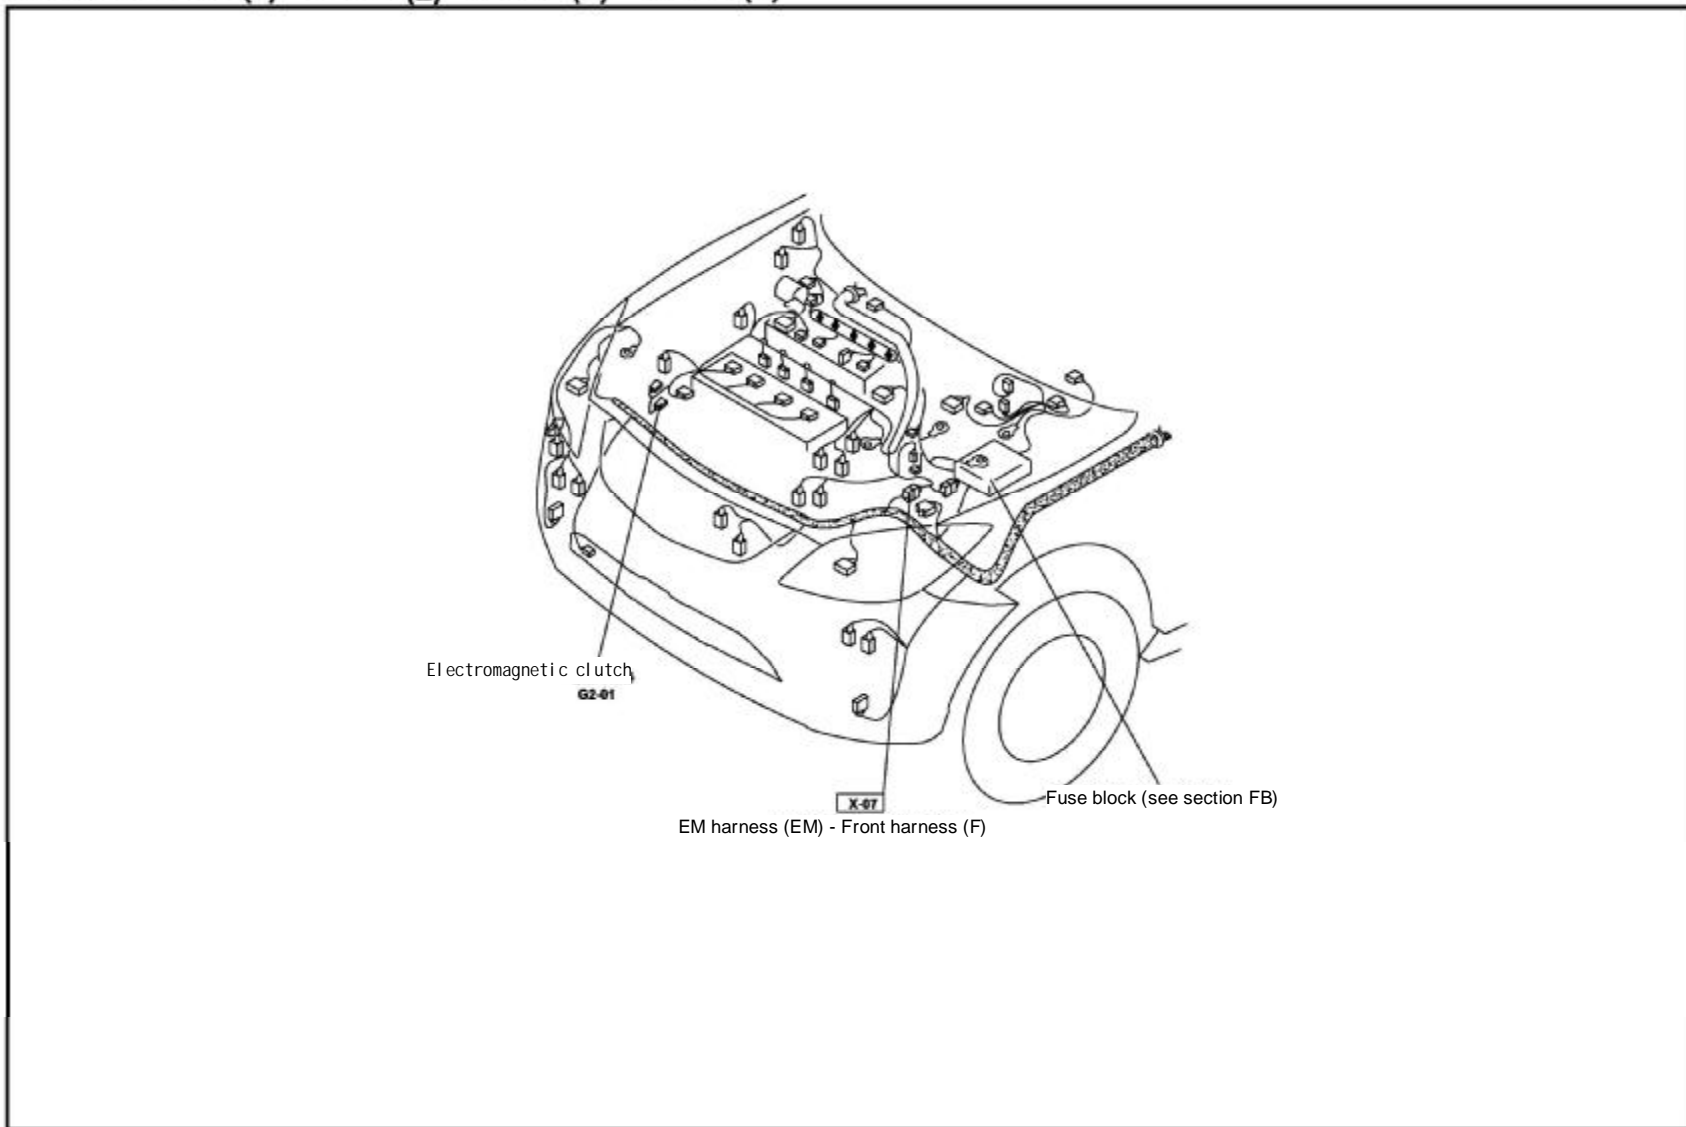

Electromagnetic clutch  
G2-01


X-07  
EM harness (EM) - Front harness (F)




Fuse block (see section FB)

**G-2**

Lighting lamp

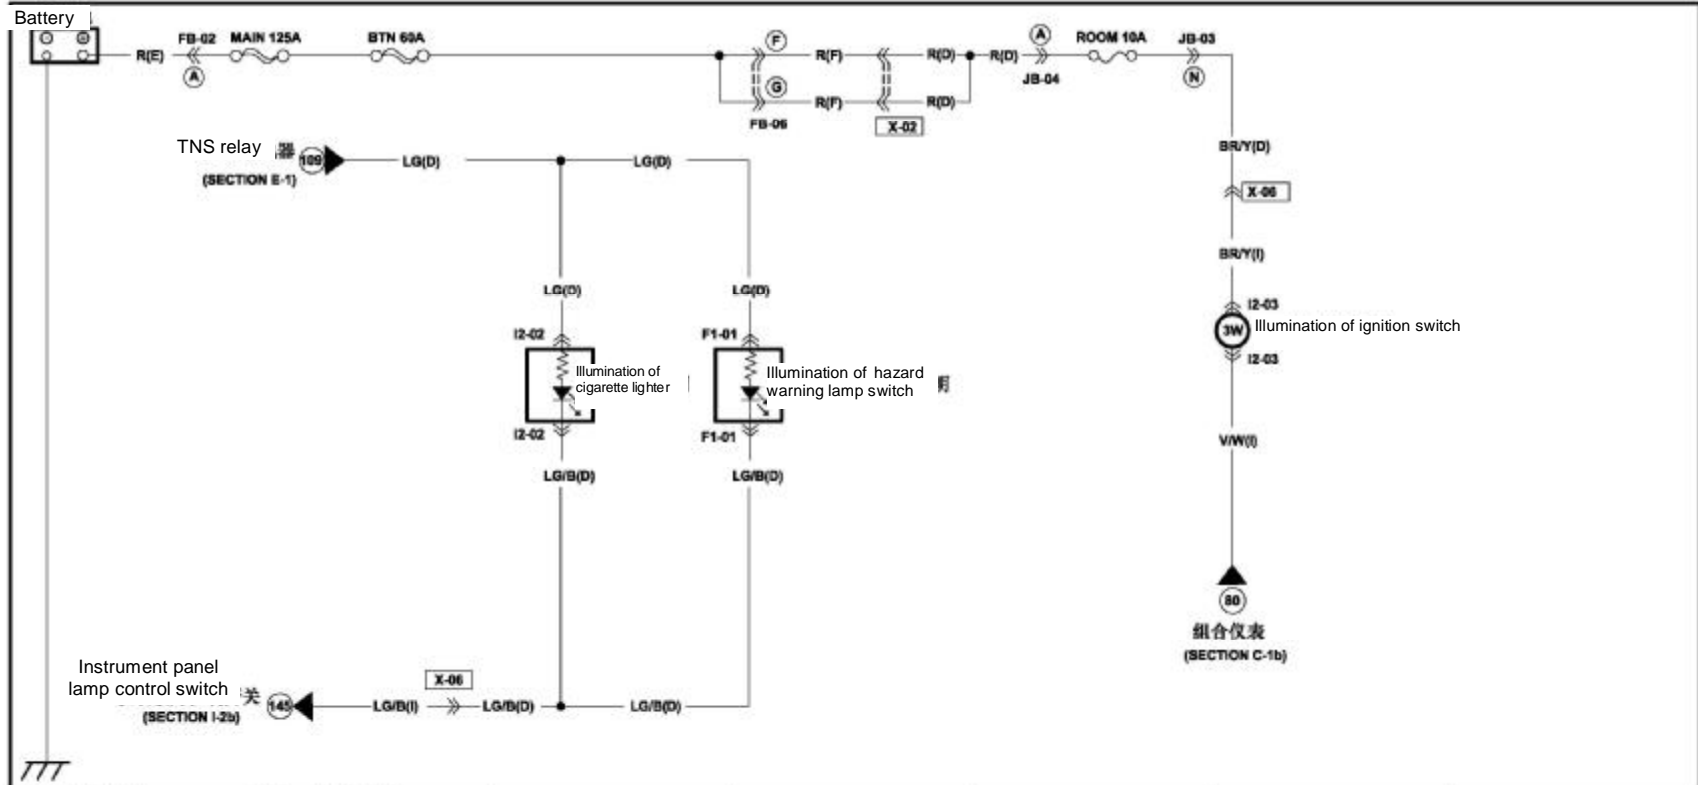
I-2c

 



<p>□ Illumination of cigarette lighter (I)</p> 	<p>□ Illumination of ignition switch (I)</p> 					
<p>F1-Illumination of hazard warning lamp switch (D)</p> 						



 
Mark on harness:

 (F) (E) (D) (R)


Middle harness  
(D)-Instrument harness (I) Central door lock unit

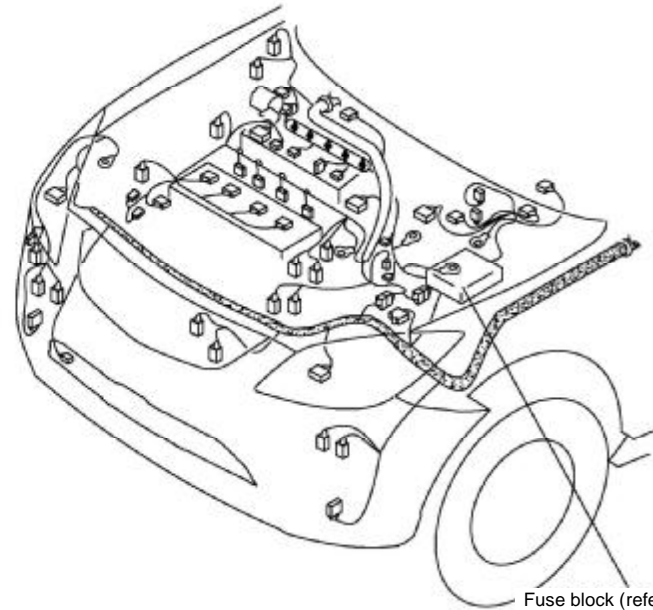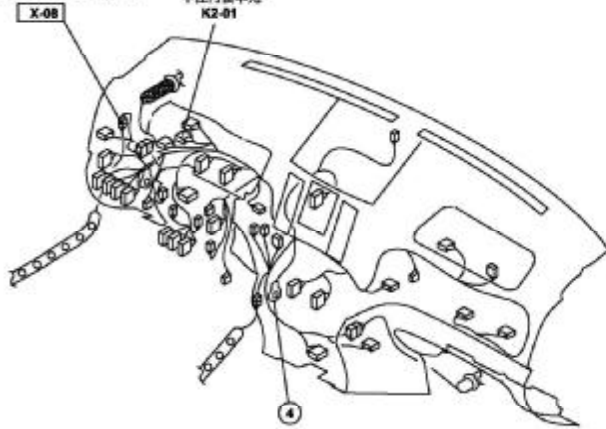

Fuse block (refer to FB sections)

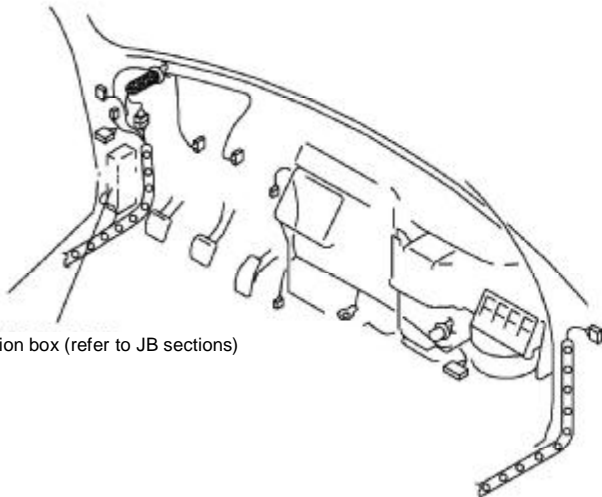

Junction box (refer to JB sections)

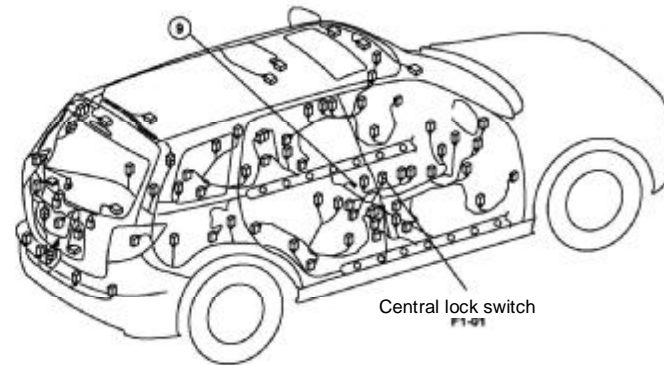

Central lock switch  
F1-01

**K-2a**

Mark on harness:  (F)  (E)  (D)  (R)

