CONTENTS

YVB101600 - 2nd Edition

POWER DISTRIBUTION **1.1**

EARTH DISTRIBUTION **2.1**

ANTI-THEFT ALARM **3.1**

CENTRAL DOOR LOCKING **4.1**

WINDOWS

Front **5.1**

Rear **5.2**

SUNROOF **6.1**

DOOR MIRRORS **7.1**

SEATS **8.1**

HEATED SEATS **8.4**

DIAGNOSTIC SOCKET **10.1**

BODY CONTROL UNIT **11.1**

CHARGING AND STARTING

Td5 ..... **15.1**

V8 ..... **15.2**

ENGINE MANAGEMENT SYSTEM

Td5 ..... **20.1**

V8 ..... **20.4**

IGNITION/SHIFT INTERLOCK **25.1**

CRUISE CONTROL **31.1**

ELECTRONIC AUTOMATIC TRANSMISSION **32.1**

ACTIVE CORNERING ENHANCEMENT (ACE) **33.1**

SELF LEVELING AND ANTI-LOCK BRAKING SYSTEM (SLABS) **34.1**

ANTI-LOCK BRAKING SYSTEM (ABS) **35.1**

SUPPLEMENTARY RESTRAINT SYSTEM (SRS) **36.1**

AIR CONDITIONING **38.1**

HEATER **39.1**

FUEL BURNING HEATER **39.2**

COOLING FANS **39.3**

HEATED REAR SCREEN **40.1**

HEATED FRONT SCREEN **40.2**

WIPERS AND WASHERS

Front **42.1**

Rear **42.2**

EXTERIOR LAMPS

Brake and reverse lamps **43.1**

Headlamp levelling **43.2**

Lights on alarm **43.3**

Head, side and tail lamps **43.4**

Front Fog Lamps **43.6**

Rear fog guard lamps **43.7**

INDICATORS AND HAZARDS **44.1**

INTERIOR LAMPS **45.1**

INTERIOR ILLUMINATION **46.1**

INSTRUMENTS **47.1**

HORN (S) **48.1**

CLOCK **48.2**

CIGAR LIGHTER **49.1**

ACCESSORY SOCKET **49.2**

IN-CAR ENTERTAINMENT

Base and mid line **50.1**


High line **50.3**


HEADER JOINTS **60.1**


SPLICES AND CENTRE TAPS **65.1**


Published by Rover Technical Communication

EARTH DISTRIBUTION

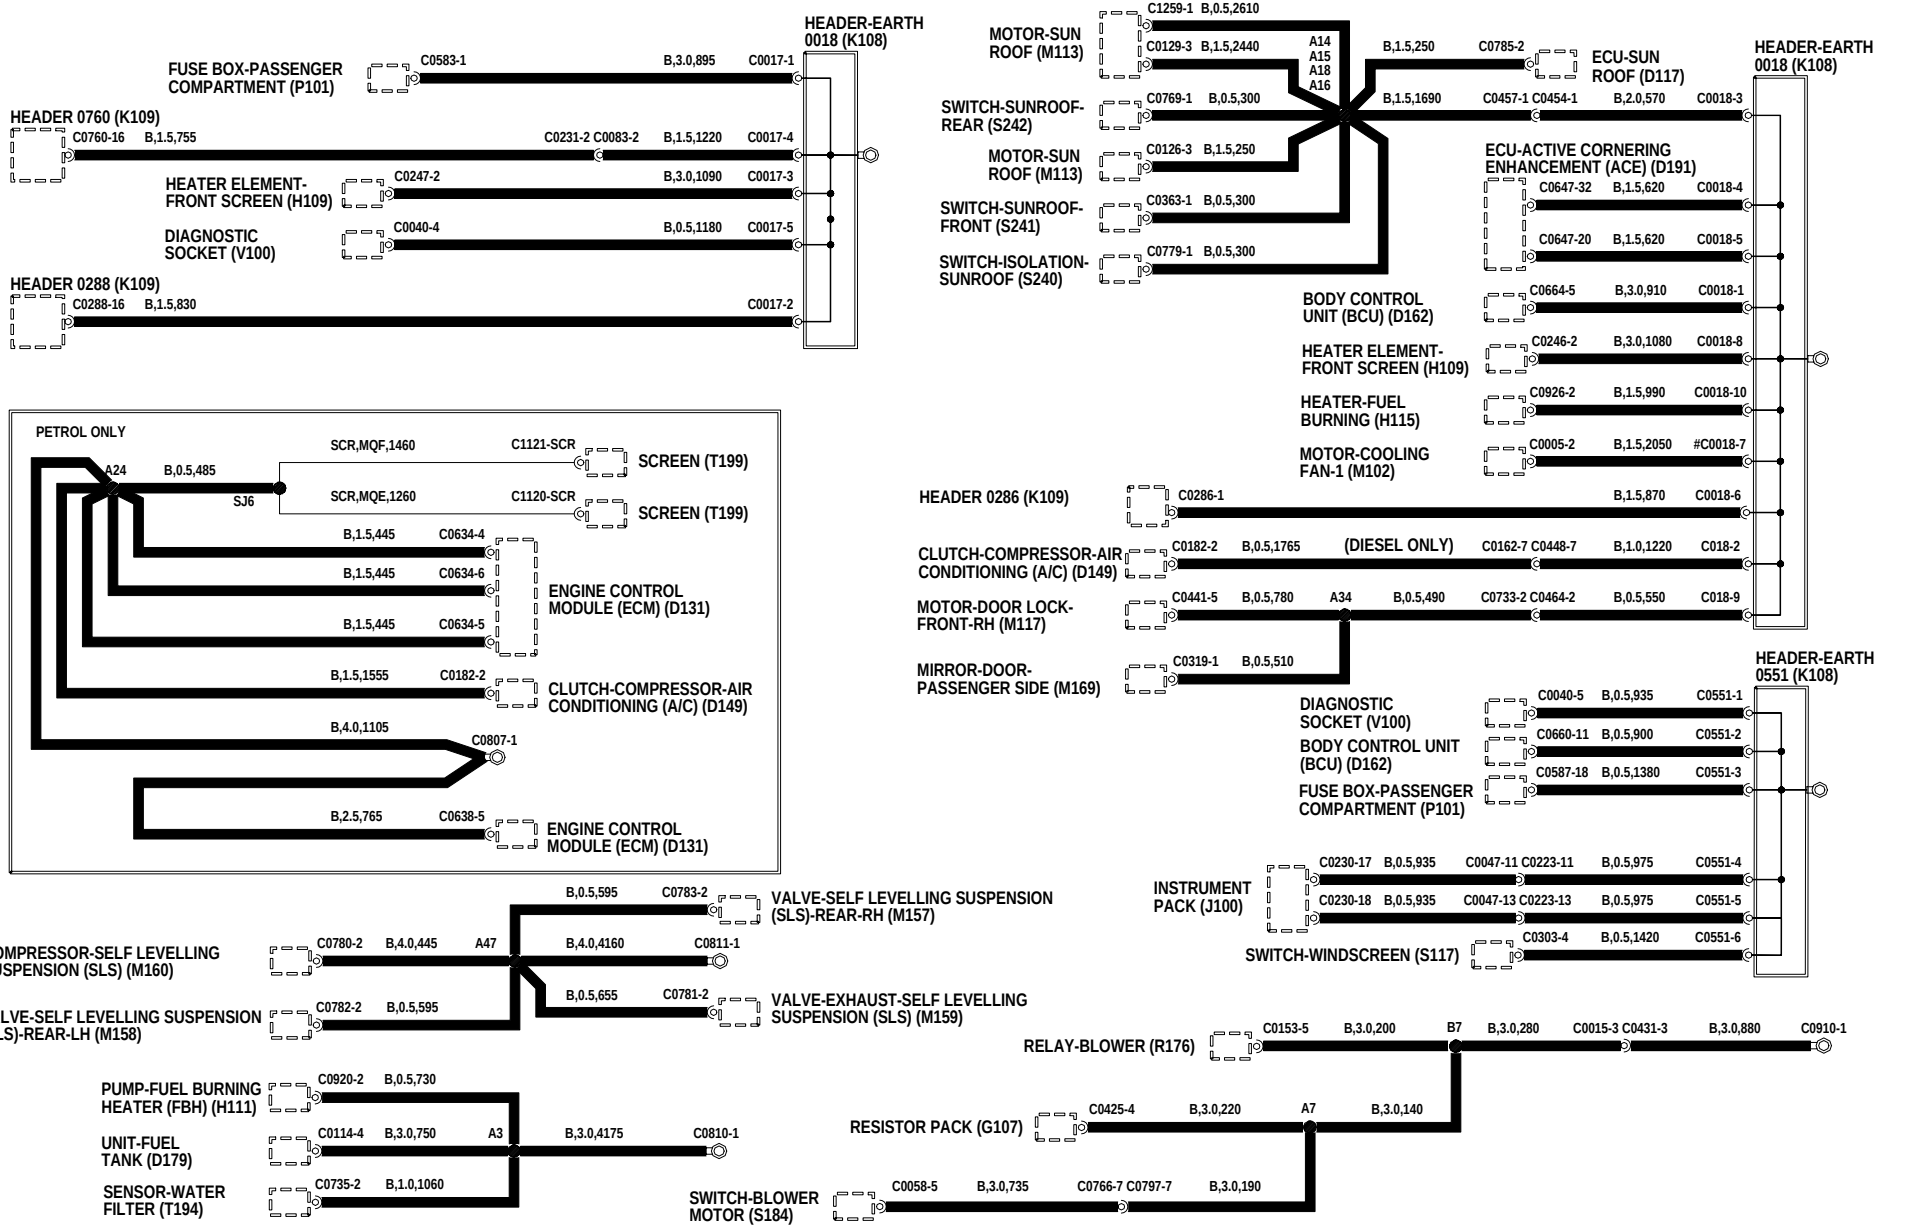


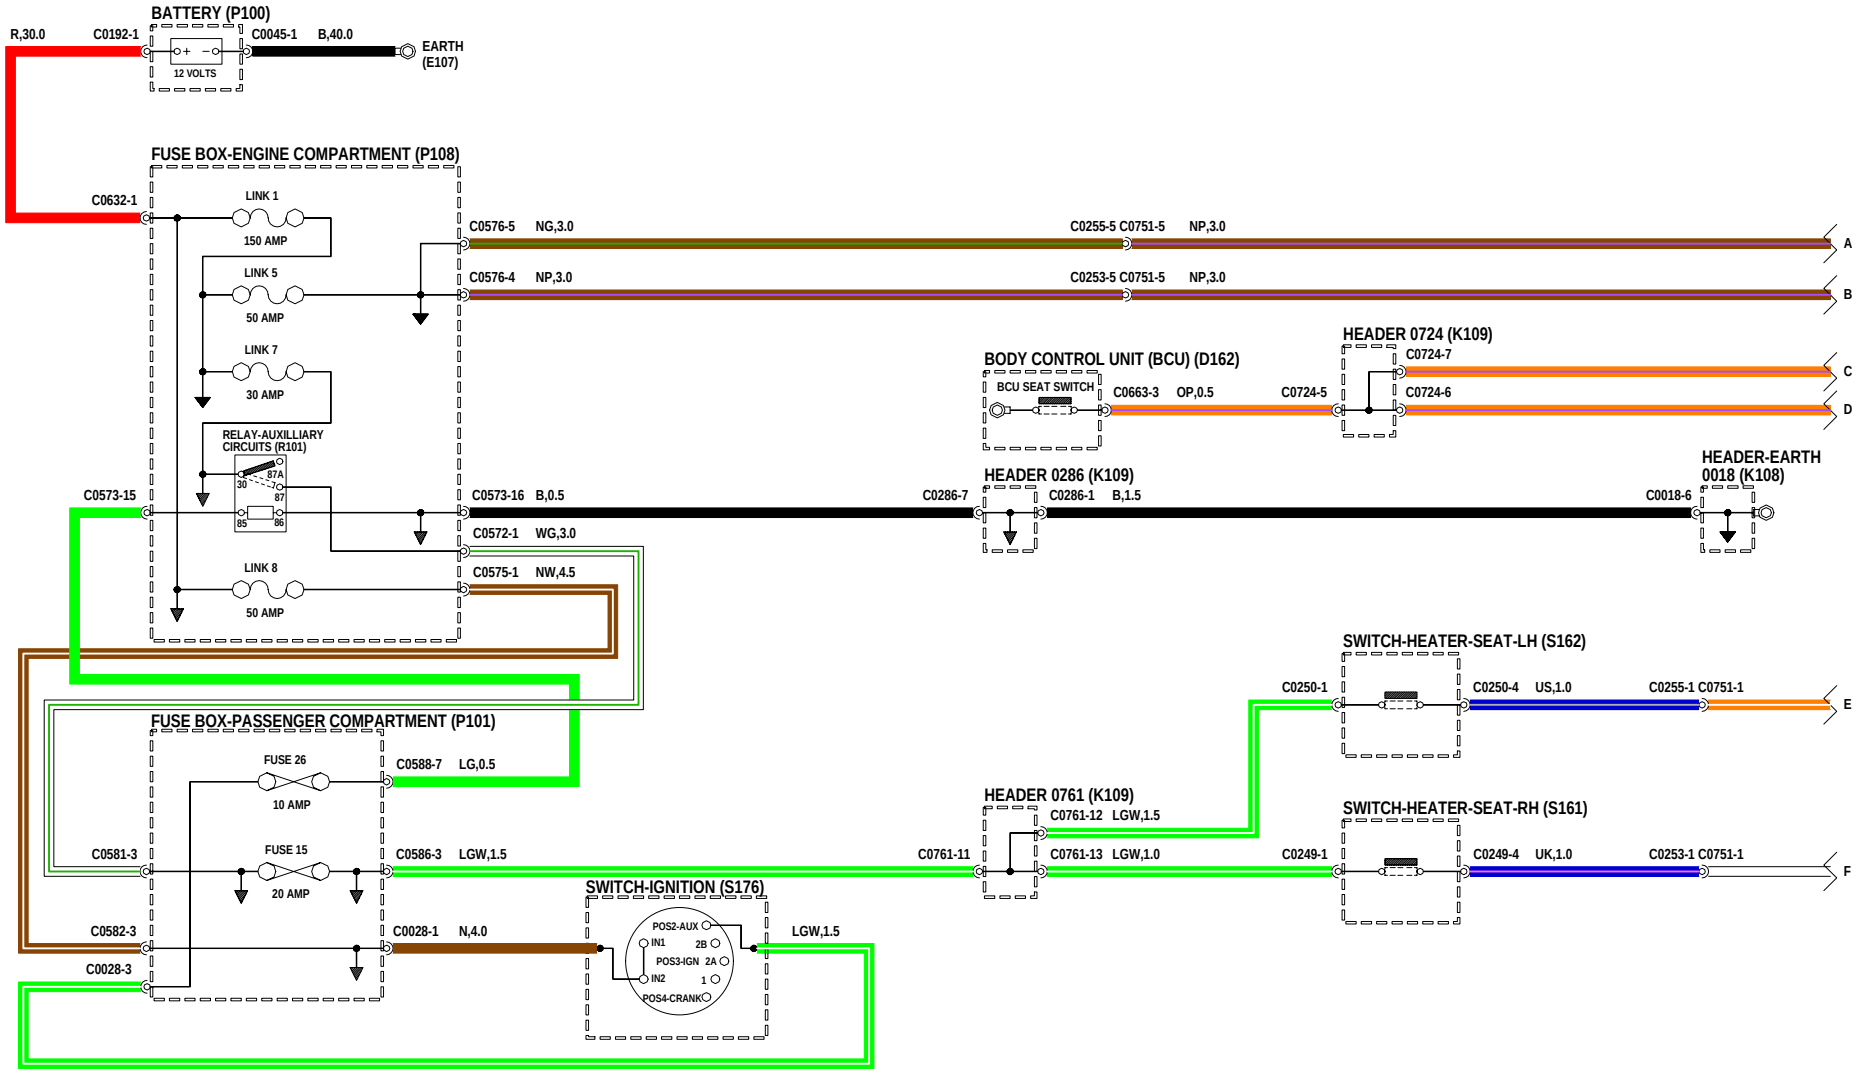

BATTERY (P100)
R,30.0
C0192-1
C0045-1
B,40.0
EARTH (E107)
12 VOLTS
FUSE BOX-ENGINE COMPARTMENT (P108)
C0632-1
LINK 1
150 AMP
LINK 5
50 AMP
LINK 7
30 AMP
RELAY-AUXILLIARY CIRCUITS (R101)
87A
30
87
85
86
LINK 8
50 AMP
C0573-15
C0573-16 B,0.5
C0572-1 WG,3.0
C0575-1 NW,4.5
C0576-5 NG,3.0
C0576-4 NP,3.0
C0255-5 C0751-5 NP,3.0
C0253-5 C0751-5 NP,3.0
A
B
BODY CONTROL UNIT (BCU) (D162)
BCU SEAT SWITCH
C0663-3 OP,0.5
C0724-5
HEADER 0724 (K109)
C0724-7
C0724-6
C
D
HEADER 0286 (K109)
C0286-7
C0286-1 B,1.5
C0018-6
HEADER-EARTH 0018 (K108)
FUSE BOX-PASSENGER COMPARTMENT (P101)
FUSE 26
10 AMP
C0588-7 LG,0.5
FUSE 15
20 AMP
C0581-3
C0586-3 LGW,1.5
C0582-3
C0028-1 N,4.0
C0028-3
SWITCH-IGNITION (S176)
POS2-AUX
IN1
2B
POS3-IGN
2A
IN2
1
POS4-CRANK
LGW,1.5
HEADER 0761 (K109)
C0761-12 LGW,1.5
C0761-11
C0761-13 LGW,1.0
SWITCH-HEATER-SEAT-LH (S162)
C0250-1
C0250-4 US,1.0
C0255-1 C0751-1
E
SWITCH-HEATER-SEAT-RH (S161)
C0249-1
C0249-4 UK,1.0
C0253-1 C0751-1
F

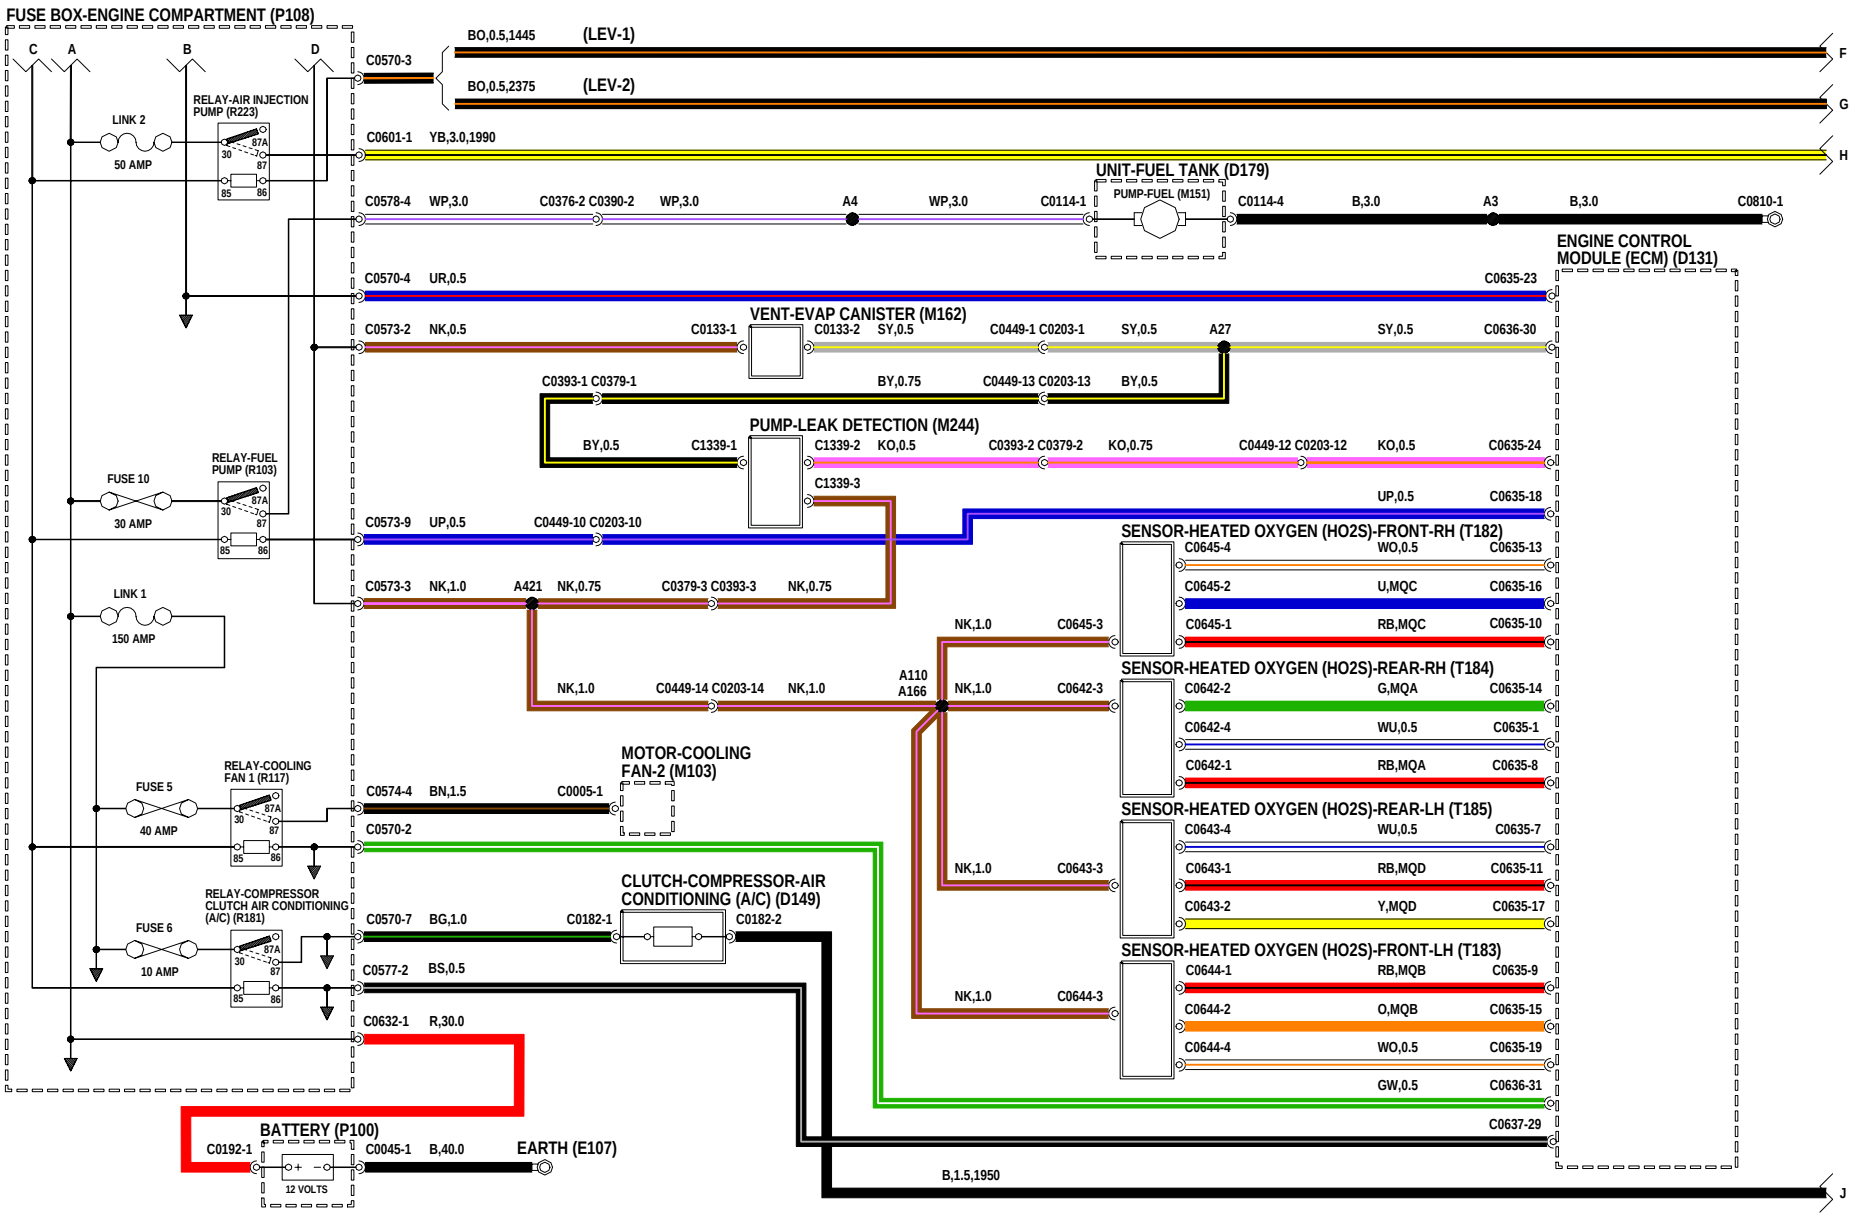

FUSE BOX-ENGINE COMPARTMENT (P108)
C
A
B
D
LINK 2
50 AMP
RELAY-AIR INJECTION PUMP (R223)
87A
30
87
85
86
FUSE 10
30 AMP
RELAY-FUEL PUMP (R103)
LINK 1
150 AMP
FUSE 5
40 AMP
RELAY-COOLING FAN 1 (R117)
FUSE 6
10 AMP
RELAY-COMPRESSOR CLUTCH AIR CONDITIONING (A/C) (R181)
C0570-3
BO,0.5,1445
(LEV-1)
BO,0.5,2375
(LEV-2)
F
G
C0601-1
YB,3.0,1990
H
UNIT-FUEL TANK (D179)
PUMP-FUEL (M151)
C0578-4
WP,3.0
C0376-2 C0390-2
WP,3.0
A4
WP,3.0
C0114-1
C0114-4
B,3.0
A3
B,3.0
C0810-1
ENGINE CONTROL MODULE (ECM) (D131)
C0570-4
UR,0.5
C0635-23
VENT-EVAP CANISTER (M162)
C0573-2
NK,0.5
C0133-1
C0133-2
SY,0.5
C0449-1 C0203-1
SY,0.5
A27
SY,0.5
C0636-30
C0393-1 C0379-1
BY,0.75
C0449-13 C0203-13
BY,0.5
PUMP-LEAK DETECTION (M244)
BY,0.5
C1339-1
C1339-2
KO,0.5
C0393-2 C0379-2
KO,0.75
C0449-12 C0203-12
KO,0.5
C0635-24
C1339-3
UP,0.5
C0635-18
C0573-9
UP,0.5
C0449-10 C0203-10
SENSOR-HEATED OXYGEN (HO2S)-FRONT-RH (T182)
C0645-4
WO,0.5
C0635-13
C0645-2
U,MQC
C0635-16
C0645-1
RB,MQC
C0635-10
C0573-3
NK,1.0
A421
NK,0.75
C0379-3 C0393-3
NK,0.75
NK,1.0
C0645-3
SENSOR-HEATED OXYGEN (HO2S)-REAR-RH (T184)
NK,1.0
C0449-14 C0203-14
NK,1.0
A110
A166
NK,1.0
C0642-3
C0642-2
G,MQA
C0635-14
C0642-4
WU,0.5
C0635-1
C0642-1
RB,MQA
C0635-8
MOTOR-COOLING FAN-2 (M103)
C0574-4
BN,1.5
C0005-1
C0570-2
SENSOR-HEATED OXYGEN (HO2S)-REAR-LH (T185)
C0643-4
WU,0.5
C0635-7
NK,1.0
C0643-3
C0643-1
RB,MQD
C0635-11
C0643-2
Y,MQD
C0635-17
CLUTCH-COMPRESSOR-AIR CONDITIONING (A/C) (D149)
C0570-7
BG,1.0
C0182-1
C0182-2
SENSOR-HEATED OXYGEN (HO2S)-FRONT-LH (T183)
C0577-2
BS,0.5
NK,1.0
C0644-3
C0644-1
RB,MQB
C0635-9
C0644-2
O,MQB
C0635-15
C0644-4
WO,0.5
C0635-19
C0632-1
R,30.0
GW,0.5
C0636-31
C0637-29
BATTERY (P100)
C0192-1
12 VOLTS
C0045-1
B,40.0
EARTH (E107)
B,1.5,1950
J

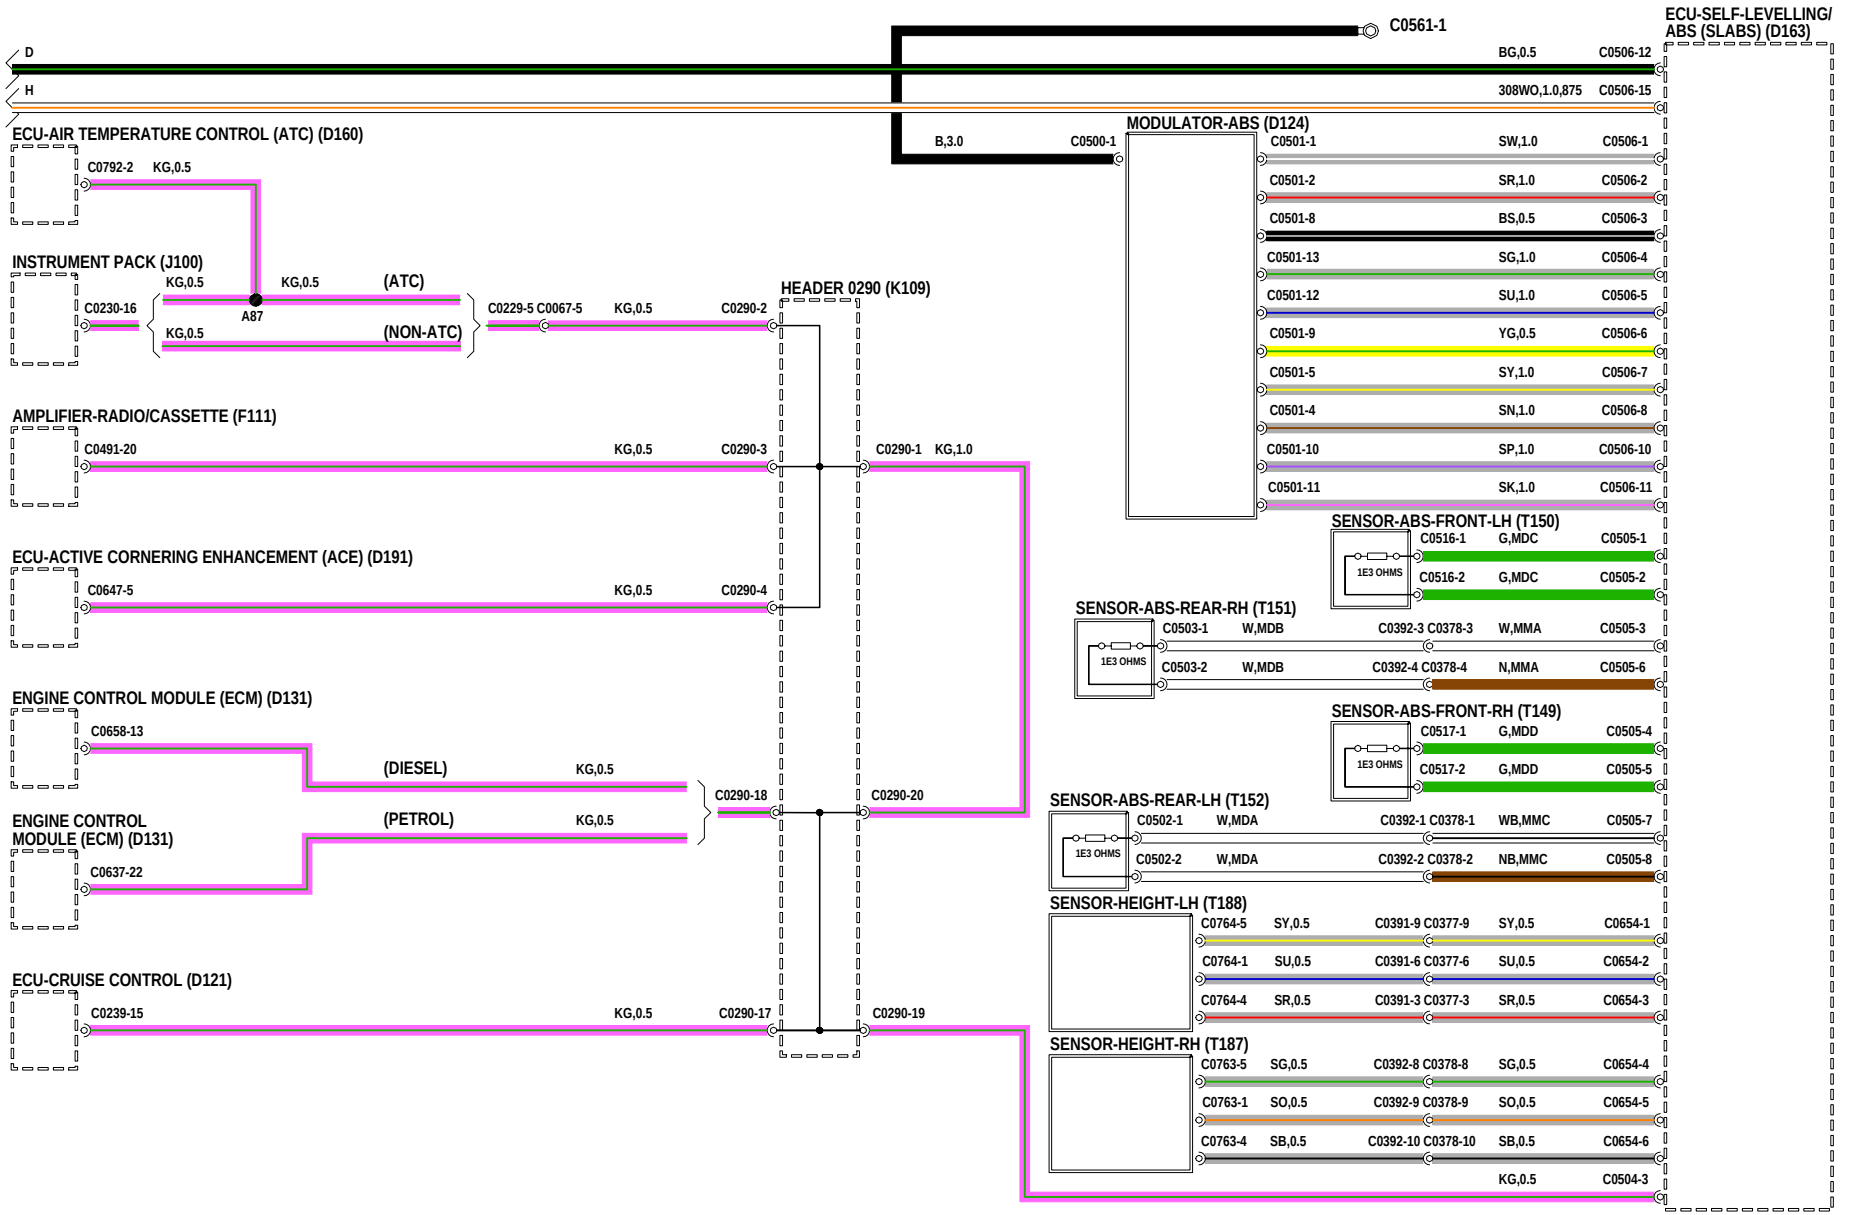
C0561-1
ECU-SELF-LEVELLING/ ABS (SLABS) (D163)
D
H
BG,0.5 C0506-12
308WO,1.0,875 C0506-15
ECU-AIR TEMPERATURE CONTROL (ATC) (D160)
C0792-2 KG,0.5
B,3.0 C0500-1
MODULATOR-ABS (D124)
C0501-1 SW,1.0 C0506-1
C0501-2 SR,1.0 C0506-2
C0501-8 BS,0.5 C0506-3
C0501-13 SG,1.0 C0506-4
C0501-12 SU,1.0 C0506-5
C0501-9 YG,0.5 C0506-6
C0501-5 SY,1.0 C0506-7
C0501-4 SN,1.0 C0506-8
C0501-10 SP,1.0 C0506-10
C0501-11 SK,1.0 C0506-11
INSTRUMENT PACK (J100)
C0230-16
KG,0.5 KG,0.5 (ATC)
A87
KG,0.5 (NON-ATC)
C0229-5 C0067-5 KG,0.5 C0290-2
HEADER 0290 (K109)
SENSOR-ABS-FRONT-LH (T150)
C0516-1 G,MDC C0505-1
1E3 OHMS
C0516-2 G,MDC C0505-2
AMPLIFIER-RADIO/CASSETTE (F111)
C0491-20 KG,0.5 C0290-3
C0290-1 KG,1.0
SENSOR-ABS-REAR-RH (T151)
C0503-1 W,MDB C0392-3 C0378-3 W,MMA C0505-3
1E3 OHMS
C0503-2 W,MDB C0392-4 C0378-4 N,MMA C0505-6
ECU-ACTIVE CORNERING ENHANCEMENT (ACE) (D191)
C0647-5 KG,0.5 C0290-4
SENSOR-ABS-FRONT-RH (T149)
C0517-1 G,MDD C0505-4
1E3 OHMS
C0517-2 G,MDD C0505-5
ENGINE CONTROL MODULE (ECM) (D131)
C0658-13
(DIESEL) KG,0.5
C0290-18
C0290-20
SENSOR-ABS-REAR-LH (T152)
C0502-1 W,MDA C0392-1 C0378-1 WB,MMC C0505-7
1E3 OHMS
C0502-2 W,MDA C0392-2 C0378-2 NB,MMC C0505-8
ENGINE CONTROL MODULE (ECM) (D131)
(PETROL) KG,0.5
C0637-22
SENSOR-HEIGHT-LH (T188)
C0764-5 SY,0.5 C0391-9 C0377-9 SY,0.5 C0654-1
C0764-1 SU,0.5 C0391-6 C0377-6 SU,0.5 C0654-2
C0764-4 SR,0.5 C0391-3 C0377-3 SR,0.5 C0654-3
ECU-CRUISE CONTROL (D121)
C0239-15 KG,0.5 C0290-17
C0290-19
SENSOR-HEIGHT-RH (T187)
C0763-5 SG,0.5 C0392-8 C0378-8 SG,0.5 C0654-4
C0763-1 SO,0.5 C0392-9 C0378-9 SO,0.5 C0654-5
C0763-4 SB,0.5 C0392-10 C0378-10 SB,0.5 C0654-6
KG,0.5 C0504-3


HEATED REAR SCREEN

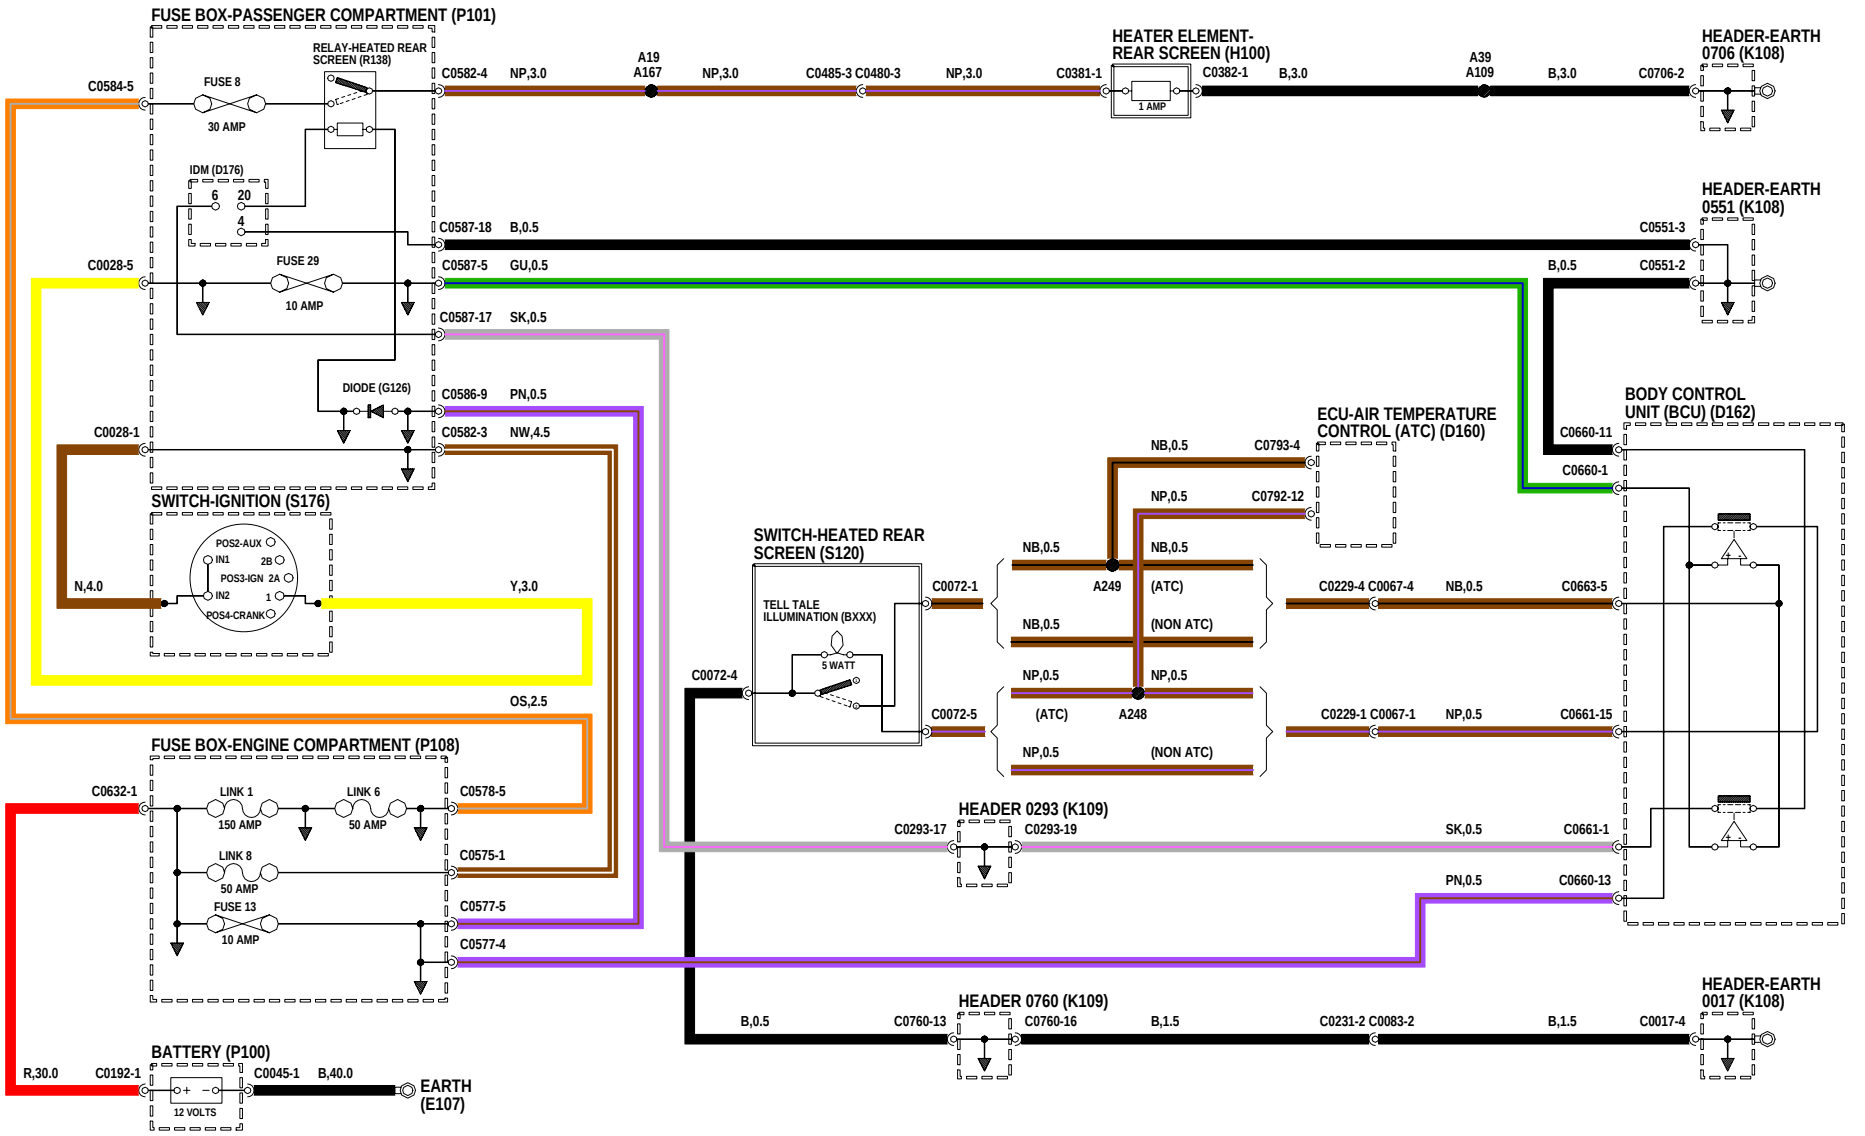

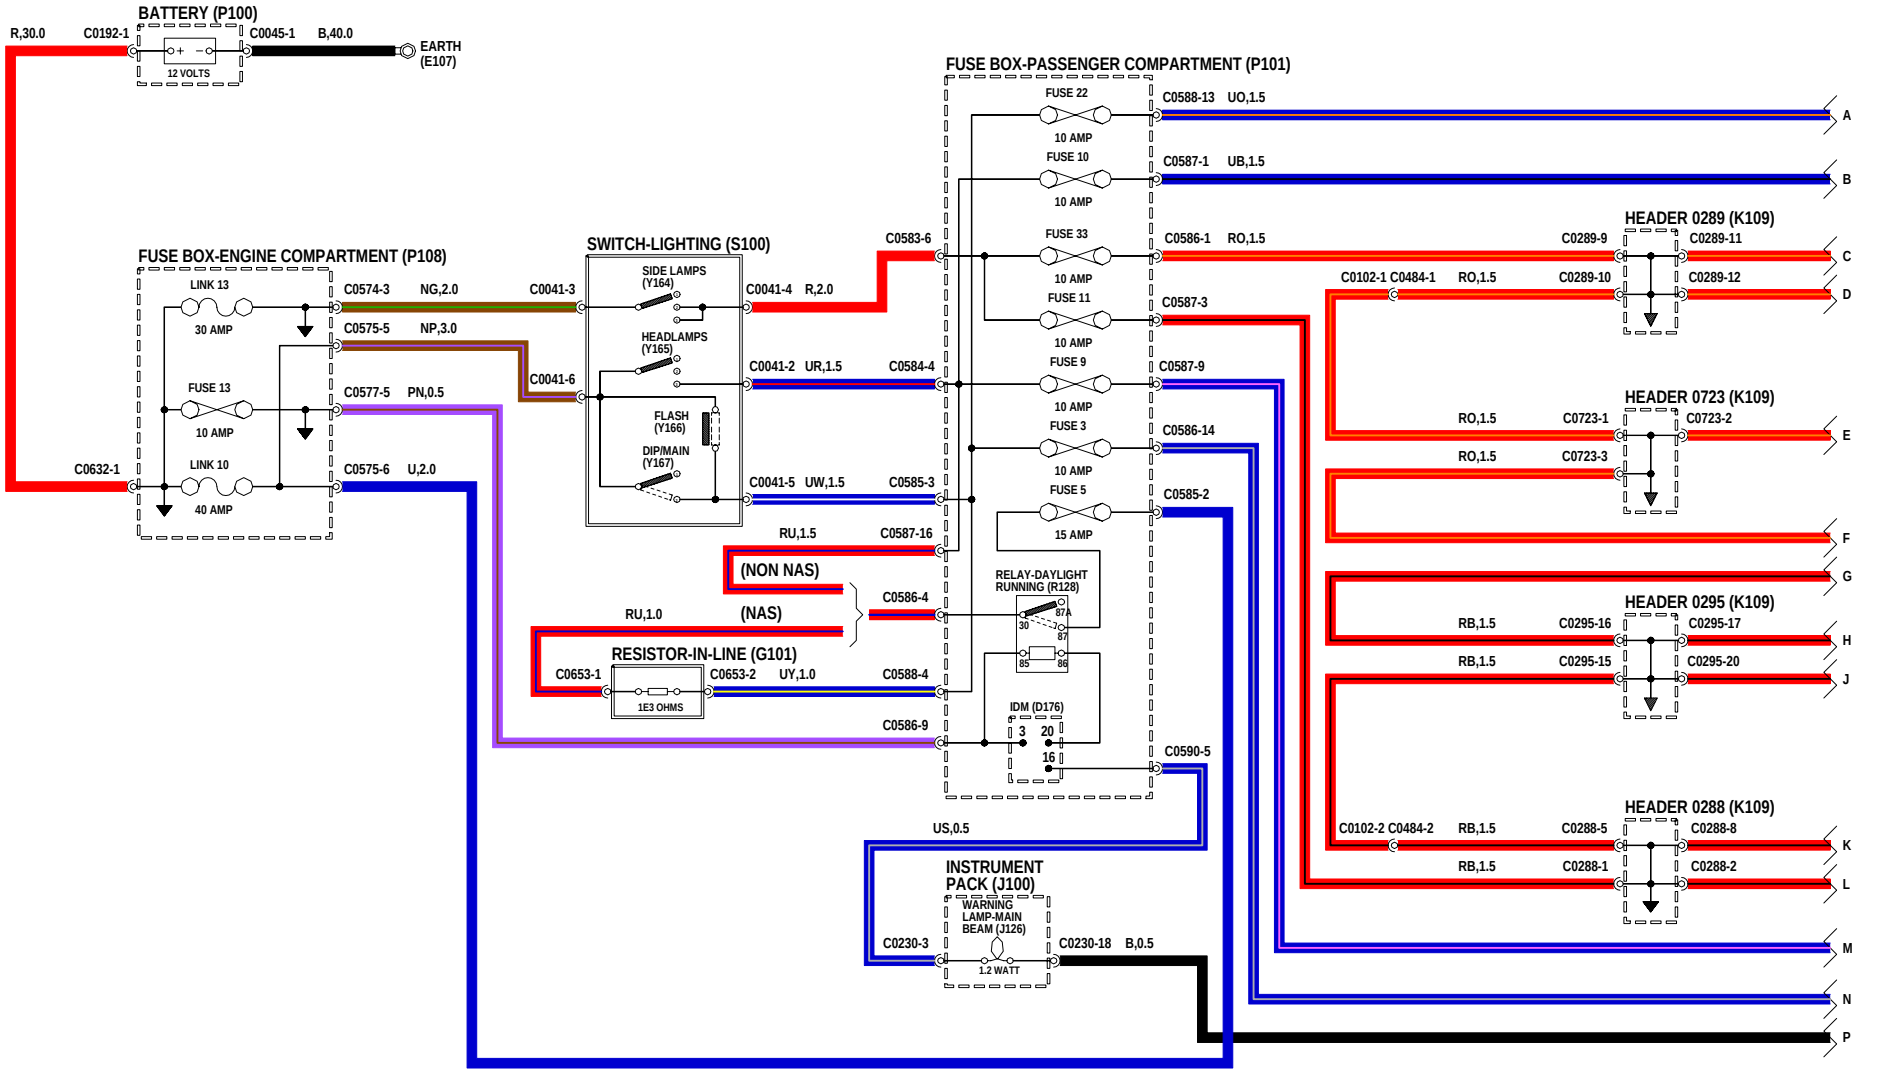

BATTERY (P100)
R,30.0
C0192-1
12 VOLTS
C0045-1
B,40.0
EARTH (E107)
FUSE BOX-ENGINE COMPARTMENT (P108)
LINK 13
30 AMP
FUSE 13
10 AMP
LINK 10
40 AMP
C0632-1
C0574-3 NG,2.0
C0575-5 NP,3.0
C0577-5 PN,0.5
C0575-6 U,2.0
C0041-3
C0041-6
SWITCH-LIGHTING (S100)
SIDE LAMPS (Y164)
HEADLAMPS (Y165)
FLASH (Y166)
DIP/MAIN (Y167)
C0041-4 R,2.0
C0041-2 UR,1.5
C0041-5 UW,1.5
C0583-6
C0584-4
C0585-3
RU,1.5 C0587-16
(NON NAS)
RU,1.0 (NAS)
C0586-4
RESISTOR-IN-LINE (G101)
C0653-1
1E3 OHMS
C0653-2 UY,1.0
C0588-4
C0586-9
FUSE BOX-PASSENGER COMPARTMENT (P101)
FUSE 22
10 AMP
FUSE 10
10 AMP
FUSE 33
10 AMP
FUSE 11
10 AMP
FUSE 9
10 AMP
FUSE 3
10 AMP
FUSE 5
15 AMP
RELAY-DAYLIGHT RUNNING (R128)
IDM (D176)
C0590-5
US,0.5
INSTRUMENT PACK (J100)
WARNING LAMP-MAIN BEAM (J126)
1.2 WATT
C0230-3
C0230-18 B,0.5
C0588-13 UO,1.5
C0587-1 UB,1.5
C0586-1 RO,1.5
C0587-3
C0587-9
C0586-14
C0585-2
HEADER 0289 (K109)
C0289-9
C0289-11
C0102-1 C0484-1 RO,1.5
C0289-10
C0289-12
HEADER 0723 (K109)
RO,1.5 C0723-1
C0723-2
RO,1.5 C0723-3
HEADER 0295 (K109)
RB,1.5 C0295-16
C0295-17
RB,1.5 C0295-15
C0295-20
HEADER 0288 (K109)
C0102-2 C0484-2 RB,1.5
C0288-5
C0288-8
RB,1.5 C0288-1
C0288-2
A
B
C
D
E
F
G
H
J
K
L
M
N
P

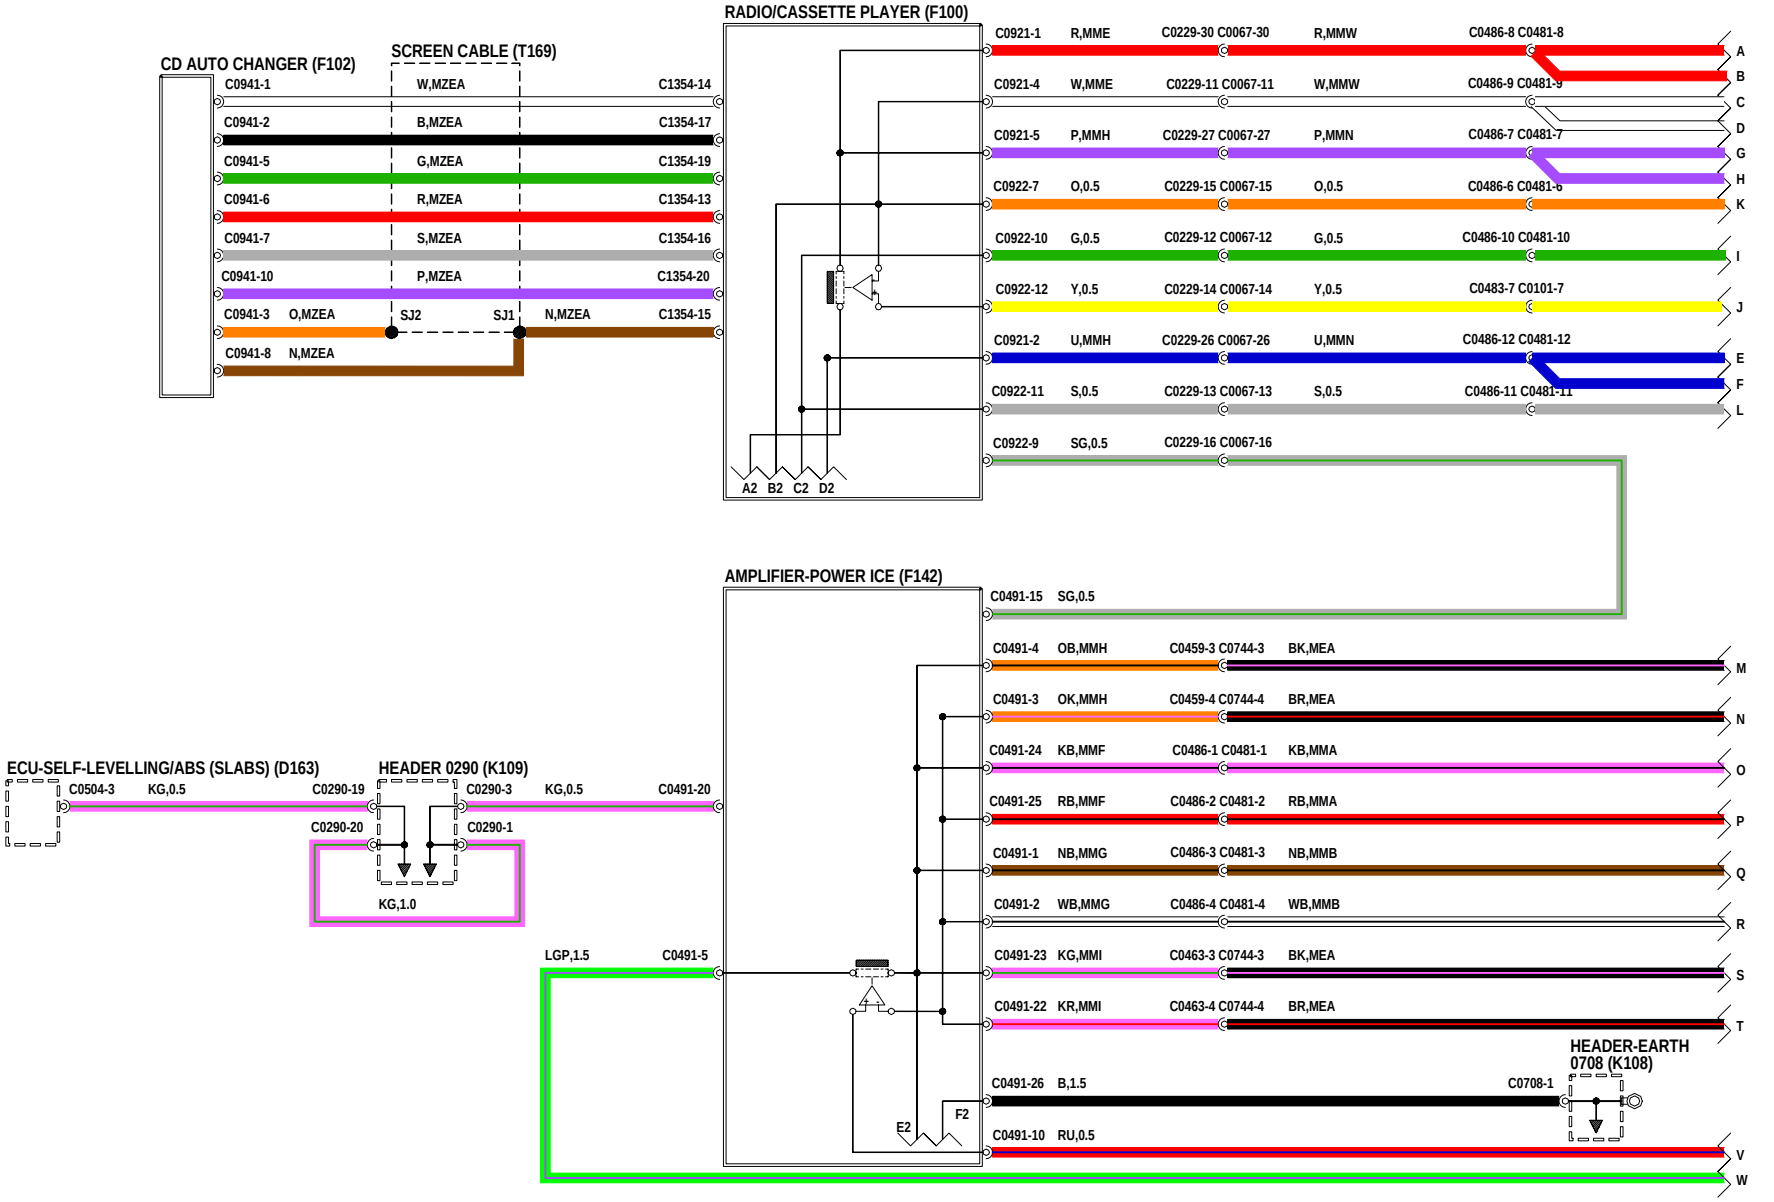
CD AUTO CHANGER (F102)
SCREEN CABLE (T169)
C0941-1 W,MZEA C1354-14
C0941-2 B,MZEA C1354-17
C0941-5 G,MZEA C1354-19
C0941-6 R,MZEA C1354-13
C0941-7 S,MZEA C1354-16
C0941-10 P,MZEA C1354-20
C0941-3 O,MZEA SJ2 SJ1 N,MZEA C1354-15
C0941-8 N,MZEA
RADIO/CASSETTE PLAYER (F100)
A2 B2 C2 D2
C0921-1 R,MME C0229-30 C0067-30 R,MMW C0486-8 C0481-8 A
C0921-4 W,MME C0229-11 C0067-11 W,MMW C0486-9 C0481-9 B C D
C0921-5 P,MMH C0229-27 C0067-27 P,MMN C0486-7 C0481-7 G H
C0922-7 O,0.5 C0229-15 C0067-15 O,0.5 C0486-6 C0481-6 K
C0922-10 G,0.5 C0229-12 C0067-12 G,0.5 C0486-10 C0481-10 I
C0922-12 Y,0.5 C0229-14 C0067-14 Y,0.5 C0483-7 C0101-7 J
C0921-2 U,MMH C0229-26 C0067-26 U,MMN C0486-12 C0481-12 E F
C0922-11 S,0.5 C0229-13 C0067-13 S,0.5 C0486-11 C0481-11 L
C0922-9 SG,0.5 C0229-16 C0067-16
AMPLIFIER-POWER ICE (F142)
C0491-15 SG,0.5
C0491-4 OB,MMH C0459-3 C0744-3 BK,MEA M
C0491-3 OK,MMH C0459-4 C0744-4 BR,MEA N
C0491-24 KB,MMF C0486-1 C0481-1 KB,MMA O
C0491-25 RB,MMF C0486-2 C0481-2 RB,MMA P
C0491-1 NB,MMG C0486-3 C0481-3 NB,MMB Q
C0491-2 WB,MMG C0486-4 C0481-4 WB,MMB R
C0491-23 KG,MMI C0463-3 C0744-3 BK,MEA S
C0491-22 KR,MMI C0463-4 C0744-4 BR,MEA T
HEADER-EARTH 0708 (K108)
C0491-26 B,1.5 C0708-1
C0491-10 RU,0.5 V W
E2 F2
ECU-SELF-LEVELLING/ABS (SLABS) (D163)
HEADER 0290 (K109)
C0504-3 KG,0.5 C0290-19 C0290-3 KG,0.5 C0491-20
C0290-20 C0290-1
KG,1.0
LGP,1.5 C0491-5

SPLICES AND CENTRE TAPS

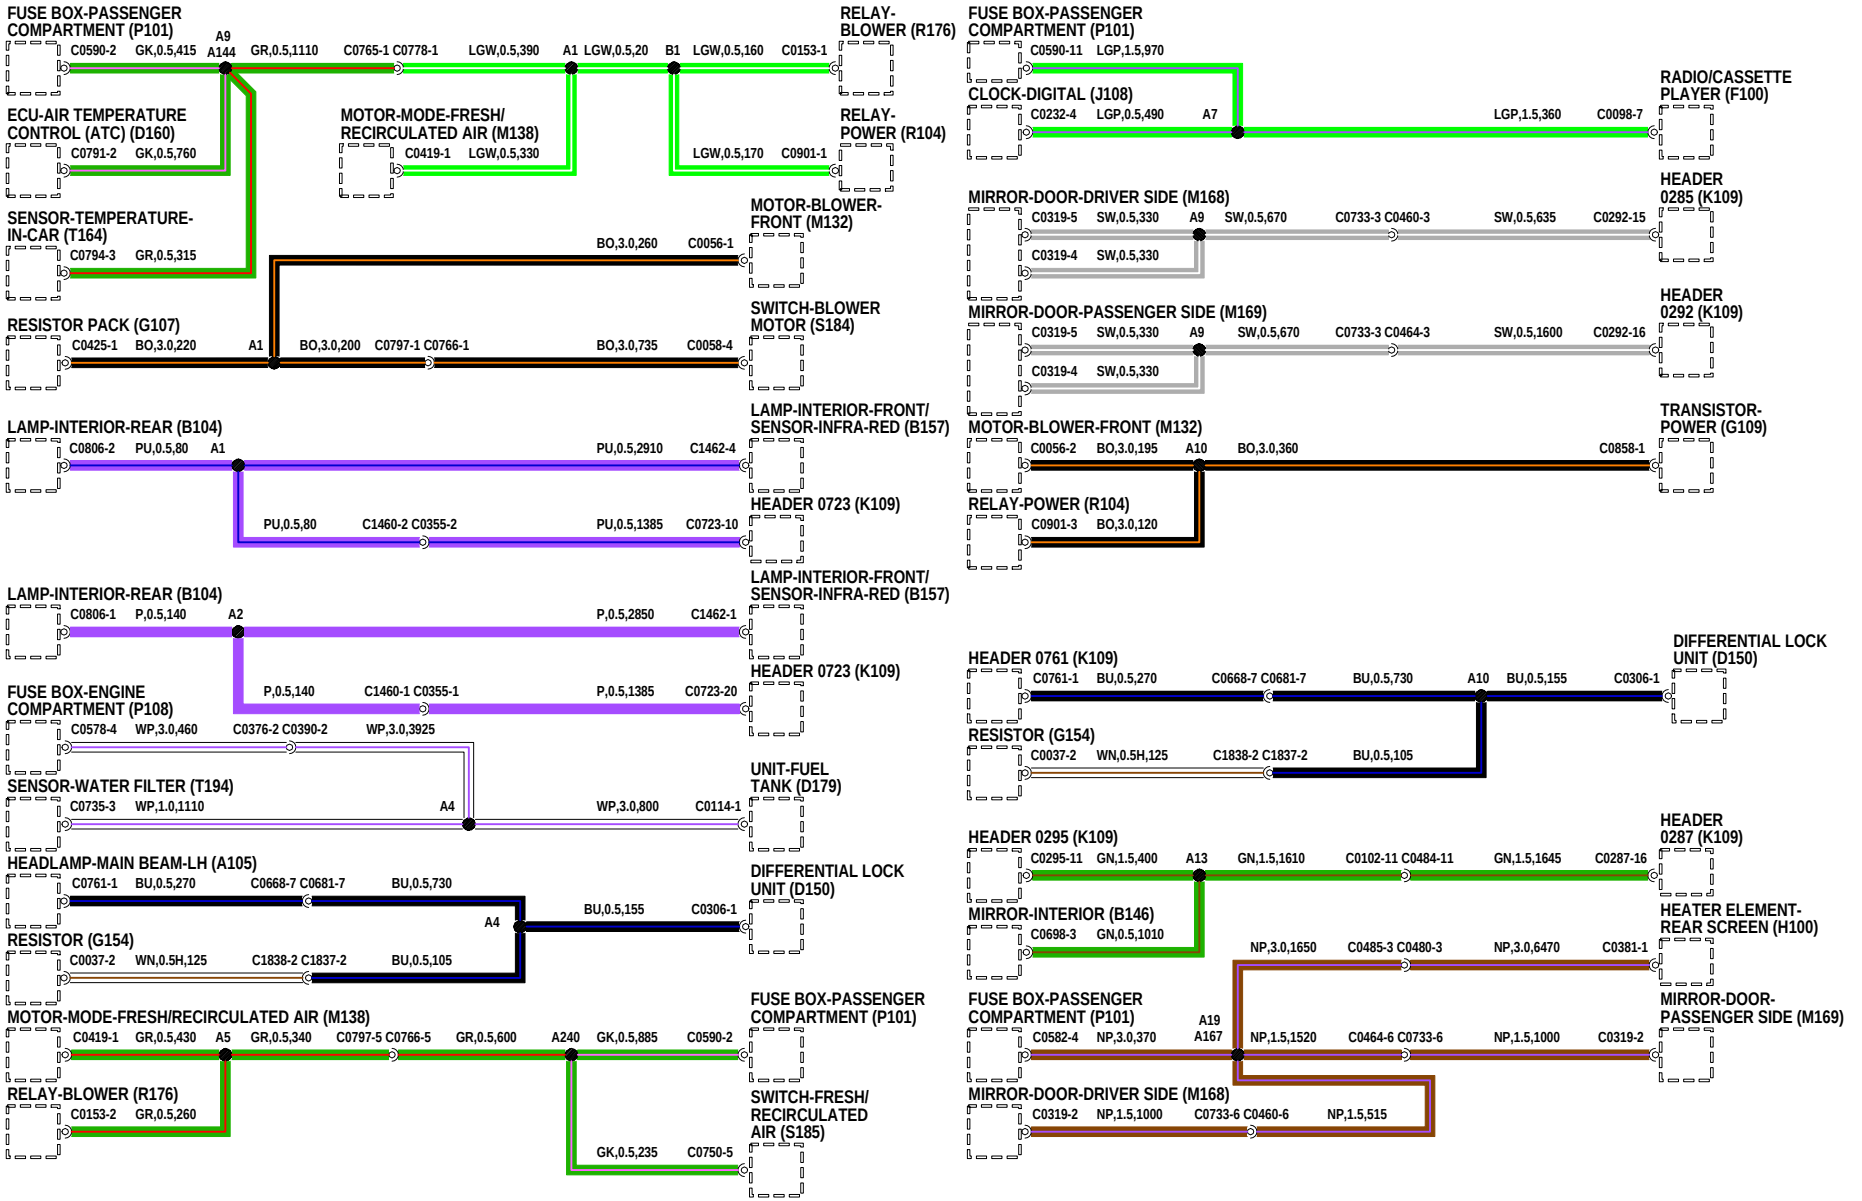


POWER DISTRIBUTION
PASSENGER COMPARTMENT FUSE BOX

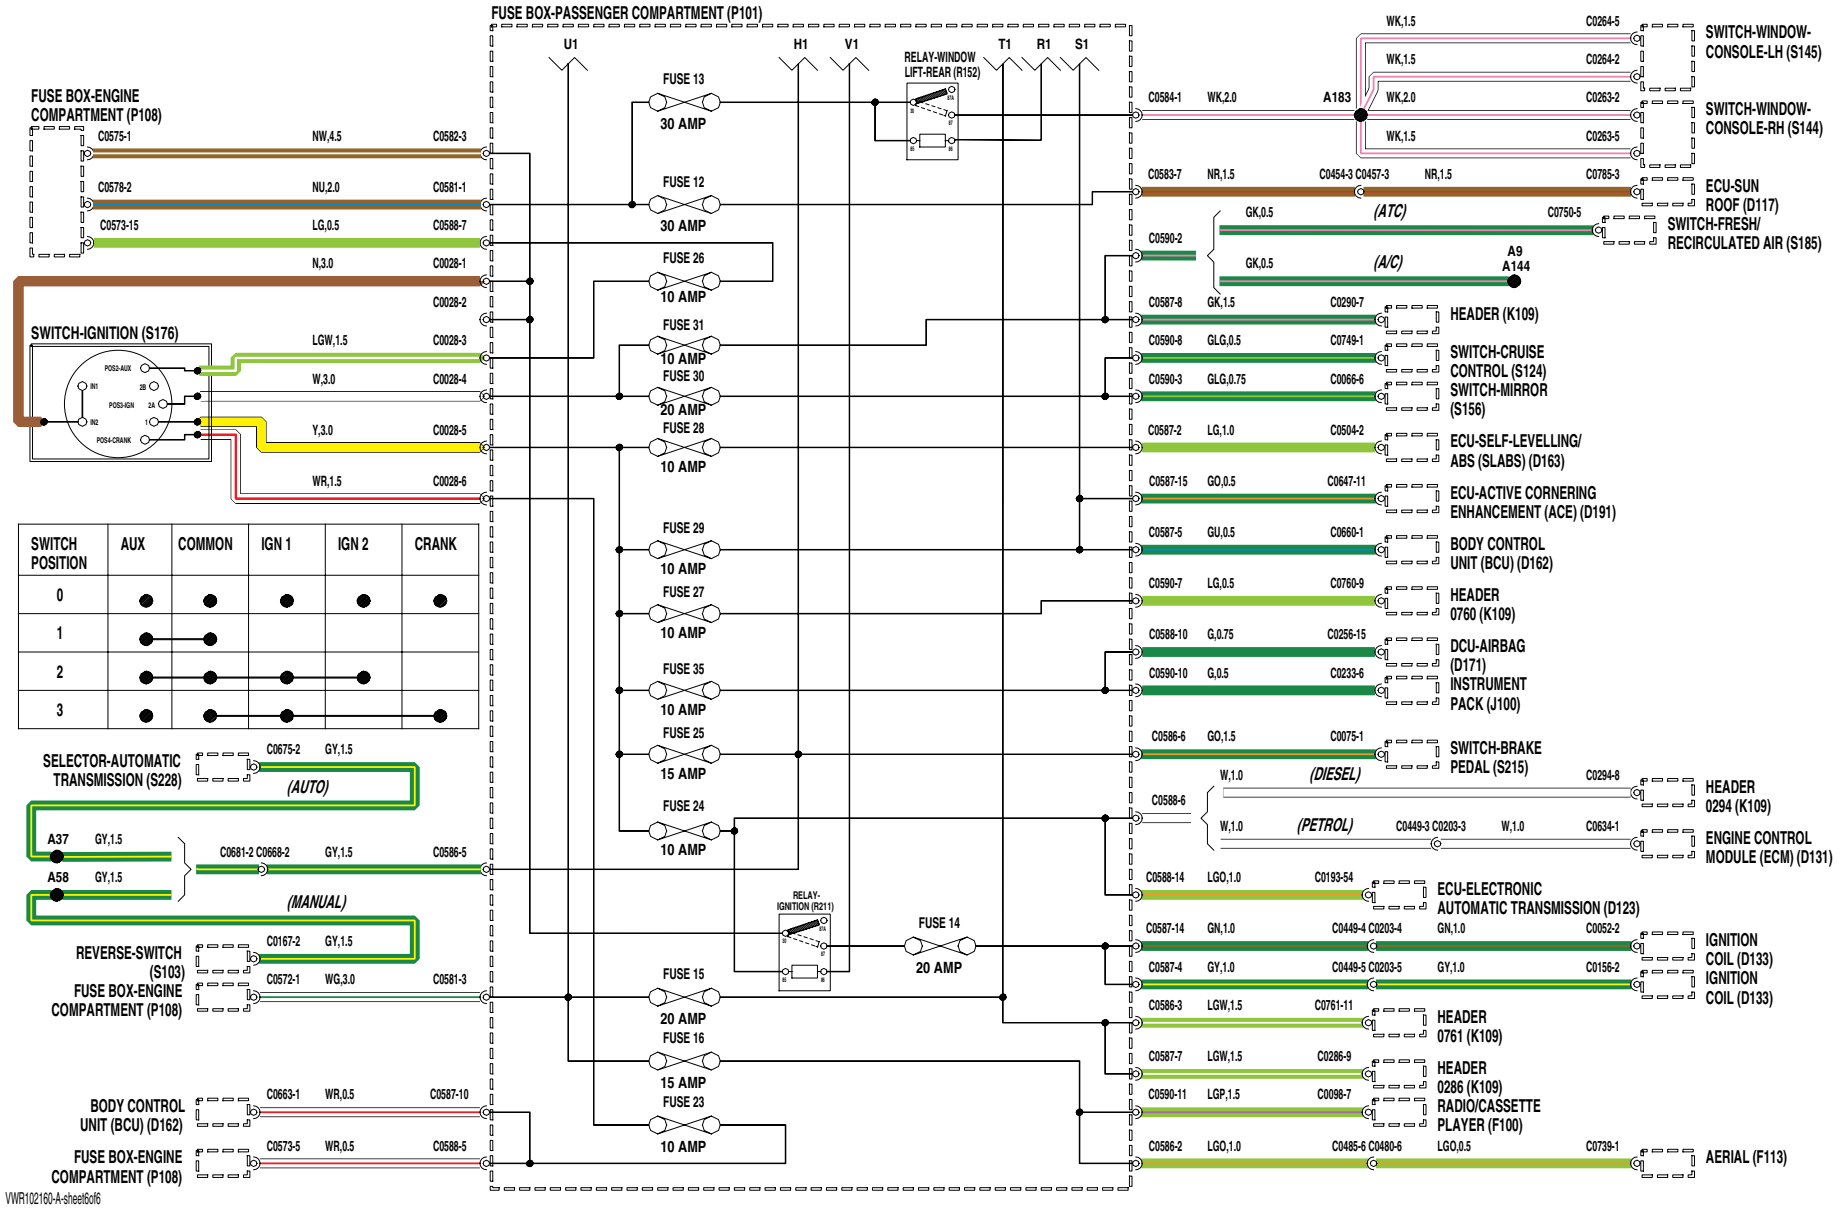


VWR102160-A-sheet6of6

CENTRAL DOOR LOCKING

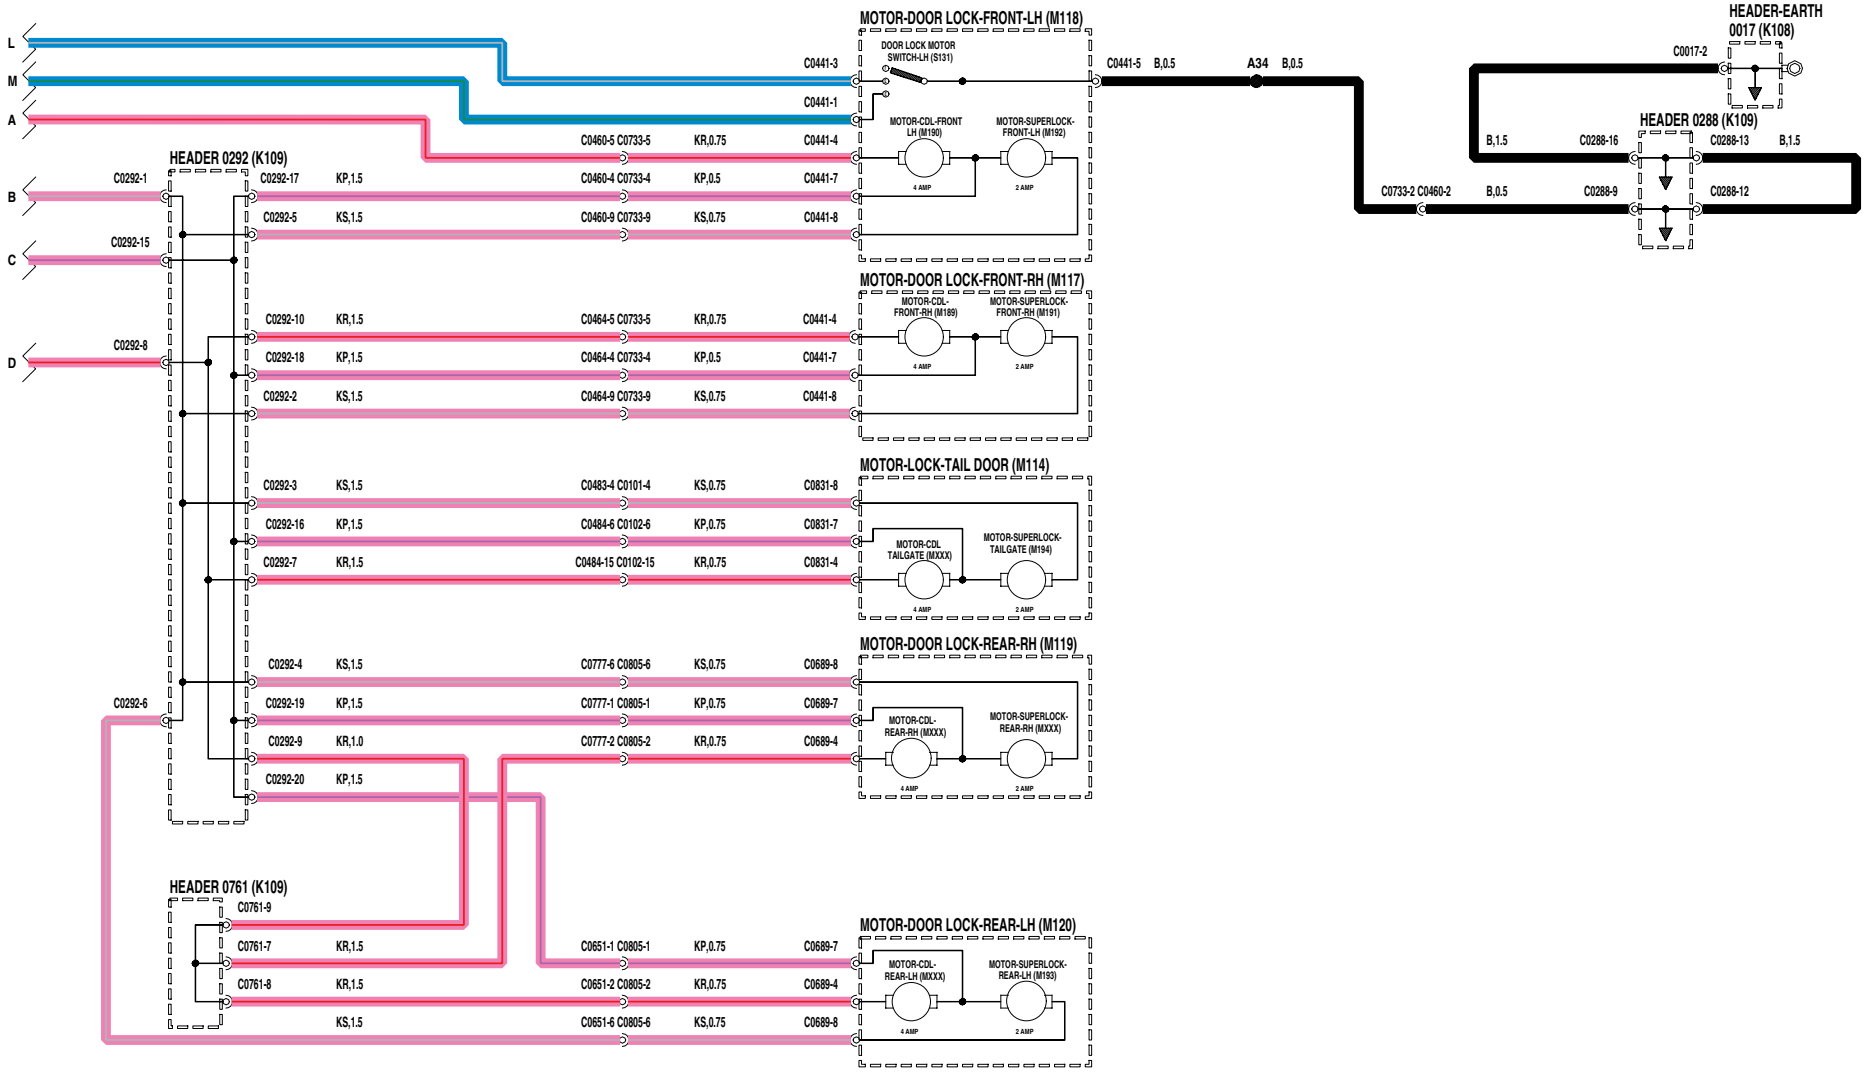


VWR108180-A-sheet3of3


DIAGNOSTIC SOCKET

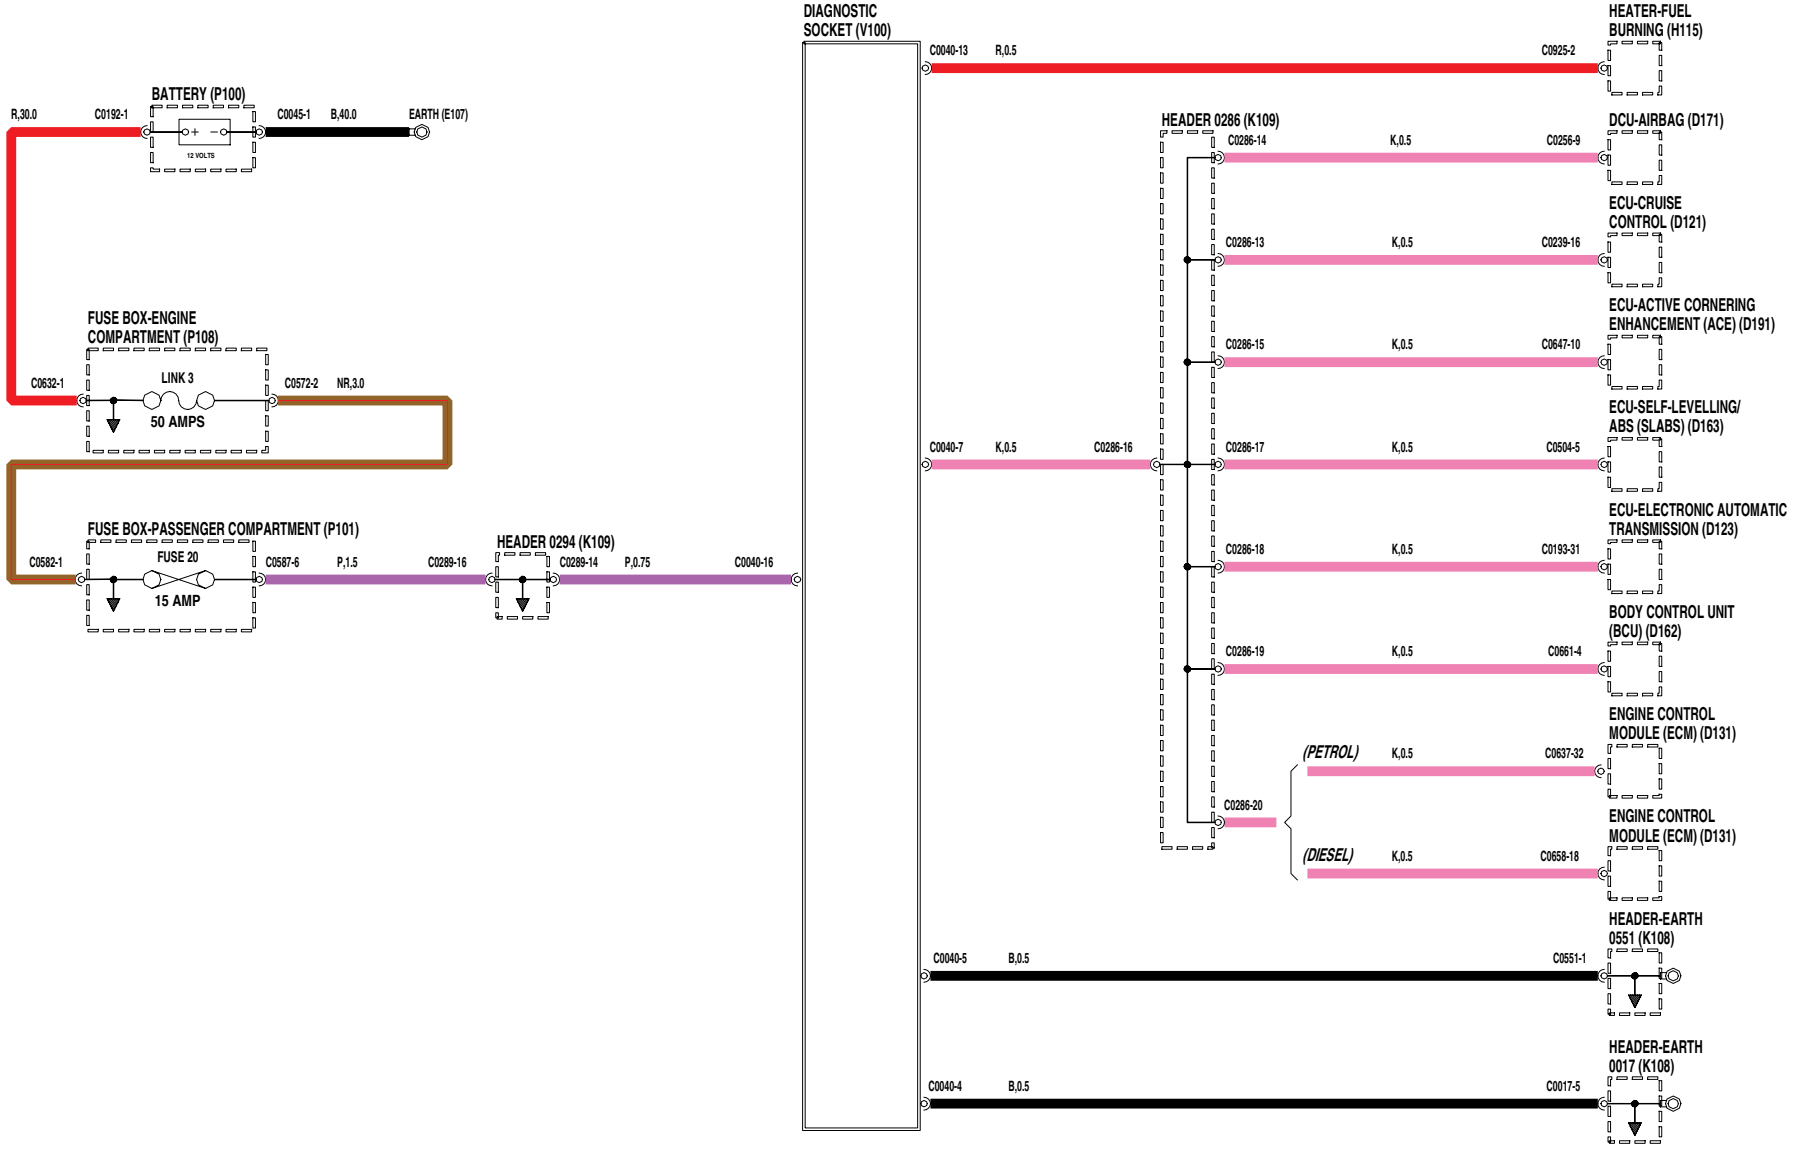


VWR105830-A-sheet1of1

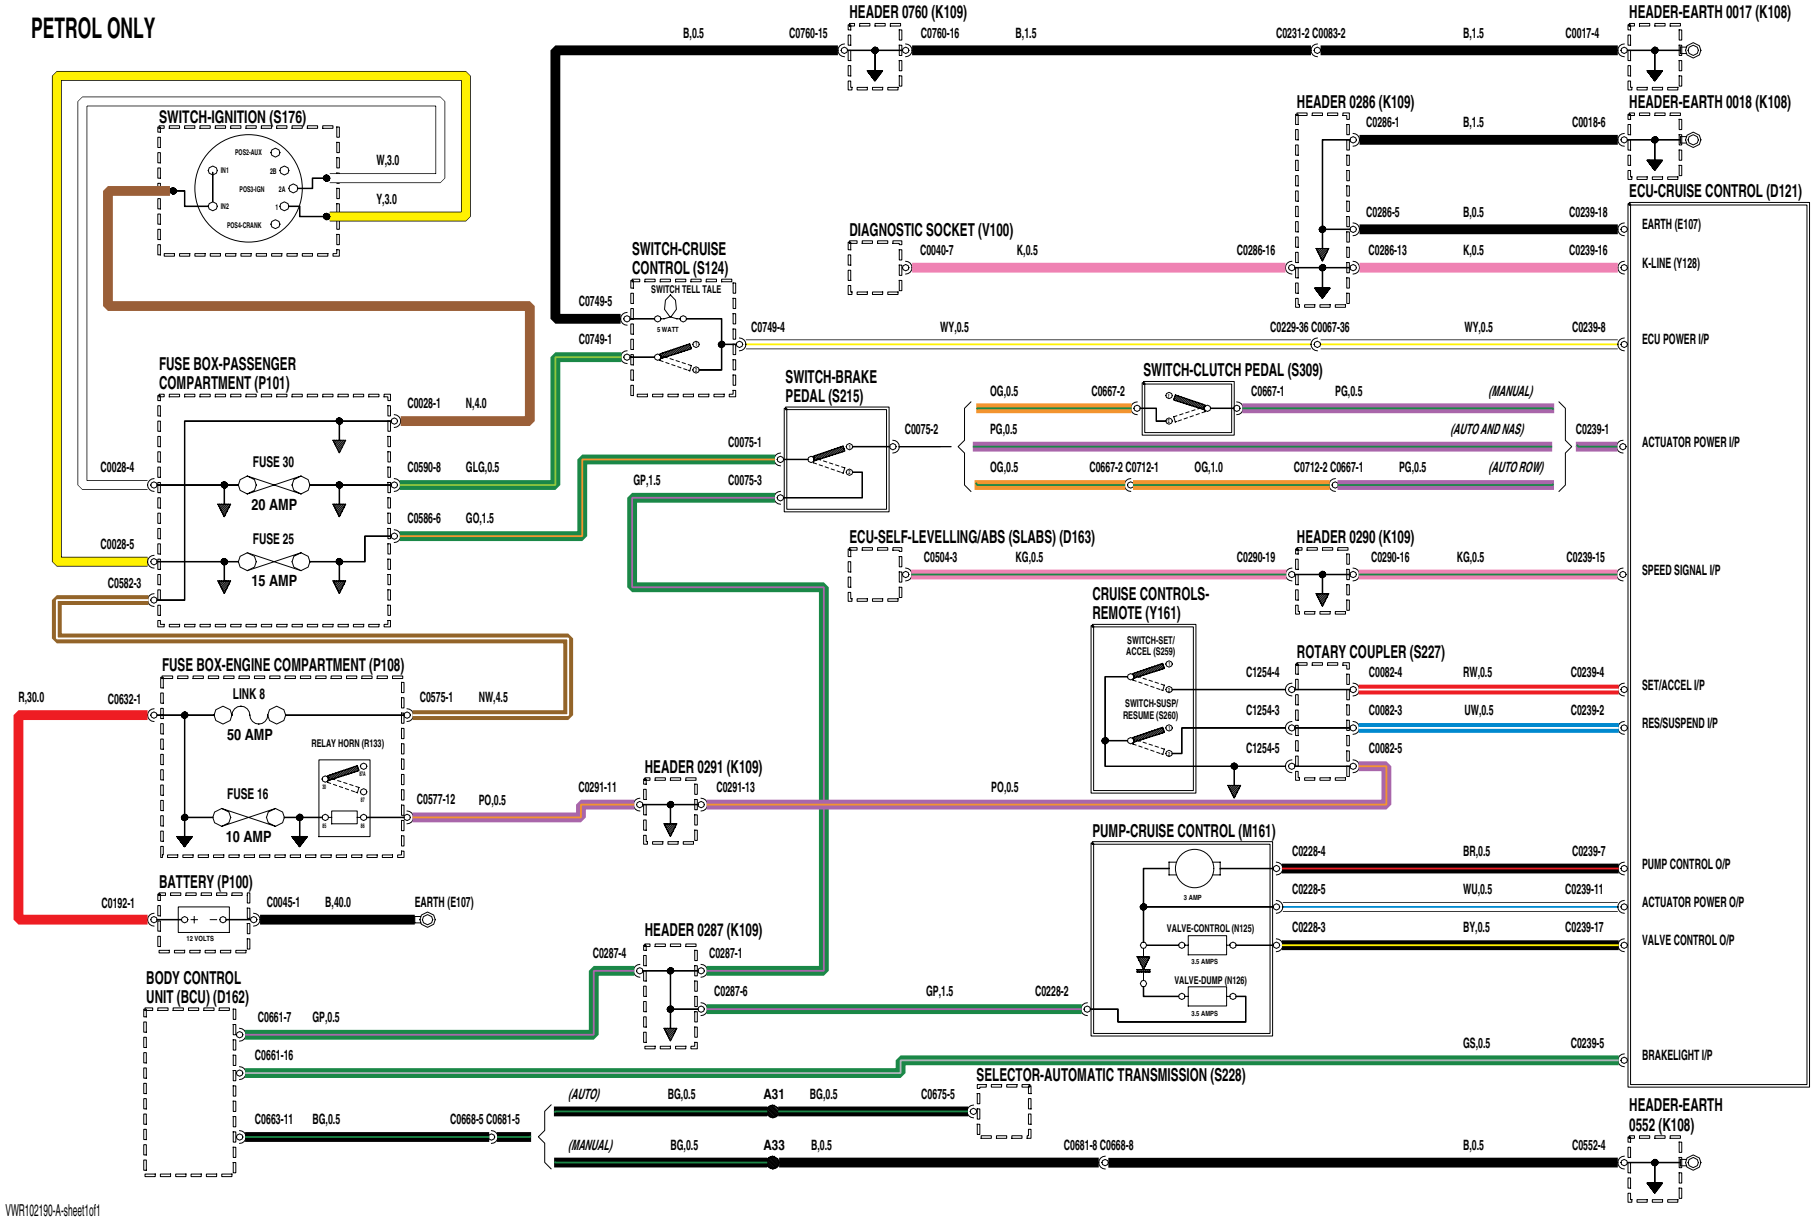

VWR102190-A-sheet1of1

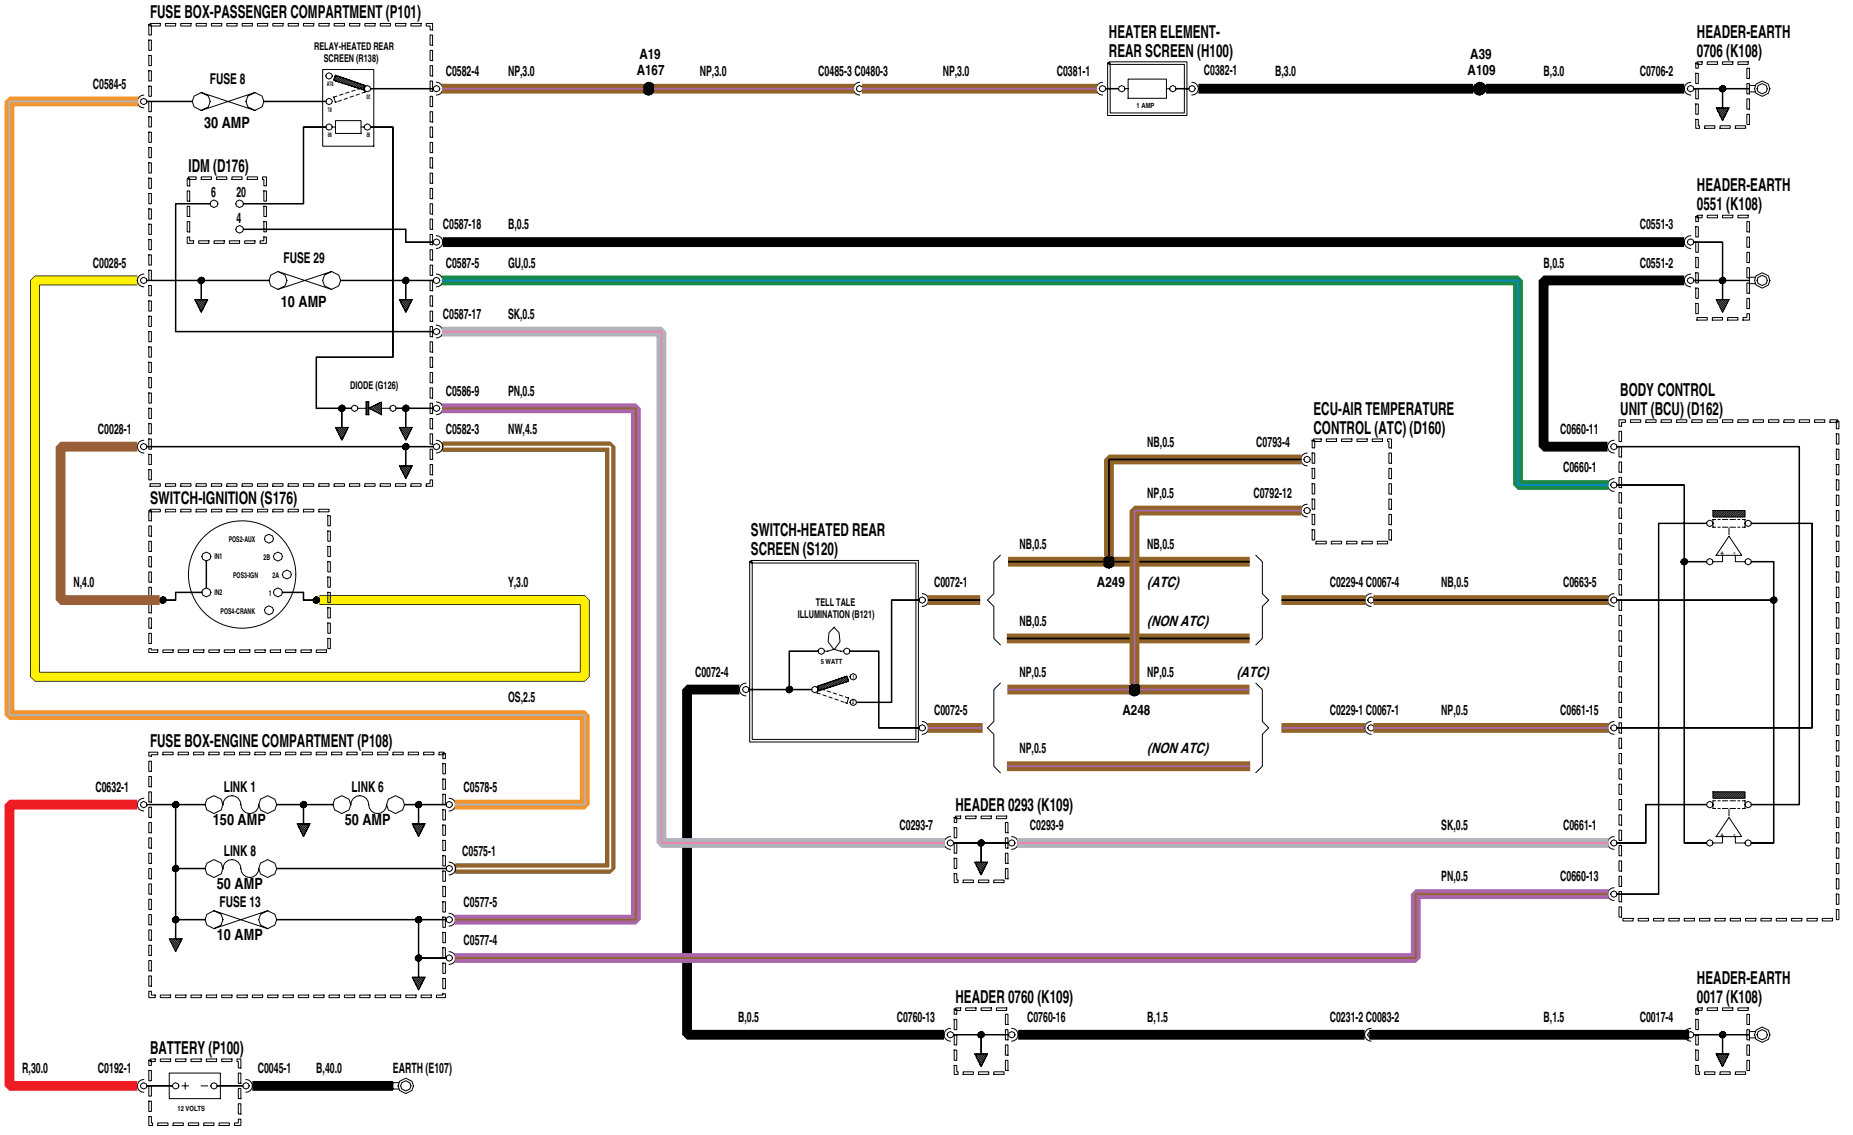

VWR101940-A-sheet1of1

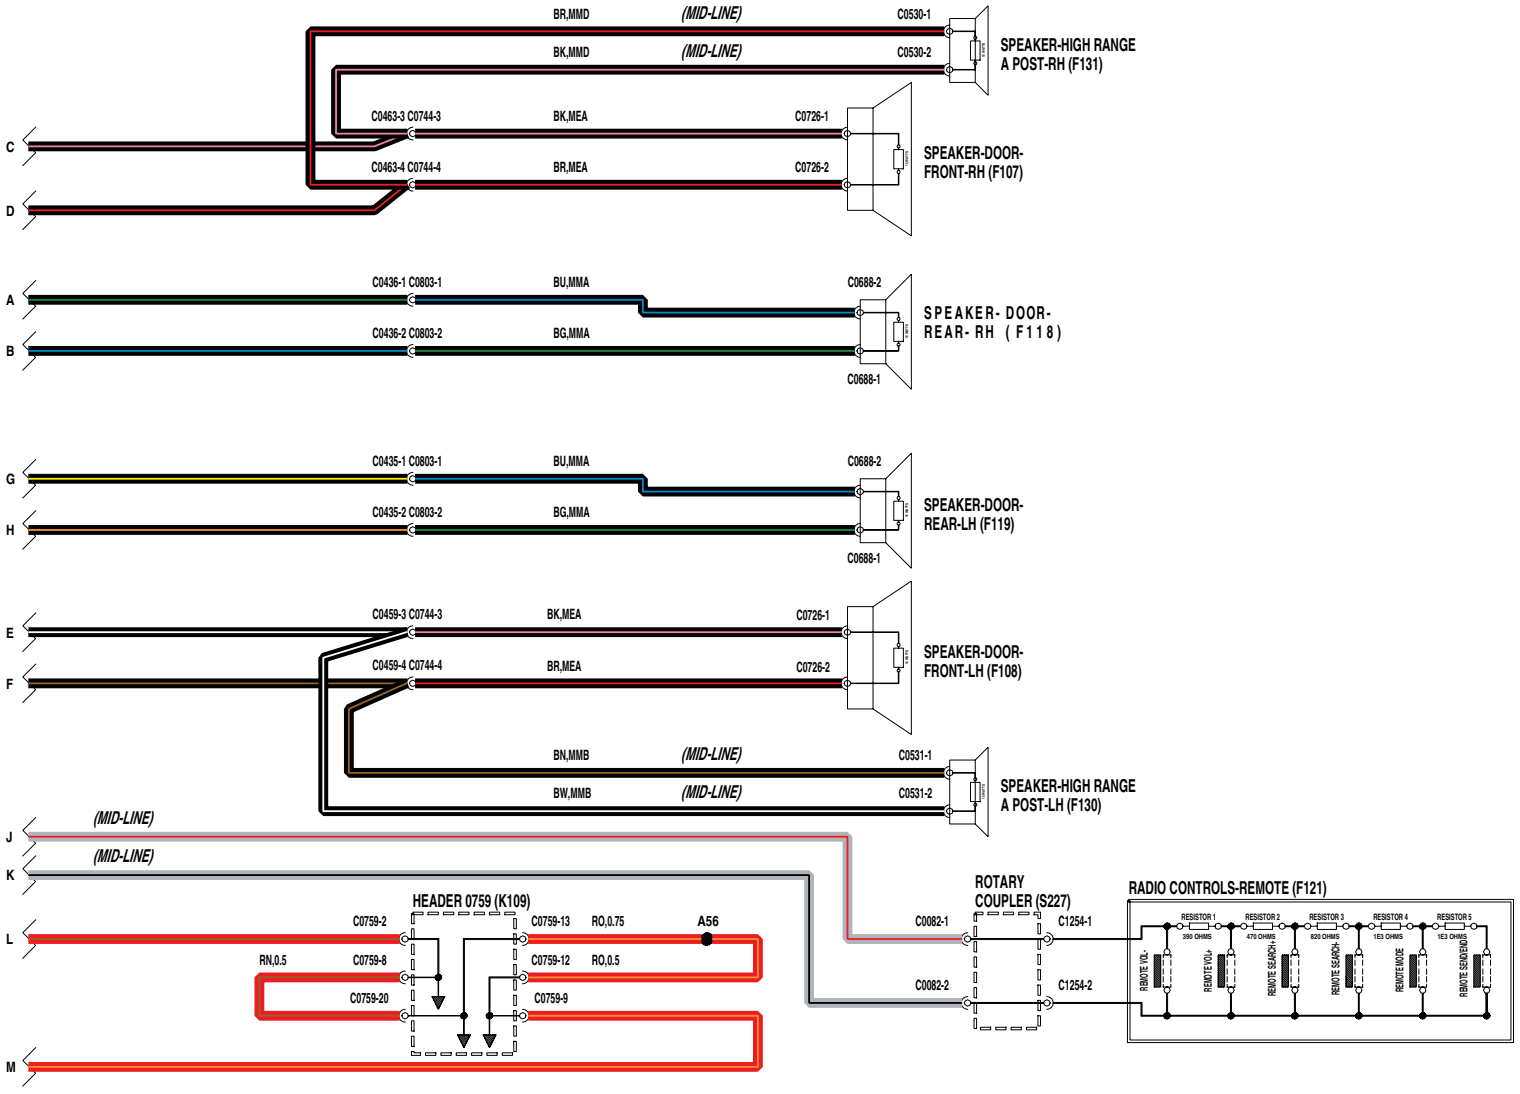

VWR102060-A-sheet2of2