





SWITCH-IGNITION (S176)
TERMINAL
POSITION
IN1
1
POS3 IGN2A
POS4 CRANK
IN2
2B
POS2 AUXA
LOCK
AUX
IGNITION
START
CONN
C028-1
C028-5
C028-2
C028-4
C028-3
C028-6
C028-7
ALTERNATOR/ GENERATOR (M100)
C183-1
R,20.0,2100 (PETROL NON-AIRCON)
R,20.0,2290 (PETROL AIRCON)
R,20.0,1720 (DIESEL ONLY)
C574-1
BATTERY (P100)
13.5 VOLTS
C192-2
R,6.0,615 (DIESEL ONLY)
R,20.0,400 (PETROL ONLY)
R,20.0,400 (DIESEL ONLY)
R,20.0,665 (PETROL ONLY)
R,25.0,645 (DIESEL ONLY)
C192-1
B,10.0,250
EARTH (E107)
C632-1
STARTER MOTOR (M101)
C631-1
HOLDER-FUSE (P110)
C621-2
70 AMPS
C621-1
R,6.0,400
C215-3
RELAY- GLOWPLUG (R114)
FUSEBOX-ENGINE COMPARTMENT (P108)
LINK 6
120 AMPS
IGNITION (Y104)
LINK 5
60 AMPS
IGNITION (Y104)
LINK 3
60 AMPS
FUSEBOX- PASSENGER COMPARTMENT (P101)
LINK 4
60 AMPS
LIGHTING (Y140)
LINK 2
60 AMPS
HAZARDS (Y141)
FUSE 4
15 AMPS
RELAY HORN (R133)
FUSE 6
10 AMPS
COOLING FAN (Y142)
FUSE 7
40 AMPS
FAN-CONDENSOR (M137)
FUSE 2
40 AMPS
ABS (Y143)
LINK 1
30 AMPS
INJECTORS/ FUEL PUMP (Y144)
FUSE 3
20 AMPS
SOLENOID- STARTER (N102)
FUSE 1
30 AMPS
C570-1 N,4.5,2505
C571-2 NR,4.5,2495
C571-1 NW,4.5,2210
C570-2 N,3.0,2220
C573-1 NO,1.5,1660
C287-8
HEADER JOINT (K109)
C287-9 NO,1.5,680
C287-10 NO,1.5,1400
C581-1
C573-3 N,1.0,820
A373
N,1.0,250 C130-2
N,1.0,250 C130-6
C573-4 N,3.0,460
C450-4 C160-4
C572-2 NW,3.0,520 (PETROL ONLY)
C572-2 NW,3.0,560 (DIESEL ONLY)
C571-3 NW,4.5,2560
C508-3
C572-3 N,2.0,310 (DIESEL ONLY)
C572-3 N,3.0,440 (PETROL ONLY)
C572-1 N,3.0,590 (PETROL ONLY)
C572-1 R,3.0,590 (DIESEL ONLY)
A41
A57
N,2.0,450
N,2.0,320
N,3.0,150
C157-6
C157-7
RELAY- STARTER (R102)
C060-2
FUSEBOX- PASSENGER COMPARTMENT (P101)
PS,3.0,590 C588-1
SU,3.0,590 C588-5
G,3.0,590 C588-3
WR,1.0,590 C588-4
NW,3.0,590 C588-2
C587-1
C587-3
SWITCH-HAZARD WARNING (S121)
RELAY HORN (R133)
C096-2
RELAY-COOLING FAN (R117)
C019-2
N,3.0,560 (PETROL NON-AIRCON)
N,3.0,520 (DIESEL AIRCON)
N,3.0,560 (PETROL AIRCON)
RELAY MODULE (R190)
C172-7
C172-8
RELAY-ABS- RETURN PUMP (R173)
RELAY- MAIN (R100)
N,2.0,270 C063-2
N,2.0,270 C063-4
SWITCH- INERTIA (S206)
C162-7 C448-7 N,2.0,920 C123-1
RELAY MODULE- ENGINE MANAGEMENT (R191)


EARTH DISTRIBUTION
LHD

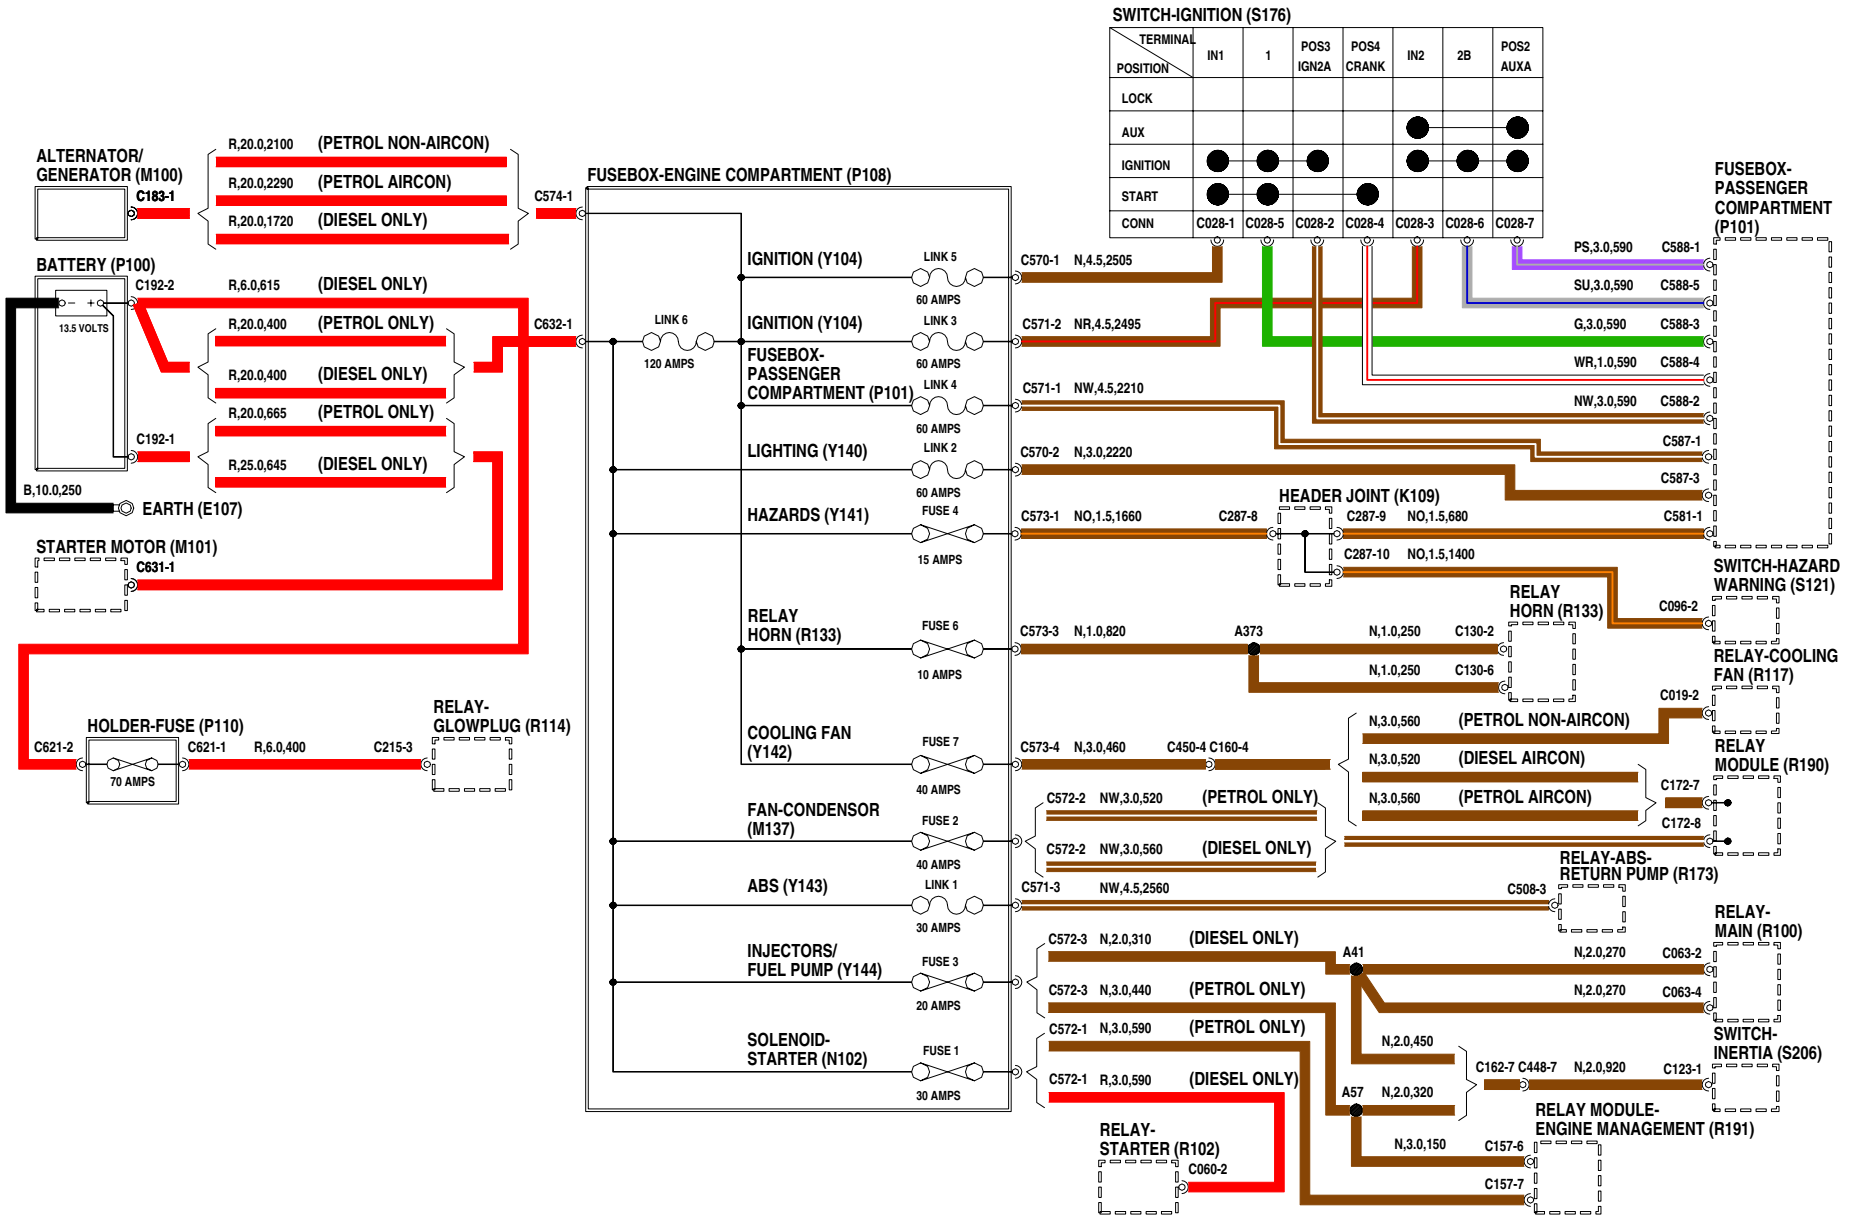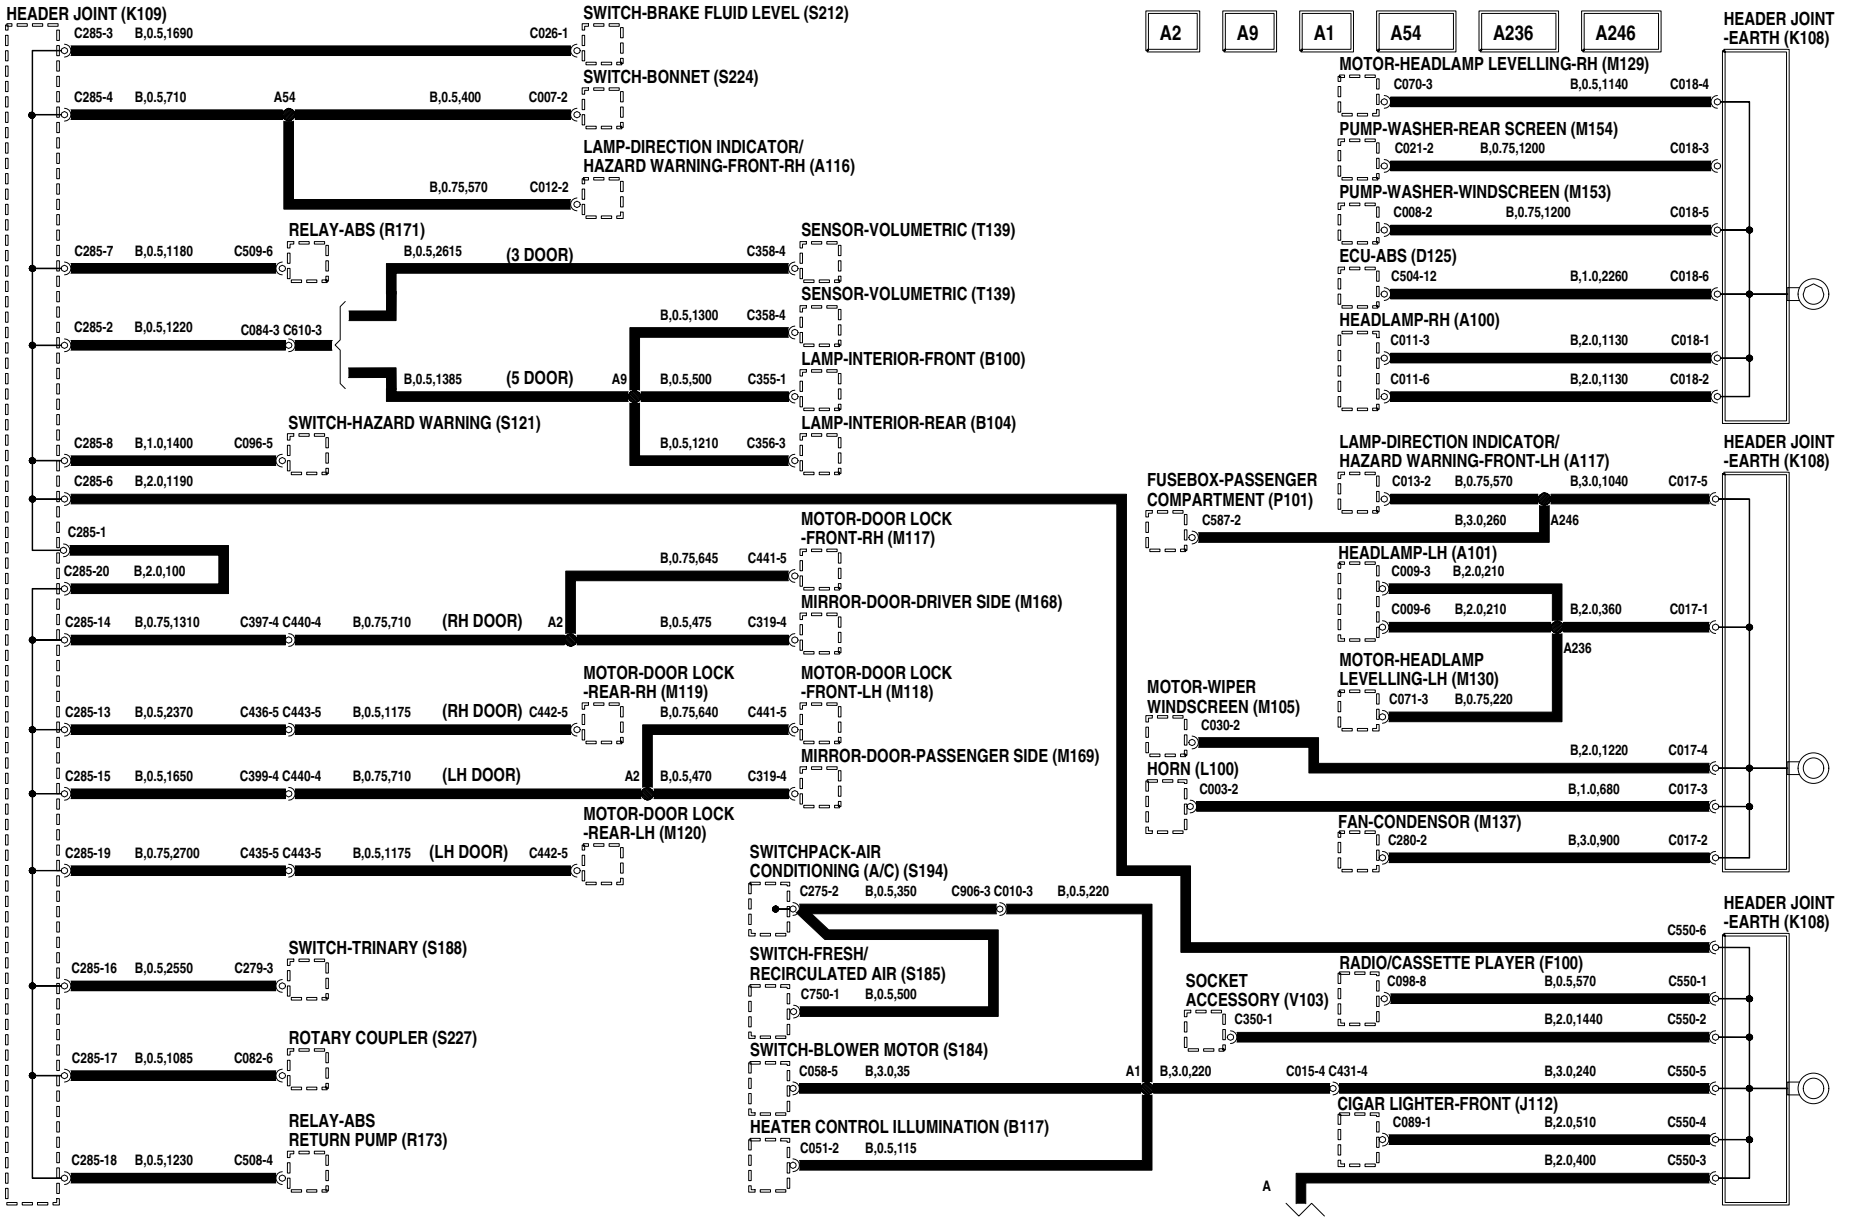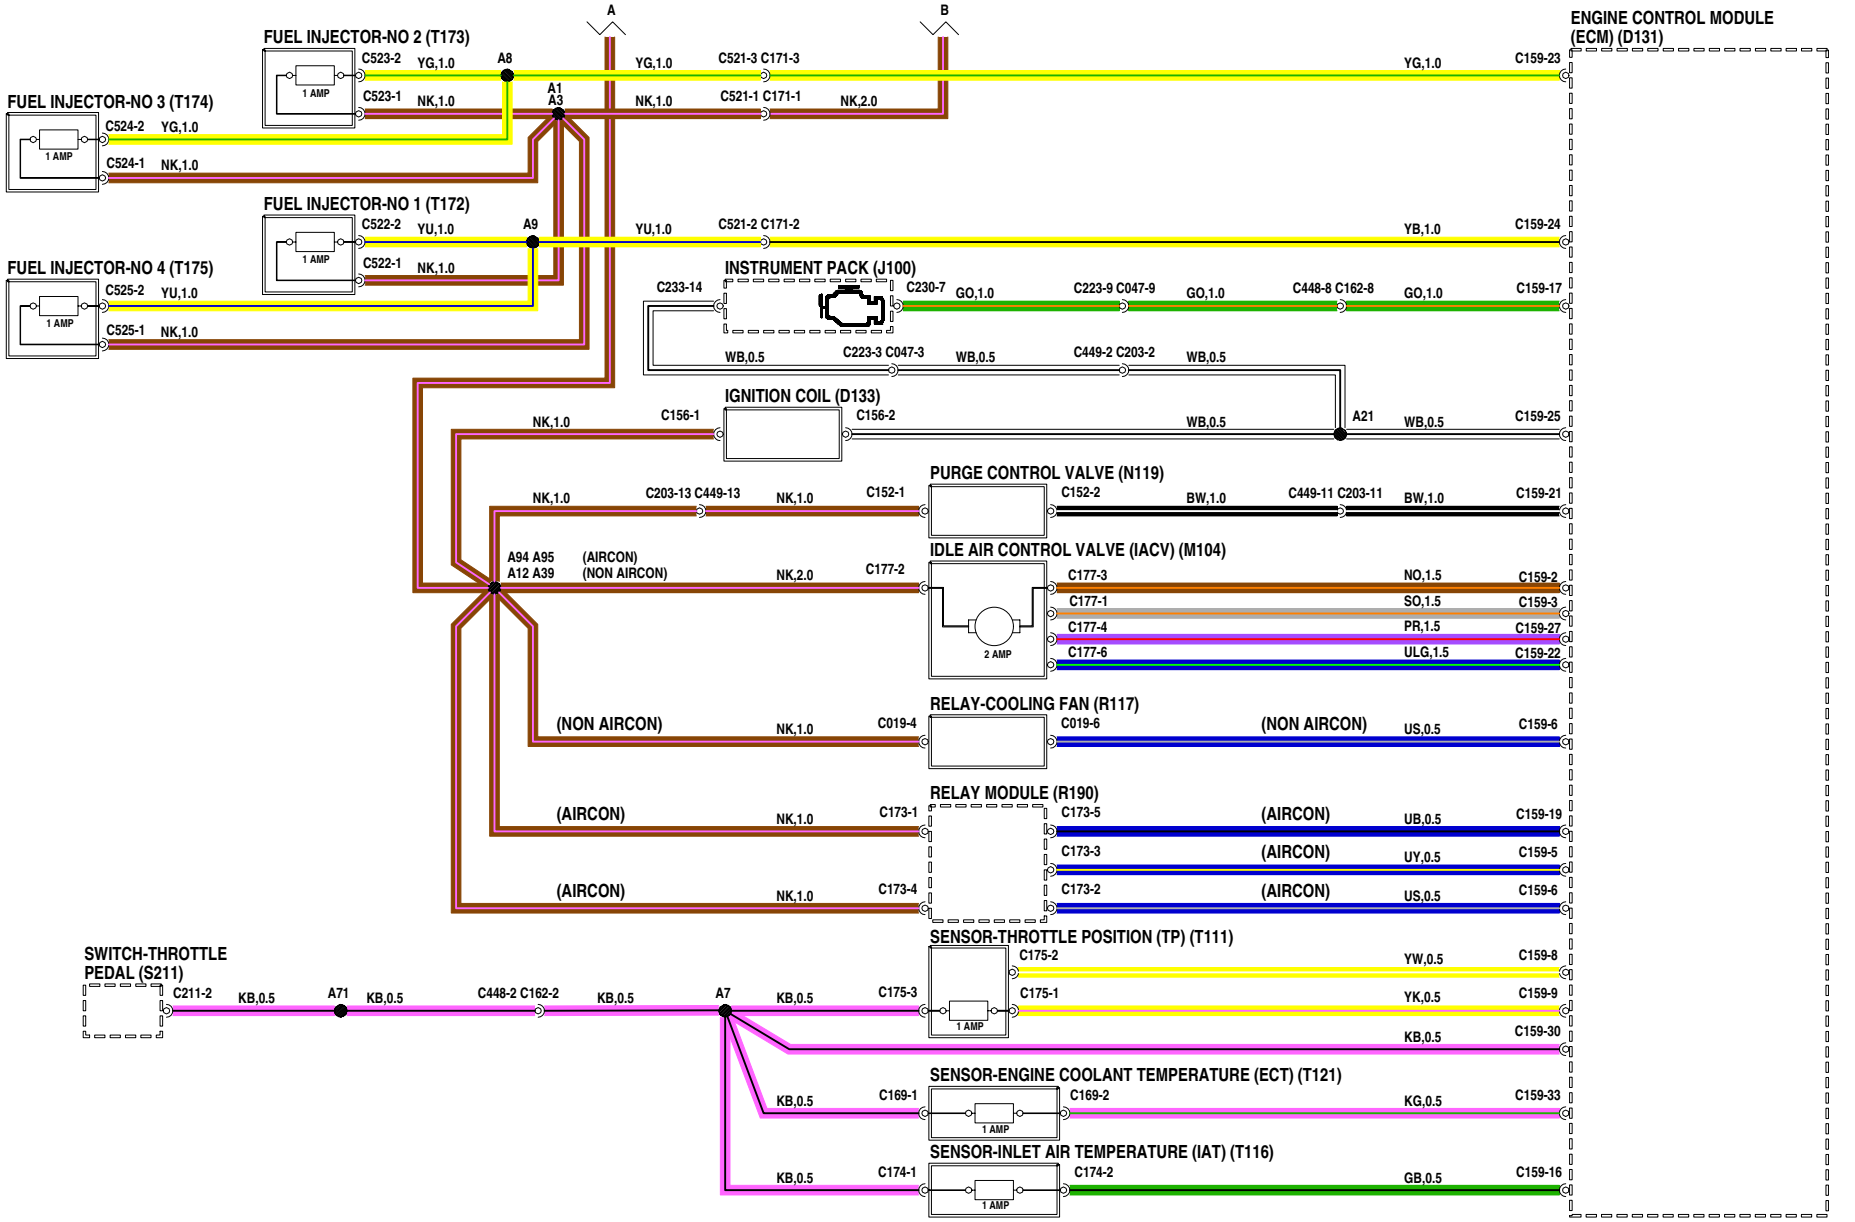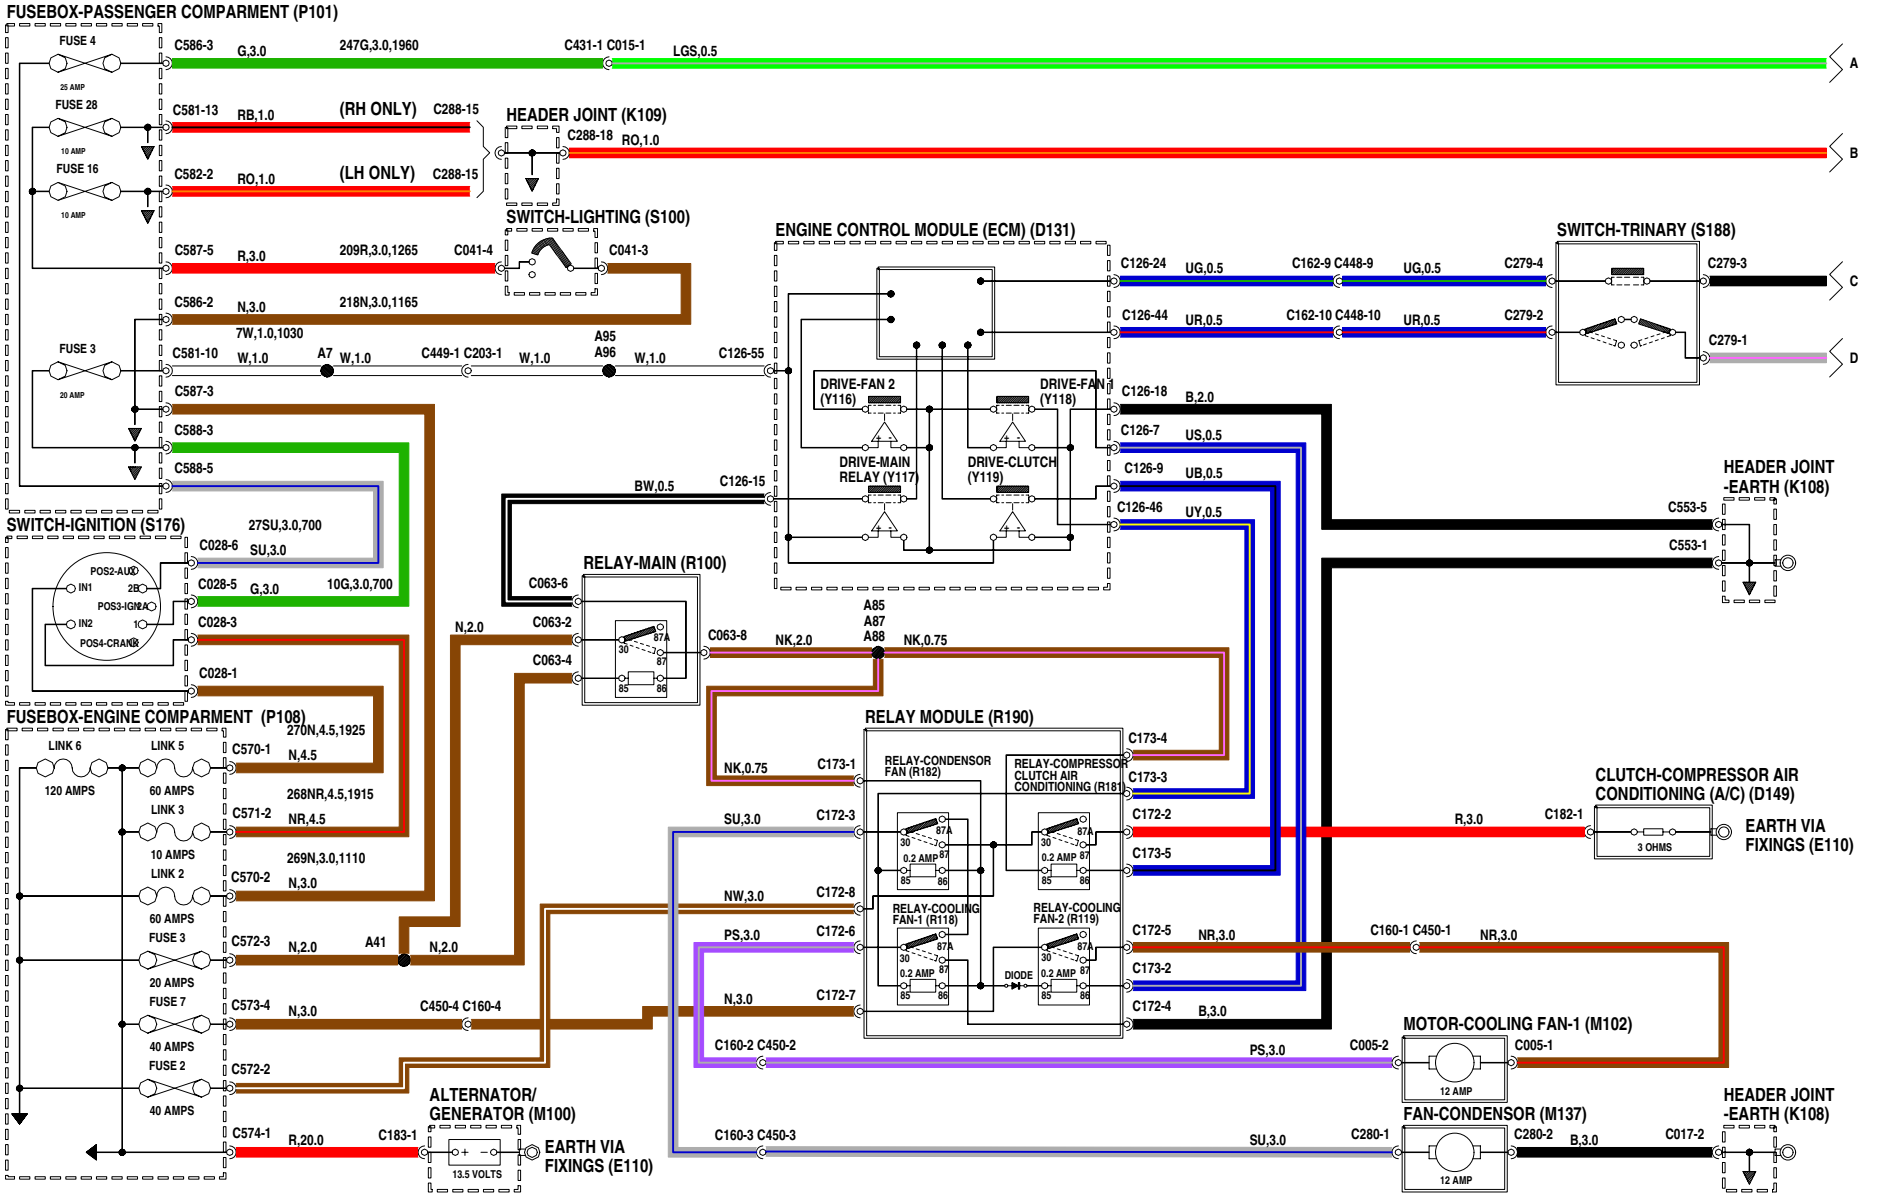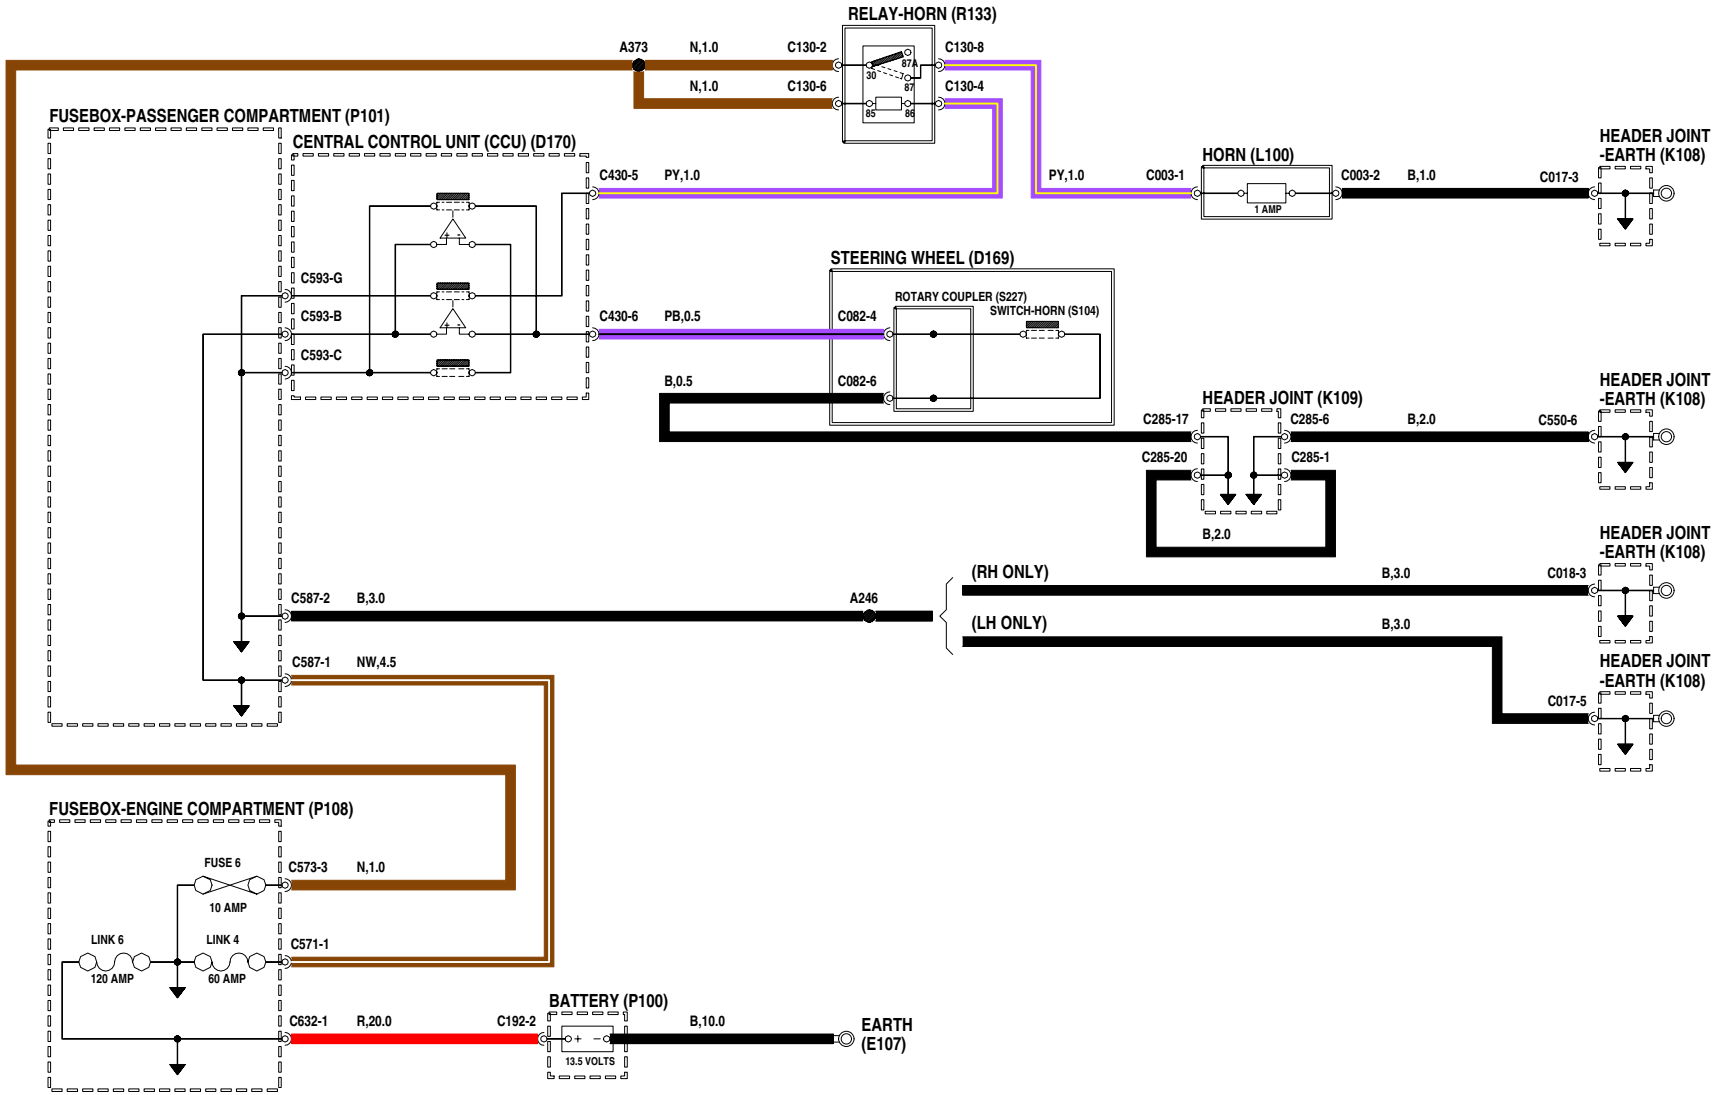


ENGINE CONTROL MODULE (ECM) (D131)
FUEL INJECTOR-NO 2 (T173)
FUEL INJECTOR-NO 3 (T174)
FUEL INJECTOR-NO 1 (T172)
FUEL INJECTOR-NO 4 (T175)
1 AMP
INSTRUMENT PACK (J100)
IGNITION COIL (D133)
PURGE CONTROL VALVE (N119)
IDLE AIR CONTROL VALVE (IACV) (M104)
2 AMP
RELAY-COOLING FAN (R117)
RELAY MODULE (R190)
(AIRCON)
(NON AIRCON)
SWITCH-THROTTLE PEDAL (S211)
SENSOR-THROTTLE POSITION (TP) (T111)
SENSOR-ENGINE COOLANT TEMPERATURE (ECT) (T121)
SENSOR-INLET AIR TEMPERATURE (IAT) (T116)
C523-2 YG,1.0 A8 YG,1.0 C521-3 C171-3 YG,1.0 C159-23
C523-1 NK,1.0 A1 A3 NK,1.0 C521-1 C171-1 NK,2.0
C524-2 YG,1.0
C524-1 NK,1.0
C522-2 YU,1.0 A9 YU,1.0 C521-2 C171-2 YB,1.0 C159-24
C522-1 NK,1.0
C525-2 YU,1.0
C525-1 NK,1.0
C233-14 C230-7 GO,1.0 C223-9 C047-9 GO,1.0 C448-8 C162-8 GO,1.0 C159-17
WB,0.5 C223-3 C047-3 WB,0.5 C449-2 C203-2 WB,0.5
NK,1.0 C156-1 C156-2 WB,0.5 A21 WB,0.5 C159-25
NK,1.0 C203-13 C449-13 NK,1.0 C152-1 C152-2 BW,1.0 C449-11 C203-11 BW,1.0 C159-21
A94 A95 A12 A39 (AIRCON) (NON AIRCON) NK,2.0 C177-2
C177-3 NO,1.5 C159-2
C177-1 SO,1.5 C159-3
C177-4 PR,1.5 C159-27
C177-6 ULG,1.5 C159-22
(NON AIRCON) NK,1.0 C019-4 C019-6 (NON AIRCON) US,0.5 C159-6
(AIRCON) NK,1.0 C173-1 C173-5 (AIRCON) UB,0.5 C159-19
C173-3 (AIRCON) UY,0.5 C159-5
(AIRCON) NK,1.0 C173-4 C173-2 (AIRCON) US,0.5 C159-6
C211-2 KB,0.5 A71 KB,0.5 C448-2 C162-2 KB,0.5 A7 KB,0.5 C175-3
C175-2 YW,0.5 C159-8
C175-1 YK,0.5 C159-9
KB,0.5 C159-30
KB,0.5 C169-1 C169-2 KG,0.5 C159-33
KB,0.5 C174-1 C174-2 GB,0.5 C159-16



FUSEBOX-PASSENGER COMPARMENT (P101)
FUSE 4
25 AMP
FUSE 28
10 AMP
FUSE 16
10 AMP
FUSE 3
20 AMP
C586-3
G,3.0
247G,3.0,1960
C431-1 C015-1
LGS,0.5
A
C581-13
RB,1.0
(RH ONLY)
C288-15
C582-2
RO,1.0
(LH ONLY)
C288-15
HEADER JOINT (K109)
C288-18
RO,1.0
B
SWITCH-LIGHTING (S100)
C587-5
R,3.0
209R,3.0,1265
C041-4
C041-3
C586-2
N,3.0
218N,3.0,1165
7W,1.0,1030
C581-10
W,1.0
A7
W,1.0
C449-1 C203-1
W,1.0
A95
A96
W,1.0
C126-55
C587-3
C588-3
C588-5
ENGINE CONTROL MODULE (ECM) (D131)
DRIVE-FAN 2 (Y116)
DRIVE-FAN (Y118)
DRIVE-MAIN RELAY (Y117)
DRIVE-CLUTCH (Y119)
BW,0.5
C126-15
C126-24
UG,0.5
C162-9 C448-9
UG,0.5
C279-4
C126-44
UR,0.5
C162-10 C448-10
UR,0.5
C279-2
SWITCH-TRINARY (S188)
C279-3
C
C279-1
D
C126-18
B,2.0
C126-7
US,0.5
C126-9
UB,0.5
C126-46
UY,0.5
HEADER JOINT -EARTH (K108)
C553-5
C553-1
SWITCH-IGNITION (S176)
POS2-AUX
IN1
POS3-IGN
IN2
POS4-CRANK
C028-6
27SU,3.0,700
SU,3.0
C028-5
G,3.0
10G,3.0,700
C028-3
C028-1
RELAY-MAIN (R100)
C063-6
C063-2
C063-4
C063-8
NK,2.0
NK,0.75
A85
A87
A88
N,2.0
FUSEBOX-ENGINE COMPARMENT (P108)
LINK 6
120 AMPS
LINK 5
60 AMPS
LINK 3
10 AMPS
LINK 2
60 AMPS
FUSE 3
20 AMPS
FUSE 7
40 AMPS
FUSE 2
40 AMPS
C570-1
270N,4.5,1925
N,4.5
C571-2
268NR,4.5,1915
NR,4.5
C570-2
269N,3.0,1110
N,3.0
C572-3
N,2.0
A41
N,2.0
C573-4
N,3.0
C450-4 C160-4
C572-2
C574-1
R,20.0
C183-1
ALTERNATOR/ GENERATOR (M100)
13.5 VOLTS
EARTH VIA FIXINGS (E110)
RELAY MODULE (R190)
RELAY-CONDENSOR FAN (R182)
RELAY-COMPRESSOR CLUTCH AIR CONDITIONING (R181)
RELAY-COOLING FAN-1 (R118)
RELAY-COOLING FAN-2 (R119)
DIODE
0.2 AMP
C173-4
C173-1
C173-3
C172-3
C172-2
C173-5
C172-8
C172-6
C172-5
C173-2
C172-7
C172-4
B,3.0
NK,0.75
SU,3.0
NW,3.0
PS,3.0
N,3.0
CLUTCH-COMPRESSOR AIR CONDITIONING (A/C) (D149)
R,3.0
C182-1
3 OHMS
EARTH VIA FIXINGS (E110)
C160-1 C450-1
NR,3.0
NR,3.0
MOTOR-COOLING FAN-1 (M102)
C160-2 C450-2
PS,3.0
C005-2
C005-1
12 AMP
FAN-CONDENSOR (M137)
C160-3 C450-3
SU,3.0
C280-1
C280-2
B,3.0
C017-2
12 AMP
HEADER JOINT -EARTH (K108)


RELAY-HORN (R133)
A373
N,1.0
C130-2
C130-8
N,1.0
C130-6
C130-4
30
87A
87
85
86
FUSEBOX-PASSENGER COMPARTMENT (P101)
CENTRAL CONTROL UNIT (CCU) (D170)
C430-5
PY,1.0
HORN (L100)
PY,1.0
C003-1
C003-2
B,1.0
C017-3
1 AMP
HEADER JOINT -EARTH (K108)
STEERING WHEEL (D169)
ROTARY COUPLER (S227)
SWITCH-HORN (S104)
C593-G
C593-B
C593-C
C430-6
PB,0.5
C082-4
C082-6
B,0.5
HEADER JOINT (K109)
C285-17
C285-6
B,2.0
C550-6
C285-20
C285-1
B,2.0
HEADER JOINT -EARTH (K108)
(RH ONLY)
B,3.0
C018-3
C587-2
B,3.0
A246
(LH ONLY)
B,3.0
C587-1
NW,4.5
HEADER JOINT -EARTH (K108)
C017-5
FUSEBOX-ENGINE COMPARTMENT (P108)
FUSE 6
10 AMP
C573-3
N,1.0
LINK 6
120 AMP
LINK 4
60 AMP
C571-1
BATTERY (P100)
C632-1
R,20.0
C192-2
B,10.0
13.5 VOLTS
EARTH (E107)

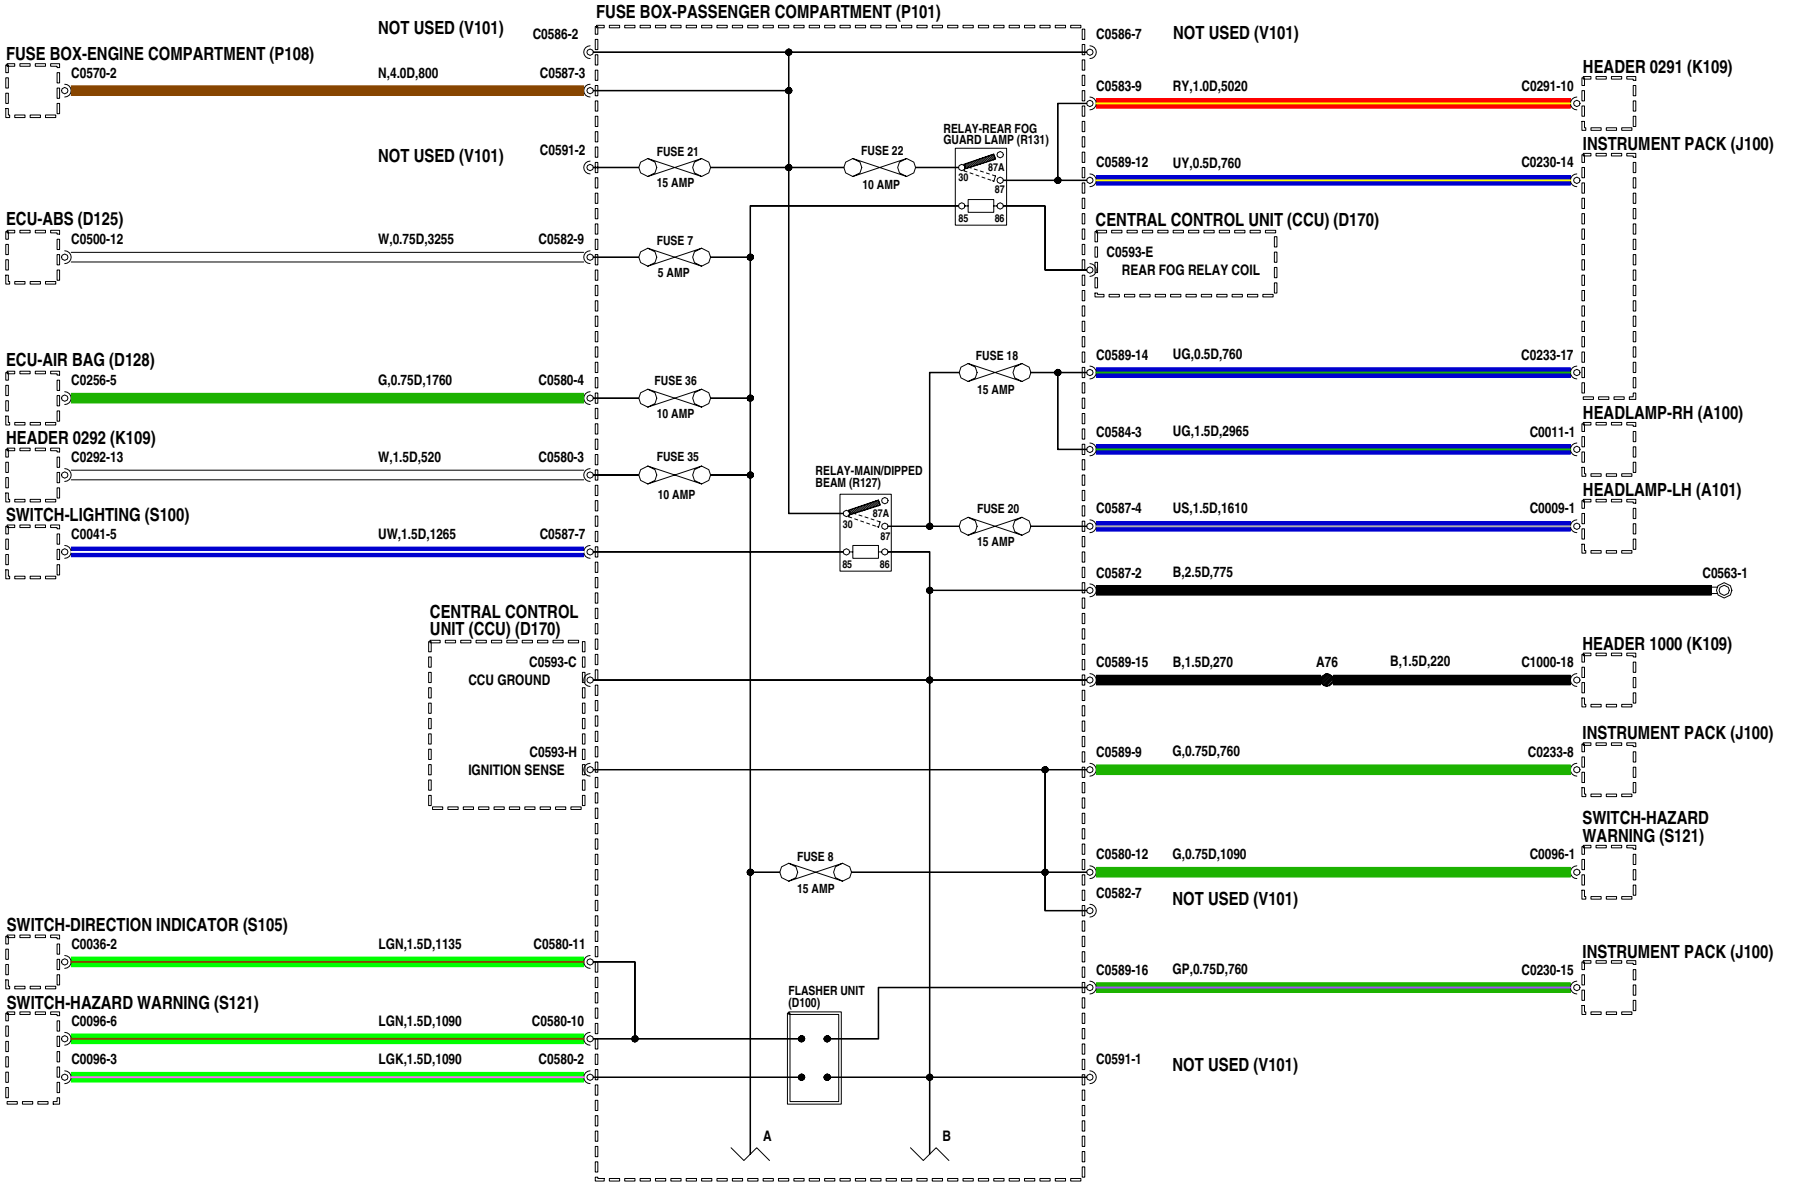


VWR111540-1of5


EARTH DISTRIBUTION

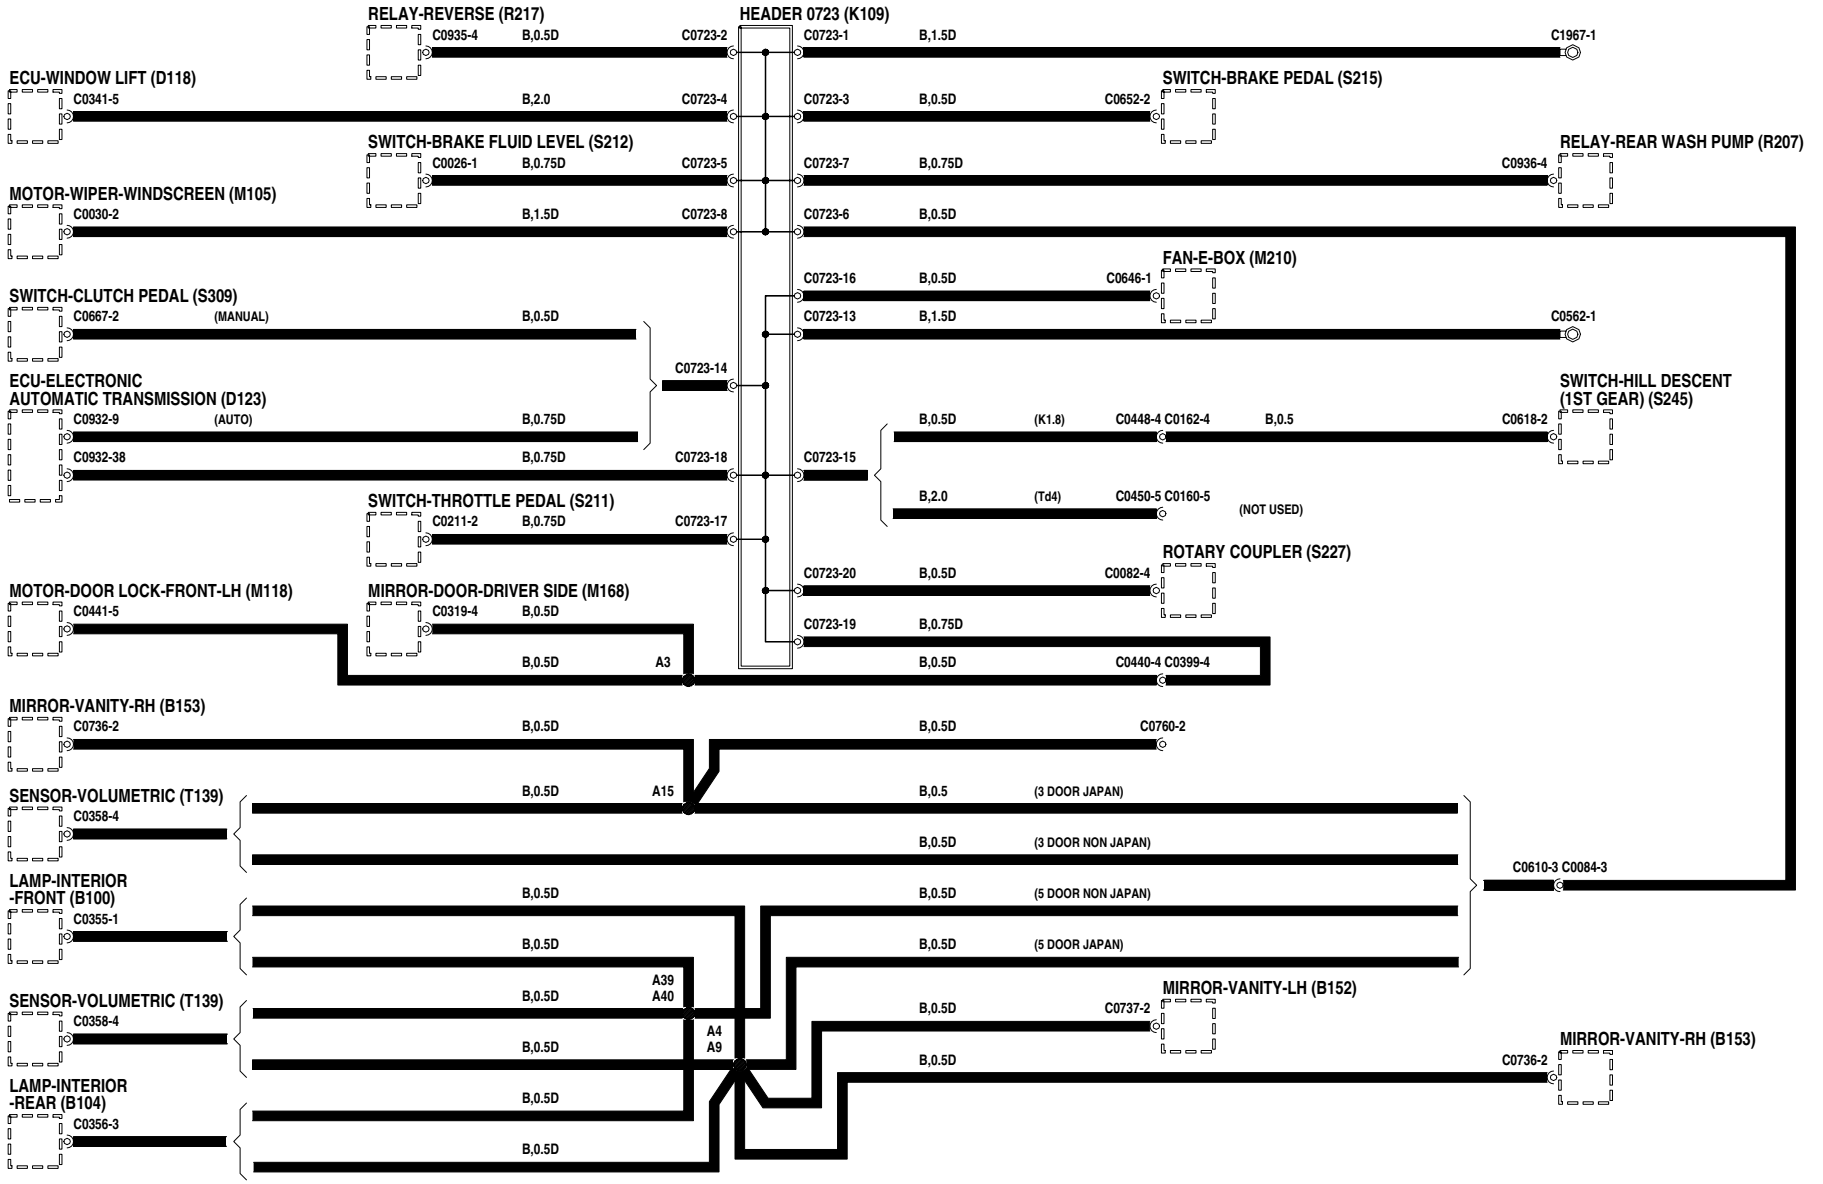


VWR111320-5of7

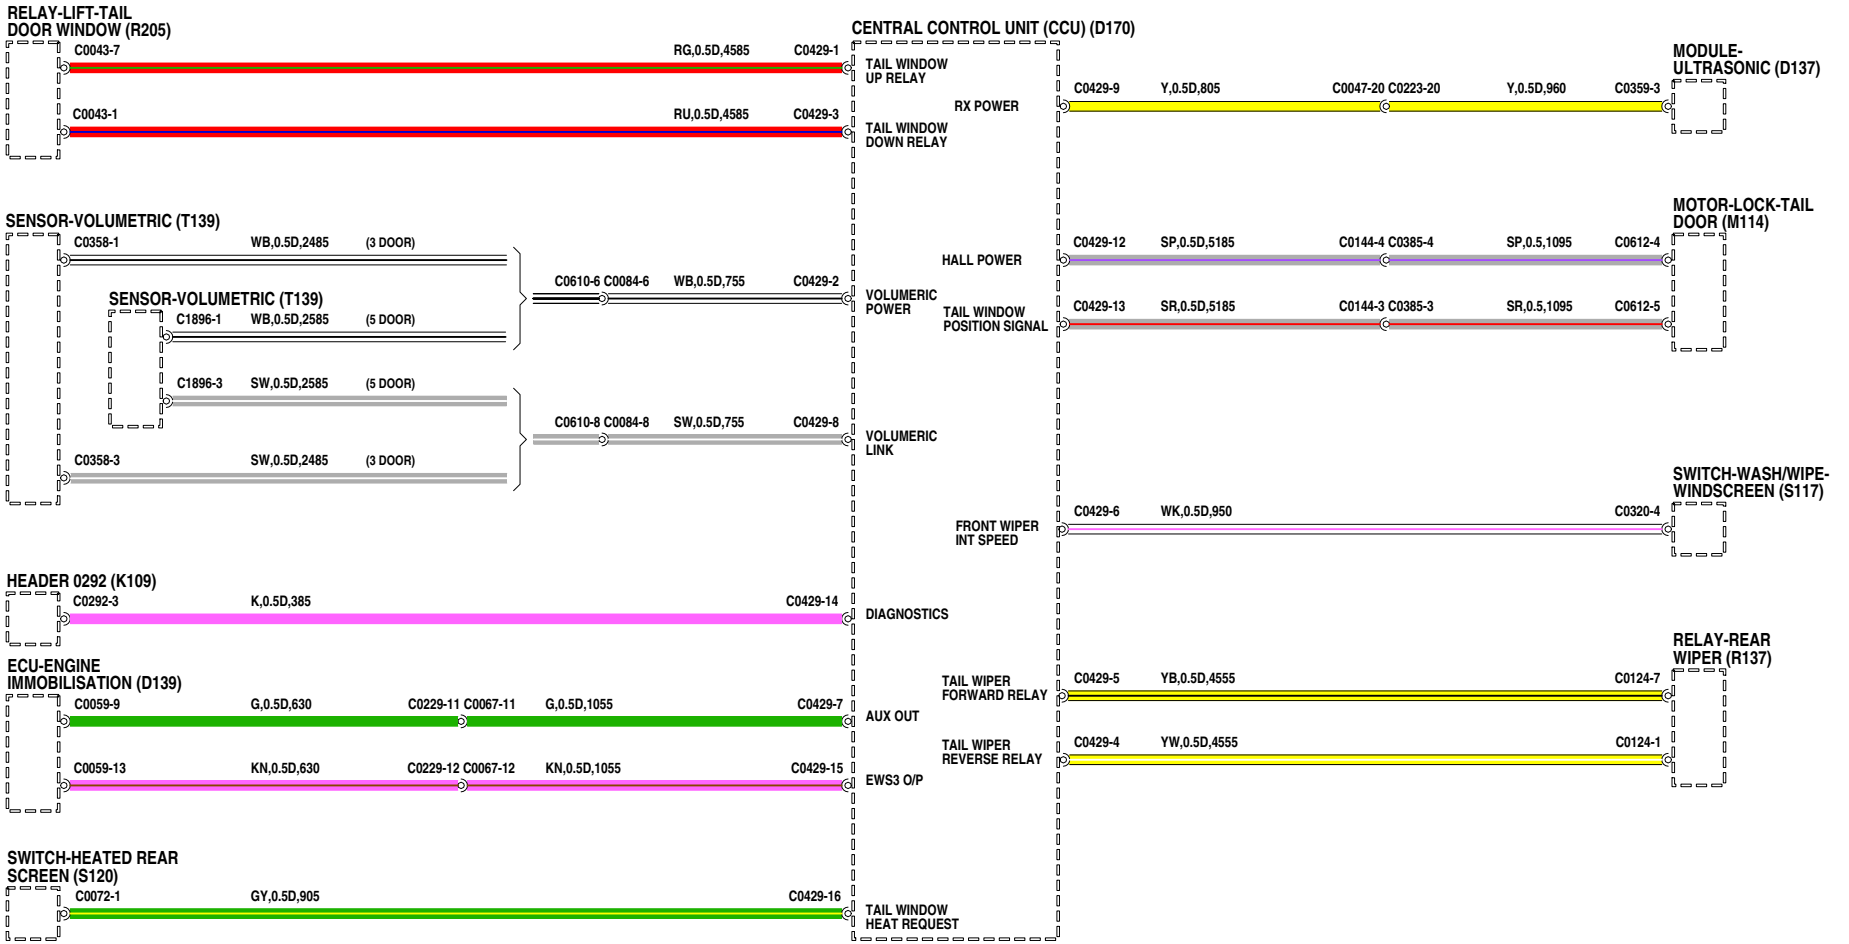

VWR111260-2of3

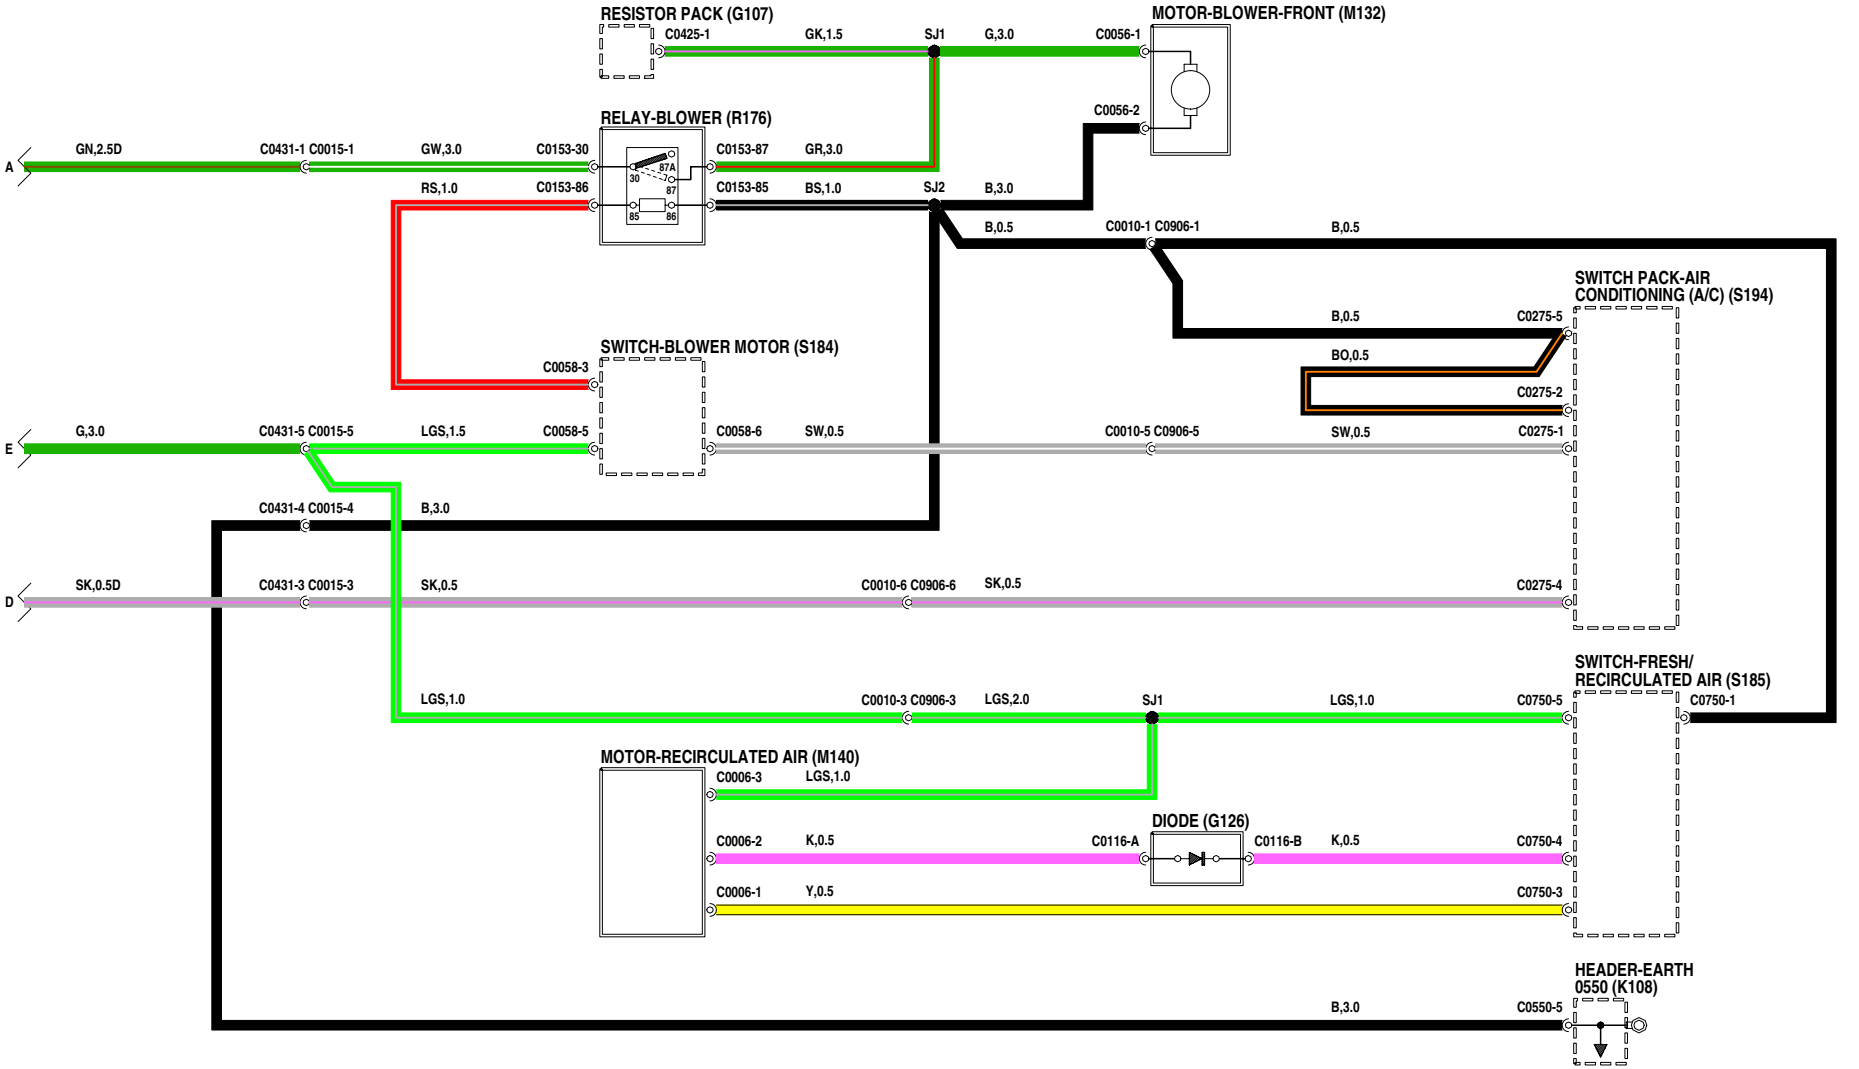


VWR111190-2of3

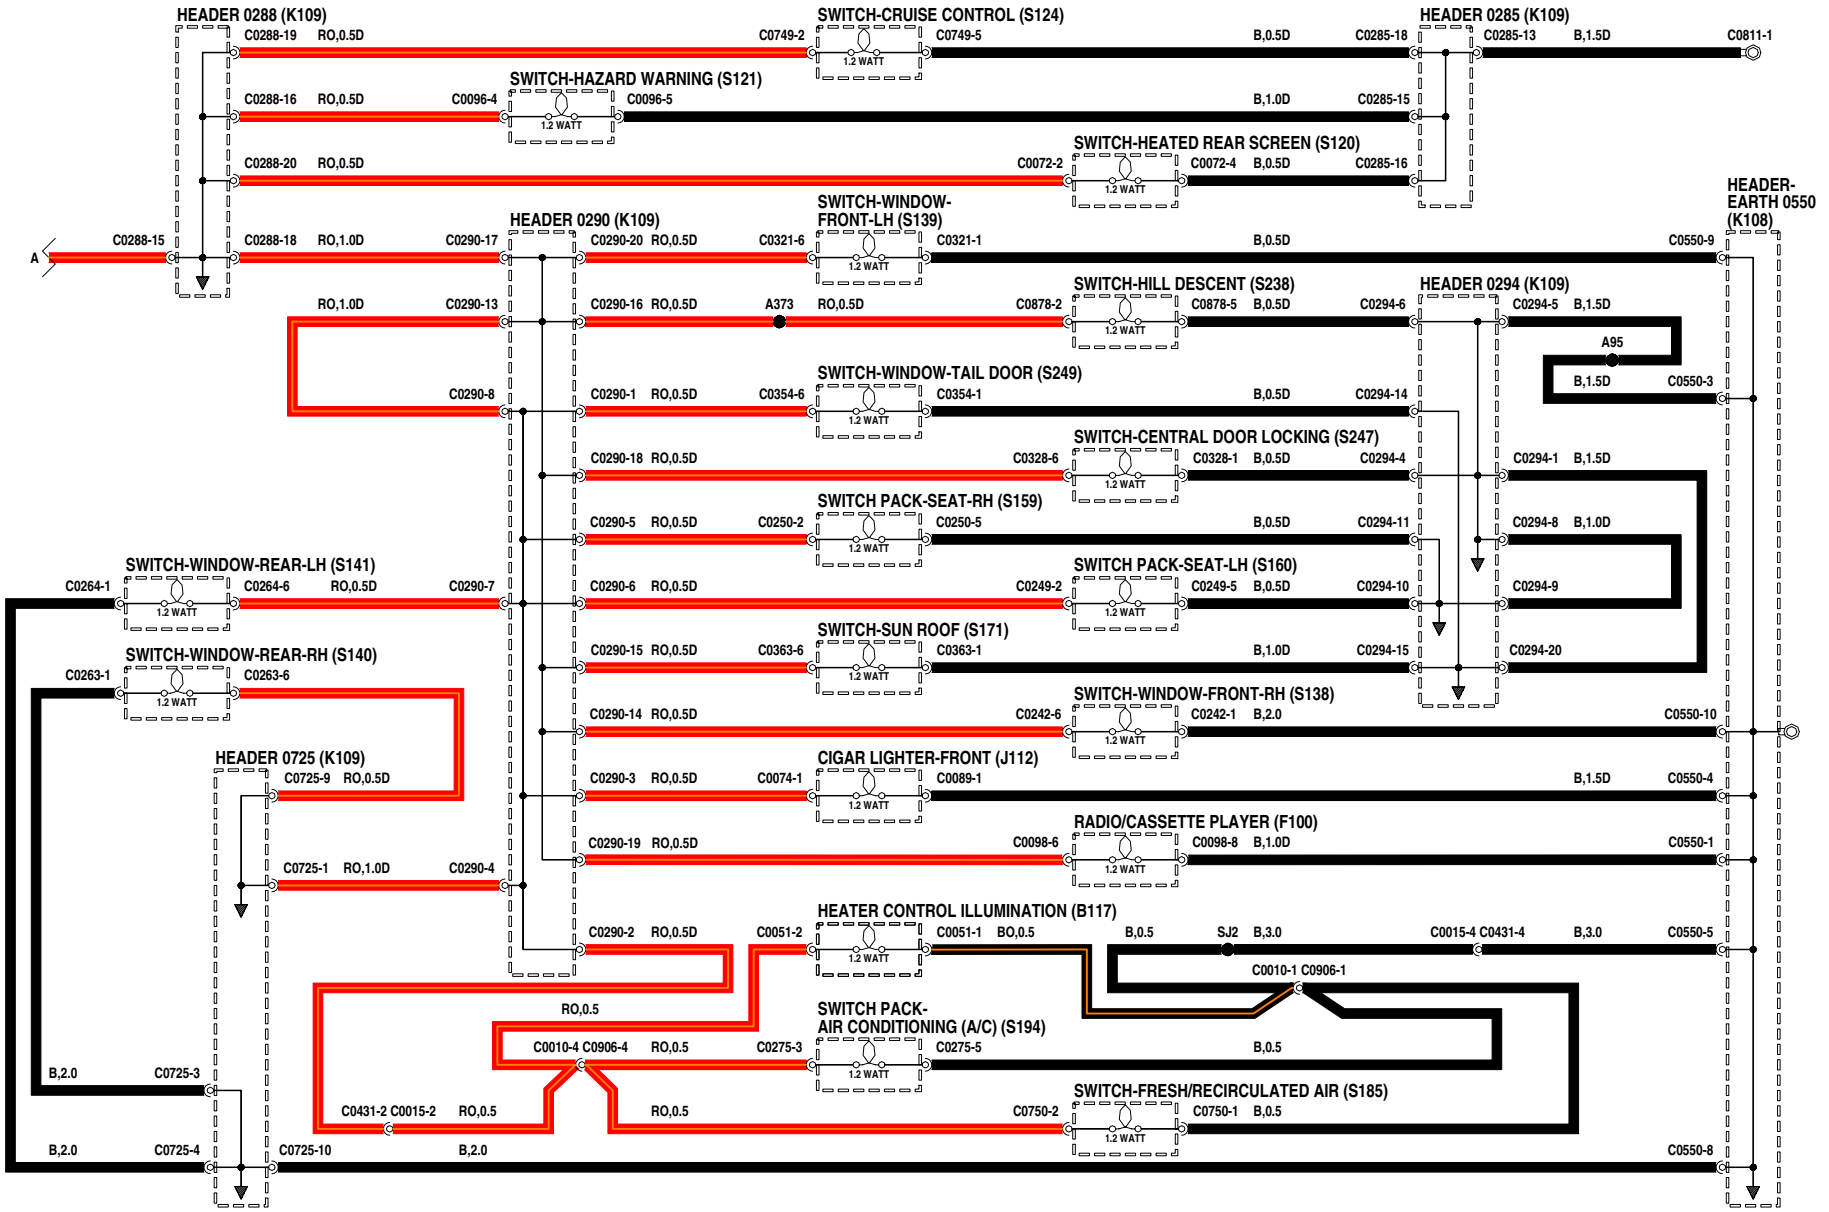
HEADER 0288 (K109)
C0288-19 RO,0.5D
C0749-2
SWITCH-CRUISE CONTROL (S124)
C0749-5 B,0.5D C0285-18
HEADER 0285 (K109)
C0285-13 B,1.5D C0811-1
SWITCH-HAZARD WARNING (S121)
C0288-16 RO,0.5D C0096-4
C0096-5 B,1.0D C0285-15
SWITCH-HEATED REAR SCREEN (S120)
C0288-20 RO,0.5D C0072-2
C0072-4 B,0.5D C0285-16
HEADER-EARTH 0550 (K108)
SWITCH-WINDOW-FRONT-LH (S139)
HEADER 0290 (K109)
A
C0288-15 C0288-18 RO,1.0D C0290-17
C0290-20 RO,0.5D C0321-6
C0321-1 B,0.5D C0550-9
SWITCH-HILL DESCENT (S238)
HEADER 0294 (K109)
RO,1.0D C0290-13
C0290-16 RO,0.5D A373 RO,0.5D C0878-2
C0878-5 B,0.5D C0294-6
C0294-5 B,1.5D
A95
B,1.5D C0550-3
SWITCH-WINDOW-TAIL DOOR (S249)
C0290-8
C0290-1 RO,0.5D C0354-6
C0354-1 B,0.5D C0294-14
SWITCH-CENTRAL DOOR LOCKING (S247)
C0290-18 RO,0.5D C0328-6
C0328-1 B,0.5D C0294-4
C0294-1 B,1.5D
SWITCH PACK-SEAT-RH (S159)
C0290-5 RO,0.5D C0250-2
C0250-5 B,0.5D C0294-11
C0294-8 B,1.0D
SWITCH-WINDOW-REAR-LH (S141)
C0264-1 C0264-6 RO,0.5D C0290-7
C0290-6 RO,0.5D C0249-2
SWITCH PACK-SEAT-LH (S160)
C0249-5 B,0.5D C0294-10
C0294-9
SWITCH-SUN ROOF (S171)
C0290-15 RO,0.5D C0363-6
C0363-1 B,1.0D C0294-15
C0294-20
SWITCH-WINDOW-REAR-RH (S140)
C0263-1 C0263-6
SWITCH-WINDOW-FRONT-RH (S138)
C0290-14 RO,0.5D C0242-6
C0242-1 B,2.0 C0550-10
HEADER 0725 (K109)
CIGAR LIGHTER-FRONT (J112)
C0725-9 RO,0.5D
C0290-3 RO,0.5D C0074-1
C0089-1 B,1.5D C0550-4
RADIO/CASSETTE PLAYER (F100)
C0290-19 RO,0.5D
C0098-6 C0098-8 B,1.0D C0550-1
C0725-1 RO,1.0D C0290-4
HEATER CONTROL ILLUMINATION (B117)
C0290-2 RO,0.5D C0051-2
C0051-1 BO,0.5 B,0.5 SJ2 B,3.0 C0015-4 C0431-4 B,3.0 C0550-5
C0010-1 C0906-1
RO,0.5
SWITCH PACK-AIR CONDITIONING (A/C) (S194)
C0010-4 C0906-4 RO,0.5 C0275-3
C0275-5 B,0.5
B,2.0 C0725-3
SWITCH-FRESH/RECIRCULATED AIR (S185)
C0431-2 C0015-2 RO,0.5
RO,0.5 C0750-2
C0750-1 B,0.5
B,2.0 C0725-4 C0725-10 B,2.0 C0550-8
1.2 WATT
VWR111500-2of2


A38 (OB) FRONT DOOR




A37 (OK) FRONT DOOR

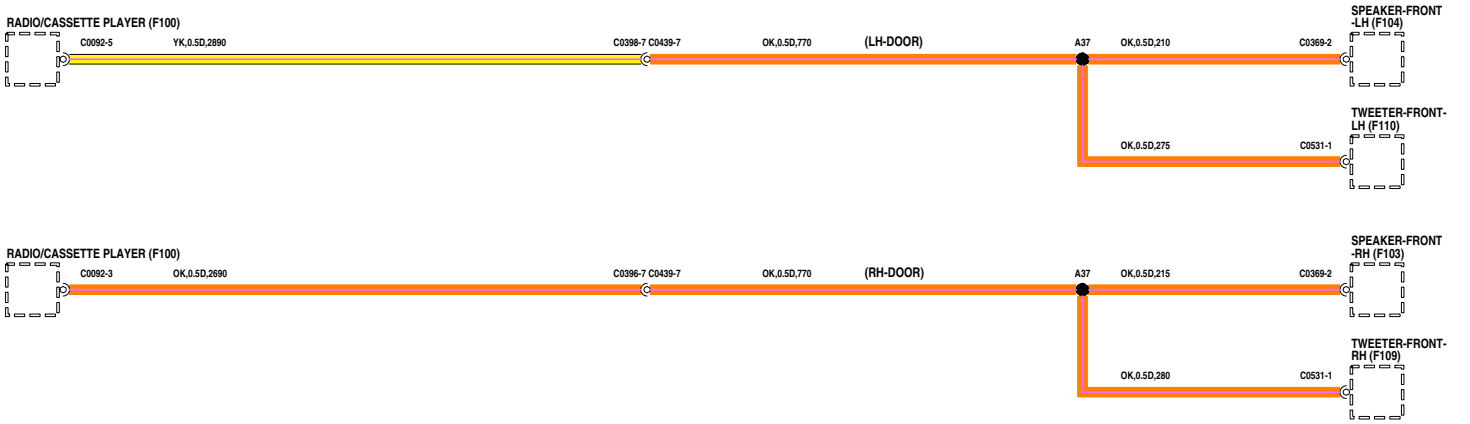


VWR111560-7of7

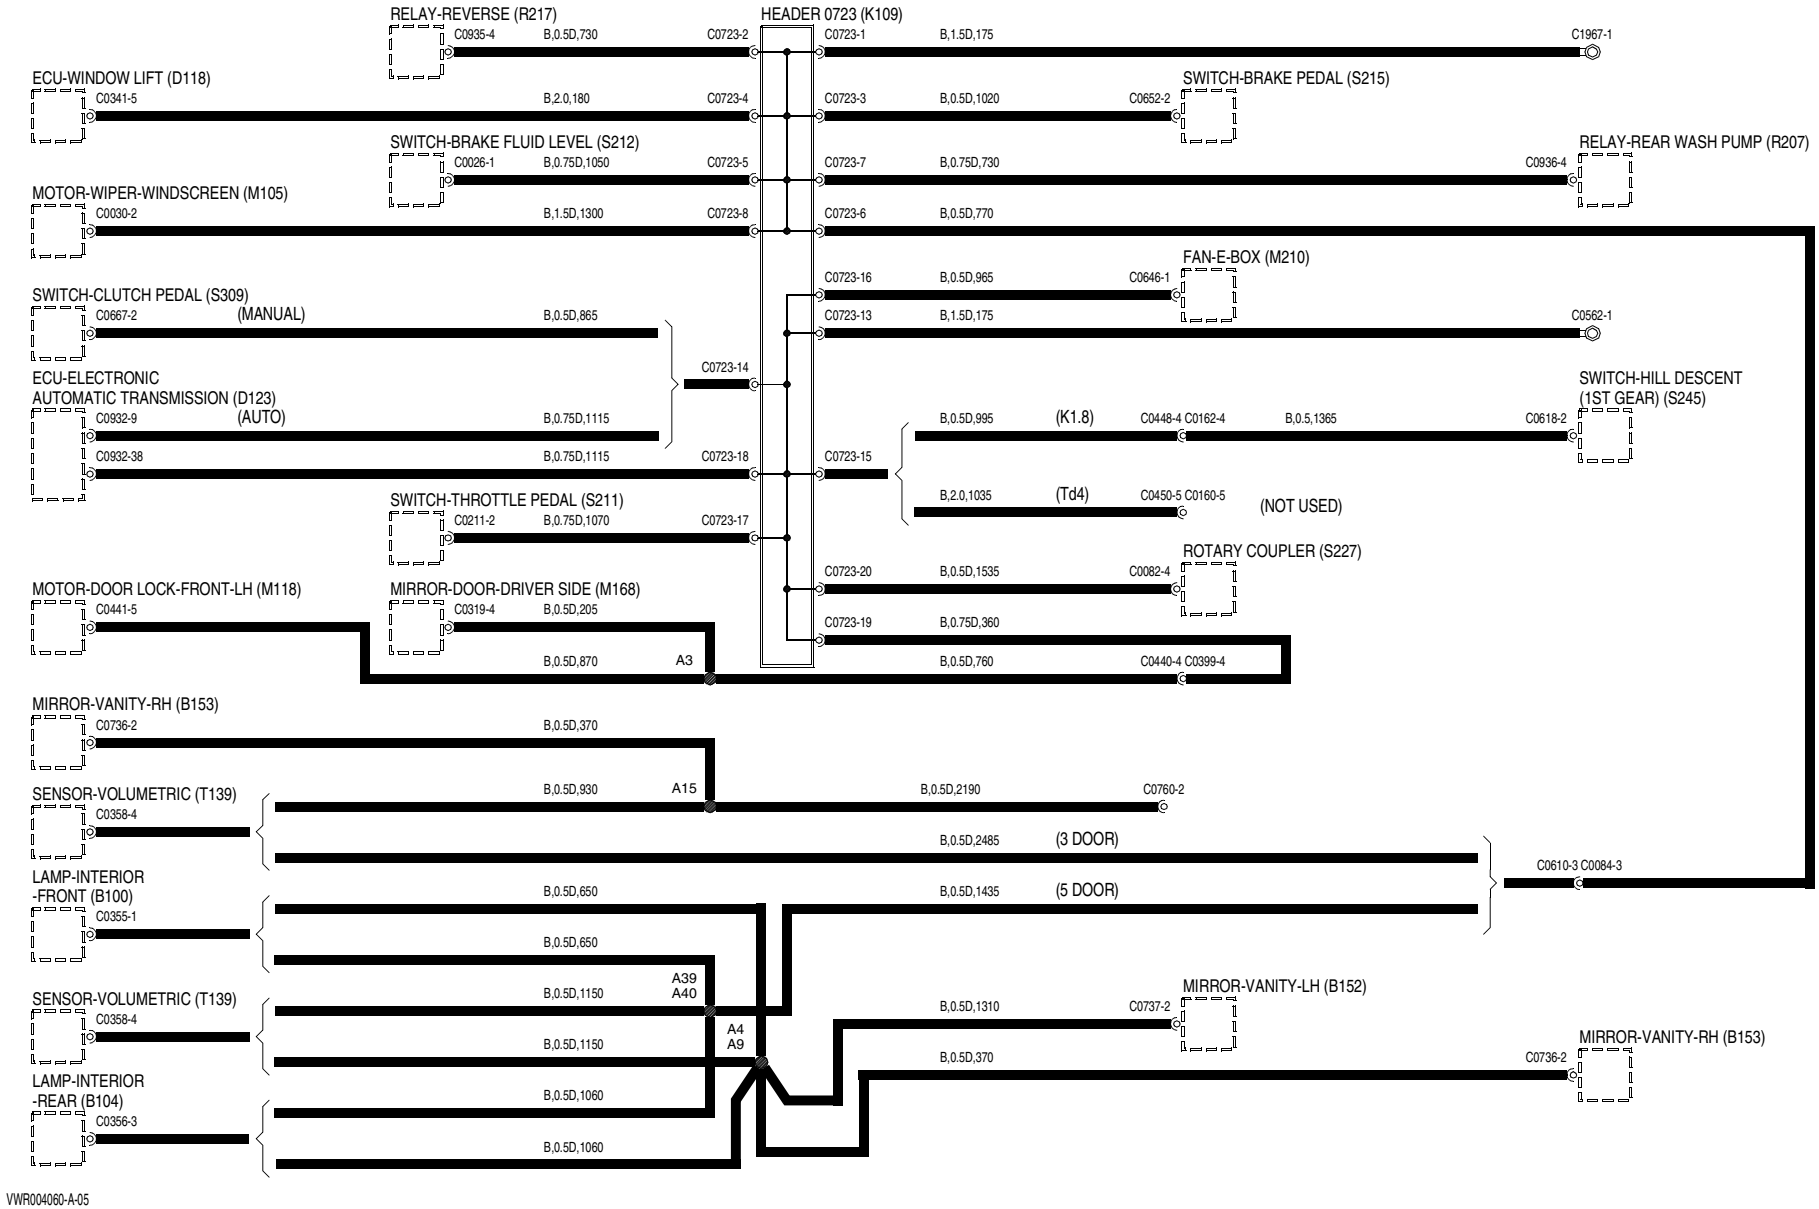


VWR004060-A-05

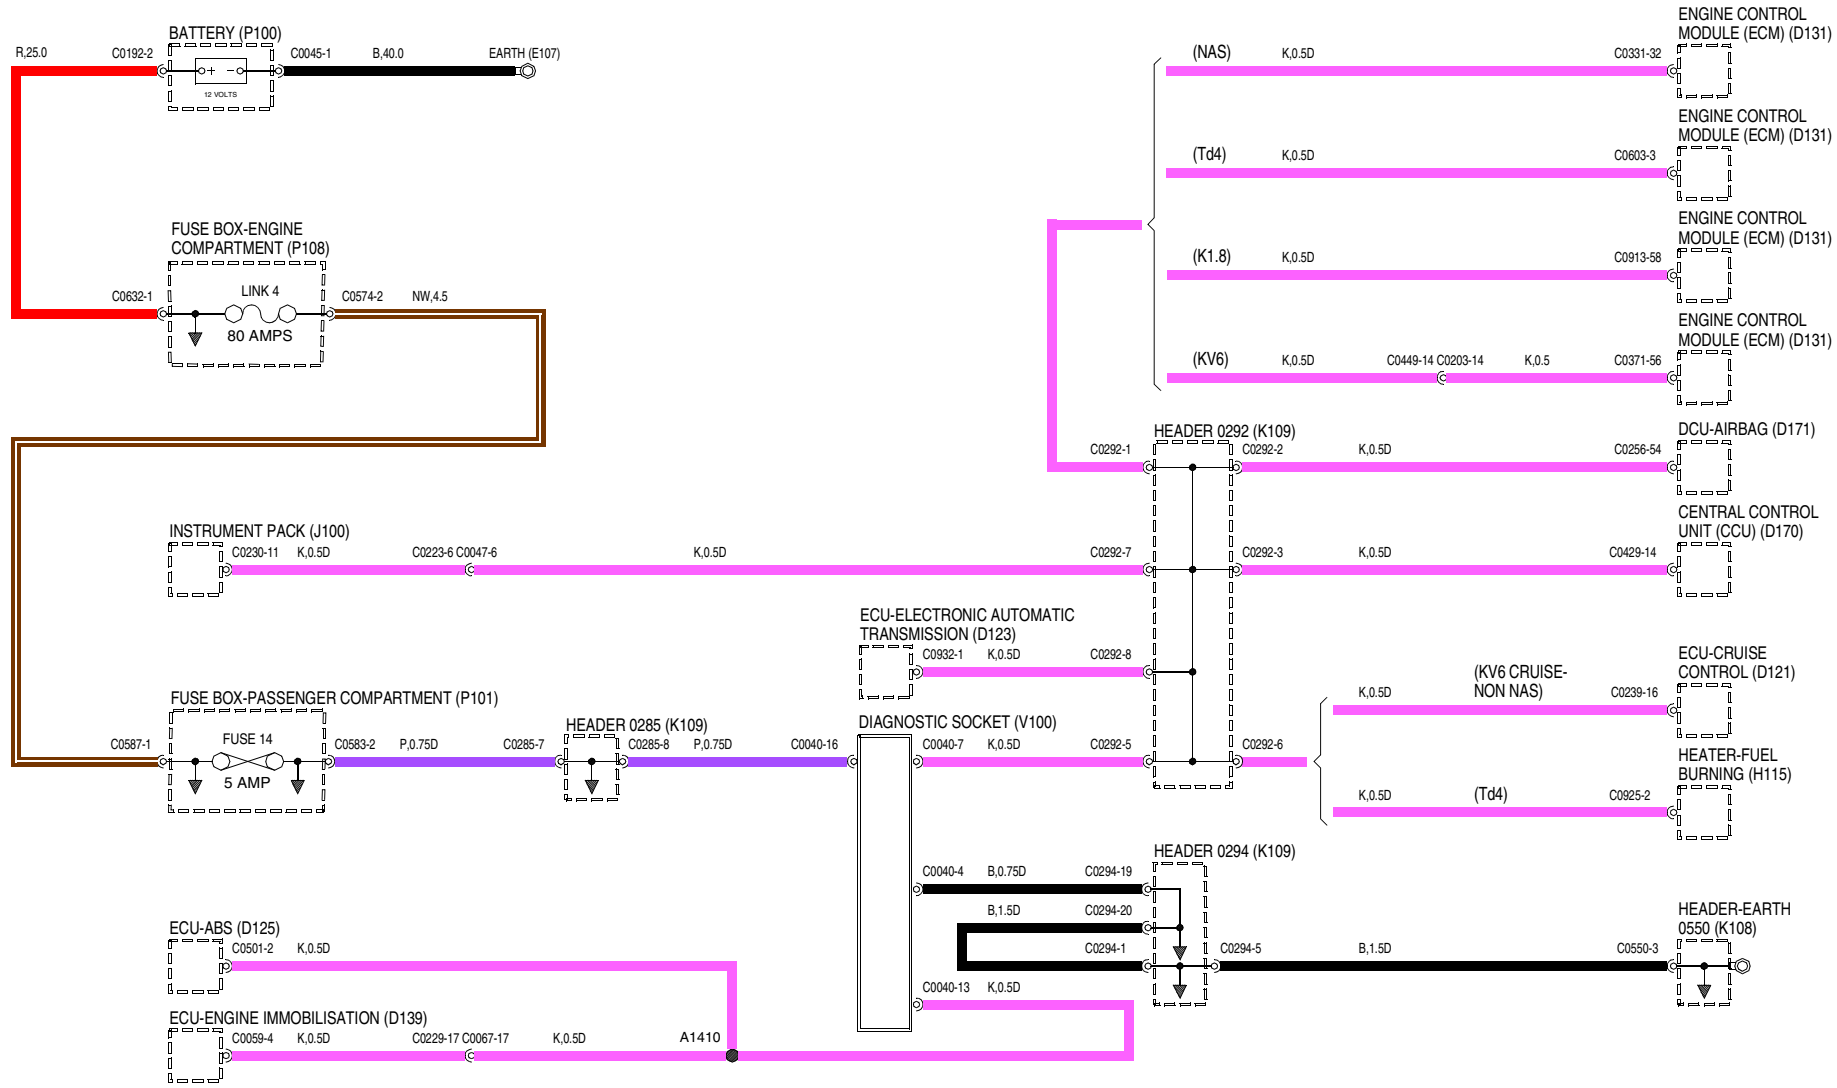

VWR004050-A-01

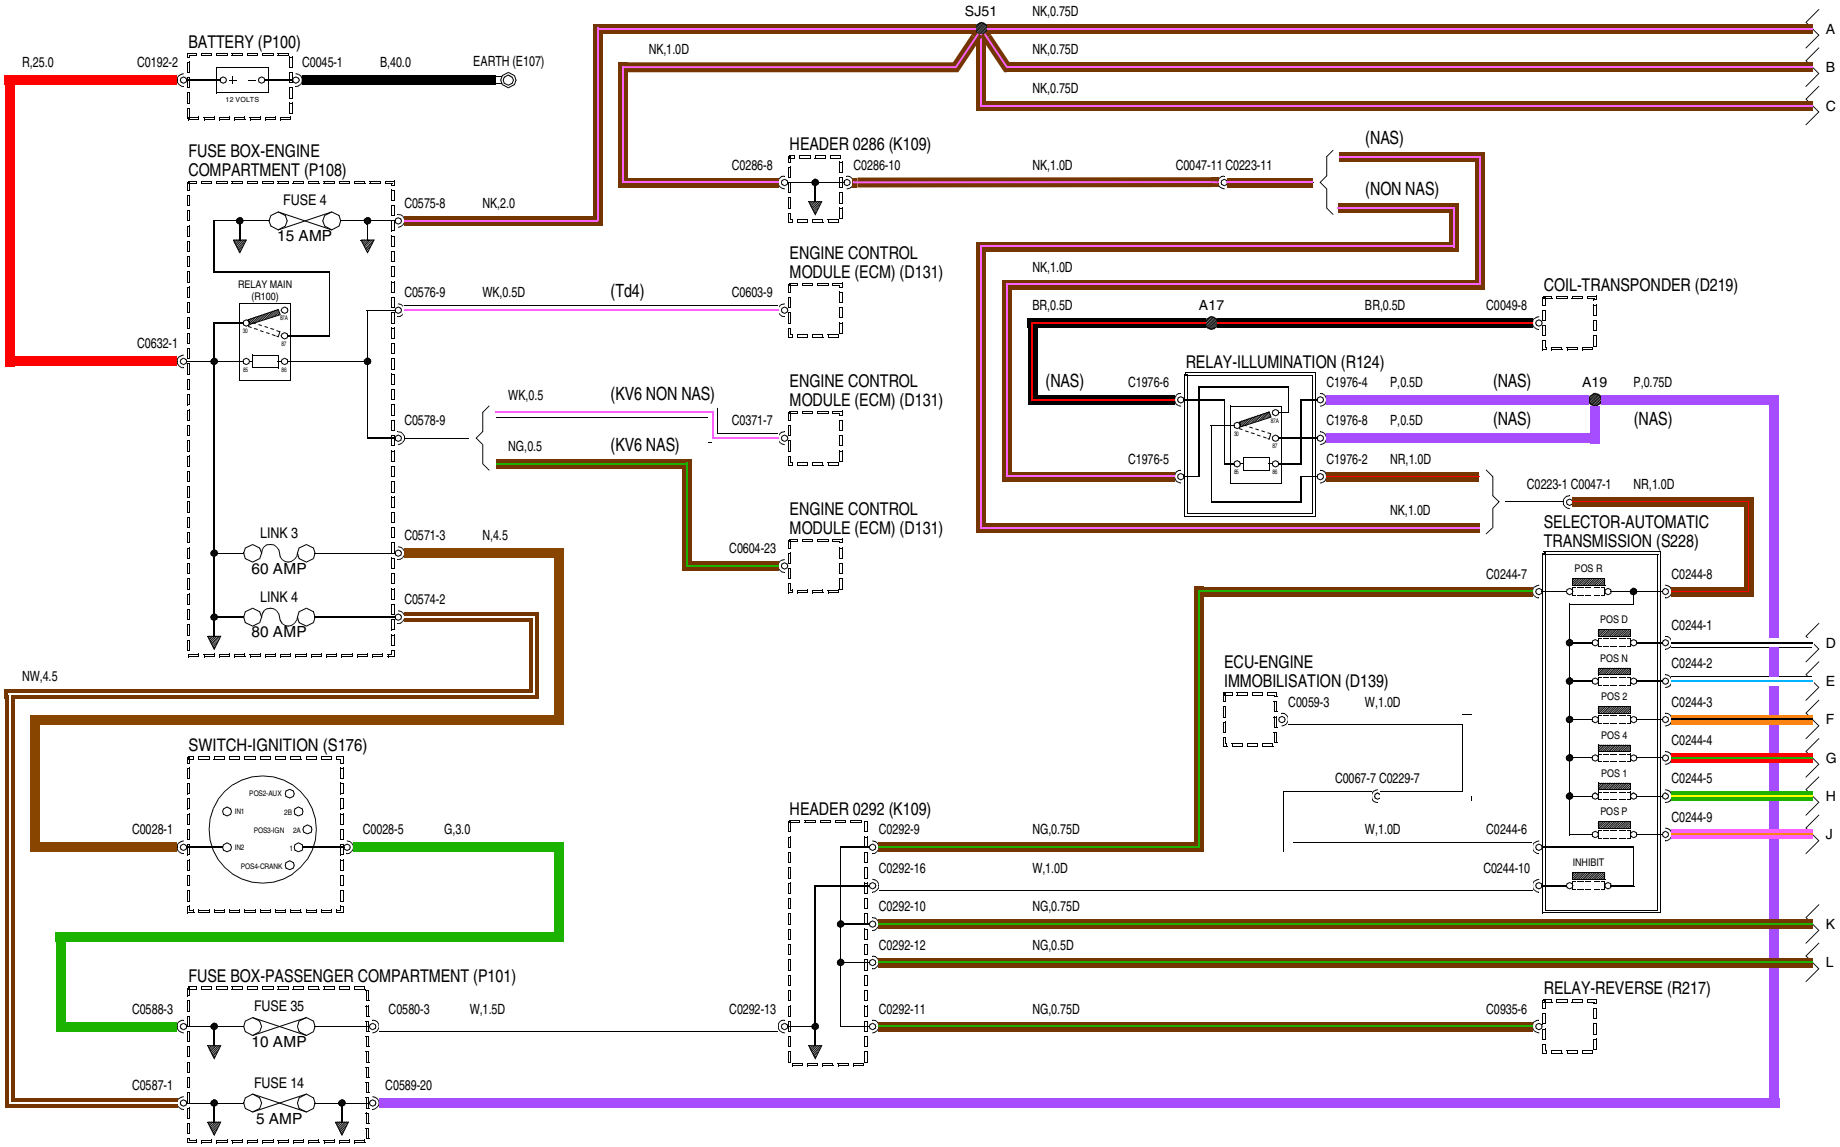

VWR004350-A-01

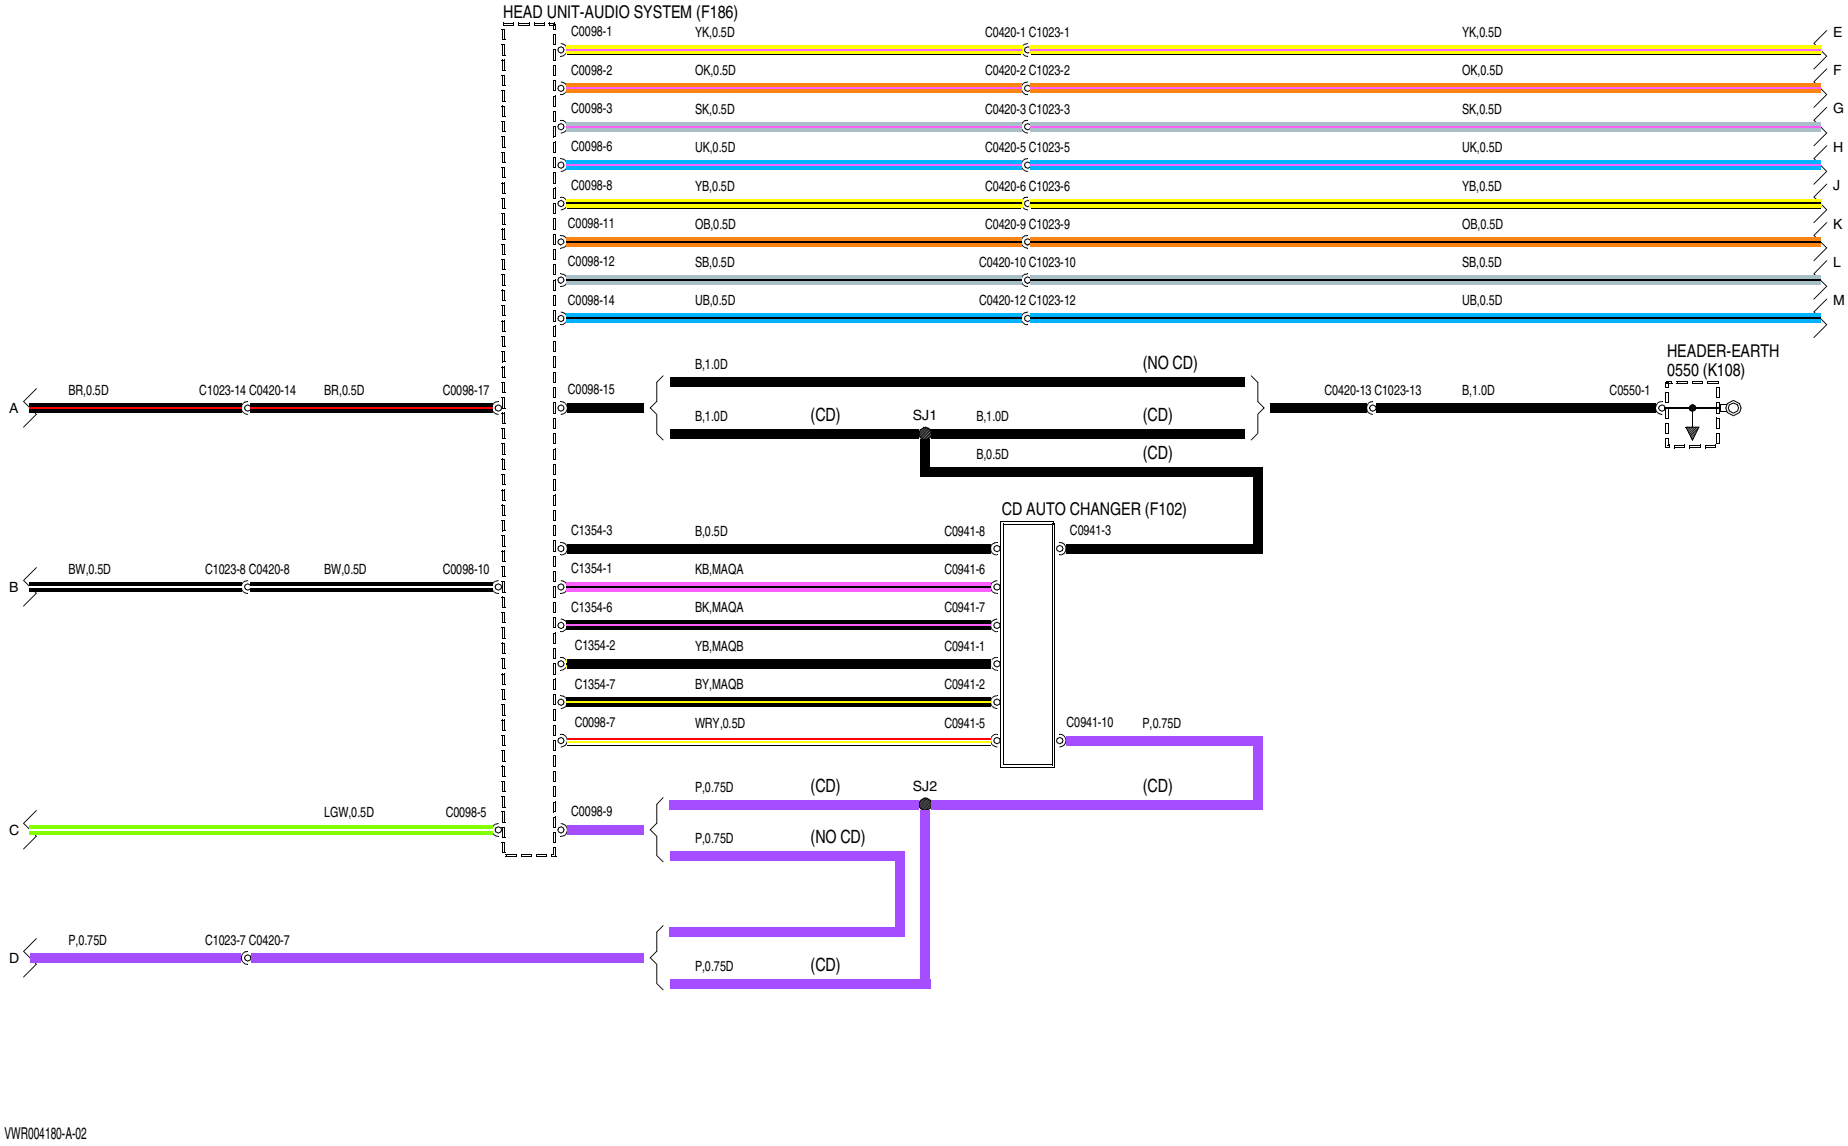

VWR004180-A-02