




















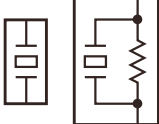

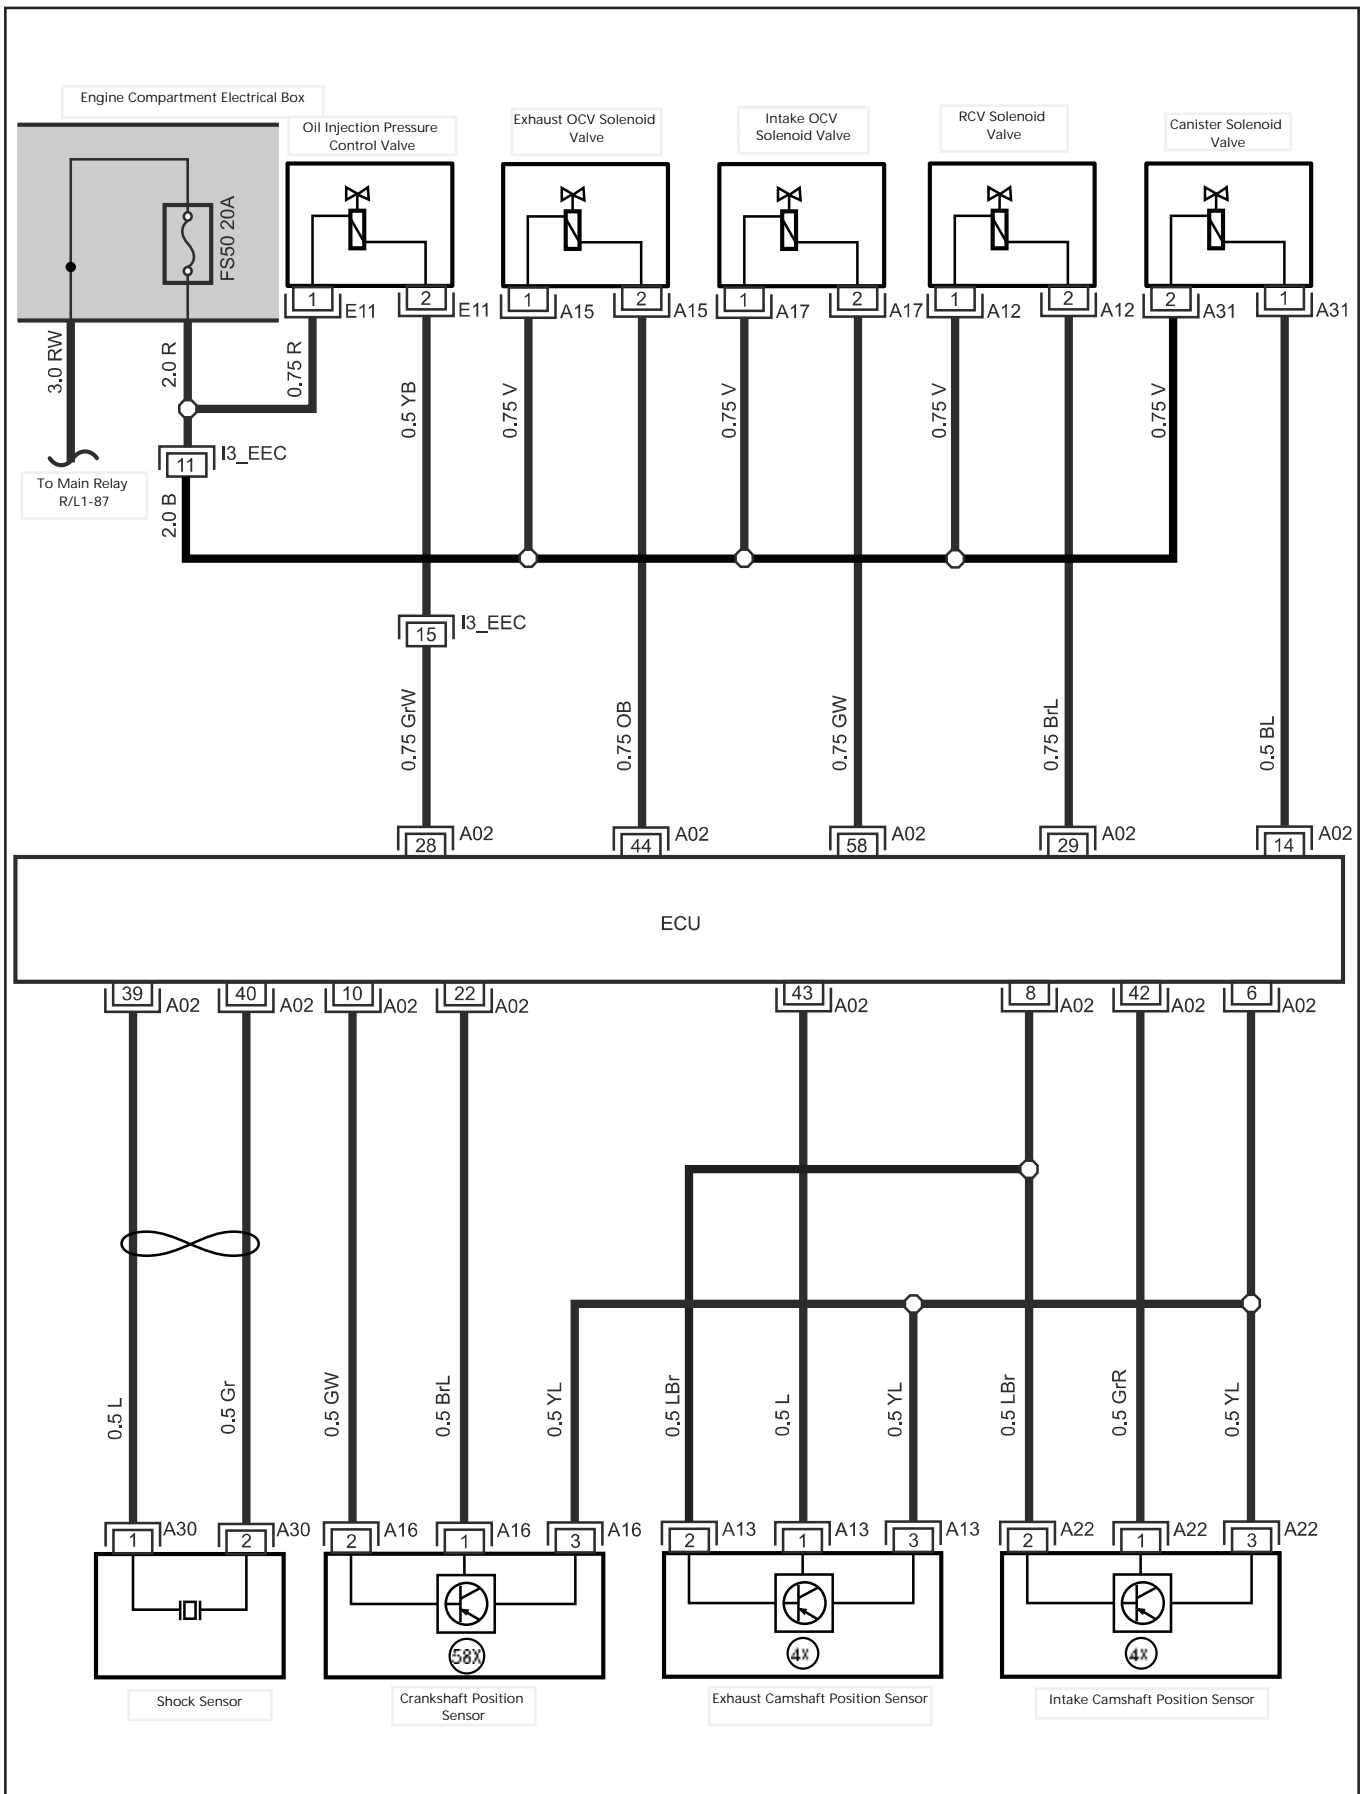
	Grounding		Normally Closed Relay		Storage Battery
	Temperature Sensor		Normally Open Relay		Capacitance
	Short-Circuit Plate		Double Throw Relay		Cigarette Lighter
	Solenoid Valve		Resistance		Antenna
	Low-Loaded Fuse		Potentiometer		Normally Open Switch
	Medium-Loaded Fuse		Variable Resistor		Normally Closed Switch
	Heavy-Loaded Fuse		Ignition Coil		Double Throw Switch
	Heater		Knock Sensor		Ignition Switch


Circuit Troubleshooting Index

Engine Compartment Electrical Box	1	Air Bag-A	36
Cabin Electrical Box	2	Air Bag-B	37
Start-Up System	3	Diagnosis Interface	38
Charging System	4	CAN Network System-BCAN	39
ECU System-A	5	CAN Network System-PCAN	40
ECU System-B	6	ESC	41
ECU System-C	7	A/C System-A	42
ECU System-D	8	A/C System-B	43
ECU System-E	9	Defrost	44
ECU System-F	10	Combination Instrument	45
ECU System-G	11	PEPS-A	46
ECU System-H	12	PEPS-B	47
TCU System-A	13	Power Window Lifting-A	48
TCU System-B	14	Power Window Lifting-B	49
Gear Shifting Sector	15	Central Lock-A	50
Parking Assist System	16	Central Lock-B	51
EPB Electronic Parking	17	Cigarette Lighter, Vehicle Power Supply	52
EPS Power Steering	18	Horn	53
MP5	19	TPMS	54
Lamplight System-Positioning Lamp, License Plate Lamp	20	Connector Shape	55
Lamplight System-Backlight	21	Harness Layout Diagram	81
Lamplight System-Front Fog Lamp	22		
Lamplight System-Rear Fog Lamp	23		
Lamplight System-Door Lamp, Trunk Lamp	24		
Lamplight System-Interior Lamp	25		
Lamplight System-Steering Lamp, Hazard Warning Lamp	26		
Lamplight System-Braking Lamp	27		
Lamplight System-Daytime Running Lamp	28		
BCM System-A	29		
BCM System-B	30		
BCM System-C	31		
Power Rearview Mirror	32		
Sun Roof	33		
Front Windscreen Wiper	34		
Rear Windscreen Wiper	35		


ECU System-C




ECU System-F

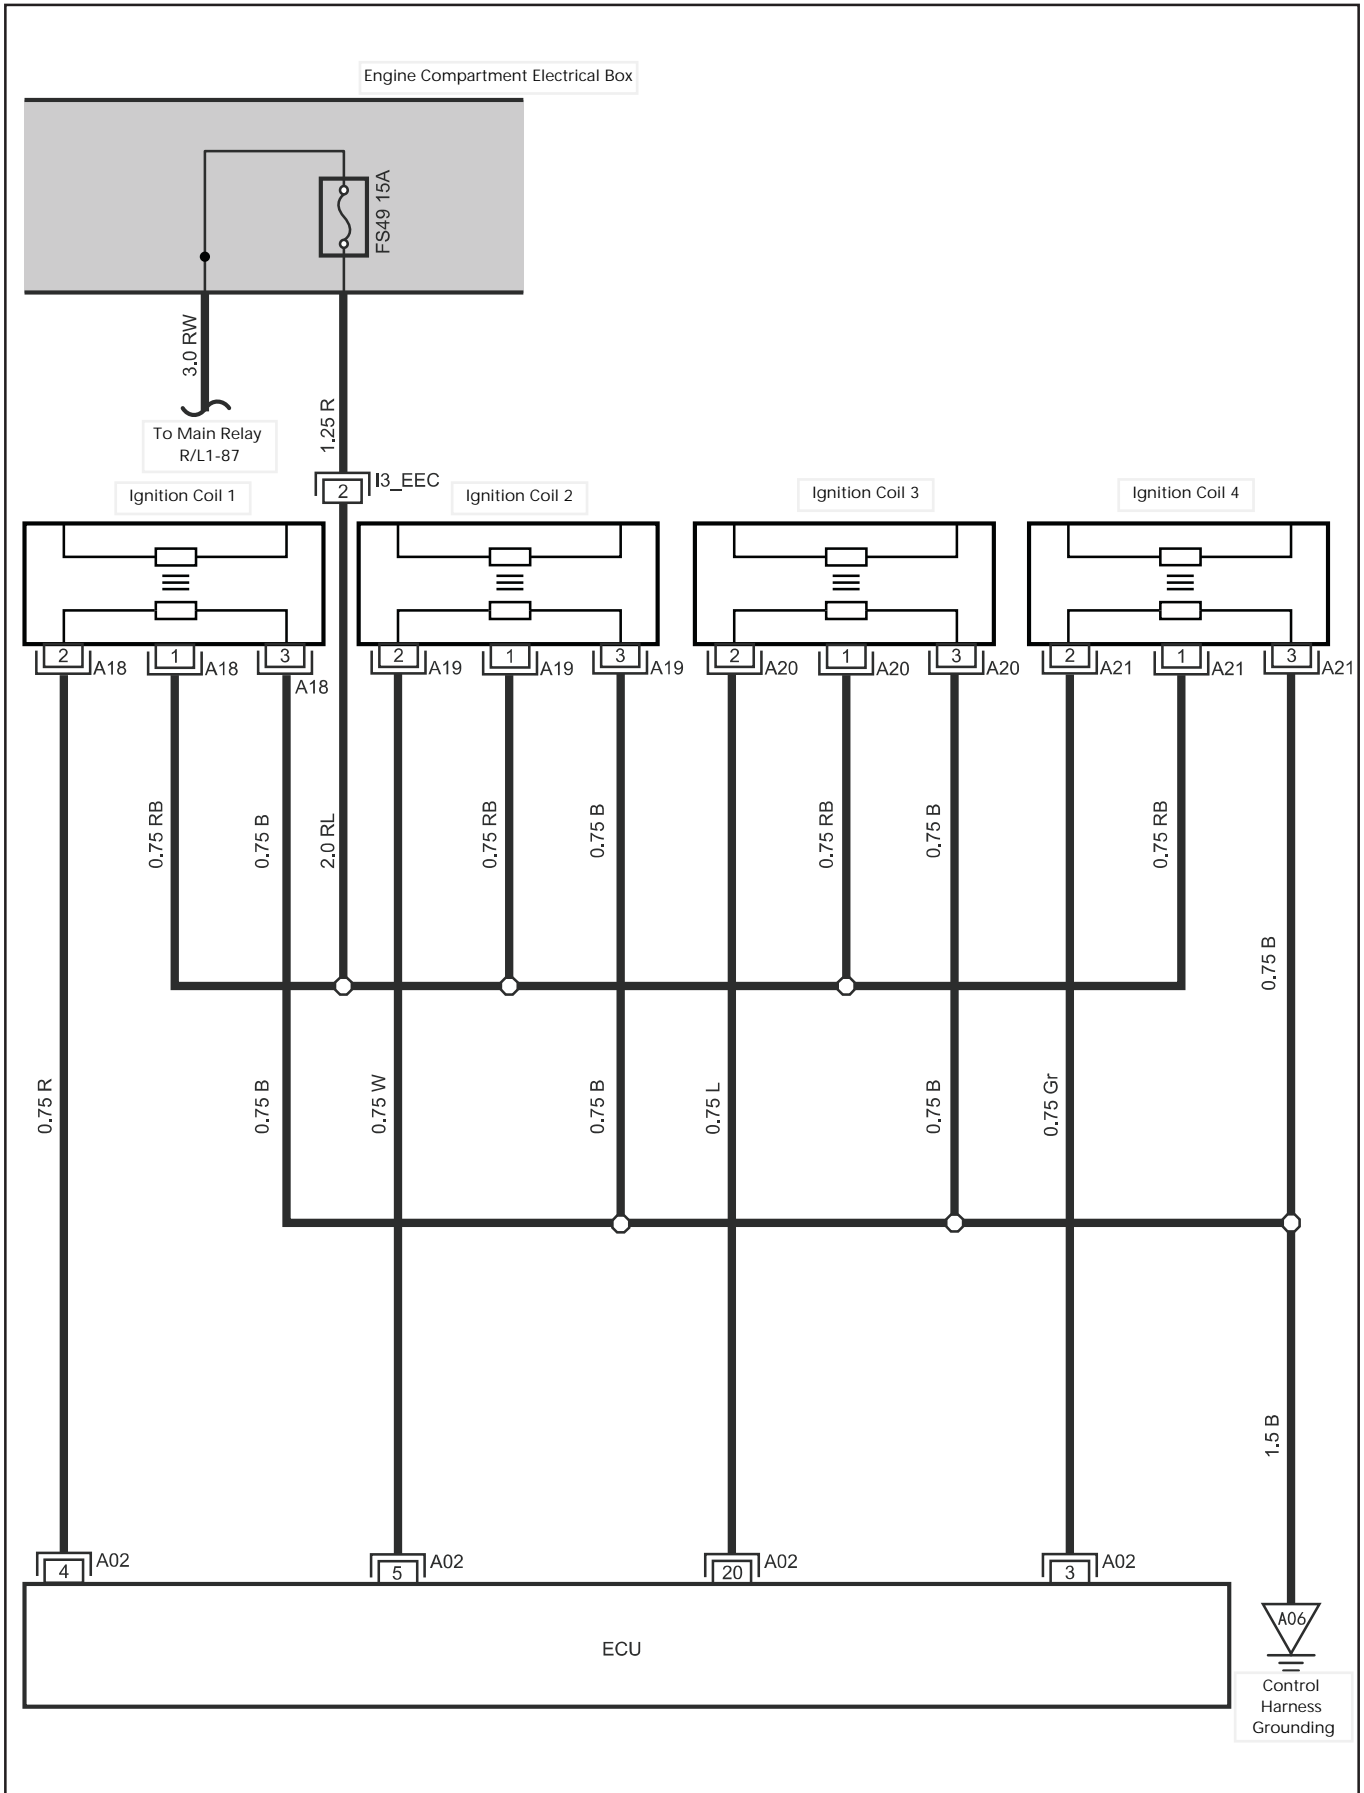


EPB(Electrical Park Brake)

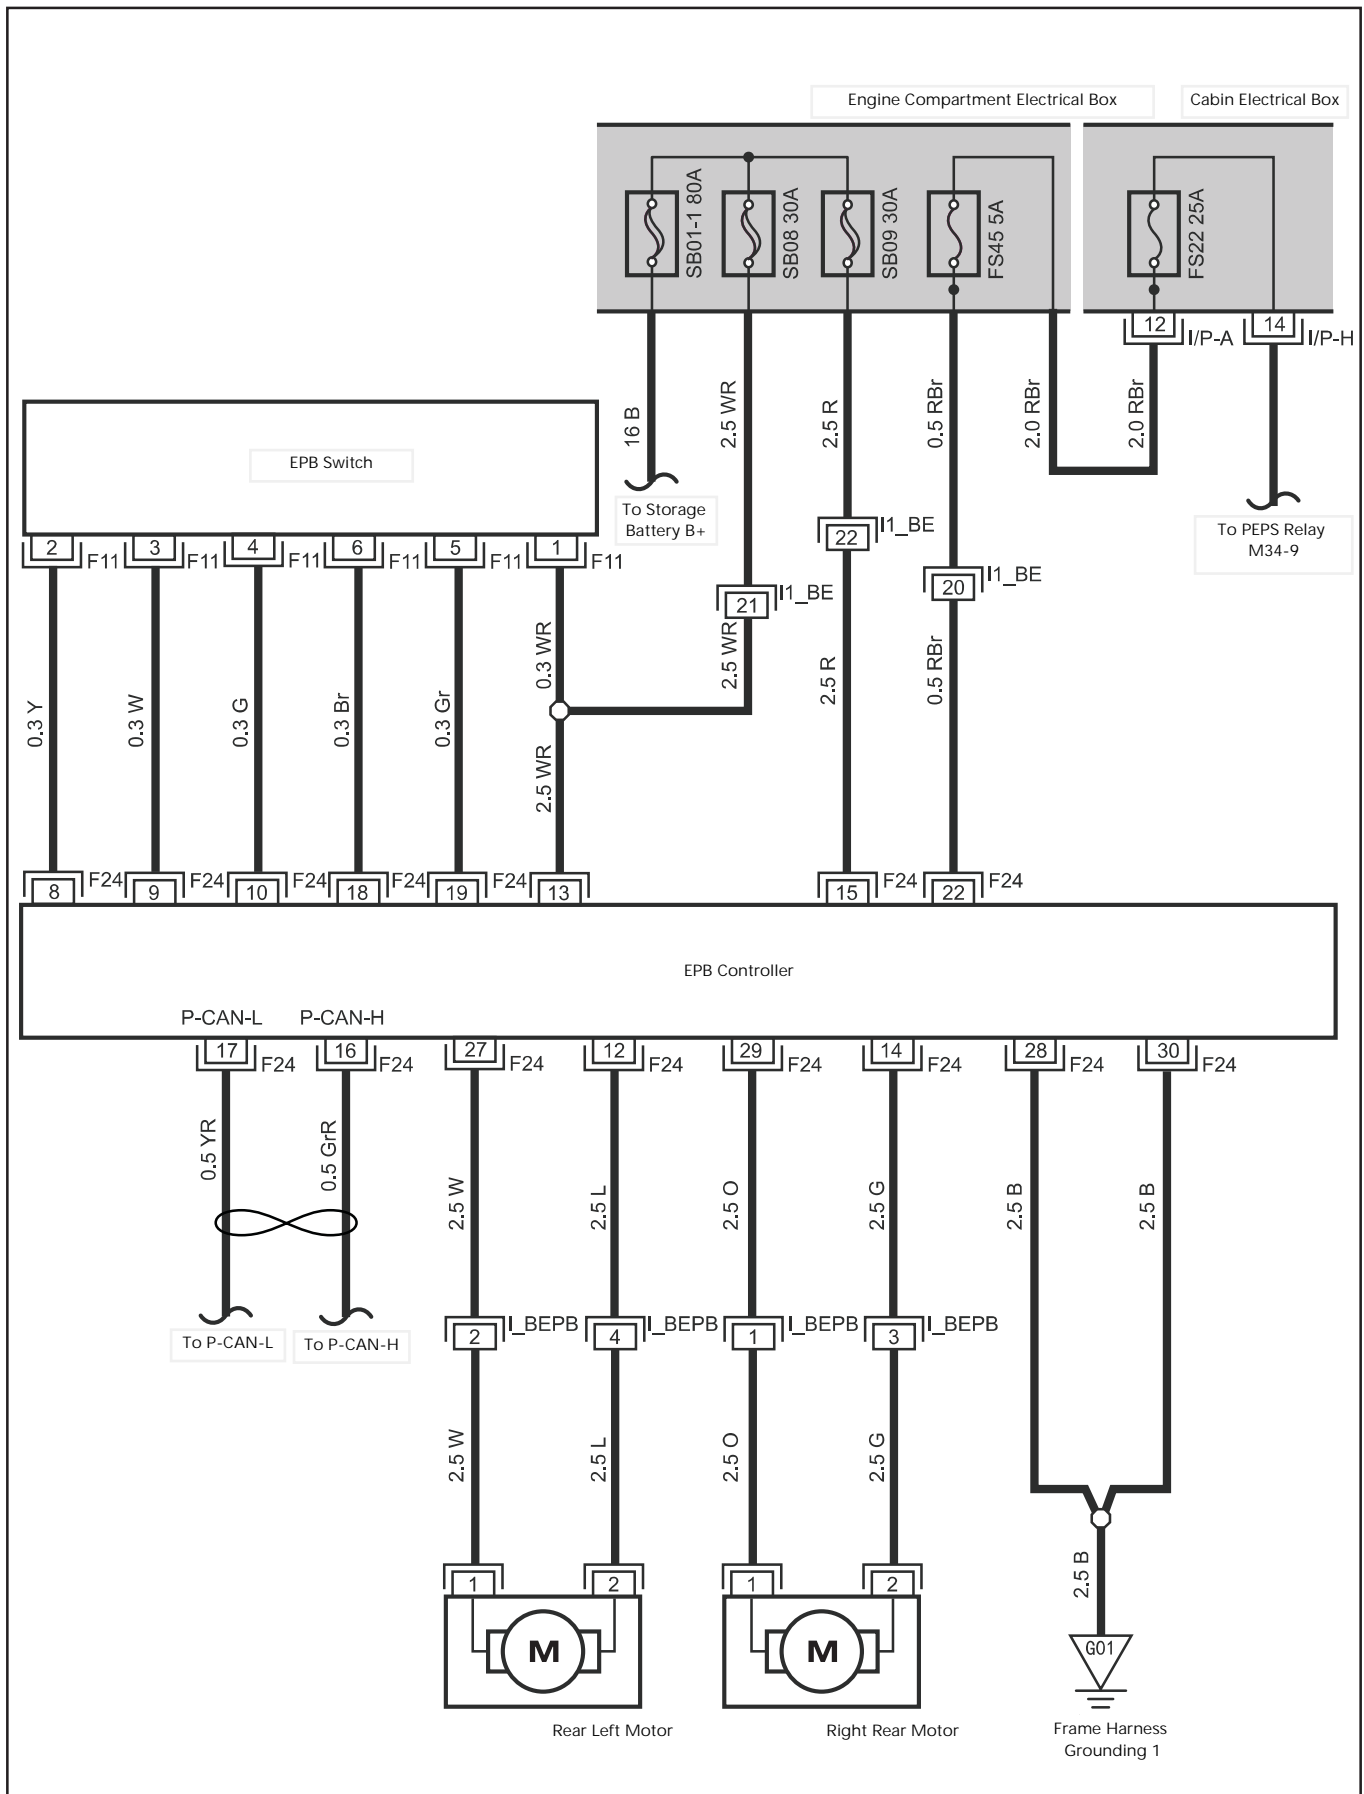


Lamplight System-Steering Lamp, Hazard Warning Lamp

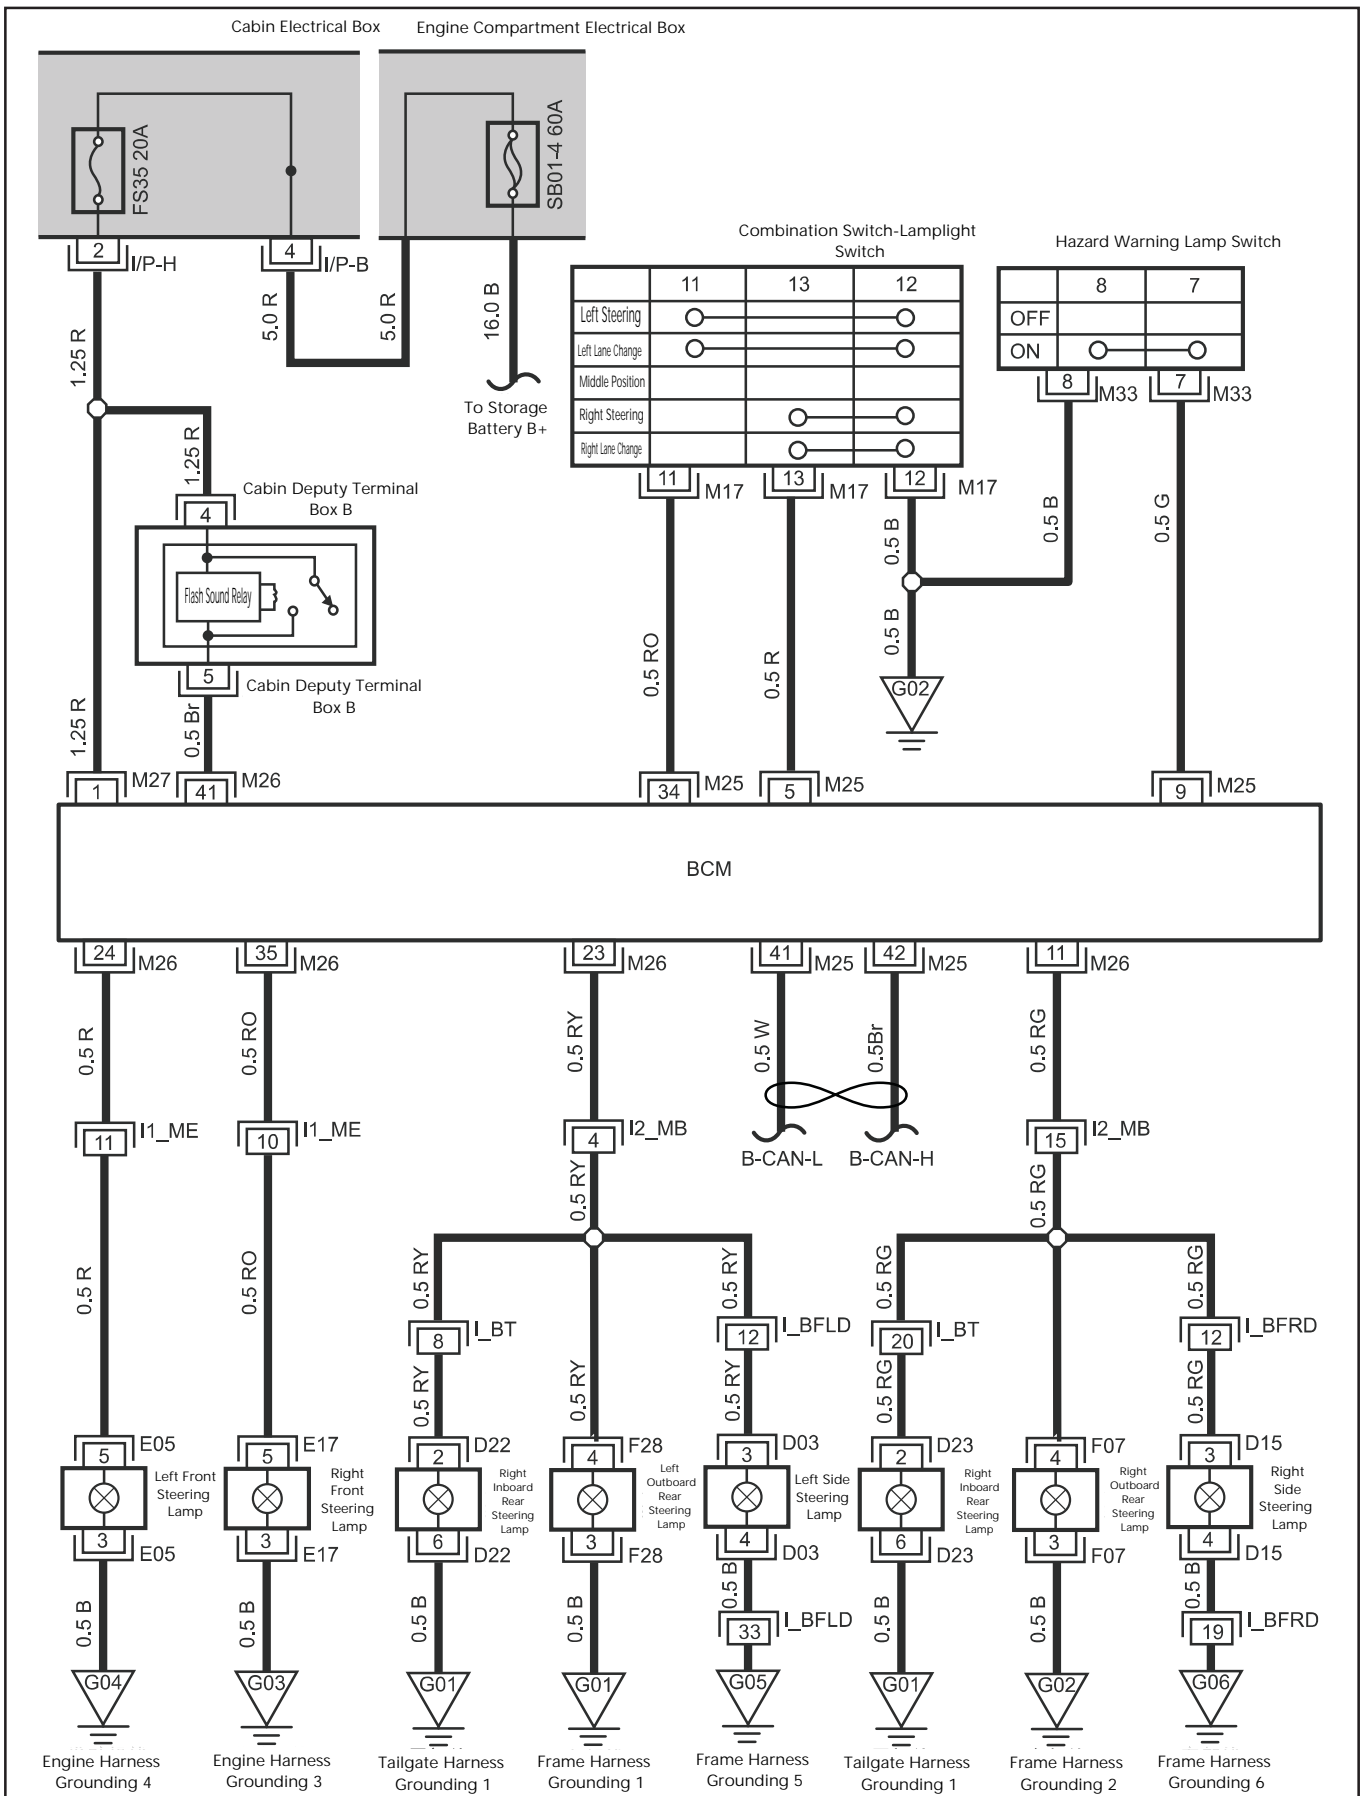


Power Rearview Mirror

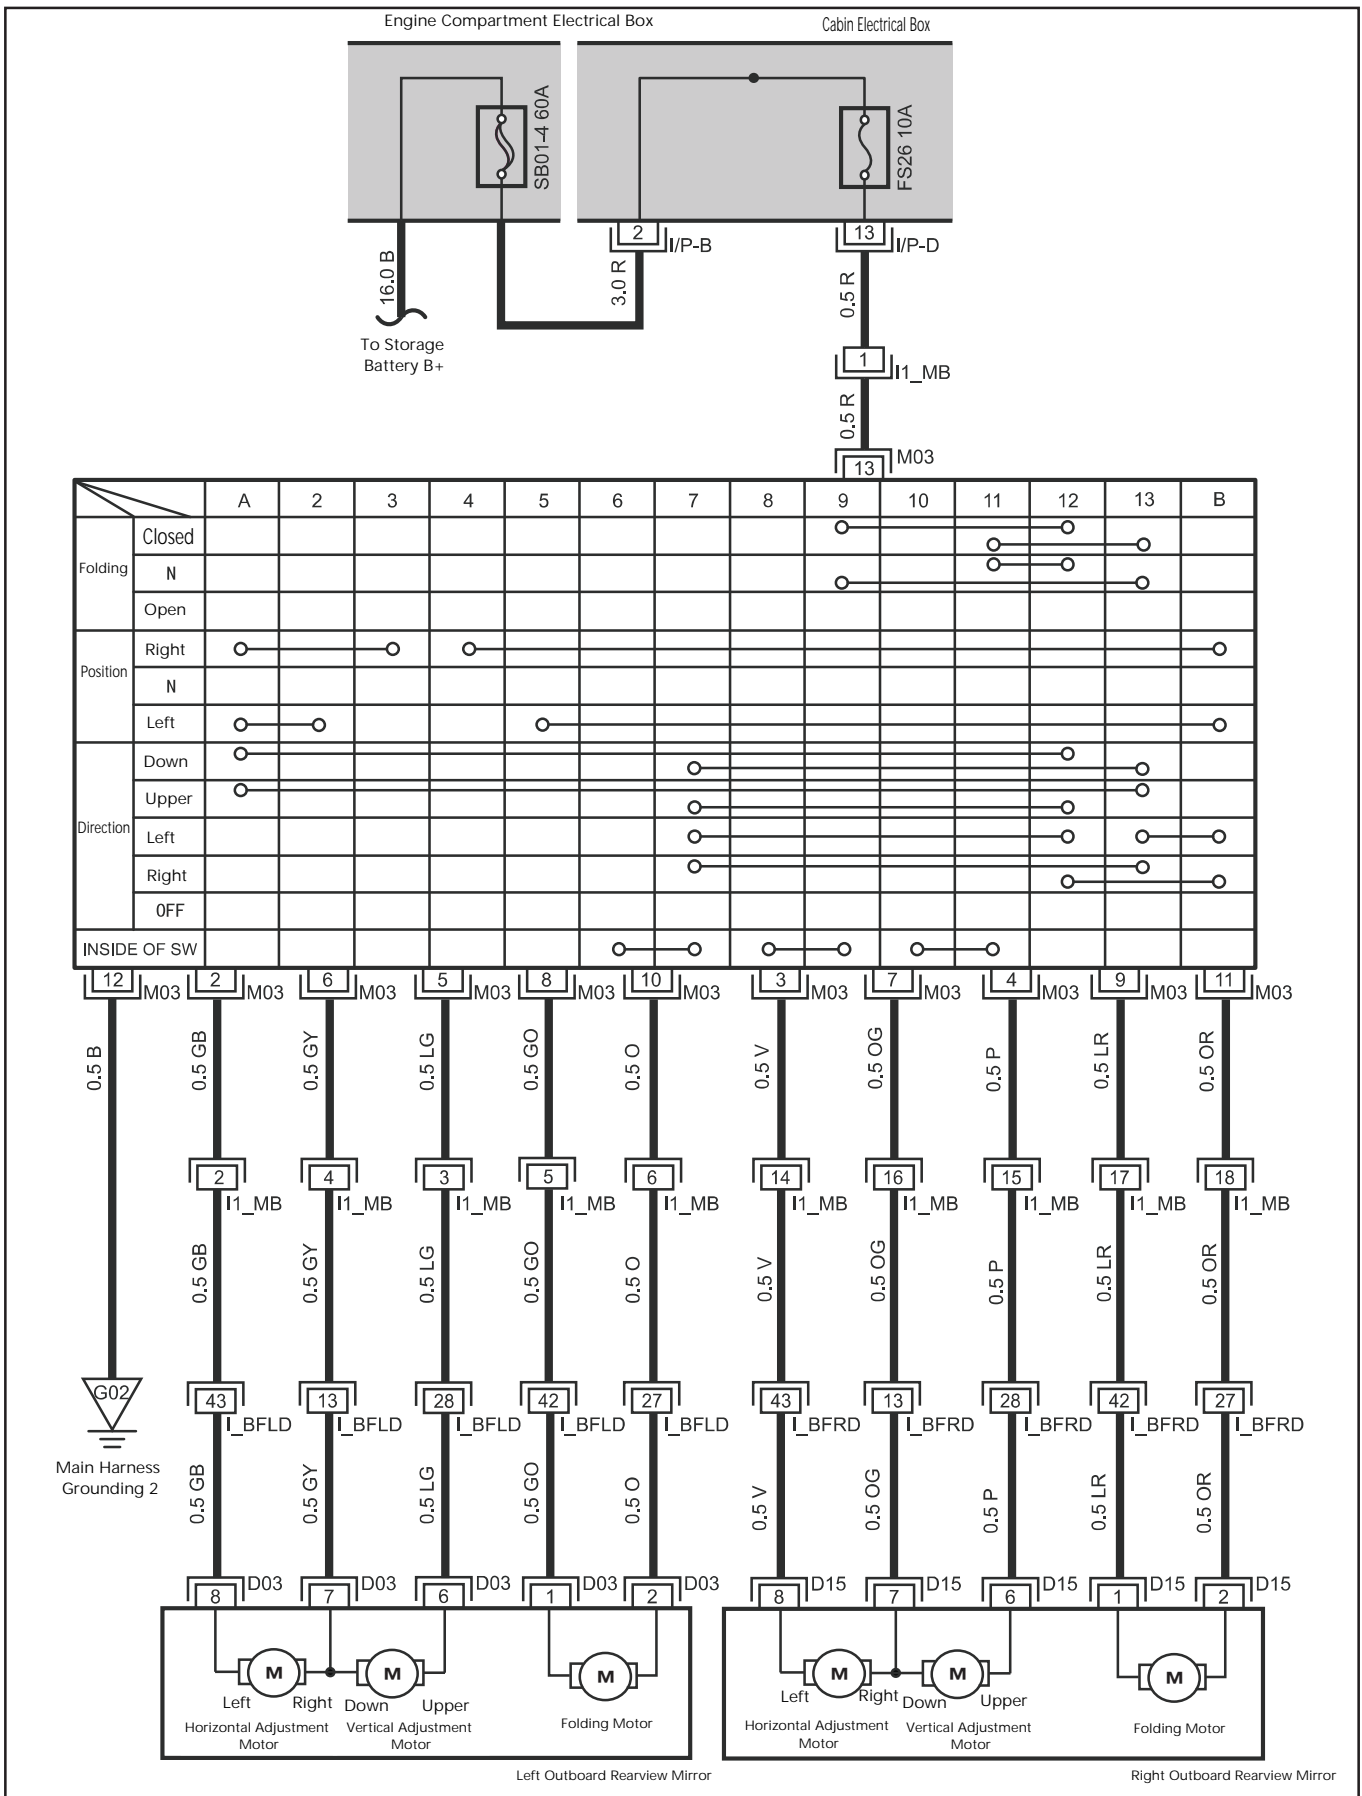


Diagnose Interface

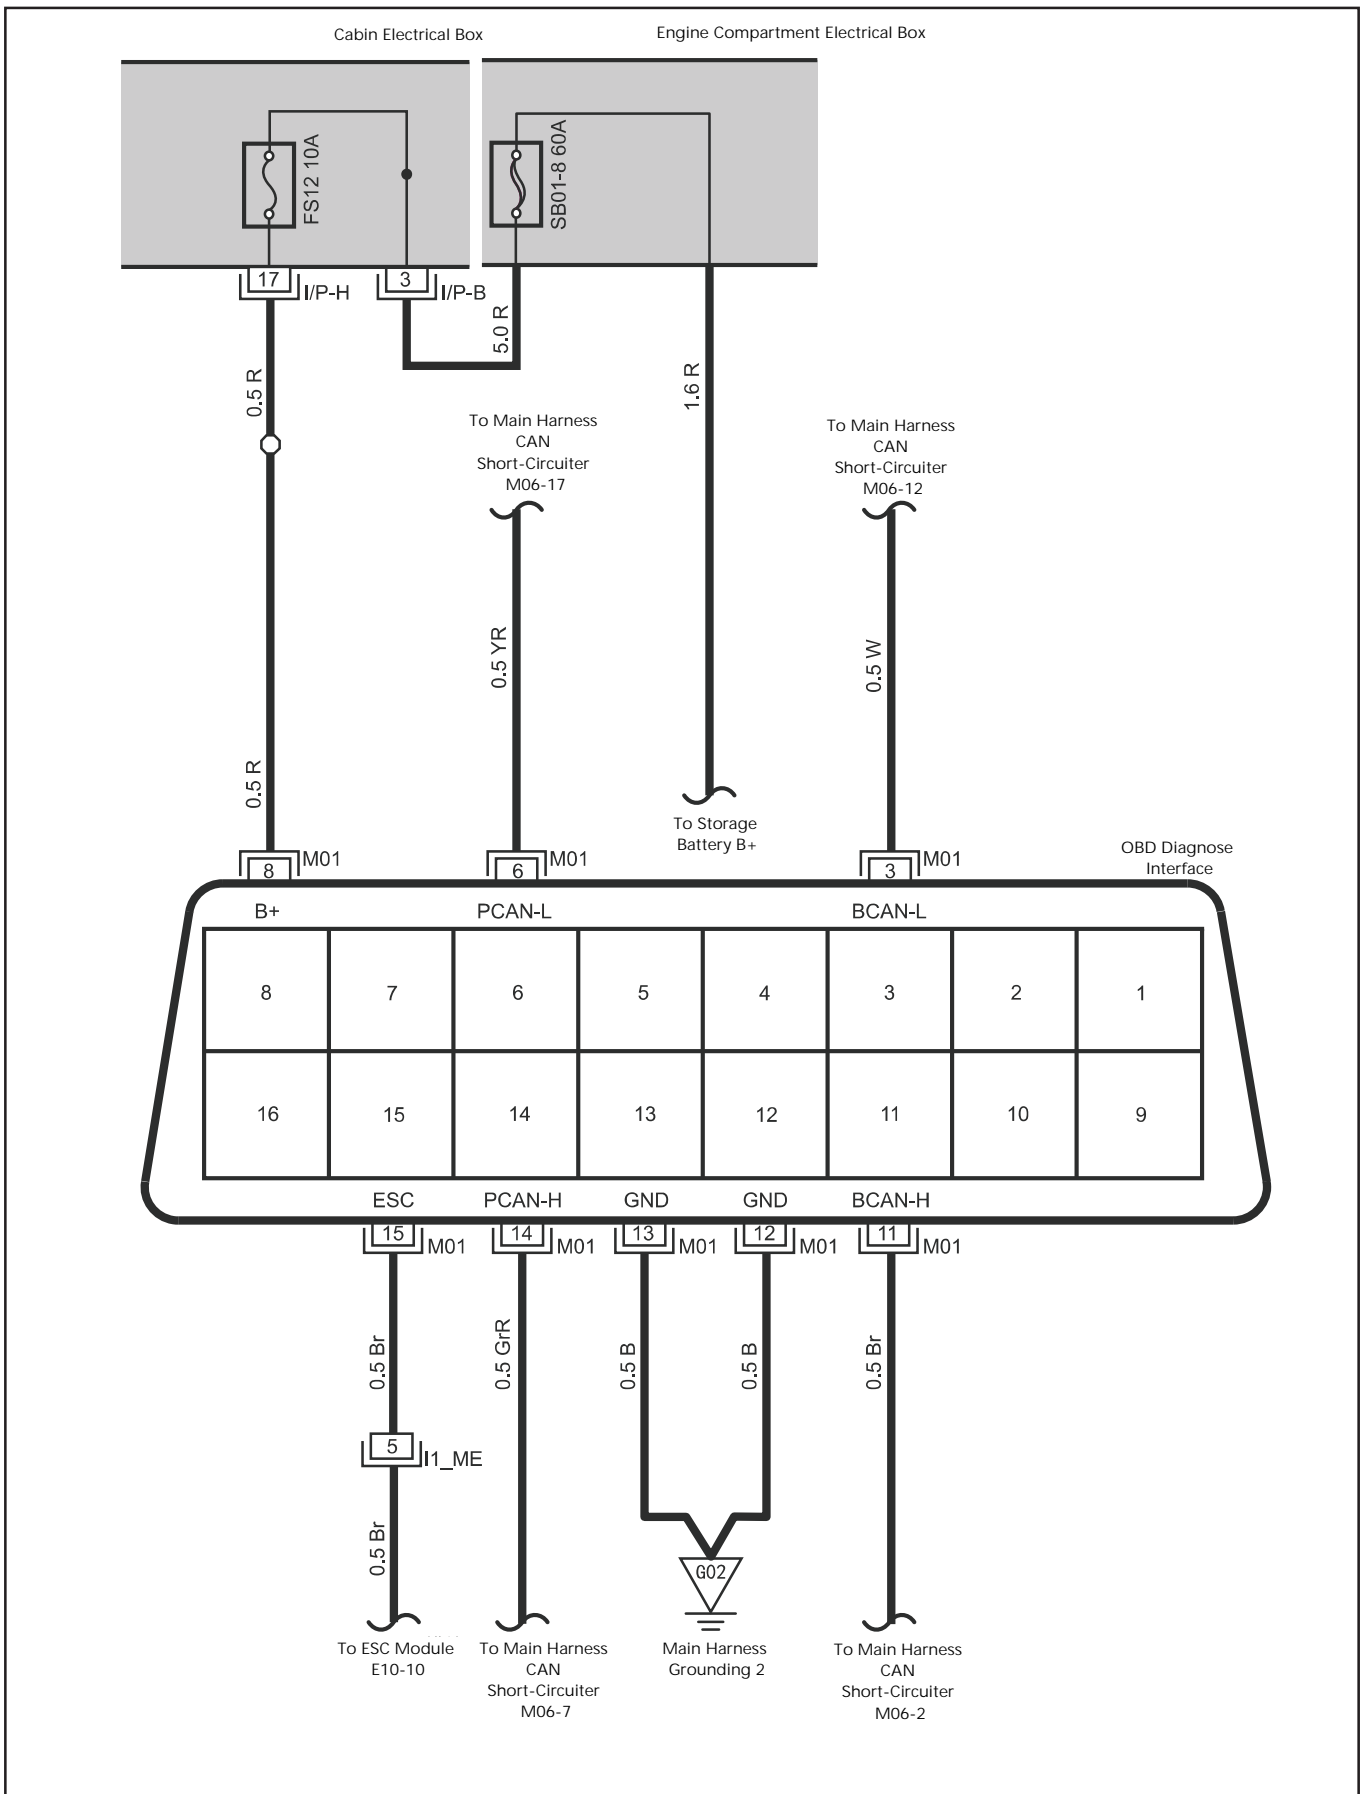

Combination Instrument

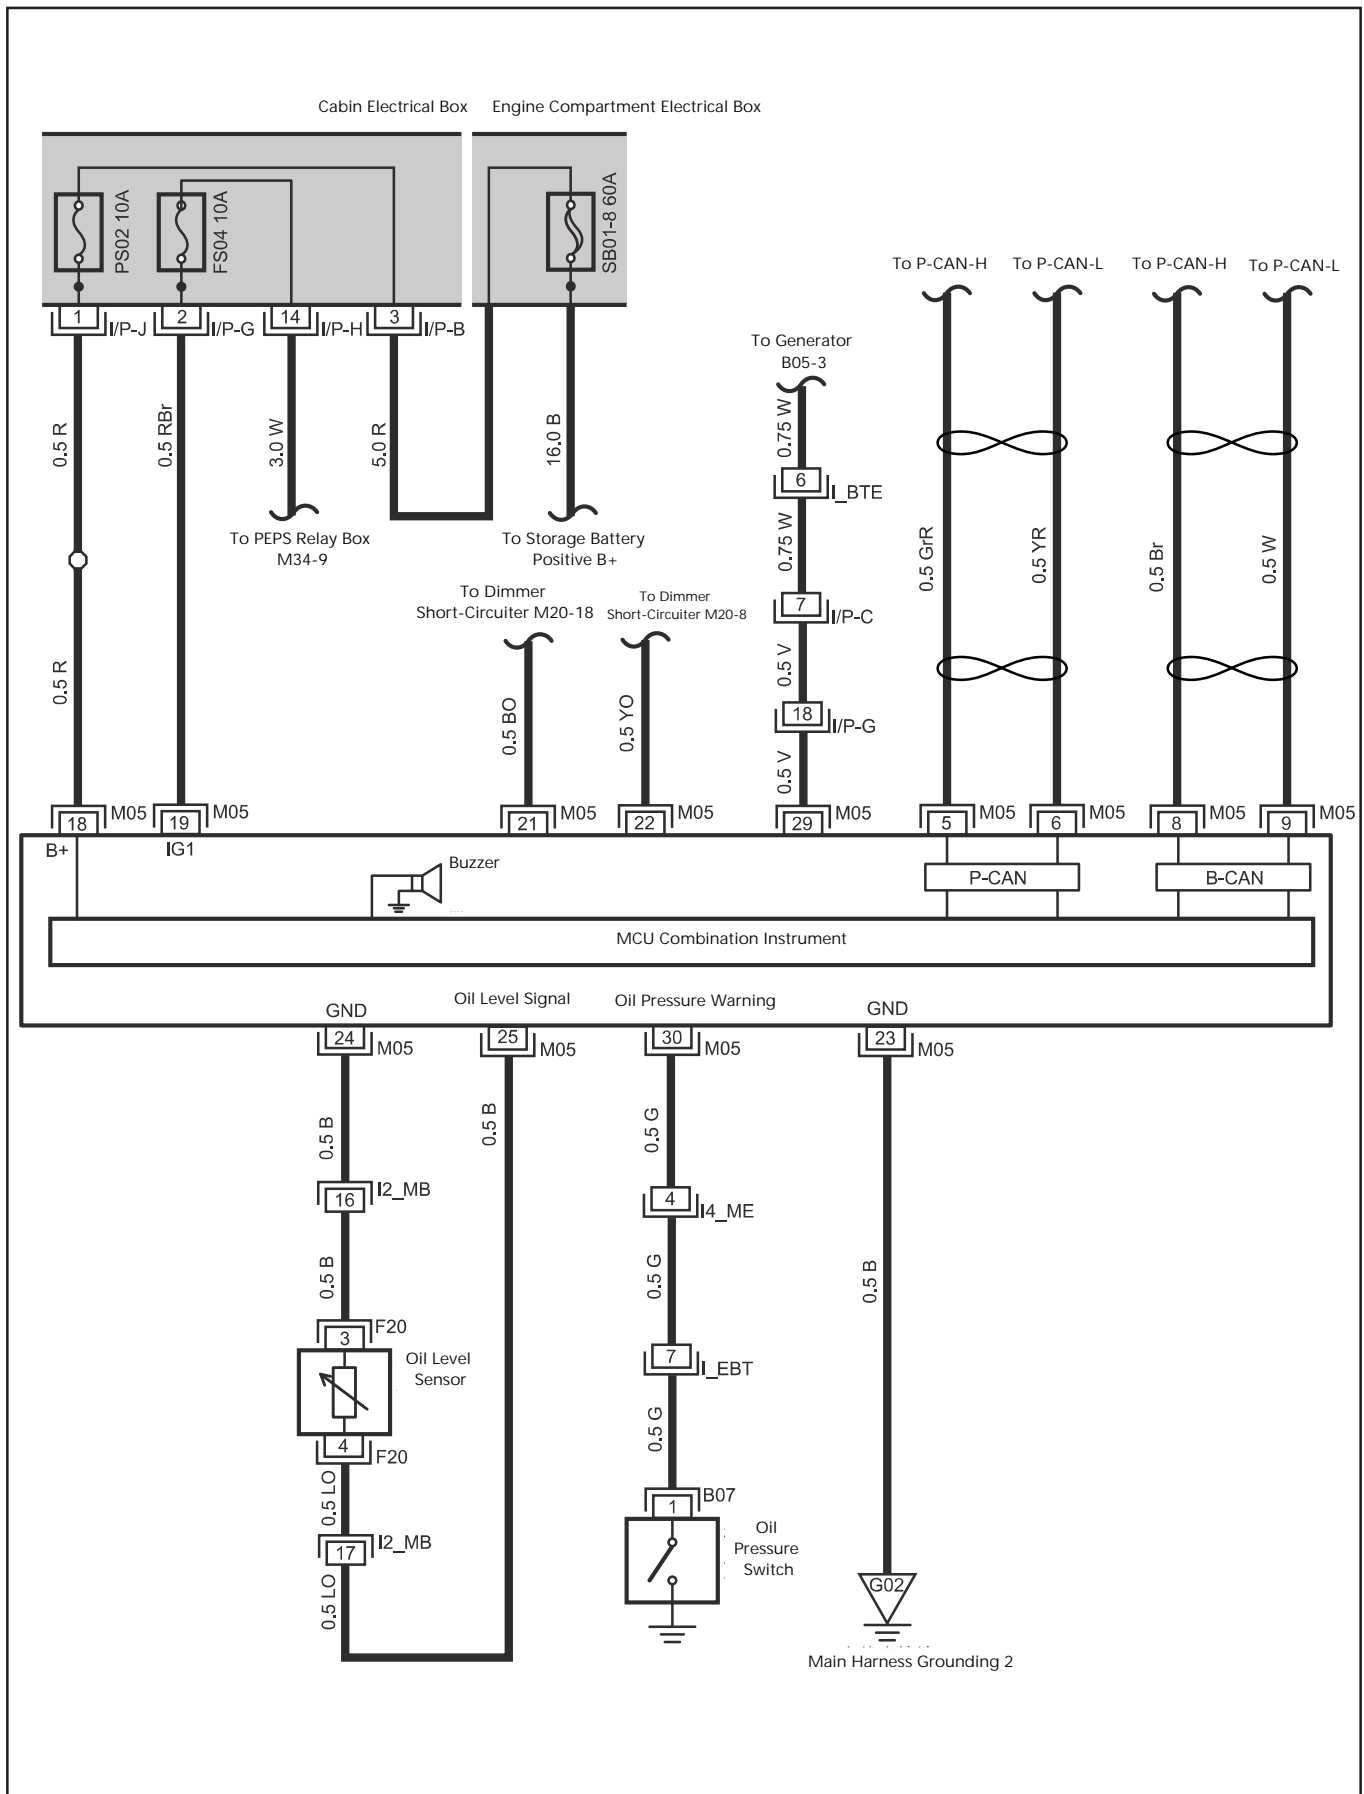


Central Locking-B

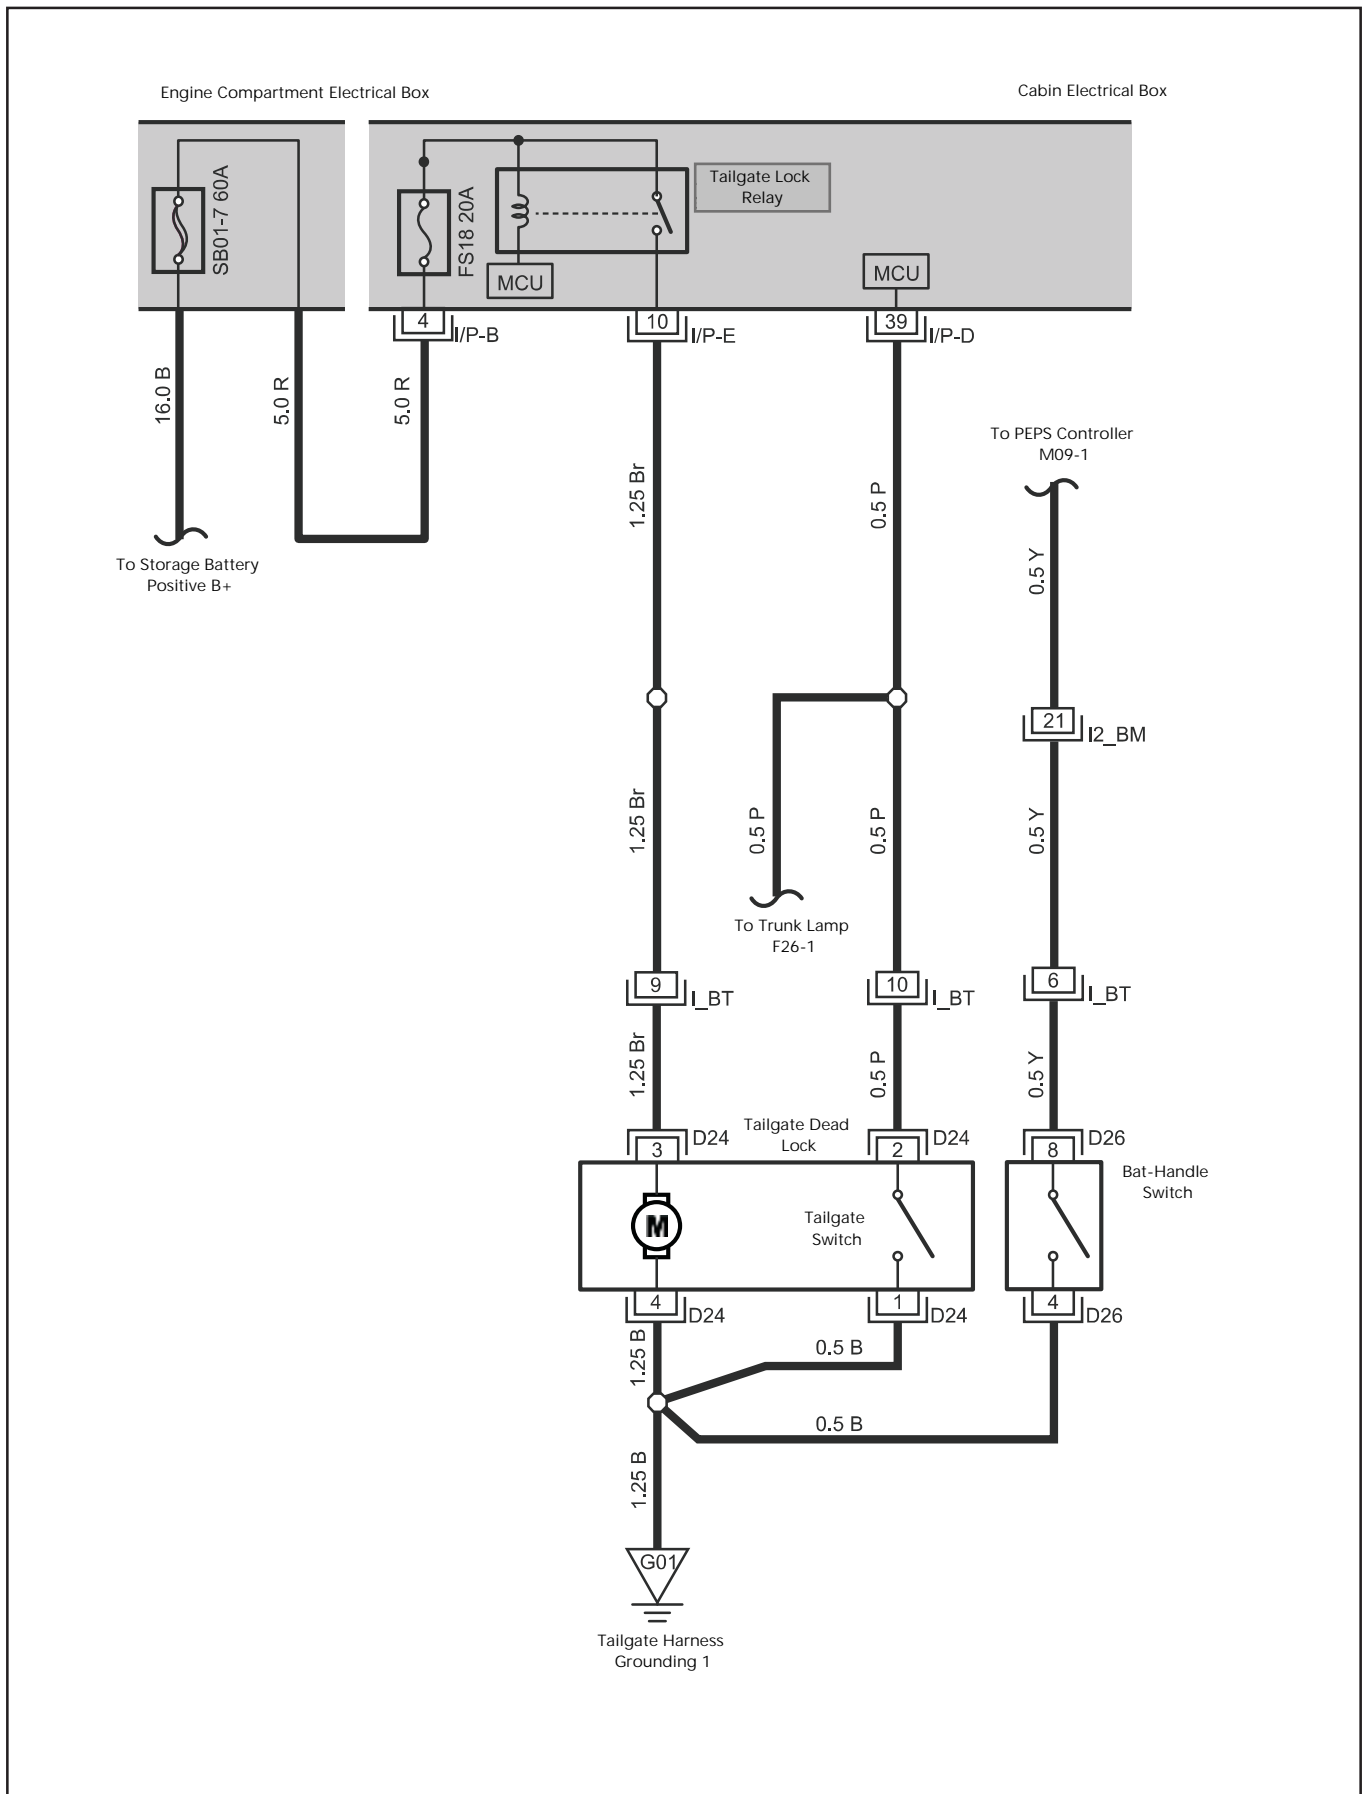


Main Harness Connector-3


M25 BCM-1

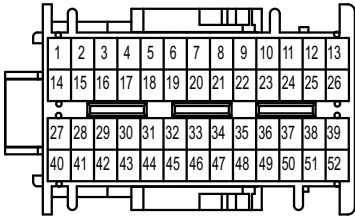


M26 BCM-2

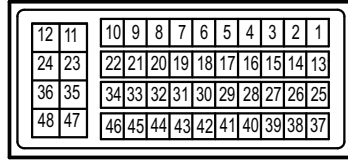


M27 BCM-3




M28 MP5-1




M29 MP5-2

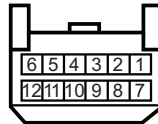


M30 Cool and Warm Module Conversion Actuator




M31 A/C Control Panel-Air Blower




M32 A/C Control Panel-Control



M33 Hazard Warning Lamp Switch




M34 PEPS Relay Box 1



M35 PEPS Relay Box 2




M36 Forward PEPS Antenna

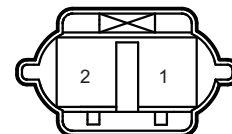


Ceiling Harness Connector


RF1 Rear Ceiling Lamp




RF2 Left Sun Shield Lamp




RF3 Sun Roof Switch




RF4 Sun Roof Controller




RF5 Front Ceiling Lamp



RF6 Internal Rearview Mirror



RF7 Rain Sensor



RF8 Right Sun Shield Lamp




Control Harness Connector-2


A18 Ignition Coil 1




A22 Camshaft Phase Sensor




A13 Camshaft Positioning Sensor (Exhaust)




CA01 Control Harness and Fuel Injector Harness Connection



A33 Intake Temperature Sensor



A35 Intake Temperature Pressure Sensor




A19 Ignition Coil 2



A20 Ignition Coil 3




A21 Ignition Coil 4



A30 Shock Sensor



A26 Fuel Injector 1



A27 Fuel Injector 2



Harness Connection-3

I3_MB Main Harness Connecting With Frame Harness 3

1	2	3	4	5	X		6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22



I3_BM Frame Harness Connecting With Main Harness 3

10	9	8	7	6	X		5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12	11

I1_MR Main Harness Connecting With Ceiling Harness 1

1	2	3	4	X		5	6	7	8	9
10	11	12	13	14	15	16	17	18	19	20



I1_RM Main Harness Connecting With Ceiling Harness 1

9	8	7	6	5	X		4	3	2	1
20	19	18	17	16	15	14	13	12	11	10

L_BT Frame Harness Connecting With Tailgate Harness

1	2	3	4	5	X		6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22



L_TB Tailgate Harness Connecting With Frame Harness

10	9	8	7	6	X		5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12	11

I_BFRD Frame Harness Connecting With Right Front Door Harness

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
45	44	43	42	41	40	39	38	37	36	35	34	33	32	31

I_DFRB Right Front Door Harness Connecting With Frame Harness

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45