WORKING LAMP

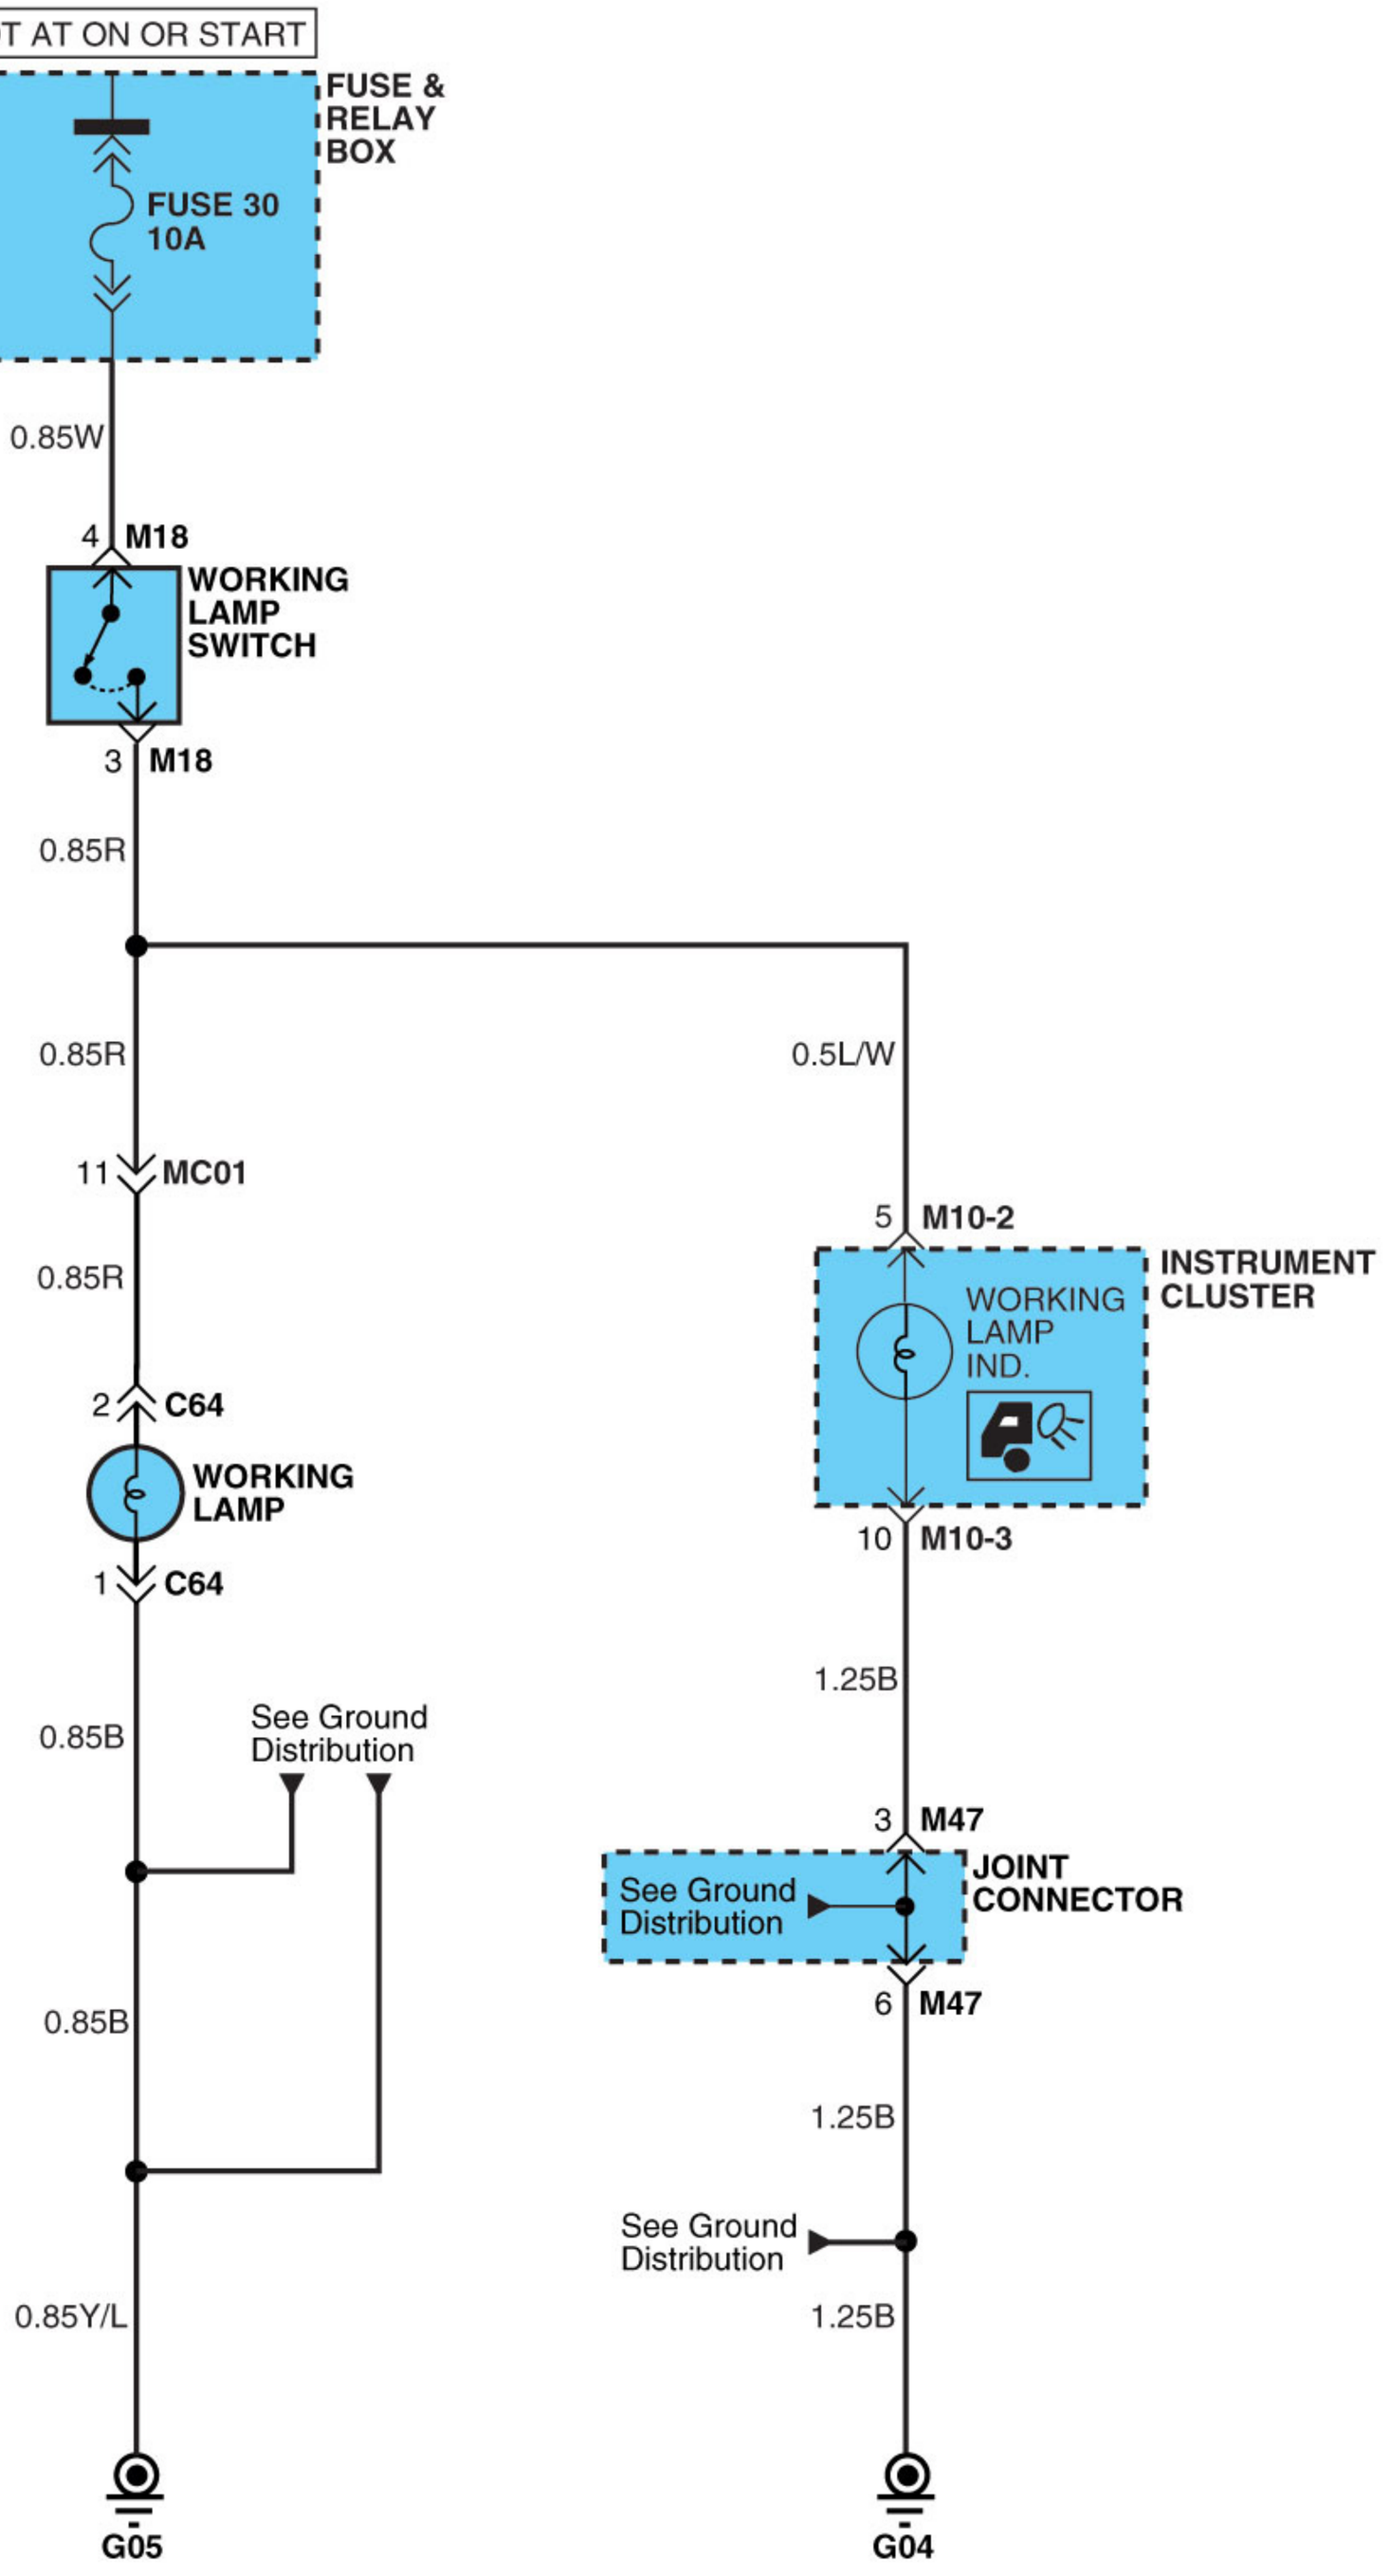

E2C6B31A

TILT LOCK SYSTEM (2)

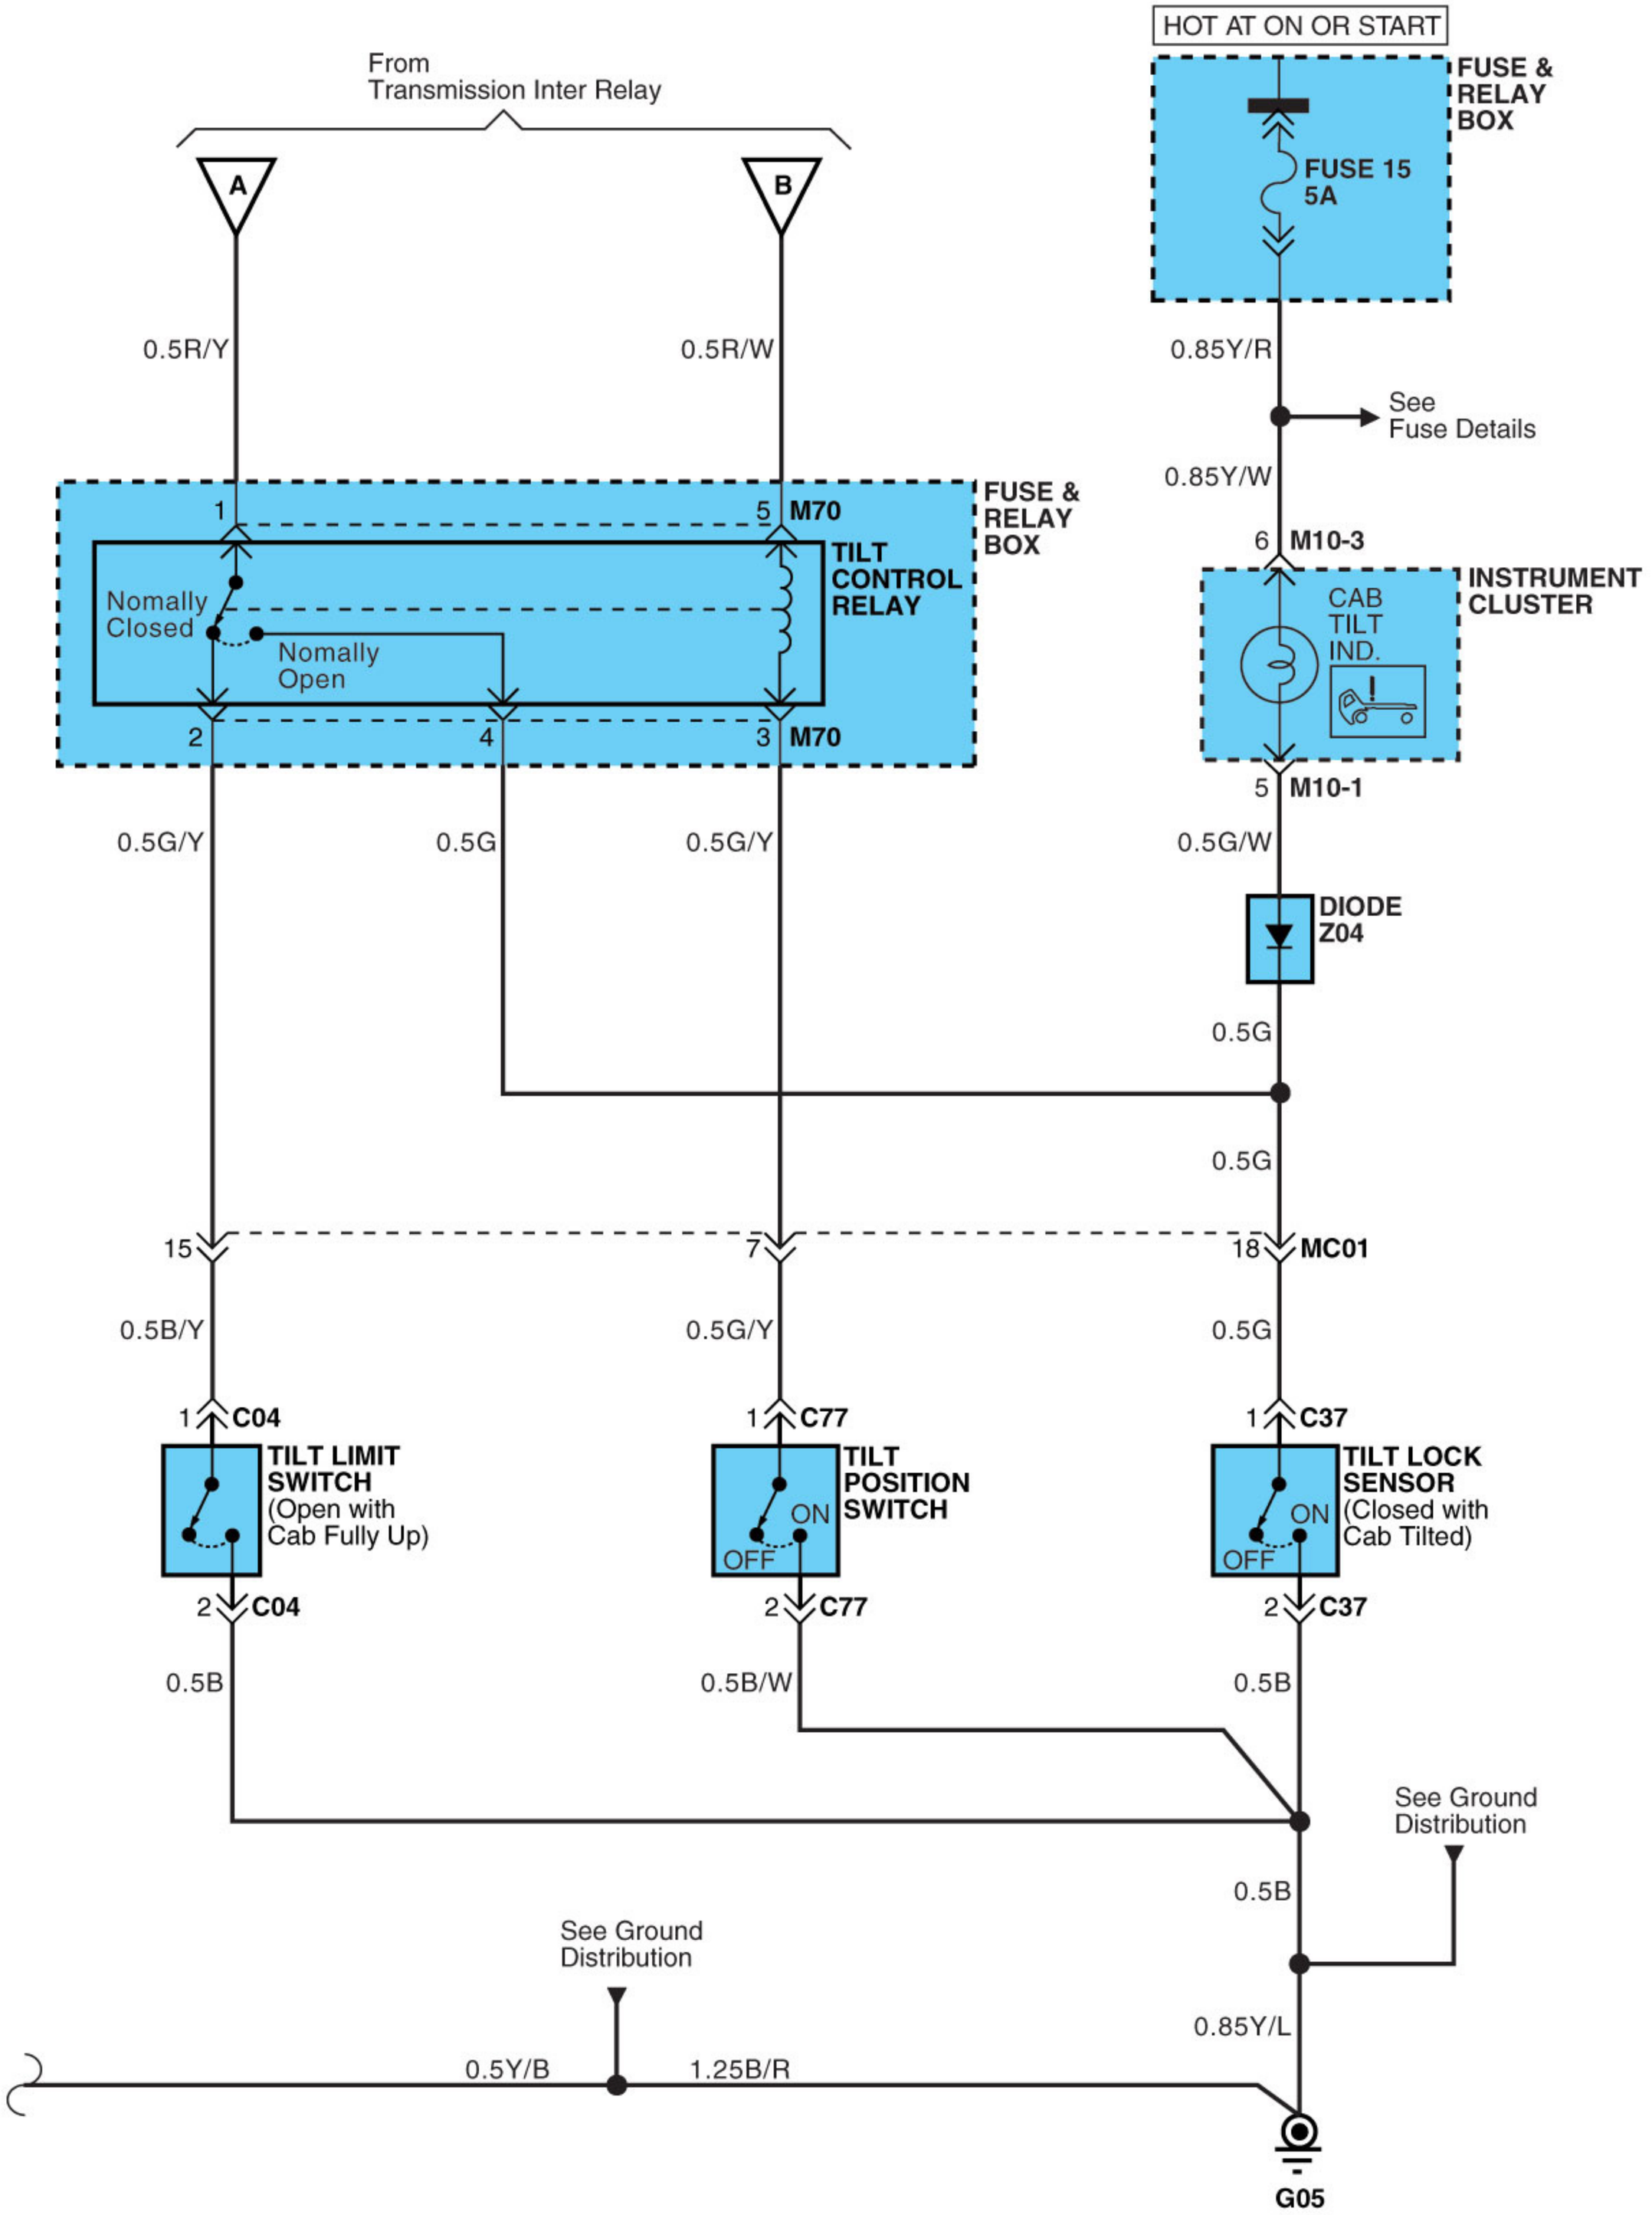

E2C6B13B

STOP LAMPS

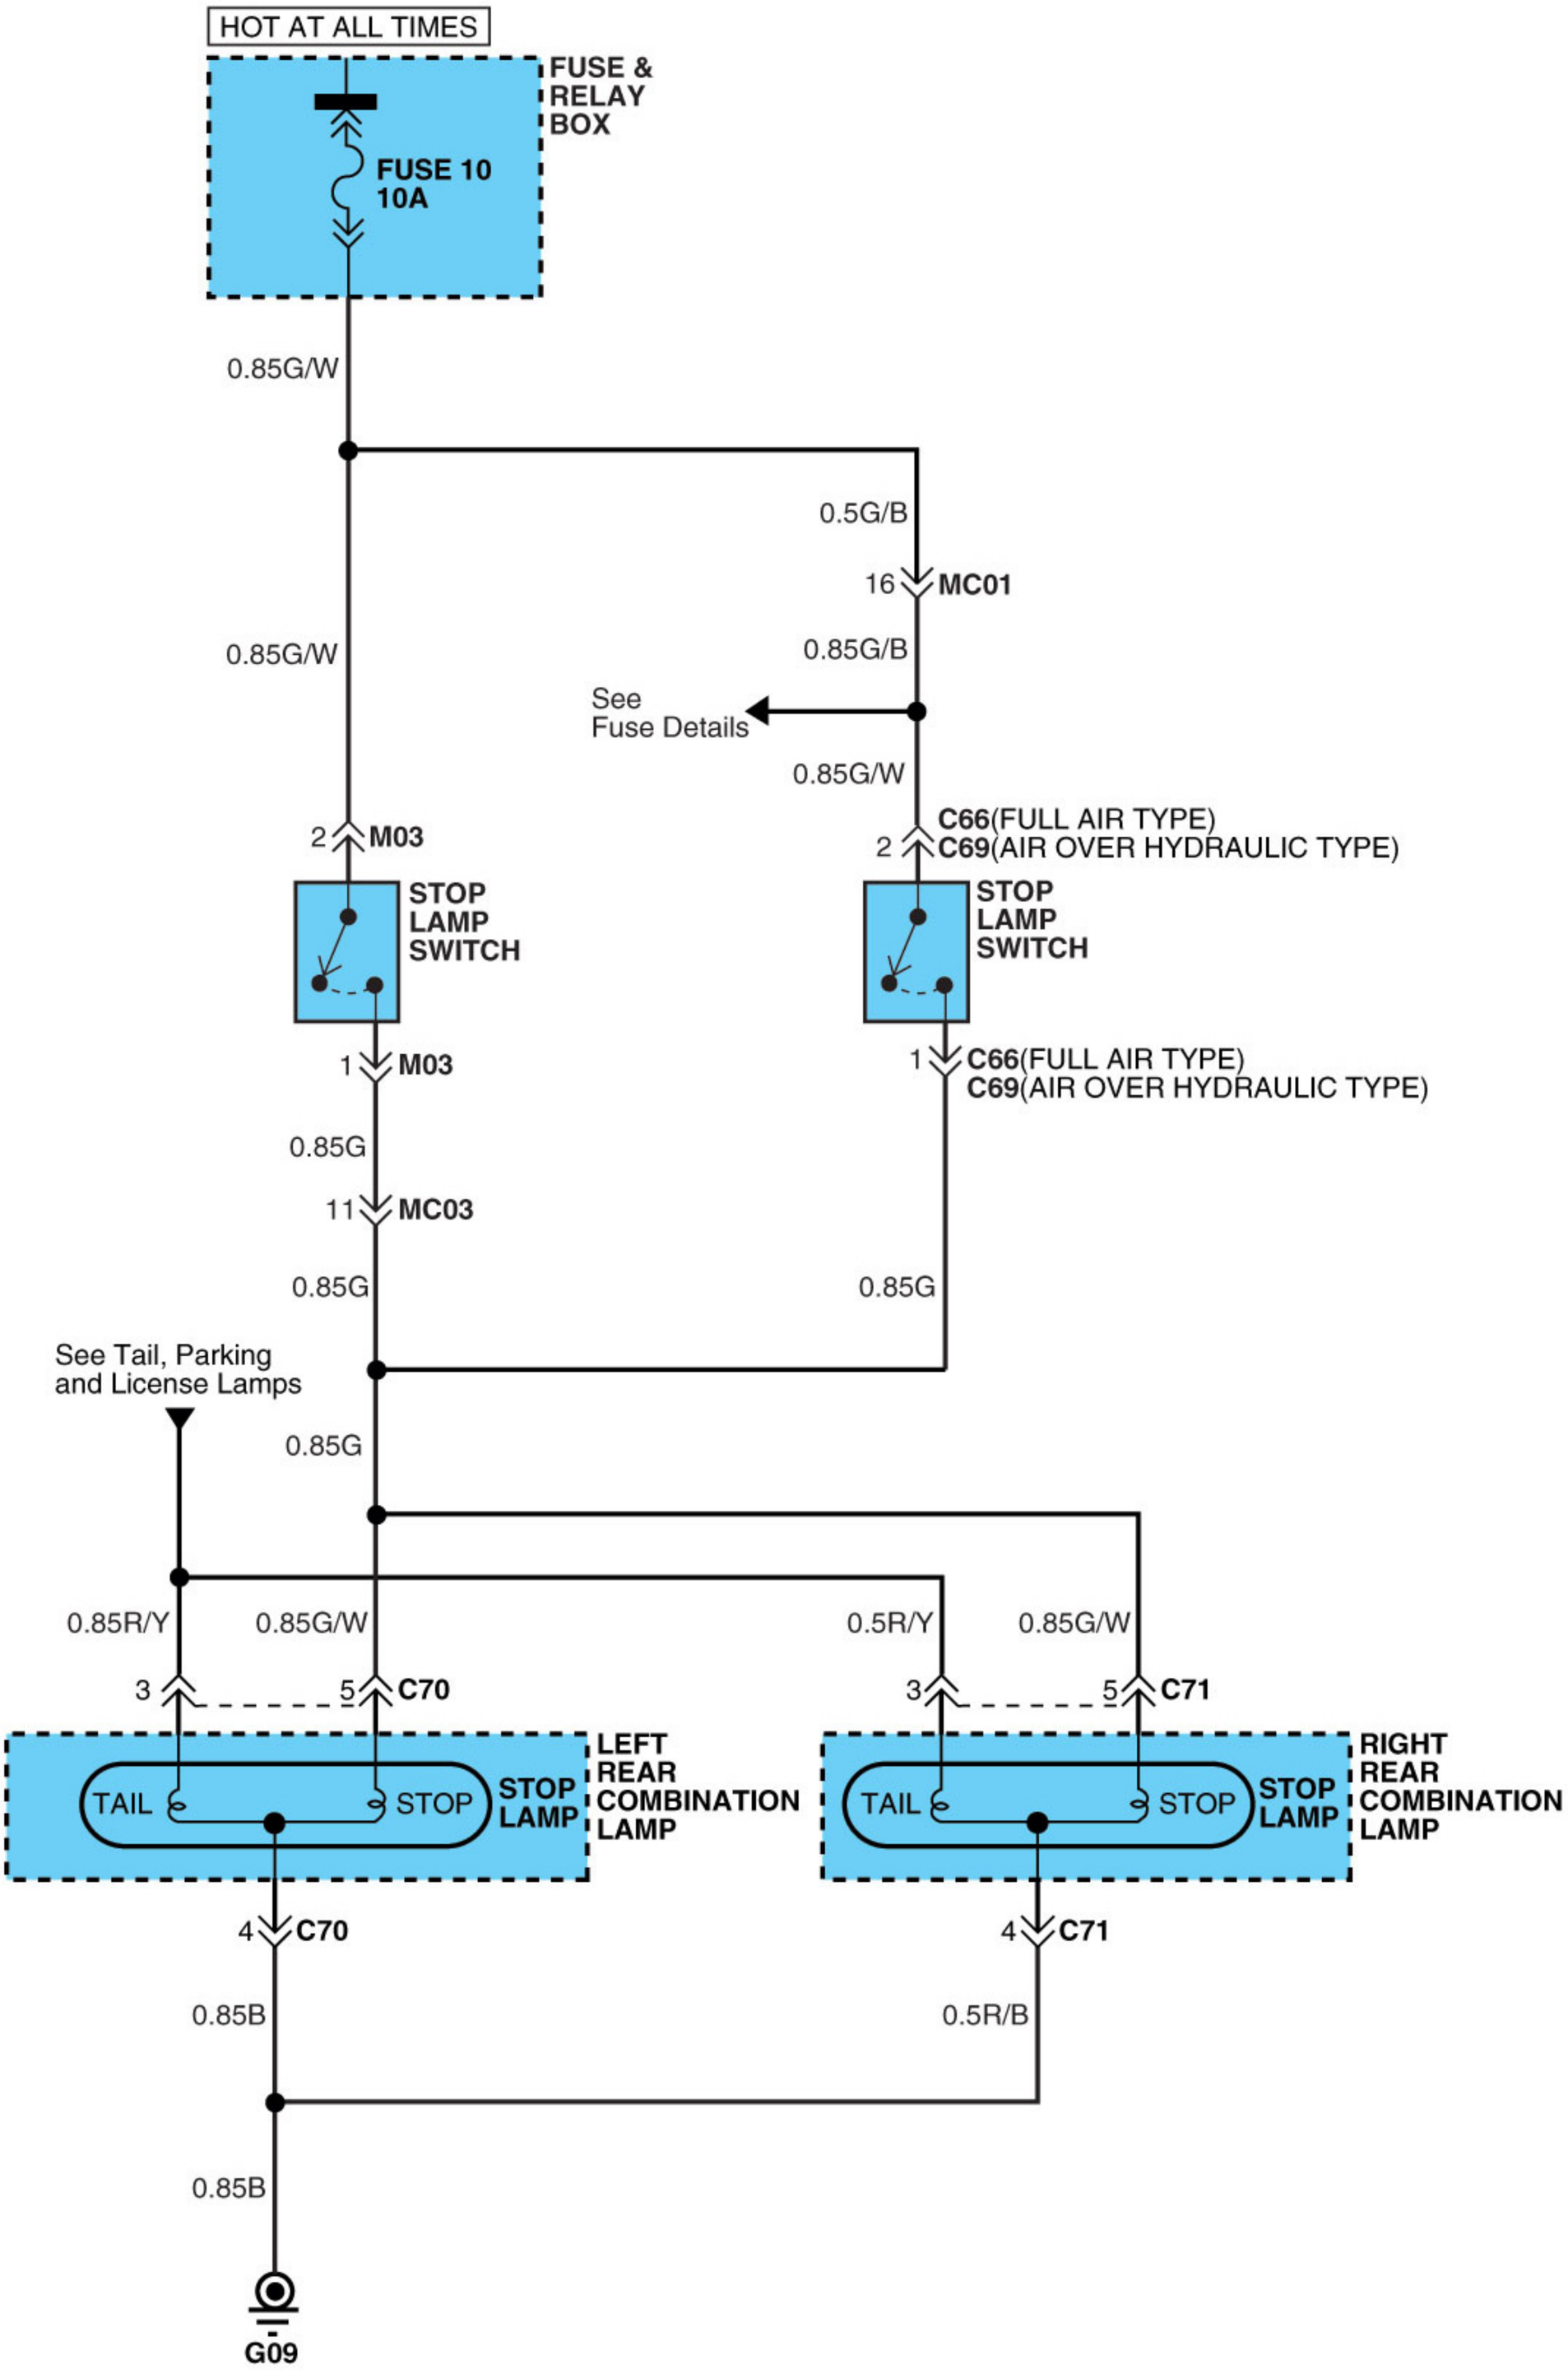

E2C6B33A

SOUND SYSTEM

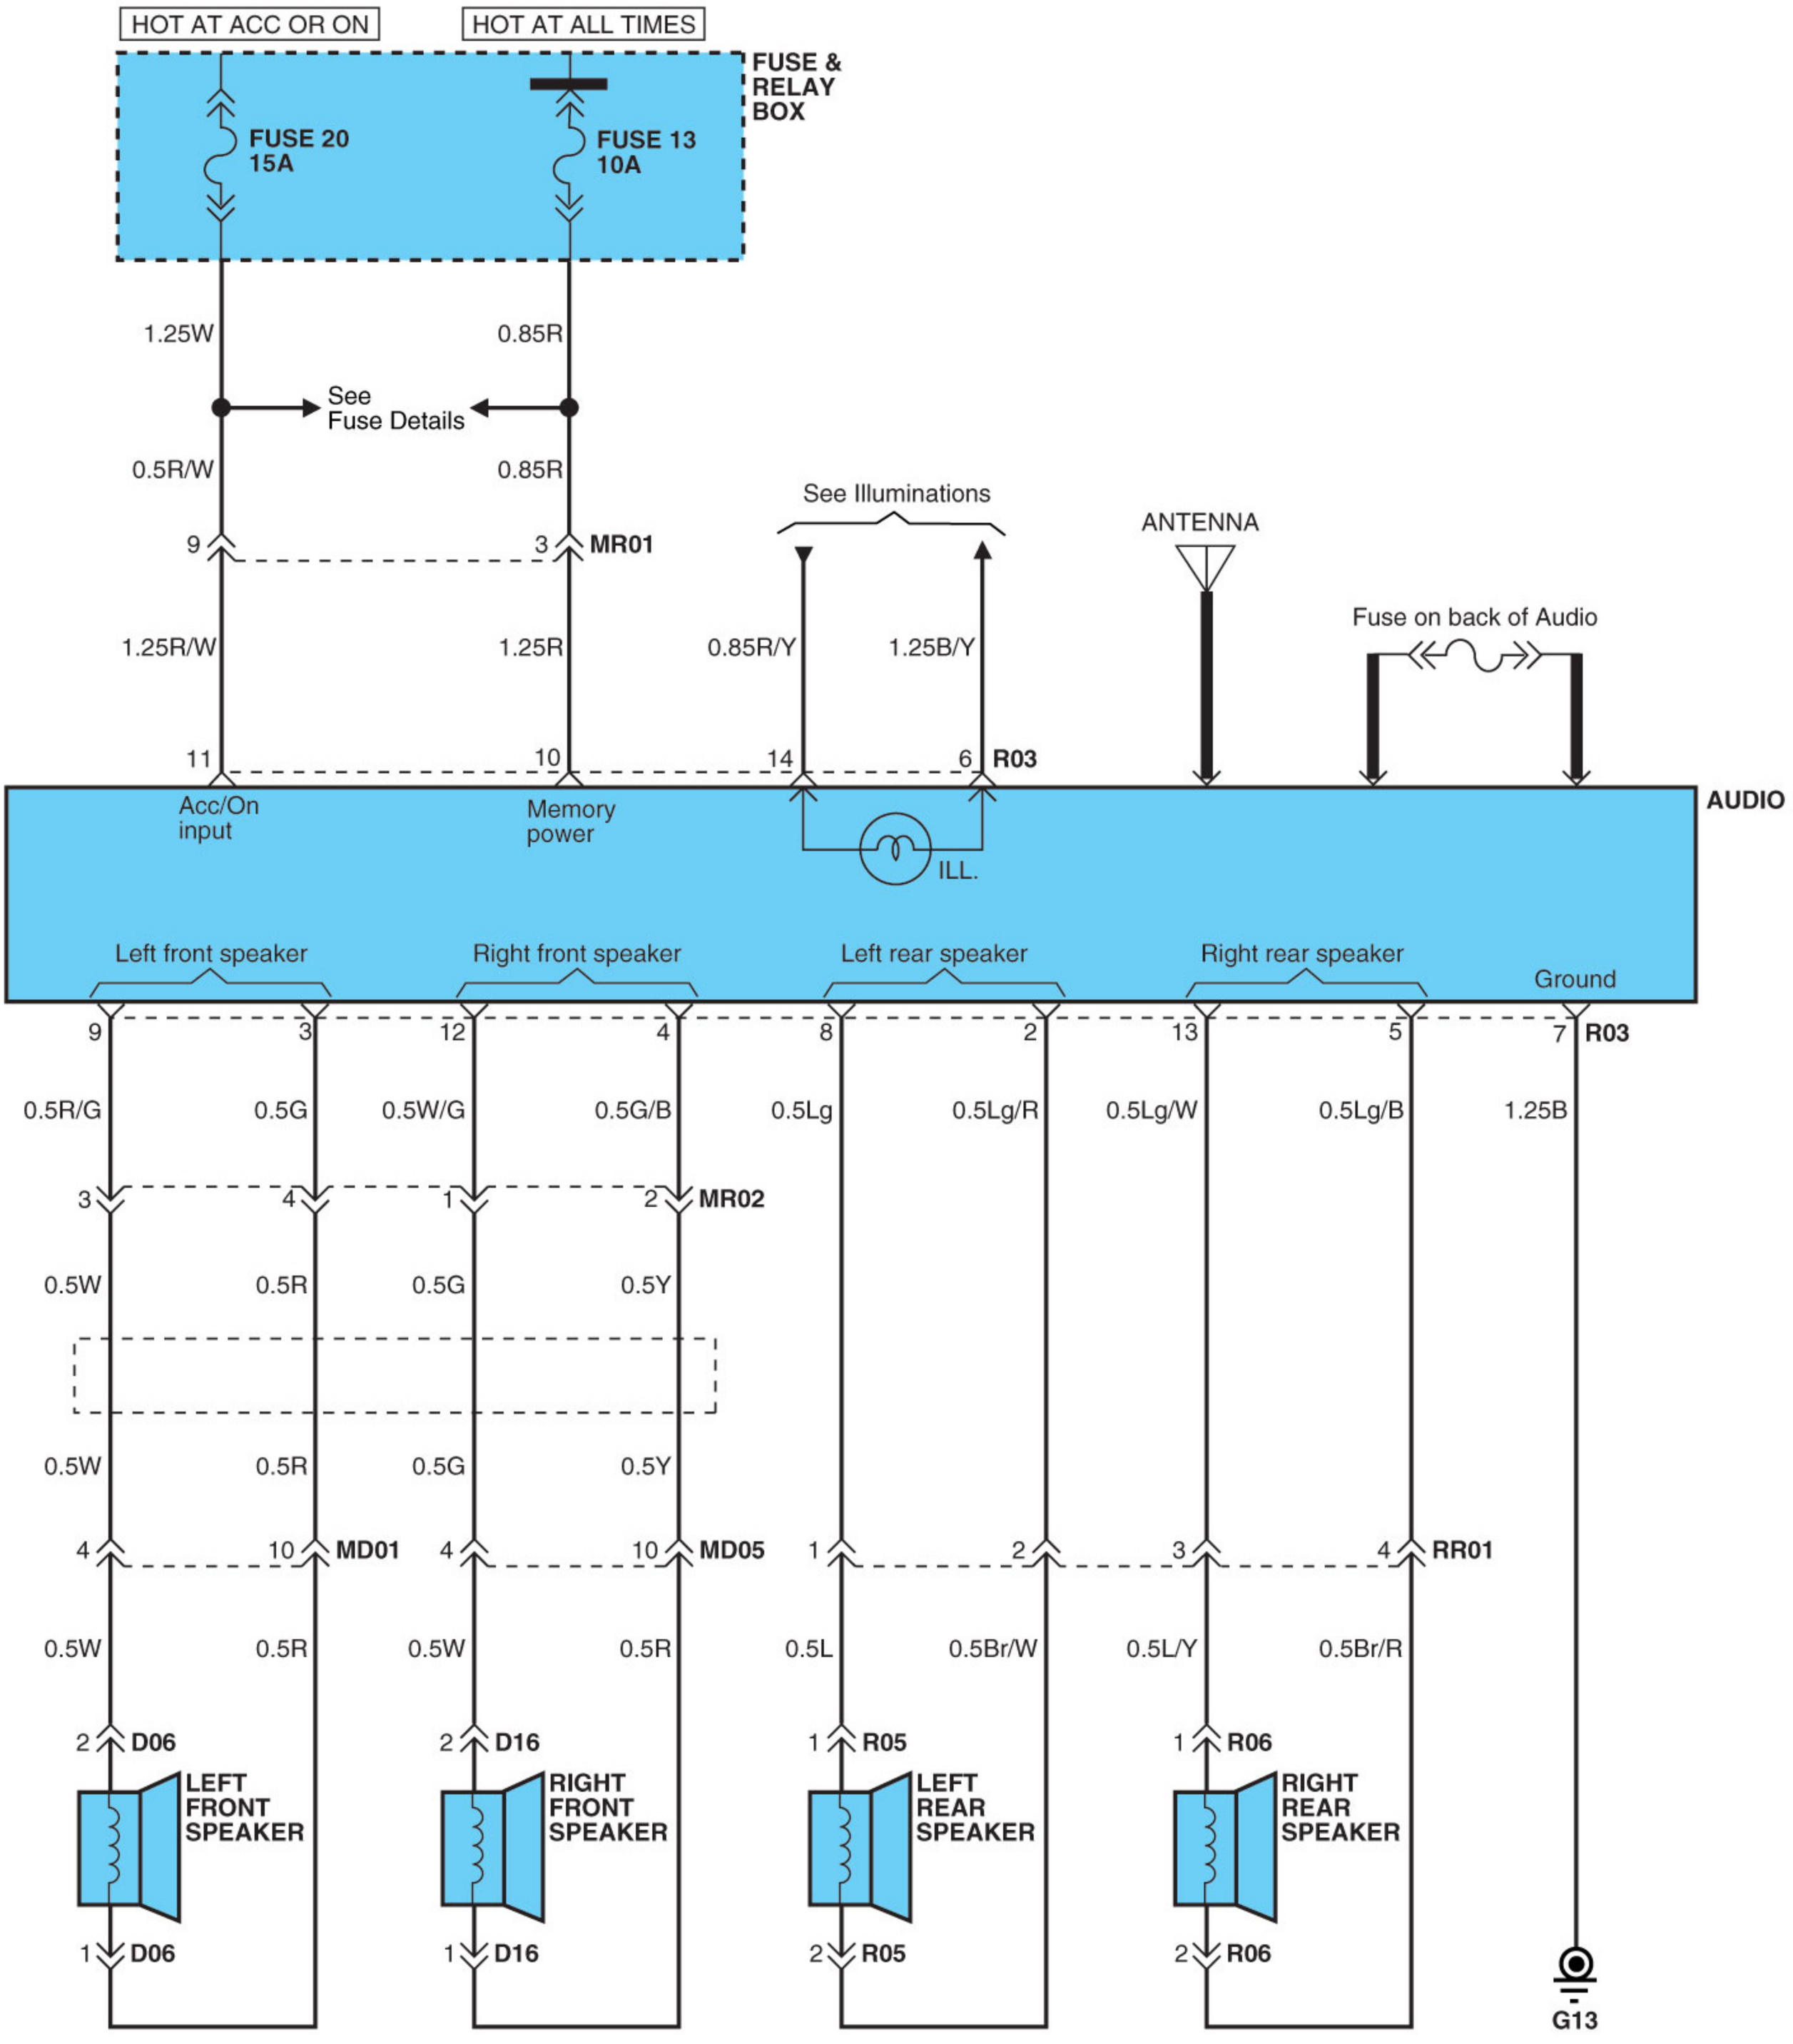

E2C6B24A

POWER WINDOW SYSTEM (1)

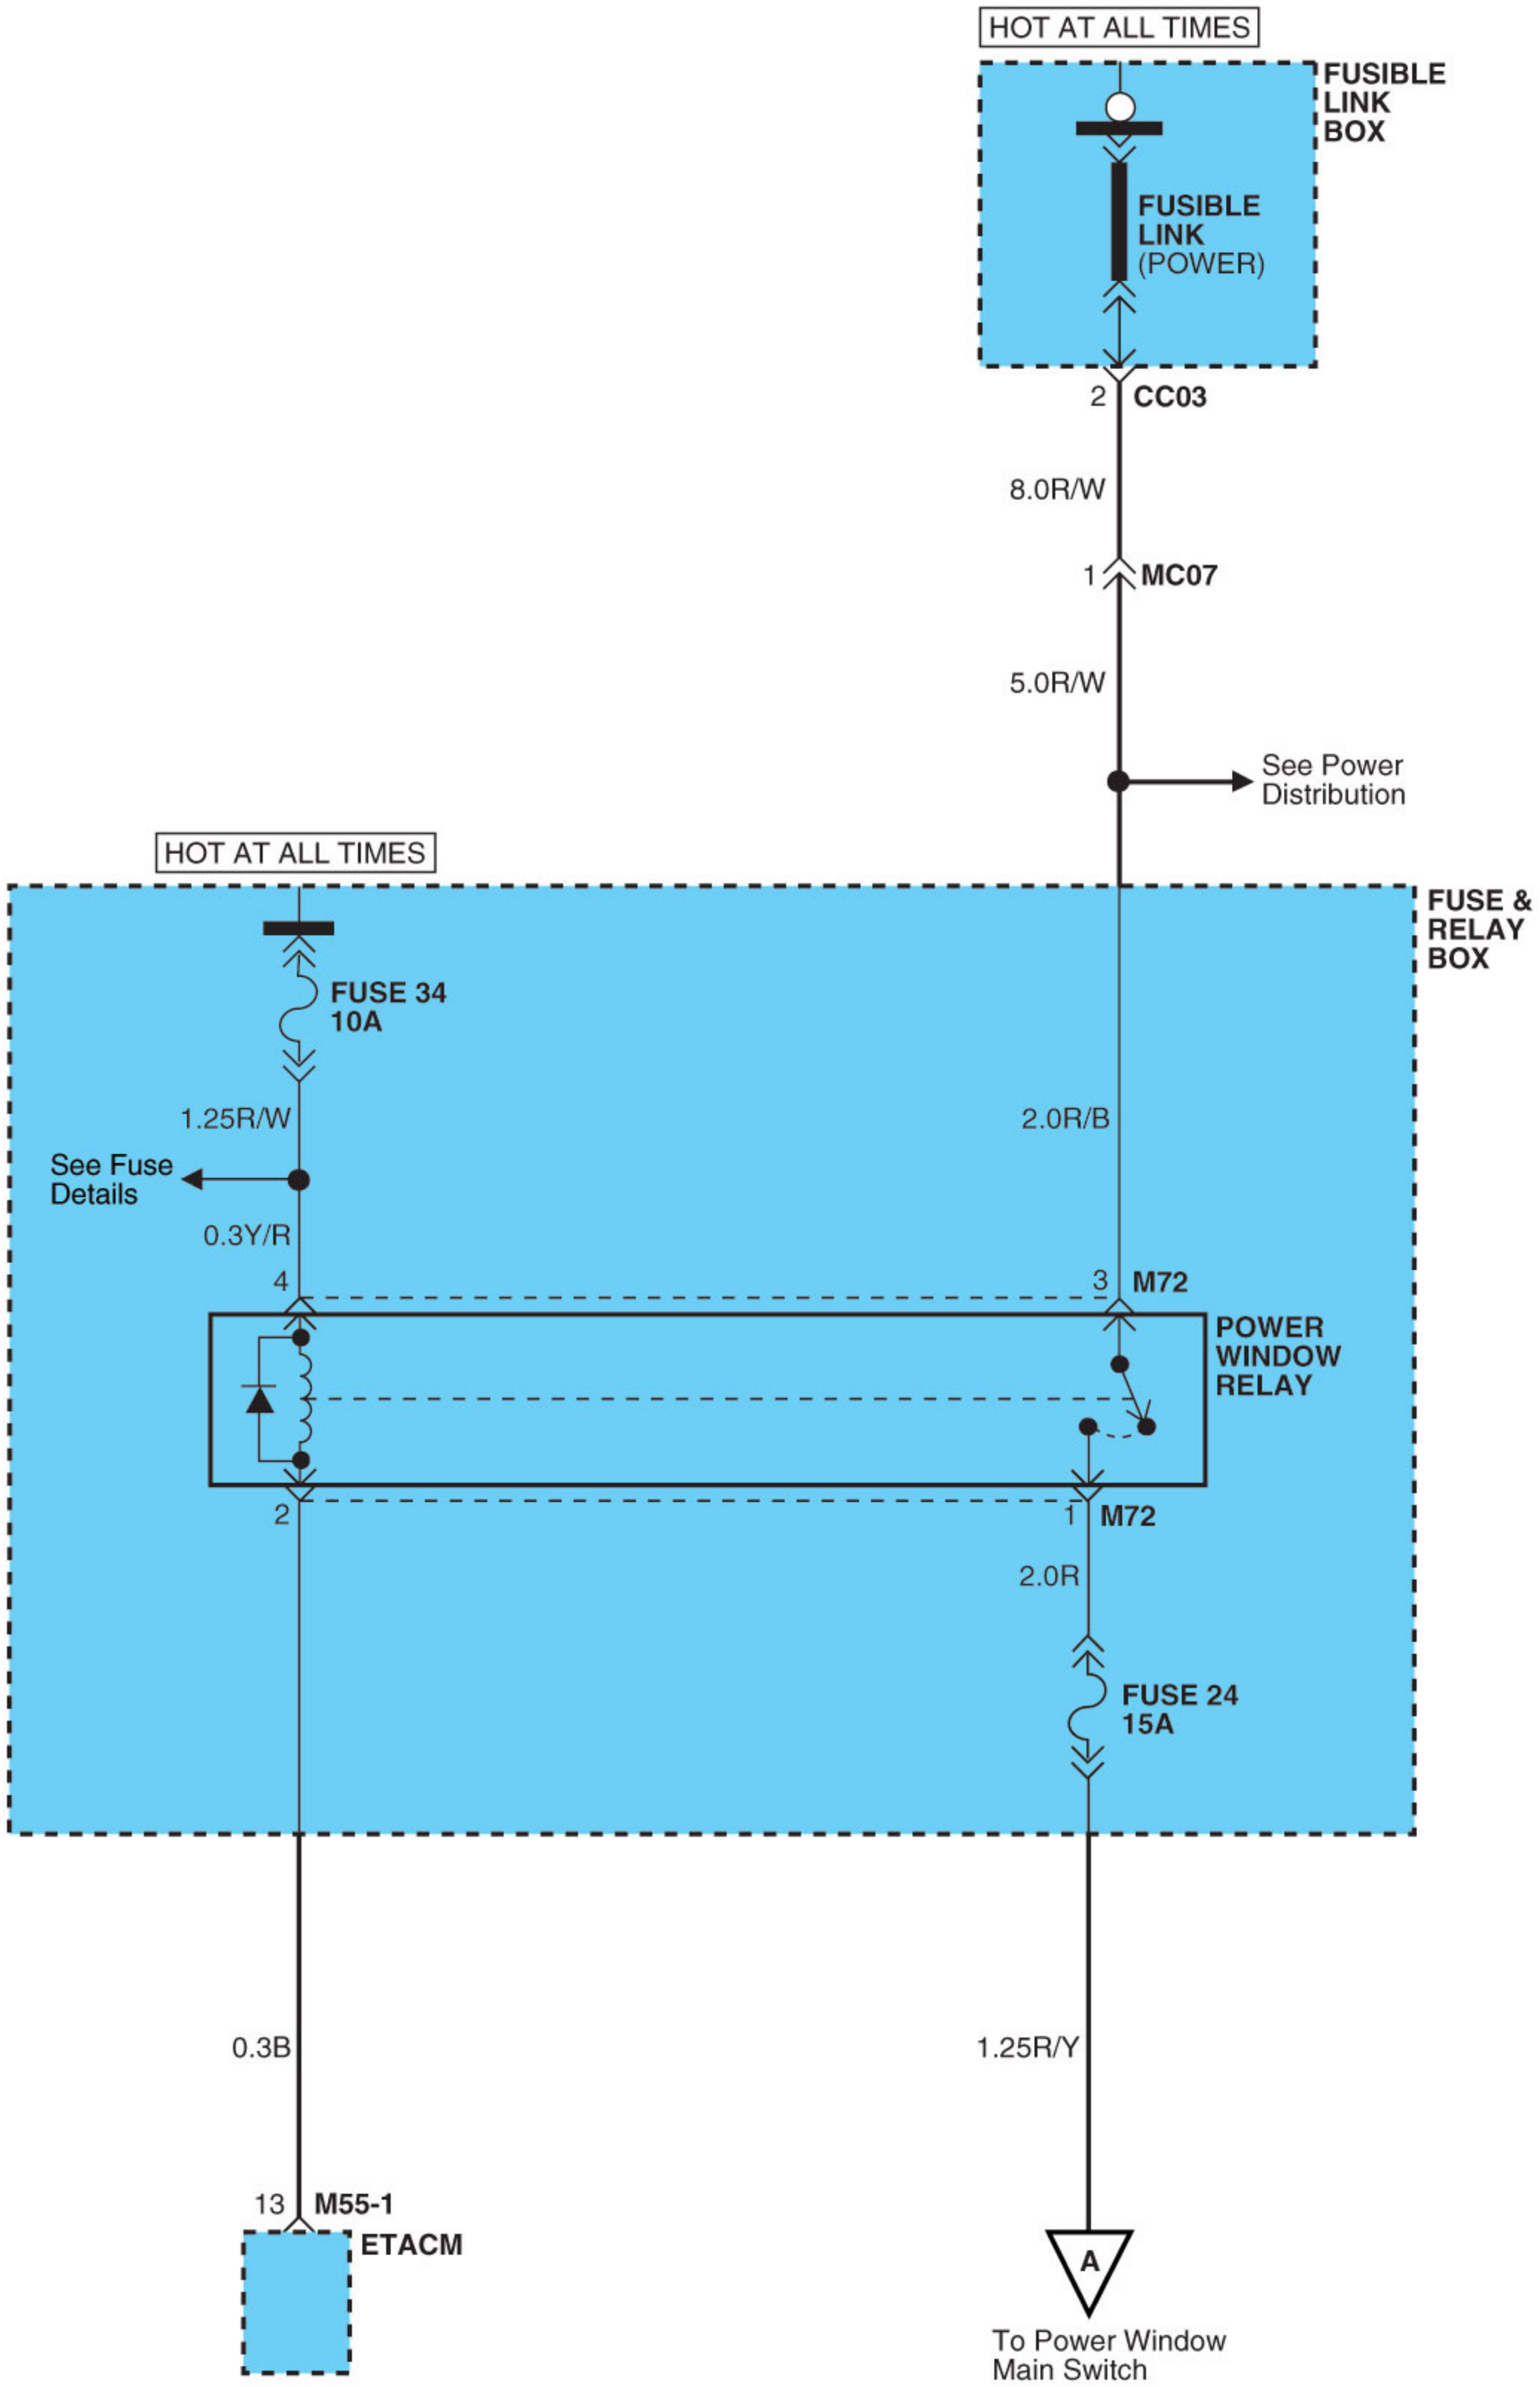

E2C6B23A

POWER DISTRIBUTION (1)

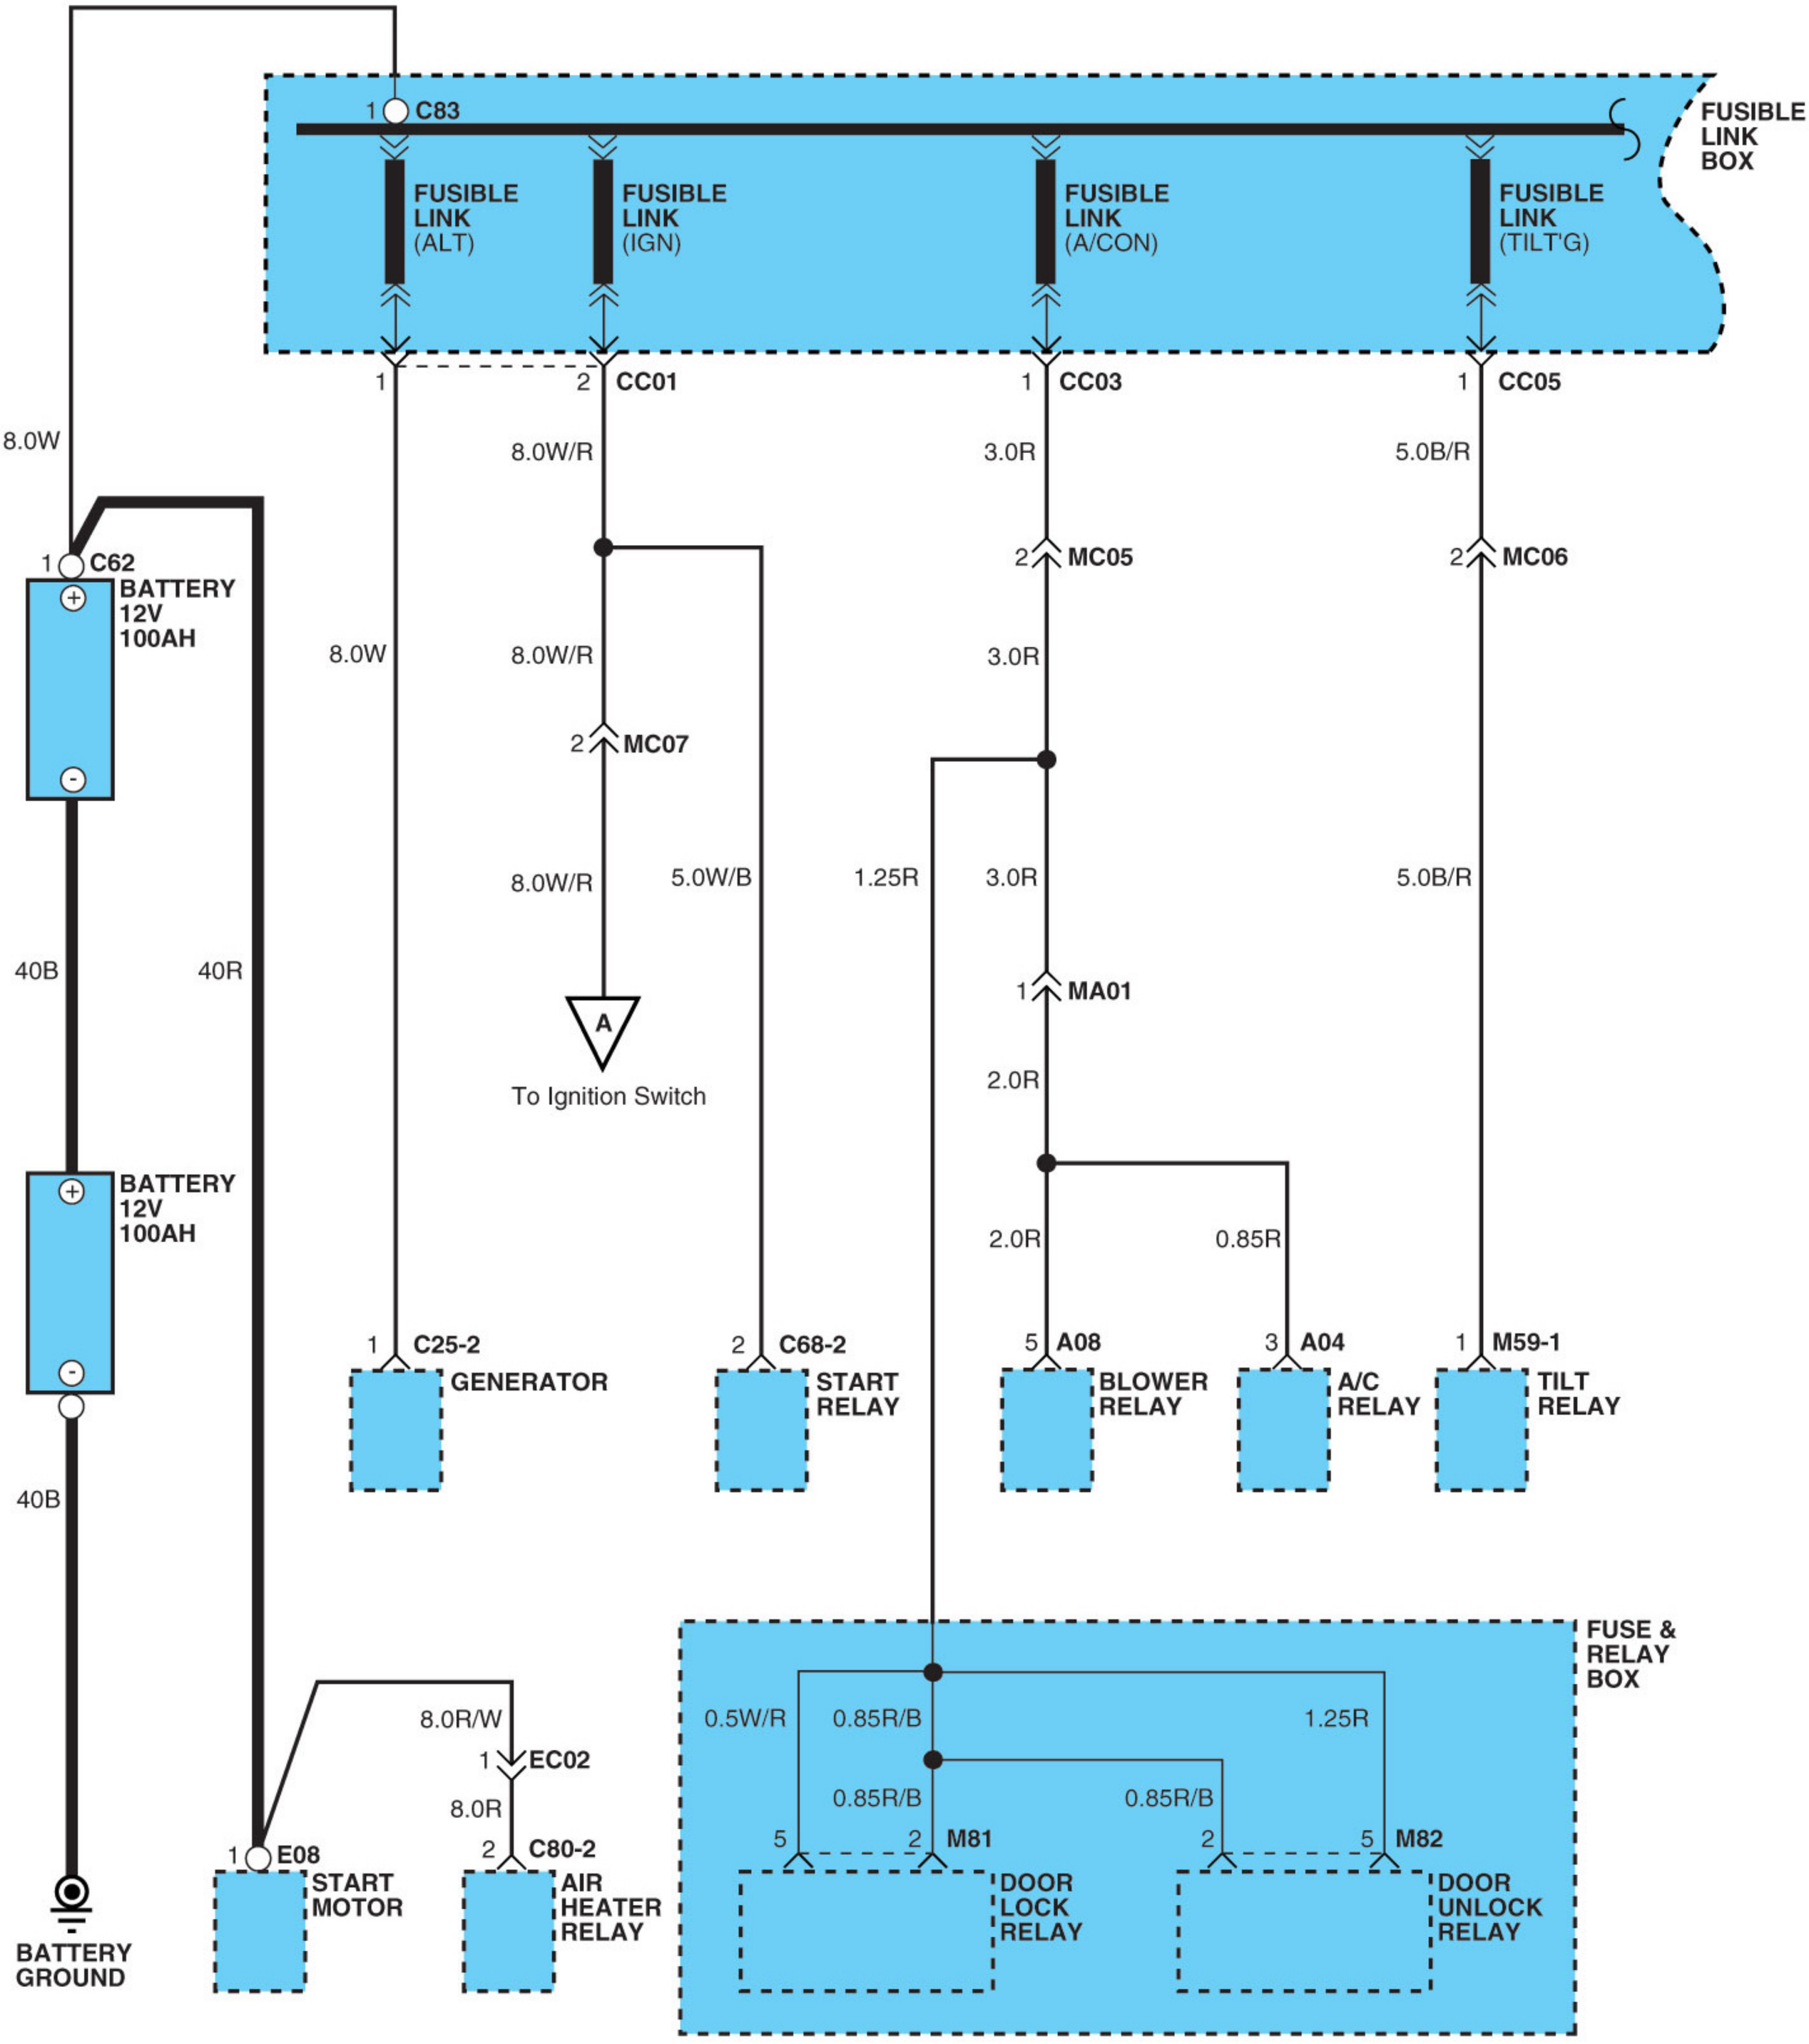

E2C6B02A

INDICATORS & GAUGES (3)

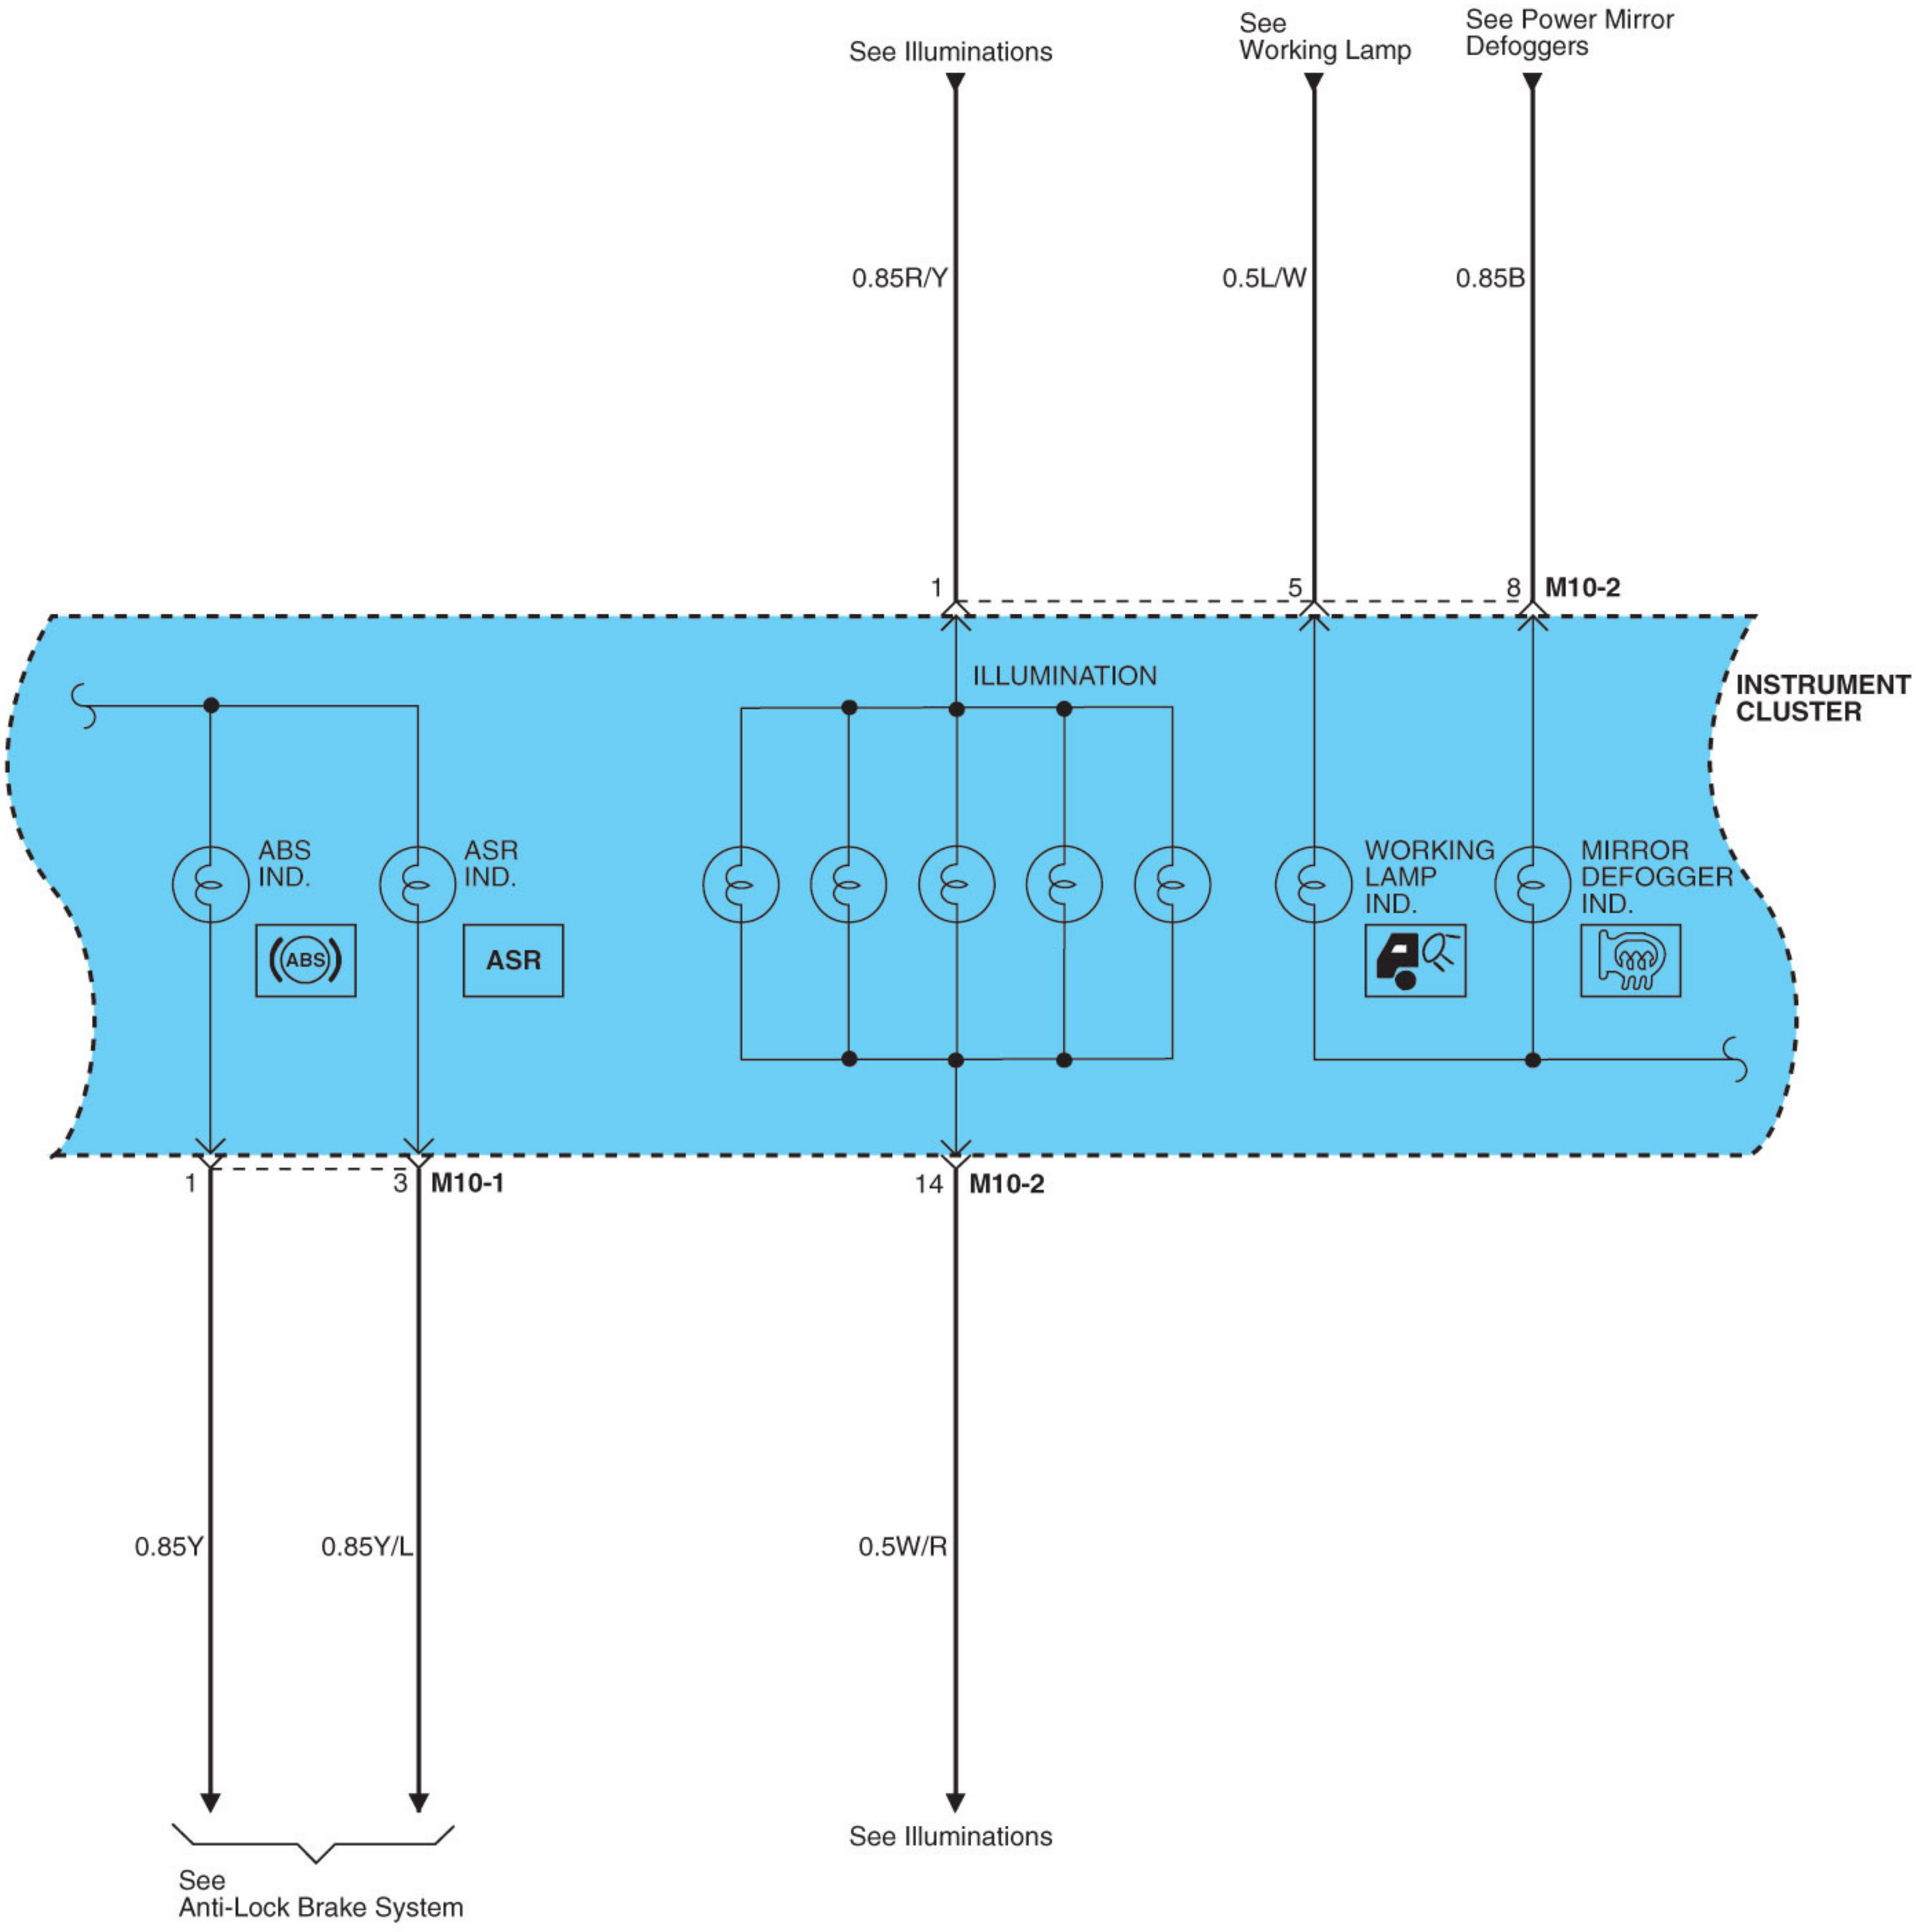

E2C6B20C

ILLUMINATIONS (2)

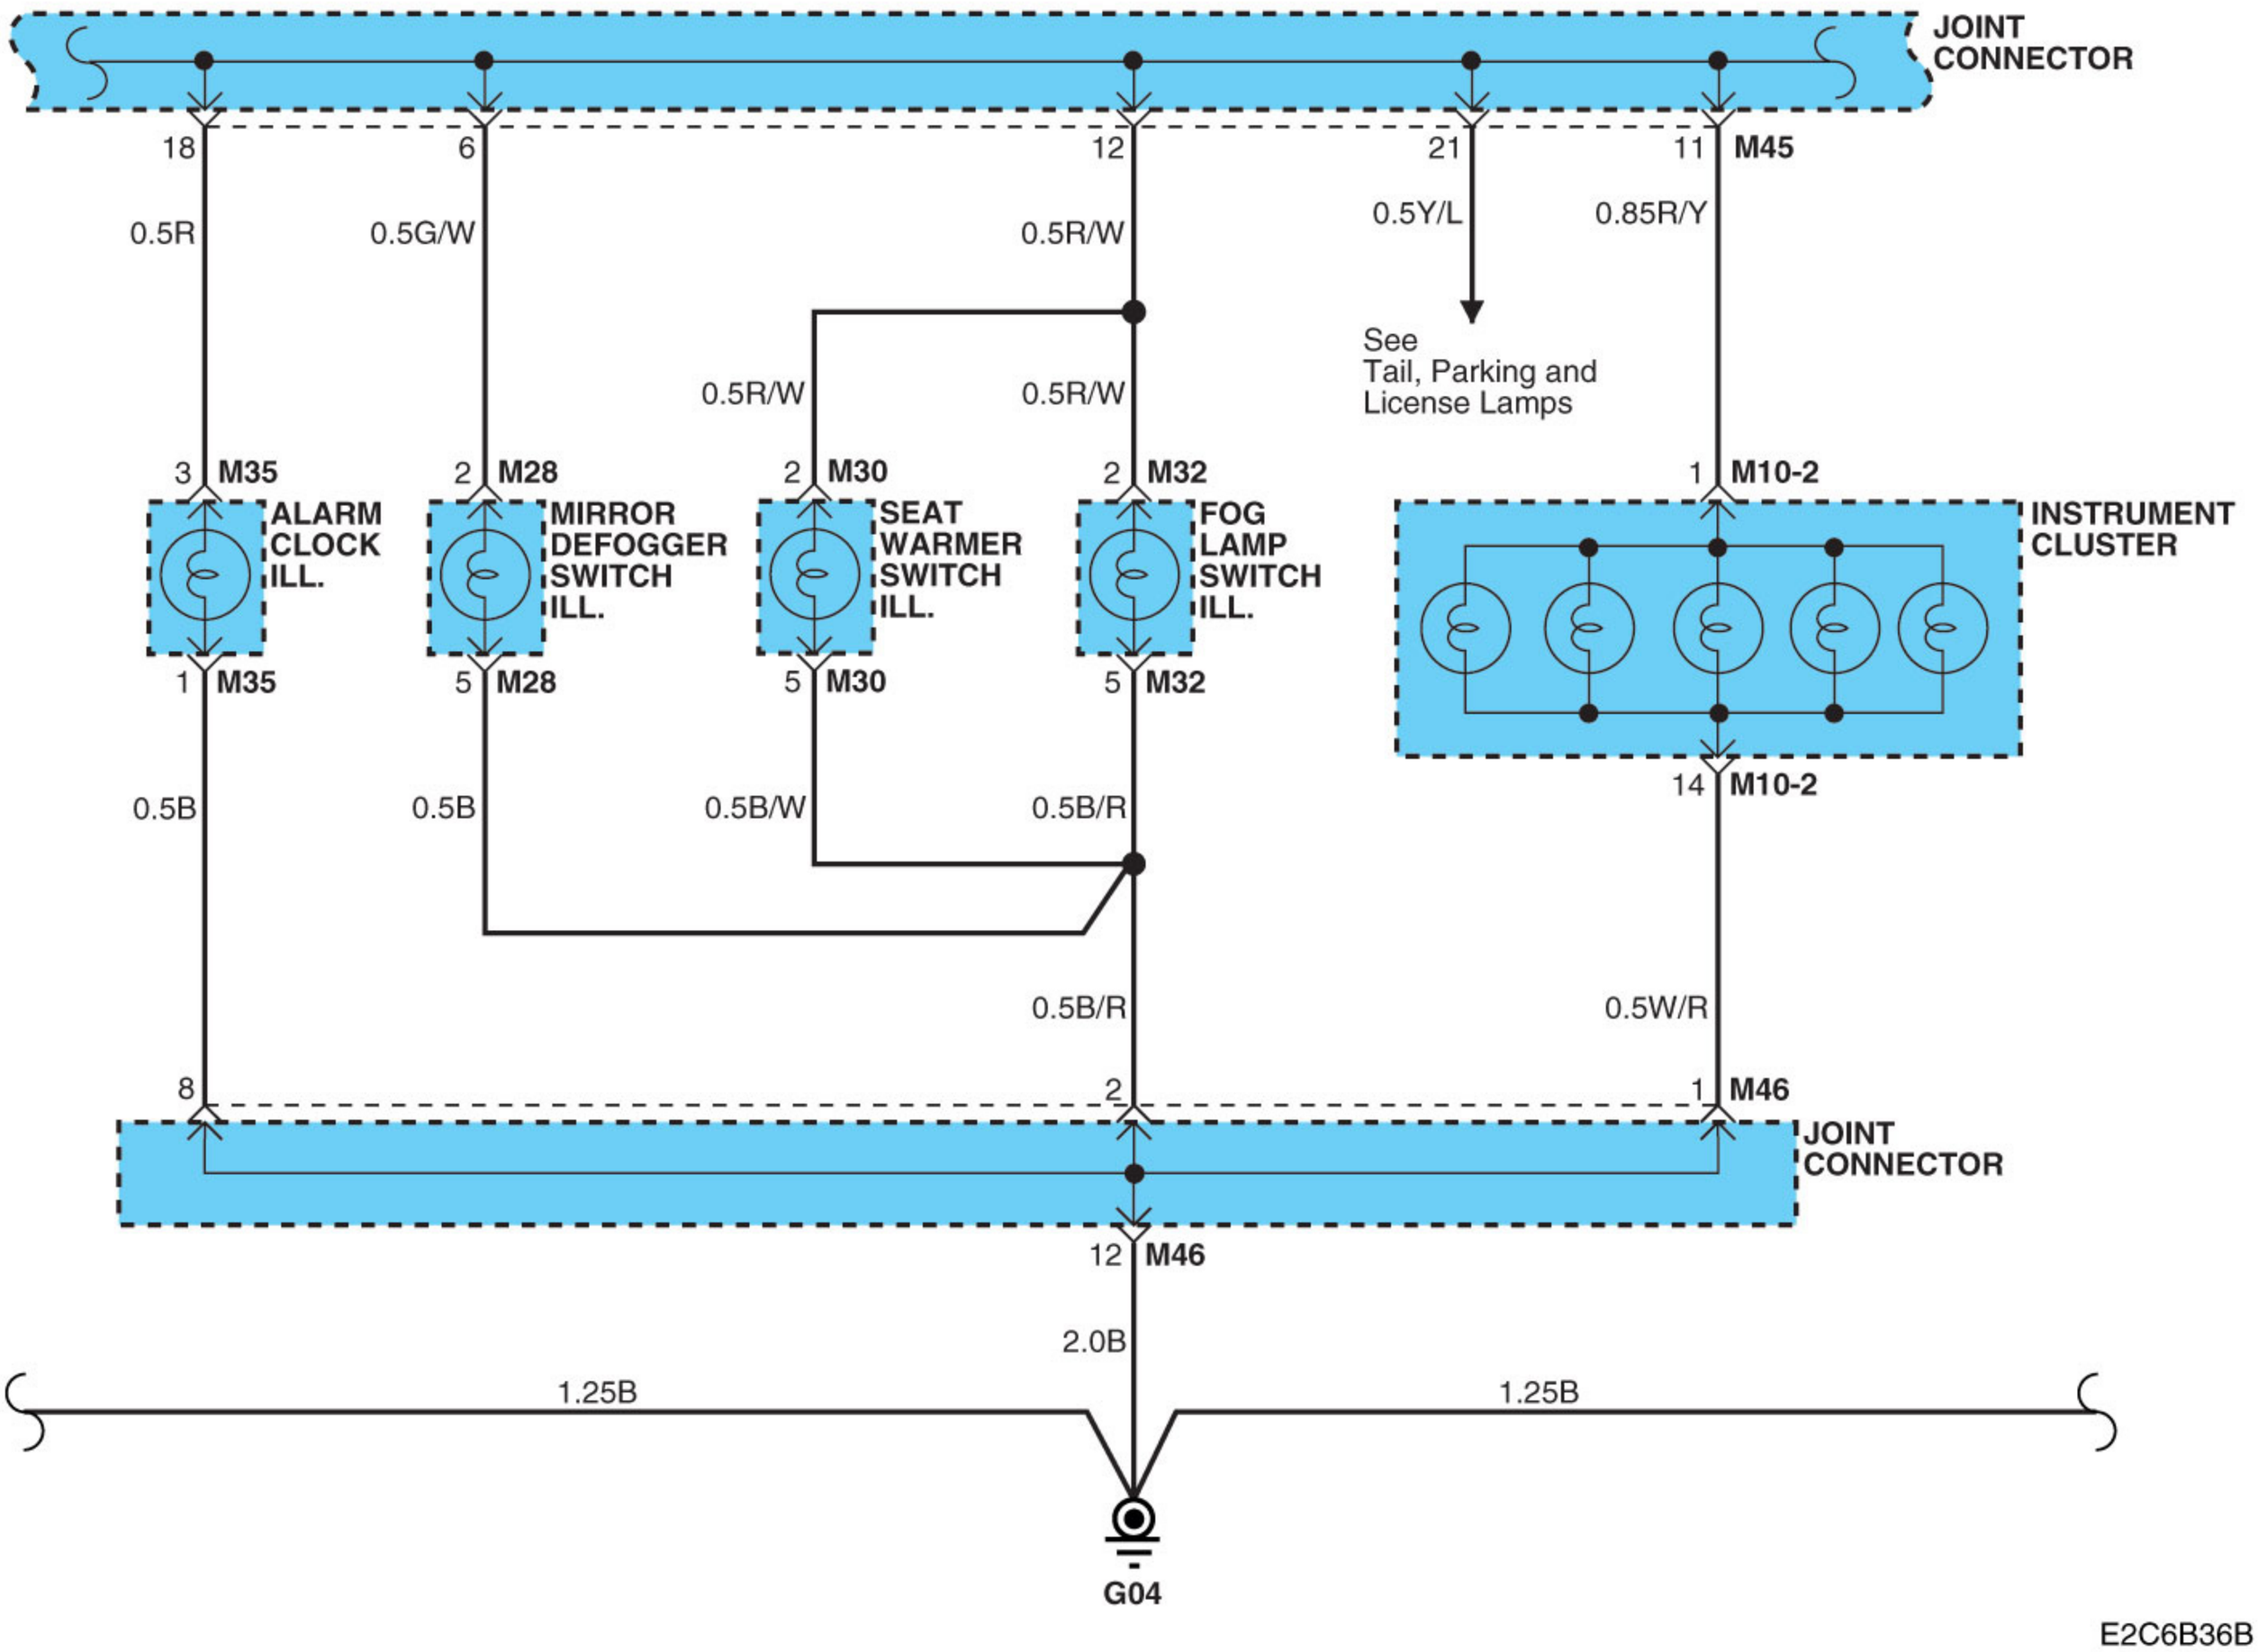

HEAD LAMPS

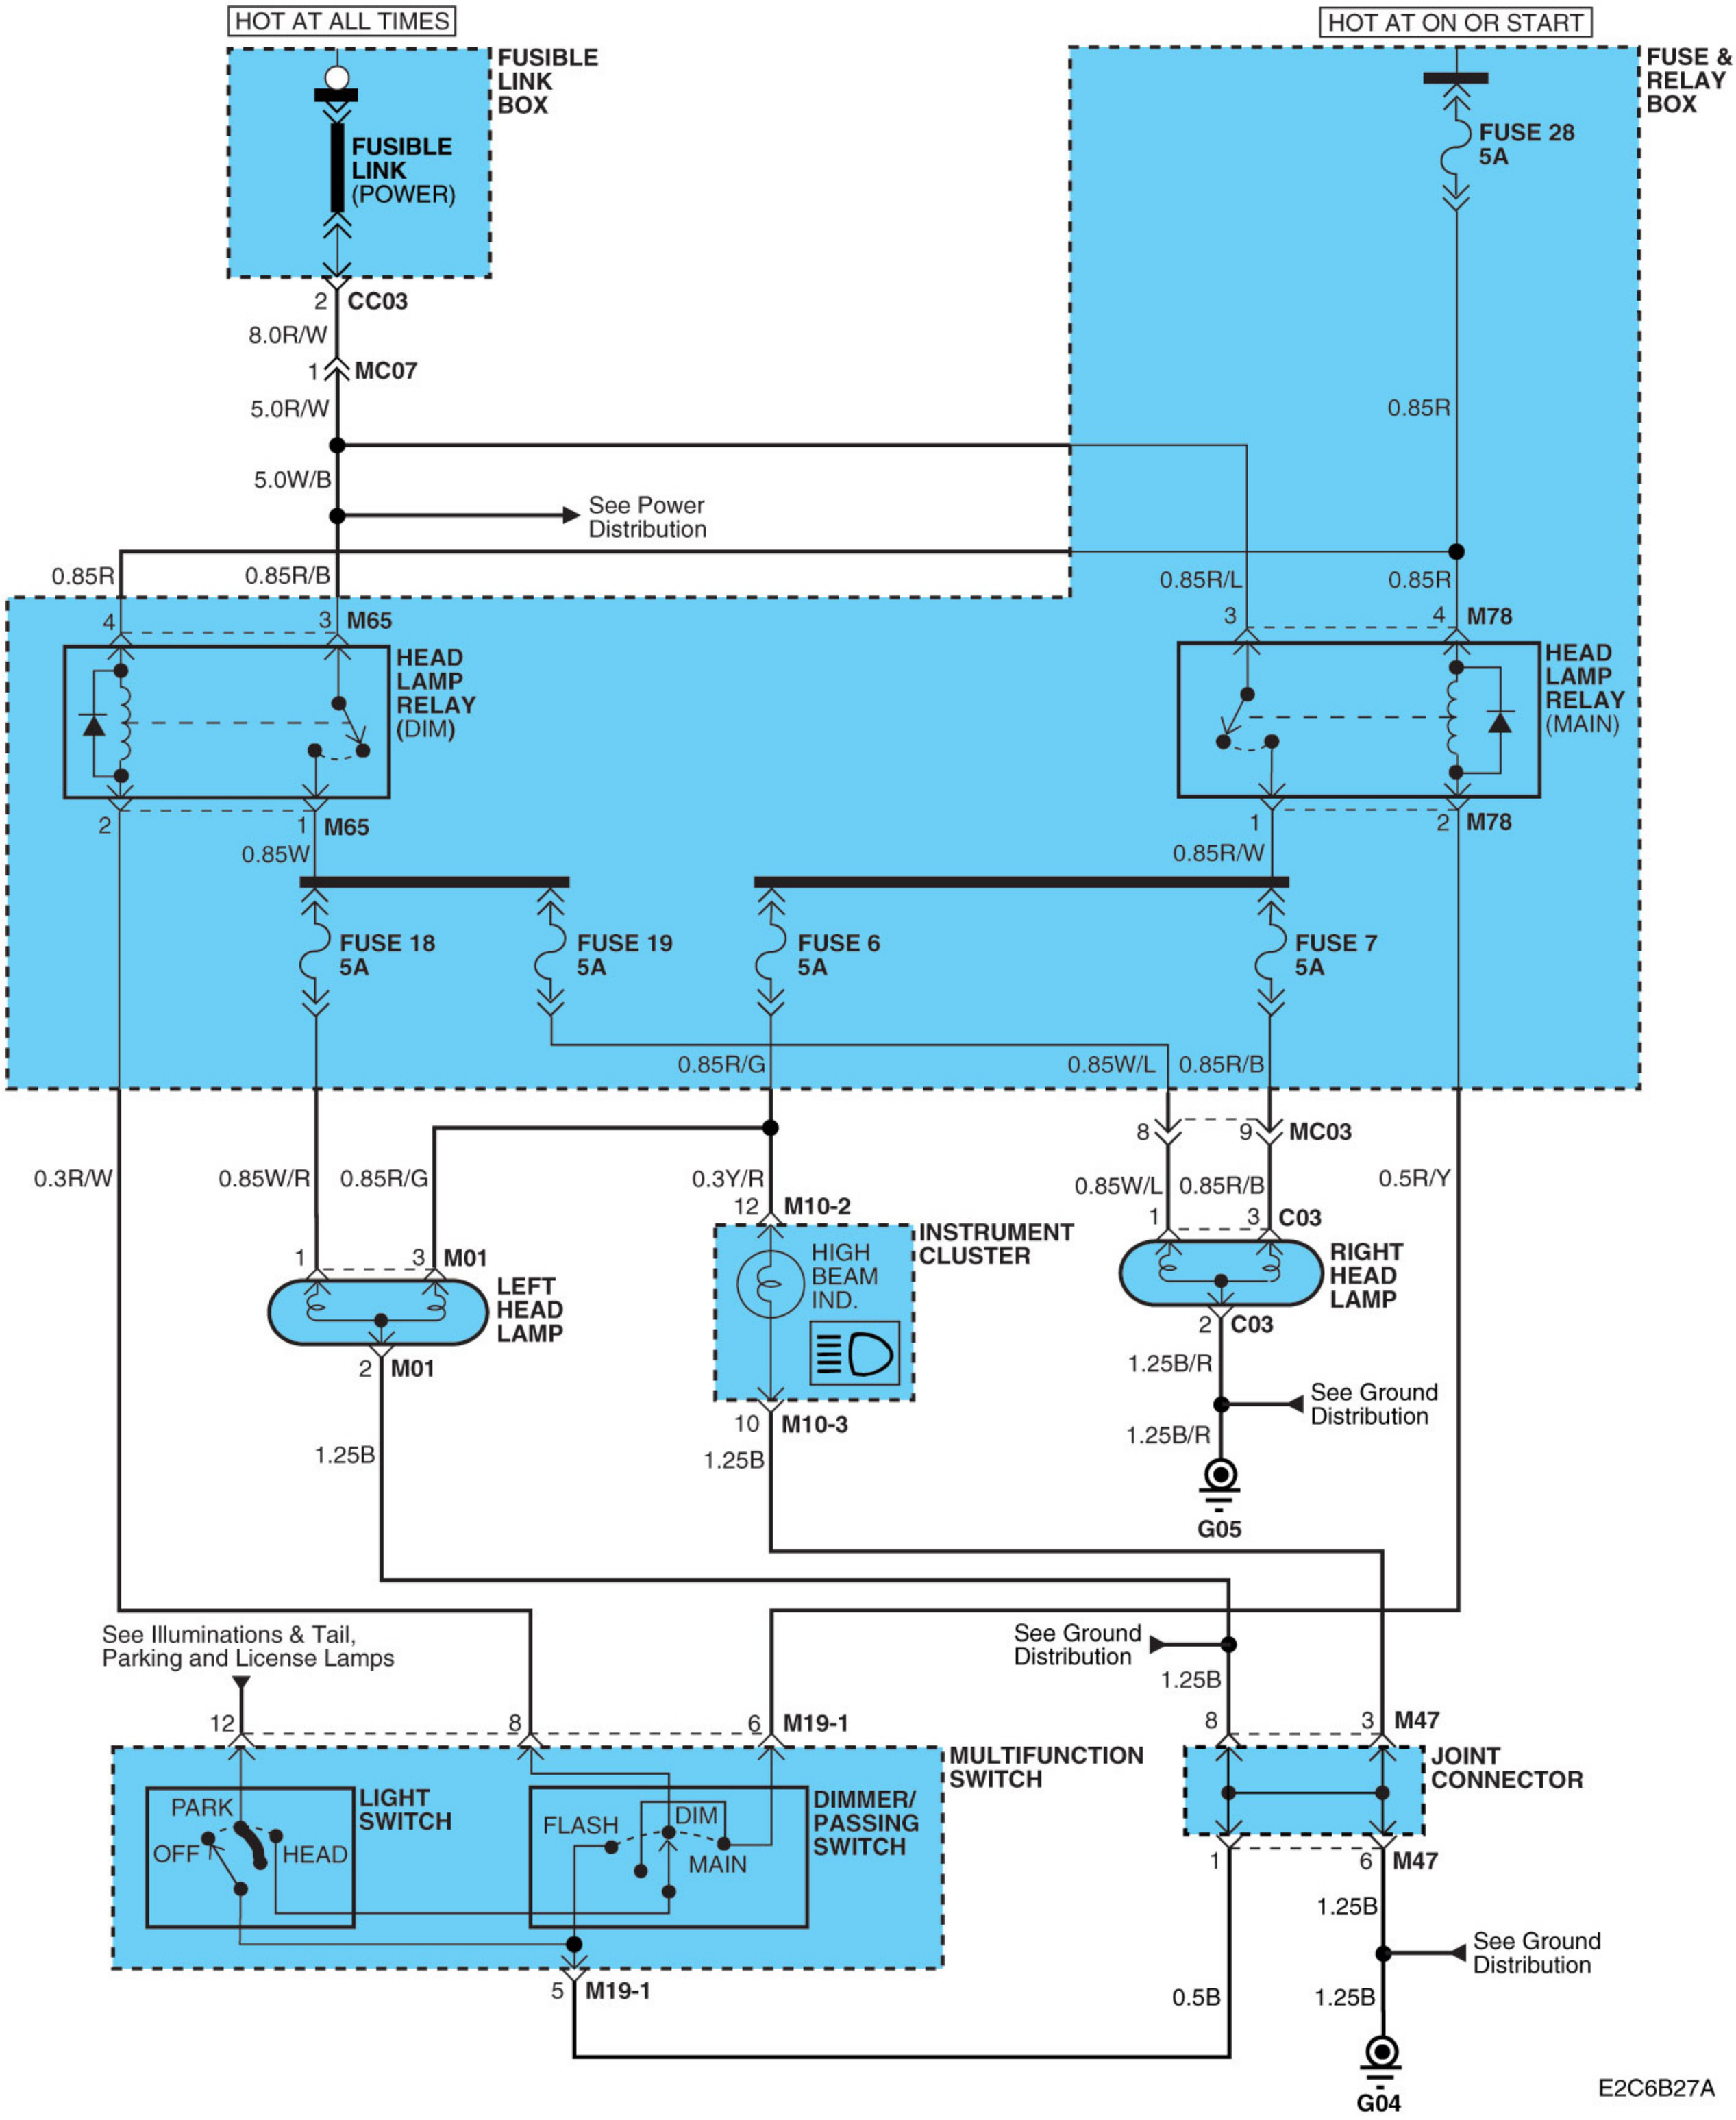
HOT AT ALL TIMES
FUSIBLE LINK BOX
FUSIBLE LINK (POWER)
2
CC03
8.0R/W
1
MC07
5.0R/W
5.0W/B
See Power Distribution
HOT AT ON OR START
FUSE & RELAY BOX
FUSE 28 5A
0.85R
0.85R
0.85R/B
0.85R/L
0.85R
4
3
M65
3
4
M78
HEAD LAMP RELAY (DIM)
HEAD LAMP RELAY (MAIN)
2
1
M65
1
2
M78
0.85W
0.85R/W
FUSE 18 5A
FUSE 19 5A
FUSE 6 5A
FUSE 7 5A
0.85R/G
0.85W/L
0.85R/B
0.3R/W
0.85W/R
0.85R/G
0.3Y/R
8
9
MC03
0.85W/L
0.85R/B
0.5R/Y
1
3
M01
12
M10-2
1
3
C03
LEFT HEAD LAMP
HIGH BEAM IND.
INSTRUMENT CLUSTER
RIGHT HEAD LAMP
2
M01
2
C03
1.25B
1.25B/R
See Ground Distribution
10
M10-3
1.25B/R
1.25B
G05
See Illuminations & Tail, Parking and License Lamps
See Ground Distribution
1.25B
12
8
6
M19-1
8
3
M47
PARK
OFF
HEAD
LIGHT SWITCH
FLASH
DIM
MAIN
DIMMER/ PASSING SWITCH
MULTIFUNCTION SWITCH
JOINT CONNECTOR
1
6
M47
1.25B
See Ground Distribution
5
M19-1
0.5B
1.25B
G04
E2C6B27A

GROUND DISTRIBUTION (7)

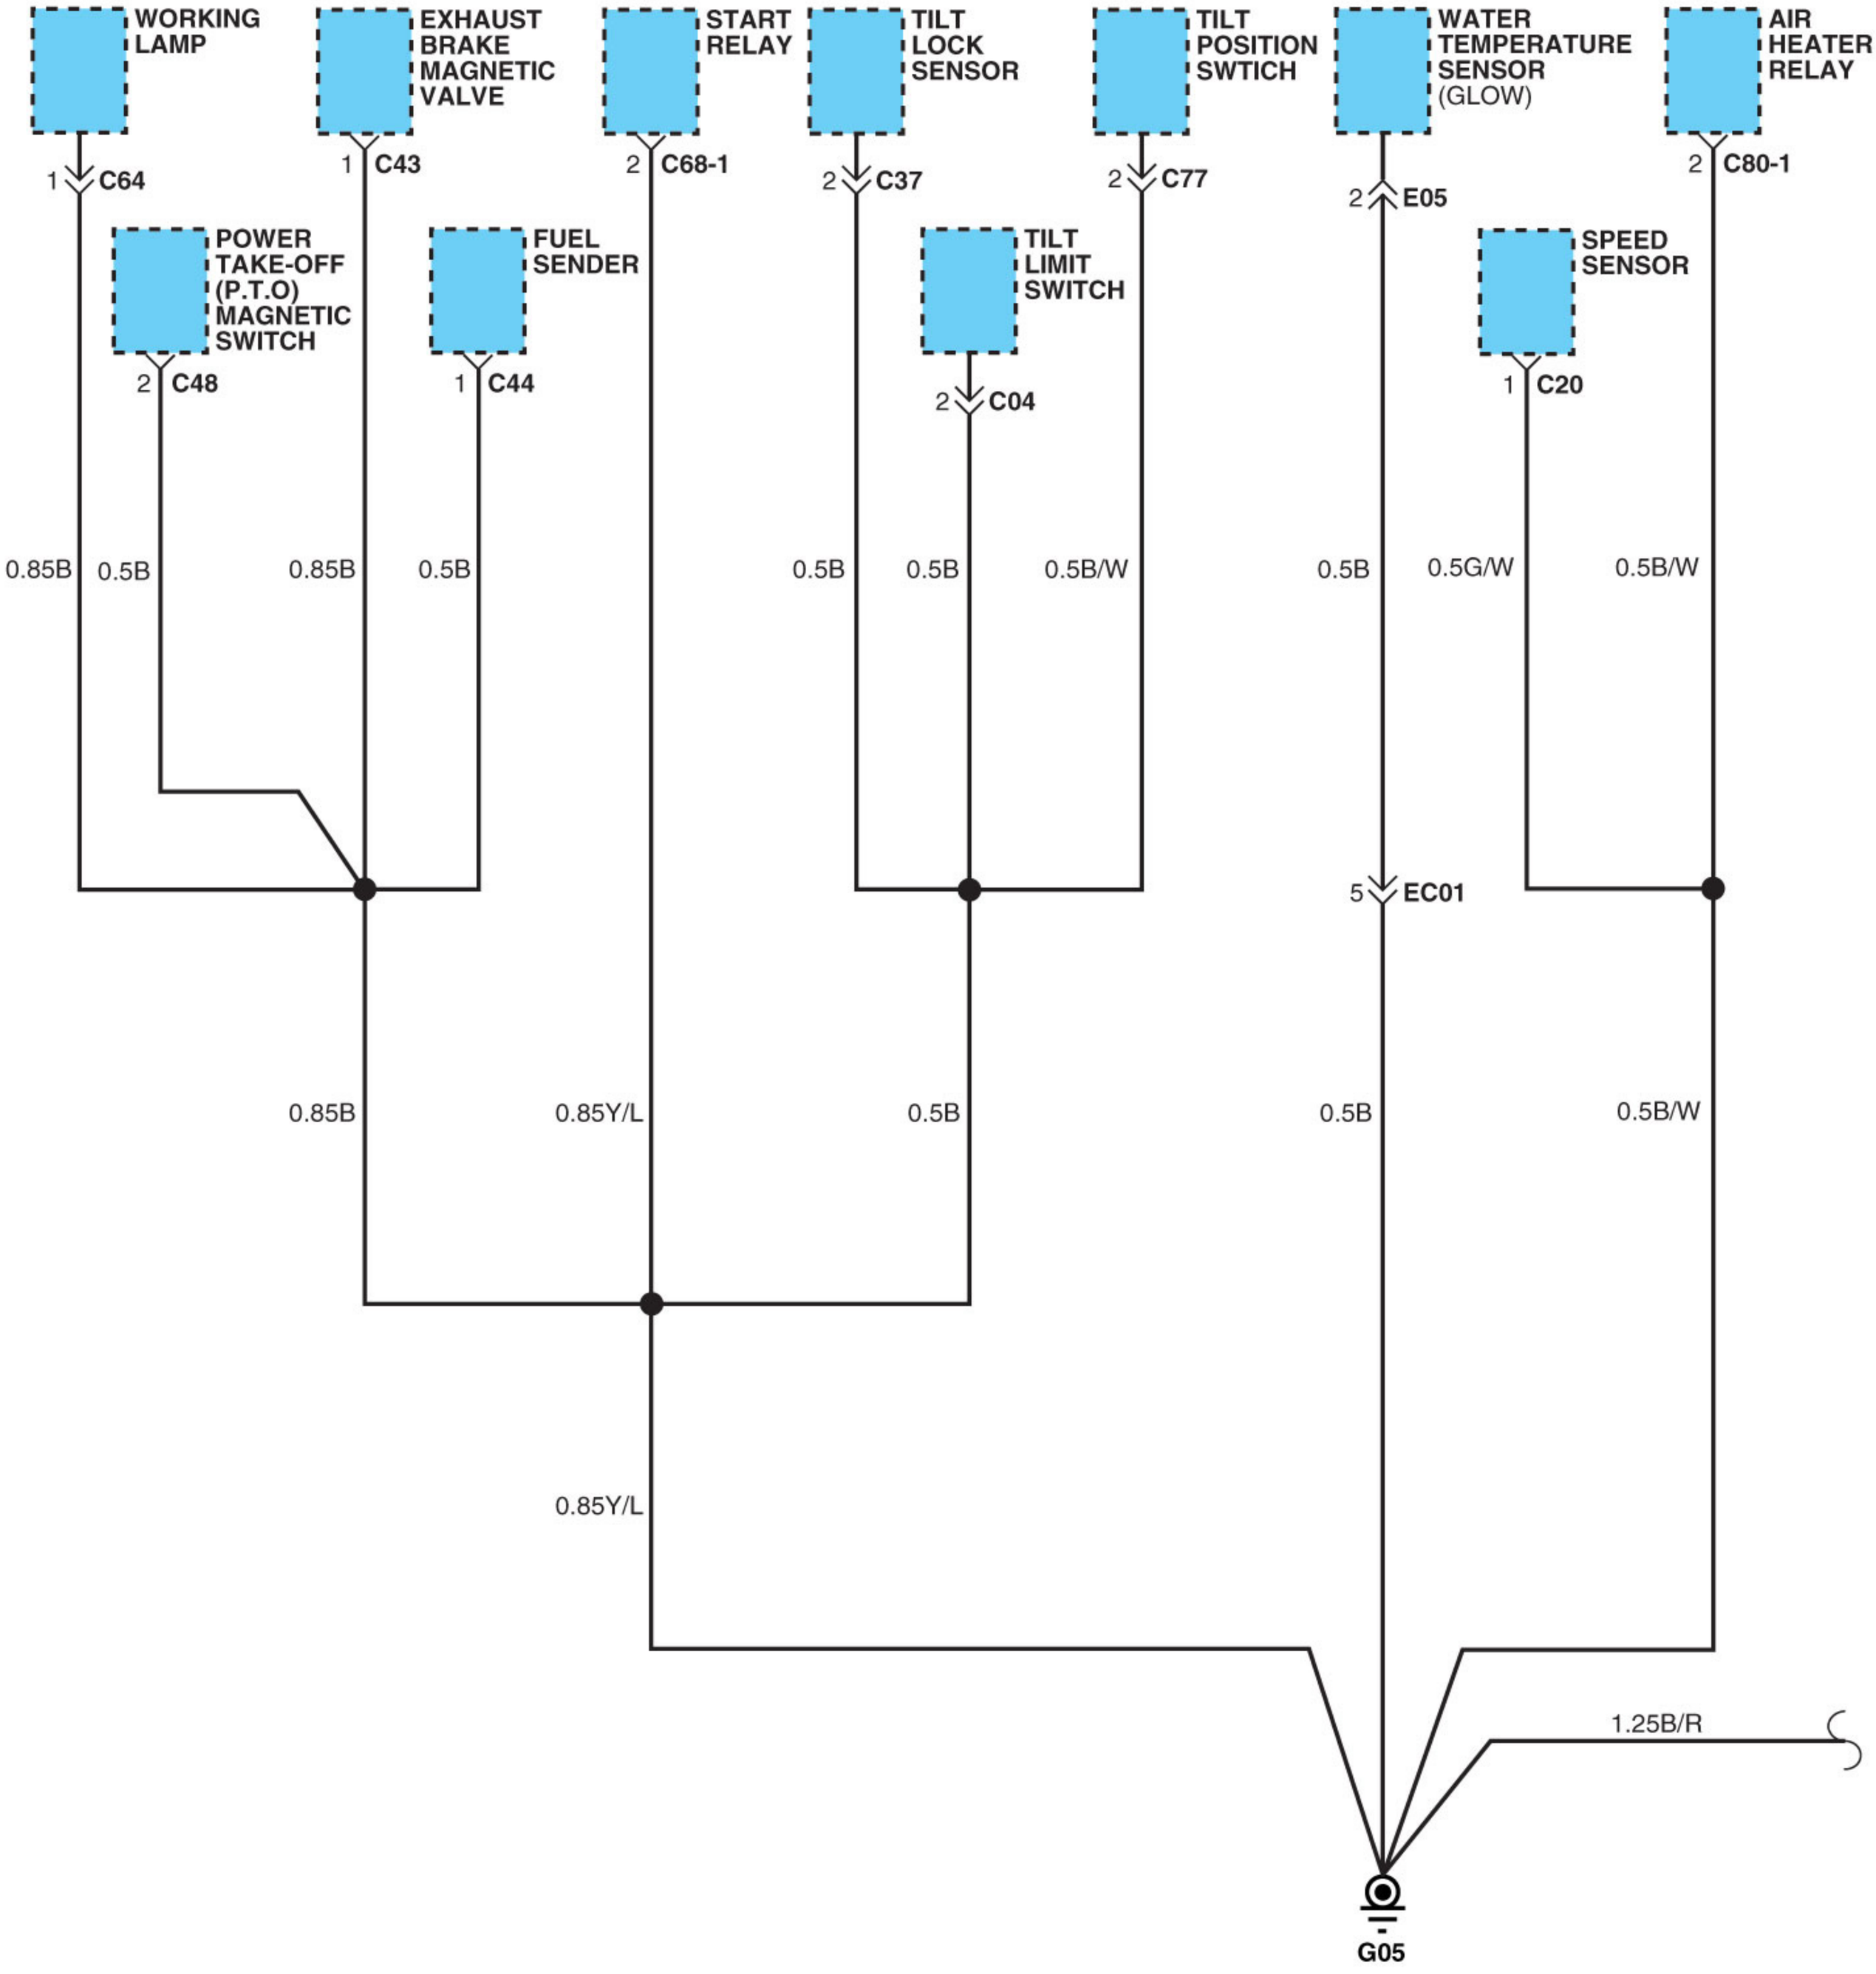

E2C6B04G

GROUND DISTRIBUTION (3)

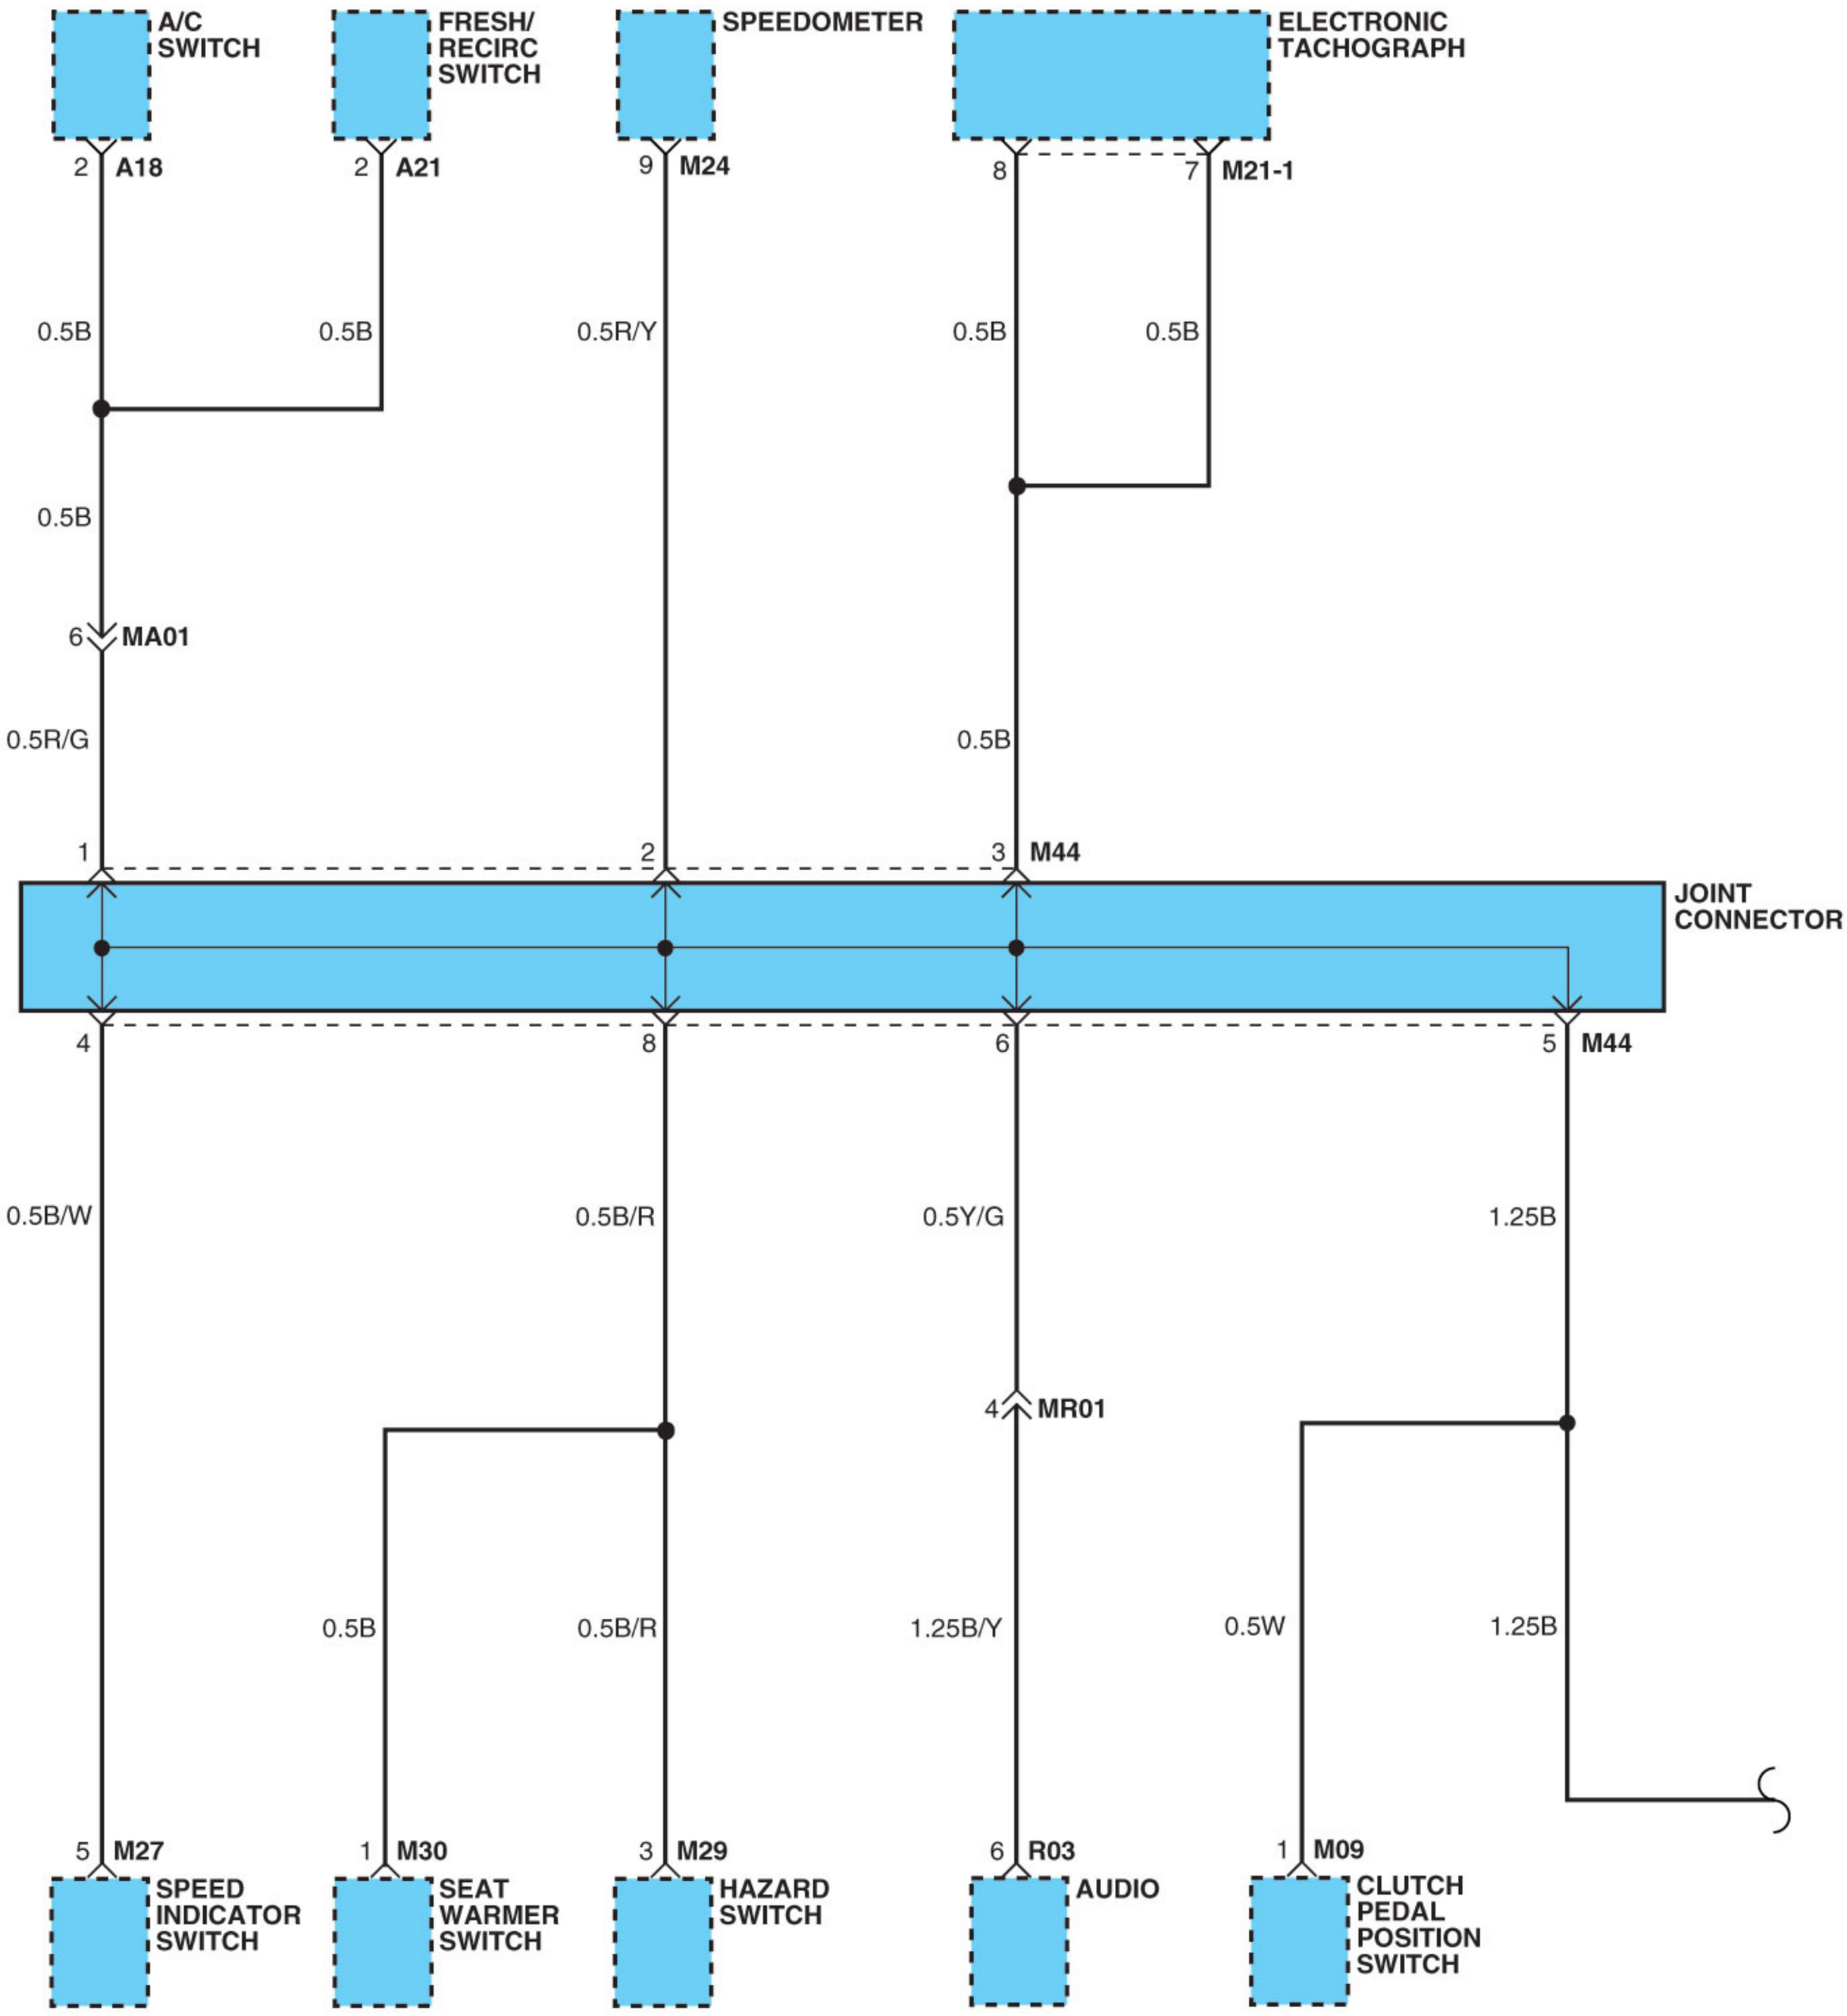

E2C6B04C

FUSE DETAILS (9)

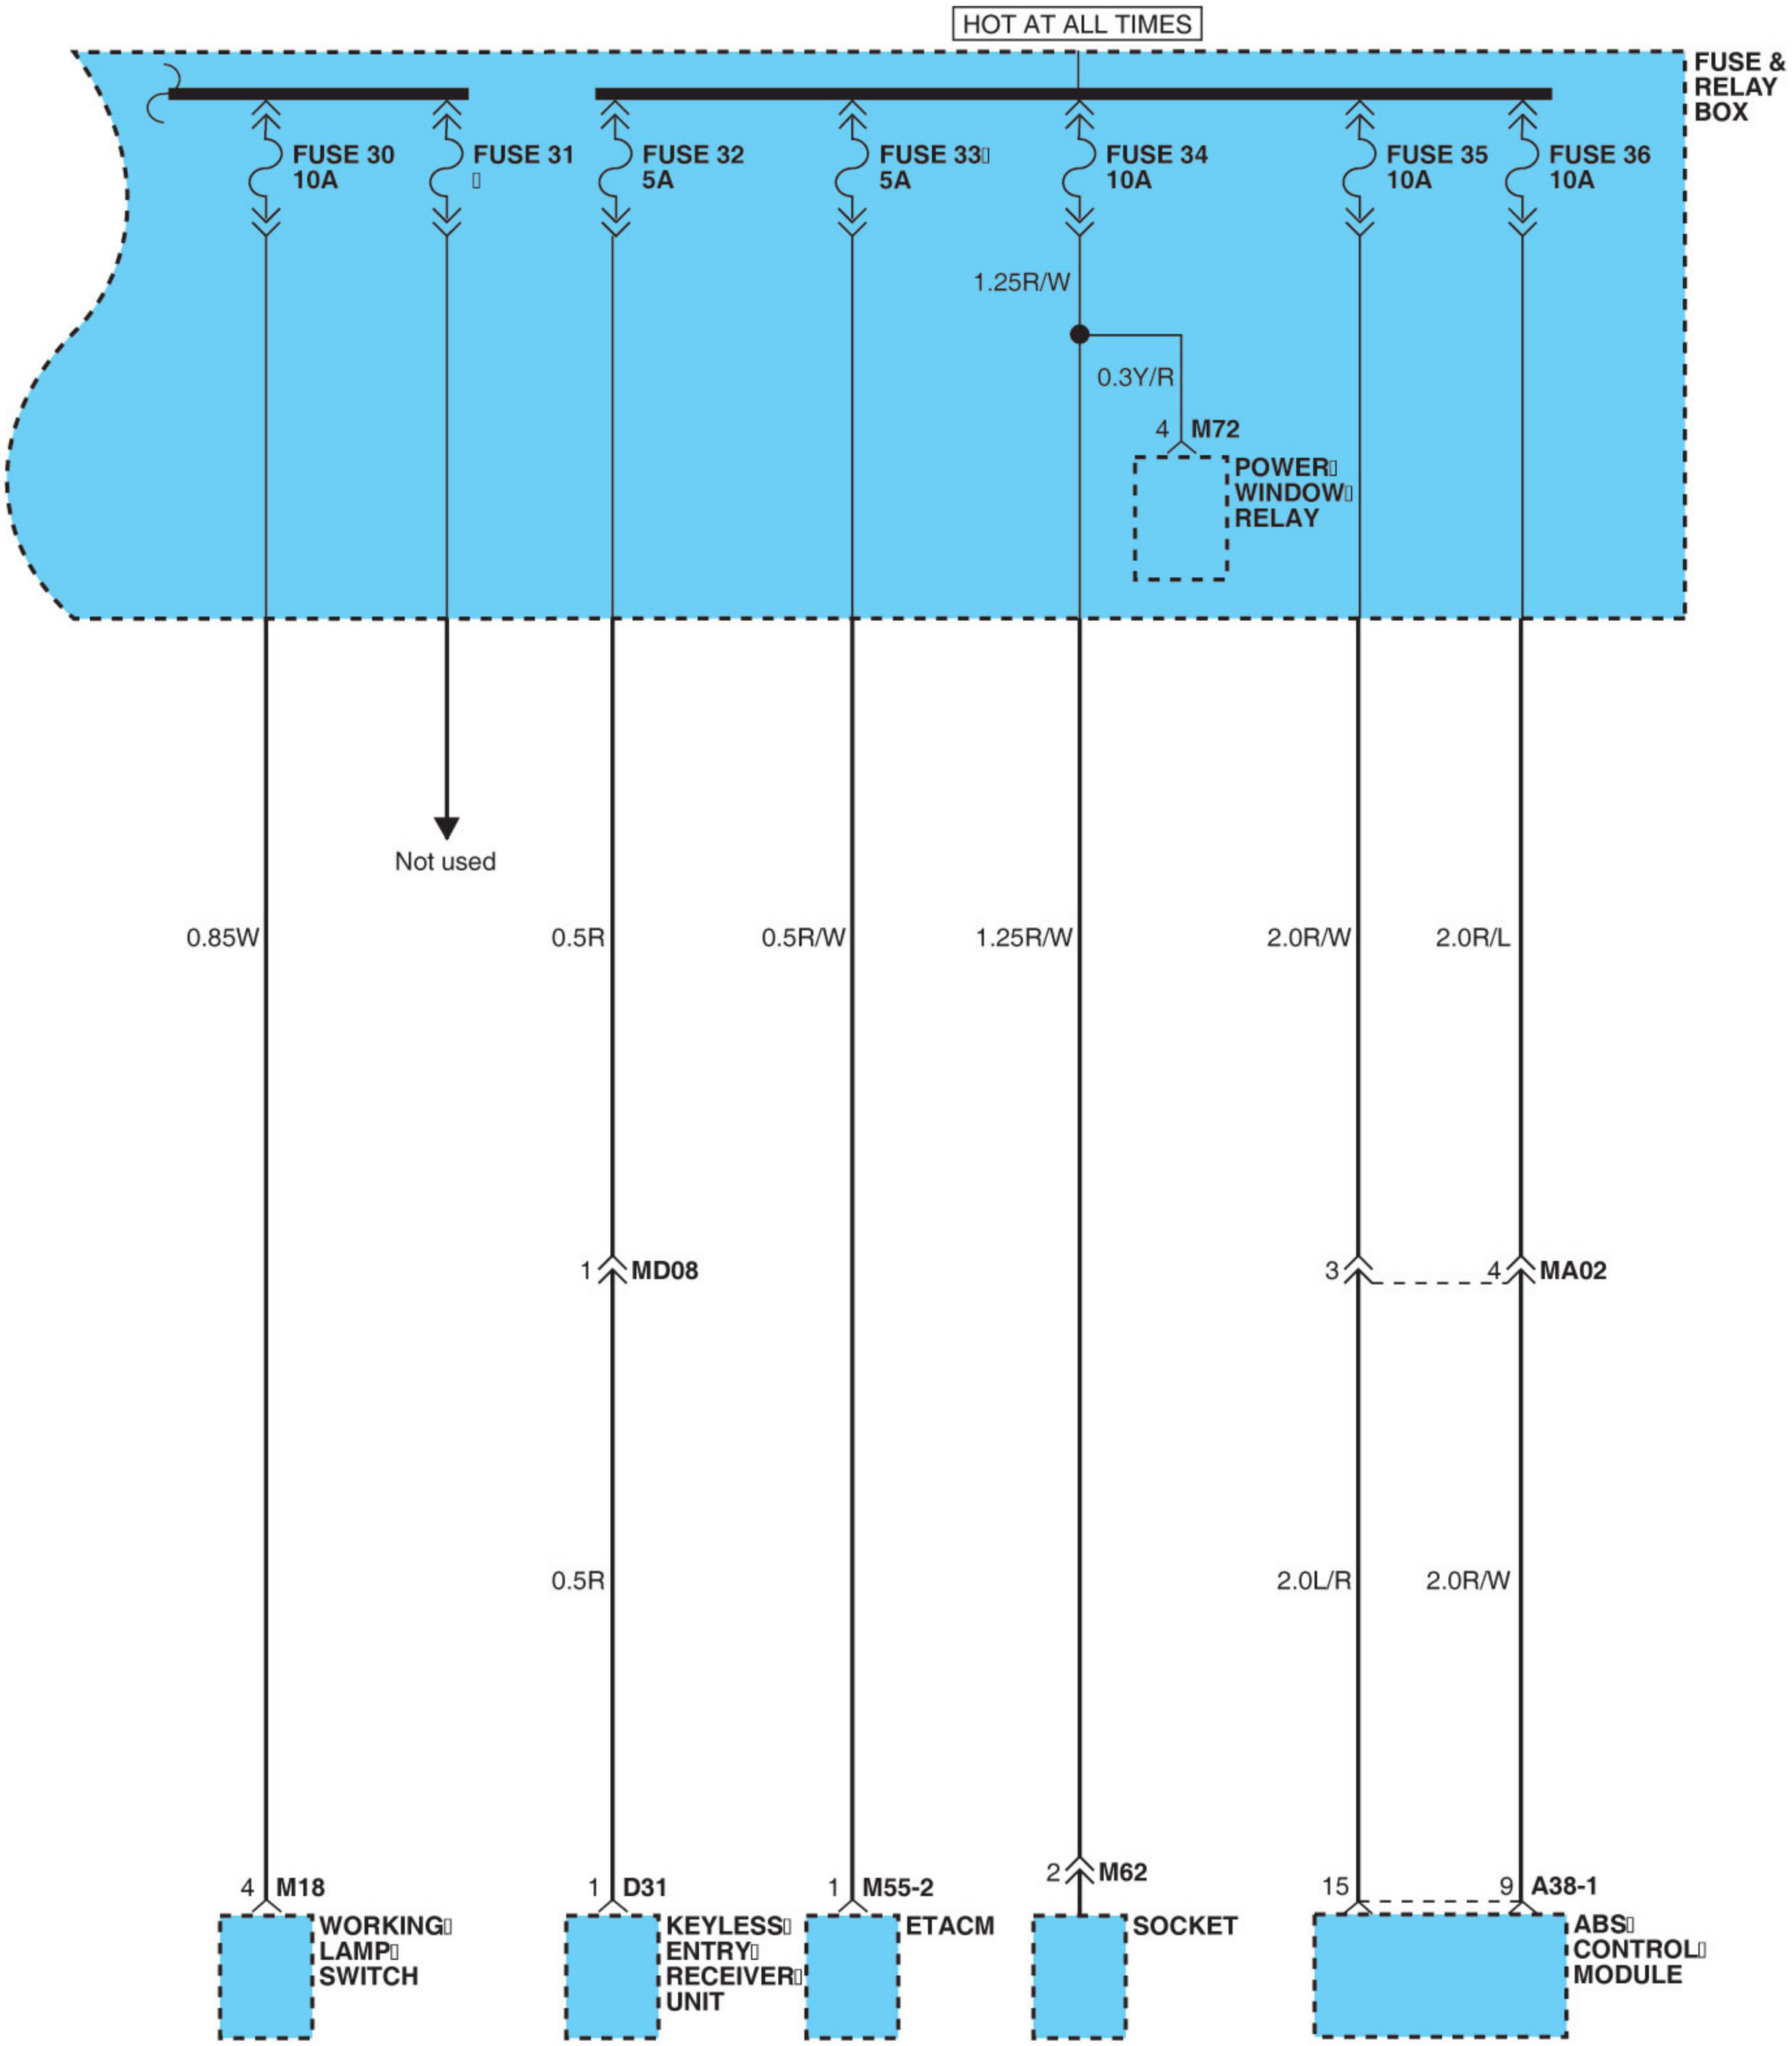

E2C6B03I

FUSE DETAILS (5)

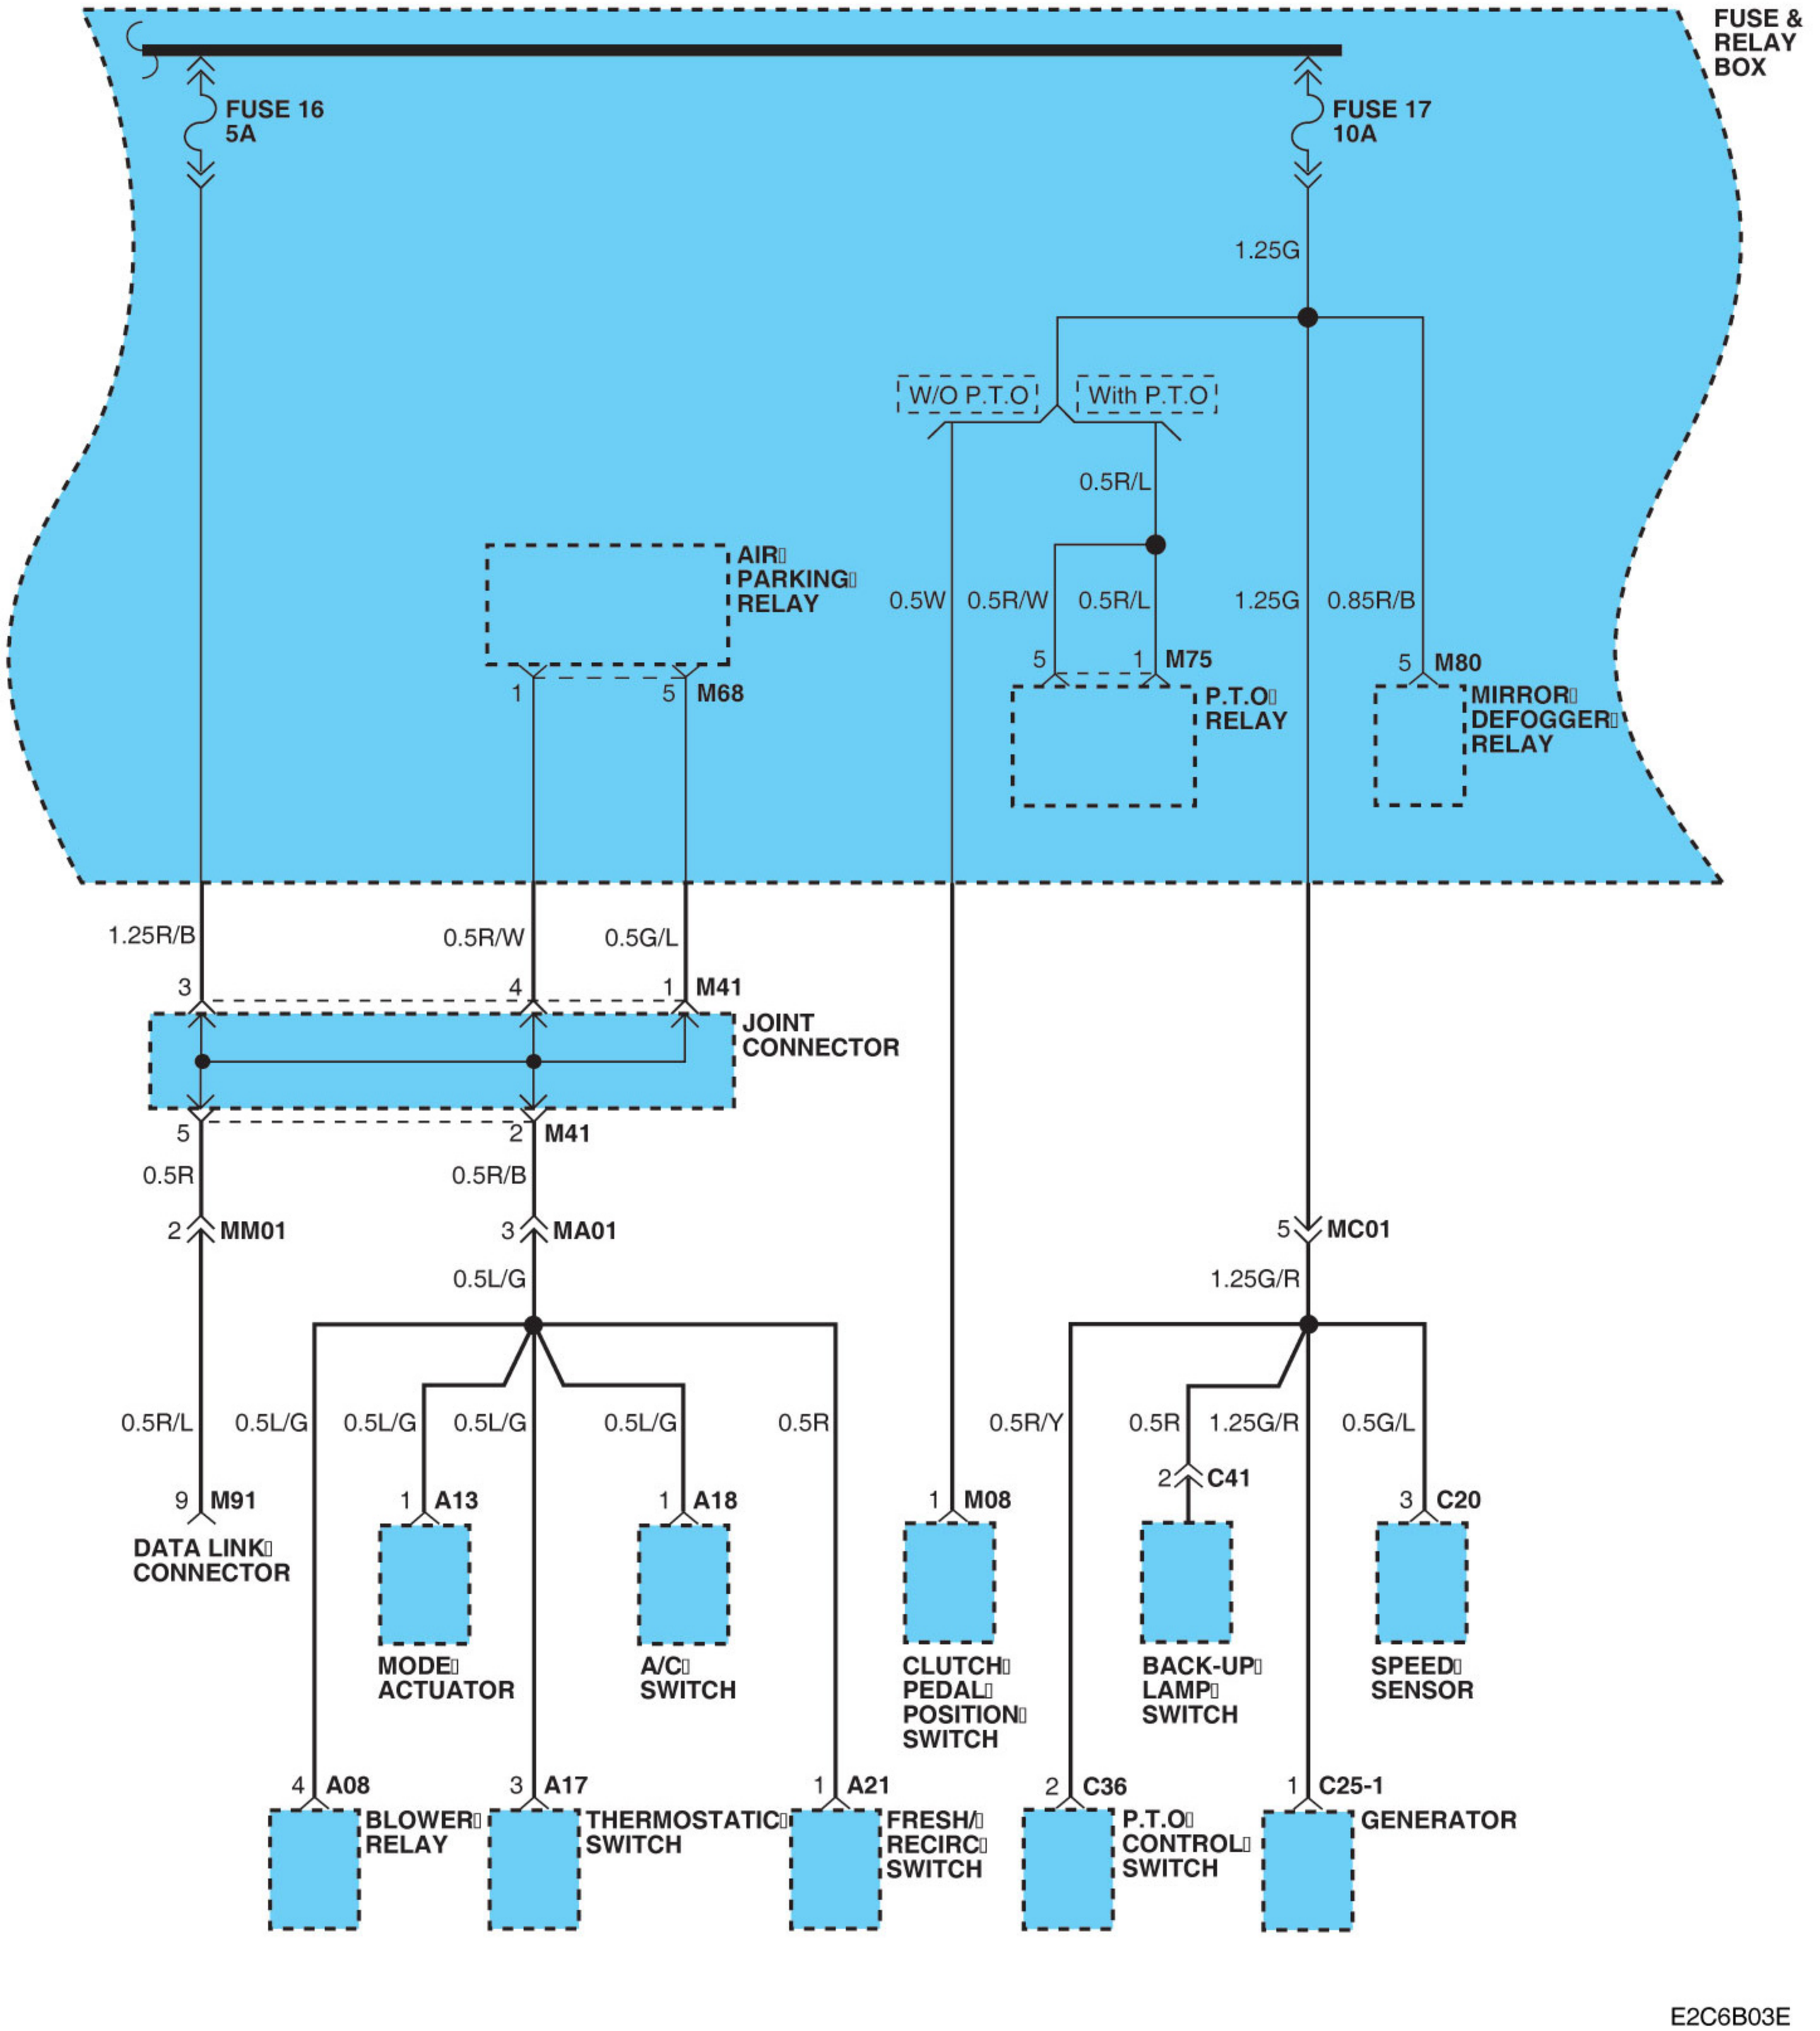

E2C6B03E

FUSE AND RELAY INFORMATION (CIRCUIT)

Fuse No.	Amperages	Circuit protected
1	10A	Spare connector
2	15A	Spare connector
3	10A	Wiper & Washer , Seat belt
4	10A	Air drier
5	5A	ETACM
6	5A	Left head lamp, Instrument cluster
7	5A	Right head lamp
8	10A	Fog lamp relay
9	5A	Interlock , Transmission inter relay
10	10A	Stop lamps, Horn, Siren
11	10A	Mirror defogger
12	5A	ETACM
13	10A	Audio, Clock, Bed warmer
14	10A	Burglar alarm relay, Turn signal relay
15	5A	Speedometer, Instrument cluster, Tachograph
16	5A	Air parking relay, Blower & A/C controls, Data link connector
17	10A	P.T.O, Mirror defogger, Back-up lamp, Generetor
18	5A	Left head lamp
19	5A	Right head lamp
20	15A	Audio, Cigarette lighter, Clock, Sub start relay
21	15A	Tail lamp
22	10A	Flasher unit, Speed indicator
23	5A	Fluorescent, Step, Room lamp
24	15A	Power window switch
25	10A	Power window sub switch
26	5A	ETACM, Start relay, Burglar alarm relay
27	5A	ABS
28	5A	Head lamp relay
29	5A	Seat warmer
30	10A	Working lamp
31		(Not used)
32	5A	Keyless entry
33	5A	ETACM
34	10A	Socket, Power window relay
35	10A	ABS
36	10A	ABS

ANTI-LOCK BRAKE SYSTEM (1)

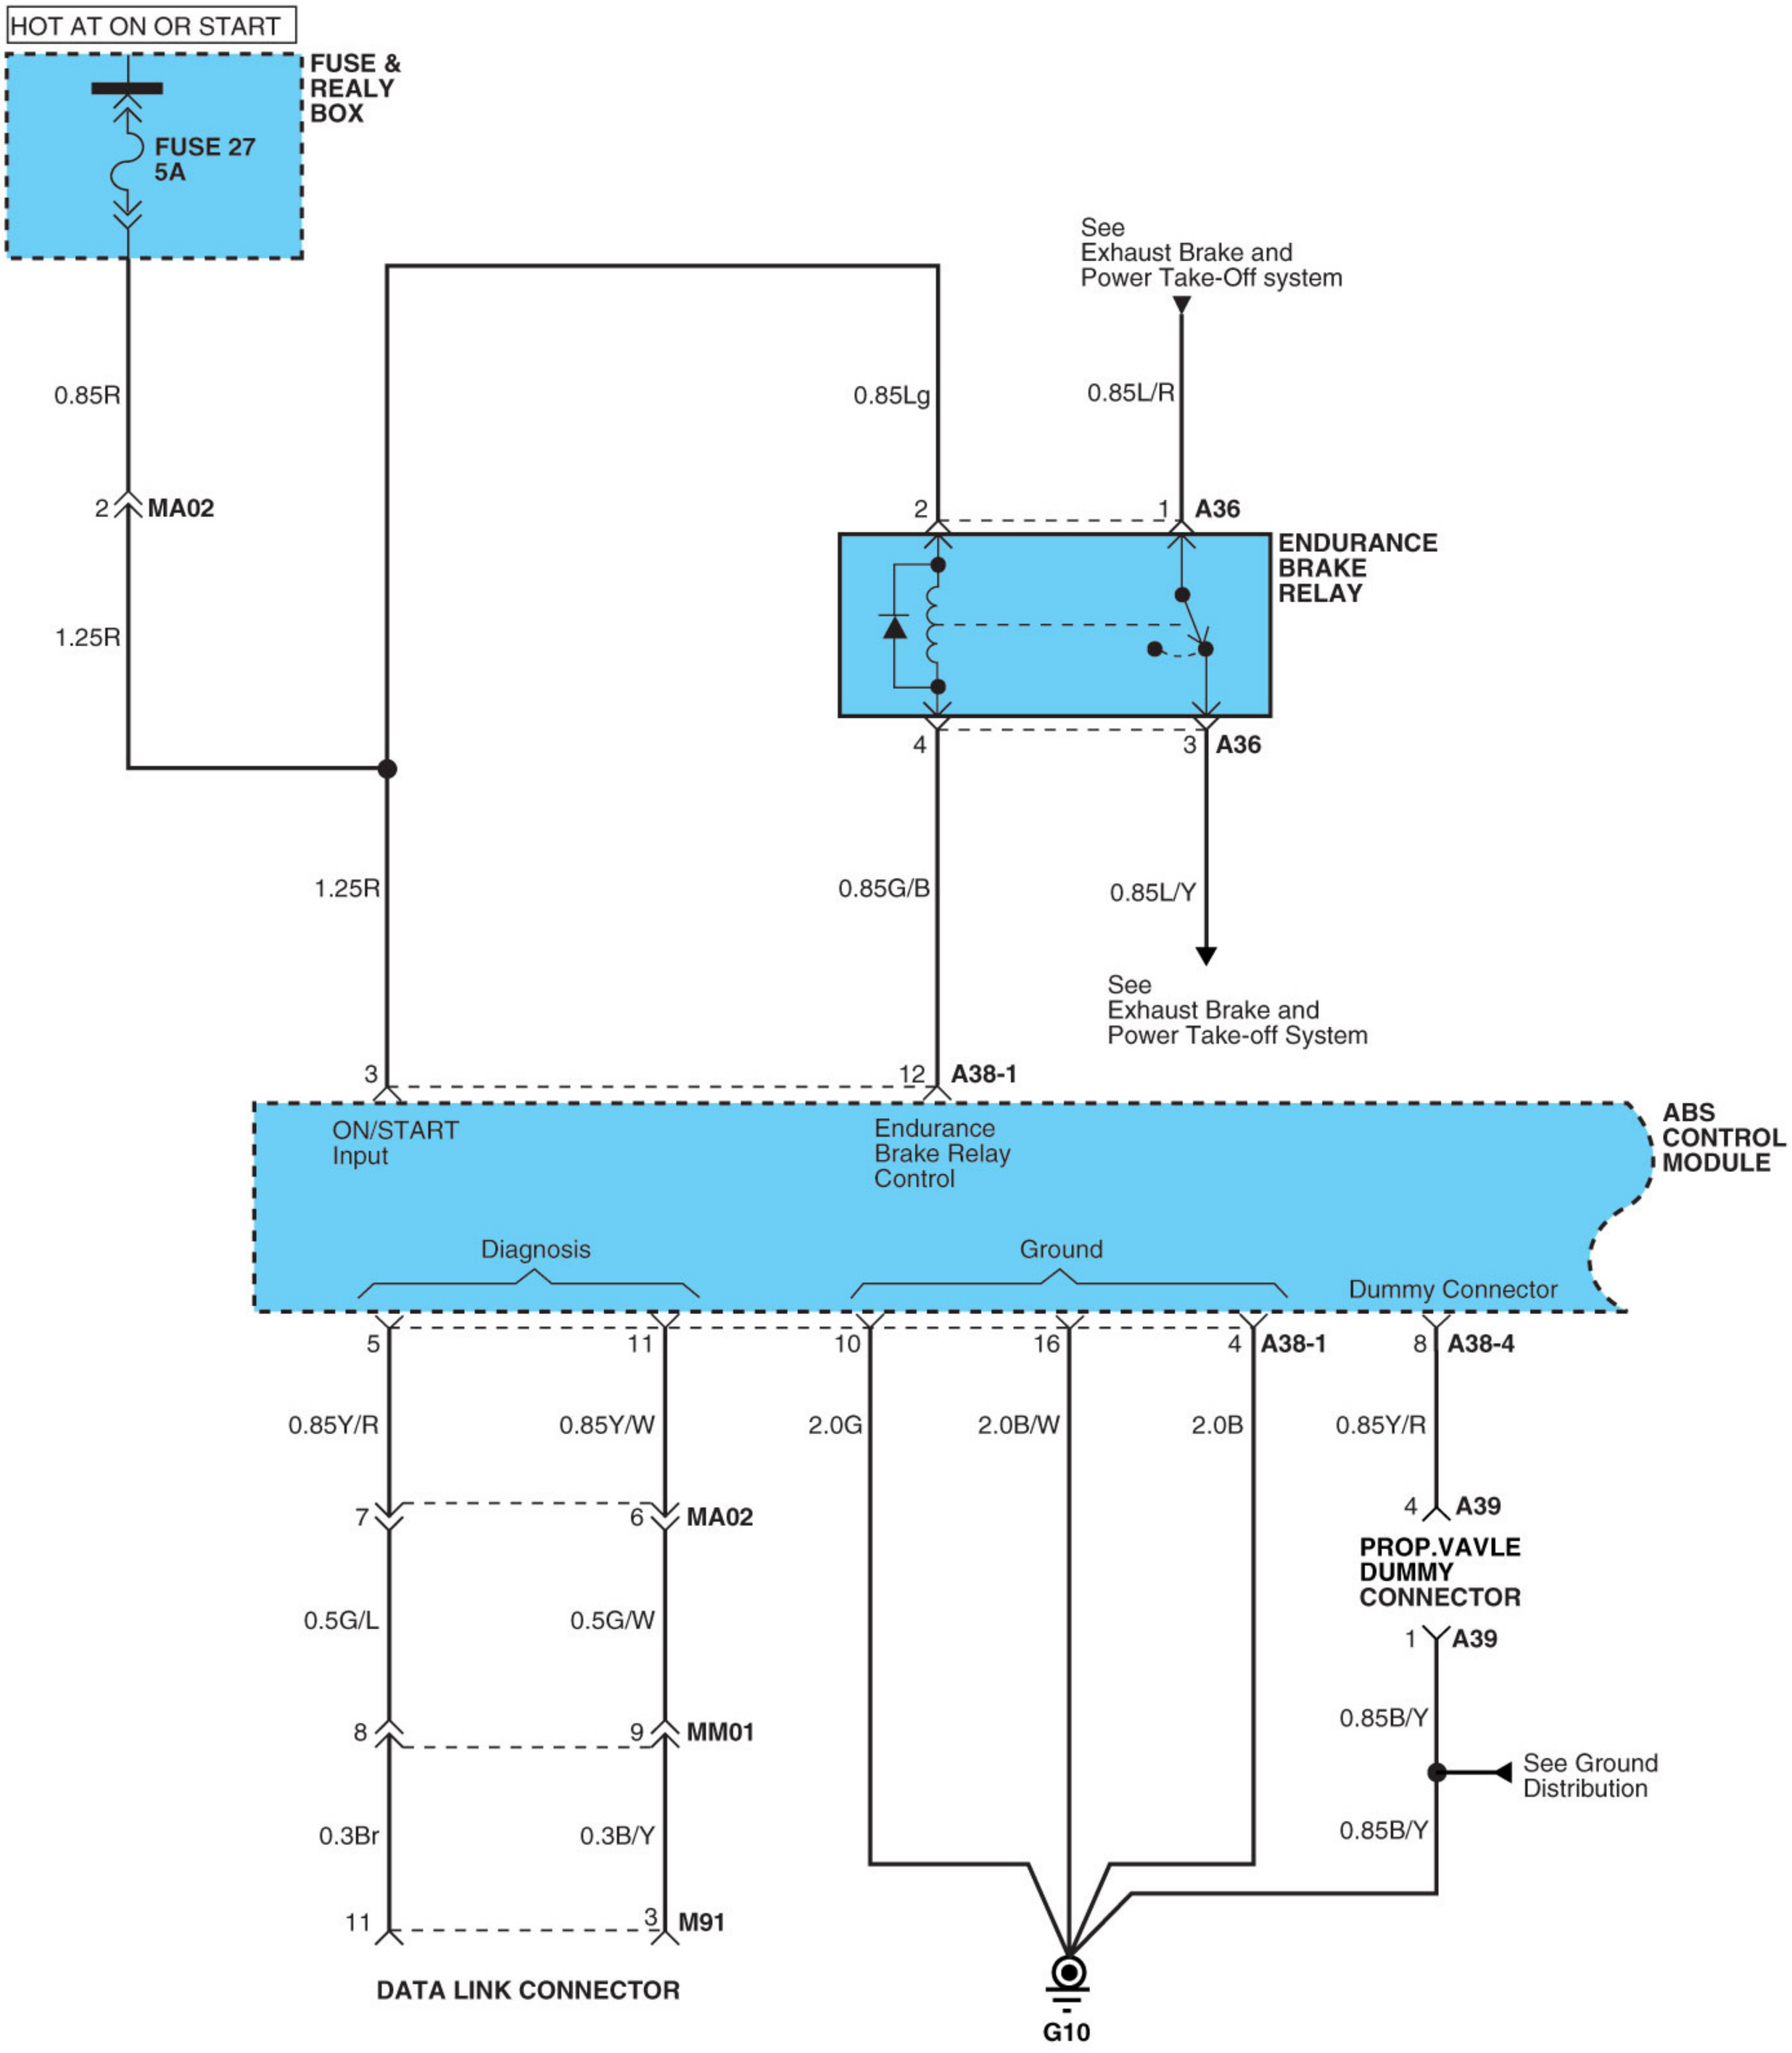

E2C6B10A